
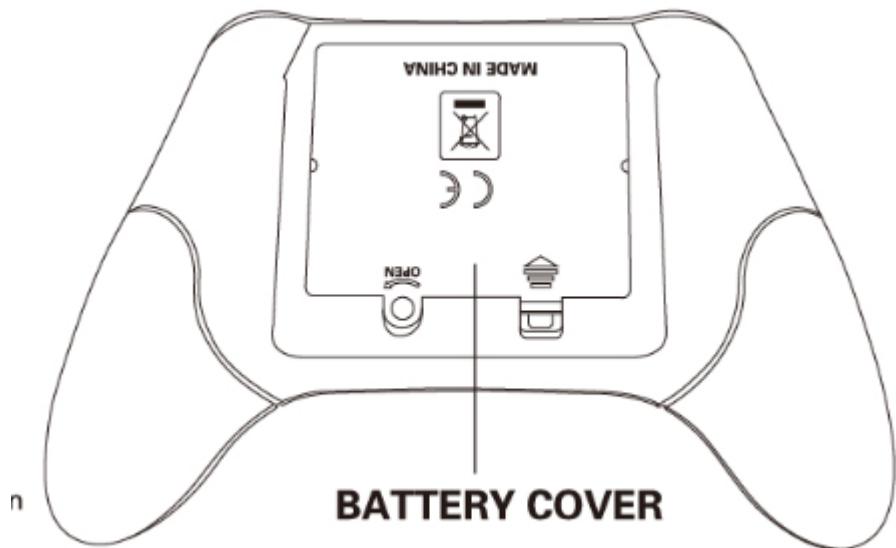



# INSTRUCTION MANUAL

## CONTROLLER DIAGRAM

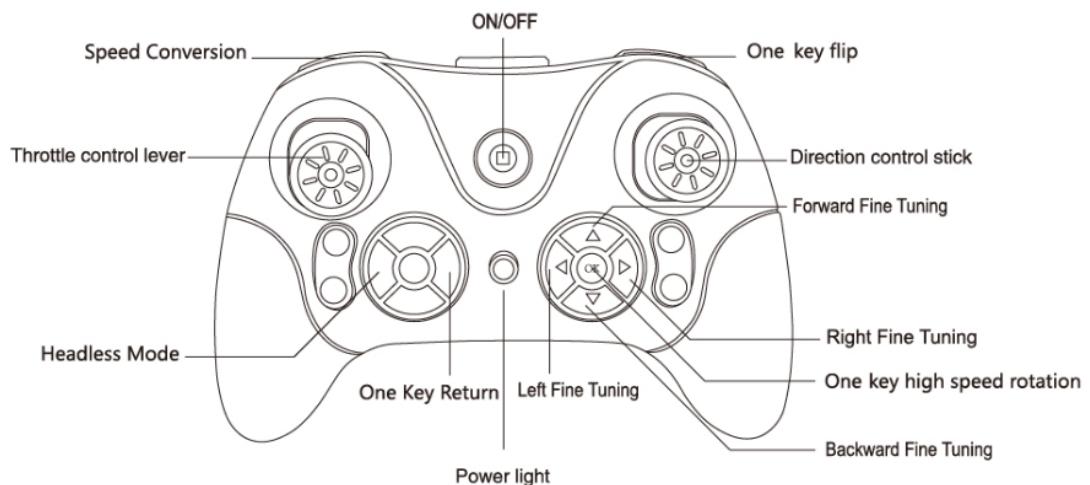


# REMOTE CONTROLLER BATTERY INSTALLATION

## Step 1

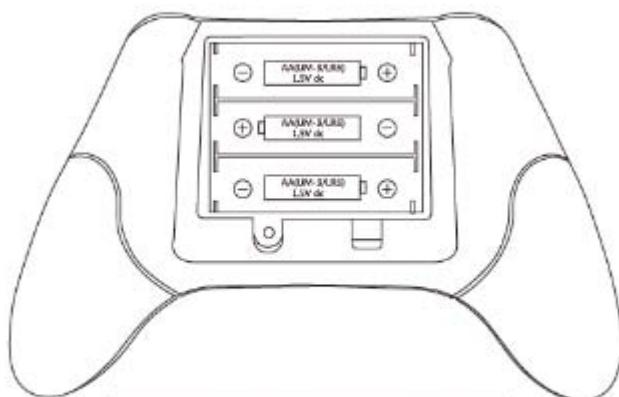


## Step 2

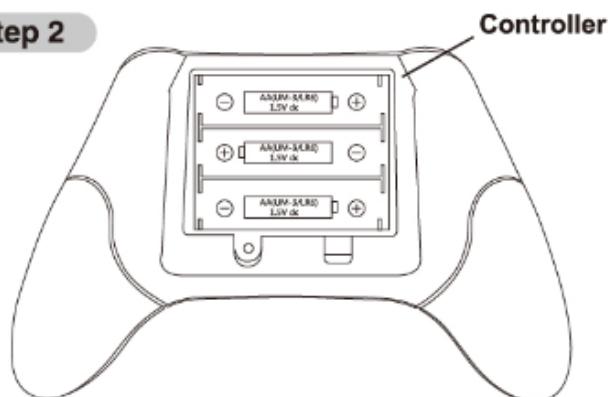

**DO NOT DISASSEMBLE**





**Battery cover**

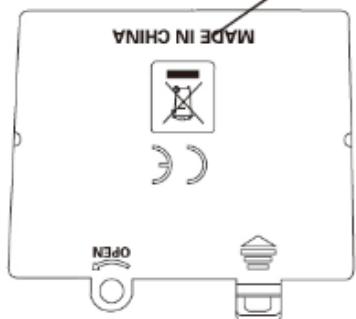






## BATTERY AND CHARGING INFORMATION

Carbon-Zinc AA Batteries (Non-rechargeable)		1.5V (GP 15G R4P)	Transmitter Operation Time 18 Hours	Non-rechargeable
---	--	----------------------	-------------------------------------	------------------


## SIGNAL CONNECTION OF THE CONTROLLER AND DRONE

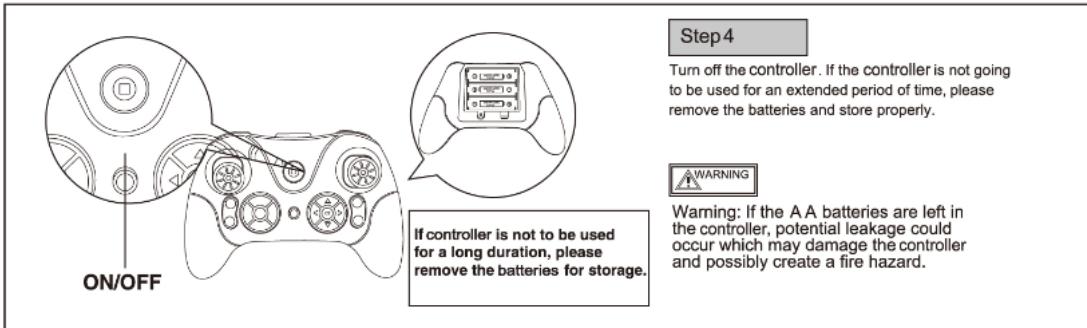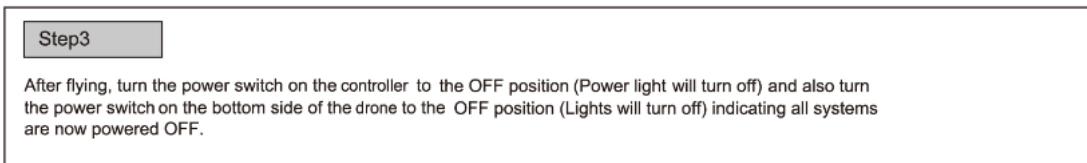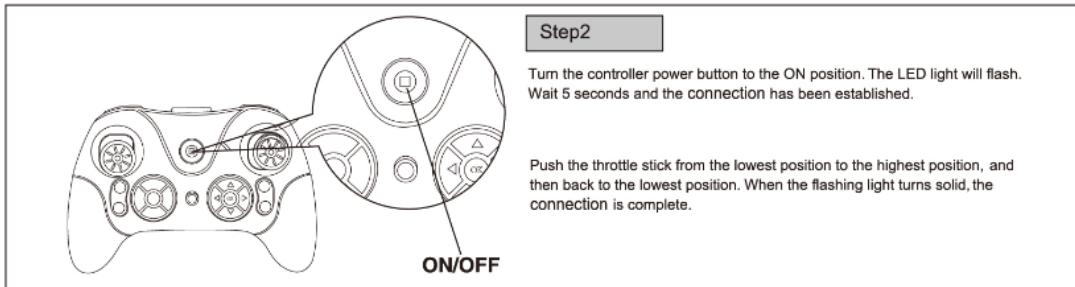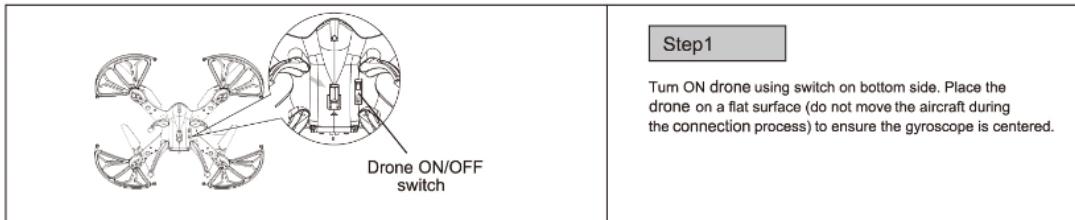

## Operations

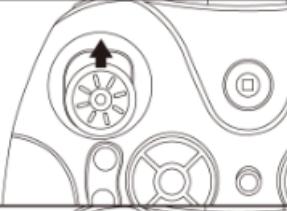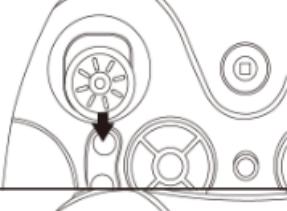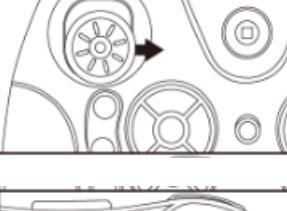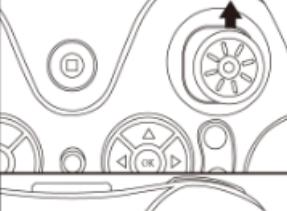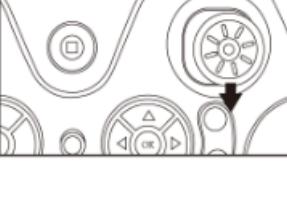Ascend	 <p>To ascend, move the throttle control stick up to increase the speed of the blade rotation.</p>	
Descend	 <p>To descend, move the throttle control stick down to decrease the speed of the blade rotation.</p>	
Rotate left	 <p>To rotate to the left, move the throttle control stick to the left.</p>	
Rotate right	 <p>To rotate to the right, move the throttle control stick to the right.</p>	
Forward	 <p>To move the drone forward, move the direction control stick up.</p>	
Backward	 <p>To move the drone backward, move the direction control stick down.</p>	

## 3D Flips & Rolls

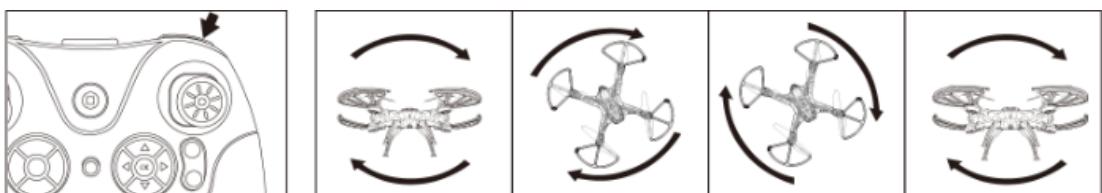

Press the flips & rolls button and it will beep one time to enter the advanced mode.  
Use the direction control stick to do flips & rolls.

### **Federal Communications Commission (FCC) Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by RUICHUANG TOYS INDUSTRIAL CO., LTD. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.