

# DTEN Relay Speakers PRODUCT GUIDE

## Installation Method

The speaker includes a universal 1/4-20 screw mount for flexible mounting on wall brackets or stands.

### 2 Specifications Mounting Position :



### 4 Specifications Mounting Position :




# Product Specification

Specification	parametric
Dimensions	220 x 80 x 80 mm $\pm$ 10mm
Volume Output	$\geq$ 73dB
Audio Latency	$\leq$ 30ms
Connectivity	Proprietary wireless + PoE (via adapter)
Supported Devices	Bar


## Port Diagram & Connections

Light Color	device status
/	unbooted
/	Long press to reset factory
Blue	Boot not connected
Green	Boot Connected
Red flashing	Firmware Upgrade

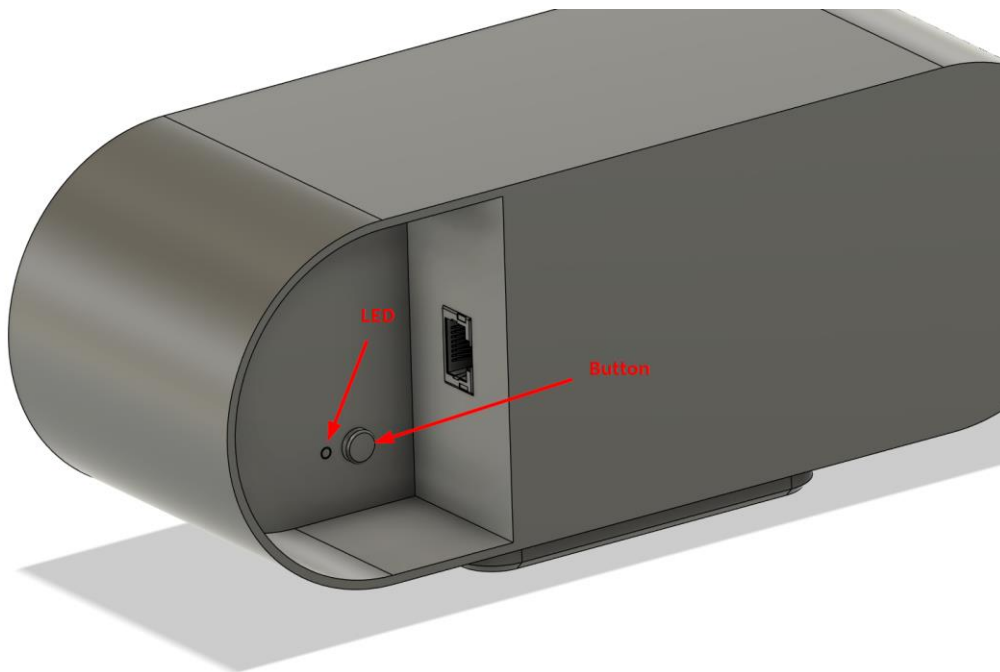

## Connection Modes

- Pre-Paired : The Booster is factory paired with the dongle and requires no user action.
- Adaptation room :
  - Medium Room: 1 dongle + 2 Booster
  - Large Room: 1 dongle + 4 Booster

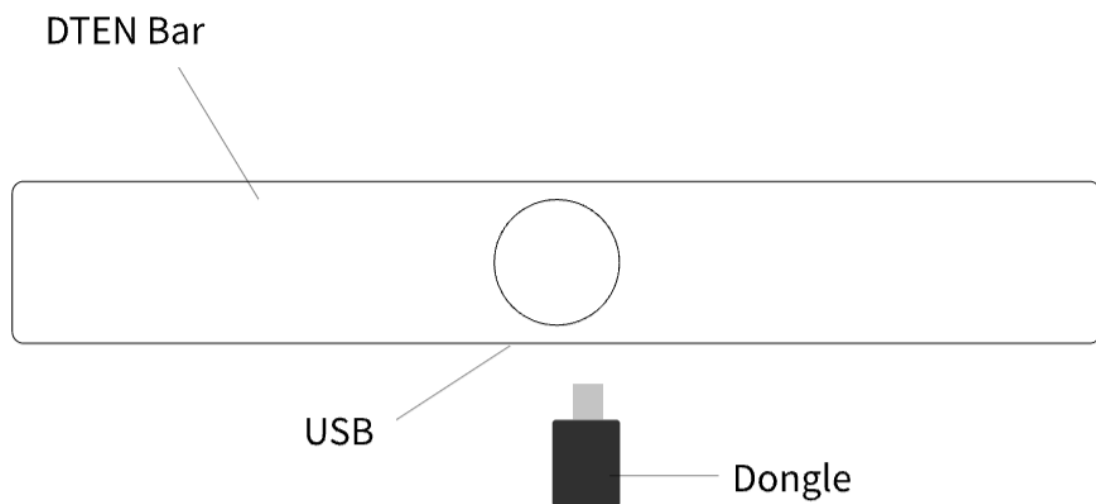

## Product Package

### Package content

- DTEN Satellite Speaker ×2 / ×4
- USB Dongle ×1
- PoE to AC Adapter ×1

# Setup & Control

## First-Time Setup



**Step 1** Check the number and position of connected Boosters.


**Step 2** Perform delay calibration.

**Step 3** Prompt for switching to the DTEN Speaker system.

**Step 4** Confirmation allows access to the DTEN menu control.

Notes: You can also subsequently switch to the DTEN Speaker system via the Audio Source setting.

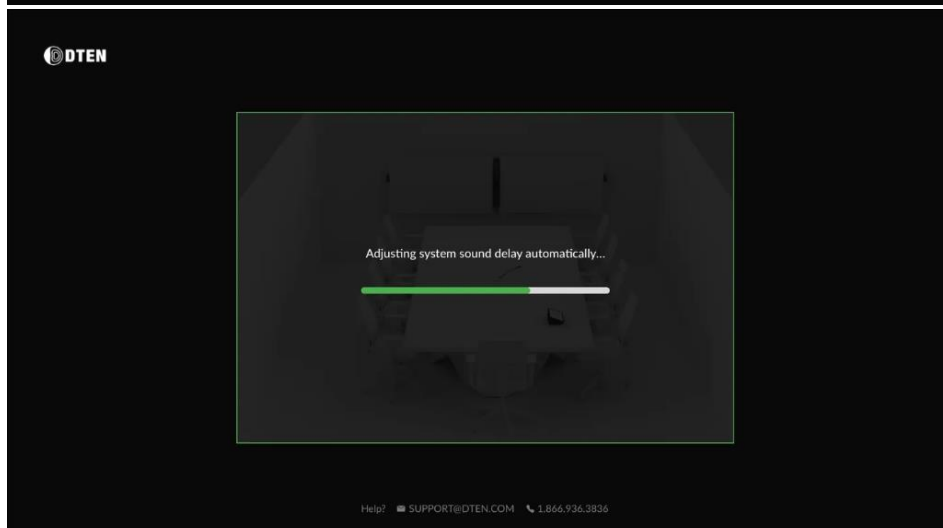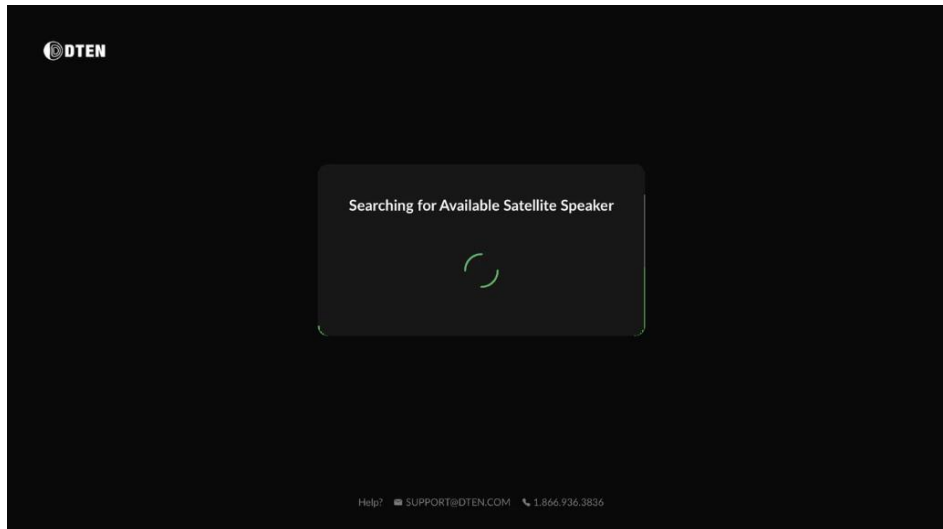


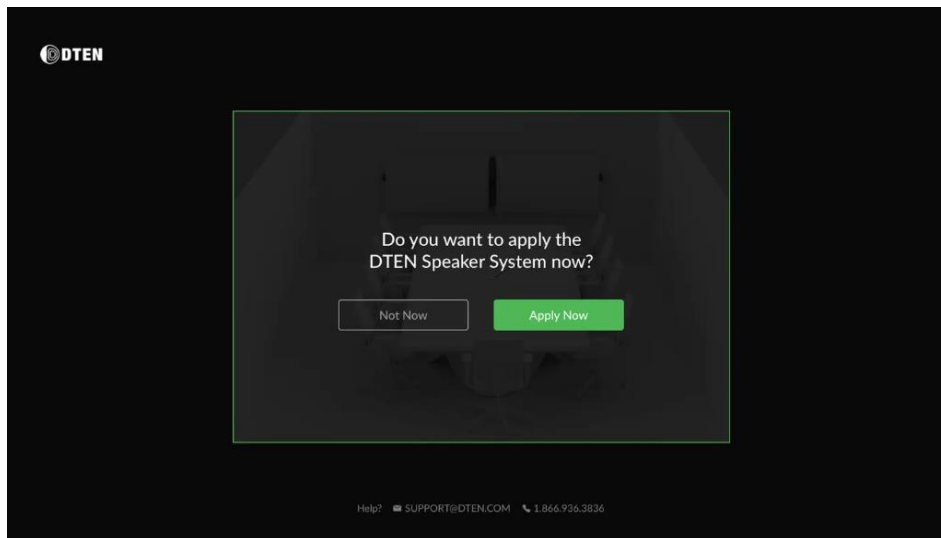

## Speaker Settings Menu


- View currently connected devices and their status
- Booster Independent Volume Adjustment
- Setting Delay adjustment
- Booster Renaming

ZOOM :

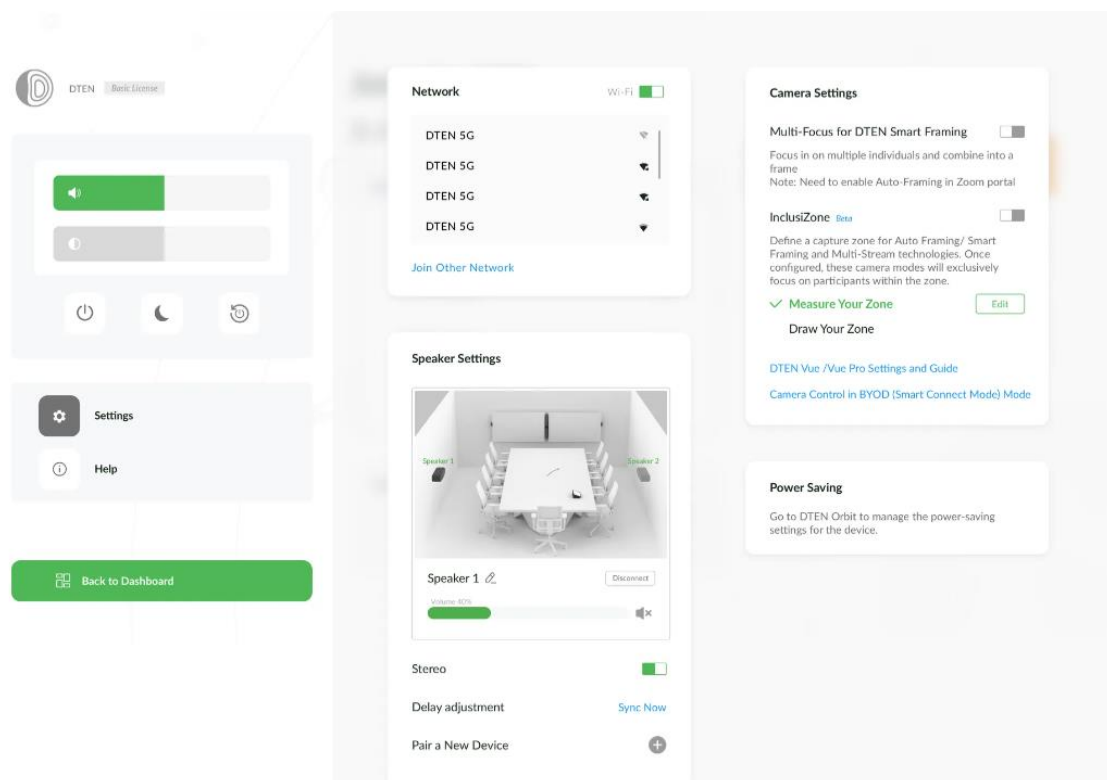



TEAMS:

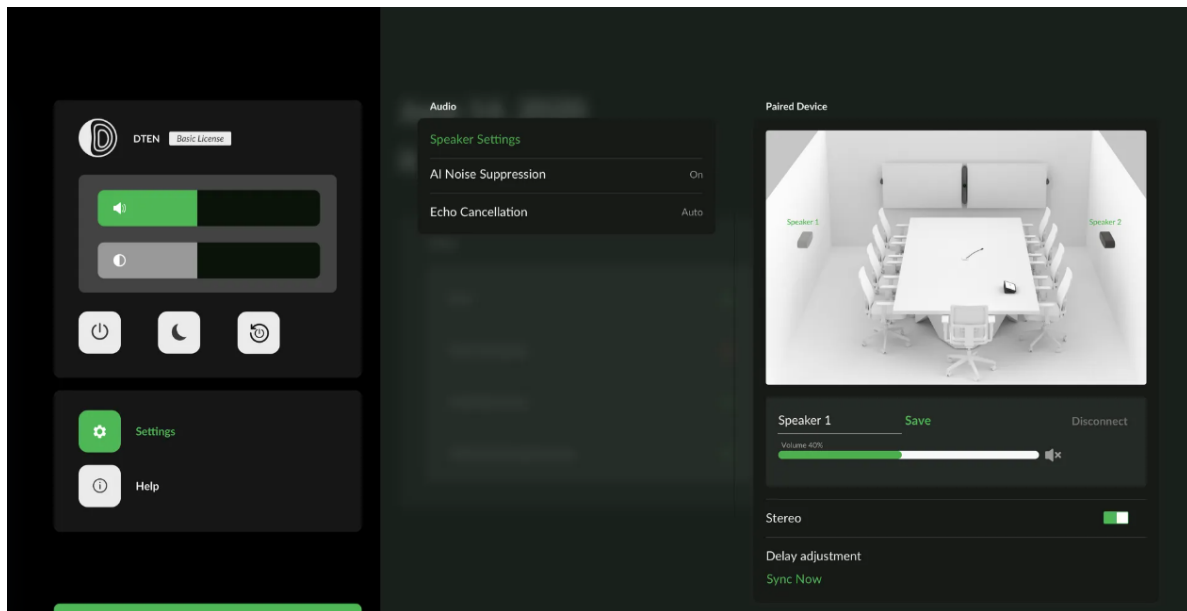

## Additional Notes

- Not recognizable by non-DTEN devices
- The Boosters need to be placed according to the installation recommendations to ensure the audio experience.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.