


# Instruction Manual

## DUAL CAMERA SYSTEM

### WiFi Trail Camera

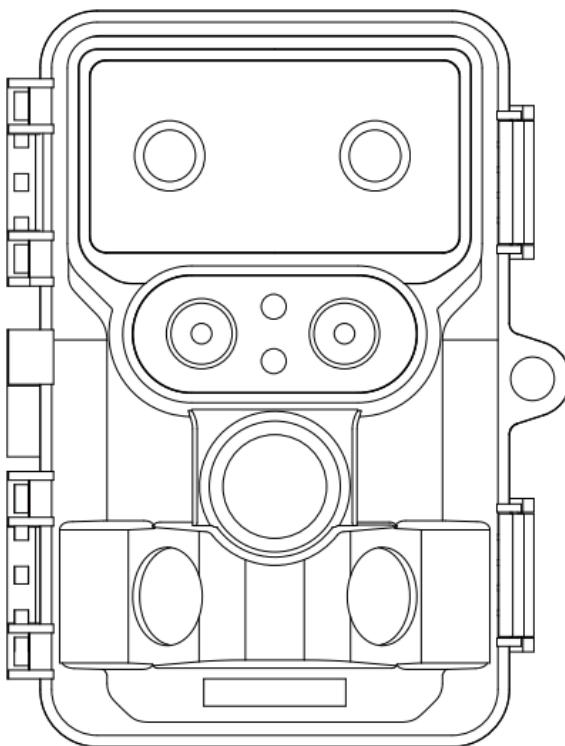

**48.0**

48 Megapixel

**IP66**

Waterproof

**2.4"**

IPS TFT-LCD

**0.3S**


Trigger time

**120°**

120° total  
PIR angle



4K Full HD  
Video function



**Dear customer, congratulations on purchasing a high quality product.**

You have purchased a Wildlife Camera with excellent technical features and respective accessory that is particularly easy to operate. Please study all notices carefully and diligently. Please study this information in detail observing, in particular, the safety instructions.

## **1. Contents of box**


Carefully unpack camera and check that all of the following components are contained in the box:

1. Wildlife Camera	2. Mounting belt	3. USB cable
4. Instruction manual		



### **Note:**

- Remove the protective foil from the camera lens.
- Caution! Keep plastic foil and bags away from babies and small children, as otherwise danger of suffocation.



## 2. Contents

<b>1. CONTENTS OF BOX</b>	1
<b>2. CONTENTS</b>	3
<b>3. HAZARD, SAFETY AND WARNING NOTICES</b>	4
<b>4. CAMERA OVERVIEW</b>	6
4.1. Front view	6
4.2. Inside view	7
<b>5. PREPARING THE CAMERA</b>	8
5.1. Opening and closing the camera	8
5.2. Inserting the batteries	9
5.3. Inserting the memory card	10
5.4. External power supply	10
5.5. Assembly with strap	11
5.6. Operation graphi expression Operation(see figures below)	11
<b>6. USING THE CAMERA</b>	12
6.1. Mode switch	13
6.2. Operating buttons	13
6.3. Settings Menu	15
6.4. Wi-Fi connection	20
6.5. Mounting and positioning the trail camera mounting	22
6.6. Sensing Angle and Distance Test	22
6.7. Switching ON the Camera	23
<b>7. CONNECTING TO COMPUTER</b>	23
<b>8. TECHNICAL SPECIFICATION</b>	24
<b>9. TROUBLESHOOTING TIPS</b>	26
<b>10. SYSTEM INFORMATION, MAINTENANCE AND DISPOSAL</b>	28
10.1. Care	28
10.2. Storage	28
10.3. Disposal	29

### **3. Hazard, safety and warning notices**

Incorrect use of the camera and accessories can be dangerous for you and others and can damage or destroy the camera. We therefore ask you to read and strictly observe the following Hazard, safety and warning notices.

#### **Intended use**

- This camera is intended for taking digital photos and video clips. It has been designed for private use and is not suitable for commercial purposes.

#### **Hazards for children and persons with limited ability to operate electronic equipment**

- The camera, accessory and packaging are not toys for children. These should therefore always be kept away from children. Danger of electrocution, poisoning and suffocation.
- The camera and accessory may not be used by children and persons with limited abilities. The camera may only be operated by persons physically and mentally able to operate it safely.

#### **Electrical hazard**

- Switch off the camera and remove the batteries if a foreign body or liquid has entered the camera. Let all parts dry thoroughly. Otherwise danger of fire or electrocution
- Switch off the camera and remove the batteries if the camera has been dropped or the housing is damaged. Otherwise danger of fire and electrocution.
- The camera may not be dismantled, modified or repaired. Danger of fire and electrocution.
- Only use a power adaptor (not supplied) with the mains voltage specified on the rating plate (6V). Otherwise danger of fire or electrocution. Disconnect the power by pulling the power adaptor out of the socket.
- A plugged in power adaptor (not supplied) can continue to use power and therefore represents a hazard source.
- The power supply may not be used during thunderstorms. Otherwise danger of electrocution.

## Damage from heat-fire hazard


- Do not leave the camera in places that are susceptible to considerable increases in temperature (e.g. a vehicle). The housing and internal parts may be damaged, which in turn could cause a fire.
- Do not wrap up camera or place on textiles. This could produce a build up of heat in the camera that can cause deformation of the housing and may represent a fire hazard.

## Injuries and material damage


- Only place the camera on sturdy surfaces. The camera could otherwise fall or topple over, causing damage or injury.
- Do not operate the camera whilst running or driving. You could fall or cause a traffic accident.
- Only use a mains adaptor (not supplied) for the camera, having the input voltage specified on the rating plate (6V). We do not accept any liability for damage caused by the use of an incorrect mains adaptor.
- The 230V socket used for the mains adaptor (not supplied) must not be covered and accessible at all times so that the mains adaptor can be quickly disconnected from the mains, when required.
- Ensure adequate ventilation and do not cover the mains adaptor (not supplied) to avoid overheating.
- Do not place any open ignition sources, such as lit candles onto or close to the device.
- Do not subject the LCD monitor to impact or pressure. This could damage the glass of the monitor or the liquid could leak from the inside.  
In case of contact with eyes or skin, rinse immediately with clear water.  
In case of contact with eyes contact a doctor immediately.
- Damage to the electronics, the monitor or the lens caused by external influences such as impacts, falls or other are not covered by the warranty and must be paid for.
- Do not drop or bump the camera and always handle it carefully.  
Otherwise the camera can be damaged.

## 4. Camera Overview


### 4.1. Front view

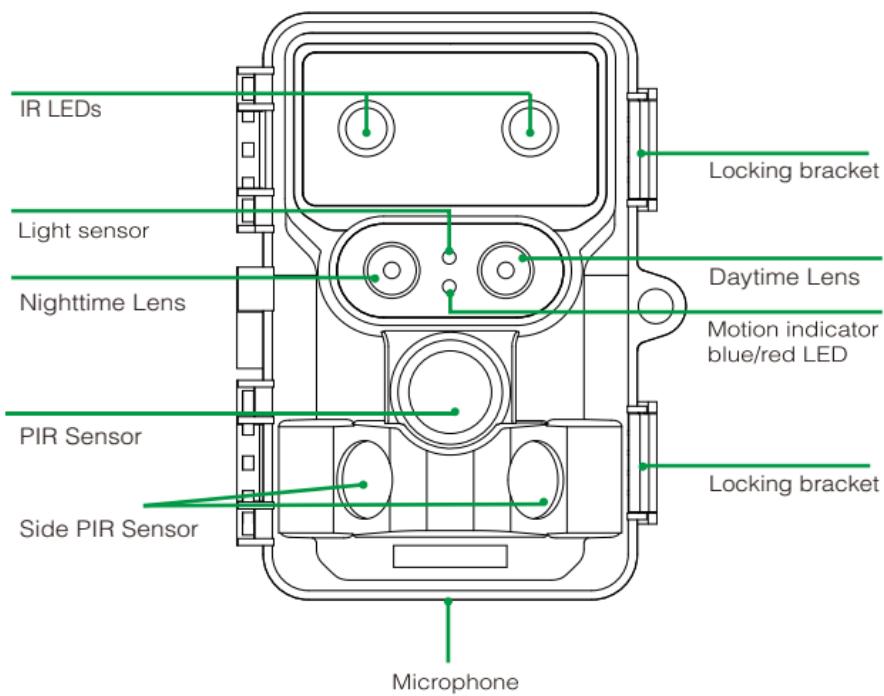

## 4.2. Inside view

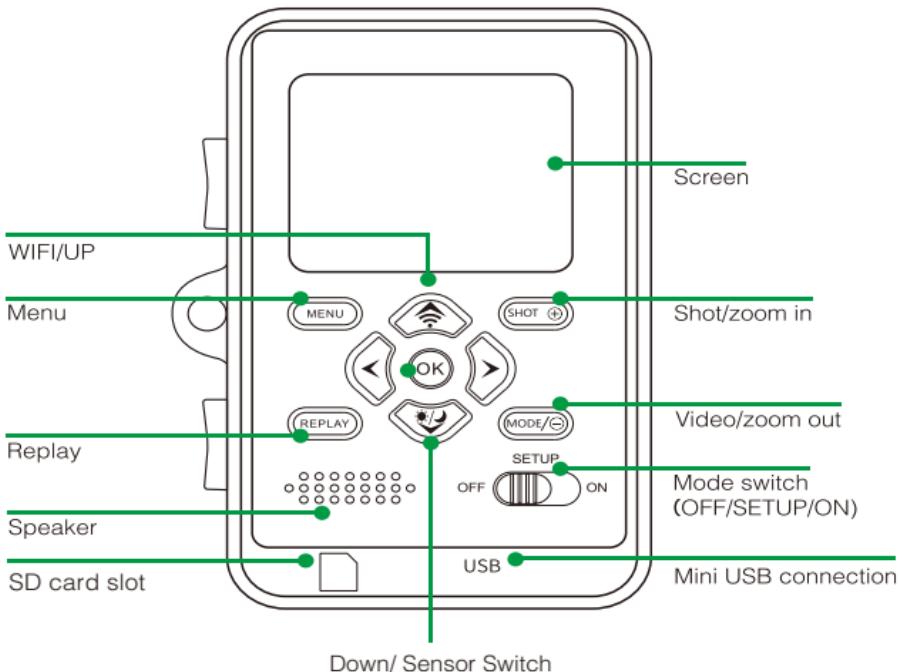



- The monitor is only switched on in the SETUP mode for changing menu settings or viewing existing photos.
- An SD or SDHC memory card must have been inserted into the memory card slot in order to save photos.
- Using the mini USB connection (USB 2.0), the camera can be connected to a computer.
- Using the mode switch the three operating modes OFF, SETUP and ON can be selected.

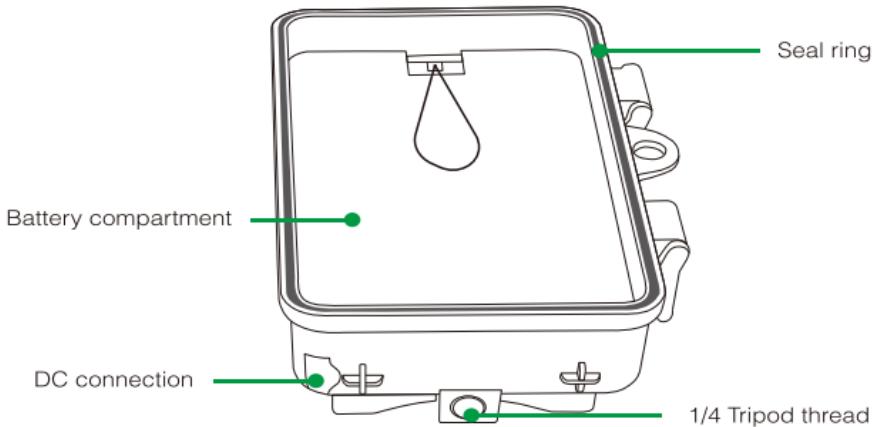

## 5. Preparing the camera

### 5.1. Opening and closing the camera

Operating buttons, connections and batteries are located inside the Wildlife Camera.

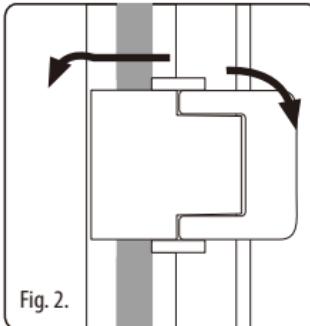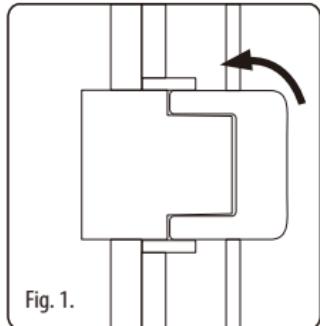


A fixing for a padlock is provided between the two locking brackets, allowing the camera to be securely locked.

## 5.2. Inserting the batteries

Open the camera as described in section 6.1 to insert the batteries. The battery compartment is housed in the right, rear part of the camera. Now open the protective cover of the battery compartment by pulling the clamping closure at the top slightly inwards before lifting off the cover.

First remove any existing batteries from the battery compartment. Insert 8 fully charge batteries as shown in the below figure. When inserting batteries ensure correct position as marked for each battery in the battery compartment.

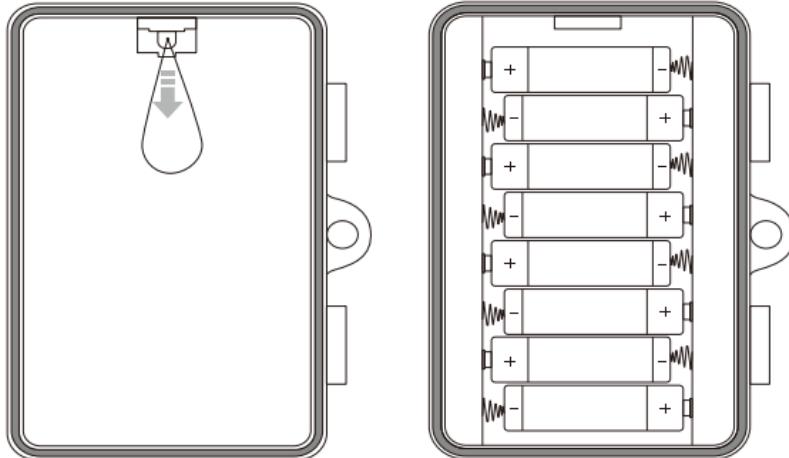

### Note:


- We recommend using 8 x alkaline AA batteries to ensure the camera's normal function.

### 5.3. Inserting the memory card

A memory card must have been inserted in order to save photos and videos. Insert a SD/SDHC memory card in the memory card compartment before switching on the camera.

Switch off the camera and open as described in section 5.1.

Prior to inserting the memory card ensure that the lateral write protection on the memory card has not been activated (see figure).

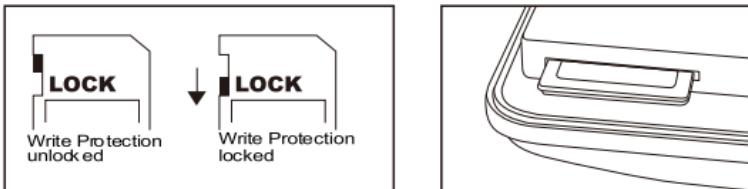

If the camera displays "Card protected", remove the memory card and change the position of the memory protection.

Insert the memory card as shown in the adjacent illustration. Push the memory card into compartment until it clicks into place.

To remove the memory card push card in again until it is partly ejected.




#### Note:

- SD/SDHC memory cards up to a capacity of 256GB are supported.
- Please use the SD/SDHC memory card for U1 CLASS 10 or above.



### 5.4. External power supply

The camera can be operated using power from an external power supply. A 6 V power supply with at least 2.0 A is required containing a connector with a 3.5 mm external and 1.35 mm internal diameter (internal positive pole, external negative pole).

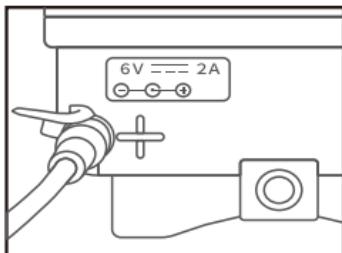

## 5.5. Assembly with strap

Use the securing strap supplied to attach the Wildlife Camera to a tree or another object. The illustrations below demonstrate how to fasten the securing strap.

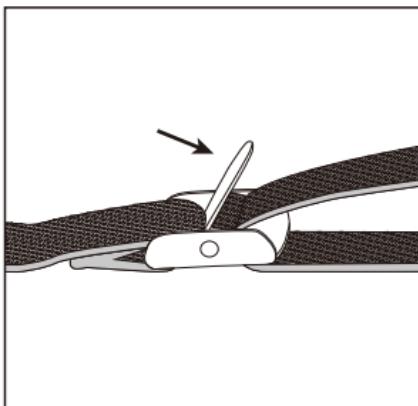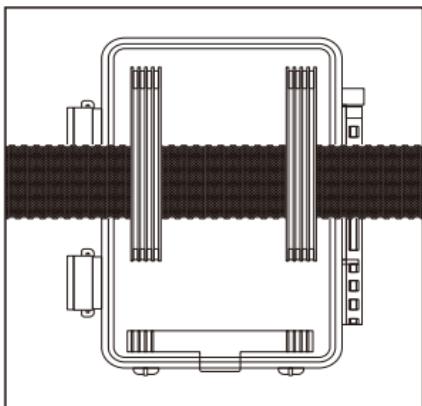


Position the Wildlife Camera as desired and pull the loose end of the securing strap tight until the camera is firmly secured.

To release the securing strap again, pull at the tab of the securing strap.


## 5.6. Operation graphi expression Operation(see figures below):

Open the locking brackets and the protective cover of the battery compartment- insert batteries -insert memory card- switch to SETUP- enter system menu by pressing MENU button- choose to reset to factory


The power supply may not be used during thunderstorms. Otherwise danger of electrocution.

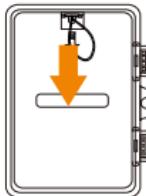

Open the  
Battery  
cover.

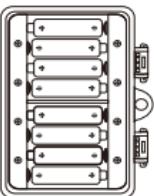



Pls insert 8pcs  
batteries.  
Battery model:  
AALR6

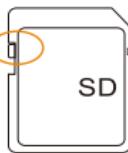

Please ensure  
that the lateral  
write protection  
on the memory  
card has not been  
activated



Insert U1 CLASS10  
or above SD/SDHC  
memory card in the  
memory card slot  
before switching on  
the camera and  
select, SETUP mode  
to adjust settings.

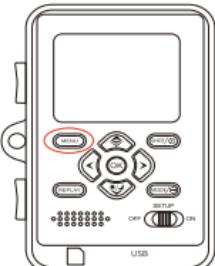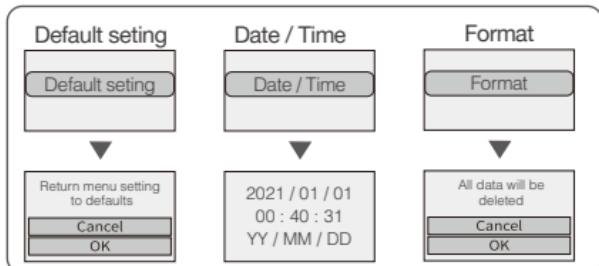

Press "MENU" to enter  
the system setup menu.


## 6. Using the camera

Prior to setting up the camera for surveillance, it must be set up for the respective purpose. For this purpose, there is a setup mode available. In addition to changing settings, photos and videos can be taken and existing photos can be viewed in this mode.

## 6.1. Mode switch

The Trail Camera has three basic operational modes:

- **OFF** mode: Power switch in the OFF position.
- **ON** mode: Power switch in the ON position (LCD screen is off).
- **SETUP** mode: Power switch at SETUP position (LCD screen is on).

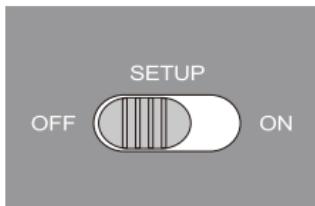

## 6.2. Operating buttons

In the SETUP mode you can check and change the settings of the Trail Camera's with the help of its built-in LCD. These settings, found in the SETUP Menu, let you change the photo or video resolution, interval between photos, switch the time imprint on, etc. Moving the power switch to the SETUP position will turn on the LCD display, and you will see an information screen that shows how many images have been taken, the battery level, camera or video mode, etc.



### Note:

- Always move the power switch from OFF to SETUP mode. It is possible that the camera could lockup if it is switched from ON to SETUP mode. If this occurs, simply move the switch to OFF and then push it up to SETUP again.



## Functions of operating buttons in standby mode

Below, the operating buttons are described in the recording mode with non activated menu.

-  : Enter the state of Menu Setting.
-  : Start the replay.
-  : Switch the photo or video mode.
-  : Take a photo or video, or stop recording.
-  : Turn on /turn off WiFi hotspot.
-  : Click to pop up the switch camera dialog box, switch day/night camera as required
- , ,  : No function(in standby mode).

## Functions of operating buttons in replay mode

Below, the operating buttons are described in the replay mode with non activated menu.

-  : Delete or protect the files.
-  : Enter or exit the replay mode.
-  : View photos or videos files in reverse order.
-  : View photos or videos files in order.
-  : Photo right side review or video fast forward after zoom state.
-  : Photo left side review or video fast backward after zoom state.
-  : Start and pause replay of videos.

■ **MODE/(-)** : Zoom out the photos.

■ **SHOT/(+)** : Zoom in the photos.

## Functions of operating buttons in MENU setting

Below, the operating buttons are described in MENU setting.

■ **MENU** : Enter or Exit the Menu Setting.

■  : Up key to select a different setting for the currently displayed parameter.

■  : Down key to select a different setting for the currently displayed parameter.

■  : Move on to the next parameter.

■  : Go back to the previous parameter.


■ **OK** : Save the new setting.

Confirm each change to a setting by pressing **OK**. If the change is not confirmed by pressing the **OK** button, the new setting are lost when leaving the menu.

■ **REPLAY** , **MODE/(-)** , **SHOT/(+)** : No function (in MENU mode).

### 6.3. Settings Menu

Slide the mode switch to the SETUP position to start the setup mode and then press the MENU button to call up the menu. All menu options and possible setting values are listed below. The standard default setting is always highlighted in bold.

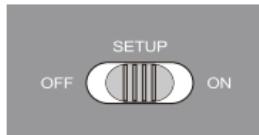



- **Mode : Photo**, Video, Photo + Video

Selects the format your camera will record in.

**Photo:** For photos only.

**Video:** For videos only.

**Photo+Video:** A photo (multiple photos, if NUM PICS is set >1) followed by a video clip will be captured for each PIR trigger event.

- **PIR Interval:** Defaulted 30seconds, optional from 5seconds ~60minutes

Select the short setup period for the camera to wait before it reacts to the successive triggering of the main sensor after an animal has first been detected. The camera does not record any images or videos during the selected interval. This prevents the memory card from being filled with unnecessary shots.



**Note:**

- The interval time is short, the camera shooting frequency would be high, and there would be high consumption of batteries. It would effect the usage days of the batteries. It is just on the opposite ,the interval time is long, would be a lower consumption of batteries to guarantee a long time usage.

- **PIR Sensitivity:** High/ **Medium**/ Low

- **Time lapse:** Off/On

When "on" has been selected, the camera would automatically takes photos/ videos in the selected time interval, irrespective of whether or not the PIR sensor has detected a motion or not. This is useful for observing cold blooded animals e.g. snakes or plants opening up, etc.

As soon as the "On" setting has been confirmed by pressing the **OK** button, you can enter the interval time after which photos/ videos are to be taken.



**Note:**

- In this mode, the PIR function would stop working, and the camera would take photos/ videos in the setting interval time.

- **Night shoot mode: Auto/ Color**

**"Automatic"**: In Automatic option, the camera would select the different lens according to the real condition of the brightness. In the full light condition, it would go for the 13MP sensor lens, and lower light condition would change to 2MP sensor lens. In the night time, it would always take black and white photos by 2MP sensor lens.

**"Color"**: In the Color option, the only different with Automatic is the camera always take color photos even in the low light or night time condition. But in the night time condition, the photos would have many noises. It is better to use this function in the full light condition.

- **IR LED: Auto/ Medium/ Low/ Off**

Set the infrared LEDs brightness.

- **Low Bat Night Shot: No IR Led/ No Shutting**

- No IR Led: The camera takes photos and videos without opening IR LEDs at night when battery is quite low.
- No Shutting: The camera doesn't take photos and video at night when the battery is quite low.

- **Monitoring Period: Off/On**

Set timer to "On" if camera should only be active within a certain time. Once "On" has been confirmed with the OK button, the start and end time can be set.

If the start time is, for instance set to 18:35 hrs and the end time to 8:25 hrs, the camera will be operational from 6:35 pm of the current day until 8:25 am of the following day. The camera will not be triggered and will not take any photos or videos outside of this period.

- **Side PIR Setup: Off/On**

The two side PIR sensor zones provide a wide detection angle and detect more potential triggers.

Sometimes you only wish to observe a certain point.

Too many irrelevant triggers from the side sensor zones outside of this point continuously switch the camera on and off, considerably affecting battery life. In some situations it may be difficult to remove interfering branches or avoid sun light. In these situations you can switch off the side sensor zones.

- **Frequency: 50Hz/60Hz**



- **Image size** : Daytime/ Nighttime

**Daytimes:** Selects resolution for still images from 2MP to 48MP. Higher resolution produces better quality images, but creates larger files that take up more of the SD card capacity. 13MP is the recommended default for good resolution and smaller size.

**Nighttime:** 2MP is the recommended default for good resolution and smaller size.

- **Picture NO:** Selects how many images are taken in sequence per trigger. Default 1P.
- **Shutter speed:** 1/15, 1/20, 1/30



- **Resolution:** Daytime/Nighttime

**Daytime:** The default is 4K(3840 x 2160 30fps).

**Nighttime:** The default is 1080P(1920 x 1080 30fps).

Selects video resolution (in pixels per frame). Higher resolution produces better quality videos, but creates larger files that take up more of the SD card capacity (fills up faster).

- **Video Length:** Selects video recording length from 5sec to 180sec. The default is 10sec.
- **Record Audio:** Off/On



- **Language:** Select the desired menu language

The following languages are available: **English**, German, French, Spanish, Chinese, etc.

- **Default setting(Reset to factory): Cancel/OK**

Restores all settings to the factory defaults.

- **Format: Cancel/OK**

Deletes (erases) all files stored on a card to prepare it for reuse. Always format a card that has been previously used in other devices.

**Caution! Make sure you have downloaded and backed up any files you want to preserve first!** Press OK to execute, press MENU to exit without formatting.

- **Date / Time:** Set date and time

- **Time Format:** 12hour/ **24hour**

- **Date Stamp: On/Off**

Selects whether the user wants to have the Time and Date stamped on images. The default mode is ON.

- **Beep Sound: On/Off**

- **Camera name:** 4K WIFI CAM\*\*\*\*

Allows you to enter a name for your camera that will appear on the image time stamp. Go to the "Delete" to erase the default name "4K WIFI CAM" and then enter the new name. Maximum allow 12 byte for the new name.

- **Password Setting: Off/On**

After selecting "On" enter a four digit password to protect your camera against unauthorised access.

This password must be entered each time the camera is switched on in the SETUP mode before the camera can be used.



**Note:**

- If you forgot your password, please unlock the camera with password "OPEN".

- **Bluetooth: Off/ On**

- **WiFi SSID:** 4K WIFI CAM\*\*\*\*

You can use a combination of 10 digits and 26 letters to document the location on the photos and videos. When using several cameras this makes it easier to identify the location when viewing photos and videos.

- **WiFi Password:** Default 12345678

- **Auto WiFi Off: 1Minute,** 2Minutes, 3Minutes

If the camera turns on the WiFi hotspot, but the phone doesn't connect to the WiFi hotspot successfully within selected time, then WiFi hotspot will disconnect automatically and the camera will return to SETUP mode or ON mode.

- **Auto Power Off: 3 min/5 min/10 min/Off**

If there is no operation more than the selected time, then the camera will turn off automatically in SETUP mode.

- **Backlight: 1Minute,** 3Minutes, 5Minutes, Off

The LCD monitor would automatically turn off after the setting time.

- **Version:** You can check the software version.

- **Mcu FW Update**

## 6.4. Wi-Fi connection

### Download APP:

Before using the Wi-Fi function, please refer to the label details on the Battery Compartment for the APP name or QR code. And then download the APP from APP store, Android play or Amazon market accordingly to your smartphone system.

### Add your device:

Open the app and follow on-screen guides to set up the camera to app. After successful connection camera with the app, you could select the iron  of setting to begin customizing your camera settings, or use our default configuration for a quick setup.

**Default Wi-Fi name: 4K WiFi CAM-**

**Default Wi-Fi password: 12345678**

## Through the mobile application, the Wi-Fi function allows you to:

- View, download, delete recorded photos and videos.
- Take photos and videos.
- Modify the settings.
- Check the remaining energy level and memory capacity.




### Note:

- During the WiFi connection, please make sure that your smartphone bluetooth function is in the "ON" state.
- In the step of WiFi connection, please go to your smartphone WLAN choice the default Wi-Fi name 4k WiFi CAM-..., and then input the default password "12345678".
- Press  WiFi button in the camera to exit WiFi, then the camera will automatically return to SETUP mode or ON mode.

## Live screen of APP

The live screen of APP shows the current live image from the trail camera and also offers the following options:

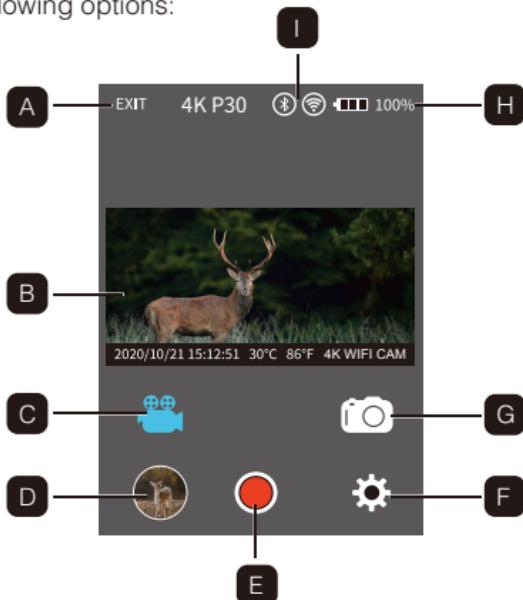

A. Exit the APP	F. Settings
B. Live image	G. Photo mode
C. Video mode	H. Trail camera battery level
D. Review picture or video	I. WiFi and Bluetooth
E. Release button	

## 6.5. Mounting and positioning the trail camera mounting

After you've set up the camera's parameters to your personal preferences, you're ready to take it outside and slide the power switch to "ON". When setting up the trail camera for scouting game or other outdoor applications, you must be sure to mount it in place correctly and securely.

We recommend mounting the trail camera on a sturdy tree with a diameter of about 6 in. (15cm). To get the optimal picture quality, the tree should be about 16-17 ft. (5 meters) away from the place to be monitored, with the camera placed at a height of 5-6.5 ft. (1.5~2 m). Also, keep in mind that you will get the best results at night when the subject is within the ideal flash range, no farther than 65ft/20m and no closer than 10ft (3m) from the camera.

## 6.6. Sensing Angle and Distance Test

To test whether the trail camera can effectively monitor the area you choose, this test is recommended to check the sensing angle and monitoring distance of the trail camera. To perform the test:

- Switch the trail camera to the SETUP mode.
- Make movements in front of the camera at several positions within the area where you expect the game or subjects to be. Try different distances and angles from the camera.
- If the motion indicator LED light blinks, it indicates that position can be sensed. If it does not blink, that position is outside of the sensing area. The results of your testing will help you find the best placement when mounting and aiming the trail camera. The height away from the ground for placing the device should vary with the animal size appropriately. In general, 3 to 6 feet is preferred.

You can avoid potential false triggers due to temperature and motion disturbances in front of the camera by not aiming it at a heat source or nearby tree branches or brush (especially on windy days).

## 6.7. Switching ON the Camera

Once you switch to the ON mode, the motion indicator LED (red) will blink for about 5 seconds. This gives you time to close and lock the front cover of the trail camera and then walk away. During this time, the motion indicator LED will blink red continuously. After it stops blinking, the PIR is active, and any motion that is detected by it will trigger the capture of photos or videos as programmed in the SETUP Menu. Be sure you have read the descriptions of the Capture Number, Interval and Sensor Level parameters. Please note, the PIR is strongly sensitive to ambient temperature. The greater the temperature difference between the environment and your subject, the farther the possible sensing distance. The average sensing distance is about 60 ft.


## 7. Connecting to computer

The Wildlife Camera can be connected to a computer using the supplied USB cables to view existing photos/videos.

### System requirements

Windows	Macintosh
■ Pentium?III or higher	■ PowerPC G3/G4/G5
■ Windows?XP/Vista/7/8	■ OS 10.3.9 or newer system
■ 512 MB RAM	■ 512 MB RAM
■ 1GB available hard disk space	■ 1GB available hard disk space
■ Screen resolution 1.024 x 768 or higher	■ Screen resolution 1.024 x 768 or higher
■ Available USB connection	■ Available USB connection

1. Connect the camera to your computer using the USB cable.
2. The camera switches on automatically in the USB mode, irrespective of the selection on the mode switch.
3. The camera installs itself on the computer as an additional drive under the name "Removable storage device".
4. Double click on the device to detect the folder "DCIM".
5. The photos and videos are located in the sub folders of the "DCIM" folder.
6. You can copy or move photo and video files on the computer. Alternatively you can insert the memory card in a card reader on the computer.

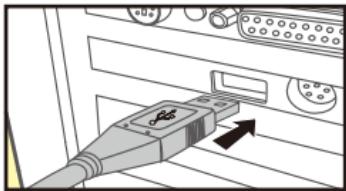

### Note:

- Mac computers show an "Unknown" drive on the desktop. When clicking on this drive, the program "iPhoto" is automatically started.

## 8. Technical specification

Daytime lens	High resolution 13MP SONY native sensor F=2.9mm, F/NO=3.0, FOV=80° Distortion: -1%
Nighttime lens	SENSOR: 200W F=4.0mm, F/NO=1.4, FOV=93°
Image size (Daytime lens)	48M:9248x5200; 36M:8000x4496; 24M:6544x3680; 13M:4832x2704; 8M:3840x2160; 4M: 2704x1520; 2M: 1920x1088
Image size (Nighttime lens)	4M:2704x1520; 2M: 1920x1088; 1M:1280x720
Display screen	2.4" IPS 320 x 240(RGB) DOT TFT-LCD Display
Triggering time	approx. 0.3 second; Pre boot 0.2 second
Video size (Daytime lens)	4K: 3840x2160 30fps; 2.7K: 2704x1520 30fps; 2K: 2560x1440 60fps; 2K: 2560x1440 30fps; 1080P: 1920x1080 60fps; 1080P: 1920x1080 30fps; 720P: 1280x720 30fps; 480P: 848x480 30fps; 360P: 640x368 30fps

Video size (Nighttime lens)	1080P: 1920x1080 30fps; 720P: 1280x720 30fps; 480P: 848x480 30fps; 360P: 640x368 30fps
Effectiveness	Daytime: 1 m-infinite; Night time: 3 m-20 m
Storage formats	Photo: JPEG; Video: MPEG - 4 (H.264)
Detection angle of sensors	Central sensor zone: 60°; Side sensor zone: each 30°; Total sensor angle zone: 120°
Triggering distance	up to 20 meters
PIR Sensitivity	High/ Medium/ Low
WiFi	2402~2462MHz 802.11 b/g/n (High-speed up to 150 Mbps)
Bluetooth 5.0 frequency	2.4GHz ISM frequency
Recording medium	Supports SD/SDHC memory cards up to 256GB(optional)
Waterproof	IP66
Power supply	8x batteries type LR6 (AA); external 6V power supply, at least 2A (not supplied)
Average battery life	approx. 6 months at 50 images per day average (with 8 batteries)
Operating temperature	-20 - 60°C (Storage temperature: -30-70°C)
Operating Humidity	-5%-90%
Connection	mini USB 2.0
Dimensions	approx. 135 (H) x 103 (B) x 75 (T) mm



### Note:

- Design and technical specification are subject to change.

## 9. Troubleshooting tips

### 1) Camera won't power on.

#### Possible Cause

- Batteries not fully installed, or not installed correctly.

#### Recommended Solution(s)

- Install new AA alkaline batteries.
- Make sure the positive (+) and negative (-) poles are lined up properly in each compartment, with (-) pole making contact with the spring.

### 2) Camera takes images without animals.

#### Possible Cause

- A "false trigger" caused by motion (branches, water, etc.) and/or high heat in front of the camera lens when there is no subject in the image.

#### Recommended Solution(s)

- Move camera to spot without branches or water close to camera.
- Change PIR sensitivity in menu settings.
- Move camera to inside area without movement to check and see if it still takes pictures without movement. Contact customer service for possible repair or replacement.

### 3) Camera responds slowly to movement, does not always capture image when triggered.

#### Possible Cause

- PIR sensitivity setting needs to be adjusted.

#### Recommended Solution(s)

- Go to "PIR Sensitivity" in the Setting Menu and increase the PIR sensitivity.

### 4) Battery life is shorter than expected.

#### Possible Cause

- Battery life will vary with operating temperature and the number of images taken over time. Typically, you will be able to capture several thousand images before the batteries die.

### **Recommended Solution(s)**

- Make sure you install all new alkaline AA batteries.
- Longer delays will increase battery life.  
(you'll take less images and use less flash). Adjust these in the Settings Menu.

## **5) Camera stops taking images or won't take images.**

### **Possible Cause**

- The SD Card is full, in the locked position, improperly formatted, or the batteries are dead.

### **Recommended Solution(s)**

- Check SD card. If full, download images, erase from card, reinstall empty card in camera.
- Move the "write protect" switch to the unlocked position.
- Reformat the card by using the "FORMAT" option in the Settings Menu.

## **6) Images appear off-color, ie. red, green, or blue.**

### **Possible Cause**

- Sensor is confused in certain lighting conditions.

### **Recommended Solution(s)**

- If seen consistently, sensor may need repair. Contact Customer Service.

## **7) Videos are too short, not recording to the length set.**

### **Possible Cause**

- Batteries are low, SD card is full, or settings need adjustment.

### **Recommended Solution(s)**

- Check battery power.
- Check SD card. Replace or erase if full.
- Adjust the video record length to avoid potential overheating of batteries and/or electronic components.

## **8) Forget the password of the trail camera.**

### **Recommended Solution(s)**

- Just enter the words “OPEN” to start the camera again.

## **9) Forget the WiFi password.**

### **Recommended Solution(s)**

- Default the trail camera to restores all settings to the factory defaults.
- And then the password is “12345678”

## **10) The Bluetooth couldn't open the WiFi hotspot.**

### **Possible Cause**

- “Bluetooth” setting is off.

### **Recommended Solution(s)**

- Go to the Settings Menu, select “Bluetooth”, select “ON”

## **10. SYSTEM INFORMATION, MAINTENANCE AND DISPOSAL**

- Microsoft® and Windows® are trademarks of Microsoft Corporation registered in the US.
- Pentium® is a registered trademark of Intel Corporation. Macintosh is a trademark of Apple Computer Inc.
- SD™ is a trademark.

### **10.1. Care**

Do not use any corrosive cleaners, such as methylated spirits, thinners, etc. to clean the camera housing and supplied accessory. When required, the clean system components with a soft dry cloth.

### **10.2. Storage**

Always remove the battery from the housing if the camera is not being used for some time and store the battery separately. On a day to day basis and over longer periods the batteries can be kept at a dry location out of the reach of children.

### 10.3. Disposal

For disposal, separate packaging into different types and dispose of in line with environmental regulations in supplied collection containers. Batteries and storage batteries may not be disposed of in domestic waste. Consumers are obliged by law to return used batteries to communal collection points or dealers selling batteries. Storage batteries and batteries do therefore contain the adjacent symbol.

Correct disposal of product:

The adjacent symbol indicates that electrical and electronic equipment may not be disposed of in domestic waste in the EU. Please use the returns and collection points of your local council or contact your dealer you purchased the product from. This prevents potentially harmful effects on the environment and health as a result of incorrect disposal. For further information contact the respective department of your local council.

**FCC WARNING:**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.