



Cloud App



Quick Start Guide

 All Software & files can be downloaded from
<https://www.milesight.com/iot/resources/download-center/#documents>

Xiamen Milesight IoT Co., Ltd.
Add: Building C09, Software Park Phase III, Xiamen 361024, Fujian, China

Make Sensing Matter

Milesight IoT Co., Ltd. | www.milesight.com



QUICK START GUIDE

SMART THERMOSTAT 



WT201-868M/915M

Content

1. Packing List.....	1
2. Hardware Introduction.....	1
3. Wiring Diagrams.....	3
4. Installation.....	11
5. Configuration Guide.....	14
6. FCC Statement.....	15


1. Packing List



1 × WT201 Device



1 × Wiring Backplate



1 × Decorative Cover Plate



2 × Wall Mounting Kits



1 × Fixing Screw



1 × Thermostat Wire Label Sticker




1 × Quick Start Guide



1 × Warranty Card

2. Hardware Introduction

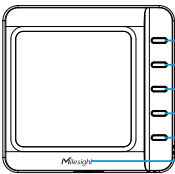

Button 1: System On/Off


Button 2: Temperature +

Button 3: Temperature -

Button 4: Fan Mode


Button 5: Temperature Control Mode

NFC Area

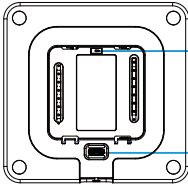

DIP Switch

Type-C USB

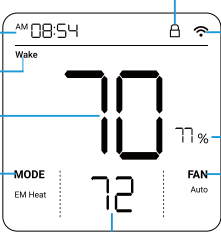

Time

Temperature Control Plan

Current Temperature

Temperature Control Mode

Child Lock

LoRaWAN® Network Status

Humidity

Fan Mode

Target Temperature

Network Status: blinks=inactivated, static on=activated.
Reboot: Press and hold the button 1 and button 5 for more than 3s until the screen begins to blink slowly.
Reset to Factory Default: Press and hold the button 1 and button 5 for more than 10s until the screen begins to blink quickly.


3. Wiring Diagrams

Wiring Descriptions


Wire	Description
CL	Live line out of keycard switch
CN	Neutral line of keycard switch
RC	Power of cooling system and heating system(24VAC)
RH	Power of heating system(24VAC)
W1	Heating/The first stage of heating.
W2/AUX	The second stage of heating/Auxiliary heating
E	Emergency heating used on very cold days
Y1	The first stage of cooling on cooling system or compressor on heat pump system
Y2/GL	Y2: The second stage of cooling on cooling system or compressor on heat pump system GL: Control fan to low speed for PTAC
G/GH	G: Control fan GH: Control fan to high speed for PTAC
C	Common of 24VAC power. It also might be labelled as X or B wire.
PEK	Connect Power Extender Kit when there is no C wire.
O/B	Switch between heating and cooling on heating pump system.

Wiring Examples


1. Furnace + Air Conditioner

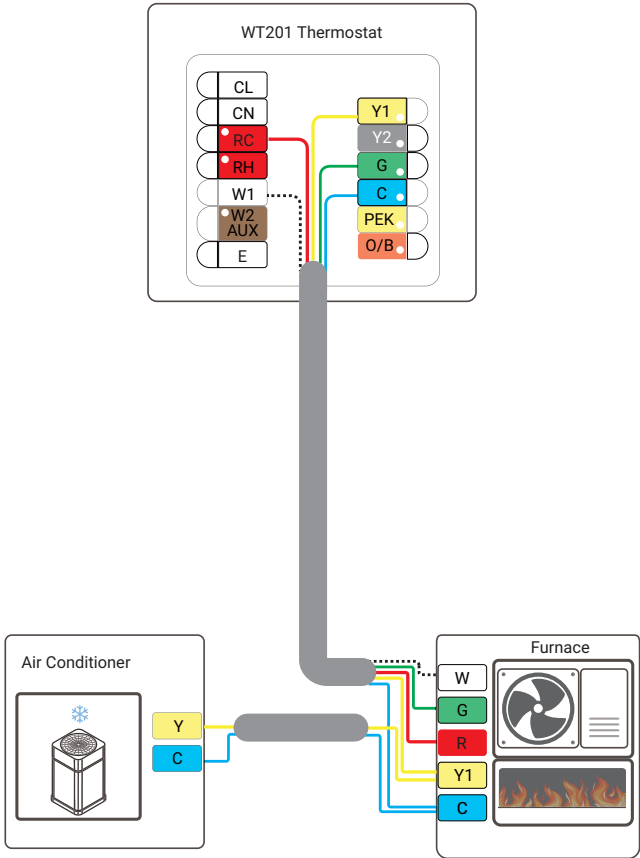


If there is no C wire, it is necessary to add a Power Extension Kit.

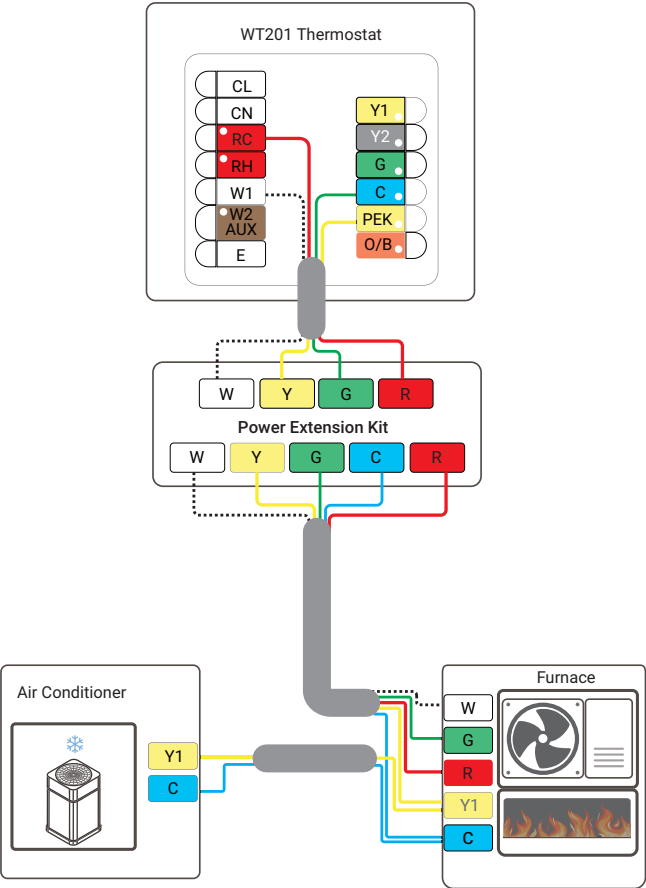


2. Furnace (2 stage) + Air Conditioner (2 stage)

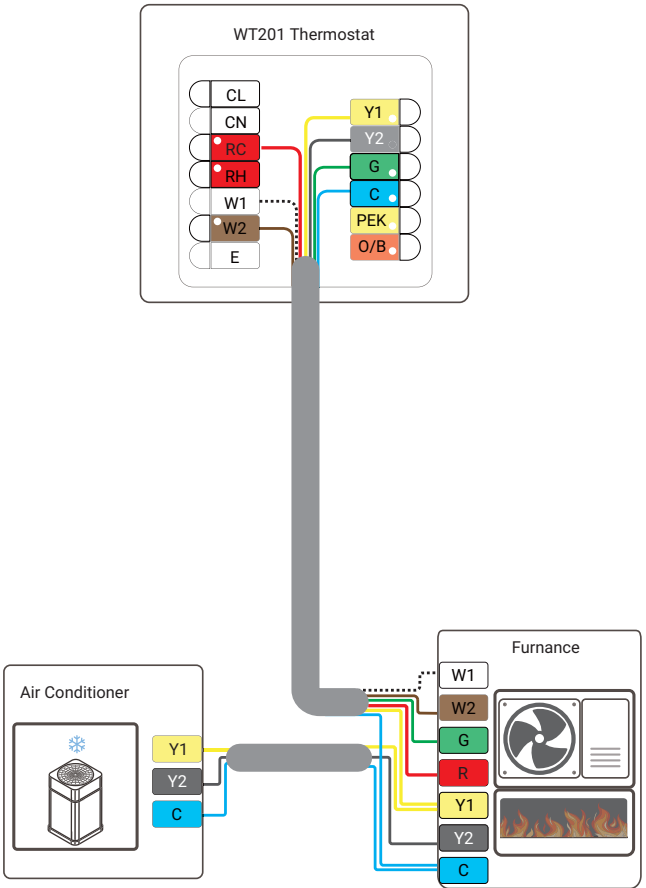


If there is no C wire, it is necessary to add a Power Extension Kit.

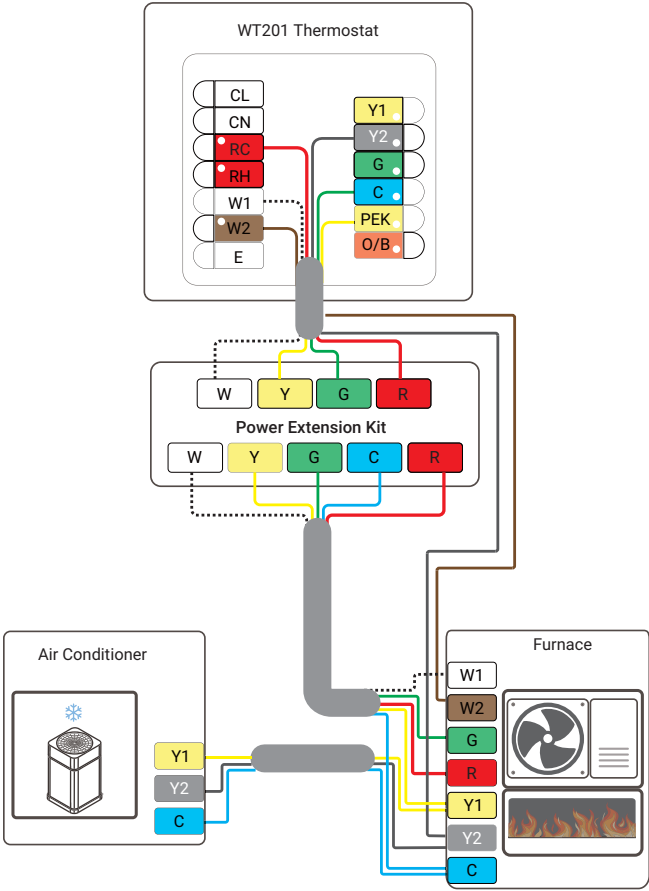


3. Heat Pump with auxiliary heat

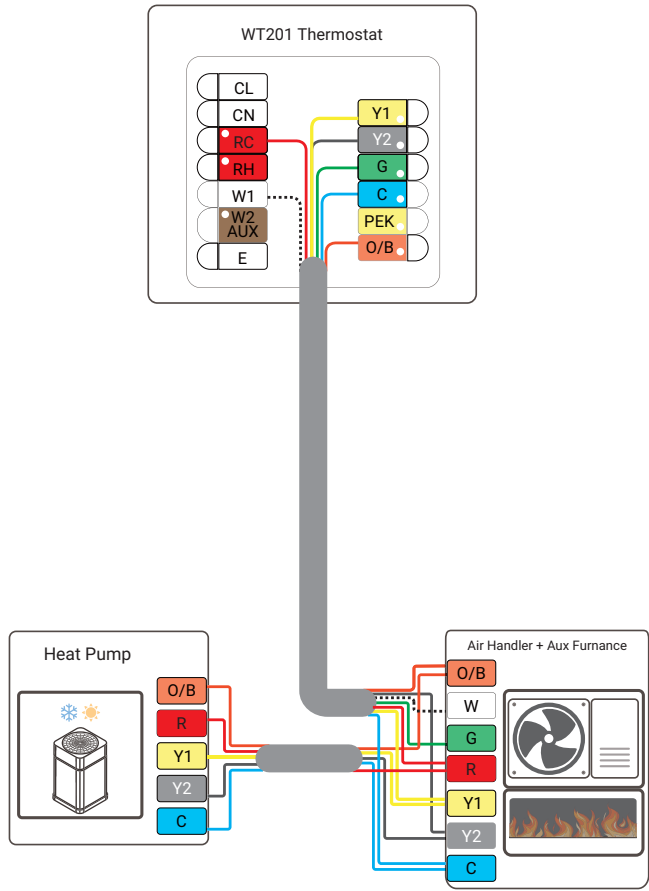


If there is no C wire, it is necessary to add a Power Extension Kit.

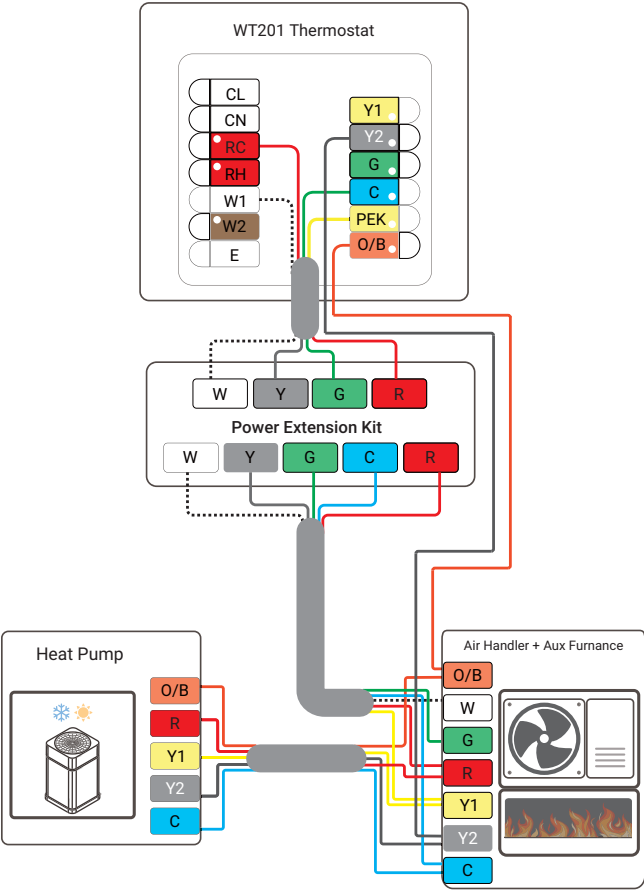

4. Boiler + Air Conditioner
Connect to W1 If there is only one W wire on boiler.

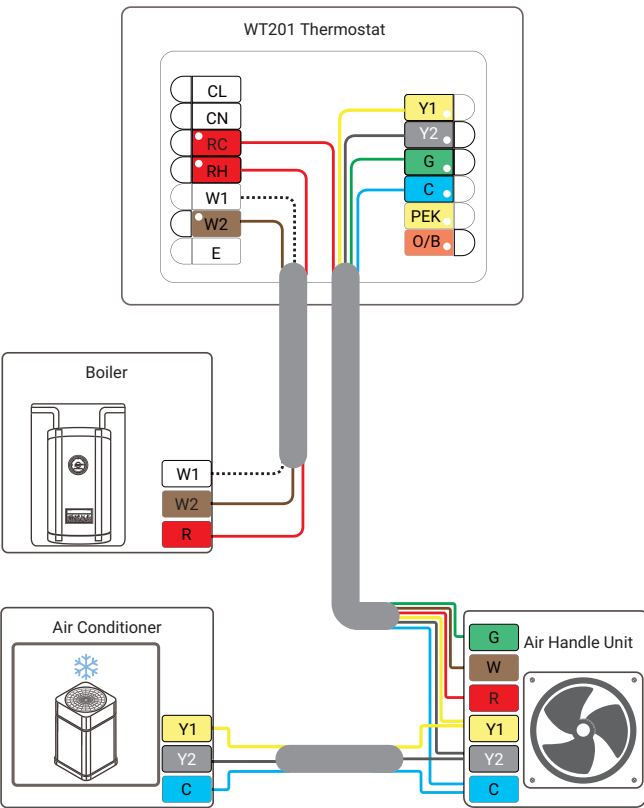

5. PTAC

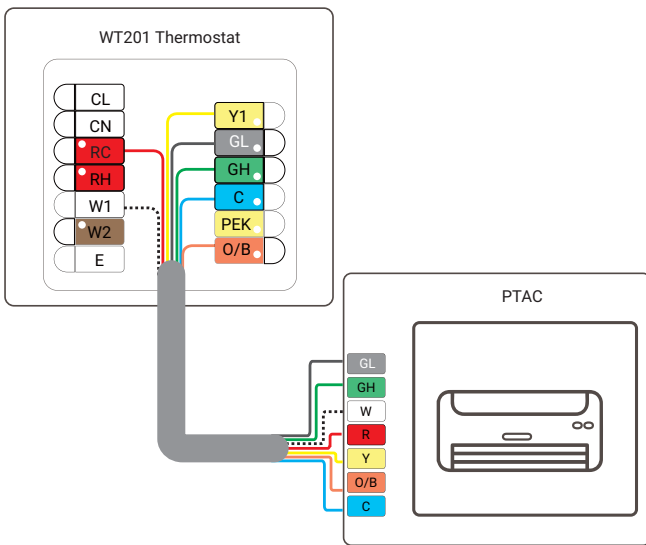


4. Installation

1. Ensure the circuit of all related systems are shut off before installation.
2. Remove old thermostat from the wall, check if the power supply is 24VAC with a 2A maximum current.


Note: do not power the WT201 thermostat with maximum current for long time, which will damage the device.

3. Disconnect the wires from old thermostat and label the wires with stickers. It is suggested to take a photo of the connected wires on the old thermostat for reference.

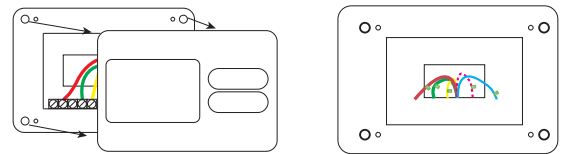


4. Remove the mounting plate of old thermostat. When removing, ensure the wires do not fall into the holes.
5. Press the wiring backplate to decorative cover plate to fix them together. Ignore this step if you are not using a decorative cover plate.


Note: It is suggested to use a decorative cover plate to cover the holes left on the wall by old thermostat, and to reduce the airflow from the hole that will affect temperature measurement.

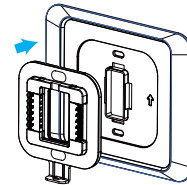


6. Pass the wires through the hole in the middle of the wiring backplate, then fix the wiring backplate (and decorative cover plate) to the wall using wall plugs and wall mounting screws.

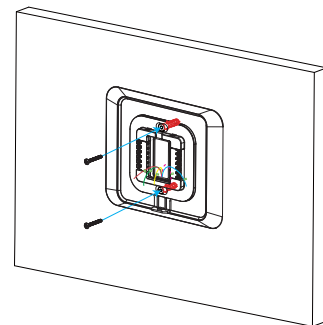

7. Hold down on the tabs to insert the wires into the holes of the corresponding terminals on the wiring backplate until they are firmly in place. Gently tug the wires to ensure they are securely connected. If you need to release the wires again, hold down the terminal tabs.
8. Push the remaining wires back into the hole on the wall.
9. Adjust the DIP switch on the WT201 thermostat. If there is only the RC wire connected, switch to Only RC; if both the RC and RH wires are connected, switch to RC & RH.

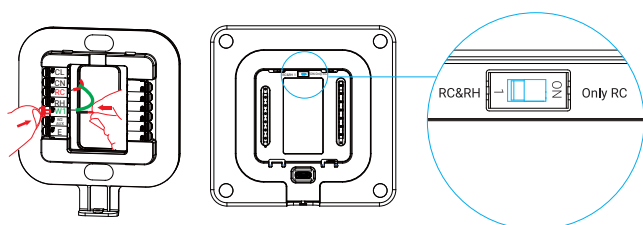

10. Push the WT201 thermostat into the wiring backplate gently and ensure both parts are securely fixed.
11. Turn on the systems to check if the WT201 thermostat is on. Configure the device and ensure it can function well.
12. Fix the bottom of device to the wiring backplate with the fixing screw.

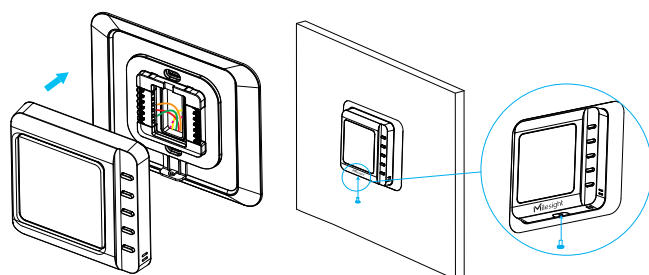

5. Configuration Guide

Method 1: Configured by NFC


1. Download "Milesight ToolBox" App on an NFC-supported smartphone.
2. Open "Milesight ToolBox" App and place the NFC area of the smartphone to the device. Click "NFC Read" to read/write the device until the app successfully shows a prompt. It's suggested to change the default password for security reasons. (Default password: 123456)



Android




iOS

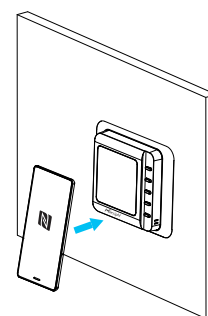

3. After configuration, press the buttons on the WT201 to test if it functions properly.

Method 2: Configured by USB

1. Download the ToolBox software from Milesight's official website.
2. Remove the WT201 device from the backplate, and connect it to a Windows computer via a type-C cable.

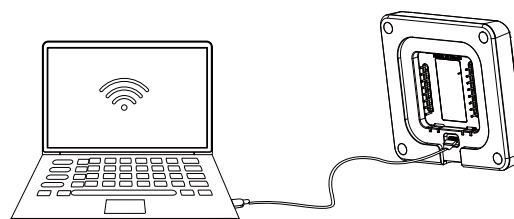

3. Open the ToolBox software, select type as "General" and the serial port as USB port, then type the login password (Default password: 123456) to login to the device. After logging in, check and configure the device. It's suggested to change the default password for security reasons.
4. After configuration, press the buttons on the WT201 to test if it functions properly.

6. FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and,
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Le rayonnement de la classe b respecte ISED fixaient un environnement non contrôlés. Installation et mise en œuvre de ce matériel devrait avec échangeur distance minimale entre 20 cm ton corps. Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d' autres.