

## Z1 LITE

MULTI-PLATFORM WIRELESS GAME CONTROLLER



## [E-Manual]

<https://www.leadjoy.top/pages/manuals-leadjoy-z1lite>


## PACKAGE CONTENTS

Controller \*1 1m Type-C Cable \*1 User Manual \*1  
Thank You & After-sale Service Card \*1 Certification \*1 Receiver \*1

## REQUIREMENT

• Switch • Windows 10 or above • Android 8.0 or above • iOS 13 or above

## DEVICE LAYOUT

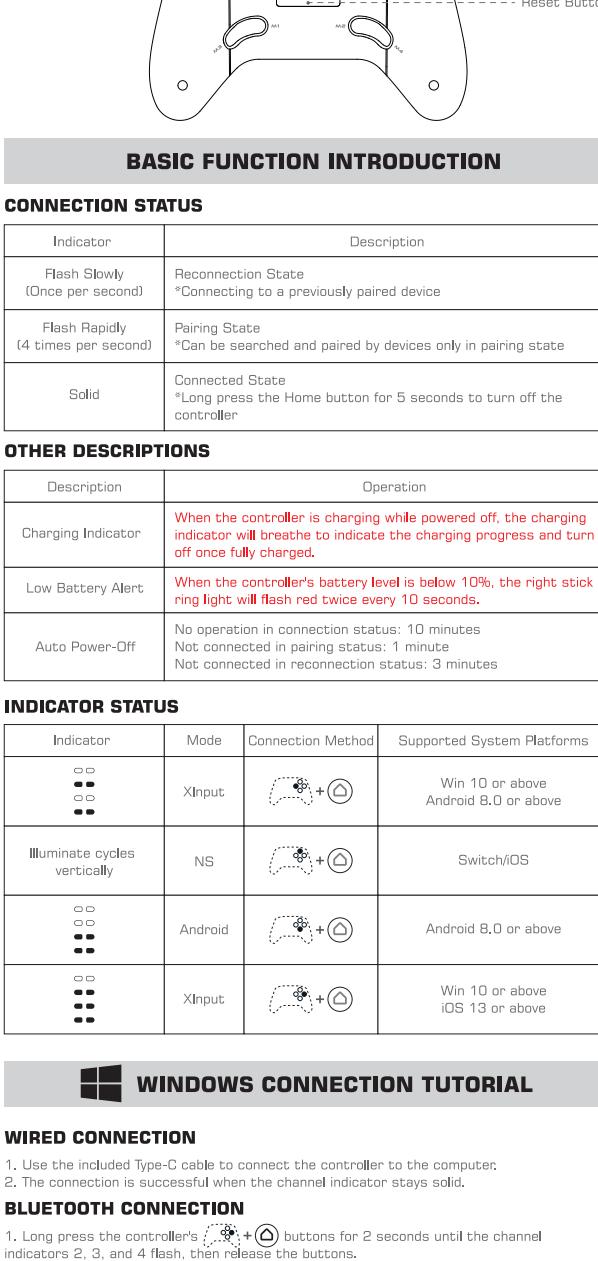

## BASIC FUNCTION INTRODUCTION

## CONNECTION STATUS

Indicator	Description
Flash Slowly (Once per second)	Reconnection State *Connecting to a previously paired device
Flash Rapidly (4 times per second)	Pairing State *Can be searched and paired by devices only in pairing state
Solid	Connected State *Long press the Home button for 5 seconds to turn off the controller

## OTHER DESCRIPTIONS

Description	Operation
Charging Indicator	When the controller is charging while powered off, the charging indicator will breathe to indicate the charging progress and turn off once fully charged.
Low Battery Alert	When the controller's battery level is below 10%, the right stick ring light will flash red twice every 10 seconds.
Auto Power-Off	No operation in connection status: 10 minutes Not connected in pairing status: 1 minute Not connected in reconnection status: 3 minutes

## INDICATOR STATUS

Indicator	Mode	Connection Method	Supported System Platforms
○○○○	XInput	+	Win 10 or above Android 8.0 or above
illuminate cycles vertically	NS	+	Switch/iOS
○○○○	Android	+	Android 8.0 or above
○○○○	XInput	+	Win 10 or above iOS 13 or above

## WINDOWS CONNECTION TUTORIAL

## WIRED CONNECTION

1. Use the included Type-C cable to connect the controller to the computer.

2. The connection is successful when the channel indicator stays solid.

## BLUETOOTH CONNECTION

1. Long press the controller's + buttons for 2 seconds until the channel indicators 2, 3, and 4 flash, then release the buttons.

2. Open the computer's Bluetooth list, find the device named "Xbox Wireless Controller", and click to connect.

3. The connection is successful when the Channel indicator stays solid.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

## SWITCH CONNECTION TUTORIAL

## BLUETOOTH CONNECTION

1. On the Switch main menu, go to Controllers - Change Grip/Order and wait on this screen.

2. Long press the controller's + buttons for 2 seconds until the Channel indicators start cycling up and down, then release the buttons and wait for the connection.

3. The connection is successful when the Channel indicator stays solid.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

## ANDROID CONNECTION TUTORIAL

## BLUETOOTH CONNECTION

1. Long press the controller's + buttons for 2 seconds until the Channel indicators 2, 3, and 4 flash, then release the button.

2. Open your phone's Bluetooth list, find the device named "Xbox Wireless Controller", and click to connect.

3. The connection is successful when the channel indicator stays solid.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

## iOS CONNECTION TUTORIAL

## BLUETOOTH CONNECTION

1. Long press the controller's + buttons for 2 seconds until the Channel indicators 2, 3, and 4 flash, then release the button.

2. Open your phone's Bluetooth list, find the device named "Xbox Wireless Controller", and click to connect.

3. The connection is successful when the channel indicator stays solid.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

## ADVANCED TUTORIAL

## BACK BUTTON SETTINGS

1. M1, M2, M3, and M4 have no default key value.

The Back Buttons can be mapped as single or multiple keys (up to 12).

Can be mapped to: A/B/X/Y/L/R/ZL/ZR/Capture Button

1. To set the key values for M1, M2, M3, or M4: Simultaneously press and hold the Capture Button and the M1, M2, M3, or M4 button until the right stick ring light starts flashing white slowly. Then, press the key you wish to map, followed by pressing the M1, M2, M3, or M4 button. When the left/right stick ring light returns to its original color, the key value setting for M1, M2, M3, or M4 is complete.

\* For combination keys, the interval time between each key press will be recorded based on the time taken during the mapping process.

2. To cancel the key values for M1, M2, M3, or M4: Simultaneously press and hold the Capture Button and the M1, M2, M3, or M4 button until the left/right stick ring light starts flashing white slowly, then press the M1, M2, M3, or M4 button. When the left/right stick ring light returns to its original color, the key value cancellation for M1, M2, M3, or M4 is complete.

\* If the setting process exceeds 10 seconds, it will automatically save and exit.

## TURBO SETTINGS

Speed: 20HZ

Assignable Buttons: A/B/X/Y/L/R/ZL/ZR/Capture Button

1. To set Turbo function: Press and hold the Capture Button, then press the key you want to set to enable the Turbo function. Repeat this operation to cancel the setting.

2. To clear the Turbo function for all keys: Double-click the Capture button.

\* The setting will still be saved after a restart.

## RECEIVER CONNECTION

1. Plug the receiver into the USB port of the device to be connected; the receiver indicator will flash.

2. Long press the controller's + buttons for 2 seconds until the Channel indicators 2 and 4 flash, then release the buttons and wait for the controller to connect to the receiver.

3. The connection is successful when the indicators on both the controller and the receiver stay solid.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

\* If the connection is unsuccessful, please press and hold the controller's Home + Capture buttons for 2 seconds to re-enter pairing mode.

## BACK BUTTON SETTINGS

Description

Hair Trigger  
Press Capture + LT/RT Buttons for 2 seconds

○ + /

Enable/disable hair trigger mode.

After the hair trigger mode is enabled, the indicator flashes when LT/R is pressed.

\* The setting will still be saved after a restart.

Vibration Intensity  
Capture Button + " + " / ○ + ○

Decrease/increase the vibration intensity of the grip motors, 5 levels: Level 1 - vibration off, Level 2 - 25% vibration, Level 3 - 50% vibration, Level 4 - 75% (default), Level 5 - 100% vibration.

\* The setting will still be saved after a restart.

Forcibly Change Mode  
Press and hold " + " and " - " buttons for 2 seconds

○ + ○

Only supported in receiver and wired modes.

By performing this operation, you can manually switch between XInput/NS/And DS4 modes, fixing the connection mode for use.

The next time you connect using the same method, the mode will remain as previously switched.

\* Long press the Home button for 10 seconds to power off. Upon restarting, the controller will restore the automatic platform recognition function.

Dead Zone  
Press and hold Capture + LS/R buttons for 2 seconds

○ + ○

Enable/Disable zero Dead Zone Mode for the Left/Right Stick.

\* The setting will still be saved after a restart.

Change Layout  
Press and hold " + " and " - " buttons for 2 seconds

○ + ○

The setting will still be saved after a restart.

Lighting Effect  
+ Left Stick/Left/Right D-pad + Capture Left/Right

○ + ○

There are 6 lighting effects in total.

\* Fantasy/lighting effect in Monochrome-Breathing.

\* Fantasy/lighting effect in Monochrome-Breathing.