


# SDRX-43-N77H User's Manual

Version 0.1

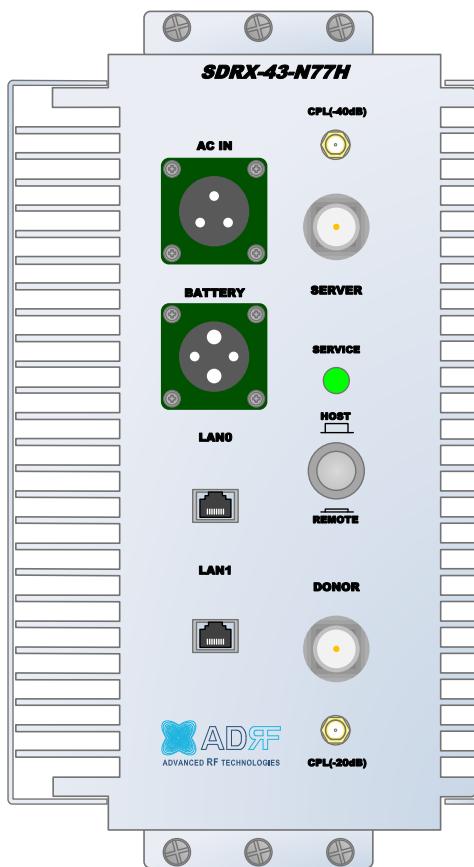

3116 West Vanowen St.  
Burbank, CA 91505  
Tel: 818-840-8131  
Fax: 818-840-8138

[www.adrftech.com](http://www.adrftech.com)



*Information in this document is subject to change without notice.  
Advanced RF Technologies, Inc. 1996-2017.  
All rights reserved.*

- Please send comments to:

E-Mail: [info@adrfttech.com](mailto:info@adrfttech.com)

Phone: (818) 840-8131

(800) 313-9345

Fax: (818) 840-8138

- Address:

Advanced RF Technologies, Inc.  
Attention: Technical Publications Department  
3116 Vanowen St.  
Burbank, CA 91505  
USA  
[www.adrfttech.com](http://www.adrfttech.com)

## REVISION HISTORY

Version	Author	Descriptions	Date
0.1	CCK	Initial Release	11/16/ 2023

## CHANGE LIST

Version	Change list	Contents

# Terms and Abbreviations

The following is a list of abbreviations and terms used throughout this document.

Abbreviation/Term	Definition
<b>ALC</b>	Automatic Level Control
<b>AROMS</b>	ADRF' Repeater Operation and Management System
<b>BDA</b>	Bi-Directional Amplifier
<b>BTS</b>	Base Transceiver Station
<b>CDMA</b>	Code Division Multiple Access
<b>CFR</b>	Crest Factor Reduction
<b>CP</b>	Cyclic Prefix
<b>CW</b>	Continuous Wave (un-modulated signal)
<b>DAS</b>	Distributed Antenna System
<b>DL</b>	Downlink
<b>HW</b>	Hardware
<b>LNA</b>	Low Noise Amplifier
<b>LTE</b>	Long Term Evolution
<b>MS</b>	Mobile Station
<b>OFDM</b>	Orthogonal Frequency-Division Multiplexing
<b>PSU</b>	Power Supply Unit
<b>QAM</b>	Quadrature Amplitude Modulation
<b>QPSK</b>	Quadrature Phase Shit Keying
<b>RB</b>	Resource Block
<b>RF</b>	Radio Frequency
<b>SQE</b>	Signal Quality Estimate
<b>SW</b>	Software
<b>eUE</b>	LTE User Equipment (LTE Mobile Station)
<b>UL</b>	Uplink
<b>VSWR</b>	Voltage Standing Wave Ratio

## 1. INTRODUCTION


The SDRX-43-N77H is an over-the-air high power repeater supports N77H band. (3.7 GHz)

### 1.1 Highlights

- Channel and bandwidth Selectable
- Digital filtering
- Digital Pre-Distortion(DPD) & Crest Factor Reduction (CFR)
- Remote monitoring and control capability using our Web-based GUI
- Configurable network setting in order to interface with 3rd party external modem boxes
- Supports SNMP v1, v2, v3 (get, set & traps)
- Web-GUI connectivity via DHCP (Dynamic Host Configuration Protocol)
- Supports DHCP; No 3<sup>rd</sup> party GUI software required.



## 1.2 Part List

Label	Quantity	Description
A	1	SDRX-43-N77H
B	1	Wall Mount Bracket
C	1	AC Power Cable
D	1	Ethernet Cable (Crossover)
E	4	M5 Bolt (Diameter: 5mm, Length: 10mm)

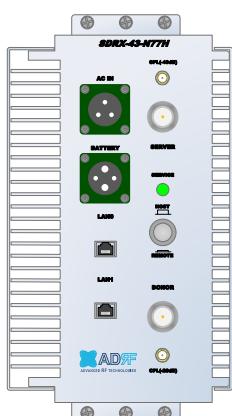

A

B

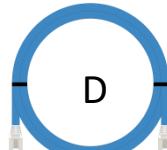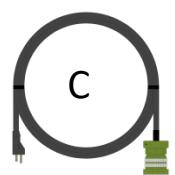

### 1.3 Warnings and Hazards




#### WARNING! ELECTRIC SHOCK

Opening the SDRX-43-N77H could result in electric shock and may cause severe injury.



#### WARNING! EXPOSURE TO RF

Working with the repeater while in operation, may expose the technician to RF electromagnetic fields that exceed FCC rules for human exposure. Visit the FCC website at [www.fcc.gov/oet/rfsafety](http://www.fcc.gov/oet/rfsafety) to learn more about the effects of exposure to RF electromagnetic fields.

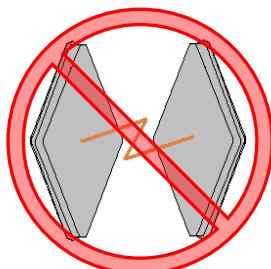

#### WARNING! DAMAGE TO REPEATER

Operating the SDRX-43-N77H with antennas in very close proximity facing each other could lead to severe damage to the repeater.

#### RF EXPOSURE & ANTENNA PLACEMENT Guidelines

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of **540cm** between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas require larger separation distances. **(Max. antenna gain: DL 20.7 dBi, UL 19.4 dBi)**

## WARRANTY

Opening or tampering the SDRX-43-N77H will void all warranties.

Lithium Battery: CAUTION. RISK OF EXPLOSION IF BATTERY IS REPLACED BY INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS.

Ethernet Instructions: This equipment is for indoor use only. All cabling should be limited to inside the building.

## FCC Part 15 Class A

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

## FCC Part 20

WARNING. THIS is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST have an FCC LICENSE or express consent of an FCC Licensee to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

## CAUTION

Double Pole/Neutral Fusing.

## CAUTION

**Circuit Breaker Installation in the Box for Overcurrent Protection**  
Must install the circuit breaker between the system and main AC source for separation.  
Make sure to install the circuit breaker on the place to operate easily.  
Circuit breaker is able to operate up to 20A.

**Use of unauthorized antennas, cables, and/or coupling devices not conforming with  
ERP/EIRP and/or indoor-only restrictions is prohibited.**

**Home/ personal use are prohibited**

**Only 50 ohm rated antennas, cables and passive equipment shall be used with this remote. Any  
equipment attached to this device not meeting this standard may cause degradation and  
unwanted signals in the bi-directional system. All components connected to this device must  
operate in the frequency range of this device.**

## ◆ FCC LABEL WARNING◆

### **WARNING.**

**This is NOT a CONSUMER device. It is designed for installation  
by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST  
have an FCC LICENSE or express consent of an FCC Licensee  
to operate this device. Unauthorized use may result in significant  
forfeiture penalties, including penalties in excess of \$100,000 for  
each continuing violation.**

## ◆ ISED LABEL WARNING◆

**WARNING: This is NOT a CONSUMER device. It is designed for installation by an installer approved by an ISED licensee. You MUST have an ISED LICENCE or the express consent of an ISED licensee to operate this device.**

**AVERTISSEMENT :** Les enrichisseurs de zone industriels ne sont PAS des appareils de CONSOMMATION. Ils sont conçus pour être installés par des titulaires de licence d'ISDE et des installateurs qualifiés qui ont reçu une formation reconnue en RF. Vous DEVEZ être le titulaire de licence d'ISDE ou avoir le consentement exprès du titulaire de licence d'ISDE pour installer ou exploiter cet appareil.

### RSS-GEN (6.8 Transmit antenna)

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Confonctionner avec une antenne d'un type et d'un gain maximal approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotropique rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

### RF Radiation Exposure

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of **540 cm** between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas require larger separation distances.  
**(Max. antenna gain: DL 20.7 dBi, UL 19.4 dBi)**

L'antenne (ou les antennes) doit être installée de façon à maintenir à tout instant une distance minimum de au moins **540 cm** entre la source de radiation (l'antenne) et toute personne physique. Cet appareil ne doit pas être installé ou utilisé en conjonction avec une autre antenne ou émetteur.

**(Max. antenna gain: DL 20.7 dBi, UL 19.4 dBi)**

### WARNING! Hot surface



## 2. OVERVIEW

### 2.1 LED

The SDRX-43-N77H has an LED in the Lower left corner as shown in figure below.



**Figure 2-1** LED

**Table 2-1** RF Module LED Specifications

LED Indicator		Specifications
Service	Green	System is Normal
	Orange	Soft Fail
	Red	Hard Fail

### 2.2 Host/Remote Switch



**Figure 2-2** Host/Remote Switch

The Host/Remote Switch allows the user to switch the default Repeater IP, Subnet Mask, and Gateway of the LOCAL port of the repeater to an alternative setup.

Once the settings are set, Push the switch to the REMOTE position will reboot the repeater with the new alternate settings. *Please note that when the repeater is set to the REMOTE position, DHCP is disabled and the repeater will not automatically assign an IP address to any device that connects directly to the repeater.*

- Host IP: 192.168.63.1 (Fixed IP, unable to modify this IP address)
- Remote IP: 192.168.63.5 (Default IP, but can be modified in Host mode)

## 2.3 Ethernet Port



Figure 2-3 Ethernet Port

- **LAN0** – The Local port can be used to communicate directly with the SDRX-43-N77H using a RJ-45 crossover cable or can also be used to connect the SDRX-43-N77H to an external modem box or the optional internal Digi Transport WR-21.
- **LAN0 and LAN1** support cascade communication for modem and Web-GUI


### 2.3.1 AC Power



Figure 2-3 AC Input Port

The SDRX-43-N77H PSU can operate at 110V AC to 240V AC. The user should verify that the AC input voltage is the correct voltage before powering on the SDRX-43-N77H.

### 2.3.2 Back Up Battery Port

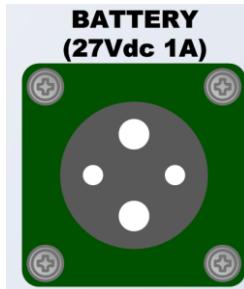

**Figure 2-4 Battery Backup Port**

The SDRX-43-N77H can be connected to an ADRF-BBU <sup>1</sup>(ADRF Battery Backup) to provide power during a power failure. If an ADRF-BBU is utilized, connect the ADRF-BBU to the SDRX-43-N77H via the external battery port.


***(WARNING: The circuit switch on the ADRF-BBU must be set to OFF before connecting the ADRF-BBU to the SDRX-43-N77H to prevent damage to the repeater or the ADRF-BBU and personal injury.)***

Note: Please contact ADRF Technical Support for assistance if you are unfamiliar with the installation procedure of our battery box.

---

<sup>1</sup> ADRF-BBU means the ADRF Battery backup Unit including ADRF-BBL-X-24, ADRF-BBL-U-24, ADRF-BBS-X-24, ADRF-BBS-U-24.

## 2.4 RF Ports

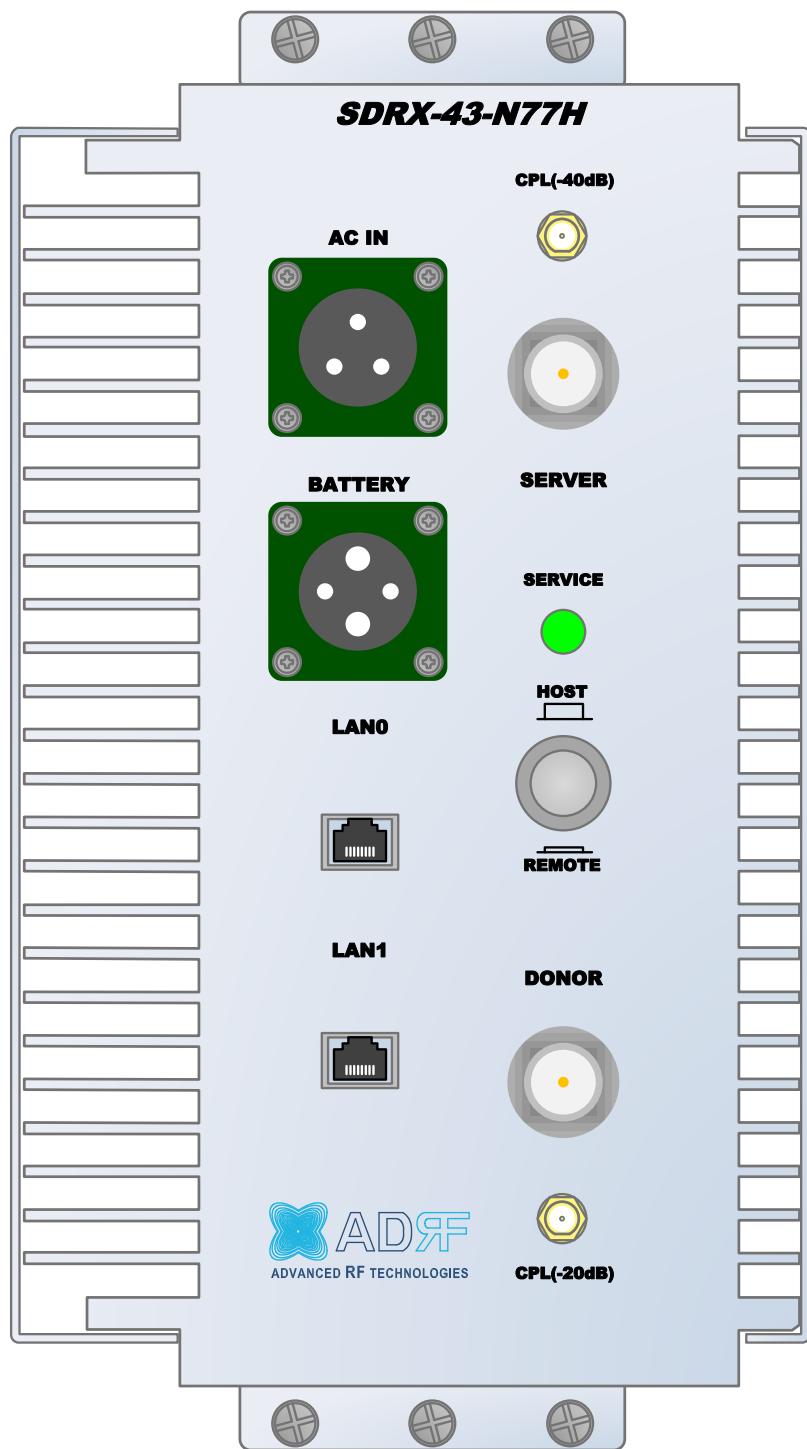

**Figure 2-5 RF port**

- **DONOR** – 4.3-10 female which is used to connect the donor antenna
- **DONOR\_CPL (20dB)** – SMA female 20 dB coupling port which is used to Modem
- **SERVER\_CPL (40dB)** – SMA female 40 dB coupling port which is used to monitor the amplified DL signal
- **SERVER** – 4.3-10 female which is used to connect the server antenna

### 3. ALARMS

#### 3.1 Message Board Alarms and Notification

**Table 3-1 Message Board Alarms and Notification**

Parameters	Remark
AC Fail	Power supply is not operating within specs
DC Fail	Power supply is not operating within specs
Fan[1/2] Fail	System has detected an issue with the fan1 and fan2
Temperature	Module is above the normal operating temperature
Current	Power supply is not operating within normal range
System Halt	System is in a shutdown state due to a hard fail alarm
DSP Fault	System has detected an issue with the internal DSP chip
DL Signal not detected	DL signal is below the specified level
DL Signal Low	DL signal is below the specified level
Input Overload	Incoming in-band DL or UL signal is too strong
Out of band Overload	Incoming out-band DL or UL signal is too strong
DL RF Power	Input + gain does not match the output level (above delta of 6 dB)
Overpower	Output level is above the max output levels
VSWR	Power is being reflected back to the repeater
Heartbeat	Heartbeat
Reboot	Reboot
Factory setting	Factory setting
Sync Fail	Sync Signal Not Detect, Sync Fail

## 4. INSTALLATION

### 4.1 Installation Procedures

#### 4.1.1 Wall Mount Procedure

- Verify that the SDRX-43-N77H and mounting hole are in good condition
- Verify that the accessories (anchor bolts, mount bracket and template) required for installation are properly enclosed.
- Place the SDRX-43-N77H mounting template up against the wall and mark of mount holes
- Mount the SDRX-43-N77H to wall use the six (6) mounting hole on the wall mount bracket
- Connect the GND cable
- Connect the Antenna cable
- Connect the Power cable


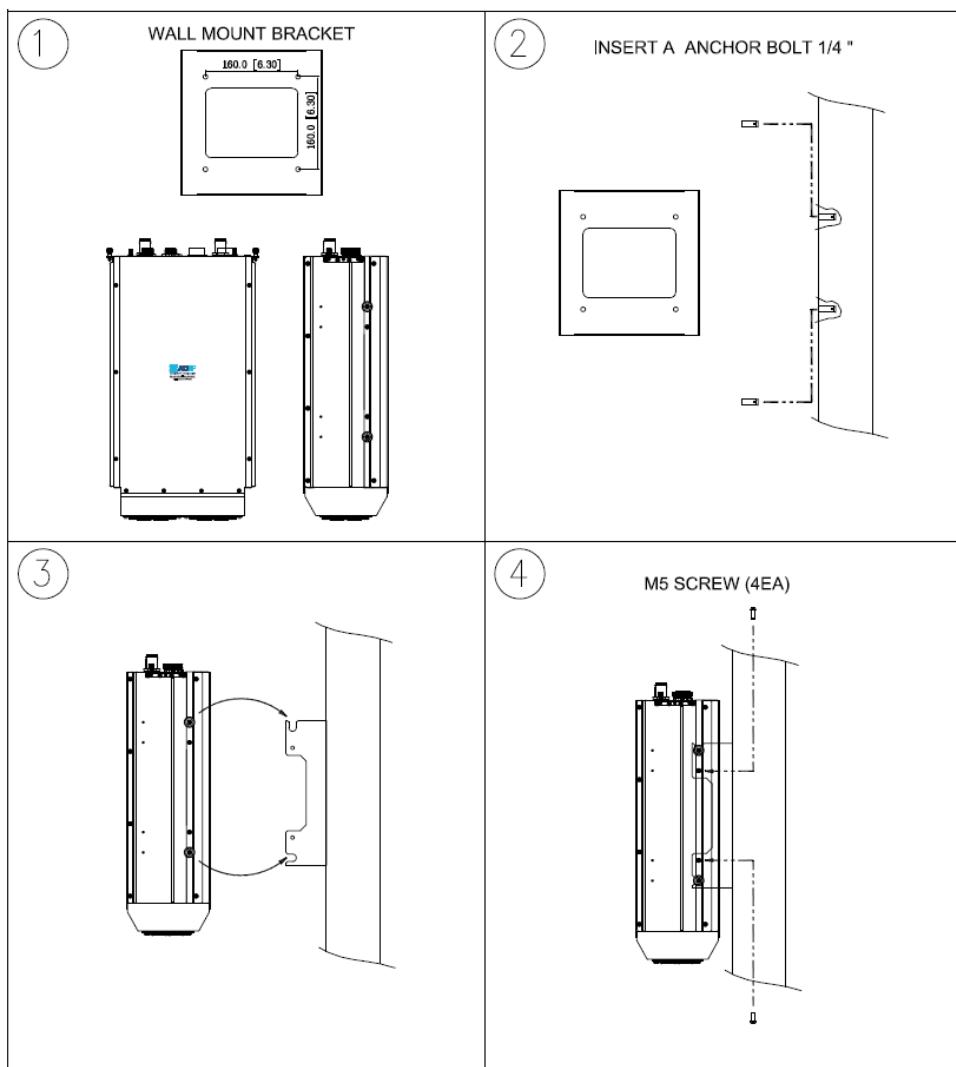


Figure 4-1 Wall Mount

#### 4.1.2 Rack Mount Procedure

- Mount the SDRX-43-N77H into the Rack(ADRF's SDR-ICS-CHA: 482 x 430 x 266.5 mm W x D x H)
- Connect the GND cable

- Connect the Antenna cable
- Connect the Power cable

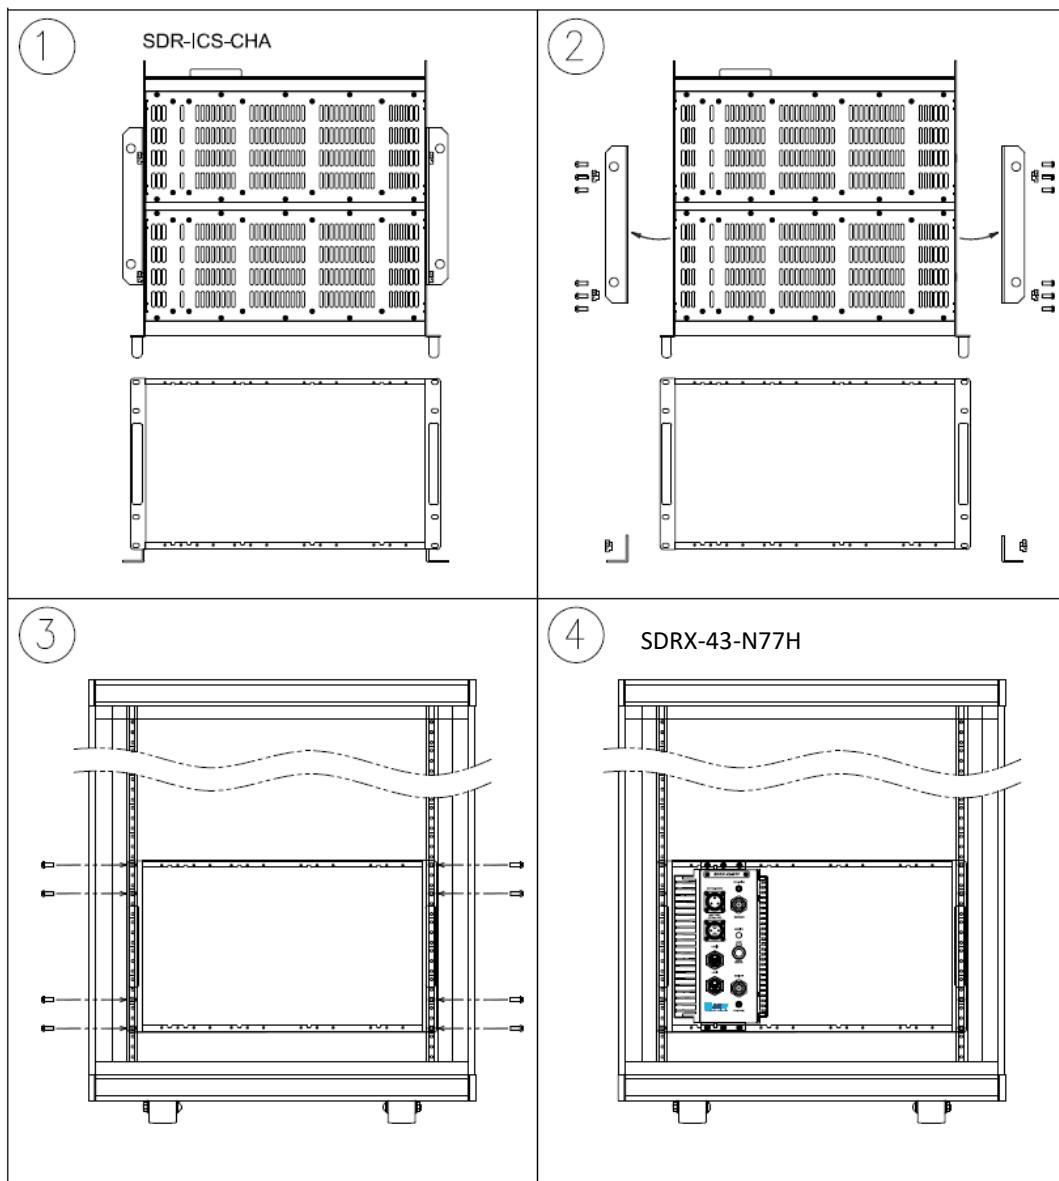

**Figure 4-2    Rack Mount**

#### 4.2    Grounding

- Install the ground cable that is included in the package at the side of the repeater as show in the figure below.
- The grounding terminal is located at lower right-hand side of the BDA. The grounding cable should be properly connected before powering on the equipment.



**Figure 4-3** **Ground Cable Connection**


- Ground terminals located on the side consisted of a 16mm<sup>2</sup>(6AWG) and should be permanently connected to earth (Protective earthing conductor).

"Units are intended for installation within Restricted Access Locations by qualified ADRF technicians. Lug terminal (Grounding terminal) Installation shall be in accordance with the National Electrical Code, ANSI/NFPA 70 and/or all applicable national and local codes."

**"All installation is conducted by trained and qualified technicians in accordance with local regulations."**

### 4.3 Antenna Separation/Isolation

Separation between the antennas is necessary to prevent oscillation. Oscillation occurs when the signal entering the system continually reenters, due to the lack of separation between the donor and server antennas. In other words, the signal is being fed back into the system. This creates a constant amplification of the same signal. As a result, the noise level rises above the signal level.

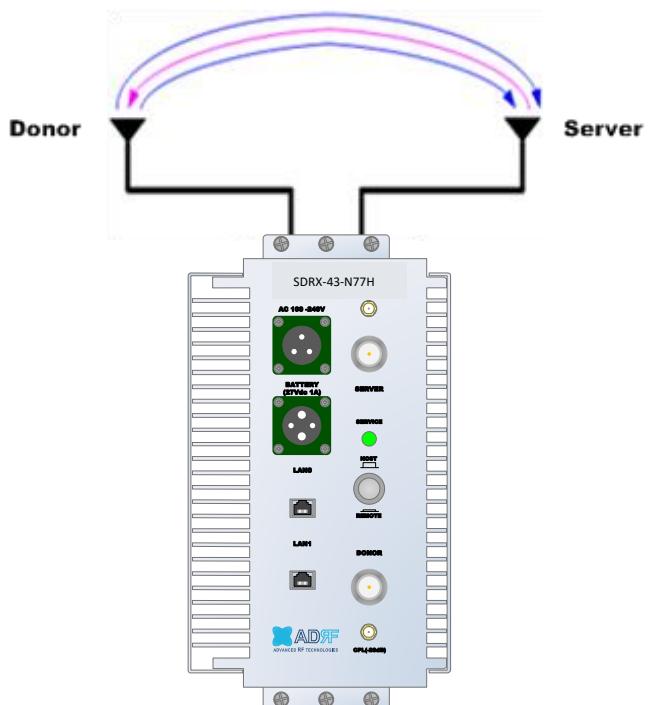

**Figure 4-4 RF Repeater Oscillation**

To prevent feedback, the donor and server antennas must be separated by an appropriate distance to provide sufficient isolation. Isolation is attained by separating antennas a sufficient distance so that the output of one antenna does not reach the input of the other. This distance is dependent on the gain of the repeater.


The recommended isolation value is 20dB greater than the maximum gain of the repeater. For example, if the gain of the repeater is 50 dB, then an isolation of 70dB or greater is required. In the same manner, because the SDRX-43-N77H has a maximum gain of 95dB in case of SDRX-43-N77H, it requires isolation of at least 115dB.

#### 4.4 Antennal Installation Location

##### 4.4.1 Donor Antenna Installation Location

The donor antenna which points towards the BTS typically has a narrow beam antenna pattern. As a result, a slight deviation away from the direction of the BTS can lead to less than optimum results. In addition, obstacles between the repeater and the BTS may impair the repeater from obtaining any BTS signal. As a result, the repeater cannot transmit signal to the coverage area. Therefore, a direct line of sight to the BTS for the donor antenna is vital to the function of a repeater. For the same reason, placing the server antenna in direct line of sight of the coverage area is also necessary.

- Outdoor
- Building roof

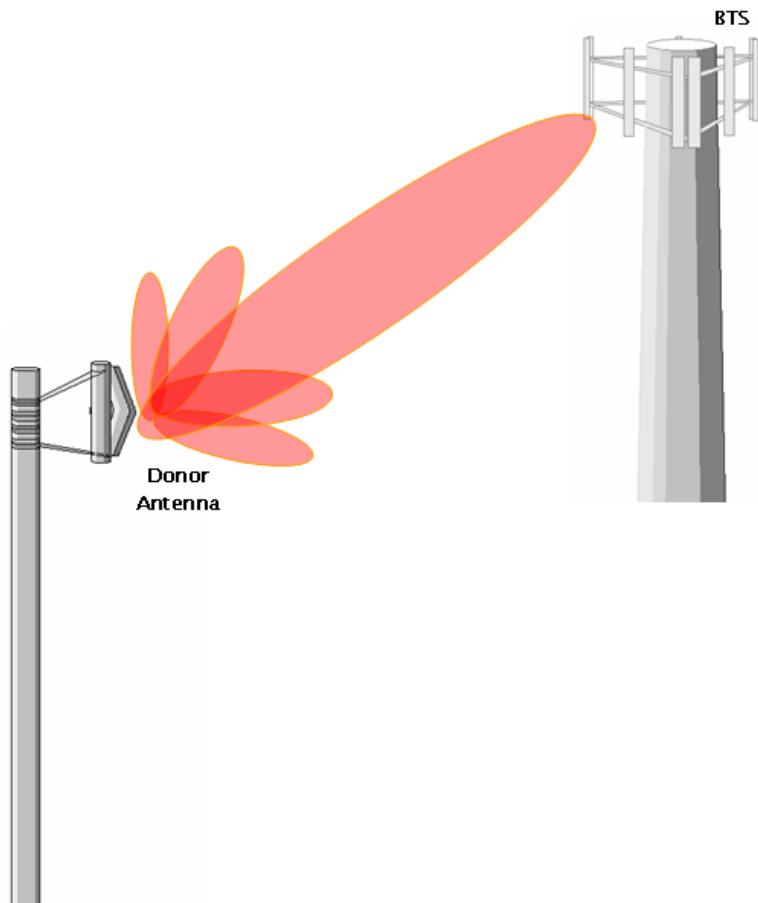

**Figure 4-5 Line of Sight to the BTS (Donor Antenna)**

#### 4.4.2 Sever Antenna Installation Location


- Shopping mall
- Airport

### 5. WEB-GUI SETUP

The Web-GUI allows the user to communicate with the repeater either locally or remotely. To connect to the repeater locally, you will need a laptop with an Ethernet port and a RJ-45 crossover cable. To connect to the repeater remotely, you will need to have an active internet connection and the repeater must have either an external modem box connected to the repeater.

#### 5.1 Repeater/PC Connection Using Web-GUI

- Verify that your Local Area Connection is set to Obtain an IP address automatically under the Internet Protocol (TCP/IP) properties
- If you are connecting to the unit remotely (use of a modem), then skip steps above.
  - Connect the RJ-45 crossover cable between the laptop's Ethernet port and the repeater's Ethernet port
  - Launch an Internet Browser
  - Type the following IP address into the address bar of Microsoft Internet Explorer: <http://192.168.63.1>
- If you are connecting to the unit remotely, then type the IP address of the modem to connect to the unit
  - The following login screen will appear:

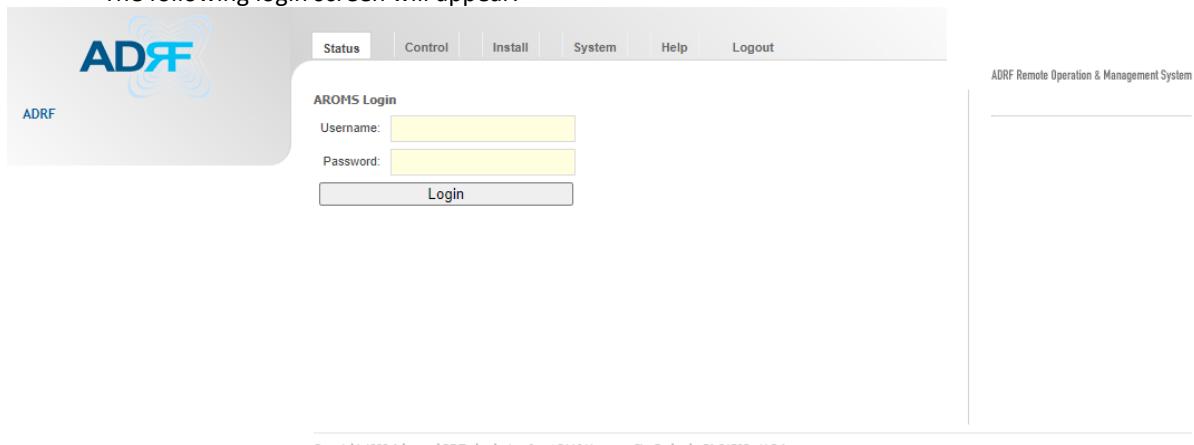


**Figure 5-1 Login page**

If you are not the Administrator, please type in your assigned username & password which you should have received from the Administrator.

The default username and password for the General User is **adrft** & **adrft**, respectively.  
The default Administrator login is **admin** & **admin**, respectively.

## 5.2 Status Tab

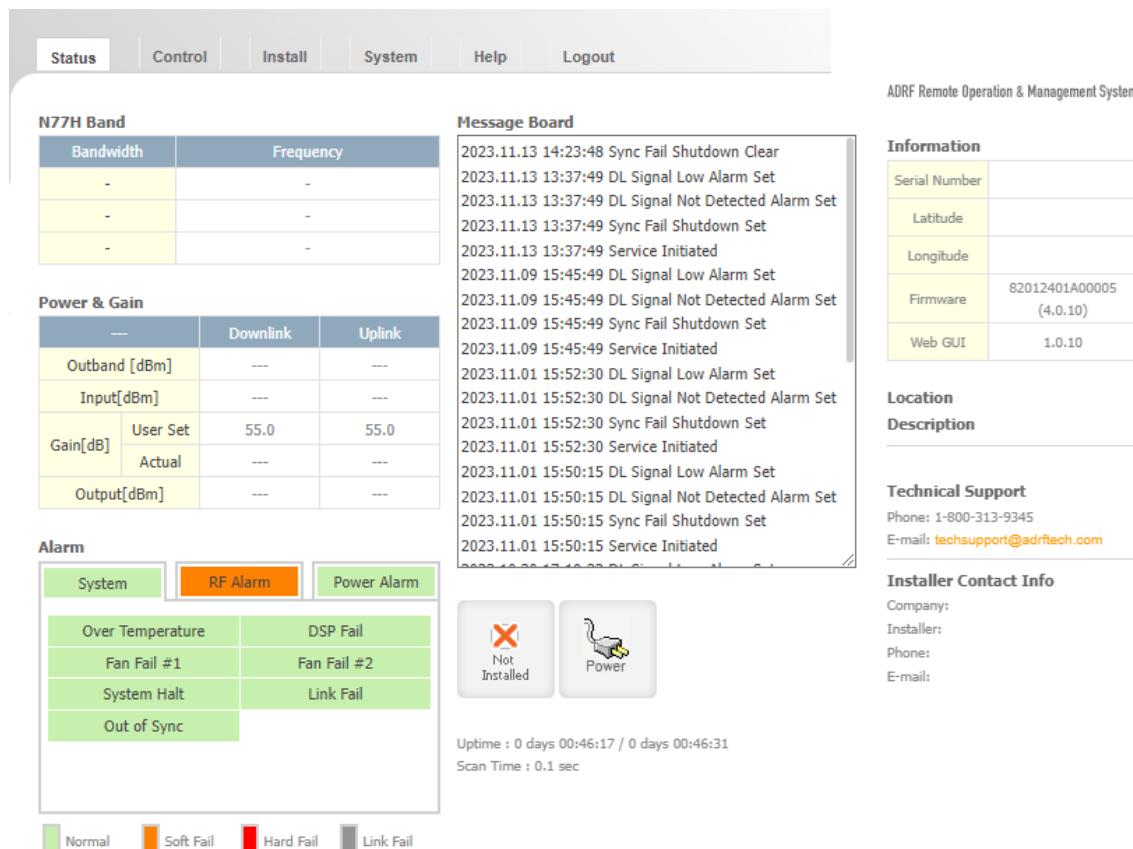

**Message Board**

- 2023.11.13 14:23:48 Sync Fail Shutdown Clear
- 2023.11.13 13:37:49 DL Signal Low Alarm Set
- 2023.11.13 13:37:49 DL Signal Not Detected Alarm Set
- 2023.11.13 13:37:49 Sync Fail Shutdown Set
- 2023.11.13 13:37:49 Service Initiated
- 2023.11.09 15:45:49 DL Signal Low Alarm Set
- 2023.11.09 15:45:49 DL Signal Not Detected Alarm Set
- 2023.11.09 15:45:49 Sync Fail Shutdown Set
- 2023.11.09 15:45:49 Service Initiated
- 2023.11.01 15:52:30 DL Signal Low Alarm Set
- 2023.11.01 15:52:30 DL Signal Not Detected Alarm Set
- 2023.11.01 15:52:30 Sync Fail Shutdown Set
- 2023.11.01 15:52:30 Service Initiated
- 2023.11.01 15:50:15 DL Signal Low Alarm Set
- 2023.11.01 15:50:15 DL Signal Not Detected Alarm Set
- 2023.11.01 15:50:15 Sync Fail Shutdown Set
- 2023.11.01 15:50:15 Service Initiated

**Information**

Serial Number	
Latitude	
Longitude	
Firmware	82012401A00005 (4.0.10)
Web GUI	1.0.10

**Location**

**Description**

**Technical Support**

Phone: 1-800-313-9345  
E-mail: [techsupport@adrftech.com](mailto:techsupport@adrftech.com)

**Installer Contact Info**

Company:  
Installer:  
Phone:  
E-mail:

Uptime : 0 days 00:46:17 / 0 days 00:46:31  
Scan Time : 0.1 sec

**Alarm**

System	RF Alarm	Power Alarm
Over Temperature	DSP Fail	
Fan Fail #1	Fan Fail #2	
System Halt	Link Fail	
Out of Sync		

**Legend:**  
Normal (green), Soft Fail (orange), Hard Fail (red), Link Fail (grey)

**Figure 5-2 Status Tab**

### 5.2.1 Band

**N77H Band**

Bandwidth	Frequency
100.00	3750.000 MHz

**Figure 5-3 Band Display**

### 5.2.2 Power & Gain

This section displays the Input, Gain, and Output for both downlink and uplink.

**Power & Gain**

---	Downlink	Uplink
Outband [dBm]	---	---
Input[dBm]	---	---
	User Set	55.0
Gain[dB]	Actual	55.0
Output[dBm]	---	---

**Figure 5-4 Power & Gain Display**

- Outband [dBm] – Displays the out-band composite power.
- Input [dBm] – Displays the in-band Downlink/Uplink signal level. The system will display “---” when the input level is < -90 dBm.
- Gain [dB]
- User Set: Displays the amount of gain that user set.

- ALC: Displays the amount of gain that is attenuated by ALC function.
- Actual: Displays the actual amount of gain that is currently in use.
  - Output [dB] – Displays the Downlink/Uplink output power levels.
  -

### 5.2.3 Alarm

This section displays the alarm status for System alarms, RF Alarms, and Power alarms. If an alarm is present in the system, then the color of the alarm tab will change according to the type of failure.

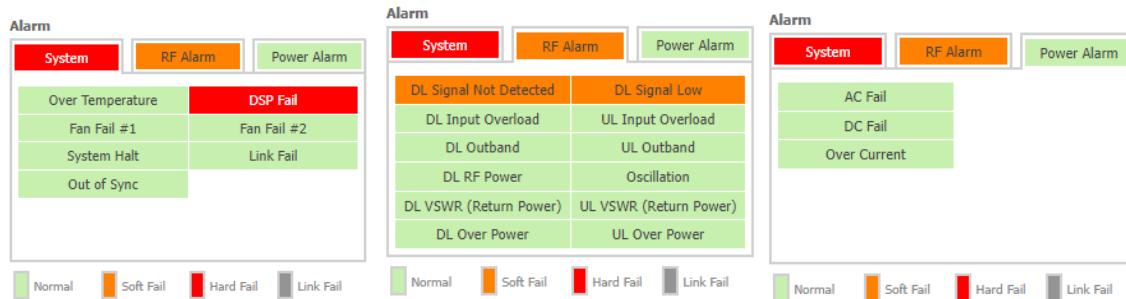


Figure 5-5 Alarm Display

### 5.2.4 Message Board

Displays the 30 most recent events.

Message Board	
2023.11.13 16:28:46	DSP Fail Alarm Set
2023.11.13 16:27:50	DL Signal Low Alarm Set
2023.11.13 16:27:50	DL Signal Not Detected Alarm Set
2023.11.13 16:27:50	Service Initiated
2023.11.13 16:16:57	DSP Fail Alarm Set
2023.11.13 16:16:04	DL Signal Low Alarm Set
2023.11.13 16:16:04	DL Signal Not Detected Alarm Set
2023.11.13 16:16:04	Service Initiated
2023.11.13 16:15:41	Reboot executed
2023.11.13 14:24:53	DSP Fail Alarm Set
2023.11.13 14:23:48	Sync Fail Shutdown Clear
2023.11.13 13:37:49	DL Signal Low Alarm Set
2023.11.13 13:37:49	DL Signal Not Detected Alarm Set
2023.11.13 13:37:49	Sync Fail Shutdown Set
2023.11.13 13:37:49	Service Initiated
2023.11.09 15:45:49	DL Signal Low Alarm Set
2023.11.09 15:45:49	DL Signal Not Detected Alarm Set

Figure 5-6 Message Board

- **Log File:** Downloads the system Log File (events and alarms) to your computer

### 5.2.5 Install and Power Status

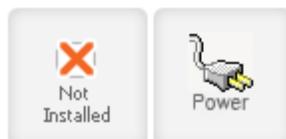


Figure 5-7 Install and Power Status

- **Installation:** Displays whether or not the installation routine has been run (Not Installed or Installed)
- **Power:** Displays the power source that is currently being used

•

### 5.2.6 Repeater Info / Repeater Location / Technical Support / Installer Contact Info

Information	
Serial Number	
Latitude	
Longitude	
Firmware	82012401A00005 (4.0.10)
Web GUI	1.0.10

Location
<u>Description</u>

Technical Support
Phone: 1-800-313-9345
E-mail: <a href="mailto:techsupport@adrftech.com">techsupport@adrftech.com</a>


Installer Contact Info
Company:
Installer:
Phone:
E-mail:

**Figure 5-8 Repeater Info / Repeater Location / Technical Support / Installer Contact Info**

- **Repeater Info:** Displays the serial number, latitude, longitude, firmware version, Web-GUI version
- **Repeater Location:** Displays the address where the repeater is installed
- **Technical Support:** Displays ADRF's Technical Support contact information
- **Installer Contact Info:** Displays the installer's name, phone and e-mail address

*Note: Once successfully logged in, the repeater model name and the site/cascade ID will be displayed on the top of all the windows (except for the Main Window).*

### 5.3 Control Tab

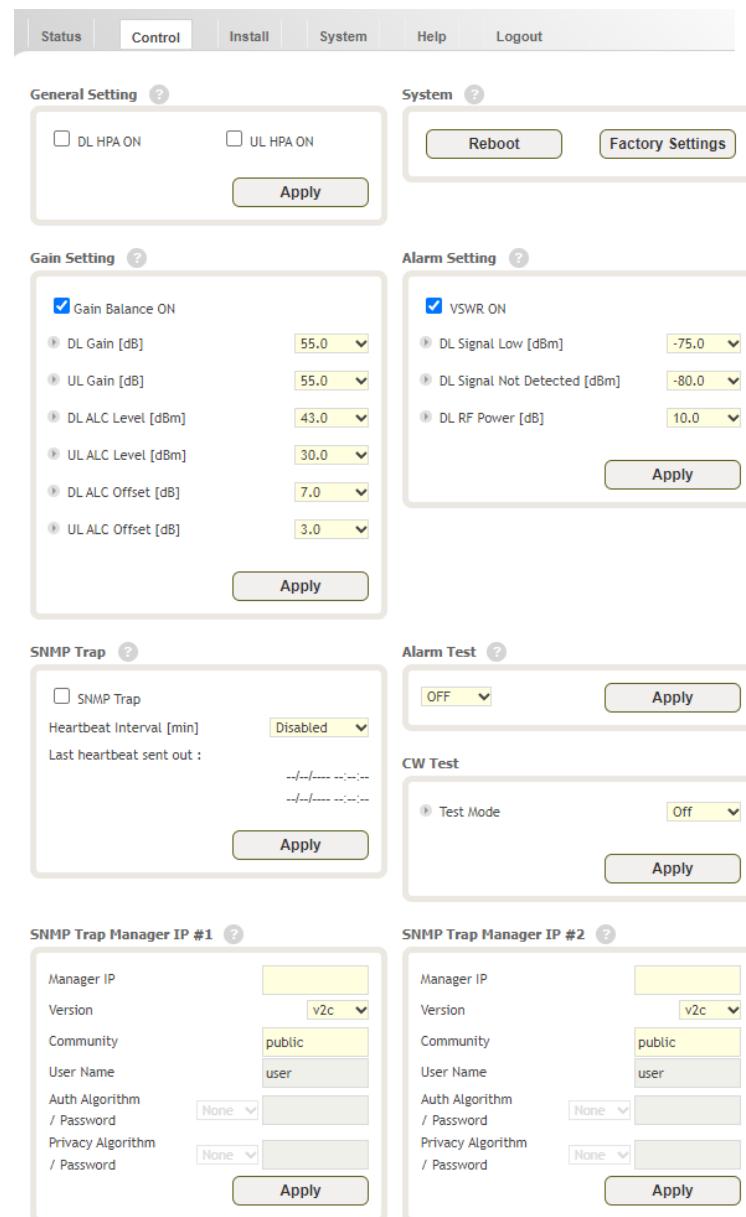


The Control page is a web-based interface for managing a radio device. It features a navigation bar at the top with links for Status, Control, Install, System, Help, and Logout. The main content area is divided into several sections:

- General Setting**: Contains checkboxes for DL HPA ON and UL HPA ON, with an **Apply** button.
- System**: Contains buttons for **Reboot** and **Factory Settings**.
- Gain Setting**: Contains a checkbox for Gain Balance ON and several dropdowns for DL and UL Gain, ALC Level, and ALC Offset, with an **Apply** button.
- Alarm Setting**: Contains a checkbox for VSWR ON and dropdowns for DL Signal Low [dBm], DL Signal Not Detected [dBm], and DL RF Power [dB], with an **Apply** button.
- SNMP Trap**: Contains a checkbox for SNMP Trap, a dropdown for Heartbeat Interval [min] (set to Disabled), and a text field for Last heartbeat sent out, with an **Apply** button.
- Alarm Test**: Contains a dropdown for Alarm Test (set to OFF) and an **Apply** button.
- CW Test**: Contains a dropdown for CW Test (set to Off) and an **Apply** button.
- SNMP Trap Manager IP #1**: Contains fields for Manager IP, Version (set to v2c), Community (set to public), User Name (set to user), Auth Algorithm (set to None), and Privacy Algorithm (set to None), with an **Apply** button.
- SNMP Trap Manager IP #2**: Contains fields for Manager IP, Version (set to v2c), Community (set to public), User Name (set to user), Auth Algorithm (set to None), and Privacy Algorithm (set to None), with an **Apply** button.

**Figure 5-9 Control page**

#### 5.3.1 General Setting

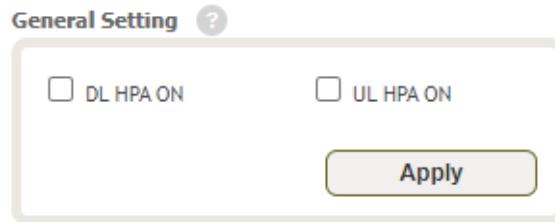


The General Setting section is a simplified version of the main Control page. It contains two checkboxes: **DL HPA ON** and **UL HPA ON**, and a large **Apply** button.

**Figure 5-10 General Setting**

- **Downlink HPA ON**: Enables or disables the DL HPA (High Power Amplifier)
- **Uplink HPA ON**: Enables or disabled the UL HPA (High Power Amplifier)

To enable any of the settings, click on the checkbox and click the Apply button.

### 5.3.2 System

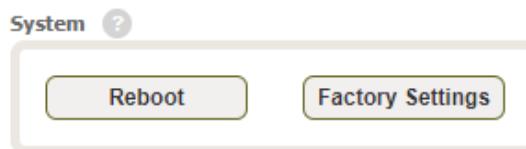

**Figure 5-11 System**

- **Reboot:** Clicking the reboot button will have the following popup show up:

Reboot will restart the repeater's processor.  
To restart the repeater, click OK. To quit, click Cancel.



**Figure 5-12 Pop-up message when Reboot button is pressed**

Click OK to reboot the repeater or click Cancel to exit out


- **Factory Setting:** Resets the repeater to the original factory settings

Factory Setting will change repeater's settings to the factory default values.  
To change the repeater setting, click OK. To quit, click Cancel.



**Figure 5-13 Pop-up message when Factory Setting button is pressed**


### 5.3.3 SNMP Trap

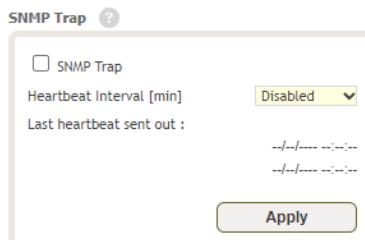

**Figure 5-14 SNMP Trap**

- **SNMP Trap ON** – Enables or Disables SNMP traps from being sent out when an alarm is triggered.
- **Heartbeat Periodic Time [min]** – Specifies the amount time between heartbeats

### 5.3.4 Gain Control

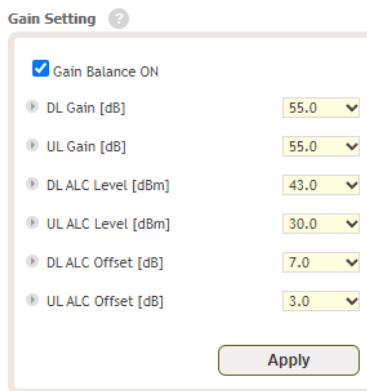

The dialog box is titled "Gain Setting". It contains the following settings:


Setting	Value
Gain Balance ON	<input checked="" type="checkbox"/>
DL Gain [dB]	55.0
UL Gain [dB]	55.0
DL ALC Level [dBm]	43.0
UL ALC Level [dBm]	30.0
DL ALC Offset [dB]	7.0
UL ALC Offset [dB]	3.0

**Apply** button

**Figure 5-15 Gain Control Setting**

- **Downlink Gain/Uplink Gain:** Allows the UL gain to be adjusted manually when ALC is OFF
- **DL Output ALC Level:** Prevents the output power from exceeding the specified value
- **DL Output ALC Offset:** When the incoming signal level increases, the system will not adjust the attenuation levels until the delta reaches the level specified
- **DL /UL Gain Balance ON:** Allows the user to enable or disable the gain balance. When gain balance is enabled, the delta value between the downlink and uplink gains remain constant

### 5.3.5 Alarm Setting

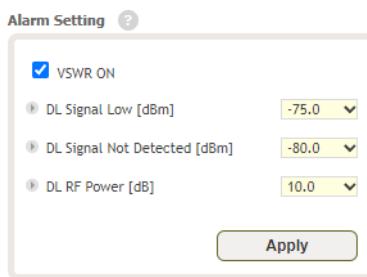

The dialog box is titled "Alarm Setting". It contains the following settings:


Setting	Value
VSWR ON	<input checked="" type="checkbox"/>
DL Signal Low [dBm]	-75.0
DL Signal Not Detected [dBm]	-80.0
DL RF Power [dB]	10.0

**Apply** button

**Figure 5-16 Alarm Threshold Setting**

- **Downlink Signal Low:** Allows the user to specify how low the signal can be before triggering a "Downlink Signal Low" soft-fail alarm
- **Downlink Signal Not Detected:** Allows the user to specify how low the signal can be before triggering a "Downlink Signal Not Detected" soft-fail alarm
- **Downlink RF Power:** Allows the user to set a maximum deviation value for the downlink RF power
- For example, if the input signal is -50 dBm and the gain is set to 60 dB, the expected output power should be 10 dBm. If the Downlink RF Power alarm value is set to 6dB, then if the output power is below 4 dBm, then this will trigger a soft-fail alarm
- **VSWR ON:** Allows the user to enable/disable the VSWR alarm check

### 5.3.6 SNMP Trap Manager IP

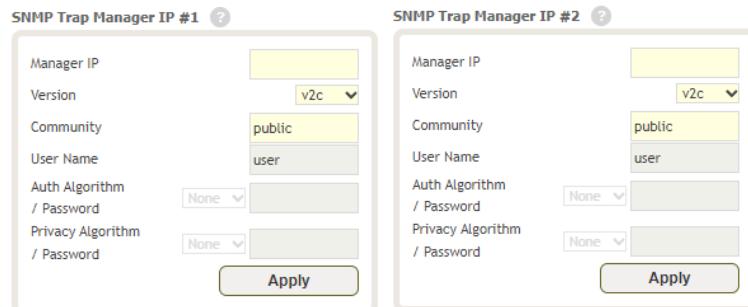

**Figure 5-17 SNMP Trap Manager IP #1**

- **Manager IP:** Specify the NOC IP Address where SNMP traps will be sent. The ADXV can send out SNMP traps to 2 different NOC IP addresses at the same time.
- **Version:** Specify the SNMP protocol that will be used which includes choices of v2c or v3.
- **Community:** Specify the community string that will be used when using v2c. The community string is not required if v3 is being used.
- **User Name / Auth + Privacy Algorithm:** Specify the username and password when using v3. Username and password are not required if v2c is being used.
- 


### 5.3.7 Alarm Test



**Figure 5-18 Alarm Test**

This section forces the alarm to run for alarm testing.

### 5.3.8 CW Test

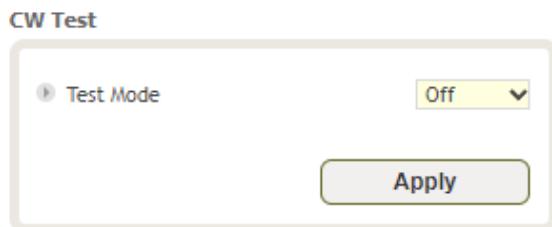


**Figure 5-19 CW Test**

- This section forces the output to be DL or UL for CW testing.
-

## 5.4 Install Tab

### 5.4.1 Install

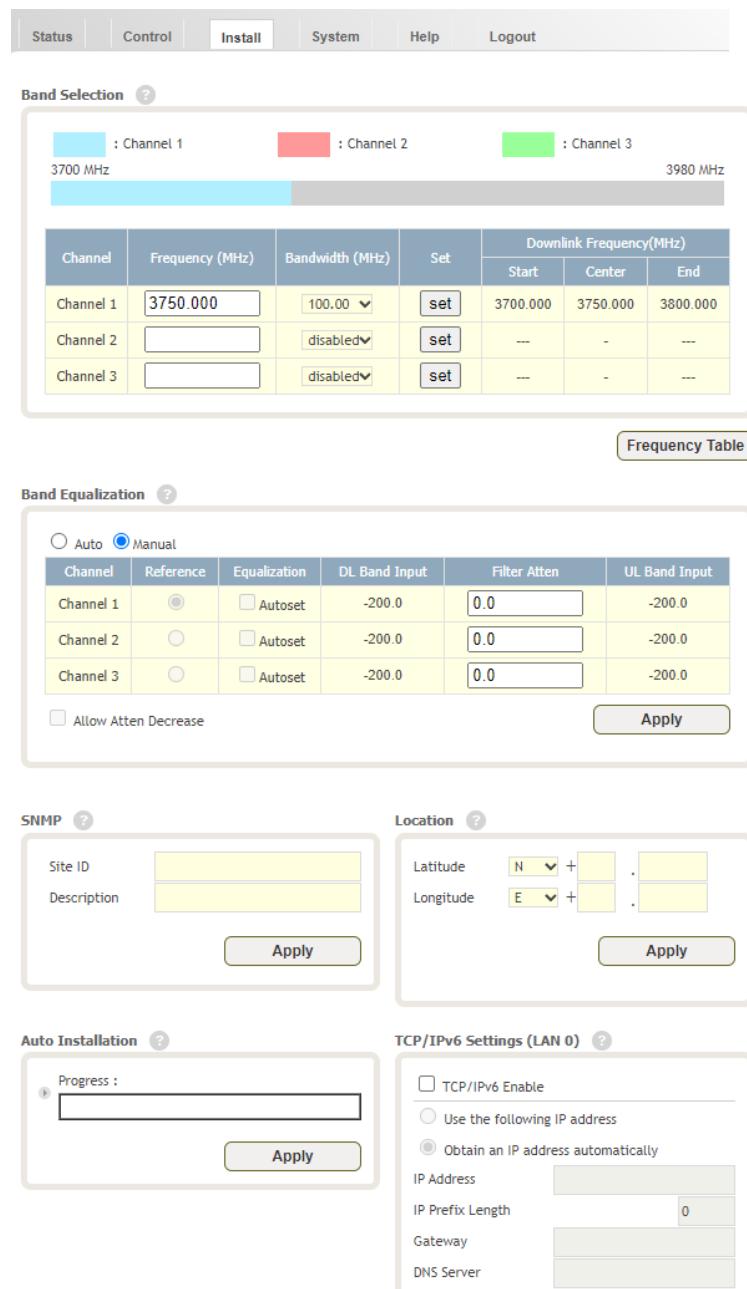

**Band Selection**

3700 MHz : Channel 1      3980 MHz : Channel 2      Channel 3

Channel	Frequency (MHz)	Bandwidth (MHz)	Set	Downlink Frequency(MHz)		
				Start	Center	End
Channel 1	3750.000	100.00	<input type="button" value="set"/>	3700.000	3750.000	3800.000
Channel 2		disabled	<input type="button" value="set"/>	---	-	---
Channel 3		disabled	<input type="button" value="set"/>	---	-	---

**Band Equalization**

Auto  Manual

Channel	Reference	Equalization	DL Band Input	Filter Atten	UL Band Input
Channel 1	<input checked="" type="radio"/>	<input type="checkbox"/> Autoset	-200.0	0.0	-200.0
Channel 2	<input type="radio"/>	<input type="checkbox"/> Autoset	-200.0	0.0	-200.0
Channel 3	<input type="radio"/>	<input type="checkbox"/> Autoset	-200.0	0.0	-200.0

Allow Atten Decrease

**SNMP**

Site ID:   
Description:

**Location**

Latitude:  N  +  .   
Longitude:  E  +  .

**Auto Installation**

Progress:

**TCP/IPv6 Settings (LAN 0)**

TCP/IPv6 Enable  
 Use the following IP address  
 Obtain an IP address automatically  
IP Address:   
IP Prefix Length:  0  
Gateway:   
DNS Server:

**Figure 5-20** Install page

### 5.4.2 SNMP



**SNMP**

Site ID:   
Description:

**Figure 1-21** SNMP

The SNMP section allows you to specify the Site ID and Description. The Site-ID is the code that is used to identify a particular module. The Description is separate field for user.

### 5.4.3 Location

This section allows the user to input the latitude and the longitude of the repeater.




The dialog box is titled "Location". It contains fields for "Latitude" and "Longitude". The "Latitude" field has a dropdown menu showing "N" and a ".+" button. The "Longitude" field has a dropdown menu showing "E" and a ".+" button. Below the fields is an "Apply" button.

**Figure 1-22 Location Setting**

### 5.4.4 Remote Ethernet Settings

This section allows the user to specify an alternative Repeater IP, Subnet Mask, and Gateway settings. These settings are enabled when the Host/Remote switch is set to the Remote position.

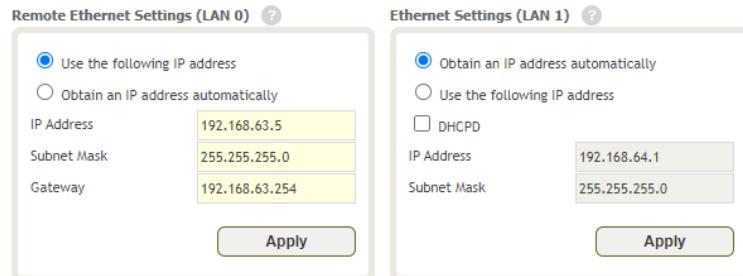


The dialog box is divided into two sections: "Remote Ethernet Settings (LAN 0)" and "Ethernet Settings (LAN 1)".

- Remote Ethernet Settings (LAN 0):**
  - Radio button selected: "Use the following IP address".
  - Radio button unselected: "Obtain an IP address automatically".
  - IP Address: 192.168.63.5
  - Subnet Mask: 255.255.255.0
  - Gateway: 192.168.63.254
- Ethernet Settings (LAN 1):**
  - Radio button selected: "Obtain an IP address automatically".
  - Radio button unselected: "Use the following IP address".
  - Check box unselected: "DHCPD".
  - IP Address: 192.168.64.1
  - Subnet Mask: 255.255.255.0

Both sections have an "Apply" button.

**Figure 1-23 Remote Ethernet Settings**

### 5.4.5 Auto Installation

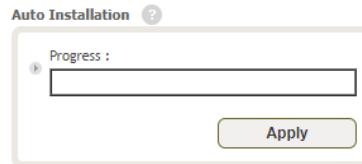

The dialog box is titled "Auto Installation". It contains a "Progress :" field with a progress bar and an "Apply" button.

**Figure 1-24 Auto Installation**

The Auto Installation routine can be run by clicking on the Install button. The Auto Installation routine runs basic system checks to ensure proper functionality.

#### 5.4.6 Repeater Location Info / Repeater Installer Info

<b>Location Info</b>	
Company	<input type="text"/>
Address1	<input type="text"/>
Address2	<input type="text"/>
City	<input type="text"/>
State	<input type="text"/> NONE
ZIP Code	<input type="text"/>
<b>Installer Info</b>	
Company	<input type="text"/>
Name	<input type="text"/>
Phone	<input type="text"/>
E-mail	<input type="text"/>
<b>Set</b>	

**Figure 1-25 Repeater Location Info / Repeater Installer Info**

This section allows the user to specify the address of the repeater and also the information of the installer.

#### 5.4.7 Date & Time

This section allows the user to specify the current date and time.

<b>Date &amp; Time</b>	
Date	<input type="text"/> 11/13/2023
Time	<input type="text"/> 17 <input type="text"/> 46 <input type="text"/> 37
<b>Set</b>	

**Figure 1-26 Date & Time Setting**


#### 5.4.8 Band Selection

<b>Band Selection</b>																																	
 : Channel 1	 : Channel 2	 : Channel 3																															
3700 MHz	3980 MHz																																
<table border="1"> <thead> <tr> <th rowspan="2">Channel</th> <th rowspan="2">Frequency (MHz)</th> <th rowspan="2">Bandwidth (MHz)</th> <th rowspan="2">Set</th> <th colspan="3">Downlink Frequency(MHz)</th> </tr> <tr> <th>Start</th> <th>Center</th> <th>End</th> </tr> </thead> <tbody> <tr> <td>Channel 1</td> <td>3750.000</td> <td>100.00</td> <td><input type="button"/> set</td> <td>3700.000</td> <td>3750.000</td> <td>3800.000</td> </tr> <tr> <td>Channel 2</td> <td></td> <td>disabled</td> <td><input type="button"/> set</td> <td>---</td> <td>-</td> <td>---</td> </tr> <tr> <td>Channel 3</td> <td></td> <td>disabled</td> <td><input type="button"/> set</td> <td>---</td> <td>-</td> <td>---</td> </tr> </tbody> </table>			Channel	Frequency (MHz)	Bandwidth (MHz)	Set	Downlink Frequency(MHz)			Start	Center	End	Channel 1	3750.000	100.00	<input type="button"/> set	3700.000	3750.000	3800.000	Channel 2		disabled	<input type="button"/> set	---	-	---	Channel 3		disabled	<input type="button"/> set	---	-	---
Channel	Frequency (MHz)	Bandwidth (MHz)					Set	Downlink Frequency(MHz)																									
			Start	Center	End																												
Channel 1	3750.000	100.00	<input type="button"/> set	3700.000	3750.000	3800.000																											
Channel 2		disabled	<input type="button"/> set	---	-	---																											
Channel 3		disabled	<input type="button"/> set	---	-	---																											
				<input type="button"/> Frequency Table																													

**Figure 1-27 Band Selection**

Band selection allows the user specify the desired frequencies.

Click Frequency Table to check the N77 frequency table.

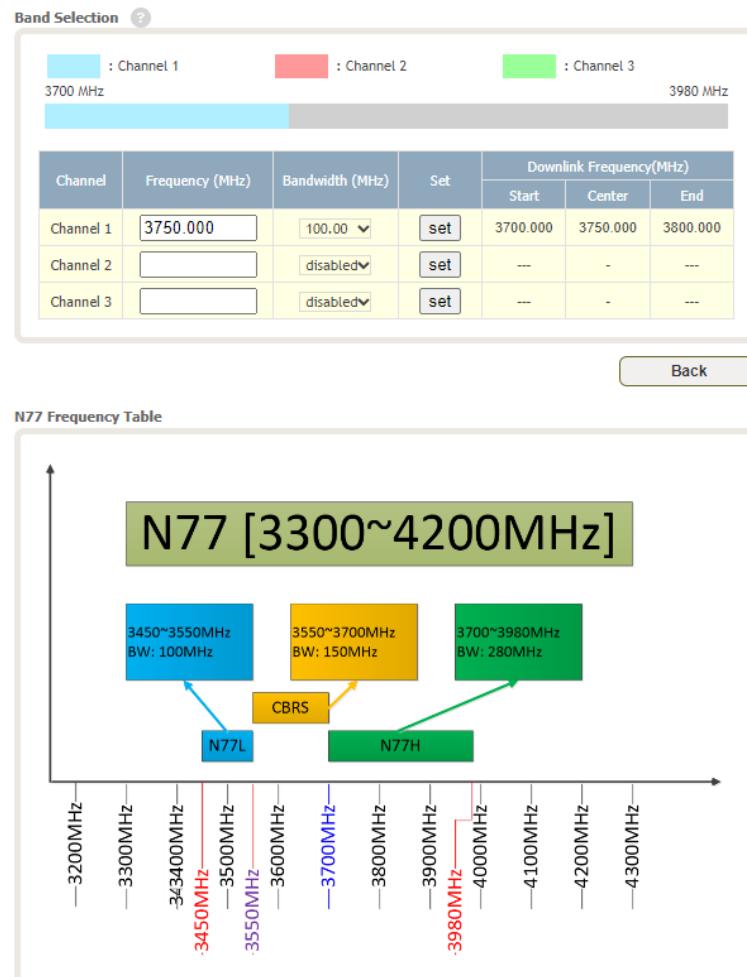

**Figure 1-28 N77 Frequency Table**

#### 5.4.9 Band Equalization

Channel	Reference	Equalization	DL Band Input	Filter Atten	UL Band Input
Channel 1	<input checked="" type="radio"/>	<input type="checkbox"/> Autoset	-200.0	<input type="text" value="0.0"/>	-200.0
Channel 2	<input type="radio"/>	<input type="checkbox"/> Autoset	-200.0	<input type="text" value="0.0"/>	-200.0
Channel 3	<input type="radio"/>	<input type="checkbox"/> Autoset	-200.0	<input type="text" value="0.0"/>	-200.0

Allow Atten Decrease

**Figure 1-29 Band Selection**

The Band Equalization section applies Filter Atten to ensure equal signal strength when the input signal strength is different between channels.

#### 5.4.10 TCP/IPv6 Settings (LAN 0)

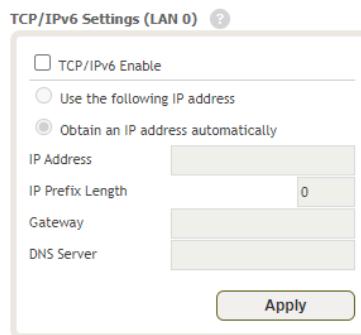


Figure 1-30 TCP/IPv6 Settings (LAN 0)

- **TCP/IPv6 Enable:** Allows the user to enable or disable TCP/IPv6 support. Enabling this feature will still allow the system to operate with TCP/IPv4 and is supplemental support.
- **Use the following IP address:** Once TCP/IPv6 support is enabled and this option is selected, then the network fields can be inputted manually.
- **Obtain an IP address automatically:** Once TCP/IPv6 support is enabled and this option is selected, then the SDRX-43-N77H will obtain an IP address from the DHCP server.
- **IP Address:** Allow the user to input a manual IPv6 address.
- **IP Prefix Length:** Allow the user to input a manual IP prefix length.
- **Gateway:** Allow the user to input a gateway.
- **DNS Server:** Allow the user to specify a DNS server.

#### 5.4.11 N77H Modem Setting(Timing)


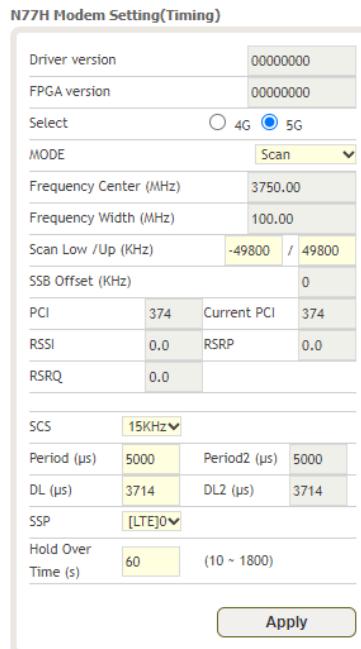


Figure 1-31 N77H Modem Setting(Timing)

- **Driver / FPGA version:** Driver/FPGA version of internal sync module
- **Select:** Select signal type
- **MODE:** Select sync module operation mode
- **Frequency Center / Frequency Width (MHz):** Frequency information of the input signal
- **Scan Low /Up (KHz):** Range to scan for sync detection
- **SSB Offset (KHz):** Distance from center frequency to sync signal
- **PCI / Current PCI:** PCI number of synchronized signal

- **RSSI / RSRP / RSRP:** Signal level and quality measurements
- **SCS / Period / Period2 / DL / DP2 (μs):** sync module timing setting
- **SSP:** SSB Position
- **Hold Over Time(s):** Maximum signal retention time when lost sync

#### 5.4.12 N77H Timing Calculator

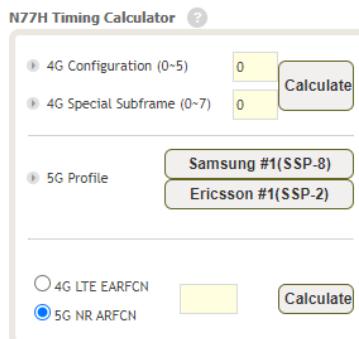

The N77H Timing Calculator interface is a web-based tool for calculating 4G and 5G signal timing. It features two main sections: '4G Configuration / 4G Special Subframe' and '5G Profile'. In the 4G section, users can input values for '4G Configuration (0~5)' and '4G Special Subframe (0~7)' and click a 'Calculate' button. In the 5G section, users can select a '5G Profile' (Samsung #1(SSP-8) or Ericsson #1(SSP-2)). Below these sections are two radio buttons: '4G LTE EARFCN' and '5G NR ARFCN', with '5G NR ARFCN' currently selected. A 'Calculate' button is also present here.

**Figure 1-32 N77H Timing Calculator**

- **4G Configuration / 4G Special Subframe :** 4G signal timing calculation
- **5G Profile:** Profiles for 5G signals
- **4G LTE EARFCN / 5G NR ARFCN:** Absolute Radio Frequency Channel Number


### 5.5 System

The System tab allows the user to perform firmware updates, upload closeout packages, view any changes to the system, backup existing configuration, and add/remove user accounts, and change the login credentials of the Administrator.

#### 5.5.1 System: Account

##### 5.5.1.1 System: Account- Account Management

The Account Management section allows the Administrator to delete any user account. Please note that the Account Management section is only available if you are logged into the system as the Administrator. To delete a user account click on the Account Management link and under the Delete column, click on the delete button.

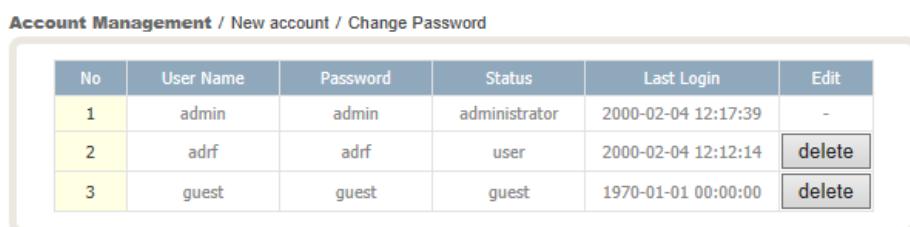


The Account Management table displays a list of user accounts. The columns are: No, User Name, Password, Status, Last Login, and Edit. The table shows three accounts: admin, adrf, and guest. The 'Edit' column contains a link for each account. The 'Delete' column contains a 'delete' button for each account, which is highlighted in the screenshot.

No	User Name	Password	Status	Last Login	Edit
1	admin	admin	administrator	2000-02-04 12:17:39	-
2	adrf	adrf	user	2000-02-04 12:12:14	<b>delete</b>
3	guest	guest	guest	1970-01-01 00:00:00	<b>delete</b>

**Figure 1-3317 System: Account- Account Management**

### 5.5.1.2 System: Account- New Account

The New account section allows the Administrator to create a new user account. Please note that the New account section is only available if you are logged into the system as the Administrator. To create a new user account click on the new account link and fill in the fields highlighted in yellow as shown below.

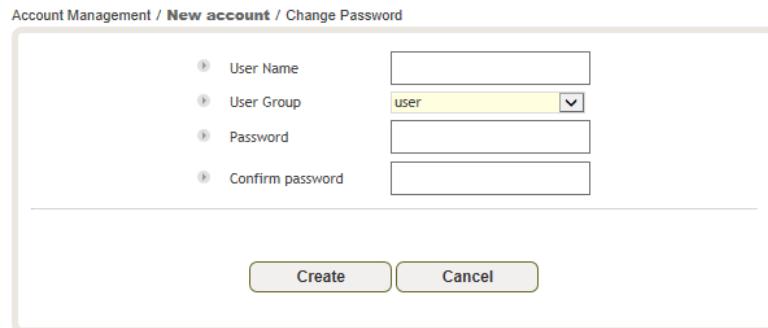

Account Management / **New account** / Change Password


User Name	<input type="text"/>
User Group	user <input type="button" value="▼"/>
Password	<input type="password"/>
Confirm password	<input type="password"/>

**Create** **Cancel**

**Figure 1-34 System: Account- New Account**

### 5.5.1.3 System: Account- Change Password

The Change Password section allows the current user who is logged into the system to change their login credentials.

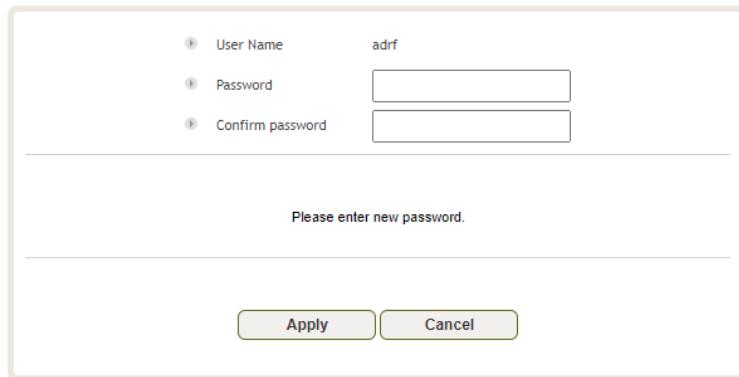

User Name	adrf
Password	<input type="password"/>
Confirm password	<input type="password"/>


Please enter new password.

**Apply** **Cancel**

**Figure 1-35 System: Account- Change Password**

## 5.5.2 System- Closeout Package

The closeout package section will allow the user to upload documents to the module. The maximum file size for each upload is limited to 10 MB. The total amount of space available for uploading document is 100 MB. Please do not use this section as the primary storage location of your documents. Documents may become unavailable if the system goes down.

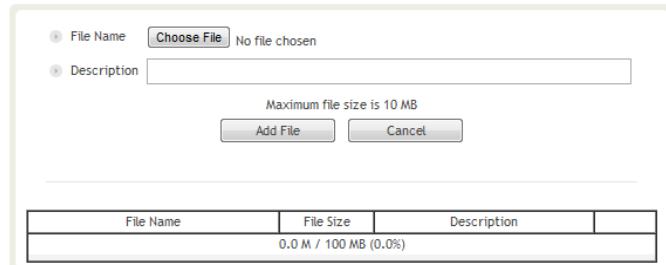

File Name	<input type="button" value="Choose File"/> No file chosen
Description	<input type="text"/>
Maximum file size is 10 MB	
<input type="button" value="Add File"/>	<input type="button" value="Cancel"/>


  

File Name	File Size	Description
0.0 M / 100 MB (0.0%)		

**Figure 1-36 System- Closeout Package**

To upload documents to the module, click on the “Choose File” or “Browse” button and locate the file that you would like to upload, then enter in a Description of the file being uploaded. Afterwards, click on the “Add

File" button to upload the file. Below is what you will see after the file upload. To delete the file, click on the delete button located in the last column.

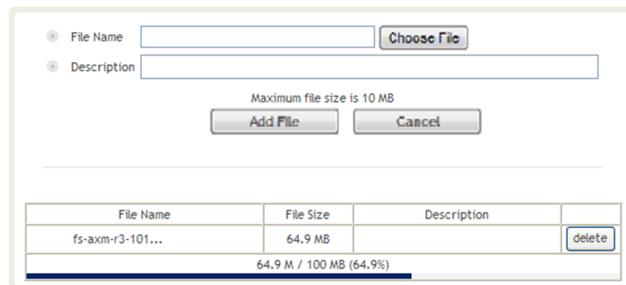

File Name	File Size	Description	
fs-axm-r3-101...	64.9 MB		<a href="#">delete</a>

**Figure 1-3718 System- Closeout Package after the file upload**

### 5.5.3 System- Event Log

This section displays system events 0000

Event Log / User Log					
Seq.	Date / Time	Source	Description	Event	Severity Level
1	2023.11.13 16:28:46	SDRX-43-N77H	-	DSP Fail Alarm Set	Minor
2	2023.11.13 16:27:50	SDRX-43-N77H	-	DL Signal Low Alarm Set	Minor
3	2023.11.13 16:27:50	SDRX-43-N77H	-	DL Signal Not Detected Alarm Set	Minor
4	2023.11.13 16:27:50	SDRX-43-N77H	-	Service Initiated	Notification
5	2023.11.13 16:16:57	SDRX-43-N77H	-	DSP Fail Alarm Set	Minor
6	2023.11.13 16:16:04	SDRX-43-N77H	-	DL Signal Low Alarm Set	Minor

**Figure 1-38 System – Event Log**

### 5.5.4 System- User Log


This section displays system events that have taken place. The User Log displays who has made the changes, the time and date of when the event took place, and what changes were made to the system.

Seq.	Date / Time	Source	Description	Username	Log Message
1	2023.10.25 14:56:11	SDRX-43-BTF	-	adrf	Modem PCI Mode Set Scan
2	2023.10.25 14:56:07	SDRX-43-BTF	-	adrf	Modem PCI Mode Set Manual
3	2023.10.25 14:56:01	SDRX-43-BTF	-	adrf	Modem PCI Mode Set Sync
4	2023.10.25 14:55:54	SDRX-43-BTF	-	adrf	Modem Standard Set 5G
5	2023.10.25 14:55:49	SDRX-43-BTF	-	adrf	Modem Standard Set 4G
6	2023.10.25 14:51:43	SDRX-43-BTF	-	adrf	Firmware Update Execute UPDATE_SDRX_43_BTF_N77LH_A00005_1.0.10_4010.dat

**Figure 1-39 System – User Log**

### 5.5.5 System: Update

- To perform a firmware update, click on the System tab and the following screen will appear.

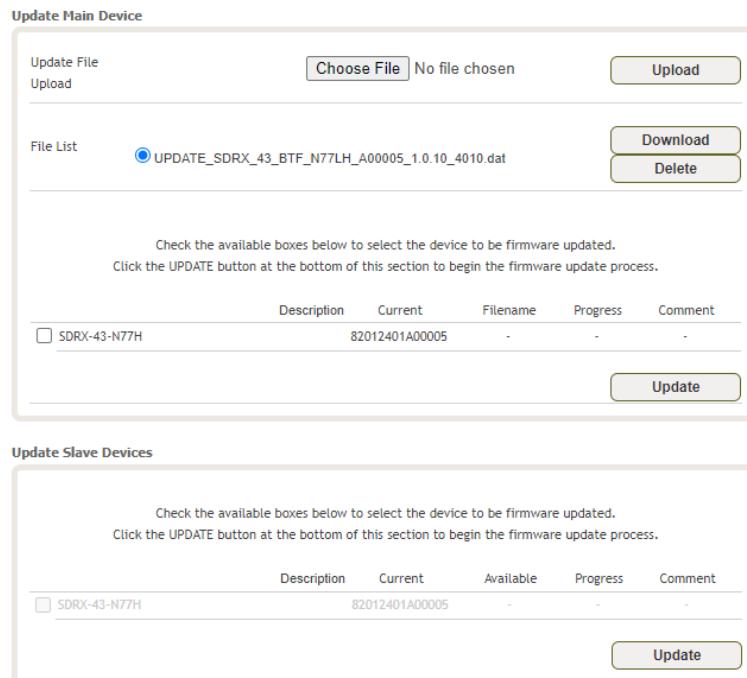

The screenshot shows two sections of a web-based system update interface:

**Update Main Device**

- Update File Upload:** A form with a "Choose File" button (labeled "No file chosen") and an "Upload" button.
- File List:** A table showing a single file entry: "UPDATE\_SDRX\_43\_BTF\_N77LH\_A00005\_1.0.10\_4010.dat" with a radio button next to it. Buttons for "Download" and "Delete" are also present.
- Instructions:** Text indicating to check available boxes to select the device and click the "UPDATE" button at the bottom.
- Table:** A table with columns: Description, Current, Filename, Progress, and Comment. One row is shown: "SDRX-43-N77H" with "82012401A00005" in the Current column.
- Buttons:** "Update" button at the bottom of the table.

**Update Slave Devices**

- Instructions:** Text indicating to check available boxes to select the device and click the "UPDATE" button at the bottom.
- Table:** A table with columns: Description, Current, Available, Progress, and Comment. One row is shown: "SDRX-43-N77H" with "82012401A00005" in the Current column.
- Buttons:** "Update" button at the bottom of the table.


**Figure 1-40 System – Update**

- Update File Upload
- Click on the Browse... button and locate the firmware file
- Click on the Upload button to the firmware file upload.
- Once the firmware upload is complete, File List will update.
- Update Main Device
- Select update file on file list.
- Check the boxes the device to be firmware updated.
- Click Update button at Update Main Device section
- Update Slave Device
- Check the available boxes to select the device to be firmware updated.
- Click update button at Update Slave Devices section to begin the firmware update process.

### 5.5.6 System- Backup

The backup section allows the user to save the settings of the module.

Click the Save button to perform the backup. To restore the settings to your system, select the file and click the Restore button. To download the file, select it and click the download button. To delete a file, select it and click the Delete button.

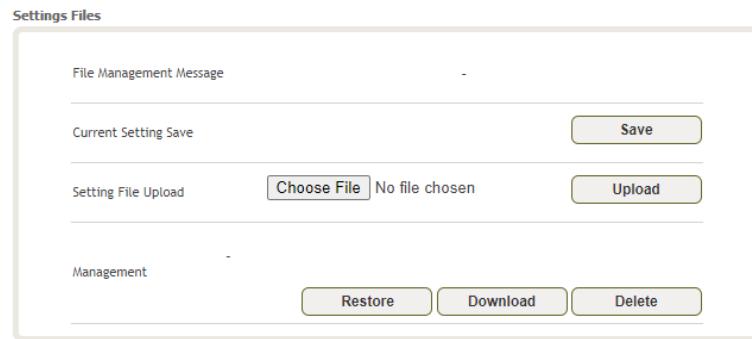


The screenshot shows a 'Settings Files' interface. At the top is a 'File Management Message' section. Below it is a 'Current Setting Save' section with a 'Save' button. Underneath is a 'Setting File Upload' section with a 'Choose File' button, a 'No file chosen' message, and an 'Upload' button. At the bottom is a 'Management' section with 'Restore', 'Download', and 'Delete' buttons.

**Figure 1-41 System Backup**

### 5.5.7 System- Network Service

This section allows you to select the Web service type and SFTP service type.

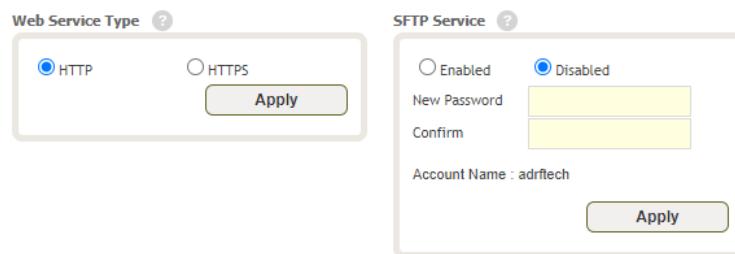

The screenshot shows two configuration panels. The left panel, 'Web Service Type', has radio buttons for 'HTTP' (selected) and 'HTTPS', with an 'Apply' button. The right panel, 'SFTP Service', has radio buttons for 'Enabled' and 'Disabled' (selected), with input fields for 'New Password' and 'Confirm', and an 'Apply' button. The account name is listed as 'Account Name : adrftech'.

**Figure 1-42 System Network Service**

### 5.5.8 System- SNMP

The SNMP section allows the user to define the parameters for SNMP v1, v2c, and v3. Community strings for v1/v2c can be specified from here and an SNMP user account can be created/deleted from this section.

**SNMP V1 / V2 (IP v4)**

**ADD SNMP**

Version	Permission	Community	Command
v2c	read/write		<input type="button" value="add"/>

**Active SNMP**

Version	Permission	Community	Command
v1	read/write	public	<input type="button" value="delete"/>
v2c	read/write	public	<input type="button" value="delete"/>

**SNMP V1 & V2 (IP v6)**

**ADD SNMP**

Permission	Community	Command
read/write		<input type="button" value="add"/>

**Active SNMP**

Permission	Community	Command
------------	-----------	---------

**SNMP V3**

**ADD SNMP**

User ID	Permission	Auth Algorithm / Password	Privacy Algorithm	Command
	read/write	MD5	None	<input type="button" value="add"/>

**Active SNMP**

User ID	Permission	Auth Algorithm / Password	Privacy Algorithm	Command
---------	------------	---------------------------	-------------------	---------

**SNMP Monitoring**

**SNMP V1 / V2**

Enabled	Version	Permission	Community	Command
<input type="checkbox"/>	v1	read only		<input type="button" value="set"/>

**SNMP V3**

Enabled	User ID	Permission	Auth Algorithm / Password	Privacy Algorithm	Command
<input type="checkbox"/>		read only	MD5	None	<input type="button" value="set"/>

**Figure 1-43 System SNMP**

### 5.6 Help

If an internet connection is available, clicking on the Help Tab will redirect the user to our Technical Support page.



**Figure 1-44 Help**

## 5.7 Logout

Clicking the Logout button will log the current user off the system.

## 6. MAINTENANCE GUIDE FOR SDRX-43-N77H REPEATER

### 6.1 Periodic Inspection Checklist

- Check for loose connections between the repeater and antennas. If connections are loose, make sure that all connections are tightly fastened properly.
- Cables and connectors are in good condition.
- Ensure that the repeater brackets are in good condition and that the repeater is securely fastened

### 6.2 Preventive Measures for Optimal Operation

#### 6.2.1 Recommendations

- Perform the *Periodic Inspection Checklist* quarterly or semi-annually.

#### 6.2.2 Precautions

- Do not operate the repeater with the antennas in extremely close proximity to one another as this may cause damage to the repeater.
- Do not change the parameters unless instructed to do so by an authorized supervisor.
- Do not move the repeater unless instructed to do so by an authorized supervisor.
- Do not detach any cables to the repeater unless repair of respective components is necessary.

## 7. WARRANTY AND REPAIR POLICY

### 7.1 General Warranty

The SDRX-43-N77H carries a Standard Warranty period of two (2) years unless indicated otherwise on the package or in the acknowledgment of the purchase order.

### 7.2 Limitations of Warranty

Your exclusive remedy for any defective product is limited to the repair or replacement of the defective product. Advanced RF Technologies, Inc. may elect which remedy or combination of remedies to provide in its sole discretion. Advanced RF Technologies, Inc. shall have a reasonable time after determining that a defective product exists to repair or replace the problem unit. Advanced RF Technologies, Inc. warranty applies to repaired or replaced products for the balance of the applicable period of the original warranty or ninety days from the date of shipment of a repaired or replaced product, whichever is longer.

### 7.3 Limitation of Damages

The liability for any defective product shall in no event exceed the purchase price for the defective product.

### 7.4 No Consequential Damages

Advanced RF Technologies, Inc. has no liability for general, consequential, incidental or special damages.

### 7.5 Additional Limitation on Warranty

Advanced RF Technologies, Inc. standard warranty does not cover products which have been received improperly packaged, altered, or physically damaged. For example, broken warranty seal, labels exhibiting tampering, physically abused enclosure, broken pins on connectors, any modifications made without Advanced RF Technologies, Inc. authorization, will void all warranty.

### 7.6 Return Material Authorization (RMA)

No product may be returned directly to Advanced RF Technologies, Inc. without first getting an approval from Advanced RF Technologies, Inc. If it is determined that the product may be defective, you will be given an RMA number and instructions in how to return the product. An unauthorized return, i.e., one for which an RMA number has not been issued, will be returned to you at your expense. Authorized returns are to be shipped to the address on the RMA in an approved shipping container. You will be given our courier information. It is suggested that the original box and packaging materials should be kept if an occasion arises where a defective product needs to be shipped back to Advanced RF Technologies, Inc. To request an RMA, please call (800) 313-9345 or send an email to [techsupport@adrfttech.com](mailto:techsupport@adrfttech.com).

## 8. SPECIFICATIONS

### 8.1 Electrical Specifications

Parameters	Specifications	Comments
<b>Frequency</b>	FCC : 3700– 3980MHz (N77H) IC: 3700– 3900MHz	
<b>Service Technology</b>	5G NR	
<b>Maximum Composite Output (DL/UL)</b>	+43dBm/+30dBm	To
<b>Channel Selection Bandwidth per Filter</b>	100 MHz	
<b>System Gain</b>	55 - 95dB	
<b>Spurious Emissions</b>	Compliance of FCC/ISED Regulations	
<b>Remote Alarm/Network</b>	Web-GUI, SNMP, SNMP-Traps	Through Ethernet connection

### 8.2 Mechanical Specifications

Parameters	Specifications	Comments
<b>Dimension (W x H x D)</b>	5.71x10.34x17.73 in	
<b>Antenna Connectors</b>	4.3-10(F)	
<b>Interface</b>	Ethernet (RJ45)	
<b>Mounting Type</b>	Rack/Wall Mount	
<b>Ground</b>	External Threaded Stud	

### 8.3 Environmental Specifications

Parameters	Specifications	Comments
<b>Operating Temperature</b>	-22°F ~ 131F (-30°C to +55°C)	-
<b>Operating Humidity</b>	5%~90% RH (Non-condensing)	

### 8.4 Power Specifications

Parameters	Specifications	Comments
<b>Power Supply</b>	AC 100- 240V	With Battery Backup
<b>Power Consumption</b>	Max 278W	

## 9. MECHANICAL DRAWINGS

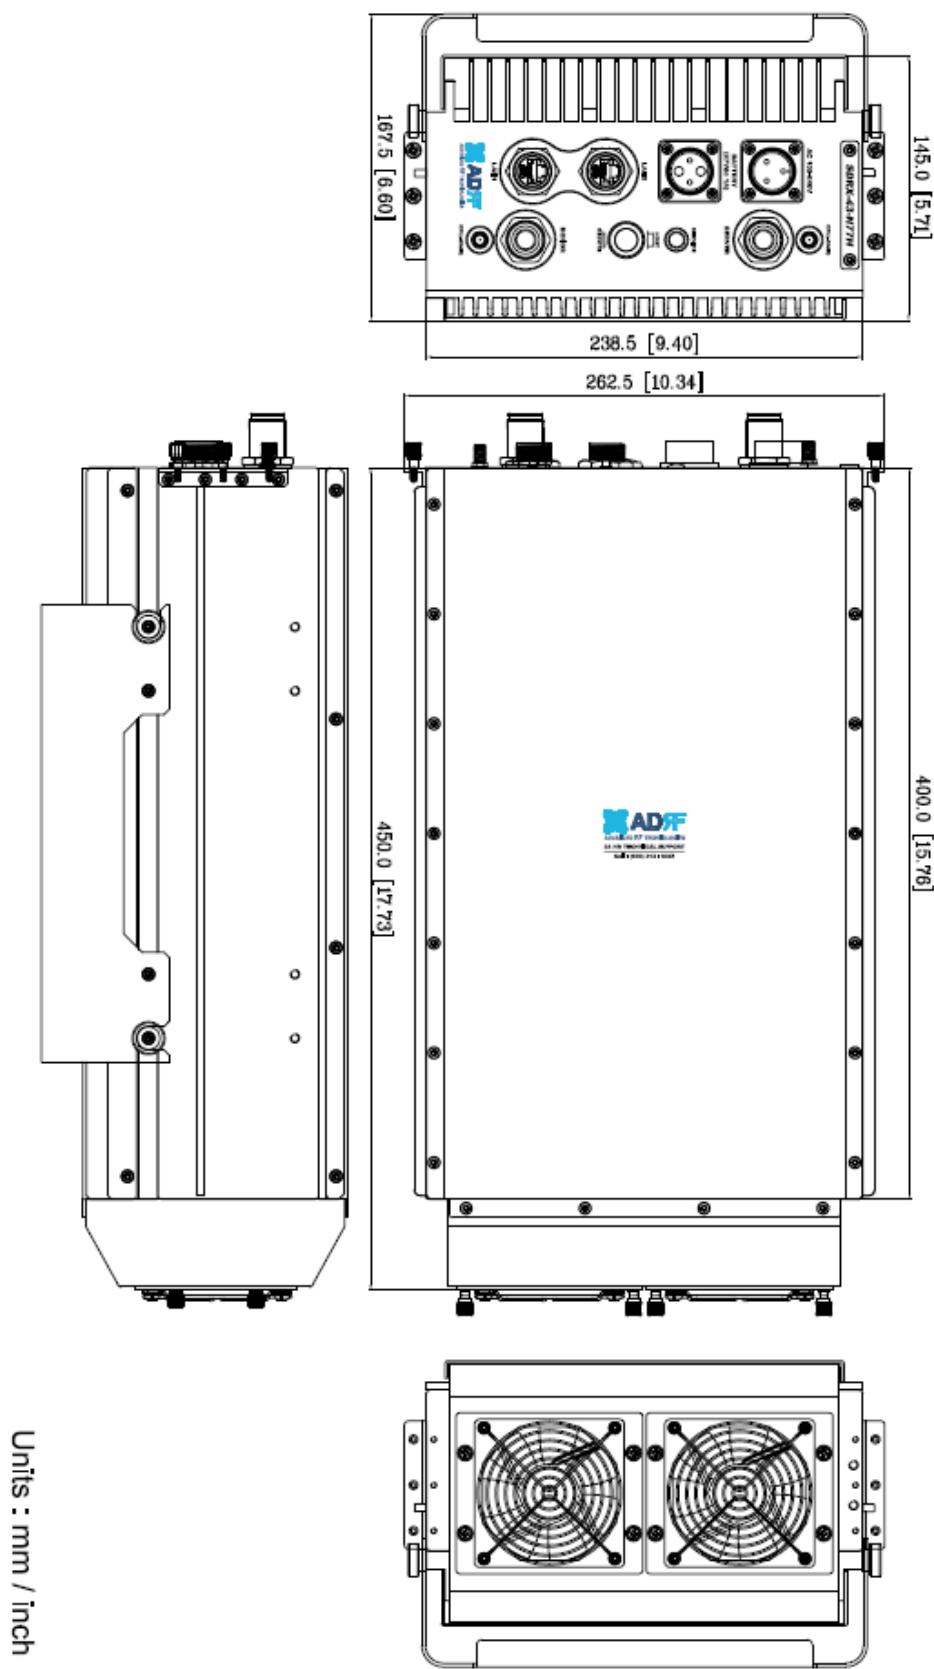


Figure 9-1 Mechanical Drawings

## 10. APPENDIX

### 10.1 Shutdown Retry Logic

The function of the built-in shutdown routine is to protect the repeater from any further damage from a hard-fail that the system may be experiencing.

Within 5 seconds of a hard-fail alarm being detected, the repeater will start the shutdown routine. The repeater will shut down by powering off the HPAs (high-powered amplifiers) for 30 seconds.

After 30 seconds have elapsed, the repeater will power on the HPAs and check to see if the hard-fail alarm still exists. If the hard-fail alarm still exists, then the repeater will shut down for 1 minute (double the time of the previous shutdown time).

After 1 minute has elapsed, the repeater will power on the HPAs and check to see if the hard-fail alarm still exists. If the hard-fail alarm still exists, then the repeater will shut down for 2 minutes (double the time of the previous shutdown time).

The shutdown routine will repeat itself a total of 10 times. If the hard-fail alarm still exists after the 10th retry, then the repeater will turn off its HPAs permanently until a reset is performed or factory set is executed.