



WR201LG User Manual

Version: 1.00



Driving Smarter IoT

www.queclink.com

Document Title	WR201LG User Manual
Version	1.00
Date	2023-01-12
Status	Released

General Notes

Queclink offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Queclink. The information provided is based upon requirements specifically provided to Queclink by the customers. Queclink has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Queclink within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Queclink. Copying of this document, distribution to others or using or communication of the contents thereof is forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of a patent grant or registration of a utility model or design. All specifications supplied herein are subject to change without notice at any time.

Copyright © Queclink Wireless Solutions Co., Ltd. 2022

Contents

0. Revision History	1
1. Overview	2
1.1 Description	2
1.2 Major Features	2
1.3 Technical Specification	2
1.4 Software Architecture	4
2. Hardware	5
2.1 Structure	5
2.2 Interfaces	6
2.3 Connector Definition	7
2.4 LEDs	7
2.5 Accessories	8
2.6 Installation	8
3. Initial Configuration	10
3.1 Configure the PC	10
3.2 Login to device	11
3.3 Control Panel	11
4. Software Configuration	13
4.1 Status	13
4.1.1 Overview	13
4.1.2 Device	13
4.1.3 Network->Mobile	14
4.1.4 Network->WAN	15
4.1.5 Network->LAN	16
4.1.6 Network->WLAN	17
4.1.7 Applications	18
4.1.8 VPN	18
4.1.9 Routes	19
4.1.10 Traffic	20
4.1.11 Log	20
4.2 Network	21
4.2.1 Link Management	21
4.2.2 Mobile	23
4.2.2.1 General	23
4.2.2.2 SIM management	24

4.2.2.3 Data Limit	25
4.2.3 WAN	26
4.2.4 LAN	30
4.2.5 WLAN	32
4.2.6 Routing	35
4.2.6.1 Static	35
4.2.6.2 Rip	36
4.2.7 Firewall	37
4.2.7.1 NAT	37
4.2.7.2 Domain Filter	38
4.2.7.3 IP/MAC Filter	38
4.2.7.4 DMZ	39
4.2.7.5 DDOS	40
4.3 Applications	41
4.3.1 GPS (Available for Specific Models Only)	41
4.3.1.1 Map	41
4.3.1.2 General	42
4.3.1.3 NMEA	42
4.3.2 VPN	43
4.3.2.1 PPTP	43
4.3.2.2 L2TP	45
4.3.2.3 OPENVPN	47
4.3.2.4 IPSec	56
4.3.2.5 GRE Tunnel	60
4.3.3 SMS Utilities	62
4.3.4 MQTT	62
4.3.5 RS232/RS485	64
4.3.6 Modbus	68
4.3.6.1 Modbus RTU	68
4.3.6.2 Modbus TCP to RTU	71
4.3.7 DDNS	72
4.3.8 Input	73
4.3.8.1 Status	73
4.3.8.2 Report	74
4.3.8.3 Application Example	75
4.3.9 Output	76
4.3.9.1 Status	76
4.3.9.2 Default State	77
4.3.9.3 Switch	77
4.3.9.4 Control	78
4.3.9.5 Application Example	78
4.3.10 Auto Recovery	79
4.3.10.1 Timing Task	79
4.3.10.2 ICMP	80

4.4 System	81
4.4.1 Setup Wizard	82
4.4.2 Administration	83
4.4.2.1 General	83
4.4.2.2 Access Control	83
4.4.2.3 Configuration File	84
4.4.3 Reboot	84
4.4.4 Diagnostic	85
4.4.4.1 Diagnostic	85
4.4.4.2 Tcpdump	85
4.4.5 NTP	86
4.4.6 Upgrade	87
4.4.6.1 Local	87
4.4.6.2 FOTA	88
4.5 Reset Button	89
5. FAQ	90
5.1 SIM Slot	90
5.2 No Signal	90
5.3 Cannot Find SIM/UIM Card	90
5.4 VPN Cannot Connect	90
Glossary	92

0. Revision History

Version	Date	Author	Description of Change
1.00	2022-06-07	Vincent	Initial

1. Overview

1.1 Description

The Queclink WR201 dual SIM industrial cellular router is a rugged cellular router offering high-speed stable mobile connectivity for machine to machine (M2M) applications. Based on 3G/4G LTE technology, WR201 adopts high-performance 32-bit processor and embedded operating system design. APN/VPDN private network access and dual SIM backup design guarantee data transmission security and provide high-speed, reliable routing and data transmission capabilities. Equipped with 4 Ethernet ports, 4 RS232/RS485 ports, Wi-Fi, GPIOs, all of which make it can be widely used in telecommunications, finance, information media, electric industry, retailing, automotive and environmental industries.

1.2 Major Features


- Dual 4G (LTE) SIM to provide quick access to Internet– Cat 4 DL up to 150 Mbps, UL up to 50 Mbps; compatible with 3G, 2G network.
- 4 Ethernet ports, 4 RS232/RS485 and multiple I/O to connect to a wide variety of equipment.
- 8-32VDC wide range power supply and -30 °C to 70 °C temperature range to provide high reliability.
- IPsec/OpenVPN/GRE/L2TP/PPTP VPN services to provide highly secure data transmission for devices.
- Static routing, RIPv2, OSPF, BGP and policy routing to provide various routing functions
- GNSS positioning functionality for fleets.

1.3 Technical Specification

Hardware	
CPU	Qualcomm 9531, 650 MHz
RAM	128 MB, DDR2
FLASH memory	16 MB SPI Flash
Mobile module	4G (LTE) – Cat 4 up to 150 Mbps, 3G (WCDMA or CDMA), 2G (GSM)
GNSS	GPS, GLONASS, BeiDou, Galileo and QZSS
Ethernet	4 x 10/100 Ethernet ports: 1 x WAN (configurable as LAN), 3 x LAN ports, 10/100 Mbps, comply IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX
Input	1 x digital input, 1 x digital galvanically isolated input, 1 x analog input (0.6- 30 V), 1 x digital input (on 4-pin power connector)
Output	1 x digital open collector output, 1 x relay output, 1 x digital open collector output
Status LEDs	1 x bi-color connection status LED, 4 x connection strength LEDs, 4 x LAN status LEDs, 1 x Power LED, 1 x GPS LED, 1 x Wi-Fi LED
SIM	2 x SIM slots (Mini SIM - 2FF), 1.8V/3V, external SIM holders



Power	4-pin power connector with 2 pins for input/output
Antennas	2 x SMA for LTE, 1 x SMA for GNNS, 3 x RP-SMA for Wi-Fi antenna connectors
USB	USB2.0 A port for external devices
RS232	1 x RS232 (without RTS, CTS), 300-115200 baud rate
RS485	3 x RS485, half duplex (2 wires), 300-115200 baud rate
Reset	Reset/restore to default button
Software	
Operating system	OpenWrt based Linux OS
SIM switch	2 SIM cards, auto-switch cases: weak signal, no network, network denied, data connection fail
Wireless mode	IEEE 802.11b/g/n/ac, Access Point (AP), Station (STA)
Routing	Static routing, dynamic routing (RIP v1/v2)
Network protocols	TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, FTP, SMTP, SSL v3, TLS, ARP, PPPoE, SSH, DHCP, Telnet, Modbus
Connection monitoring	Ping Reboot, LCP and ICMP for link inspection
VPN	PPTP, L2TP, OPENVPN, IPSEC, GRE Tunnel
Physical	
Input voltage range	8 - 32 VDC (4-pin industrial socket), reverse polarity protection; surge protection >31 VDC 10us max
Power consumption	< 7W
Casing material	Aluminum housing, plastic panels
Dimensions	180 mm x 130 mm x 34 mm (W x D x H, excluding connector and mounting bracket)
Weight	621g
Operating Environment	
Operating temperature	-30 °C to 70 °C
Operating humidity	10% to 90% non-condensing
Ingress Protection Rating	IP30


1.4 Software Architecture

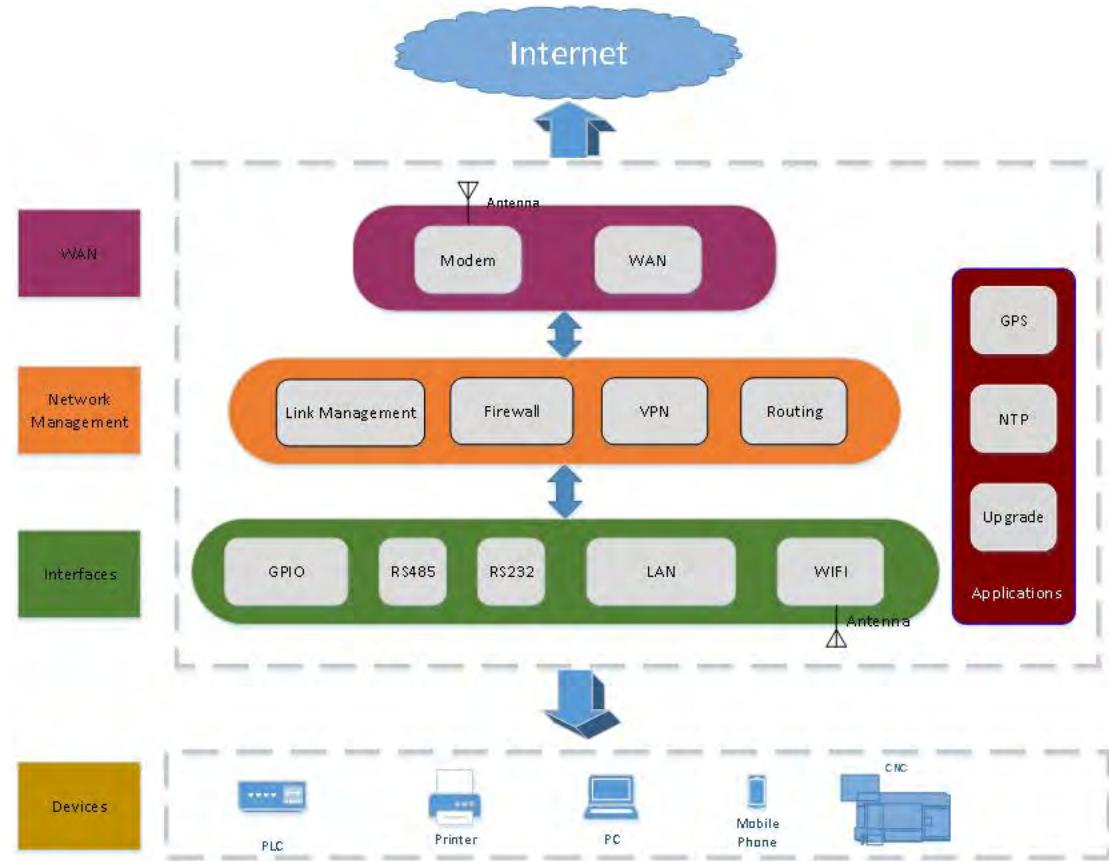


2. Hardware

2.1 Structure

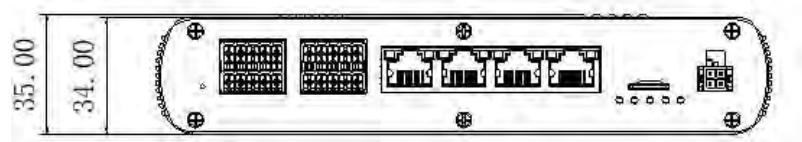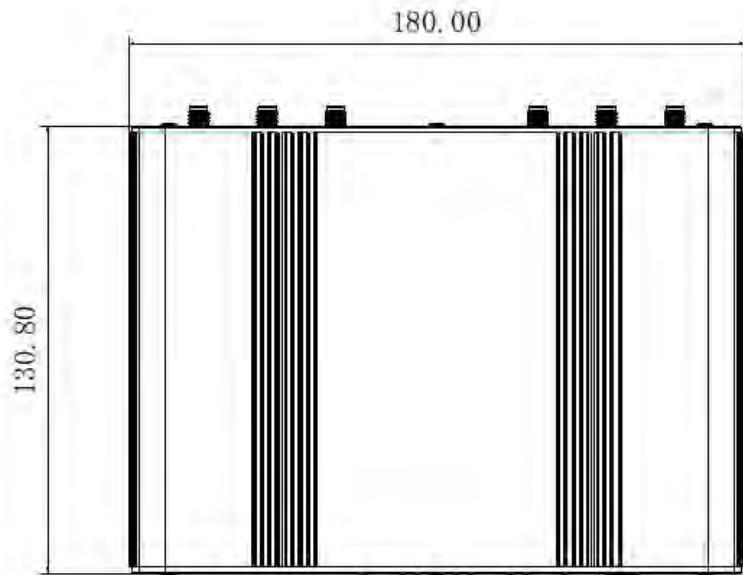


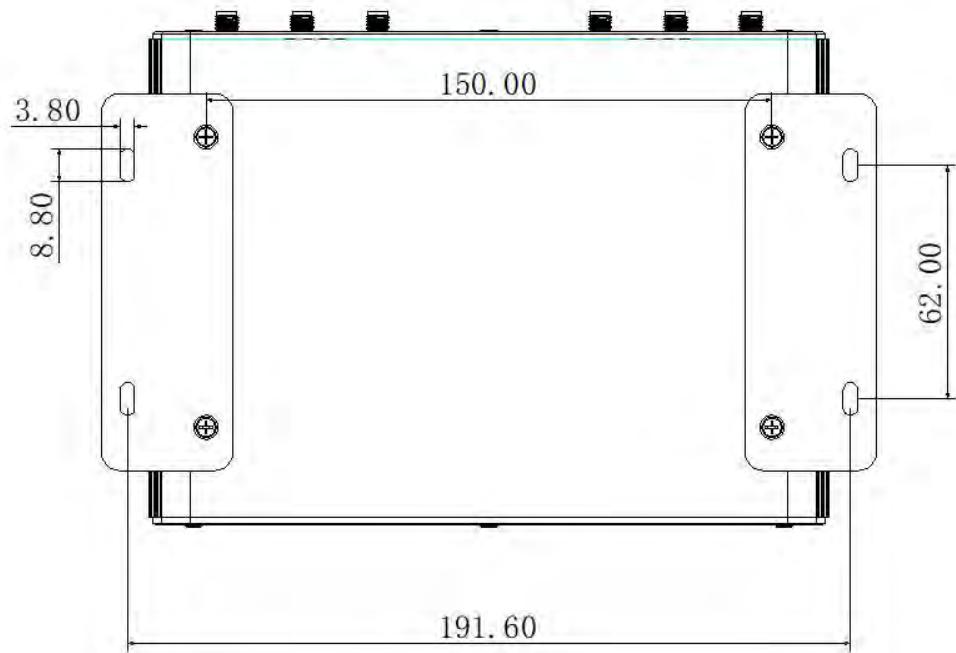

2.2 Interfaces

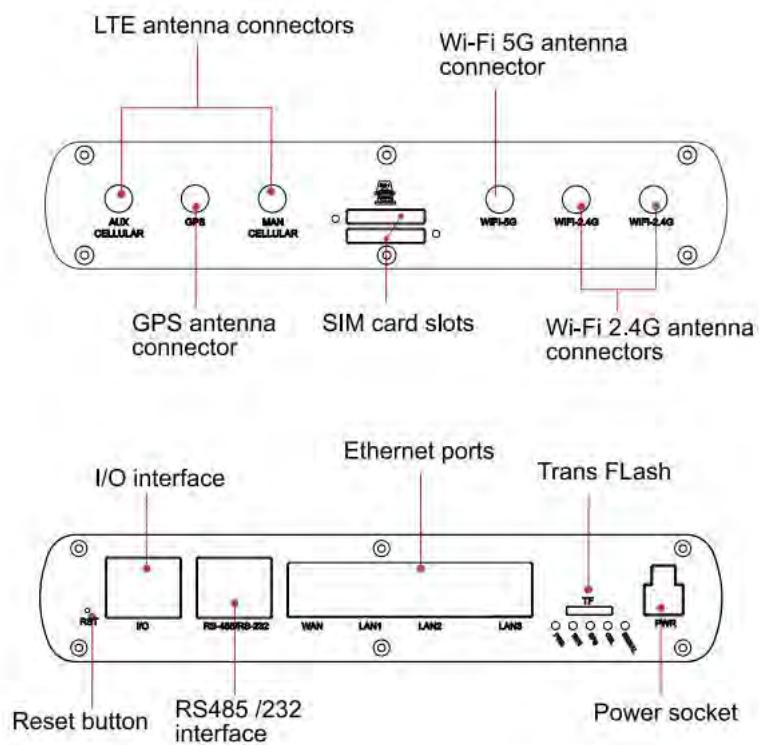

2.3 Connector Definition

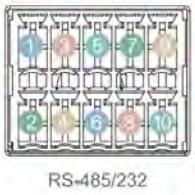Power	 <ul style="list-style-type: none"> ① Power ② Ground ③ Digital input (0-3.8 VDC: low logic level/4.3-40 VDC: high logic level) ④ Open collector output (4-pin connector) (30 VDC, 0.3A)
RS-485/RS-232	 <ul style="list-style-type: none"> ① RS-485 # 1 A ② RS-485 # 1 B ③ RS-485 # 2 A ④ RS-485 # 2 B ⑤ RS-485 # 3 A ⑥ RS-485 # 3 B ⑦ RS-232 TX (connect with RXD of peer end) ⑧ RS-232 RXD (connect with TXD of peer end) ⑨ N/C ⑩ GND
I/O	 <ul style="list-style-type: none"> ① GND (digital & analog input) ② Digital galvanically isolated input (0-4.5 VDC: low logic level/6-30 VDC: high logic level) ③ GND (OC output) ④ External VCC(OC output 0-30 VDC, 0.25A) ⑤ Relay output (COM) (external 0-24 VDC or 0-40 VAC, 4A) ⑥ GND (digital isolated input) ⑦ Galvanically isolated open collector output (external 0-30 VDC, 0.25A) ⑧ Analog input (0.6-32 VDC, 0.02A) ⑨ Relay output (NO) ⑩ GND

2.4 LEDs

Name	Status	Description
PWR	Red, solid	Power on
	Off	Power off
Wi-Fi	Orange, solid	Wi-Fi on and working properly
	Orange blinking every 250ms	Data is being transferred
	Off	Wi-Fi off or abnormal
GPS	Yellow, solid	GPS on and working properly
	Off	GPS off or abnormal
CEL	Green, solid	Connected to 4G network
	Green blinking every 0.5s	Connected to 2G/3G network
	Off	No SIM card or wrong PIN
SIGNAL (RSSI)	Blue, solid	23 to 32
	Blue blinking every 1s	11 to 23
	Blue blinking every 0.5s	1 to 10

	off	0
Ethernet Indicator	Green, solid	Connection is established
	Green blinking	Data is being transferred
	Off	Connection is not established


2.5 Accessories

Item	Quantity	Note
Power adaptor	1	
4G antenna	2	
Wi-Fi antenna	3	2 for 2.4GHz, 1 for 5GHz
GPS antenna	1	
Pin connector	4	5-pin
RJ45 cable	1	1 meter long

2.6 Installation

1. Insert SIM card:

- (1) Make sure the router is powered off.
- (2) Push the SIM holder button with the SIM ejection pin.
- (3) Pull out the SIM holder.
- (4) Insert your SIM card into the SIM holder.
- (5) Slide the SIM holder back into the router.

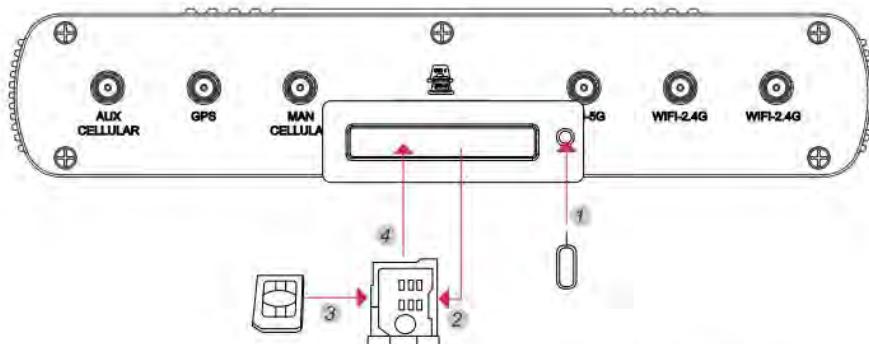


Note: The device is compatible with mini-SIM (2FF) size cards.

Note: The device is compatible with **mini-SIM (2FF)** size cards.


2. Attach External LTE, Wi-Fi and GPS Antenna:

Attach the SMA external antenna to the router's connector and twist tightly. Make sure that the antenna type corresponds to the antenna connector. You can see the antenna type by the silk printing on the antenna.

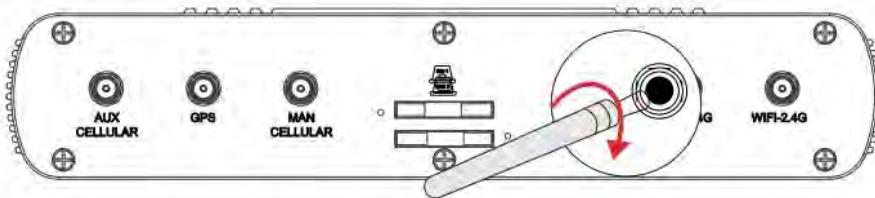


3. Connect the Router to the devices

Connect an Ethernet cable to any port marked ETH0~ETH3 at the bottom of the router, and connect the other end of the cable to your computer or lower end device.

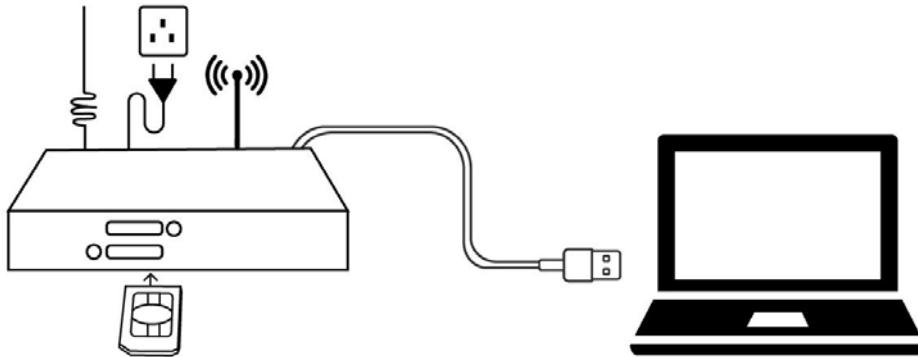

4. Connect the 4-pin power cable to power on the Router.

Connect the power adaptor to the socket on the front of the router and plug the other end of the power adaptor into a power outlet. The router is designed to accept input voltage between 8V DC to 32V DC. Higher voltage input may damage the device.

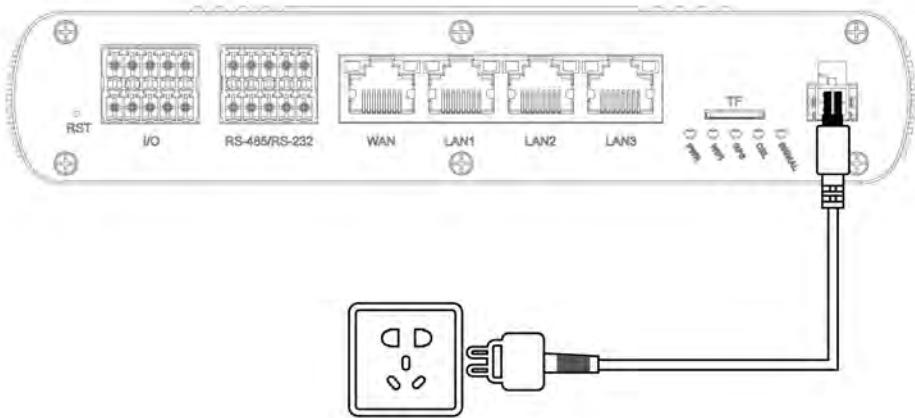

5. Fix the Router

You can use the mounting bracket to fix the router on the wall or other flat surface.



3. Initial Configuration

WR201 has a friendly WebUI. You can very easily configure the device through this UI. Make sure your computer has an Ethernet interface and web browser such as IE, Chrome, Firefox, etc.


3.1 Configure the PC

There are two methods to get IP address for the PC, one is to obtain an IP address automatically from “Local Area Connection”, and another is to configure a static IP address manually within the same subnet of the router. Please refer to the steps below.

Here take **Windows 7** as example to configure a static IP address, and the configuration for windows system is similar.

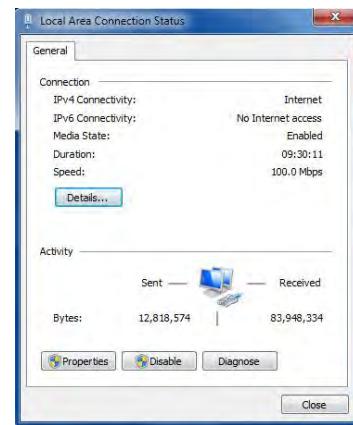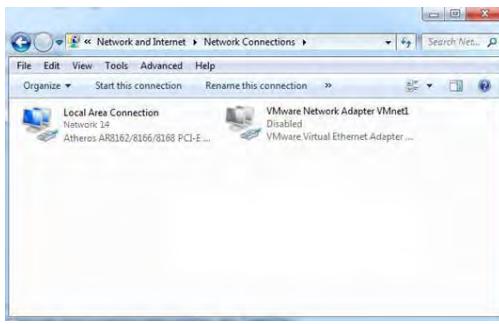

1. Click Start > Control panel, double-click Network and Sharing Center, and then double-click Local Area Connection.

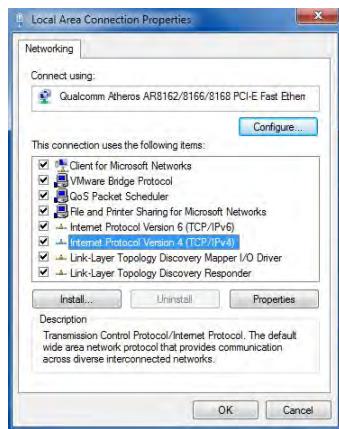

2. Click Properties in the window of Local Area Connection Status.



3. Choose Internet Protocol Version 4 (TCP/IPv4) and click Properties.

4. Use the following IP address:


Configured a static IP address manually within the same subnet of the router, the default router IP address is 192.168.1.1.

Click OK to finish the configuration.

3.2 Login to device

1. To enter the router's Web interface (WebUI), type <http://192.168.1.1> into the URL field of your Internet browser.

2. Use the following login information when prompted for authentication:

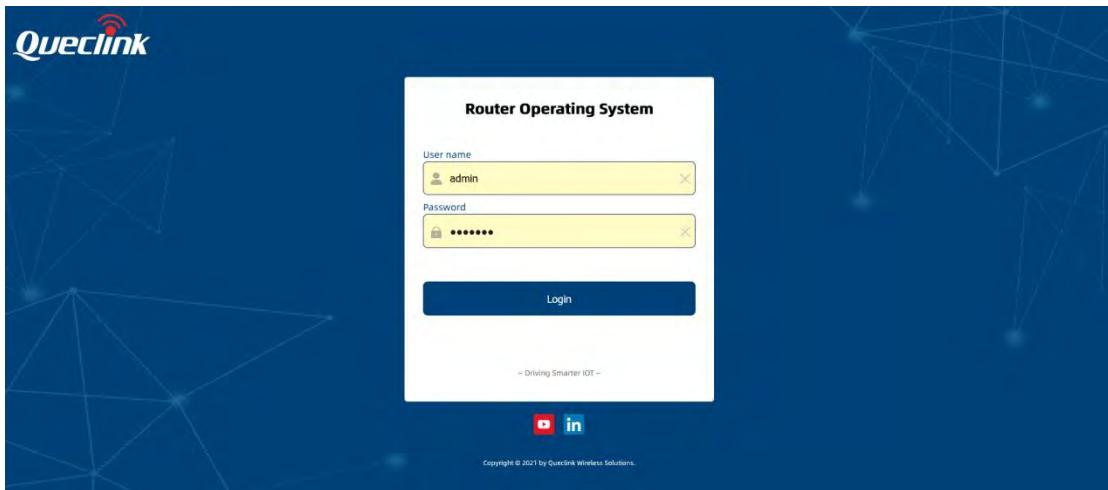


Enter the username and password, and then click LOGIN button. The default username is 'admin' and password is 'admin01'.

3.3 Control Panel

After logging in, the home page of the WR201 Router's web interface is displayed. The home page is an overview of the Router. It displays the network state, mobile connection state and Wi-Fi state of the router.

The page has language selection drop down menu and exit button in the upper right corner. You can change language setting or logout the system easily.

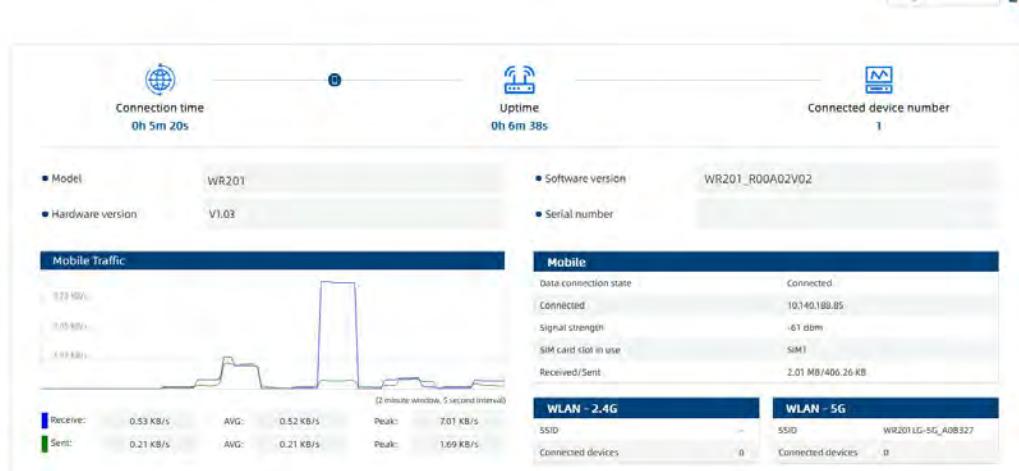

4. Software Configuration

4.1 Status

This section includes the running status of the Router.

4.1.1 Overview

The **Overview** page contains various information summaries, such as connection state, mobile connection state and traffic, etc. It is also the homepage of the WebUI.

The figure bellow is an example of the Overview page:



4.1.2 Device

The **Device** page displays the Router's hardware, software and modem related information. You can find serial number and software version in this page, which are important information of after sales maintenance.


Device			
Device Information		Modem Information	
Model	WR201	Modem model	EG25
Host name	Queclink-WR201.com	FW version	EG25GGBR07A08M2G_01.001.01.001
Firmware version	WR201_R00A02V02		
Kernel version	3.3.8		
Local device time	Thu Jun 16 22:58:18 2022		
Hardware revision	V1.02		
Uptime	0h 16m 29s		
CPU load	18.0%		
Memory total/free	123.201MB / 36.223MB		
serial number	EP91A20D6000024		

Field Name	Description
Model	Displays model number of the device.
Host name	Displays the device's host name. The hostname can be used instead of the LAN IP address to communicate with the device

	inside the local network.
Firmware version	Displays the firmware version currently used by the device.
Kernel version	Displays the device's kernel version. A kernel is a computer program responsible for connecting a device's software to its hardware
Local device time	Displays the current time as perceived by the device.
Hardware version	Displays the device's hardware version.
Uptime	Displays the running time since the device's last start up.
Memory total/free	Displays the amount of currently unused RAM.
Serial number	A unique device identifier.
Modem Model	The modem's model number
FW version	Modem's current firmware version

4.1.3 Network->Mobile

The Mobile page has two tables, one table displays the wireless information and the SIM card in use, another one displays the connection information, including IP address, DNS, etc. The figure below is an example of the Mobile page:

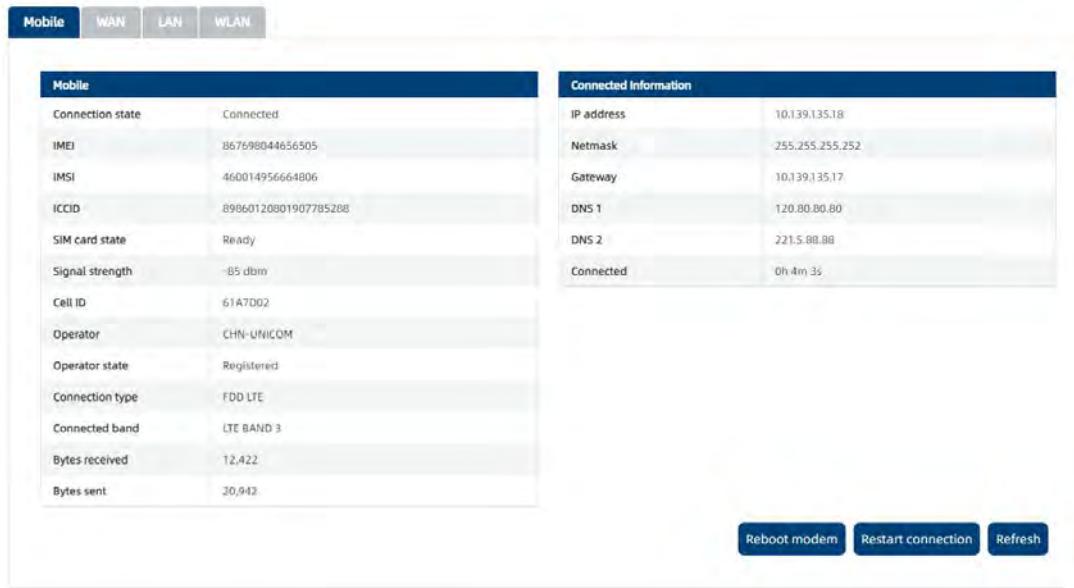

Mobile		Connected Information	
Connection state	Connected	IP address	10.139.135.18
IMEI	867698044656505	Netmask	255.255.255.252
IMSI	460014956664806	Gateway	10.139.135.17
ICCID	89860120801907785208	DNS 1	120.80.80.80
SIM card state	Ready	DNS 2	221.5.88.88
Signal strength	-85 dbm	Connected	0h 4m 3s
Cell ID	61A7D02		
Operator	CHN-UNICOM		
Operator state	Registered		
Connection type	FDD LTE		
Connected band	LTE BAND 3		
Bytes received	12,422		
Bytes sent	30,942		

Copyright © 2021 by Queclink Wireless Solutions.

You can click Reboot Modem or Restart Connection button to restore the connection if the connection is abnormal. The Refresh button is to refresh all information fields in the page.

Field Name	Description
Connection State	Indicates whether the device has an active mobile data connection
IMEI	The IMEI (International Mobile Equipment Identity) is a unique 15 decimal digit number used to identify cellular modules.
IMSI	The IMSI (international mobile subscriber identity) is a unique 15 decimal digit (or less) number used to identify the user of a cellular network.
ICCID	SIM card's ICCID is a unique serial number used to identify the

	SIM chip.
SIM card state	<p>The current SIM card state. Possible values are:</p> <ul style="list-style-type: none"> • Ready - SIM card is inserted and ready to be used • Inserted - SIM card is inserted • Not inserted - SIM card is not inserted • Unknown - unable to obtain SIM card state value. Possible communication issue between the device and the modem
Signal strength	Received signal strength indicator (RSSI) measured in dBm. Values closer to 0 mean a better signal strength
Cell ID	The ID of the cell that the modem is currently connected with
Operator	Network operator's name
Operator state	<p>Shows whether the network has currently indicated the registration of the mobile device. Possible values are:</p> <p>Not registered - not registered to a network and the device is not currently searching for a new operator to register to</p> <p>Registered - registered, home network</p> <p>Registration denied - registration to network denied by operator</p> <p>Unknown - operator state is currently unknown</p> <p>Registered roaming - registered to network, roaming conditions</p>
Connection type	<p>Mobile connection type. Possible values are:</p> <p>2G: 2G (GSM), 2G (GPRS), 2G (EDGE)</p> <p>3G: 3G (WCDMA), 3G (HSDPA), 3G (HSUPA), 3G (HSPA), 3G (HSPA+), 3G (DC-HSPA+), 3G (HSDPA+HSUPA), UMTS</p> <p>4G: 4G (LTE)</p> <p>- : not possible to determine at the moment</p>
Connected band	Currently used frequency band.
Bytes received	Amount of data received through the mobile interface
Bytes sent	Amount of data sent through the mobile interface
Restart Modem	Reboots the device's cellular module
Restart Connection	Restarts the mobile connection
Refresh	Refreshes all information fields in the page
Type	The dialing mode of the connection.
IP address	Router's modem IP address
Netmask	A netmask is used to define how "large" a network is by specifying which part of the IP address denotes the network and which part denotes the device
Gateway	Gateway of the default route - an IP address through which the router reaches the Internet
DNS	DNS servers used by the connection
Connected	Currently used connection uptime

4.1.4 Network->WAN

The **WAN** section displays information about the WAN interface, the connection type, IP address, Netmask, etc.

The figure below is an example of the WAN status page:



The screenshot shows a navigation bar with tabs: Mobile, WAN (selected), LAN, and WLAN. Below is a table titled 'WAN Information' with the following data:

Type	IP address	Netmask	Gateway	DNS 1	DNS 2	Connected
dhcp	192.168.60.82	255.255.255.0	192.168.60.1	192.168.60.1	-	0h 24m 19s

A 'Refresh' button is located in the bottom right corner of the table area.

The Refresh button is to refresh all information fields in the page.

Field Name	Description
Type	Static - WAN network interface controller configuration parameters are set manually (used when the WAN gateway is not a DHCP server) DHCP - Dynamic Host Configuration Protocol; the WAN network interface controller acts as a DHCP client, meaning that it receives a dynamically assigned IP address and other network configuration parameters PPPoE - Point-to-Point Protocol over Ethernet; used to establish a Digital Subscriber Line (DSL) Internet service connection
IP address	Router's WAN IP address
Netmask	A netmask is used to define how "large" a network is by specifying which part of the IP address denotes the network and which part denotes the device
Gateway	Gateway of the default route - an IP address through which the router reaches the Internet
DNS	DNS servers used by the main WAN connection
Connected	Currently WAN interface connection uptime
Refresh	Refreshes all information fields in the page

4.1.5 Network->LAN

The **LAN Information** page contains data on the router's LAN interfaces. There are two sections in this page, one is LAN information, including IP, Netmask, MAC address, connected time, and another one is DHCP lease, which contains information of DHCP clients.



The screenshot shows a navigation bar with tabs: Mobile, WAN, LAN (selected), and WLAN. Below is a table titled 'LAN Information' with the following data:

Name	IP address	Netmask	Ethernet MAC address	Connected
br-lan	192.168.1.1	255.255.255.0	08:EE:7F:AD:B1:27	0h 10m 2s

Below is a table titled 'Clients' with the following data:

Hostname	IP address	MAC address
DESKTOP-7B1HJH	192.168.1.150	8C:47:8E:3C:0B:64

A 'Refresh' button is located in the bottom right corner of the table area.

The Refresh button is to refresh all information fields in the page.

Field Name	Description
------------	-------------


LAN Information	
Name	LAN interface name
IP address	Router's LAN IP address
Netmask	A netmask is used to define how "large" a network is by specifying which part of the IP address denotes the network and which part denotes the device
Ethernet MAC address	Router's LAN MAC address
Connected for	The time since connection established
Clients	
Hostname	DHCP client's hostname
IP address	DHCP client's IP address
MAC address	DHCP client's MAC address

4.1.6 Network->WLAN

This page displays information about wireless connections and associated Wi-Fi stations. When router working in AP mode, the page displays AP information, otherwise, the page displays the connected station information.

The Router can work either in Access Point (AP) mode or Station mode.

The figure below is an example of the WLAN status page:

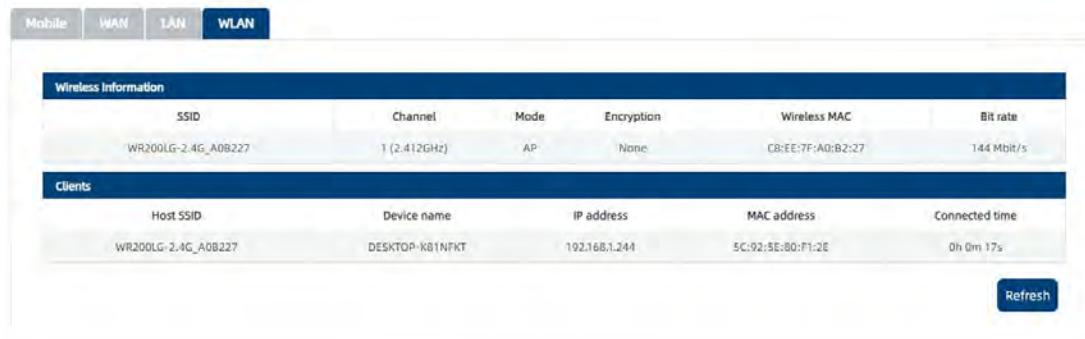

The Refresh button is to refresh all information fields in the page.

Field Name	Description
SSID	The broadcasted SSID (Service Set Identifier) of the wireless network
Channel	Currently used channel. In most countries there are 13 Wi-Fi channels on the 2.4 GHz band (14 in Japan) to choose from
Mode	Connection mode. Can either be Access Point (AP) or Client. In AP mode others can connect to this router's wireless connection. In client mode router connects to other wireless networks
Encryption	The type of Wi-Fi encryption used
Wireless MAC	The MAC (Media Access Control) address of the access point radio
Bit rate	The maximum possible physical throughput that the router's

	radio can handle. Bit rate will be shared between router and other possible devices which connect to local Access Point (AP)
--	--

4.1.7 Applications

The Services table displays the status of the device's services. Services that are currently disabled are displayed in a red font; services abnormal are also displayed in a red font. The user can click Change Setting button to direct to the configuration page of the services.

Applications Status			
Application	Enable	Status	Operation
NTP client	Enabled	Normal	
GNSS	Enabled	Abnormal	
MQTT(Queclink)	Enabled		

Field Name	Description
Applications	Name of the application
Enabled	Display the enable/disable status of this service
Status	Display the working status of this service
Operation	Quick button to the configuration page

4.1.8 VPN

The VPN table displays the status and connection information of all VPN link. The status is connected if a VPN connection is established. You can also see the IP address (work as client) or connected device number (work as server) in this page.

VPN						
PPTP						
Name	Enable	Status	Mode	IP/Client Number	Time	
PPTP	Disabled	Disconnected	Server	-	-	
L2TP						
Name	Enable	Status	Mode	IP/Client Number	Time	
L2TP	Disabled	Disconnected	Server	-	-	
OpenVPN						
Name	Enable	Status	Mode	IP/Client Number	Time	
WR200	Disabled	-	Server	-	-	
IPsec						
Name	Enable	Status	Mode	IP	Time	
IPsec	Disabled	Disconnected	-	-	-	
GRE Tunnel						
Name	Enable	Status	Source	IP	Time	
GRE	Disabled	-	-	-	-	

Copyright © 2021 by Queclink Wireless Solutions.

Field Name	Description
Name	Associated VPN name
Enable	Display the enable/disable status of this VPN

Status	Destination network address
IP/Client Number	If the VPN is a client, it displays the IP address allocated by the server. If the VPN is a server, it displays the client number connecting to the server.
Time	The total connection time of this connection

4.1.9 Routes

The **Routes** page displays the router's ARP table and active routes.

The ARP section displays the router's **ARP cache** (also known as ARP table) data. The ARP cache contains information on each known MAC address and its corresponding IP address. When the router receives a packet destined for a local host, the ARP program attempts to find a physical host or MAC address in the ARP cache that matches the IP address. If the ARP cache doesn't contain the needed IP address, ARP broadcasts a request packet to all LAN machines in order to find the device with the IP address in question.

The **Active IP routes** section displays the router's **routing table**. A routing table contains a list of routes to network destinations associated with and known by the router.

The figure below is an example of the ARP and IP routes section:



The screenshot shows the 'Routes' page with two tables: 'ARP' and 'Active IP Routes'.

ARP Table:

IP address	MAC address	Interface
192.168.1.113	5c:ba:ef:58:57:f3	LAN
192.168.66.253	c4:a4:02:96:af:27	WAN

Active IP Routes Table:

Interface	Target	IP gateway	Metric	Source
WAN	0.0.0.0/0	192.168.66.253	10	Static
LAN	192.168.1.0/24	0.0.0.0	0	Direct
LAN	192.168.1.45	0.0.0.0	0	Direct
gre4-queclink	192.168.2.0/24	0.0.0.0	0	Direct
gre4-queclink	192.168.2.23	0.0.0.0	0	Direct
WAN	192.168.66.0/24	0.0.0.0	10	Direct
WAN	192.168.66.253	0.0.0.0	10	Direct

ARP Parameter description:

Field Name	Description
IP address	IP address of a local host
MAC address	MAC address of a local host
Interface	Interface through which the router is associated with the host

Routes Parameter description:

Field name	Description
Network	Associated network interface name
Target	Destination network address
IP gateway	Indicates the IP address of the gateway through which the target network can be reached
Metric	Metrics help the router choose the best route among multiple feasible

	routes to a destination. The route will go in the direction of the gateway with the lowest metric value
--	---

4.1.10 Traffic

The Mobile Traffic section contains graphs that display mobile data usage values over different periods of time. Different tabs of the Mobile Traffic section display mobile data usage values over different periods of time. You can select the period by day, week and month.


The Router accumulates the traffic going through the modem interface; it is not exactly the same as the traffic statistics of operators.



Copyright © 2021 by Queclink Wireless Solutions.

4.1.11 Log

The Log Viewer page is to display the contents of the router's system log or kernel log. You can select which log file to display with the drop-down box. Refresh button is to refresh the content. You can save the current log as txt file through the Save file button.

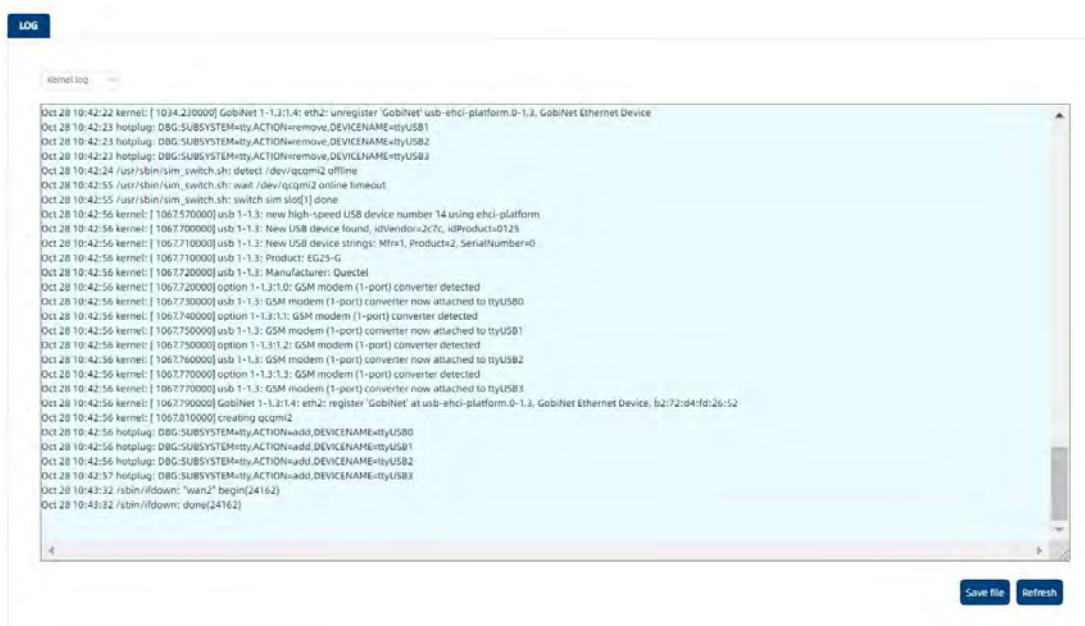

LOG

Kernel log

```

Oct 28 10:42:22 kernel: [1034.230000] GobiNet 1-1.21:4: eth2: unregister 'GobiNet' usb-ehci-platform.0-1.1, GobiNet Ethernet Device
Oct 28 10:42:23 hotplug: DBG-SUBSYSTEM=tty ACTION=remove,DEVICENAME=ttyUSB1
Oct 28 10:42:23 hotplug: DBG-SUBSYSTEM=tty ACTION=remove,DEVICENAME=ttyUSB2
Oct 28 10:42:23 hotplug: DBG-SUBSYSTEM=tty ACTION=remove,DEVICENAME=ttyUSB3
Oct 28 10:42:24 /usr/sbin/sim_switch.sh: detect: /dev/qcmi2 online
Oct 28 10:42:55 /usr/sbin/sim_switch.sh: wait /dev/qcmi2 online timeout
Oct 28 10:42:55 /usr/sbin/sim_switch.sh: switch sim slot1 done
Oct 28 10:42:55 kernel: [1067.570000] usb 1-1: new high-speed USB device number 14 using ehci-platform
Oct 28 10:42:56 kernel: [1067.700000] usb 1-1: New USB device found, idVendor=2c7c, idProduct=0125
Oct 28 10:42:56 kernel: [1067.710000] usb 1-1:3: New USB device strings: Mfr=1, Product=2, SerialNumber=0
Oct 28 10:42:56 kernel: [1067.710000] usb 1-1:3: Product: EG25-G
Oct 28 10:42:56 kernel: [1067.720000] usb 1-1:3: Manufacturer: Queclink
Oct 28 10:42:56 kernel: [1067.720000] option 1-1.3:1.0: GSM modem (1-port) converter detected
Oct 28 10:42:56 kernel: [1067.730000] option 1-1.3:1.0: GSM modem (1-port) converter now attached to ttyUSB0
Oct 28 10:42:56 kernel: [1067.740000] option 1-1.3:1.0: GSM modem (1-port) converter detected
Oct 28 10:42:56 kernel: [1067.750000] option 1-1.3:1.0: GSM modem (1-port) converter now attached to ttyUSB1
Oct 28 10:42:56 kernel: [1067.750000] option 1-1.3:1.0: GSM modem (1-port) converter detected
Oct 28 10:42:56 kernel: [1067.760000] option 1-1.3:1.0: GSM modem (1-port) converter now attached to ttyUSB2
Oct 28 10:42:56 kernel: [1067.770000] option 1-1.3:1.0: GSM modem (1-port) converter detected
Oct 28 10:42:56 kernel: [1067.770000] option 1-1.3:1.0: GSM modem (1-port) converter now attached to ttyUSB3
Oct 28 10:42:56 kernel: [1067.790000] GobiNet 1-1.21:4: eth2: register 'GobiNet' at usb-ehci-platform.0-1.1, GobiNet Ethernet Device, b2:72:d4:fd:26:52
Oct 28 10:42:56 kernel: [1067.810000] creating qcmi2
Oct 28 10:42:56 hotplug: DBG-SUBSYSTEM=tty ACTION=add,DEVICENAME=ttyUSB0
Oct 28 10:42:56 hotplug: DBG-SUBSYSTEM=tty ACTION=add,DEVICENAME=ttyUSB1
Oct 28 10:42:56 hotplug: DBG-SUBSYSTEM=tty ACTION=add,DEVICENAME=ttyUSB2
Oct 28 10:42:57 hotplug: DBG-SUBSYSTEM=tty ACTION=add,DEVICENAME=ttyUSB3
Oct 28 10:43:32 /sbin/ifdown: 'wan2' begin(24162)
Oct 28 10:43:32 /sbin/ifdown: done(24162)

```

Save file Refresh

4.2 Network

This section shows you how to configure the network of the Router.

4.2.1 Link Management

The link management is to manage the WAN connection of the Router, the Router has three interfaces can work as WAN interface: Mobile, WAN and WLAN (2.4G or 5G, station mode), the user can configure one of them as primary link and another one as backup link, if primary link is down, the router can switch to backup link according to the failover configuration. The two links can also work in Load Balancing mode; the Router will divide traffic between two interfaces.




Field Name	Value	Description
Primary Link	Modem WAN	Select from "Modem" or "WAN" <ul style="list-style-type: none"> Modem: Select to make mobile as the primary wireless link WAN: Select to make WAN as the primary wire link
Backup Link	None Modem WAN WLAN	Select from "None", "Modem", "WAN" or "WLAN". <ul style="list-style-type: none"> None: Do not select any backup link Modem: Select to make mobile as the primary wireless link WAN: Select to make WAN as the primary wire link WLAN: Select to make WLAN as the primary wire link
Backup mode	Backup Load Balancing	Select from "Backup" or "Load Balancing". <p>Backup: The inactive link is on standby</p> <p>Load Balancing: Use two links simultaneously</p>

The failover configuration section is to configure the rule of switchover rule. The router use ICMP to check the status of the link, if link is abnormal, the router will switch to another backup link.



Field Name	Value	Description
Link	Modem Wan Wifi2.4G Wifi5G	Associated interface to configure the failover strategy.
Health monitor interval	Disable 5 sec 10 sec 20 sec 30 sec 60 sec 120 sec	Number of seconds between each test.
Health monitor ICMP host(s)	Disable DNS server Gateway Custom	Indicates the host try to ping, select custom to manually configure an IP address to ping.
Health monitor ICMP timeout	1 sec 3 sec 4 sec 5 sec 10 sec	Set the ping timeout.
Attempts before failover	1 3 5 8 15 20	Set the max ping tries. Switch to another link or take emergency action if the max continuous ping tries reached.
Attempts before recovery	1 3 5 8 15 20	Set the max ping tries. Switch to primary link if the max continuous ping tries reached.

The status page displays the connecting link and parameters of the current connection.

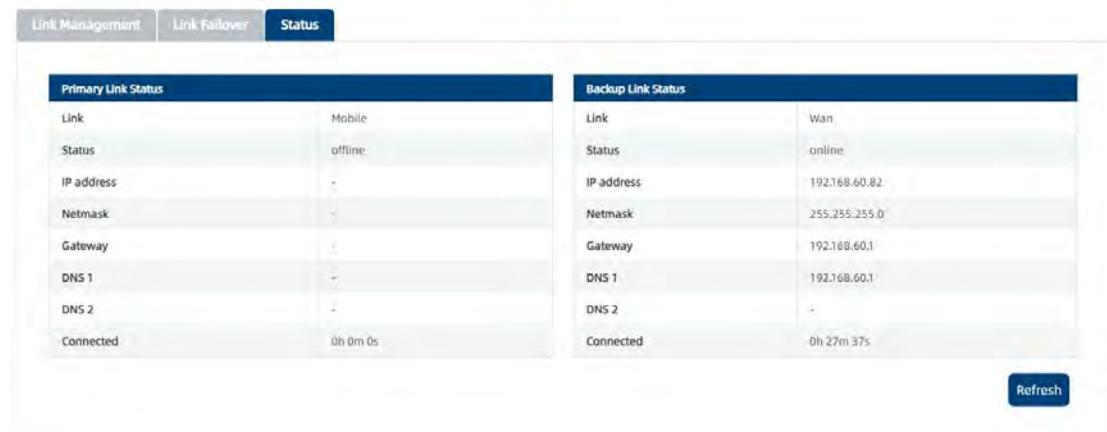

4.2.2 Mobile


The **Mobile** page is used for setting parameters related to the mobile data connection. There are two SIM slots in the router, each slot can insert a SIM card, and the user can select one SIM as the primary SIM and allow the switchover between two SIMs.

The Router has a mechanism to automatically detect SIM card and use appropriate dialing parameters in the system. Even if no parameters are configured, the device still can try to automatically dial to establish a connection.

4.2.2.1 General

The **Mobile Configuration** section is used to configure SIM card parameters.

Refer to the figure below for information on the fields contained in the section.

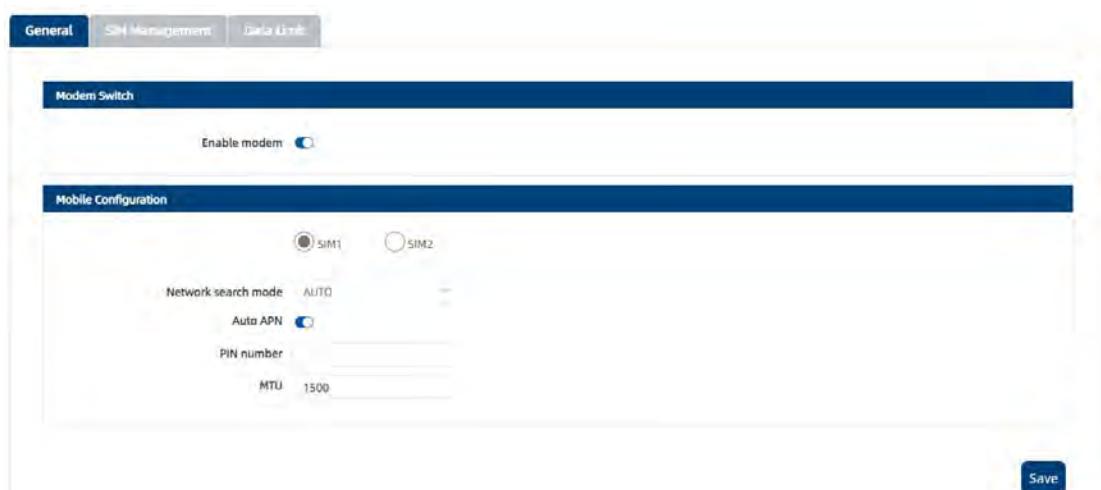

Field	Value	Description
Network search mode	Auto GSM only WCDMA only LTE only TD-SCDMA only UMTS only CDMA only HDR only CDMA and HDR only; default: Auto	Network connection type to connect.
Auto APN	checkbox; default: enabled	Auto APN scans an internal Android APN database and selects an APN based on the SIM card's operator and country. If the first automatically selected APN doesn't work, it attempts to use the next existing APN from the database.
APN	string; default: none	An Access Point Name (APN) is a gateway between a GSM, GPRS, 3G or 4G mobile network and another computer network. Depending on the contract, some operators may require you to

		<p>use an APN just to complete the registration on a network. In other cases, APN is used to get special parameters from the operator (e.g., a public IP address) depending on the contract.</p> <p>An APN Network Identifier cannot start with any of the following strings:</p> <ul style="list-style-type: none"> • rac; • lac; • sgsn; • rnc; <p>it cannot end in:</p> <ul style="list-style-type: none"> • .gprs; <p>and it cannot contain the asterisk symbol (*).</p>
Authentication method	CHAP PAP None; default: None	Authentication method that your GSM carrier uses to authenticate new connections on its network. If you select PAP or CHAP, you will also be required to enter a username and password.
PIN number	string; default: none	A 4-digit long numeric password used to authenticate the modem to the SIM card. Reminder: First boot will not reset the PIN number, it must be changed manually
MTU	integer [0..1500]; default: 1500	Sets the maximum transmission unit (MTU) size. It is the largest size of a protocol data unit (PDU) that can be transmitted in a single network layer transaction.


Click Save button to save the configuration and reestablish the connection.

4.2.2.2 SIM management

The **SIM Management** section provides you with the function to configure which SIM card is the primary one and which one is slave one, you can setup SIM switching rules between two SIM cards. SIM switching is the failover mechanism when the user has two SIM cards. For example, if the user has two SIM cards with limited data, you can setup a rule that switches the in use SIM card to the slave SIM card when the data limit is reached. You can setup similar rules for signal strength and more.

The **Primary card** section is used to select which SIM slot will host the router's primary SIM card. The primary SIM card is the one which is active by default, while the secondary card stays inactive until switchover happen.


The **SIM switching** section is used to enable automatic SIM switching and to set the SIM switching check interval.

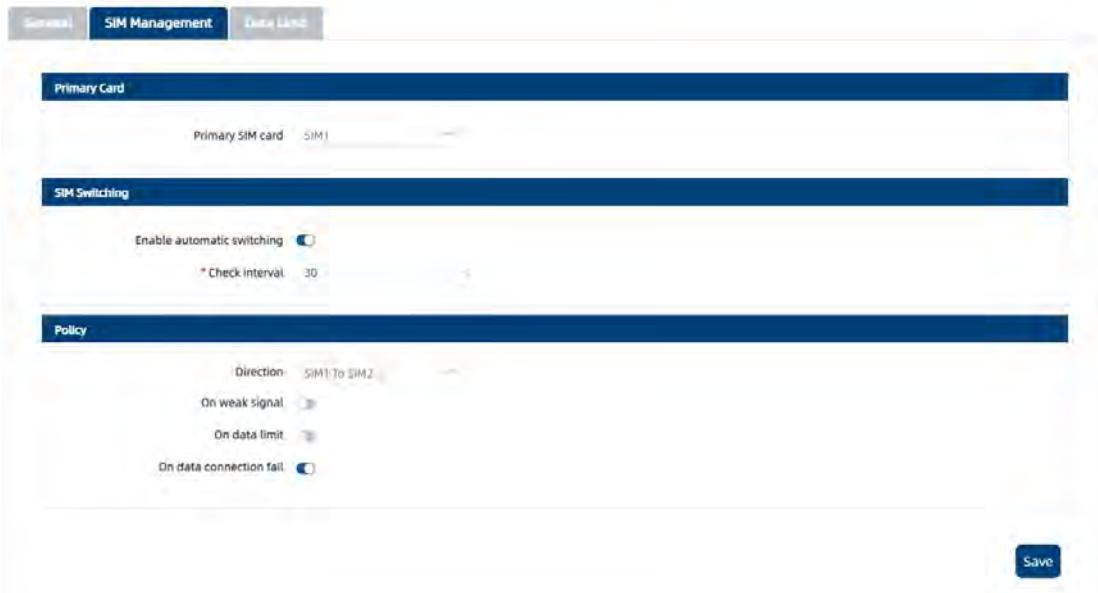

Field	Value	Description
Enable automatic switching	yes no; default: yes	Turns automatic SIM Switching on or off.
Check interval	integer; default: 30	The frequency at which the router will check for condition changes corresponding to SIM switch rules. If such a condition happens, the router will perform a switchover, if not - it will check for the same conditions again after the amount of time specified in this field.
On weak signal	yes no; default: no	Performs a SIM switch when signal strength value (RSSI in dBm) falls below a specified threshold. When this field is checked you will see an additional field for entering the minimum signal strength value appear.
On data limit	yes no; default: no	Performs a SIM switch when the SIM card reaches the specified data limit for the designated period. Mobile data limit can be configured in the Services → Mobile → Mobile Data Limit page.
On data connection fail	yes no; default: yes	Performs a SIM switch when the router does establish network connection.

4.2.2.3 Data Limit

The Data Limit section is used to configure custom mobile data limits for your SIM card(s). When the mobile data limit set for the SIM card(s) is reached, the router will no longer use the mobile connection to establish a data connection until the limit period is over or the limit is reset by the user.

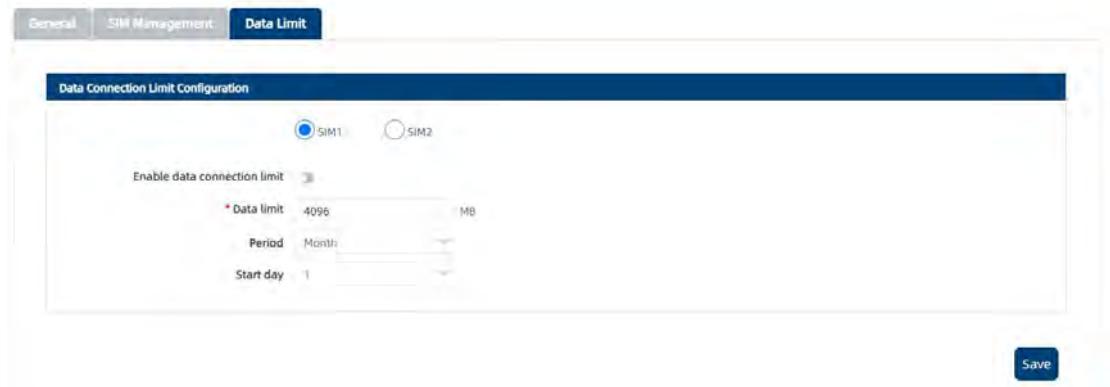

Field	Value	Description
Enable data connection limit	yes no; default: no	Turns mobile data limitations on or off.
Data limit* (MB)	integer; default: none	<p>The amount of data that is allowed to be downloaded over the specified period of time. When the limit is reached, the router will no longer be able to establish a data connection until the period is over or the data limit is reset.</p> <p>Note: after the router has reached the data limit it will not switch to using the secondary SIM card. If you wish to configure a SIM switch system based on received data limit, instructions can be found in the SIM Switching rules section of this page.</p>
Period	Month Week Day; default: Month	Data limit period after which the data counter is reset on the specified Start day.
Start day Start hour	day [1..31] day [Monday..Sunday] hour [1..24]; default: day 1	Specifies when the period of counting data usage should begin. After the period is over, the limit is reset and the count begins over again.

4.2.3 WAN

The WAN page is used to configure different protocols for WAN interfaces. The router supports Static, DHCP and PPPoE protocol. You can click Switch Protocol button to display and configure the parameters. The content will change according to which network protocol is selected.

The Static protocol is used when there is no DHCP server available. Therefore, in order to connect to the internet, you configure a static IP address in accordance to that source. The following is an example of static configuration page:

General

Configuration

Protocol: Static address

* IPv4 address: 192.168.60.150

* IPv4 netmask: 255.255.255.0

IPv4 gateway: 192.168.60.1

IPv4 broadcast:

Use custom DNS servers:

Override MAC address: Default: CB:EE:2F:01:BB:10

Override MTU:

Use gateway metric: 20

Save

Field name	Value	Description
Protocol	Static DHCP PPPoE; default: DHCP	The protocol used by the WAN interface
IPv4 address	ip; default: none	Your router's address on the WAN network
IPv4 netmask	ip; default: none	Netmask defines how "large" a network is
IPv4 gateway	ip; default: none	The address where the router will send all the outgoing traffic
IPv4 broadcast	ip; default: none	IP broadcasts are used by BOOTP and DHCP clients to find and send requests to their respective servers
Override MAC address	mac; default: router's mac	Override MAC address of the WAN interface. For example, your ISP (Internet Service Provider) gives you a static IP address and it might also bind it to your computer's MAC address (i.e., that IP will only work with your computer but not with your router). In this field you can enter your computer's MAC address and fool the gateway into thinking that it is communicating with your computer
Override MTU	integer [0..1500]; default: 1500	Maximum Transmission Unit (MTU) – specifies the largest possible size of a data packet
Use gateway metric	integer; default: 20	The WAN configuration by default generates a routing table entry. In this field you can alter the metric of that entry. Higher metric means higher priority

The DHCP protocol should be used when the source of your internet has a DHCP server. The following is an example of DHCP configuration page:

General

Protocol: DHCP client

Hostname to send when requesting DHCP:

- Accept router advertisements:
- Use broadcast flag:
- Use default gateway:
- Use DNS servers advertised by peer:
- Use gateway metric: 20

Client ID to send when requesting DHCP:

Vendor Class to send when requesting DHCP:


- Override MAC address: 00:00:00:00:00:00
- Override MTU:

Save

Field Name	Value	Description
Protocol	Static DHCP PPPoE; Default: DHCP	The protocol used by the WAN interface
Hostname to send when requesting DHCP	ip hostname; Default: router's hostname	Host name to which the DHCP request will be sent to
Accept router advertisements	yes no; Default: yes	Toggles to allow to accept the advertisements from upper router, including link and network parameters
Use broadcast flag	yes no; Default: no	Required for certain ISPs (Internet Service Providers), e.g. Charter with DOCSIS 3
Use default gateway	yes no; Default: yes	Uses the default gateway obtained through DHCP. If left unchecked, no default route is configured
Use DNS servers advertised by peer	yes no; Default: yes	Uses DNS servers obtained from DHCP. If left unchecked, the advertised DNS server addresses are ignored
Use gateway metric	integer; default: 20	The WAN configuration by default generates a routing table entry. In this field you can alter the metric of that entry. Higher metric means higher priority
Client ID to send when requesting DHCP	string; Default: none	Client ID which will be sent when requesting a DHCP lease
Vendor class to send when requesting DHCP	string; Default: none	Vendor class which will be sent when requesting a DHCP lease
Override MAC address	mac; Default: router's mac	Override MAC address of the WAN interface. For example, your ISP (Internet

		Service Provider) gives you a static IP address and it might also bind it to your computers MAC address (i.e., that IP will only work with your computer but not with your router). In this field you can enter your computer's MAC address and fool the gateway in to thinking that it is communicating with your computer
Override MTU	integer [0..1500]; Default: 1500	Maximum Transmission Unit (MTU) – specifies the largest possible size of a data packet

The PPPoE protocol is used if you have a DSL internet provider, in this case, you can select the PPPoE protocol to connect with the internet. The following is an example of PPPoE configuration page:

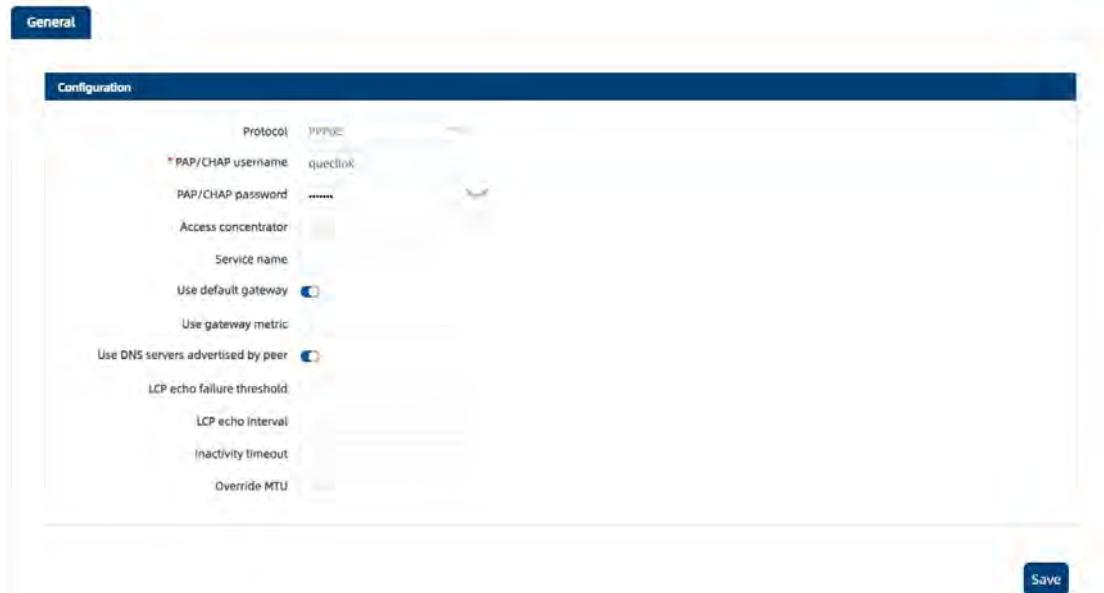


Field Name	Value	Description
Protocol	Static DHCP PPPoE; default: DHCP	The protocol used by the WAN interface
PAP/CHAP username	string; default: none	The username that you use to connect to your carrier's network
PAP/CHAP password	string; default: none	The password that you use to connect to your carrier's network
Access concentrator	string; default: none	The name of the access concentrator. Leave empty to auto detect
Service name	string; default: none	The name of the service. Leave empty to auto detect
Use default gateway	yes no; default: yes	Uses the default gateway obtained through DHCP. If left unchecked, no default route is configured

Use gateway metric	integer; default: 0	The WAN configuration by default generates a routing table entry. In this field you can alter the metric of that entry. Higher metric means higher priority
Use DNS servers advertised by peer	yes no; default: yes	Uses DNS servers obtained from DHCP. If left unchecked, the advertised DNS server addresses are ignored
LCP echo failure threshold	integer; default: 0	Presumes peer to be dead after given amount of LCP echo failures. Leave it at 0 to ignore failures
LCP echo interval	integer; default: 5	Sends LCP echo requests at the given interval in seconds. This function is only effective in conjunction with failure threshold
Inactivity timeout	integer; default: 0	Close inactive connection after the given amount of seconds. Leave it at 0 to persist connection
Override MTU	integer [0..1500]; default: 1480	Maximum Transmission Unit (MTU) – specifies the largest possible size of a data packet

4.2.4 LAN

This page allows you to set the related parameters for LAN port, such as IP address, IP Netmask, etc. There are four LAN ports on WR201. The following is the example configuration page of LAN port.

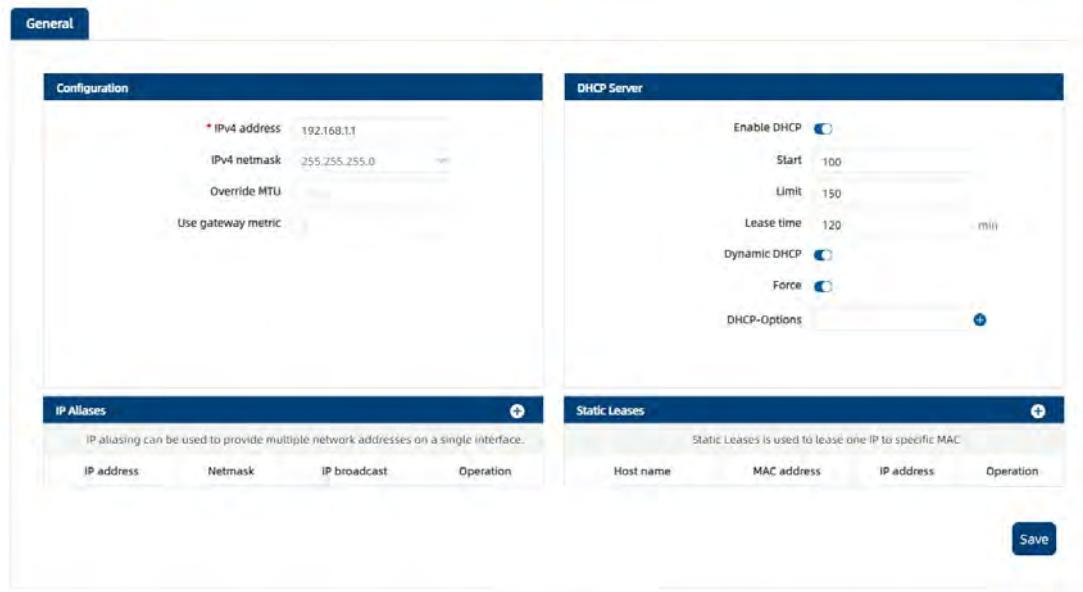

The screenshot shows the LAN configuration interface with the following sections:

- General** tab (selected): Shows basic configuration options like IPv4 address (192.168.1.1), IPv4 netmask (255.255.255.0), and an option to Use gateway metric.
- Configuration** tab: Shows the configuration for the LAN port, including the IP address and netmask.
- DHCP Server** tab: Shows settings for the DHCP server, including Enable DHCP (checked), Start (100), Limit (150), Lease time (120), Dynamic DHCP (checked), and Force (checked).
- IP Aliases** tab: Shows the IP aliasing configuration, stating it can be used to provide multiple network addresses on a single interface.
- Static Leases** tab: Shows the static leases configuration, stating it is used to lease one IP to specific MAC addresses.
- Save** button: Located at the bottom right of the interface.

A **DHCP** server is a service that can automatically configure the TCP/IP settings of any device that requests such a service (i.e., connects to the device with the operational DHCP server). The router can configure as DHCP server. If you connect a device that has been configured to obtain

an IP address automatically, the router will lease out an IP address from the available IP pool and the device will be able to communicate within the private network. You can configure DHCP in DHCP section. Advanced setting is also available in this section.

Static IP leases are used to reserve specific IP addresses for specific devices by binding them to their MAC address. This is useful when you have a stationary device connected to your network that you need to reach frequently, e.g., printer, server, etc. You can configure setting in static leases section.

IP Aliases section allows you to multi IP address for the router. It is a way of defining or reaching a subnet that works in the same space as the regular network. This is useful if you need to reach the router that is located in the same network but in a different subnet.

Field Name	Value	Description
Configuration		
IP address	ip; Default: 192.168.1.1	IP address that the device uses on the LAN network
IP netmask	ip; Default: 255.255.255.0	A netmask is used to define how "large" the LAN network is
Override MTU	integer [0..1500]; Default: 1500	MTU (Maximum Transmission Unit) specifies the largest possible size of a data packet
Use gateway metric	integer; Default: 0	The LAN configuration generates an entry in the routing table. In this field you can alter the metric of that entry. Higher metric means higher priority
DHCP Server		
DHCP	Enable Disable DHCP Relay; Default: Enable	Enables or disables DHCP Server. If DHCP Relay is selected, you will be prompted to enter an IP address of another DHCP server in your LAN. In this case, whenever a new device connects to the router, the router will redirect any DHCP requests to the specified DHCP Server
Start	integer [1..253]; Default: 100	The starting IP address value. e.g., if your router's LAN IP is 192.168.2.1 and your subnet mask is 255.255.255.0 that means that in your network a valid IP address has to be in the range of [192.168.2.0..192.168.2.254] (192.168.2.255 is a special unavailable address). If the Start value is set to 100 then the DHCP server will only lease out addresses starting from 192.168.2.100
Limit	integer [1..253]; Default:	How many addresses the DHCP server can

	150	lease out. Continuing from the above example: if the start address is 192.168.2.100 and the server can lease out 150 (default limit value), available addresses will be from 192.168.2.100 to 192.168.2.249 (100 + 150 – 1 = 249; this is because the first address is inclusive)
Lease time	time in minutes; Default: 120min	The duration of an IP lease. Leased out addresses will expire after the amount of time specified in this field and the device that was using the lease will have to request a new DHCP lease. However, if the device stays connected, its lease will be renewed after half of the specified amount of time passes, e.g., if the lease time is 12 hours, then every 6 hours the device will send a request to the DHCP server asking to renew its lease Lease time can be set in minutes (m). The minimal amount of time that can be specified is 2min (2m)
Dynamic DHCP	yes no; Default: yes	Enables Dynamic allocation of client addresses. If this is disabled, only clients that have static IP leases will be served
Force	yes no; Default: yes	The DHCP force function ensures that the router will always start its DHCP server, even if there is another DHCP server already running in the router's network. By default, the routers DHCP server will not start when it is connected to a network segment that already has a working DHCP server
DHCP Options	DHCP options; Default: none	Additional options to be added to the DHCP server. For example with '26,1470' or 'option:mtu, 1470' you can assign an MTU value per DHCP.

4.2.5 WLAN

WR201 supports IEEE 802.11b/g/n/ac wireless technologies. 802.11ac is a hot new wireless technology that boasts faster and at longer ranges than 802.11n. 802.11ac works exclusively in the 5GHz band.

You can configure 2.4GHz and 5GHz Wi-Fi with different tabs. Both **Wireless** section of the Network tab can be used to manage and configure Wi-Fi Access Points (AP) and Wi-Fi Stations (STA).


You can select the Wi-Fi mode from the drop-down menu.

a) Wireless Access Point:

The page will display the overview of the Wireless Configuration. It displays all configured access points and stations. You can disable or enable the Wi-Fi interfaces, remove unwanted access points or stations or enter a configuration window of any Wi-Fi interface, where you can configure this interface more comprehensive. You can click the 'edit' button next to the Wi-Fi interface that you wish to configure to go to the configuration page.



You can configure a Wi-Fi channel according to the busyness of other channels. Use a channel with no other active Access Points and preferably one that has no active Access Point on two adjacent channels on each side as well or set the Channel field to auto and the router will pick the least busy channel in your location automatically. **SSID** is the name of your Wi-Fi interface. Wi-Fi client devices can scan the area for Wi-Fi networks they will see your network with this name. Hide SSID is used to make your Access Point invisible to other devices. To use a hidden Wi-Fi Access Point, first un-hide it, connect your device to it, then hide it again.

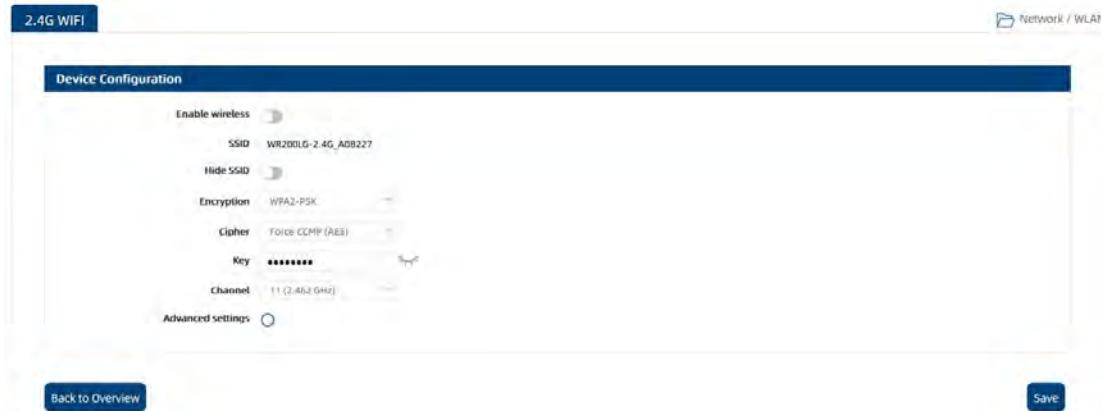

Field Name	Value	Description
Enable Wireless	yes no; Default: no	To enable or disable this AP
SSID	string; default: WR201-2.4G_(the last six digits of MAC)	Name of a Wi-Fi AP.
Hide SSID	yes no; Default: no	Toggles to make your Access Point invisible to other devices. To use a hidden Wi-Fi Access Point, first un-hide it, connect your device to it, then hide it again.

Encryption*	No encryption WPA2-PSK WPA-PSK/WPA2-PSK mixed mode; Default: No encryption	The type of Wi-Fi encryption used.
Cipher	Force CCMP (AES) Force TKIP and CCMP (AES); Default: Force CCMP (AES)	An algorithm for performing encryption or decryption
Key	string; default: none	Pre-shared key, a custom passphrase used for user authentication (at least 8 characters long).
Channel	1-13	Configure the channel of this Wi-Fi

You can click "Advanced settings" button to display the advanced parameters. It is used to configure the hardware operating settings of the Wi-Fi radio. The settings available in this section are mostly used to find the best Wi-Fi performance conditions.

Advanced settings

Mode	802.11g+n
HT mode	20MHz
Country&Region code	US - United States
Transmit power	100 %

Field Name	Value	Description
Mode	802.11b 802.11g 802.11g+n; Default: 802.11g+n	Wireless protocol used. Different modes provide different wireless standard support which directly impacts the radio's throughput performance
Country code	country code; Default: US	ISO/IEC 3166 alpha2 country codes as defined in ISO 3166-1 standard
Transmit power	100% 50% 25% 12%; Default: 100%	Wi-Fi signal power. Use lower power to reduce the router's CPU usage

b) Wireless Station:

WR201 can also work as a Wi-Fi client.

You can click 'Connect' button to connect with an existing access point. Click Scan button to rescan the surrounding area and try to connect to a new wireless access point.



After the scan finishes, you will see a list of Wi-Fi Access Points. Choose one according to your liking and click the Join button next to it, enter the password to connect to that access point.



4.2.6 Routing

4.2.6.1 Static

Static routes specify over which interface and gateway a certain host or network can be reached. You can configure your own custom routes in this page. You can configure multi static route in the router.



Field Name	Value	Description
Interface	WAN(Wired) WAN2(Mobile) WAN3	The zone where the target network resides

	(Wifi2.4G) WAN4 (Wifi5G); Default: WAN (Wired)	
Destination address*	ip; Default: 0.0.0.0	The address of the destination network
Netmask*	ip; Default: 255.255.255.255	A Mask that is applied to the Target to determine to what actual IP addresses the routing rule applies
Gateway	ip; Default: none	Defines where the router should send all the traffic that applies to the rule
Metric	integer; default: none	The Metric value is used as a sorting measure. If a packet about to be routed fits two rules, the one with the higher metric is applied.

4.2.6.2 Rip

The **Routing Information Protocol (RIP)** is a distance-vector routing protocols which employ the hop count as a routing metric. RIP prevents routing loops by implementing a limit on the number of hops allowed in a path from source to destination. The maximum number of hops allowed for RIP is 15, which limits the size of networks that RIP can support. A hop count over 16 is considered an infinite distance and the route is unreachable.



You can click 'Add' button to a new RIP interface and click 'Save' button to save the configuration.

Field Name	Value	Description
Enable	yes no; Default: no	Toggles RIP Protocol ON or OFF
Enable vty	yes no; Default: no	Toggles vty access from LAN ON or OFF
Version	2 1; Default: 2	Specifies the version of RIP
Neighbor	ip; Default: " "	Neighbour IP address
Enable	yes no; Default: no	Toggles RIP Interface ON or OFF
Interface	network interface; Default: LO	Network interface to be used with the RIP interface
Passive interface	yes no; Default: no	Sets the specified interface to passive mode. On passive mode interface, all receiving packets are processed as normal

		and rip does not send either multicast or unicast RIP packets
--	--	---

4.2.7 Firewall

4.2.7.1 NAT

Network Address Translation (NAT) is a process in which one or more local IP address is translated into one or more global IP address (SNAT) and vice versa in order to provide Internet access to the local hosts (DNAT). Also, it does the translation of port numbers i.e. masks the port number of the host with another port number, in the packet that will be routed to the destination. It then makes the corresponding entries of IP address and port number in the NAT table.

The router support both SNAT (Source NAT) and DNAT (Destination NAT). You can Click Add icon to add a new instance and can configure the setting in the corresponding section. You need to Click Save button to save all parameters you configured.



Field Name	Value	Description
OFF/ON	ON OFF	To turn on/off the section
Protocol	all tcp udp icmp tcp+udp Default: tcp	Select the protocol to translate the IP and Port.
source zone	LAN	The source zone of the section
Source IP	A.B.C.D	The initial IP address to be translated.
Source Port	1~65535	The initial port to be translated
To source zone	LAN WAN VPN default: WAN	The translated source zone
To source IP	A.B.C.D	The translated IP address
To source Port	1~65535	The translated port

Field Name	Value	Description
OFF/ON	ON OFF	To turn on/off the section
Protocol	all tcp udp icmp tcp+udp Default: udp	Select the protocol to translate the IP and Port.
Destination zone	WAN VPN Default:WAN	The destination zone of the section

Destination port	1~65535	The initial port to be translated
To destination zone	LAN	The translated destination zone
To destination IP	A.B.C.D	The translated IP address
To destination Port	1~65535	The translated port

4.2.7.2 Domain Filter


The domain filter function provides you with the possibility to set up lists of wanted or unwanted websites (Blacklists or Whitelists). If the mode is whitelist, the router allows every site included in the list and blocks everything else. If the mode is Blacklist, the router blocks every site included in the list and allows everything else.



Field Name	Value	Description
Enable	yes no; Default: no	Turns Site Blocking on or off.
Mode	Blacklist Whitelist; Default: Blacklist	Mode of operation. <ul style="list-style-type: none"> Whitelist - allow every site included in the list and block everything else. Blacklist - block every site included in the list and allow everything else.
Domain name	host; Default: none	Website name or IP address. The formats accepted are either <code>www.website.com</code> or <code>website.com</code> , i.e., the protocol and subdomains can be not specified. The rules will also be applicable for the subdomains of the specified site.

4.2.7.3 IP/MAC Filter

The domain filter function provides you an easy way to set up lists of blocking or unblocking client base on IP/MAC address. If the mode is whitelist, the router allows every IP/MAC address included in the list and blocks everything else. If the mode is Blacklist, the router blocks every IP/MAC address included in the list and allows everything else.

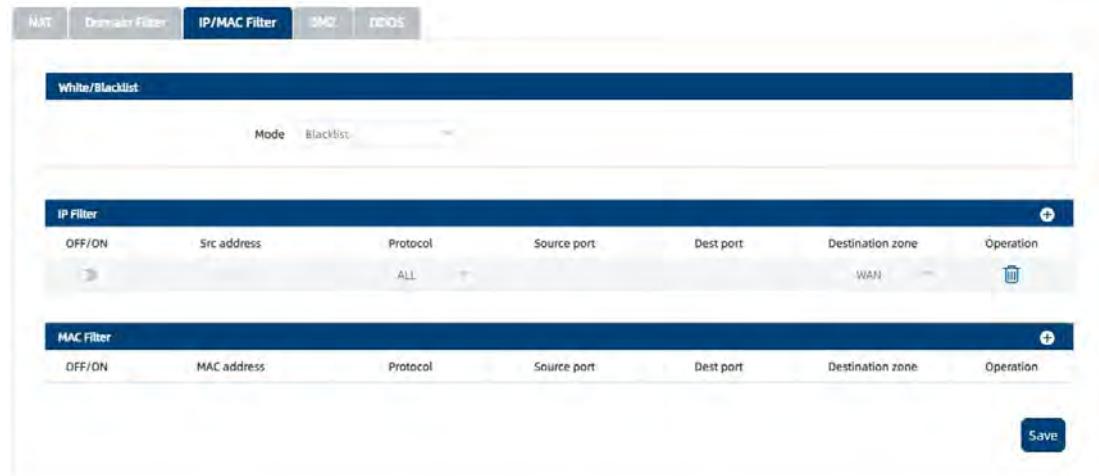

Field Name	Value	Description
Enable	yes no; Default: no	Turns Client Blocking on or off.
Mode	Blacklist Whitelist; Default: Blacklist	Mode of operation. <ul style="list-style-type: none"> Whitelist - allow every IP/MAC address included in the list and block everything else. Blacklist - block every IP/MAC address included in the list and allow everything else.
Src address	ip; Default: 0.0.0.0	The IP address of client to be configured.
MAC address	mac; Default: none	The MAC address of client to be configured.
Protocol	All TCP UDP TCP+UDP ICMP; Default: All	Specifies the protocol to blocked/unblock.
Source Port	integer [0..65535]; default: none	TCP/UDP port number. Note: traffic on the selected port will be automatically allowed in the router's firewall rules.
Dest Port	integer [0..65535]; default: none	TCP/UDP port number. Note: traffic on the selected port will be automatically allowed in the router's firewall rules.
Destination zone	WAN PPTP L2TP OPENVPN GRE	Interface to block/unblock this IP/MAC address

4.2.7.4 DMZ

A DMZ (Demilitarized Zone), is a perimeter network that enables organizations to protect their internal networks. It enables organizations to provide access to untrusted networks, such as the internet, while keeping private networks or local-area networks (LANs) secure.


By enabling DMZ for a specific internal host, you will expose that host and its services to the external network.



Field Name	Value	Description
OFF/ON	yes no; Default: no	Toggles DMZ On or Off
DMZ host	ip; Default: " "	Internal host to which the DMZ rule will be applied

4.2.7.5 DDOS

The DDOS Prevention page allows you to set up protections from various types of DDOS attacks. You will find information on all of these methods below.

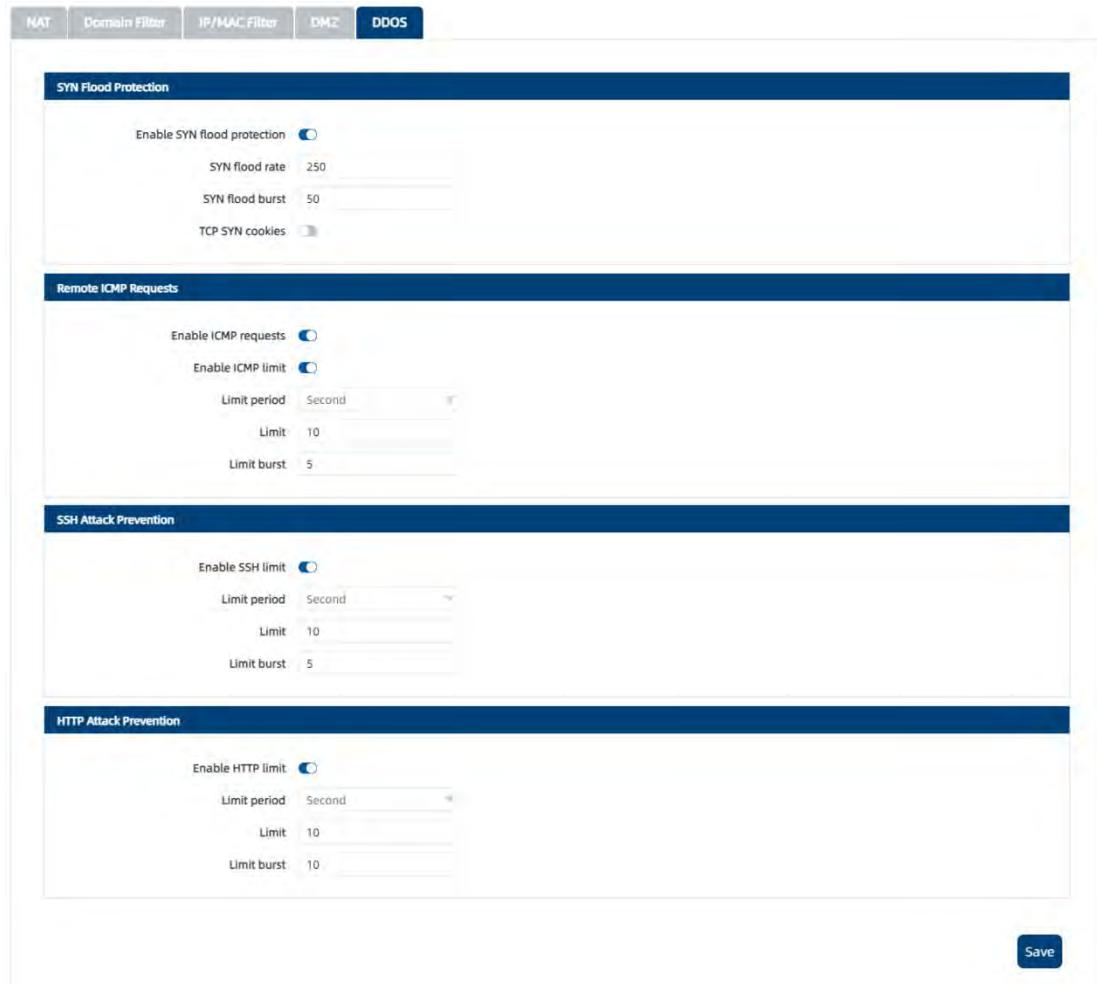

SYN Flood Protection:

SYN Flood Protection allows you to protect yourself from attacks that exploit part of the normal TCP three-way handshake to consume resources on the targeted server and render it

unresponsive. Essentially, with SYN flood DDOS, the offender sends TCP connection requests faster than the targeted machine can process them, causing network over-saturation.

Remote ICMP Requests:

Some attackers use ICMP echo request packets directed to IP broadcast addresses from remote locations to generate denial-of-service attacks. You can set up some custom restrictions to help protect your router from ICMP bursts.

SSH Attack Prevention:

Prevent SSH (allows a user to run commands on a machine's command prompt without them being physically present near the machine) attacks by limiting connections in a defined period.

HTTP Attack Prevention:

An HTTP attack sends a complete, legitimate HTTP header, which includes a 'Content-Length' field to specify the size of the message body to follow. However, the attacker then proceeds to send the actual message body at an extremely slow rate (e.g. 1 byte/100 seconds.) Due to the entire message being correct and complete, the target server will attempt to obey the 'Content-Length' field in the header, and wait for the entire body of the message to be transmitted, hence slowing it down.

4.3 Applications


This section shows you how to configure the service applications of the Router.

4.3.1 GPS (Available for Specific Models Only)

4.3.1.1 Map


The **Global Positioning System (GPS)** is a space-based radio navigation system.

The **Map** page displays the device's current coordinates and position on the map. To have the device's location on the map, make sure to attach the GPS antenna on the router and place it outside, and GPS is enabled in the general page.

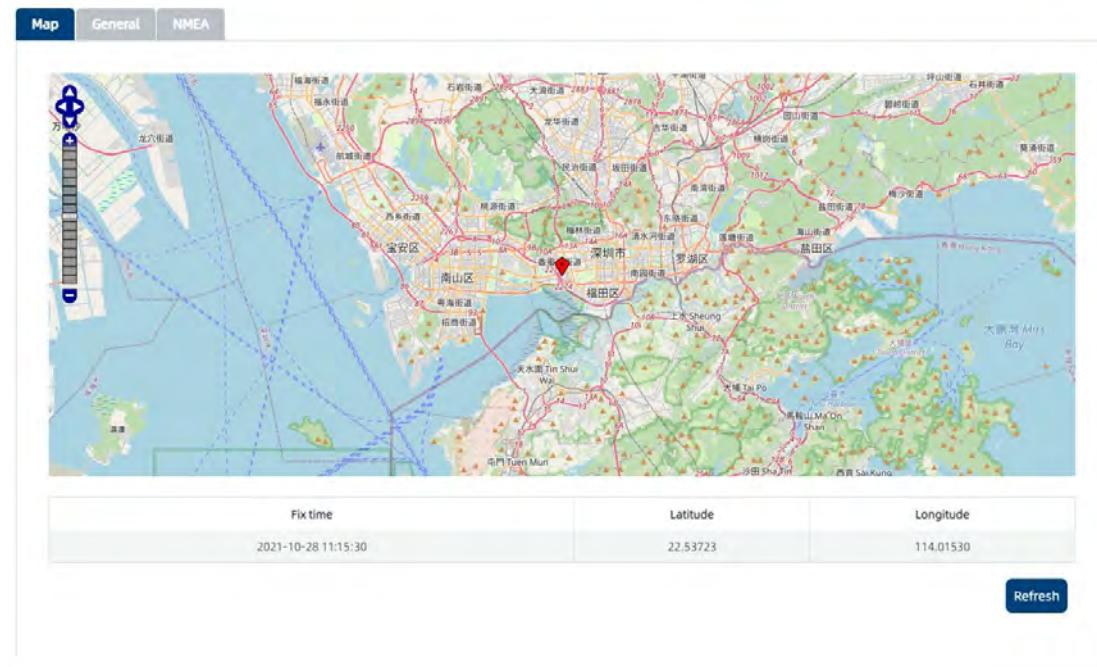


4.3.1.2 General

The **General** section is used to enable the GPS service based on different types of satellite. Once you turn on GPS, you can check the Map page in order to see if the router has obtained a GPS fix. Make sure you attach the GPS antenna on the router and place it outside where it can get GPS signal, otherwise, the router may not be able to obtain a GPS fix.

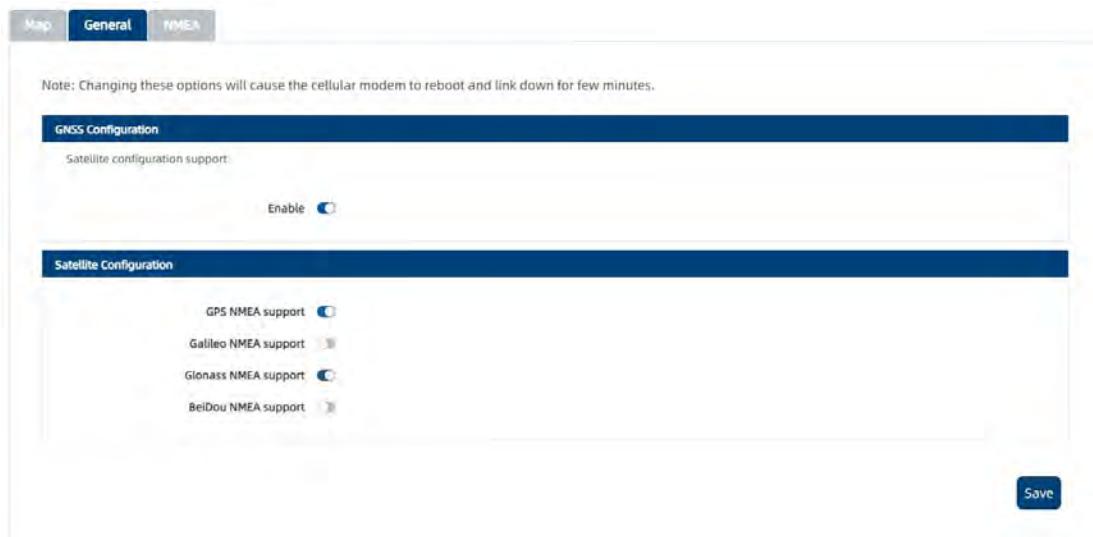

4.3.1.3 NMEA

The **NMEA forwarding** section is used to configure and enable NMEA forwarding to a server filled in the hostname. NMEA is a standard data format supported by all GPS manufacturers, much like ASCII is the standard for digital computer characters in the computer world.

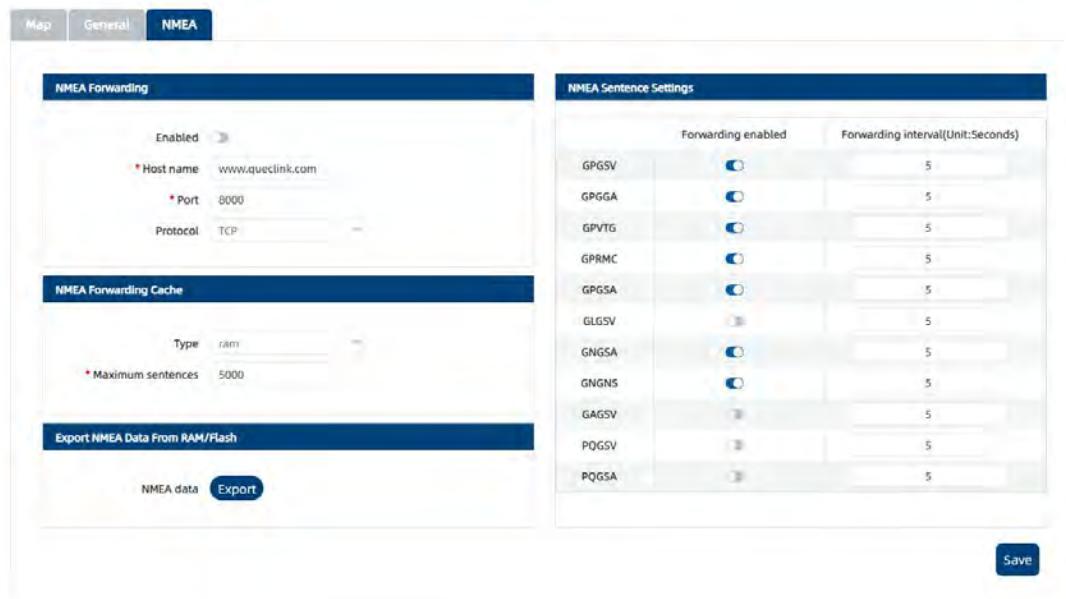

Copyright © 2021 by Queclink Wireless Solutions.

Field Name	Value	Description
Host name	ip host;	IP address or hostname of the server to which

	default: 192.168.1.5	NMEA data will be forwarded
Port	integer [0..65535]; default: 8500	Port number of the server to which NMEA data will be forwarded
Protocol	TCP UDP; default: TCP	Protocol that will be used to send NMEA data

The router **caches NMEA forwarding** information if NMEA forwarding is enabled. This section is used to select the memory type where the cache will be stored and the maximum amount of data that will be saved.


The **NMEA sentence settings** section provides the possibility to configure which NMEA sentences will be forwarded or collected and at specify period.

4.3.2 VPN

A virtual private network (VPN), is an encrypted connection over the Internet from a device to a network. The encrypted connection helps ensure that sensitive data is safely transmitted. It prevents unauthorized people from eavesdropping on the traffic and allows the user to conduct work remotely. WR201 router provides multiple VPN functions, which can be applied in different industries and application.


4.3.2.1 PPTP

Point-to-Point Tunneling Protocol (PPTP) is a type of VPN protocol that uses a TCP control channel and a Generic Routing Encapsulation tunnel to encapsulate PPP packets.

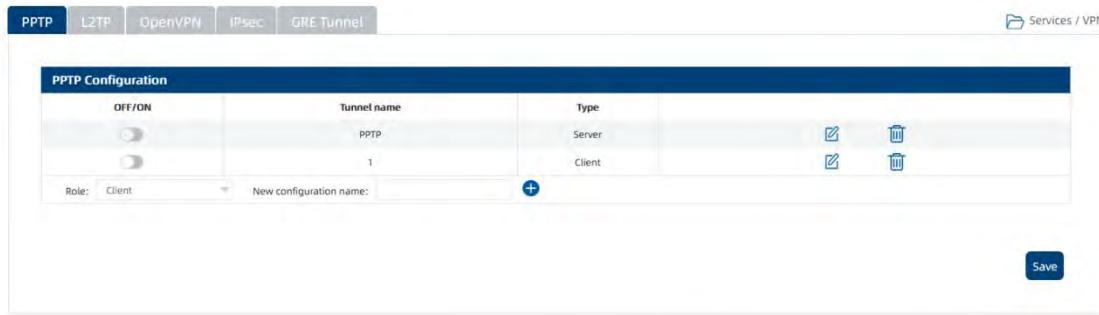

PPTP client:

A **PPTP client** is an entity that initiates a connection to a PPTP server. Select *Role as Client*, enter a custom name and click the Add icon to create a new client instance, then click edit icon to go to PPTP client configuration page. You can click edit button on the right to edit an existing PPTP instance.

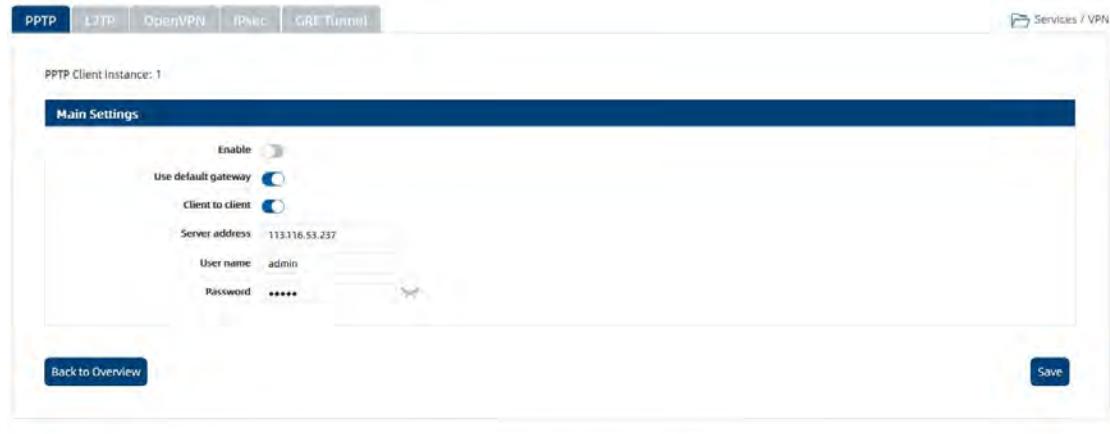


Refer to the figure and table below for information on the PPTP client's configuration fields:

Field Name	Value	Description
Enable	yes no; default: no	Turns the PPTP instance on or off.
Use default gateway	yes no; default: no	When turned on, this connection will become the router's default route. This means that all traffic directed to the Internet will go through the PPTP server and the server's IP address will be seen as this device's source IP to other hosts on the Internet. Note: this can only be used when WAN Failover is turned off.
Client to client	yes no; default: no	Adds a route that makes other PPTP clients accessible within the PPTP network.
Server address	ip host; default: none	IP address or hostname of a PPTP server.
User name	string; default: none	Username used for authentication to the PPTP server.
Password	string; default: none	Password used for authentication to the PPTP server.

PPTP server:

An **PPTP server** is an entity that waits for incoming connections from PPTP clients. To create a new server instance, select Role as Server, enter a custom name and click the Add icon to create a new server instance, then click edit icon go to PPTP server configuration page. You can click edit button to edit an existing PPTP instance. Only one PPTP server instance is allowed to be added. A server needs to have a public IP address in order to be available from the public network (the Internet).

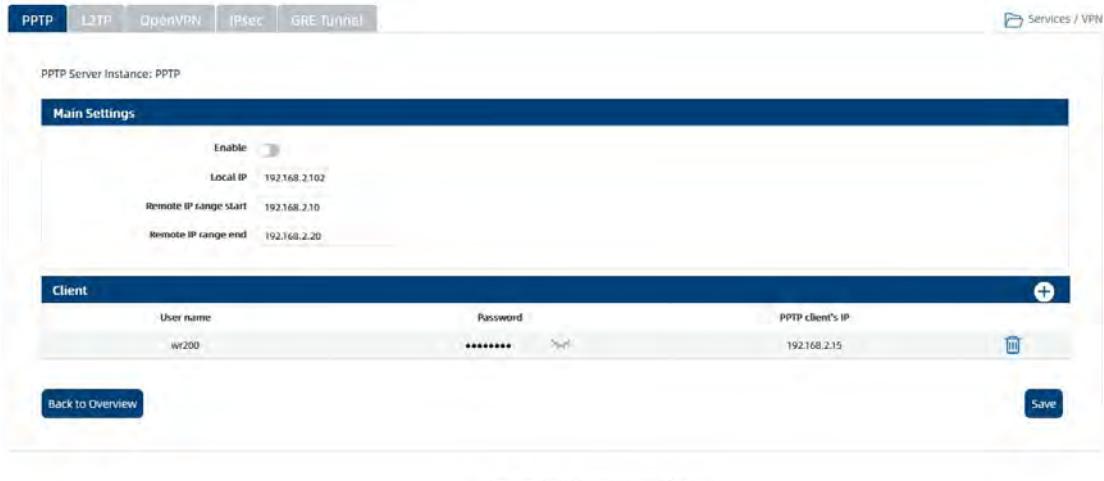


Refer to the figure and table below for information on the PPTP client's configuration fields:

Field Name	Value	Description
Enable	yes no; default: no	Turns the PPTP instance on or off.
Local IP	ip; default: 192.168.0.1	IP address of this PPTP network interface.
Remote IP range start	ip; default: 192.168.0.20	PPTP IP address leases will begin from the address specified in this field.
Remote IP range end	ip; default: 192.168.0.30	PPTP IP address leases will end with the address specified in this field.
User name	string; default: WR201	Username used for authentication to this PPTP server.
Password	string; default: queclink	Password used for authentication to this PPTP server.
PPTP Client's IP	ip; default: none	Assigns an IP address to the client that uses the adjacent authentication info. This field is optional and if left empty the client will simply receive an IP address from the IP pool defined above.

4.3.2.2 L2TP

Layer 2 Tunneling Protocol (L2TP) is a tunneling protocol used to support virtual private networks (VPNs). It can work as client or server mode.

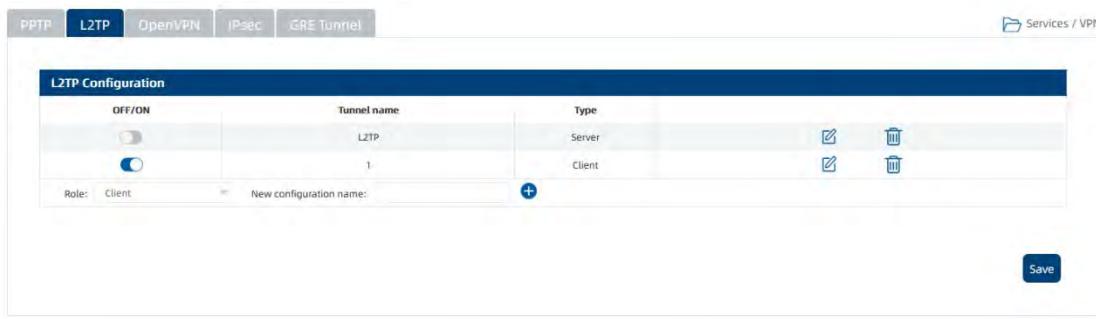

L2TP client:

An L2TP client is an entity that initiates a connection to an L2TP server. To create a new client instance, select Role as Client, enter a custom name and click the Add icon to create a new instance, then click Edit icon to go to L2TP client configuration page. You can click Edit icon on the right to edit an existing L2TP instance.




Refer to the figure and table below for information on the L2TP client's configuration fields:

Field Name	Value	Description
Enable	yes no; default: no	Turns the L2TP instance on or off.
Server	ip host; default: none	IP address or hostname of an L2TP server.
Username	string; default: none	Username used for authentication to the L2TP server.
Password	string; default: none	Password used for authentication to the L2TP server.
Default route	yes no; default: no	When turned on, this connection will become the router's default route. This means that all traffic directed to the Internet will go through the L2TP server and the server's IP address will be seen as this device's source IP to other hosts on the Internet. Note: this can only be used when WAN Failover is turned off.

L2TP server:

An **L2TP server** is an entity that waits for incoming connections from L2TP clients. To create a new server instance, select Role as Server, enter a custom name and click the Add icon to go to L2TP server configuration page. You can click edit icon to edit an existing L2TP instance. Only one L2TP server instance is allowed to be added. A server needs to have a public IP address in order to be available from the public network (the Internet).

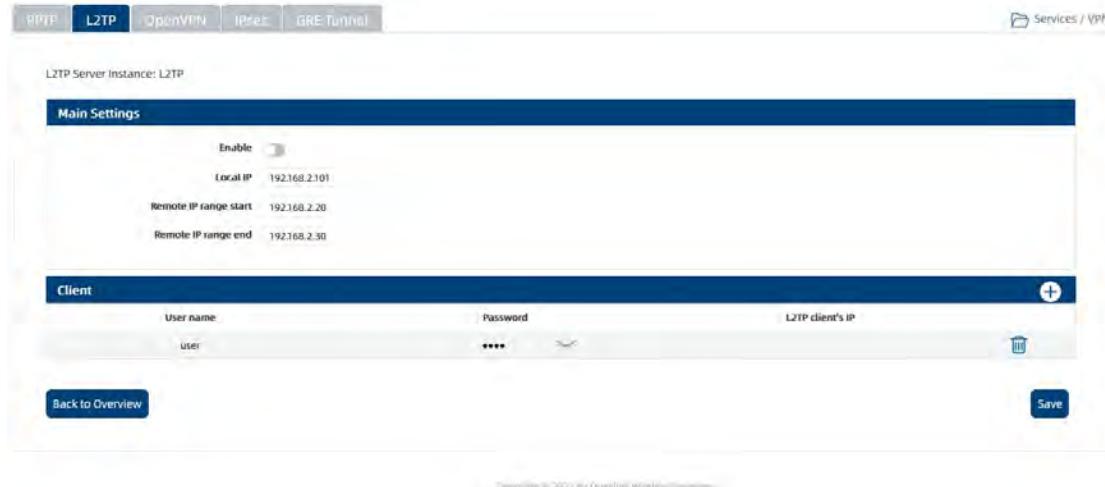


Refer to the figure and table below for information on the L2TP client's configuration fields:

Field Name	Value	Description
Enable	yes no; default: no	Turns the L2TP instance on or off.
Local IP	ip; default: 192.168.0.1	IP address of this L2TP network interface.
Remote IP range begin	ip; default: 192.168.0.20	L2TP IP address leases will begin from the address specified in this field.
Remote IP range end	ip; default: 192.168.0.30	L2TP IP address leases will end with the address specified in this field.
User name	string; default: user	Username used for authentication to this L2TP server.
Password	string; default: pass	Password used for authentication to this L2TP server.
L2TP Client's IP	ip; default: none	Assigns an IP address to the client that uses the adjacent authentication info. This field is optional and if left empty the client will simply receive an IP address from the IP pool defined above.

4.3.2.3 OPENVPN

OpenVPN is an open-source software application that implements virtual private network (VPN) techniques for creating secure point-to-point or site-to-site connections in routed or bridged configurations and remote access facilities. It is often regarded as being the most universal VPN

protocol because of its flexibility, support of SSL/TLS security, multiple encryption methods, many networking features and compatibility with most OS platforms.

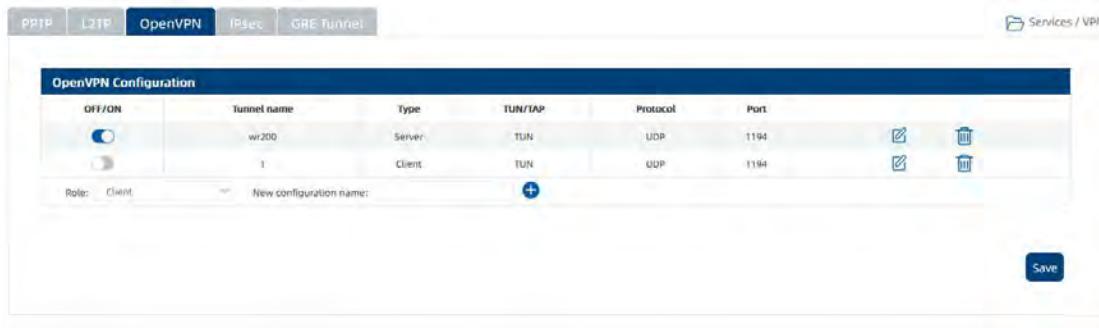


OpenVPN Configuration

OFF/ON	Tunnel name	Type	TUN/TAP	Protocol	Port
<input checked="" type="checkbox"/>	wr200	Server	TUN	UDP	1194
<input type="checkbox"/>	1	Client	TUN	UDP	1194

Role: Client New configuration name:

OpenVPN client:

An OpenVPN client is an entity that initiates a connection to an OpenVPN server. To create a new client instance, select Role as Client, enter a custom name and click the Add icon to go to OpenVPN client configuration page. You can click edit icon on the right to edit an existing OpenVPN instance. A maximum of six OpenVPN client instances are allowed to be added.

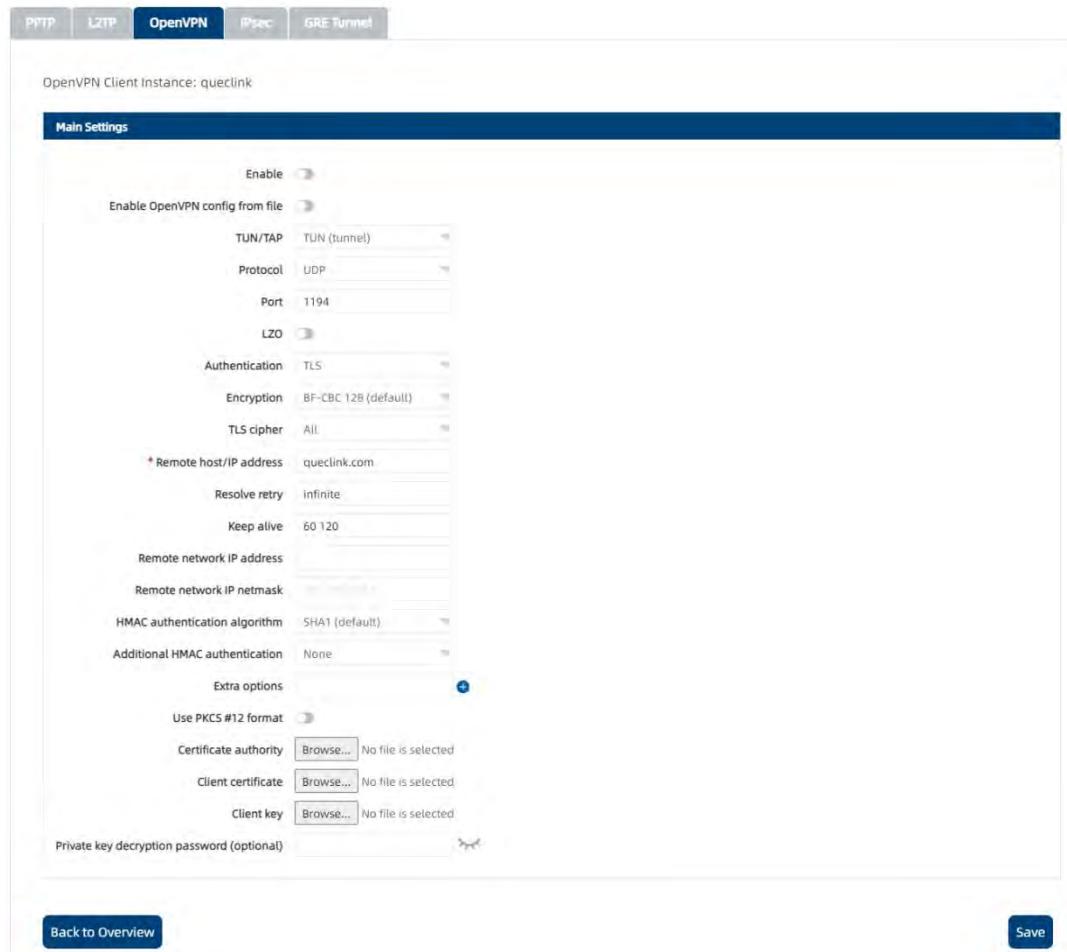

OpenVPN Client Instance: quetlink

Main Settings

Enable	<input checked="" type="checkbox"/>
Enable OpenVPN config from file	<input type="checkbox"/>
TUN/TAP	TUN (tunnel)
Protocol	UDP
Port	1194
LZO	<input type="checkbox"/>
Authentication	TLS
Encryption	BF-CBC 12B (default)
TLS cipher	All
* Remote host/IP address	quetlink.com
Resolve retry	infinite
Keep alive	60 120
Remote network IP address	<input type="text"/>
Remote network IP netmask	<input type="text"/>
HMAC authentication algorithm	SHA1 (default)
Additional HMAC authentication	None
Extra options	<input type="button" value="+"/>
Use PKCS #12 format	<input type="checkbox"/>
Certificate authority	<input type="button" value="Browse..."/> No file is selected
Client certificate	<input type="button" value="Browse..."/> No file is selected
Client key	<input type="button" value="Browse..."/> No file is selected
Private key decryption password (optional)	<input type="text"/>

Field Name	Value	Description
Enable	yes no; default: no	Turns the OpenVPN instance on or off.
Enable OpenVPN config from file	yes no; default: no	Enables custom OpenVPN configuration from file.

TUN/TAP	TUN (tunnel) TAP (bridged); default: TUN (tunnel)	<p>Virtual network device type.</p> <p>TUN - a virtual point-to-point IP link which operates at the network layer (OSI layer 3), used when routing is required.</p> <p>TAP - a virtual Ethernet adapter (switch), operates at the data link layer (OSI layer 2), used when bridging is required.</p>
Protocol	UDP TCP; default: UDP	<p>Transfer protocol used for the OpenVPN connection.</p> <p>Transmission Control Protocol (TCP) - most commonly used protocol in the Internet Protocol (IP) suite. It ensures the recipient will receive packets in the order they were sent by numbering, analysing response messages, checking for errors and resending them if an issue occurs. It should be used when reliability is crucial (for example, in file transfer).</p> <p>User Datagram Protocol (UDP) - packets are sent to the recipient without error-checking or back-and-forth quality control, meaning that when packets are lost, they are gone forever. This makes it less reliable but faster than TCP; therefore, it should be used when transfer speed is crucial (for example, in video streaming, live calls).</p>
Port	integer [0..65535]; default: 1194	<p>TCP/UDP port number used for the connection. Make sure it matches the port number specified on the server side.</p> <p>NOTE: traffic on the selected port will be automatically allowed in the router's firewall rules.</p>
LZO	yes no; default: no	Turns LZO data compression on or off.
Authentication	TLS Static Key Password TLS/Password; default: TLS	<p>Authentication mode, used to secure data sessions.</p> <p>Static key is a secret key used for server-client authentication.</p> <p>TLS authentication mode uses X.509 type certificates:</p> <p>Certificate Authority (CA)</p> <p>Client certificate</p> <p>Client key</p> <p>All mentioned certificates can be generated using OpenVPN or Open SSL utilities on any</p>


		<p>type of host machine. One of the most popular utilities used for this purpose is called Easy-RSA.</p> <p>Password is a simple username/password based authentication where the owner of the OpenVPN server provides the login data.</p> <p>TLS/Password uses both TLS and username/password authentication.</p>
Encryption	DES-CBC 64 RC2-CBC 128 DES-EDE-CBC 128 DES-EDE3-CBC 192 DESX-CBC 192 RC2-40-CBC 40 CAST5-CBC 128 RC2-64-CBC 64 AES-128-CFB 128 AES-128-CFB1 128 AES-128-CFB8 128 AES-128-OFB 128 AES-128-CBC 128 AES-128-GCM 128 AES-192-CFB 192 AES-192-CFB1 192 AES-192-CFB8 192 AES-192-OFB 192 AES-192-CBC 192 AES-192-GCM 192 AES-256-CFB 256 AES-256-CFB1 256 AES-256-CFB8 256 AES-256-OFB 256 AES-256-CBC 256 AES-256-GCM 256 none ; default: BF-CBC 128	Algorithm used for packet encryption.
TLS: TLS cipher	All DHE+RSA Custom; default: All	Packet encryption algorithm cipher.
TLS: Allowed TLS ciphers	All DHE+RSA Custom; default: All	A list of TLS ciphers accepted for this connection.
Remote host/IP address	ip; default: none	IP address or hostname of an OpenVPN server.
Resolve retry	integer infinite; default: infinite	In case server hostname resolve fails, this field indicates the amount of time (in seconds) to retry the resolve. Specify infinite

		to retry indefinitely.
Keep alive	two integers separated by a space; default: none	Defines two time intervals: the first is used to periodically send ICMP requests to the OpenVPN server, the second one defines a time window, which is used to restart the OpenVPN service if no ICMP response is received during the specified time slice. When this value is specified on the OpenVPN server, it overrides the 'keep alive' values set on client instances. Example: 10 120
Static key: Local tunnel endpoint IP	ip; default: none	IP address of the local OpenVPN network interface.
Static key: Remote tunnel endpoint IP	ip; default: none	IP address of the remote OpenVPN network (server) interface.
Remote network IP address	ip; default: none	LAN IP address of the remote network (server).
Remote network IP netmask	netmask; default: none	LAN IP subnet mask of the remote network (server).
Password: User name	string; default: none	Username used for authentication to the OpenVPN server.
Password: Password	string; default: none	Password used for authentication to the OpenVPN server.
Extra options	string; default: none	Extra OpenVPN options to be used by the OpenVPN instance.
Use PKCS #12 format	yes no; default: no	Use PKCS #12 archive file format to bundle all the members of a chain of trust.
PKCS #12 passphrase	string; default: none	Passphrase to decrypt PKCS #12 certificates.
PKCS #12 certificate chain	string; default: none	Uploads PKCS #12 certificate chain file.
TLS/Password: HMAC authentication algorithm	none SHA1 SHA256 SHA384 SHA512; default: SHA1	HMAC authentication algorithm type.
TLS/Password: Additional HMAC authentication	none Authentication only (tls-auth) Authentication and encryption (tls-crypt); default: none	An additional layer of HMAC authentication on top of the TLS control channel to protect against DoS attacks.
TLS/Password: HMAC authentication key	.key file; default: none	Uploads an HMAC authentication key file.
TLS/Password:	0 1 none; default: 1	The value of the key direction parameter

HMAC key direction		should be complementary on either side (client and server) of the connection. If one side uses 0, the other side should use 1, or both sides should omit the parameter altogether.
TLS/Password: Certificate authority	.ca file; default: none	Certificate authority (CA) is an entity that issues digital certificates. A digital certificate certifies the ownership of a public key by the named subject of the certificate.
TLS: Client certificate	.crt file; default: none	Client certificate is a type of digital certificate that is used by client systems to make authenticated requests to a remote server. Client certificates play a key role in many mutual authentication designs, providing strong assurances of a requester's identity.
TLS: Client key	.key file; default: none	Authenticates the client to the server and establishes precisely who they are.
TLS: Private key decryption password (optional)	string; default: none	A password used to decrypt the server's private key. Use only if server's .key file is encrypted with a password.
Static key: Static pre-shared key	.key file; default: none	Uploads a secret key file used for server-client authentication.

OpenVPN server:

An **OPENVPN server** is an entity that waits for incoming connections from OpenVPN clients. To create a new server instance, select Role as Server, enter a custom name and click the 'Add New' button to go to OpenVPN server configuration page. You can click edit button to edit an existing OpenVPN instance. Only one OpenVPN server instance is allowed to be added.

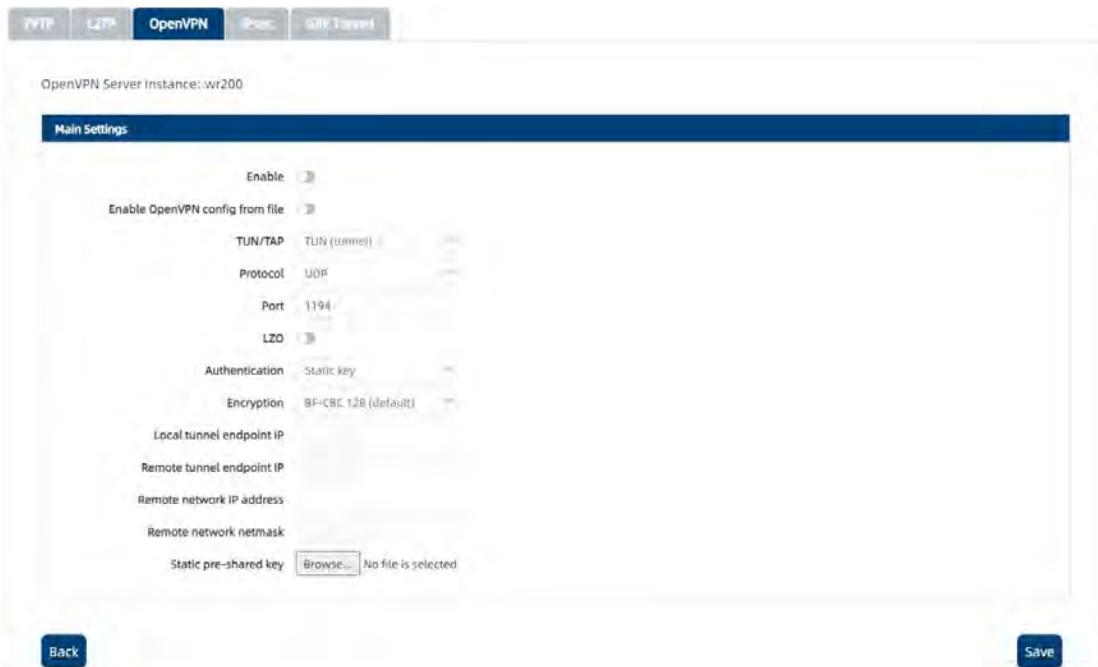

OpenVPN Server Instance: wr200

Main Settings

Enable

Enable OpenVPN config from file

TUN/TAP TUN (tunnel)

Protocol UDP

Port 1194

LZO

Authentication Static key

Encryption BF-CBC 128 (default)

Local tunnel endpoint IP

Remote tunnel endpoint IP

Remote network IP address

Remote network netmask

Static pre-shared key Browse... No file is selected

Back Save

Field Name	Value	Description
Enable	yes no; default: no	Turns the OpenVPN instance on or off.
Enable OpenVPN config from file	yes no; default: no	Enables custom OpenVPN configuration from file.
TUN/TAP	TUN (tunnel) TAP (bridged); default: TUN (tunnel)	<p>Virtual network device type.</p> <p>TUN - a virtual point-to-point IP link which operates at the network layer (OSI layer 3), used when routing is required.</p> <p>TAP - a virtual Ethernet adapter (switch), operates at the data link layer (OSI layer 2), used when bridging is required.</p>
Protocol	UDP TCP; default: UDP	<p>Transfer protocol used for the connection.</p> <p>Transmission Control Protocol (TCP) - most commonly used protocol in the Internet Protocol (IP) suite. It ensures the recipient will receive packets in the order they were sent by numbering, analyzing response messages, checking for errors and resending them if an issue occurs. It should be used when reliability is crucial (for example, file transfer).</p> <p>User Datagram Protocol (UDP) - packets are sent to the recipient without error-checking or back-and-forth quality control, meaning that when packets are lost, they are gone forever. This makes it less reliable but faster than TCP; therefore, it should be used when</p>

		transfer speed is crucial (for example, video streaming, live calls).
Port	integer [0..65535]; default: 1194	TCP/UDP port number used for the connection. Make sure it matches the port number specified on the server side. NOTE: traffic on the selected port will be automatically allowed in the router's firewall rules.
LZO	yes no; default: no	Turns LZO data compression on or off.
Authentication	TLS Static Key TLS/Password; default: TLS	Authentication mode, used to secure data sessions. Static key is a secret key used for server-client authentication. TLS authentication mode uses X.509 type certificates: Certificate Authority (CA) Client certificate Client key All mentioned certificates can be generated using OpenVPN or Open SSL utilities on any type of host machine. One of the most popular utilities used for this purpose is called Easy-RSA. TLS/Password uses both TLS and username/password authentication.
Encryption	DES-CBC 64 RC2-CBC 128 DES-EDE-CBC 128 DES-EDE3-CBC 192 DESX-CBC 192 RC2-40-CBC 40 CAST5-CBC 128 RC2-64-CBC 64 AES-128-CFB 128 AES-128-CFB1 128 AES-128-CFB8 128 AES-128-OFB 128 AES-128-CBC 128 AES-128-GCM 128 AES-192-CFB 192 AES-192-CFB1 192 AES-192-CFB8 192 AES-192-OFB 192 AES-192-CBC 192 AES-192-GCM	Algorithm used for packet encryption.

	192 AES-256-CFB 256 AES-256-CFB1 256 AES-256-CFB8 256 AES-256-OFB 256 AES-256-CBC 256 AES-256-GCM 256 none ; default: BF-CBC 128	
Static key: Local tunnel endpoint IP	ip; default: none	IP address of the local OpenVPN network interface.
Static key: Remote tunnel endpoint IP	ip; default: none	IP address of the remote OpenVPN network (client) interface.
Static key: Remote network IP address	ip; default: none	LAN IP address of the remote network (client).
Static key: Remote network IP netmask	netmask; default: none	LAN IP subnet mask of the remote network (client).
TLS/TLS/Password: TLS cipher	All DHE+RSA Custom ; default: All	Packet encryption algorithm cipher.
TLS/Password: Allowed TLS ciphers	All DHE+RSA Custom ; default: All	A list of TLS ciphers accepted for this connection.
TLS/TLS/Password: Client to client	yes no; default: no	Allows OpenVPN clients to communicate with each other on the VPN network.
TLS/TLS/Password: Keep alive	two integers separated by a space; default: none	Defines two time intervals: the first is used to periodically send ICMP requests to the OpenVPN server, the second one defines a time window, which is used to restart the OpenVPN service if no ICMP response is received during the specified time slice. When this value is specified on the OpenVPN server, it overrides the 'keep alive' values set on client instances. Example: 10 120
TLS/TLS/Password: Virtual network IP address	ip; default: none	IP address of the OpenVPN network.
TLS/TLS/Password: Virtual network netmask	netmask; default: none	Subnet mask of the OpenVPN network.
TLS/TLS/Password: Push option	OpenVPN options; default: none	Push options are a way to "push" routes and other additional OpenVPN options to connecting clients.
TLS/TLS/Password: Allow duplicate certificates	yes no; default: no	When enabled allows multiple clients to connect using the same certificates.

Use PKCS #12 format	yes no; default: no	Use PKCS #12 archive file format to bundle all the members of a chain of trust.
PKCS #12 passphrase	string; default: none	Passphrase to decrypt PKCS #12 certificates.
PKCS #12 certificate chain	string; default: none	Uploads PKCS #12 certificate chain file.
TLS/Password: User name	string; default: none	Username used for authentication to this OpenVPN server.
TLS/Password: Password	string; default: none	Password used for authentication to this OpenVPN server.
Static key: Static pre-shared key	.key file; default: none	Uploads a secret key file used for server-client authentication.
TLS/TLS/Password: Certificate authority	.ca file; default: none	Certificate authority is an entity that issues digital certificates. A digital certificate certifies the ownership of a public key by the named subject of the certificate.
TLS/TLS/Password: Server certificate	.crt file; default: none	A type of digital certificate that is used to identify the OpenVPN server.
TLS/TLS/Password: Server key	.key file; default: none	Authenticates clients to the server.
TLS/TLS/Password: Diffie Hellman parameters	.pem file; default: none	DH parameters define how OpenSSL performs the Diffie-Hellman (DH) key-exchange.
TLS/TLS/Password: CRL file (optional)	.pem file .crl file; default: none	A certificate revocation list (CRL) file is a list of certificates that have been revoked by the certificate authority (CA). It indicates which certificates are no longer accepted by the CA and therefore cannot be authenticated to the server.

A server needs to have a public IP address in order to be available from the public network (the Internet).

4.3.2.4 IPSec

To create a new IPsec instance, go to the Services → VPN → IPsec section, enter a custom name and click Add icon.

IPsec Configuration

Enable	<input checked="" type="checkbox"/>
IKE version	IKEv1
Mode	Main
Type	Tunnel
My identifier type	FQDN
On startup	Start
My identifier	
Local IP address/Subnet mask	
Left firewall	<input checked="" type="checkbox"/>
Force encapsulation	<input type="checkbox"/>
Dead peer detection	<input type="checkbox"/>
Remote VPN endpoint	
Remote IP address/Subnet mask	
Right firewall	<input checked="" type="checkbox"/>
Enable keep alive	<input type="checkbox"/>
Host	
Ping period	
Allow webUI access	<input type="checkbox"/>
Custom options	

Phase 1

IKE encryption algorithm	3DES
IKE authentication	SHA1
IKE DH group	MOOTP1536
* IKE lifetime	28800

Phase 2

ESP encryption algorithm	3DES
ESP hash algorithm	SHA1
ESP PFS group	MOOTP1536
* ESP key lifetime	3600

[Back to Overview](#) [Save](#)

Field Name	Value	Description
Enable	yes no; default: no	Turns the IPsec instance on or off.
IKE version	IKEv1 IKEv2; default: IKEv1	<p>Internet Key Exchange (IKE) version used for key exchange.</p> <p>IKEv1 - more commonly used but contains known issues, for example, dealing with NAT.</p> <p>IKEv2 - updated version with increased and improved capabilities, such as integrated NAT support, supported multihosting, deprecated exchange modes (does not use main or aggressive mode; only 4 messages required to establish a connection).</p>

Mode	Main Aggressive; default: Main	Internet Security and Key Management Protocol (ISAKMP) phase 1 exchange mode. Main - performs three two-way exchanges between the initiator and the receiver (a total of 9 messages). Aggressive - performs fewer exchanges than main mode (a total of 6 messages) by storing most data into the first exchange. In aggressive mode, the information is exchanged before there is a secure channel, making it less secure but faster than main mode.
Type	Tunnel Transport; default: Tunnel	Type of connection. Tunnel - protects internal routing information by encapsulating the entire IP packet (IP header and payload); commonly used in site-to-site VPN connections; supports NAT traversal. Transport - only encapsulates IP payload data; used in client-to-site VPN connections; does not support NAT traversal; usually implemented with other tunneling protocols (for example, L2TP).
On startup	Ignore Add Route Start; default: Start	Defines how the instance should act on router startup. Ignore - does not start the tunnel. Add - loads a connection without starting it. Route - starts the tunnel only if there is traffic. Start - starts the tunnel on router startup.
My identifier	ip string; default: none	Defines how the user (IPsec instance) will be identified during authentication.
Tunnel: Local IP address/Subnet mask	ip/netmask default: none	Local IP address and subnet mask used to determine which part of the network can be accessed in the VPN network. Netmask range [0..32]. If left empty, IP address will be selected automatically.
Left firewall	off on; default: on	Adds necessary firewall rules to allow traffic of this IPsec instance on this router.
Force encapsulation	yes no; default: no	Forces UDP encapsulation for ESP packets even if a "no NAT" situation is detected.
Dead Peer Detection	yes no; default: no	A function used during Internet Key Exchange (IKE) to detect a "dead" peer. It used to reduce traffic by minimizing the

		number of messages when the opposite peer is unavailable and as failover mechanism.
Dead Peer Detection: Delay (sec)	integer; default: none	The frequency of checking whether a peer is still available or not.
Dead Peer Detection: Timeout (sec)	integer; default: none	Time limit after which the IPsec instance will stop checking the availability of a peer and determine it to be "dead" if no response is received.
Remote VPN endpoint	host ip; default: none	IP address or hostname of the remote IPsec instance.
Remote identifier	ip string; default: none	Defines remote IPsec instance identification.
Tunnel: Remote IP address/subnet mask	ip/netmask; default: none	Remote network IP address and subnet mask used to determine which part of the network can be accessed in the VPN network. Netmask range [0..32]. This value must differ from the device's LAN IP.
Right firewall	yes no; default: yes	Adds necessary firewall rules to allow traffic from the opposite IPsec instance on this router.
Transport: Use with DMVPN	yes no; default: no	Adds several necessary options to make DMVPN work.
Passthrough networks	None LAN Wired Wi-Fi Mobile custom; default: none	Select networks which should be passthrough and excluded from routing through tunnel
Allow WebUI access	yes no; default: no	Allows WebUI access for hosts in the VPN network.
Custom options	ipsec options; default: none	Provides the possibility to further customize the connection by adding extra IPsec options.

IKE (Internet Key Exchange) is a protocol used to set up security associations (SAs) for the IPsec connection. This process is required before the IPsec tunnel can be established. It is done in two phases:

Field Name	Value	Description
Encryption algorithm	DES 3DES AES128 AES192 AES256; default: 3DES	Algorithm used for data encryption.
Authentication /Hash algorithm	MD5 SHA1 SHA256 SHA384 SHA512; default: SHA1	Algorithm used for exchanging authentication and hash information.
DH group/PFS group	MODP768 MODP1024 MODP1536 MODP2048 MODP	Diffie-Hellman (DH) group used in the key exchange process. Higher group numbers

	3072 MODP4096; default: MODP1536	provide more security, but take longer and use more resources to compute the key.
Lifetime	integer; default: 8 hours	Defines a time period after which the phase will re-initiate its exchange of information.


4.3.2.5 GRE Tunnel

Generic Routing Encapsulation (GRE) is a tunneling protocol used to establish point-to-point connections between remote private networks. GRE tunnels encapsulate data packets in order to route other protocols over IP networks.

To create a new GRE Tunnel instance, enter a custom name and click the 'Add' icon to go the configuration page.



You can click edit button on the right to edit an existing GRE instance.

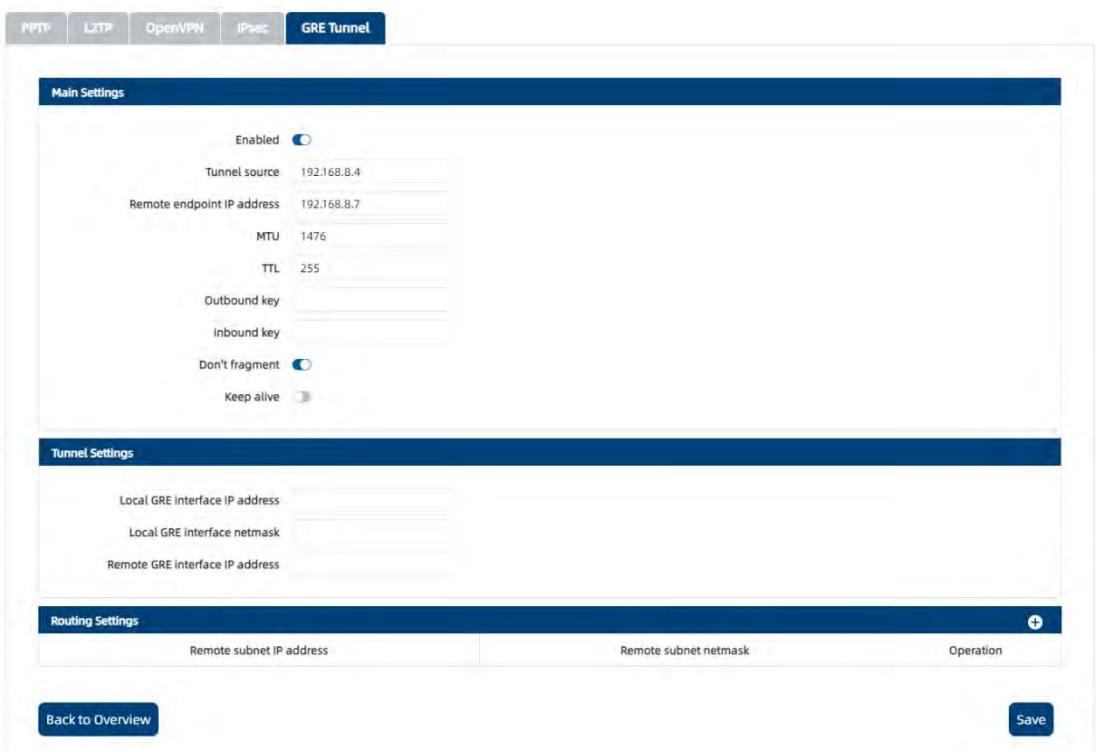

Field Name	Value	Description
Enabled	yes no; default: no	Turns the GRE Tunnel instance on or off.
Tunnel source	network interface;	Network interface used to establish the GRE

	default: none	Tunnel.
Remote endpoint IP address	ip; default: none	External IP address of another GRE instance used to establish the initial connection between peers.
MTU	integer; default: 1476	Sets the maximum transmission unit (MTU) size. It is the largest size of a protocol data unit (PDU) that can be transmitted in a single network layer transaction.
TTL	integer [0..255]; default: 255	Sets a custom TTL (Time to Live) value for encapsulated packets. TTL is a field in the IP packet header which is initially set by the sender and decreased by 1 on each hop. When it reaches 0 it is dropped and the last host to receive the packet sends an ICMP "Time Exceeded" message back to the source.
Outbound key	integer [0..65535]; default: none	A key used to identify outgoing packets. A This value should match the "Inbound key" value set on the opposite GRE instance or both key values should be omitted on both sides.
Inbound key	integer [0..65535]; default: none	A key used to identify incoming packets. This value should match the "Outbound key" value set on the opposite GRE instance or both key values should be omitted on both sides.
Don't fragment	yes no; default: yes	When unchecked, sets the nopmtudisc option for tunnel. Cannot be used together with the TTL option.
Keep alive	yes no; default: no	Turns "keep alive" on or off. The "keep alive" feature sends packets to the remote instance in order to determine the health of the connection. If no response is received, the device will attempt to re-establish the tunnel.
Keep alive interval	integer [0..255]; default: none	Frequency (in seconds) at which "keep alive" packets are sent to the remote instance.
Local GRE interface IP address	ip; default: none	IP address of the local GRE Tunnel network interface.
Local GRE interface netmask	netmask; default: none	Subnet mask of the local GRE Tunnel network interface.

Routing settings are used to configure routes to networks that are behind the device that hosts the opposite GRE instance. To add a new route, simply click the 'Add' button. For information on configuring the route refer to the figure and table below.

Field Name	Value	Description
Remote subnet IP address	ip; default: none	IP address of the network behind the device that hosts the remote GRE instance.
Remote subnet netmask	netmask; default: none	Subnet mask of the network behind the device that hosts the remote GRE instance.
Lifetime	integer; default: 8 hours	Defines a time period after which the phase will re-initiate its exchange of information.

4.3.3 SMS Utilities

The SMS Utilities page is used to configure SMS commands related device control. It contains a list of rules that perform certain actions when they are activated by SMS messages.



SMS Rules		
OFF/ON	Action	SMS text
<input checked="" type="checkbox"/>	reboot device	reboot
<input checked="" type="checkbox"/>	switch sim card	sim
<input checked="" type="checkbox"/>	restore factory setting	restore
<input checked="" type="checkbox"/>	get device status	getstatus


message format: "text password", password is the admin password, for example: "reboot admin01"

The entire list contains 4 commands. The user can reboot, switch SIM card, restore to factory setting or get device status by sending a SMS text following the rule: "SMS text" password, for example, to reboot a device, you can send 'reboot admin01' SMS to the mobile number of this device.

The user can turn on/off specified command by OFF/ON switch button.

4.3.4 MQTT


The MQTT page is to configure the MQTT servers which can subscribe or publish a topic(s). WR201 supports this functionality via an open source Mosquitto broker. A client (subscriber) subscribes to a topic(s); a publisher posts a message to that specific topic(s). The broker then checks who is subscribed to that particular topic(s) and transmits data from the publisher to the subscriber.

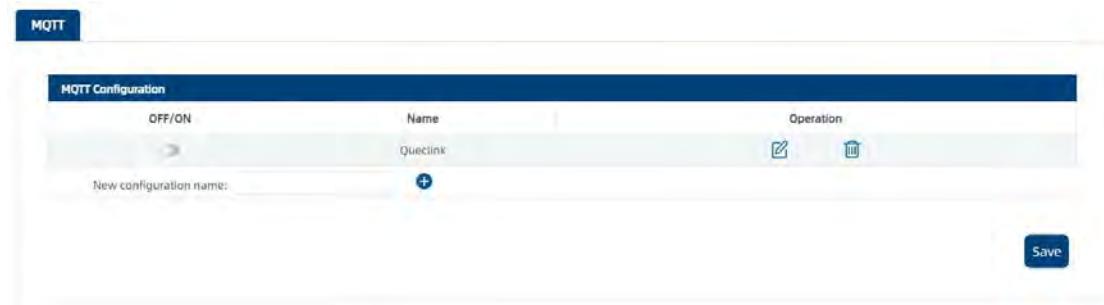

MQTT Configuration		
OFF/ON	Name	Operation
<input checked="" type="checkbox"/>	Queclink	 
New configuration name: <input type="text"/>		

Enter a custom MQTT server name and click the Add icon to create a new MQTT server instance and go to the configuration page. You can click edit button on the right to edit an existing MQTT server instance.

Currently, the router supports only one MQTT server running at the same time.

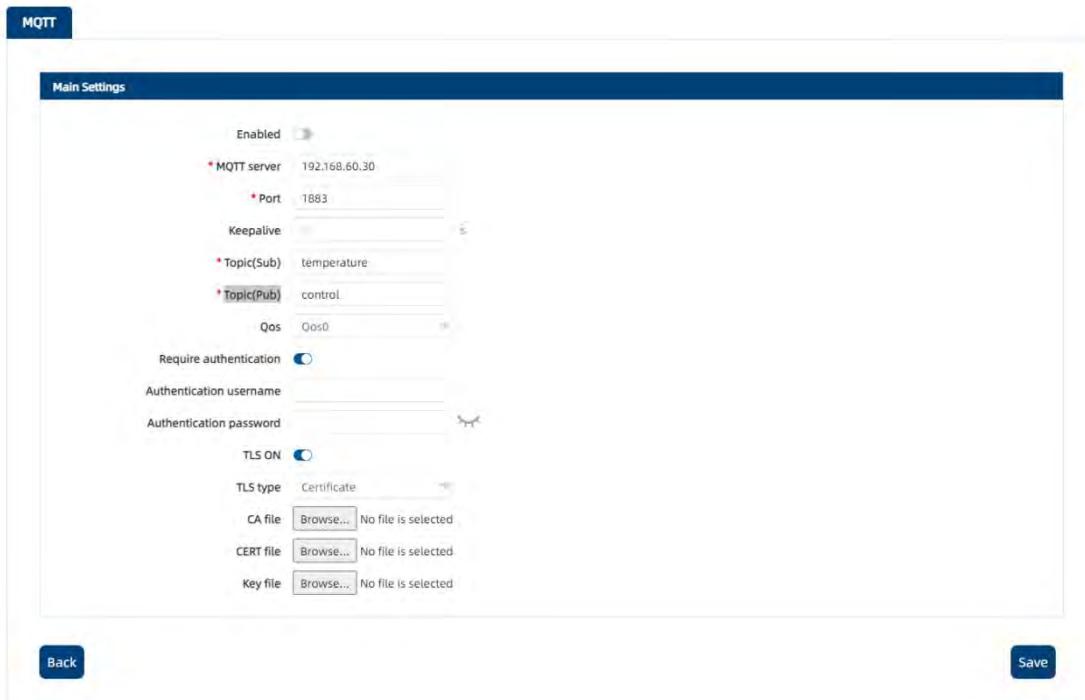

Field Name	Value	Description
Enabled	yes no; default: no	Turns the MQTT server connection on or off.
MQTT server	host ip; default: none	MQTT server IP address or hostname.
Port	integer [0..65535]; default: 1883	Specifies the port used for connecting to the Broker.
Keepalive	Integer [0..65535]; default: 60	The time interval to keep the connection.
Topic(Sub)	string; default: none	The topic to subscribe from the broker
Topic(Pub)	string; default: none	The topic to publish to the broker
Qos	Qos0 Qos1 Qos2; default: Qos0	The Qos level of the mqtt connection.
Authentication username	string; default: none	Username used for authentication when connecting to the Broker.
Authentication password	string; default: none	Password used for authentication when connecting to the Broker.
TLS	yes no; default: no	Toggles the TLS authentication between ON or OFF.
TLS type	Certificate; default: Certificate	The type of TLS encryption.
CA file	.ca file; default: none	Certificate authority is an entity that

		issues digital certificates. A digital certificate certifies the ownership of a public key by the named subject of the certificate.
Certificate file	.crt file; default: none	Certificate file is a type of digital certificate that is used by client systems to make authenticated requests to a remote server. Client certificates play a key role in many mutual authentication designs, providing strong assurances of a requester's identity.
Key file	.key file; default: none	Private key for client to establish connection.


4.3.5 RS232/RS485

RS232 and RS485 functions are to use the available serial interfaces to transfer data through Router to the Internet. This section allows the user to set the parameters of serial ports. WR201 supports one RS232 and three RS-485 ports. Serial port provides a way to transfer serial data to IP network, or vice versa.


Hardware connection:

The following figure shows you how to connect the lower end device through serial port.


RS232 connection:

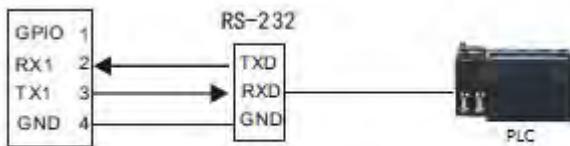

RS485 connection:

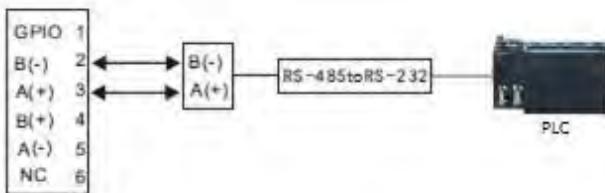


The user can configure the parameters of RS232 port, including baud rate, data bits, etc. The serial type is the working type of RS232. By default, RS232 is working as a console port.

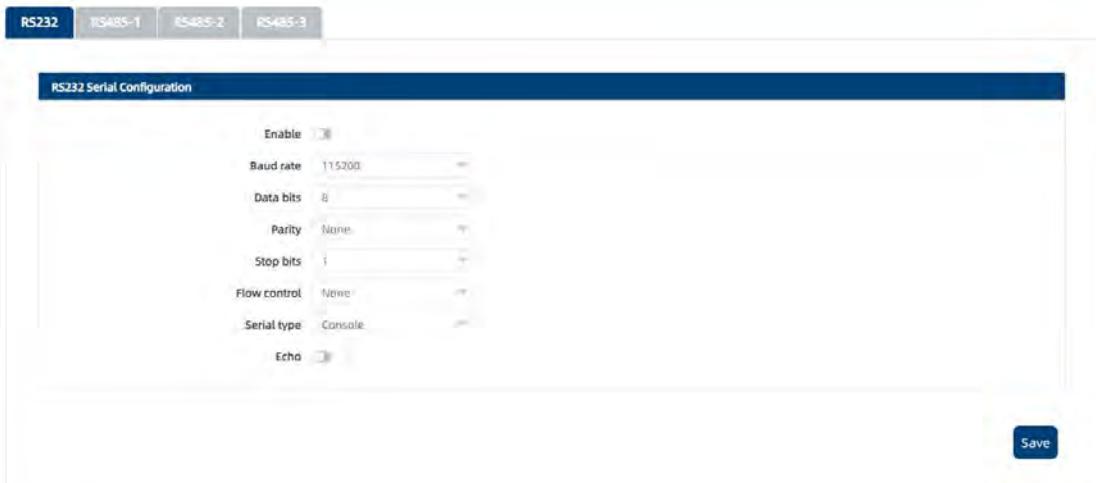

Field Name	Value	Description
Enabled	yes no; Default: no	When checked, enables the RS232 service
Baud rate	300 1200 2400 4800 9600 19200 38400 57600 115200; Default: 115200	Sets the data rate for serial data transmission (in bits per second)
Data bits	5 6 7 8; Default: 8	The number of data bits for each character
Parity	None Odd Even; Default: None	<p>In serial transmission, parity is a method of detecting errors. An extra data bit is sent with each data character, arranged so that the number of bits in each character, including the parity bit, is always odd or always even. If a byte is received with the wrong number of 1s, then it must have been corrupted. However, an even number of errors can pass the parity check.</p> <p>None (N) - no parity method is used</p> <p>Odd (O) - the parity bit is set so that the number of "logical ones (1s)" has to be odd</p> <p>Even (E) - the parity bit is set so that the number of "logical ones (1s)" has to be even</p>
Stop bits	1 2; Default: 1	Stop bits sent at the end of every character allow the receiving signal hardware to detect the end of a character and to resynchronize with the character stream. Electronic devices usually use one stop bit. Two stop bits are required if slow


		electromechanical devices are used
Flow control	None RTS/CTS Xon/Xoff; Default: None	<p>In many circumstances a transmitter might be able to send data faster than the receiver is able to process it. To cope with this, serial lines often incorporate a "handshaking" method, usually distinguished between hardware and software handshaking.</p> <p>RTS/CTS - hardware handshaking. RTS and CTS are turned OFF and ON from alternate ends to control data flow, for instance when a buffer is almost full</p> <p>Xon/Xoff - software handshaking. The Xon and Xoff characters are sent by the receiver to the sender to control when the sender will send data, i.e., these characters go in the opposite direction to the data being sent. The circuit starts in the "sending allowed" state. When the receiver's buffers approach capacity, the receiver sends the Xoff character to tell the sender to stop sending data. Later, after the receiver has emptied its buffers, it sends an Xon character to tell the sender to resume transmission</p>
Serial type	Console Over IP Modbus; Default: Console	Specifies the serial connection type.
Echo	yes no; Default: no	Toggles RS232 echo ON or OFF. RS232 echo is a loopback test usually used to check whether the RS232 cable is working properly

The router can transfer the data between RS232/RS385 ports and IP network. When selecting serial type as "Over IP" and "Mode" as "Server", the page will display IP configuration parameters:

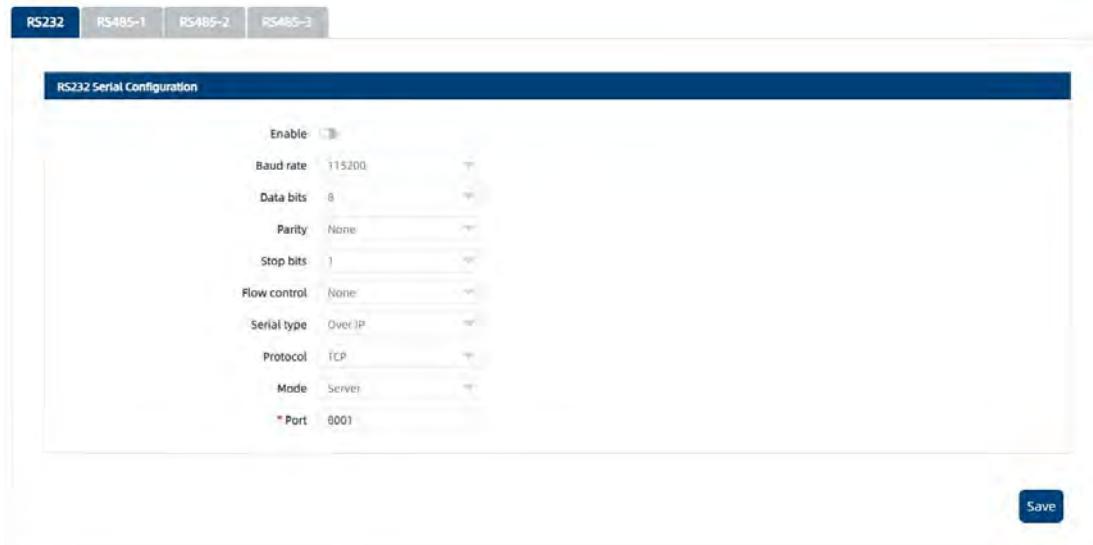

Field Name	Value	Description
Protocol	TCP; Default: TCP	Specifies the protocol used in the communication process
Mode	Server Client Bidirect; Default: Server	Specifies the device's role in the connection: Server - the device waits for incoming connections Client - the device initiates the connection Bidirect - acts as client by default but waits for incoming connections at the same time
No leading zeros	yes no; Default: no	Specifies that the first hex zeros should be skipped
TCP port	integer [0..65535]; Default: " "	The port number used to connect to the server
Timeout (s)	integer; Default: " "	Disconnects clients after the amount of inactivity time (in seconds) specified in this field

When selecting serial type as "Over IP" and "Mode" as "Client", the page will display IP configuration parameters:

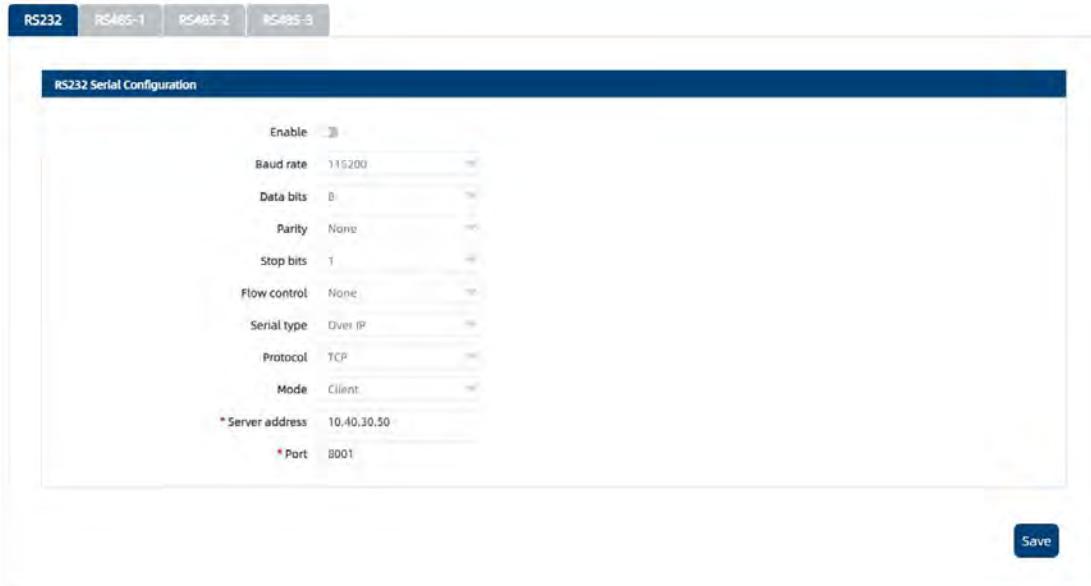

Field Name	Value	Description
Protocol	TCP; Default: TCP	The protocol used for data transmission
Mode	Server Client Bidirect; Default: Server	Server - waits for incoming connection Client - initiates the connection Bidirect – acts as a client by default, but at the same time waits for incoming connections
No leading zeros	yes no; Default: no	Skips first hex zeros
Server address	host ip; Default: no	Server address to which the client will connect to
TCP port	integer [0..65535]; Default: " "	The port number used to listen for incoming connections
Reconnect intervals (s)	integer; Default: " "	Indicates the time period between reconnection attempts

The configuration of RS485 is very similar to RS232, you can use the same way to configure the RS485 interface.

When selecting serial type as “Modbus”, the serial port will work as a Modbus interface, the router can receive and forward Modbus commands from MQTT server or Modbus TCP master. You can configure relevant parameters in the “Application->Modbus” page.

4.3.6 Modbus


This page is to configure the functions related to Modbus function. Before configuring any parameters, you need to configure the type of serial port as Modbus.

4.3.6.1 Modbus RTU

In this page, you can configure the router as a Modbus master, which can request data from Modbus slaves through RS-232/RS485 interfaces and forward the data to a specified server.

MQTT and HTTP servers are supported.

The figure below is an example of the configuration:

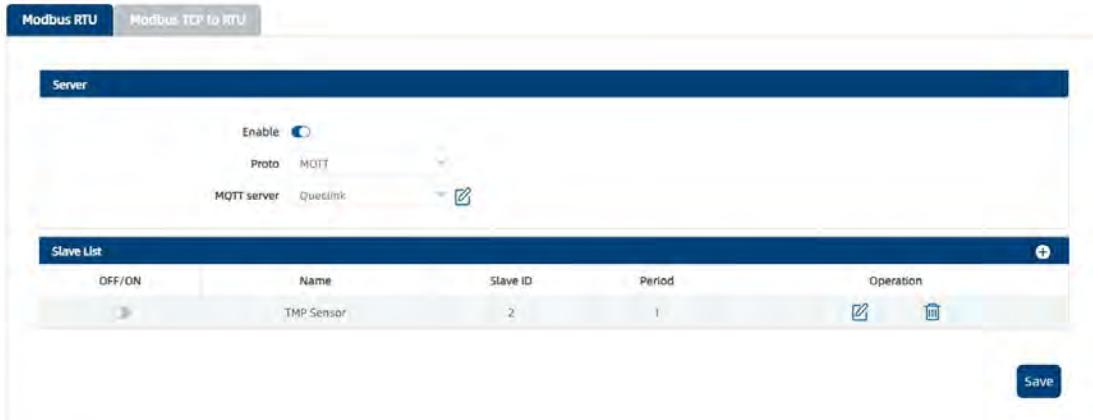

To forward the Modbus data to MQTT server, you must select a MQTT server in the server section. Then click “add” button on the slave list table to add a Modbus request.



Field Name	Value	Description
Enabled	yes no; default: no	Turns the slave on or off.
Name	characteristic	Name of a slave
Slave ID	integer [1..255]; default: no	Slave ID. Each slave in a network is assigned a unique identifier ranging from 1 to 255. When the master requests data from a slave, the first byte it sends is the Slave ID.
Period	integer [1..9999]/; default: 60	Interval (in minutes) at which requests are sent to the slave device.

A Modbus request is a way of obtaining data from Modbus slaves. The master sends a request to a slave specifying the function code to be performed. The slave then sends the requested data back to the Modbus master.

Note: Modbus Serial Master uses Register Number instead of Register Address for pointing to a register. For example, to request the Uptime of a device, you must use 2 in the First Register field.

The figure below is an example of the Requests configuration section and the table below provides information contained in the fields of that section:



Field Name	Value	Description
Enabled	yes no; default: no	Turns the request on or off.
Name	characteristic	Name of a request
Data Type	Modbus PDU	Only support PDU now.
Function	Read Coils (01H) Write Single Coil (05H) Write Multiple Coils (0FH) Read Input Register (04H) Read Multiple Holding Register (03H) Write Single Holding Register (06H) Write Multiple Holding Register (10H); default: Read Coils	Modbus function used in Modbus request.
First Register (Hex)	String [1..FFFF]; default: 1	First Modbus register from which data will be read.
Register count (Hex)	String [1..FFFF]; default: none	Number of Modbus registers that will be read during the request
Values (Hex)	String, 128 bits length; default: none	Value to be wrote into a register

The router communicates with MQTT server with JSON format. The format from the MQTT server to the router is:

Field Name	Value	Description
service	Integer	Service ID. Used to identify the corresponding service. 1 represents UART port.
id	Integer	ID of the message, to identify the message
slave	Integer	MODBUS slave ID
Function	Read Coils (01H) Write Single Coil (05H) Write Multiple Coils (0FH) Read Input Register (04H) Read Multiple Holding Register (03H) Write Single Holding Register (06H) Write Multiple Holding Register (10H); default: Read Coils	Function code of the Modbus request, 3 represents read register and 6 represents write register
First Register (Hex)	String [1..FFFF]; default: 1	The start address of the register, The starting value is 0. For example, 0

		represents 4001 and 1 represents 4002
Register count (Hex)	String [1..FFFF]; default: none	The length of register
Values (Hex)	String, 128 bits length; default: none	Value to be wrote into a register
period	Integer	The time interval between two requests. The field is optional. If this field is empty, it means to only send one request; otherwise, the router will send the request at specified period
crc	Integer	Modbus CRC checking.

The following is an example,

```
{"id":1, "slave":1, "function":3, "first_register":"002F", "register_count":0006}
```

Return message format is:


Field Name	Value	Description
time	String	Acquisition time of the query.
id	Integer	ID of the message, to identify the message
slave	Integer	Modbus slave ID
function	Integer	Function code
values_len	Integer	The length of return value
values	String	Return data, the length of the string = data_len*2.
crc	String	Modbus CRC checking,

The following is an example,

```
{"id":1, "slave":1, "function":3, "values_len":6, "values":"040200080008", "crc":"D935"}
```

4.3.6.2 Modbus TCP to RTU

This function allows redirecting Modbus TCP data coming to a specified port to RTU specified by the Slave ID. Firstly, the router receives the data from a Modbus TCP master, then converts it into Modbus RTU data and redirect to the specified Slave ID.

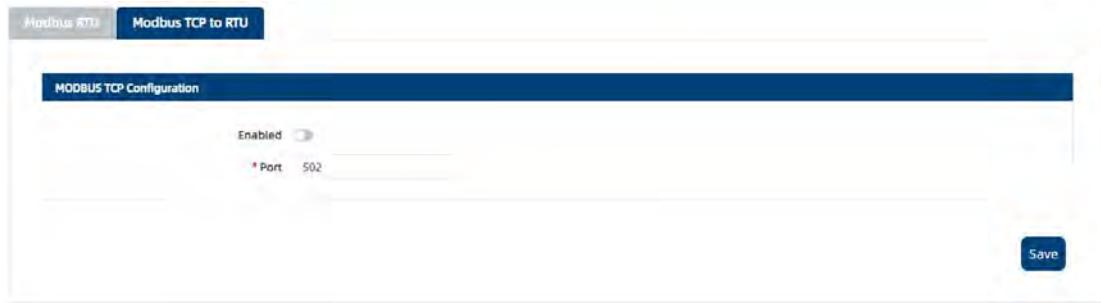

4.3.7 DDNS

Dynamic DNS (DDNS or DynDNS) is a method of automatically updating a name server in the Domain Name System (DNS). This is most often utilized when the end user has a dynamic IP address and wants to bind it to a static hostname.

The router is compatible with many different third party DNS services that provide the possibility to create a custom hostname and bind it to an IP address. The DDNS service periodically updates the IP address information of the hostname, making sure that the device remains reachable via the same hostname even in cases when its IP address has changed.



To configure a DDNS instance, click the Add icon button or the Edit icon of the existing instance. The figure below is an example of the edit page of the default DDNS instance:



Field Name	Value	Description
Enable	yes no; Default: no	Turns the DDNS instance ON or OFF
Service	third party DNS service (chosen)	Third party DNS service provider

	from list*) -- custom --; Default: dyn.com	
Hostname	host; Default: yourhost.example.com	Hostname that will be linked with the router's IP address
Username	string; Default: your_username	User name required to login to the third party DNS service; used to periodically login to your DNS service account and make necessary updates.
Password	string; Default: your_password	Password required to login to the third party DNS service; used to periodically login to your DNS service account and make necessary updates.
IP renew interval	integer [5..600000]; Default: 10	Frequency at which the device will check whether it's IP address has changed
IP renew interval unit	Minutes Hours Days; Default: Minutes	Unit which is used in IP renew interval

4.3.8 Input

WR201 has 4 inputs. Following is the input electric characteristics in WR201 routers.

- Digital input (DIN1): Logic low 0 - 1.2V; Logic high 1.8 - 3V
- Digital galvanically isolated input (DIN2): 0 - 30 V
- Analog input (voltage mode): 0 – 24V
- Analog input (current mode): up to 20 mA (commonly used with 4-20 mA standard sensors)
- Digital non-isolated input (in power socket): Logic low 0 - 5V; Logic high 8 - 40V

4.3.8.1 Status

The Status page displays the current states of the device's input ports:

Status **Report**

Input Status

Pin	Port	Status
① ②	Digital input	High level
③ ④	Digital galvanically isolated input	Low level
⑤ ⑥	Analog input	0.0V
⑦	Digital input (PWR)	Low level



(PWR)

① Power
② Ground
③ Digital input (0-3.8 VDC: low logic level/4.3-40 VDC: high logic level)
④ Open collector output (4-pin connector) (30 VDC, 0.3A)
⑤ GND (digital & analog input)



(I/O)

① GND (digital & analog input)
② Digital galvanically isolated input (0-4.5 VDC: low logic level/8-30 VDC: high logic level)
③ GND (DC output)
④ External VCC (DC output 0-30VDC, 0.25A)
⑤ Relay output (COM) (external 0-24 VDC or 0-40 VAC, 4A)
⑥ Digital input (0-0.7VDC: low logic level/2-30VDC: high logic level)
⑦ GND (digital isolated input)
⑧ Galvanically isolated open collector output (external 0-30 VDC, 0.25A)
⑨ Analog input (0.6-32 VDC, 0.02A)
⑩ Relay output (NO)

Refresh

4.3.8.2 Report

The page provides a way to report an input event to a MQTT server. To add a new report, Click the **+** Icon to enter the configuration page.

Status **Report**

Report Configuration

OFF/ON	Port	Trigger	Report	Operation
<input checked="" type="checkbox"/>	Digital Input	Both		

You can also configure an existing report by clicking Edit button.

Status **Report**

Configuration

Enabled <input checked="" type="checkbox"/>
Port Digital Input
Trigger Both
Server Queclink 

Back **Save**

Field Name	Value	Description
Enable	yes no; default: yes	Turns the input rule on or off.
Port	Digital Input Digital isolated Analog; default:	Selects to which input pin the rule will apply.

	Digital Input	
Trigger	Both Low level High level; default: both Inside range Outside range Over max Lower min; default: Inside range	Selects which input state will trigger the report.
Check interval	integer [1..9999]; Default: 0	The frequency at which the router will check for condition changes of the input port.
Min	integer [1..9999]; Default: 0	The minimum value to trigger a report.
Max	integer [1..9999]; Default: 0	The maximum value to trigger a report.
Server	String; default: none	Select a MQTT server to report the event. If no MQTT server, configure a MQTT server in MQTT server page first.

The following is the report in JSON format:

```
{"service":0, "mqttserver":"Queclink", "port":"9", "value":"34"}
```

Field Name	Value	Description
service	Integer	Service number. Used to identify the corresponding service. 0 is I/O service.
mqttserver	String	Name of MQTT server
port	String	Index of I/O port.
value	String	The value of this input port.


The mapping table of port index, input port and value:

Port	IO	Value
6	Digital input	0: Close; 1: Open
2	Digital galvanically isolated input	0: Contact close; 1: Contact open
9	Analog input	ADC value
11	Digital input (PWR)	0: Low Level; 1: High Level

4.3.8.3 Application Example

- WR201 digital input can be used for security applications. You can connect PIR sensor or reed switch to digital input. Then configure WR201 input.


This is an example of how to connect digital input:

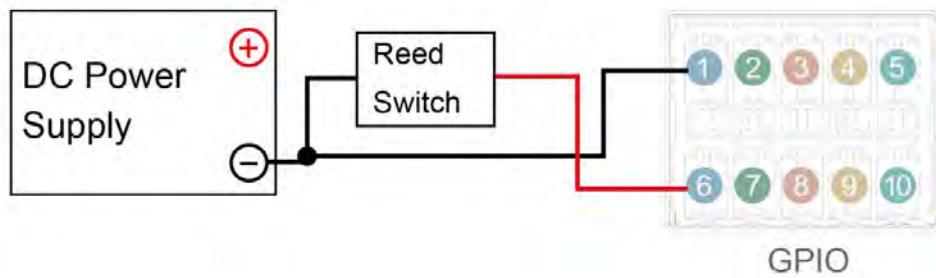

- Example of using WR201 digital isolated input:

Note: you can only connect passive sensors to digital input.

- If you want to measure the voltage with WR201 you need to connect the voltage source as the picture below. Note that voltage on pin 9 must never exceed 24V.

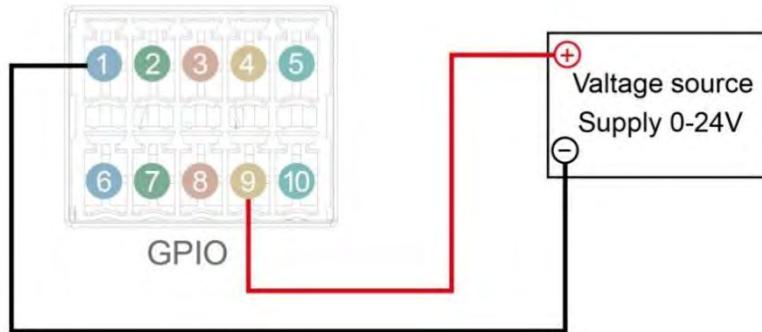

4.3.9 Output

WR201 has 3 outputs. Following is a list of output electric characteristics in WR201 routers.

- Digital open collector (OC) output: 30V, 250mA
- SPST relay output: 24V, 4A
- Digital open collector (in power socket) output: 30V, 300mA

4.3.9.1 Status

The Status page displays the current states of the device's output ports:

Status **Default State** **Switch** **Control**

Output Status

Pin	Port	Status
① ② ③ ④	Galvanically isolated open collector output	OFF
⑤ ⑩	Relay	Contact open
⑦	Open collector output	OFF



(PWR)
 ① Power
 ② Ground
 ③ Digital input (0-3.8 VDC: low logic level/4.3-40 VDC: high logic level)
 ④ Open collector output (4-pin connector) (30 VDC, 0.3A)



(I/O)
 ⑤ GND (digital & analog input)
 ⑥ Digital galvanically isolated input (0-4.5 VDC: low logic level/0-30 VDC: high logic level)
 ⑦ GND (OC output)
 ⑧ External VCC (OC output 0-30VDC, 0.25A)
 ⑨ Relay output (COM) (external 0-24 VDC or 0-40 VAC, 4A)
 ⑩ Digital input (0-0.7VDC: low logic level/2-30VDC: high logic level)
 ⑪ GND (digital isolated input)
 ⑫ Galvanically isolated open collector output (external 0-30 VDC, 0.25A)
 ⑬ Analog input (0.0-32 VDC, 0.02A)
 ⑭ Relay output (NO)

Refresh

4.3.9.2 Default State

The page is to set the default state of the output ports when the router powers on. You can select specified state by the drop down menu.

Status **Default State** **Switch** **Control**

Default State

Galvanically isolated open collector output:	OFF
Relay:	Contact open
Open collector output:	OFF

Save

4.3.9.3 Switch

The Switch page is used to turn the router's outputs on or off manually. This action does not save the state permanently, meaning that after a reboot the states will revert back to their default values.

Status **Default State** **Switch** **Control**

Switch State

Galvanically isolated open collector output	OFF
Relay	Contact open
Open collector output	OFF

Save

4.3.9.4 Control

The page provides a way to control the output port through MQTT servers.



The MQTT server sends control command with JSON format message.

The following is the format of control message:

```
{"service": 0, "index": "8,5,12", "status": "0,0,1"}
```

Field Name	Value	Description
service	Integer	Service number. Used to identify the corresponding service. 0 is I/O service.
index	String	The index of the output port
status	String	Target control status

The following is the mapping table of index, output port and status:

Index	IO	Status
8	Galvanically isolated open collector output	0: Low Level; 1: High Level
5	Relay output	0: Contact close; 1: Contact open
12	Open collector output (PWR)	0: Low Level; 1: High Level


4.3.9.5 Application Example

- This is example on how to connect a relay to RUT955 open collector output:



- In some cases, you may want WR201 release to automatically press the key to turn on the

high-power load, which can be connected according to the following figure:

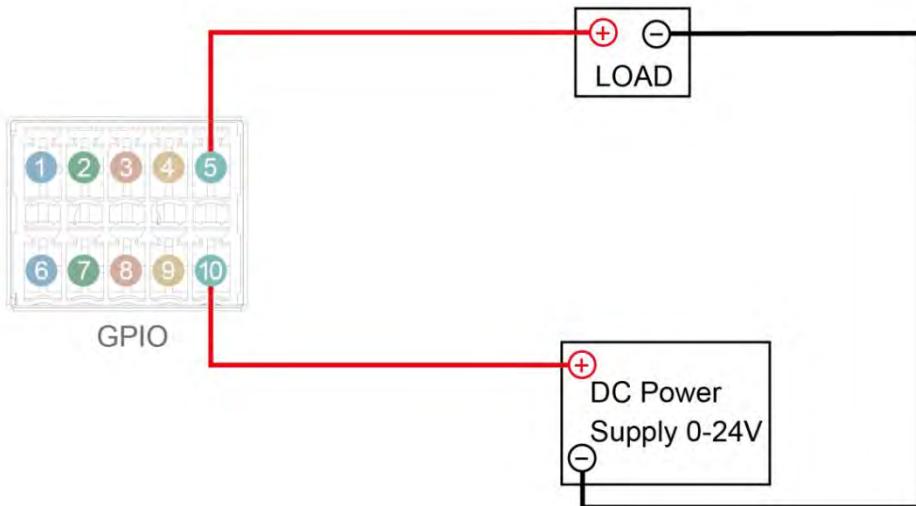


4.3.10 Auto Recovery

Auto Recovery pages provides you several applications as a precautionary measure to ensures the device will recover from unexpected issues, such as mobile connection is down.


4.3.10.1 Timing Task

Timing Task is a function that executes a specified action at a specified time interval. It can be used as prophylactic measure to recover the Router back to normal condition, for example, to reboot the router one time at the mid night of each day.

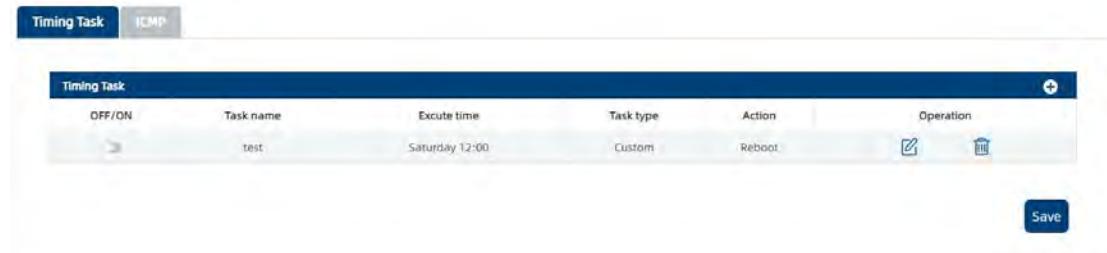

Timing Task					
OFF/ON	Task name	Execute time	Task type	Action	Operation
	test	Saturday 12:00	Custom	Reboot	

Save

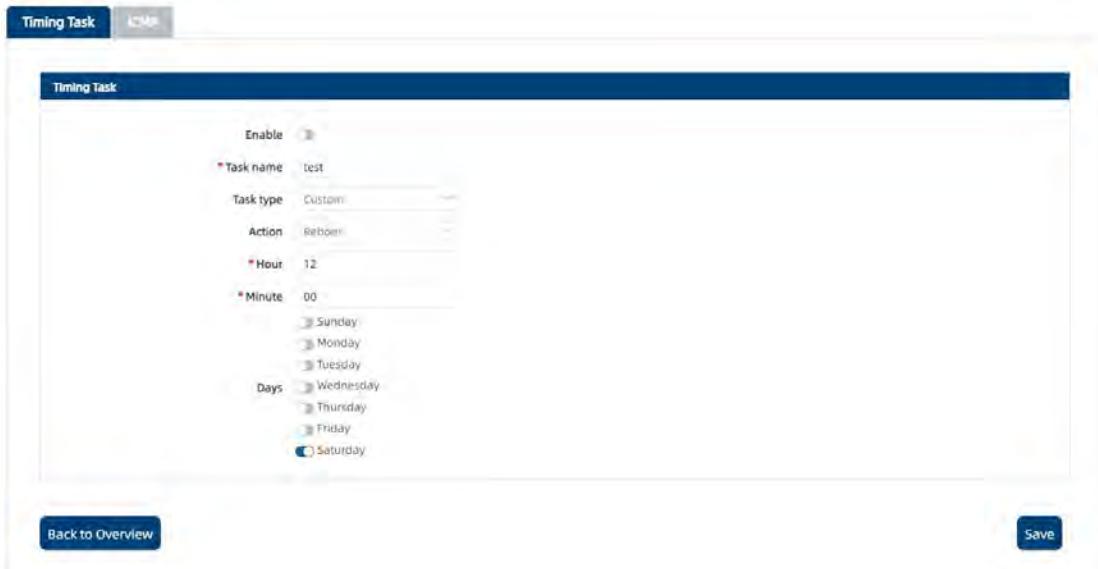

Field Name	Value	Description
Enable	yes no; Default: no	Turns the rule ON or OFF
Task Name	string	Name of ICMP rule
Action if no echo is received	Reboot Modem restart Restart mobile connection (Re)register none; Default: Reboot	The action that will be taken when timer reached
Hour	integer [0..23]; Default: 23	The hour of the day on which the router will perform the action
Minute	integer [0..59]; Default: 0	The minute of the hour on which the router will perform the action
Days	Monday Tuesday Wednesday Thursday Friday Saturday Sunday; Default: none	The day or multiple days on which the router will perform the action

4.3.10.2 ICMP

The ICMP is a function periodically sending Ping commands to a specified IP address and wait for received responses. If no response is received, the device will execute specified actions if sending a defined number of times at a defined frequency.



The figure below is an example of that rule and the table below provides information on the fields that make up that rule:



Field Name	Value	Description
Enable	yes no; Default: no	Turns the rule ON or OFF
Name	string	Name of ICMP rule
Action if no echo is received	Reboot Modem restart Restart mobile connection (Re)register none; Default: Reboot	The action that will be taken if no ICMP echo is received
Interval between pings	5 mins 15 mins 30 mins 1 hour 2 hours; Default: 5 mins	Interval at which ping requests are sent to the specified host
Ping timeout (sec)	integer [1..9999]; Default: 5	Maximum response time (in seconds). If no echo is received after the amount of time specified in this field, the ping request is considered to have failed
Retry count	integer [1..9999]; Default: 2	Indicates how many additional times the device will try sending ping requests if the initial one fails
Interface	Automatically selected Ping from mobile; Default: Automatically selected	Specifies through which interface the pings will be sent. If Automatically selected is set, the pings will go through the main WAN interface
Host to ping	host ip; Default: 8.8.8.8	Indicates the host to which ping requests will be sent
Backup host to ping	host ip; Default: 114.114.114.114	Indicates the backup host to which ping requests will be sent

4.4 System

This section shows you how to configure the system setting of the Router.

4.4.1 Setup Wizard

The **Setup Wizard** is to offer a simplified version of other WebUI pages used to set some of the router's most relevant parameters. It's a quick and easy way for you to setup the router.


Step1 is used to configure the router's time settings. Time is very important for many applications, such as RMS, scheduled task.




Step2 is used to configure the router's SIM card parameters.



Step3 is used to configure the router's local area network (LAN) and DHCP server settings.

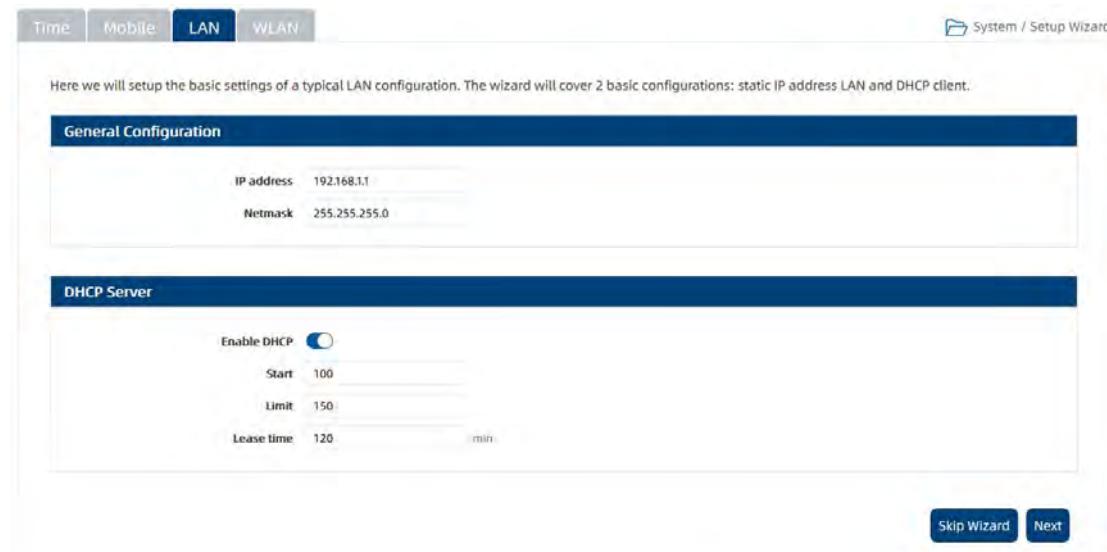

Step4 is used to configure the router's Wi-Fi access point (AP).

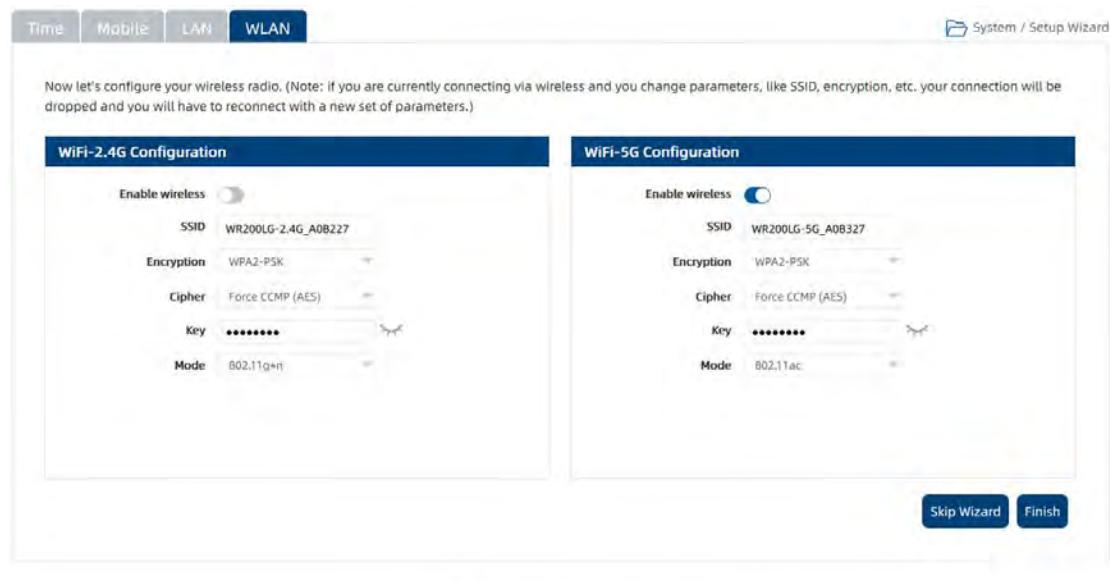


Copyright © 2021 by Queclink Wireless Solutions.

You can also skip any of above steps and configure the setting later in the according section.

4.4.2 Administration


4.4.2.1 General

This page is for you to set up some of the router's system parameters, such as password, host name. To change password, you must input your current password then enter your new password.

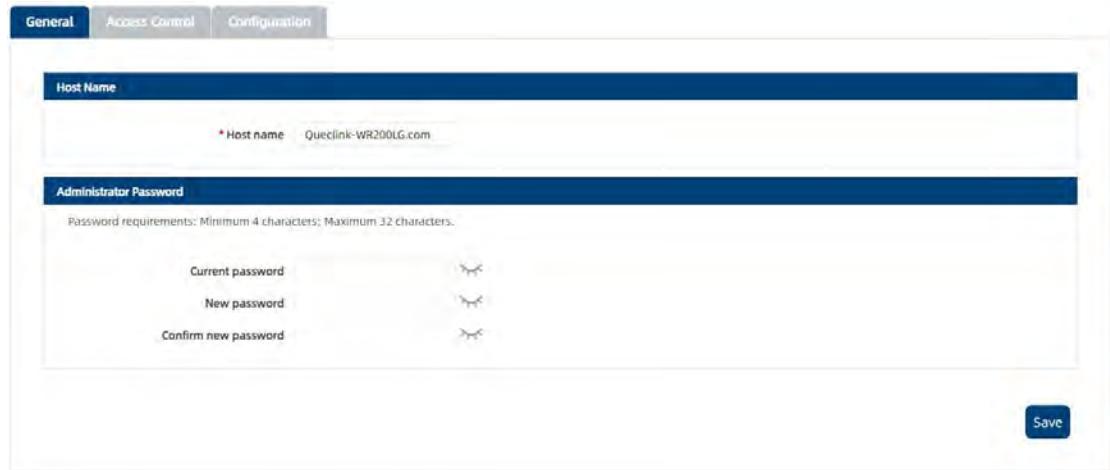

4.4.2.2 Access Control

The section is used to manage SSH, HTTP(S) and CLI access to the router. You can click check box to enable or disable access by other devices remote or locally, enable access might pose a security risk to the router, especially if you are using a weak or default user password.

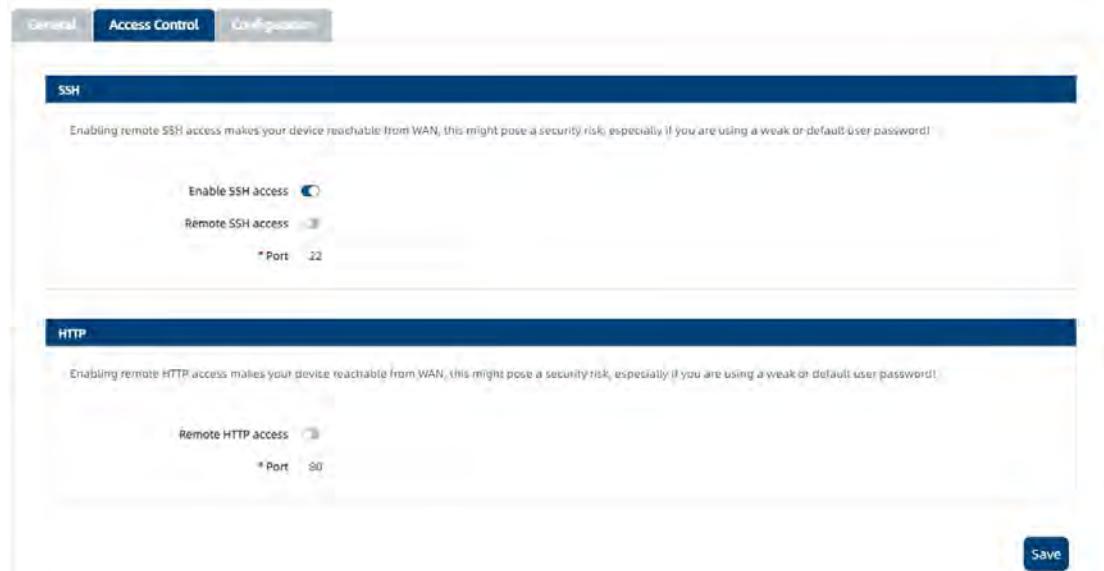

Field Name	Value	Description
Enable SSH access	yes no; default: yes	Turns SSH access from the local network (LAN) on or off.
Remote SSH access	yes no; default: no	Turns SSH access from remote networks (WAN) on or off.
Port	integer [0..65535]; default: 22	Selects which port to use for SSH access.

4.4.2.3 Configuration File

The **Configuration** page is used to generate the user's defaults configuration and download or upload backup files to the router.

Backup files can be uploaded only from identical devices with same model. Once a backup file is uploaded to a router, that router will have same configuration as the router from which the backup file originated.



4.4.3 Reboot

This page is used only to reboot the device. Click the Reboot button if you wish to reboot the device.




4.4.4 Diagnostic

The Diagnostic is used to execute network diagnostic tests, including traceroute, ping and Tcpdump.

4.4.4.1 Diagnostic

The user inputs an IP address or domain name, then click Traceroute or Ping button to check the link between WR201 and the target IP address/domain name.

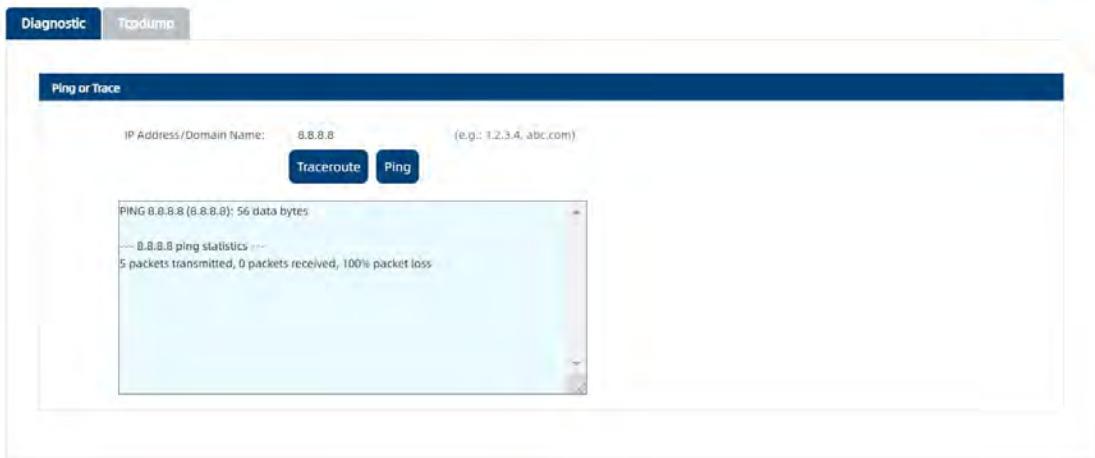

4.4.4.2 Tcpdump

Tcpdump is a Linux tool used to capture packets moving through network interfaces. By default, the device does not store TCP dump information. You must start Tcpdump before you can download the file.

After finishing the capture, remember to click Stop record button to close Tcpdump.



Field Name	Value	Description
Select interface	network interface; default: All	Only captures packets that move through the specified network interface.
Select protocol filter	All ICMP TCP UDP ARP; default: All	Only captures packets that match the specified protocol.
Select packets direction	Incoming Outgoing Bidirect; default: Bidirect	Only captures packets coming from the specified direction.
Host	ip host; default: none	Captures packets related to the specified host.
Port	integer [0..65535]; default: none	Captures packets related to the specified port.


4.4.5 NTP

Network Time Protocol (NTP) is a networking protocol for clock synchronization between computer systems over packet-switched, variable-latency data networks.

In general section, you can configure general router time settings, like selecting the local time zone, setting a time update interval, synchronizing the time, etc.

The Time Servers section displays the NTP servers that the router uses, you can configure maximum four time servers in this section.

WR201 uses GPS for time synchronization by default. When GPS is not available and NTP server synchronization function is enable, WR201 will synchronize the time through NTP server.

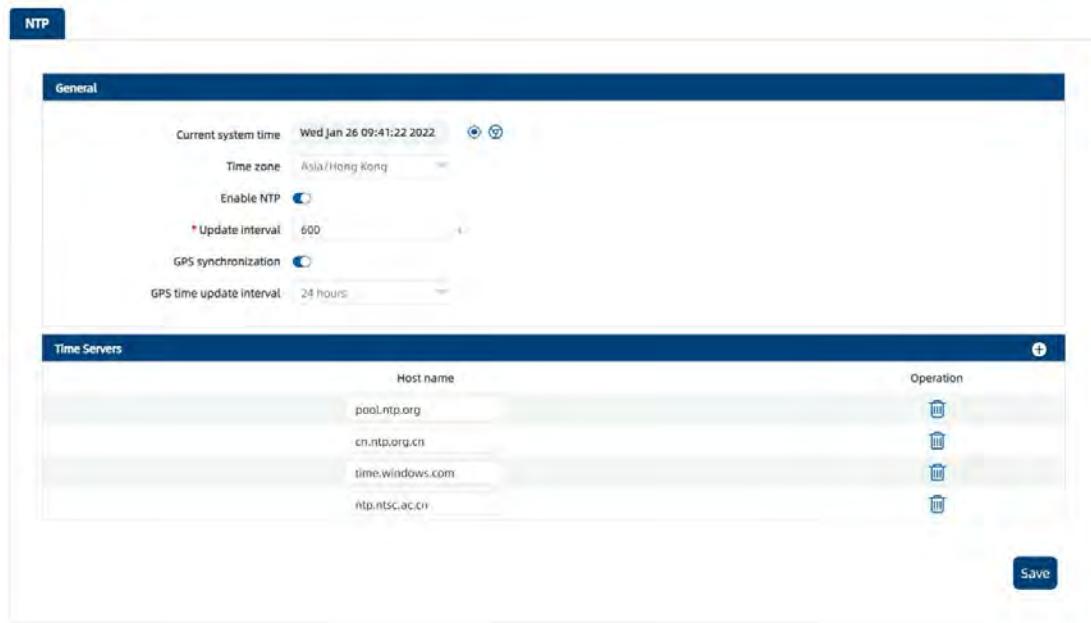


Field Name	Value	Description
Time zone	time zone; default: UTC	The router will sync time in accordance with the selected time zone.
Enable NTP	yes no; default: yes	Turns NTP on or off.
Update interval (in seconds)	integer; default: 3660	Defines how often the router will update the time.
GPS synchronization	yes no; default: no	Enables periodic time synchronization for the system using the GPS module (does not require an Internet connection).
GPS time update interval	5, 30 minutes 1, 6, 12, 24 hours 1 week 1 month; default: Every 24 hours	Defines how often the router will update the time using the GPS module.
Hostname	String	The name of NTP server.

4.4.6 Upgrade

This section is to check the current firmware version of the Router and to upgrade the Router's firmware. Firmware can be upgraded either from server or from an image file uploaded from your computer.

4.4.6.1 Local

The Local section is used to upgrade the software from the local file. Click Browse button to select the new software from your computer and click Upgrade to upgrade the software. During the upgrade, please do not power off the route, the LEDs of the router will flash at the same time. After upgrade finished, the router will restart automatically. The whole upgrade process will take 5 minutes.

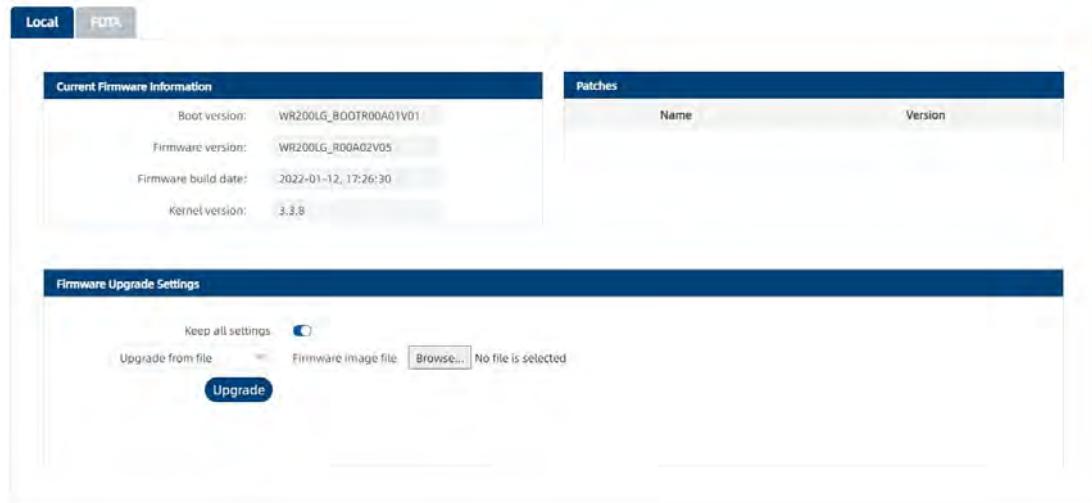

If the uploaded firmware file that is incompatible with your Router, you will see a warning as below:


Upload file format error, please select the correct format file upload.

4.4.6.2 FOTA

This page is used to upgrade the firmware over the air. By default, the device supports Queclink Management System for remote upgrade.

The user can select the type of firmware and click Upgrade to upgrade the firmware immediately in Upgrade from server section.

The user can also enable auto upgrade at specified time in Auto Upgrade section. The device will connect to server at specified time to check if there is any firmware to be upgraded.

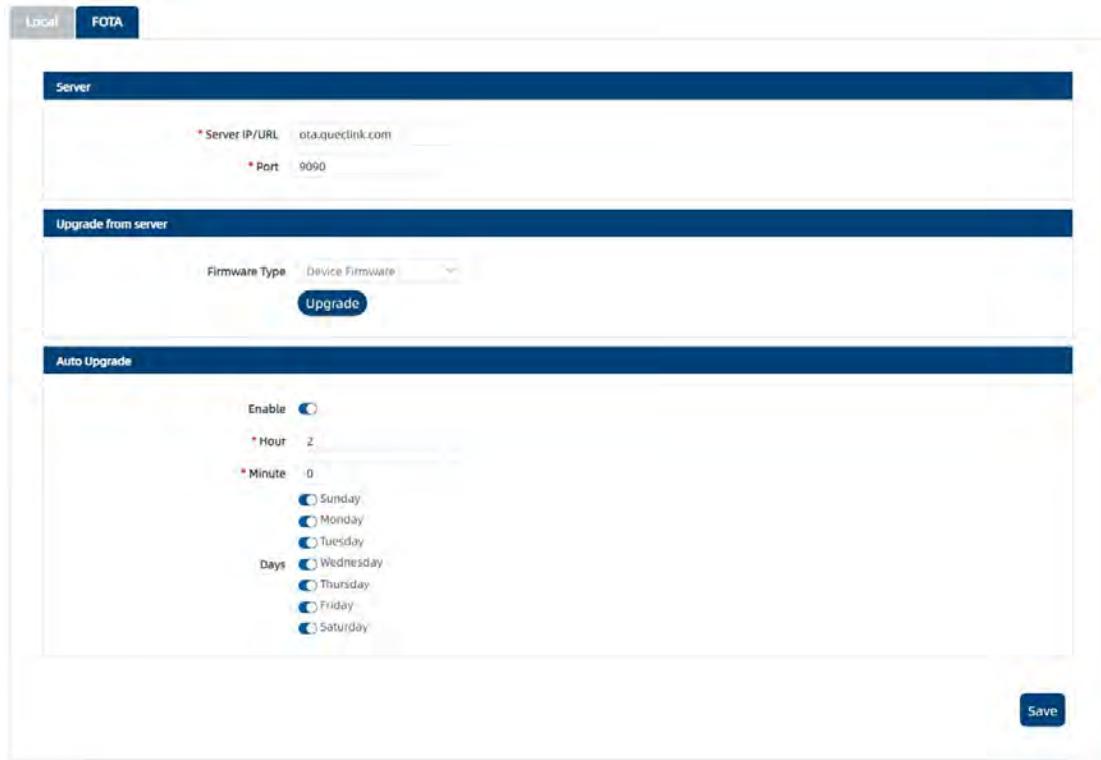

4.5 Reset Button

WR201 Router has a reset button to return the router back to its default factory settings, please kindly note returning to default factory setting means the router will delete all custom configurations. We strongly recommend you to back up the configuration before the operation.

The reset button has two functions:

- **Reboot the device.** If the reset button is pressed for up to 4 seconds, the device will reboot.
- **Factory reset.** If the reset button is pressed for at least 5 seconds (by default), the device will perform a factory reset and then reboot.
- All LEDs indicate the elapsed time while holding the reset button.

5. FAQ

5.1 SIM Slot

Phenomenon:

Discontinue during dialing, dial failure

Possible Reason:

- SIM card network type do not match
- SIM charges owed
- Power supply do not match
- Modem setting wrong

Solution:

- Change to a suitable SIM card
- Recharge SIM card
- Change to suitable power supply
- Change Modem setting, please check related chapter

5.2 No Signal

Phenomenon:

Modem status show no signal

Possible Reasons:

- Antenna connect wrong
- Modem cannot online
- Modem offline

Solution:

- Connect suitable antenna
- Modem cannot online, check SIM and modem setting
- Modem offline, check router setting, like wake up setting, ICMP setting, check if there are any setting make router offline

5.3 Cannot Find SIM/UIM Card

Phenomenon:

Cannot find SIM card

Possible Reason:

- SIM card damage
- SIM bad contact

Solution:

- Replace SIM card
- Re-install SIM card

5.4 VPN Cannot Connect

Phenomenon

VPN cannot establish connection

Possible Reason:

- VPN port abnormal
- VPN parameter setting wrong
- VPN peer server abnormal

Solution:

- Make sure the Router is online
- Set the correct port to VPN
- Check all VPN parameters
- Check VPN peer server

Glossary

Abbr.	Description
APN	Access Point Name
CHAP	Challenge Handshake Authentication Protocol
dB	Decibel
DC	Direct Current
DI	Digital Input
DO	Digital Output
FDD LTE	Frequency Division Duplexing Long Term Evolution
GRE	generic route encapsulation
GSM	Global System for Mobile Communications
HSPA	High Speed Packet Access
ID	identification data
IMEI	International Mobile Equipment Identity
IP	Internet Protocol
IPsec	Internet Protocol Security
L2TP	Layer 2 Tunneling Protocol
LAN	local area network
M2M	Machine to Machine
MS	Mobile Station
OpenVPN	Open Virtual Private Network
PAP	Password Authentication Protocol
PC	Personal Computer
PIN	Personal Identity Number
PPP	Point-to-point Protocol
PPTP	Point to Point Tunneling Protocol
RF	Radio Frequency
SIM	subscriber identification module
SMA antenna	Stubby antenna or Magnet antenna
SMS	Short Message Service
SNMP	Simple Network Management Protocol
TCP/IP	Transmission Control Protocol / Internet Protocol
USB	Universal Serial Bus
VLAN	Virtual Local Area Network
VPN	Virtual Private Network
VSWR	Voltage Stationary Wave Ratio
WAN	Wide Area Network

Doc:

Products with CE Marking comply with the radio Equipment Directive (2014/53/EU) and UK Radio Equipment Regulations (SI 2017/1206) The full text of the EU declaration of conformity is available at the following internet address: <http://www.meigsmart.com>

RF exposure statement:

RF exposure information: The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of d=20 cm between the device and the human body. To maintain compliance with RF exposure requirement, use product that maintain a 20cm distance between the device and human body.

Temperature: -30° C ~ +75° C

Bands:

The Radio equipment operation with following frequency bands Maximum tune-up power(dBm)

2.4GWIFI:18dBm(eirp)

5GWIFI: 19dBm(eirp)

5.8GWIFI:14dBm(eirp)

GSM900/1800:29dbm

W Band1:25dbm

W Band8:22dbm

L Band1:24dbm

L Band3:24dbm

L Band5:22dbm

L Band7:24dbm

L Band8:22dbm

L Band20:22dbm

L Band28:24dbm

L Band38:24dbm

L Band40:24dbm

5G WIFI restriction info:

This device may be operated in all members states of the EU and UK. Observe national and local regulation where the device is used. This device maybe restricted for use, depending on local network. More details as below.

1. The 5150-5250MHz frequency band: Indoor, including installations inside road vehicles, trains and aircraft, and limited outdoor use (note 1).

14

2. The 5250-5350MHz frequency band: Indoor use, inside buildings only. Installations in road vehicles, trains and aircraft are not permitted (note 2). Outdoor use is not permitted.

3. The 5470-5725MHz frequency band: Indoor and outdoor use. Installations in road vehicles, trains and aircraft and use for UAS are not permitted (note3).

4. In accordance with the relevant statutory requirements in UK, the 5150-5350MHz frequency range is restricted to indoor use only in UK.
Note1: If used outdoors, equipment shall not be attached to a fixed installation or to the external body of road vehicles, a fixed infrastructure or a fixed outdoor antenna.

Note2: Operation of WAS/RLAN installations in large aircraft (excluding multi-engined helicopters) is permitted until 31 December 2028 with a maximum mean e.i.r.p. for in-band emissions of 100mW.

Note3: Operation of WAS/RLAN installations in large aircraft (excluding multi-engined helicopters), except in the frequency band 5600-5650MHz, is permitted until 31 December 2028 with a maximum mean e.i.r.p. for in-band emissions of 100mW.

	UK		AT BE BG CH CY CZ DE DK EE EL ES FI FR HR HU IE IS IT LT LI LU LV MT NL NO PL PT RO SE SK TR SI UK(NI)
---	----	---	--

FCC Caution.

a、 § 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b、 § 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

c、 § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.