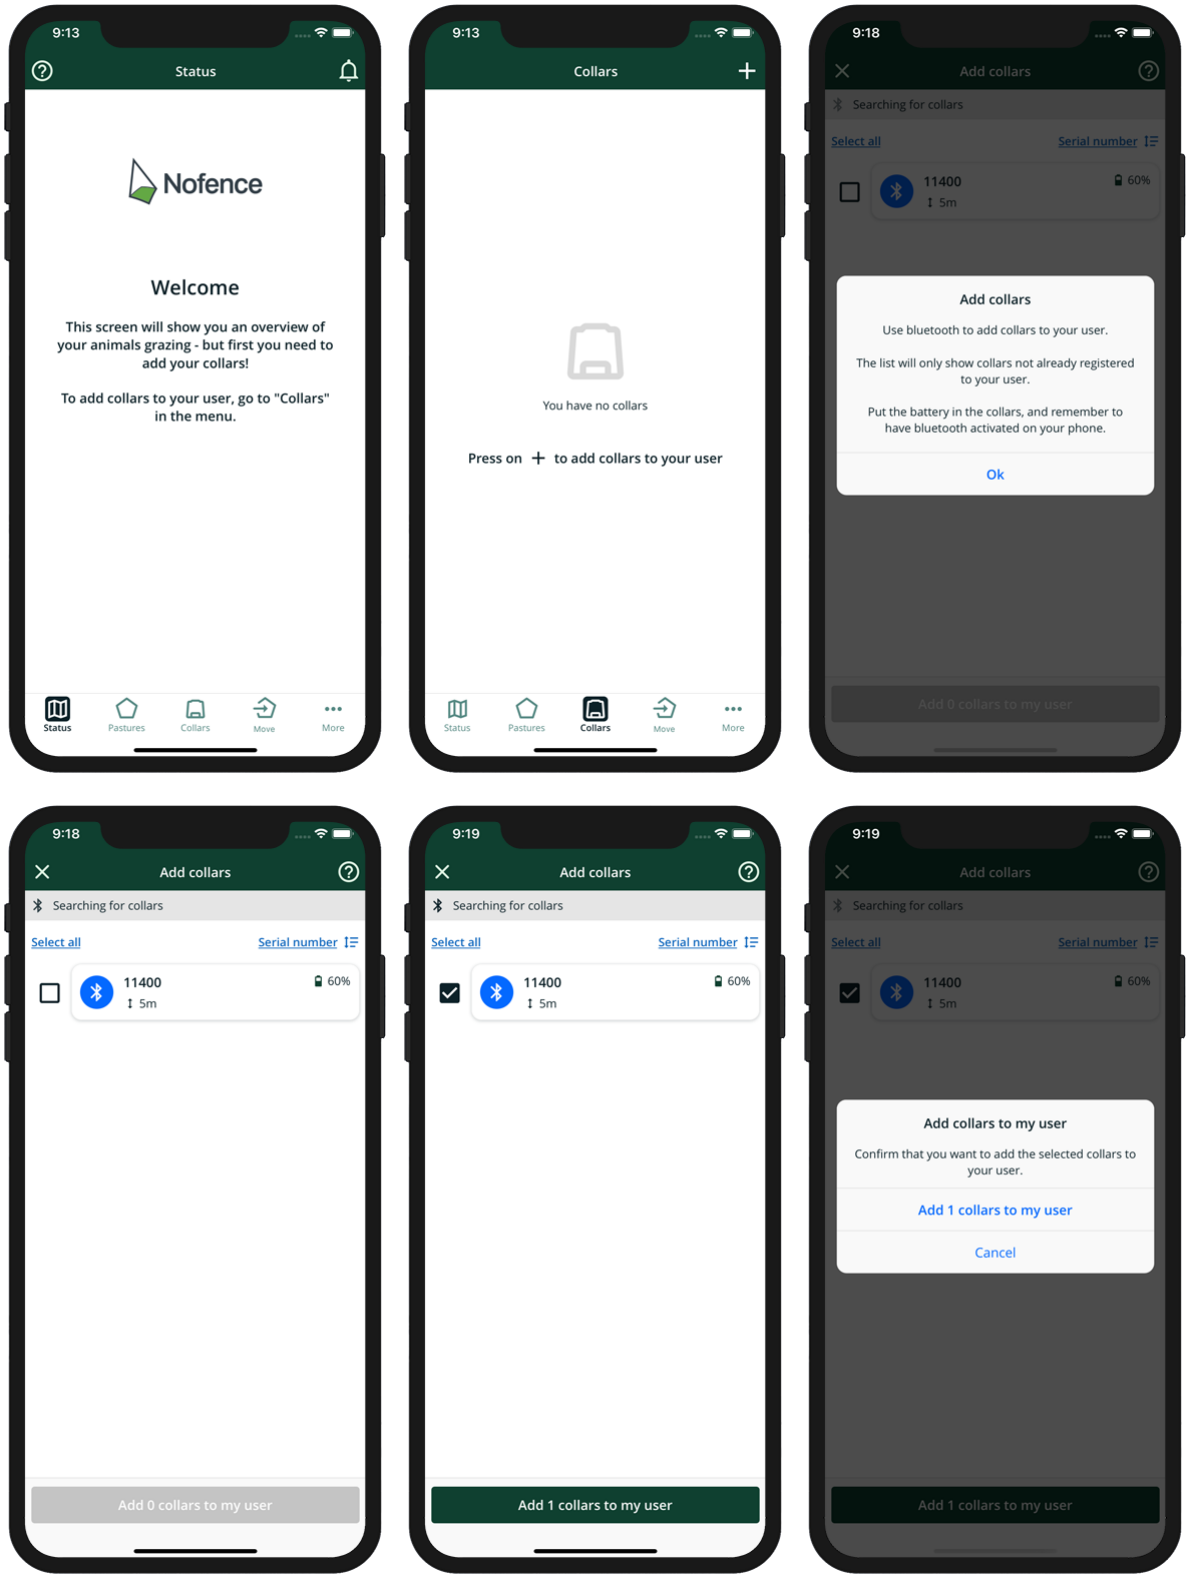

The collars that appear with Bluetooth contact on the list, are all collars with Bluetooth contact. You will however only be able to add collars which do not have an owner. If you attempt to add a collar belonging to another user, an error message will appear.

Removing collars from your user

Remove single collars from your user by selecting the Collars option from the main menu. You are only able to remove collars without an active pasture, so make sure the collar you want to remove is found in the Without pasture list.

Select the collar you want to remove and scroll down to press the Advanced button at the bottom of the screen. Select Remove collar and submit the reason for the removal. Confirm to remove the collar from your user.

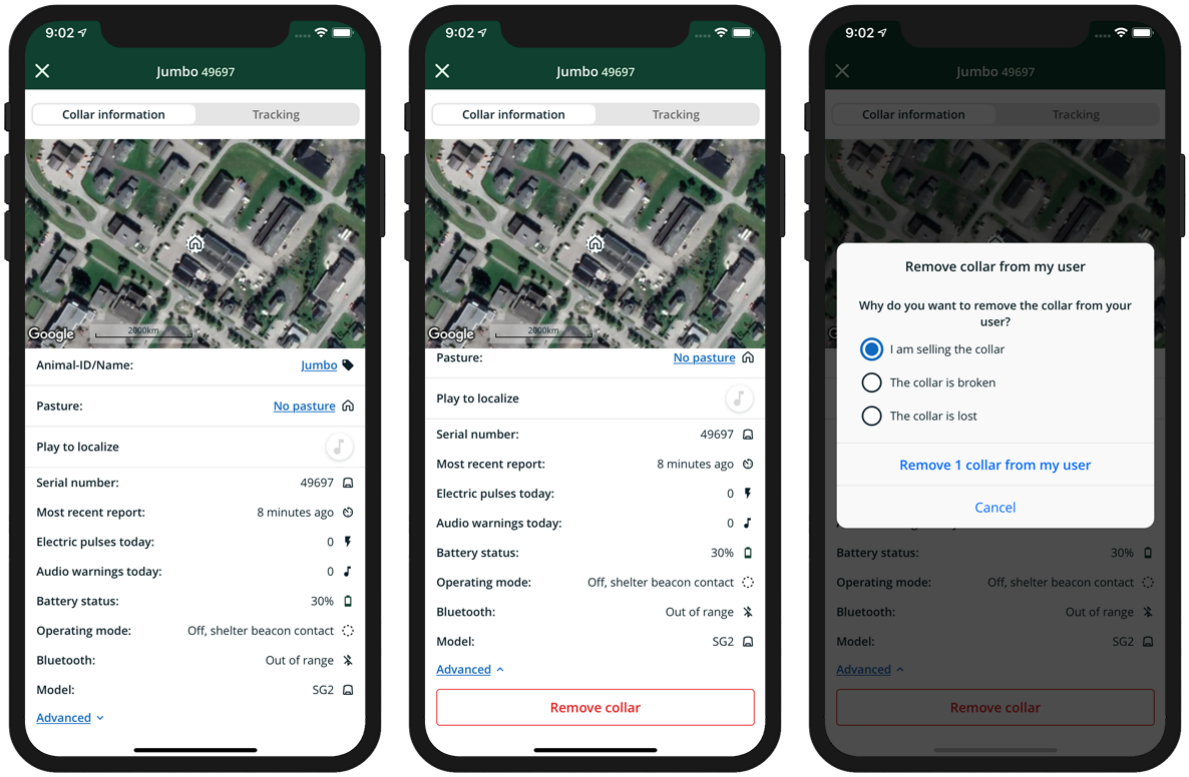

To remove several collars at the same time, select More from the main menu, then press Account settings and Administrate collars. Tick the boxes of the collars you want to remove or press on the Select all box at the top of the list. Select Remove collars and submit the reason for the removal. Confirm to remove the collars from your user.
You are only able to remove your own collars from your own user. Remember that anyone who has access to your app also can perform this operation.

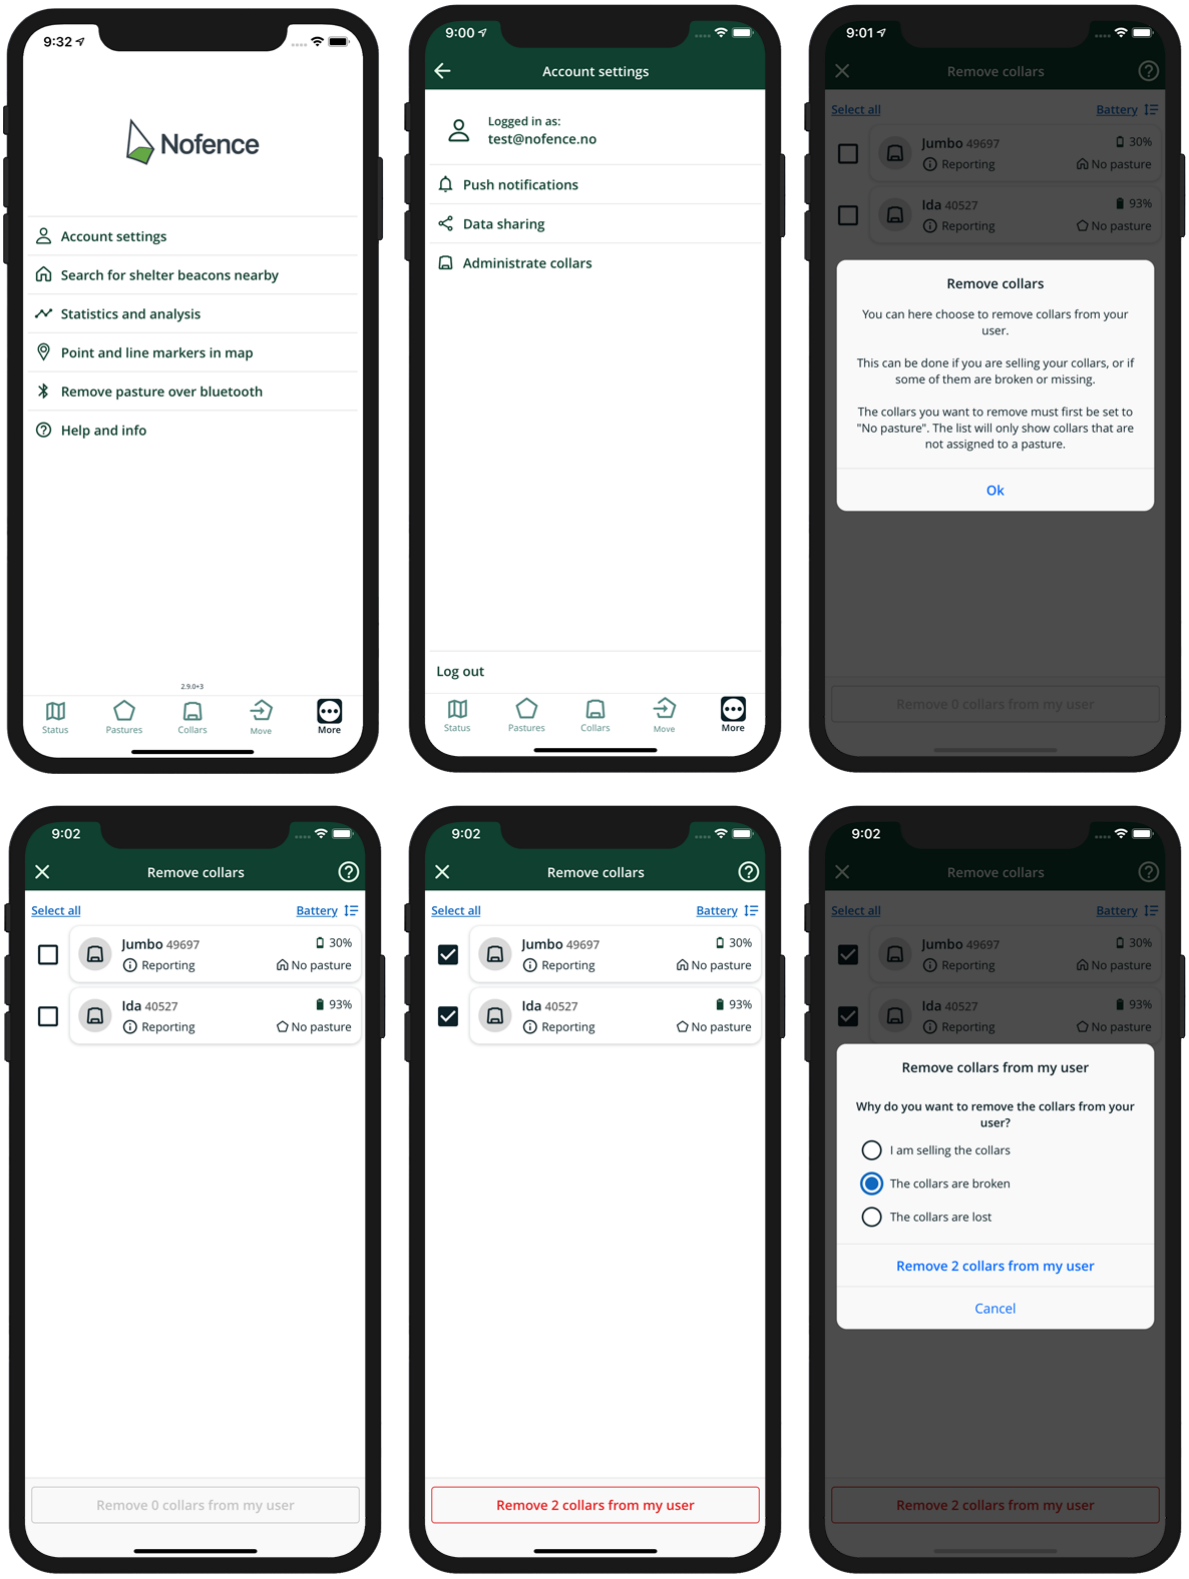

Note that changes in the number of collars may affect your price plan.

4.5. Move

Transferring collars to a new pasture

When transferring the animals to a new pasture, select ‘Collars’ from the bottom of the screen. Find the option ‘Set pasture’ on top left of the collar list and select the collars you want to move. Opt for ‘Select all’ if you would like to transfer all the collars on the list.

Find ‘Set pasture’ to the upper right. Your available pastures will appear in a new window. Select the pasture you want to move the collars to and choose “next” at the bottom of the list. Select “confirm, set pasture” to transfer the collars.

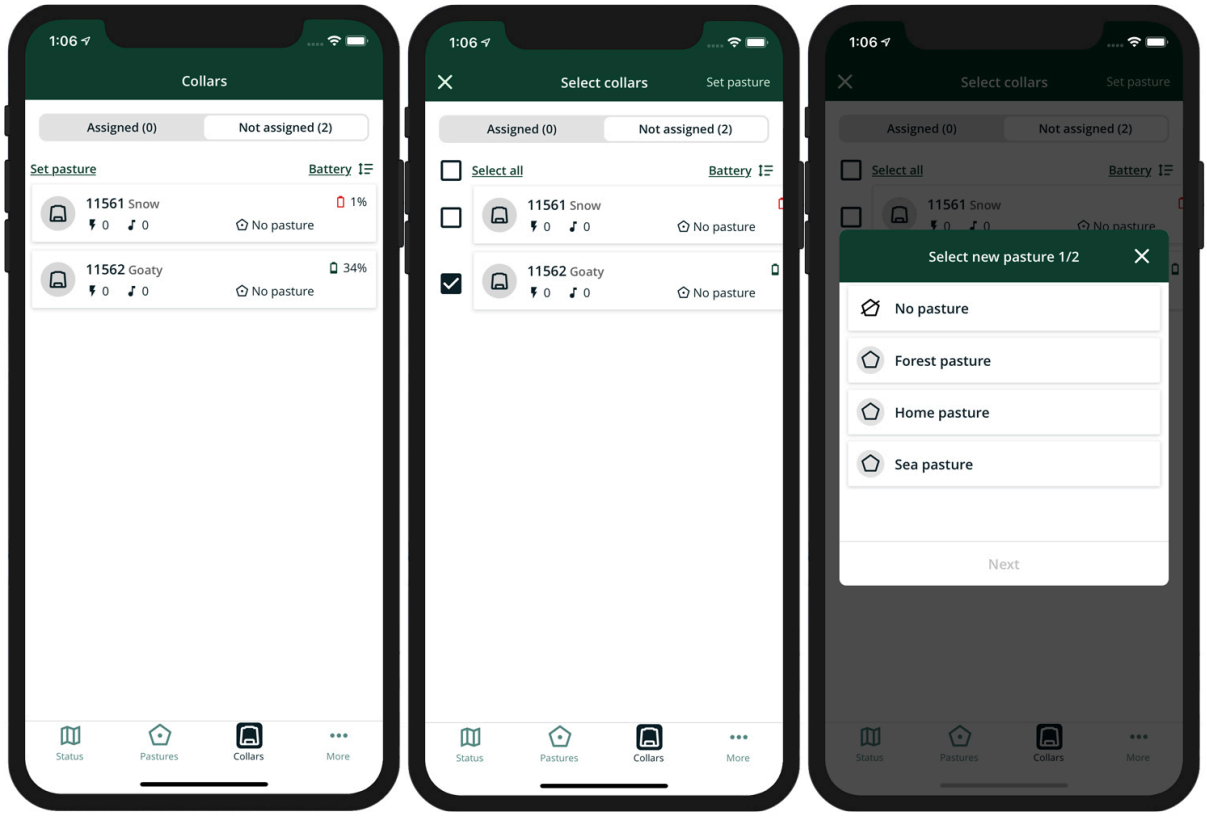

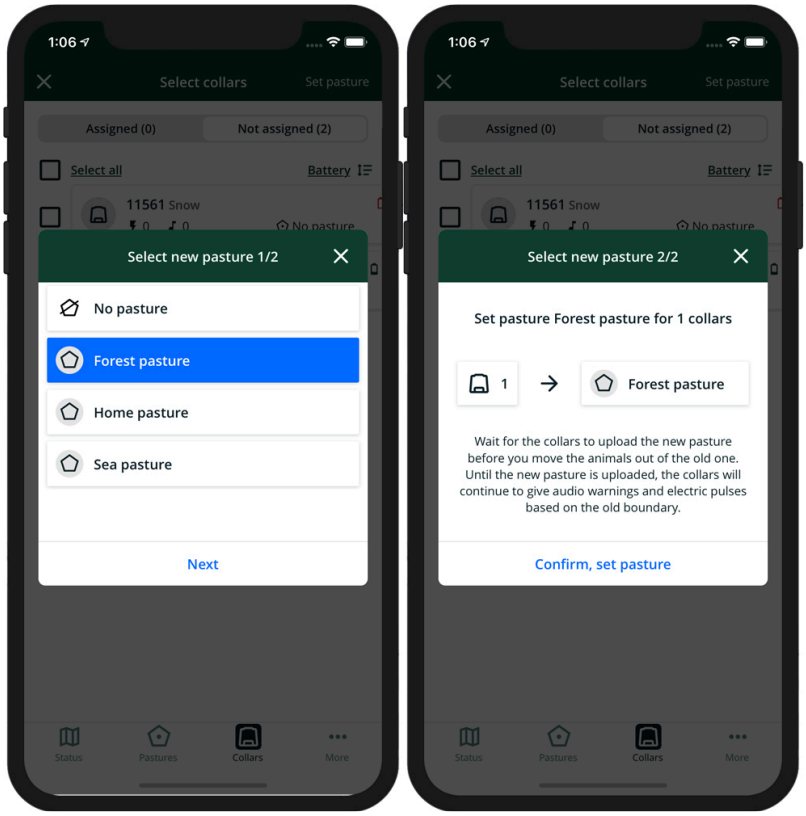

The app will inform you that the collars are downloading a new pasture. When the collars have received the new pasture, the app will tell you that it is now safe to transfer the collars.
It's time to take the animals to the new location! The operating mode will be activated as soon as the collar reports of being located inside the new pasture area.

Transferring the animals out of a Nofence pasture/switching off a Nofence pasture

When moving the animals into a building or a vehicle, follow the same procedure as when moving the animals to a new pasture. Find 'Collars' at the bottom of the screen. Find the option 'Set pasture' on the new page and select the collars you want to move. Opt for 'Select all' if you would like to transfer all the collars on the list.
When you have chosen the collars you want to transfer, select "Set pasture" from the upper right corner of the screen. A list of all your available pastures will appear. Select the "No pasture" option at the top of the list. Go down to the bottom of the list and select "Next". Then "Confirm, remove pasture" at the bottom of the next window.

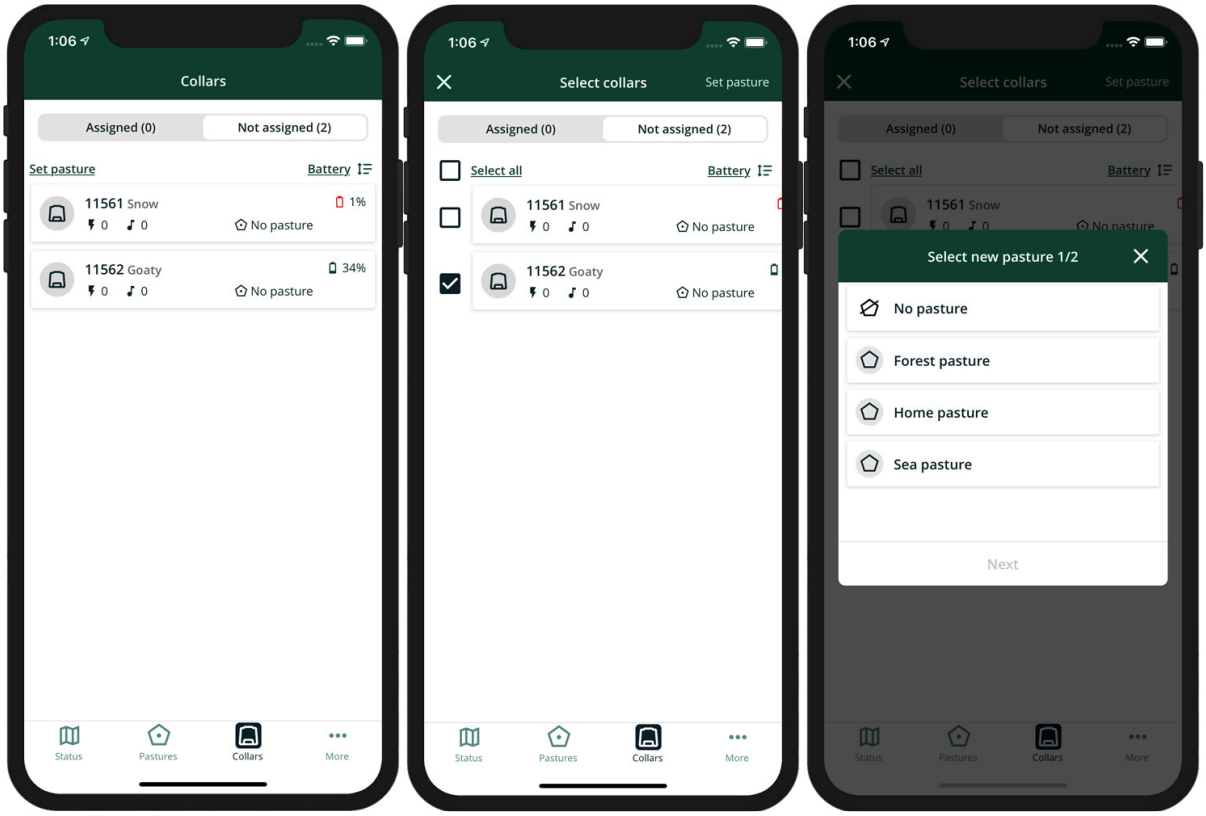

When all the collars have downloaded the ‘No pasture’ option, the app will tell you that it is safe to move your animals to their new location.

If you are taking the collars off and plan to store them for some time, remember to remove the batteries to stop the usage costs from running. We would also recommend performing maintenance on the collars before putting them away for storage.

4.6. More

More

The last menu option is More, where you find Account settings, the shelter beacon search function, Statistics and analysis, a function for switching a pasture off via Bluetooth and finally; Help and info.

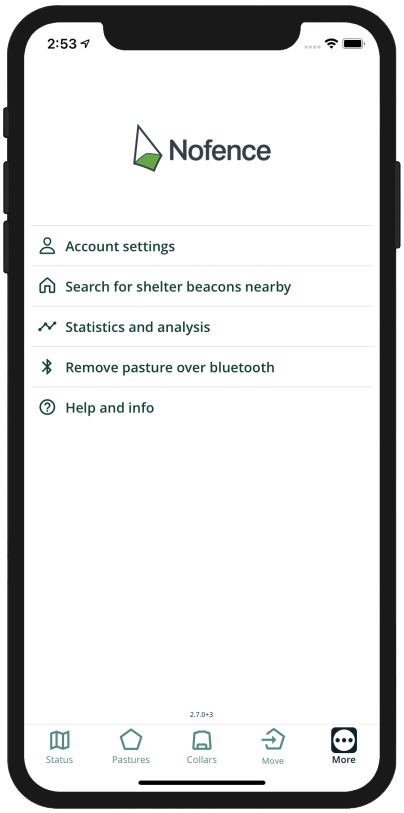

If you press on the question mark icons found in various places in the app you will find relevant info about the present app options.

4.6.1. My user

Under the menu option More you will find My user. From here, opt for My account or choose what incidents to receive push notifications for. This is also where you decide which data you want to share in Nofence' official Grazing map and the space where you can remove multiple collars from your user. This is also where you log out from your user.

My account

Click here to go to your account page, where you will find info related to your account.

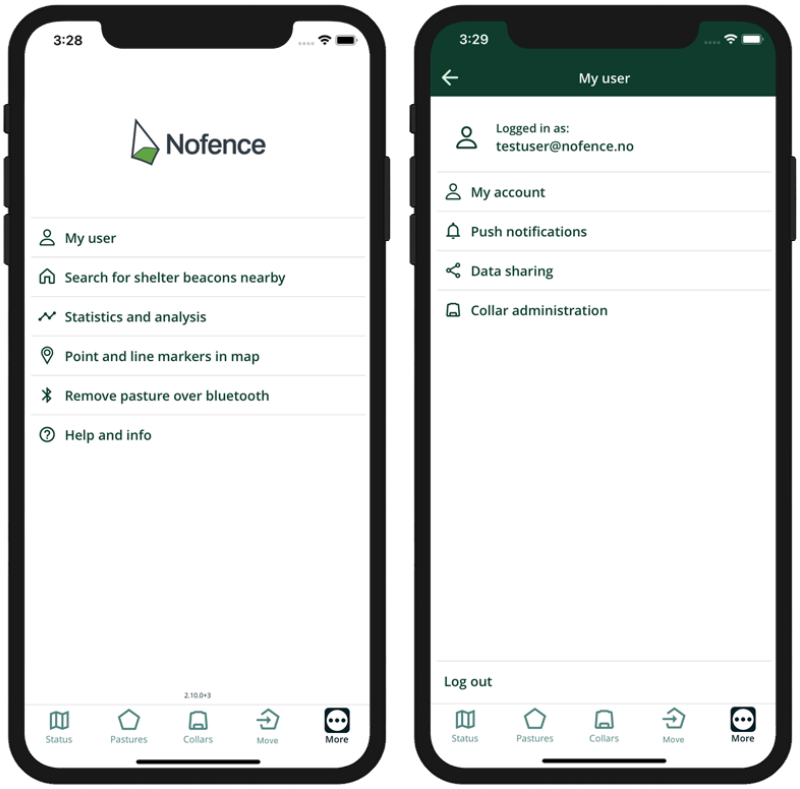

Push notifications

Go to More, press on My user and then Push notifications to enable or disable push notifications for electric pulses, multiple electric pulses per collar, escapes, low battery, empty battery, or for inactivity. The latter could be an indication of disease or injury and should be followed up by the farmer.

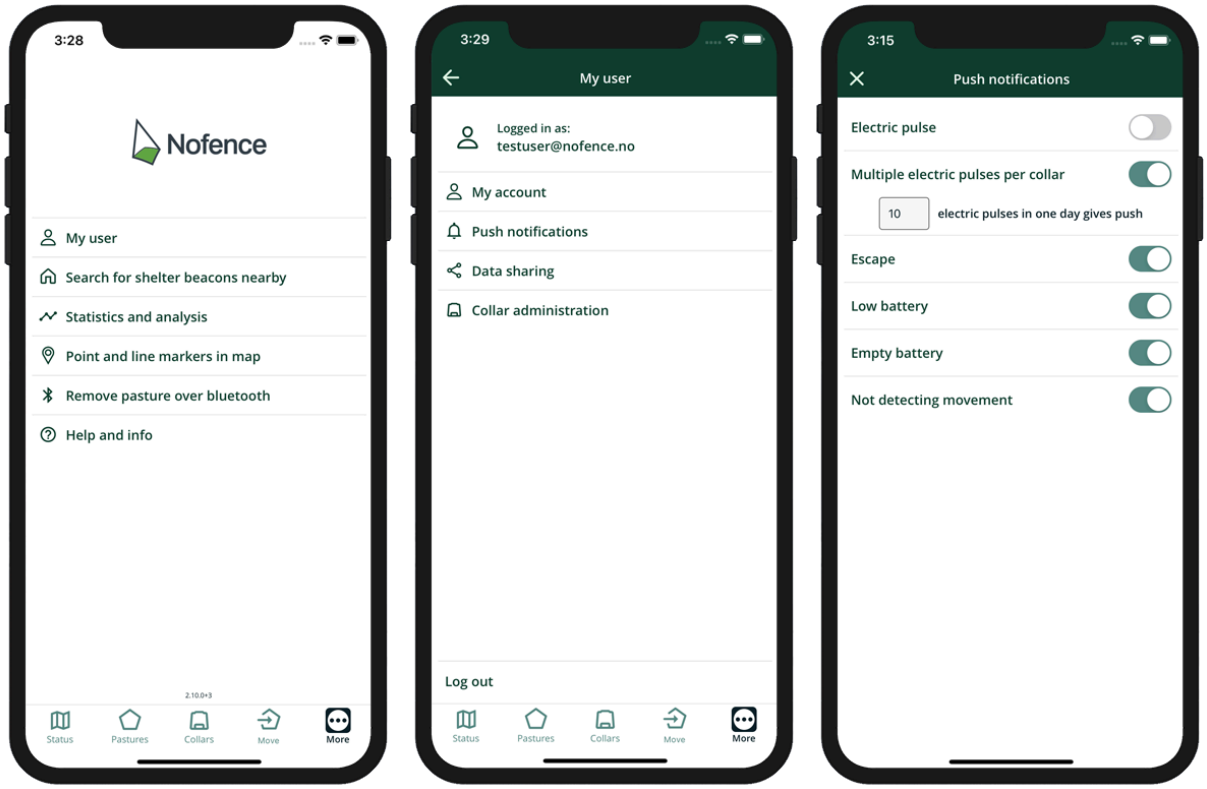

Sharing of data to Nofence' official Grazing map

Nofence' official Grazing map is a service that allows the farmer to share the animals' most current positions as well as their current grazing boundary with the public. Many animals graze on grounds where members of the public are passing through, and making the animals positions and pasture boundaries available through the Grazing map could be of great benefit to the farmer. You are also able to share your contact info (name and email address) in the map, allowing members of the public to contact you in case they notice a sick or injured animal.

Under this section you also find grazing posters with QR codes. The codes directs to the Grazing map and the posters further inform of animals grazing in the area using Nofence collars, as well as encourages people to keep their dogs on a lead around the animals.

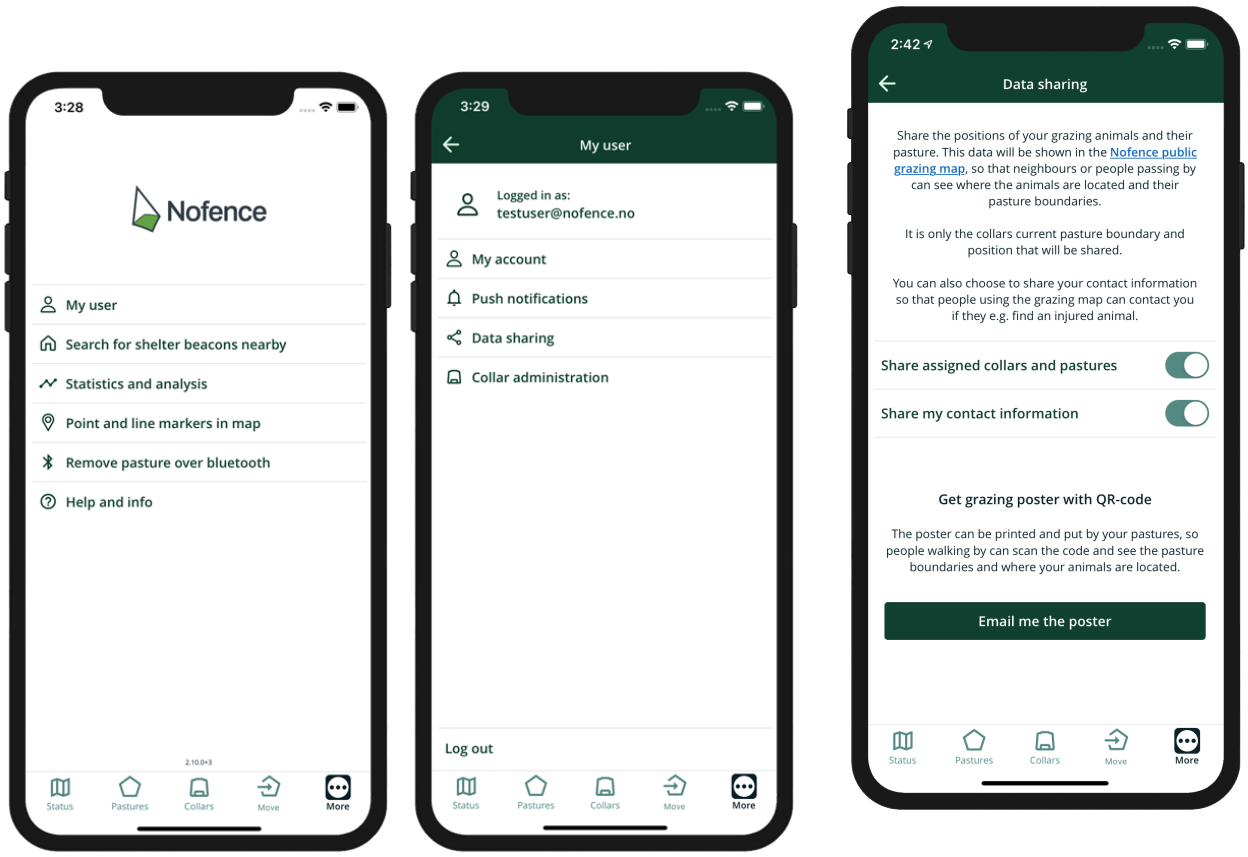

Administrate collars

To remove several collars from your account at the same time, select More from the main menu, then press Account settings and Administrate collars. Tick the boxes next to the collars you want to remove or press on the Select all box at the top of the list. Select Remove collars and submit the reason for the removal. Confirm to remove the collars from your user.
You are only able to remove collars from your own user. Remember that anyone who has access to your app also can perform this operation.

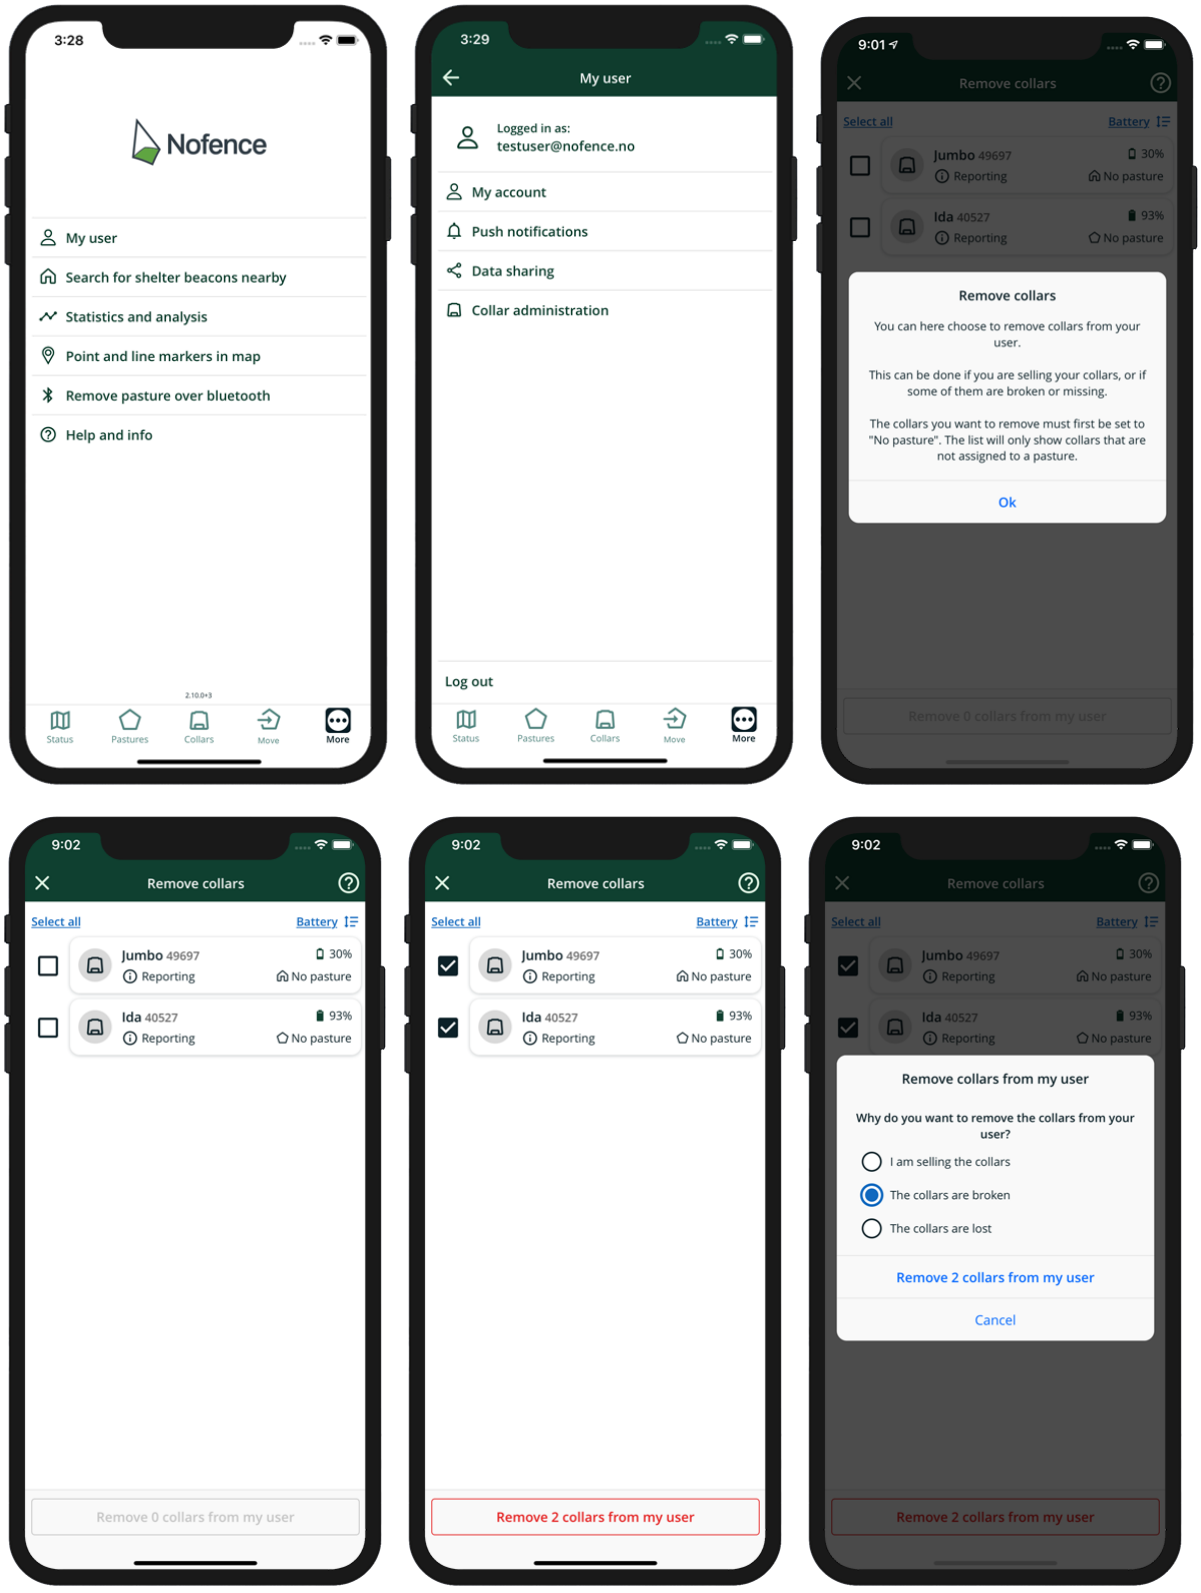

Please note that changes in the number of collars may affect your price plan.

4.6.2. Search for Shelter beacons nearby

Find your Nofence shelter beacons by selecting ‘More’ at the bottom of the status page, and then press ‘Search for shelter beacons in proximity’. A list of all nearby shelter beacons will appear.

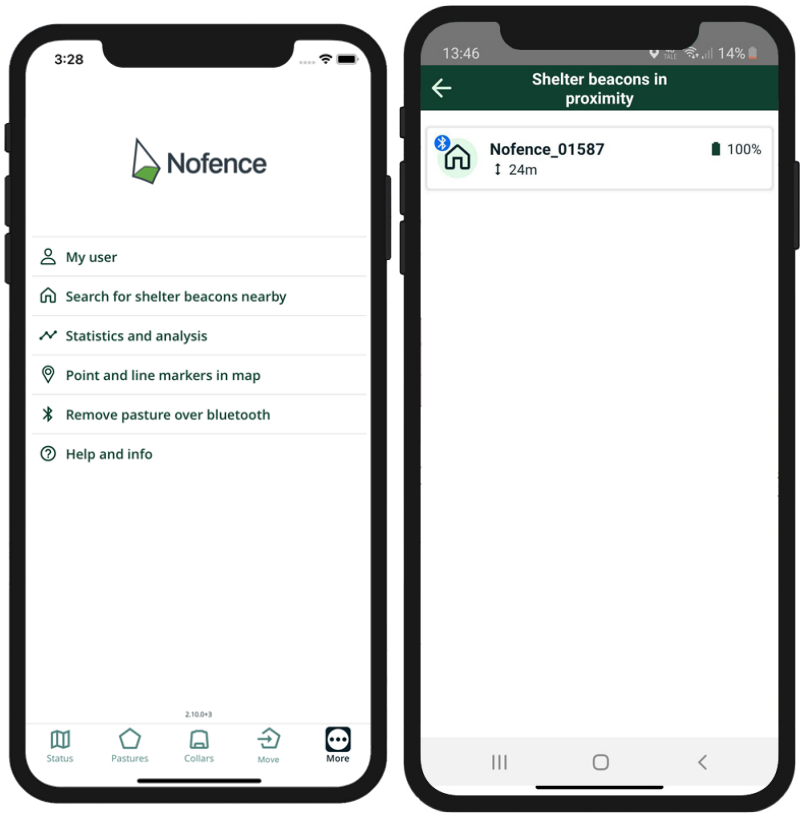

4.6.3. Statistics and analysis

Use the Statistics and analysis option to have a closer look at Electrical pulses and escapes, Pasture analysis, Activity and Mobile coverage.

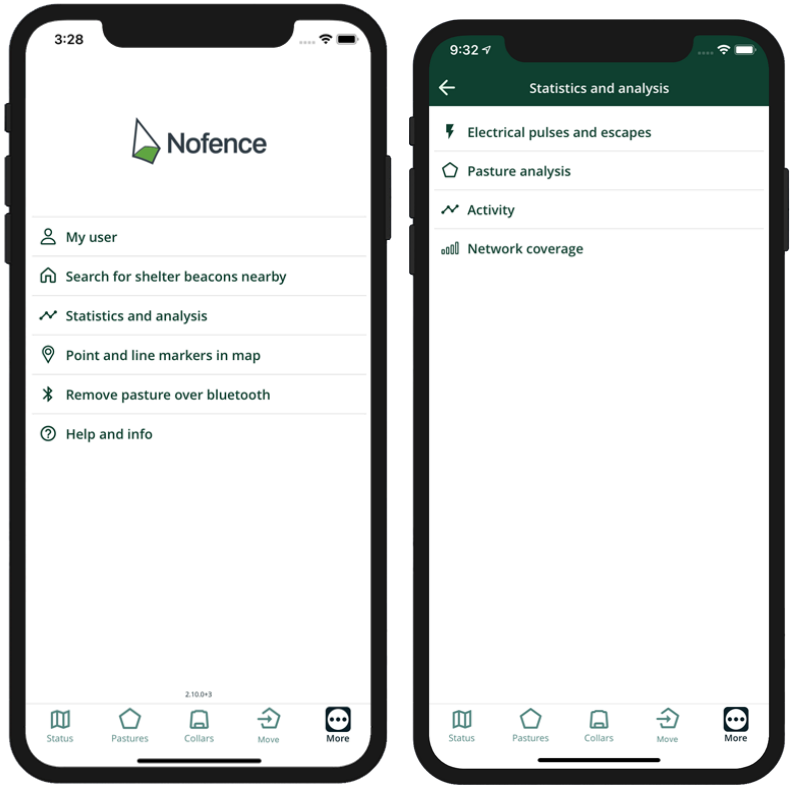

Electrical pulses and escapes

In this section you will find an overview of audio sounds, electrical pulses and escapes for each collar. You can opt to see data for today's date, yesterday's date or last week. You may also sort the list by audio signals, electrical pulses and escapes. Press on a collar to get more details and tracking info.

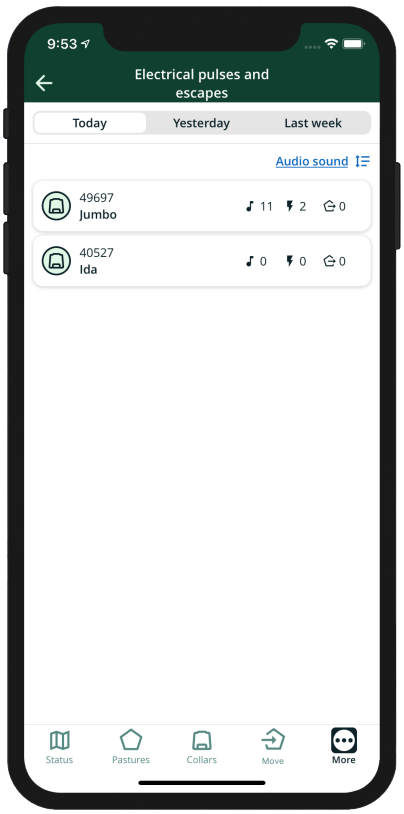

Pasture analysis

Pasture analysis gives an overview of logged positions, electrical pulses and escapes on pasture level. Sort by today's date, yesterday's date and last week. The data is visualized in a heat map, which can be useful for analysis and optimization of the pasture.

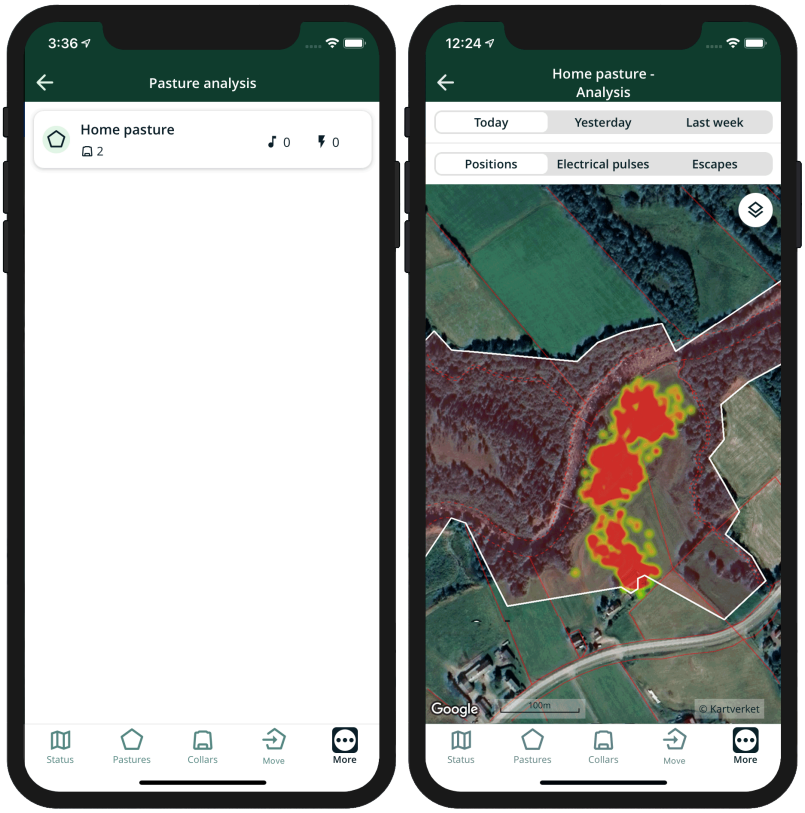

Activity

This section provides statistics which show the animals' activity levels. If you notice significant changes in activity, this may be a sign of illness or injury, and the animal should be seen to.

Mobile coverage

Although it may not be straightforward to know if an area has good or poor mobile coverage, the collar logs data which provide more accurate information about this. Opt for Mobile coverage under the Statistics and analysis section to see if the collar has spent time in an area of poor, medium, or good mobile coverage for the past 24 hours or week.

The red line marks the point where the collar is no longer able to connect to the server via the mobile network (reporting). If the collar is unable to send you information via the mobile network, its icon turns yellow in the app. Note that the collar may very well still have the operating mode intact and will emit audio warnings and electric pulses as per normal even though they are unable to deliver reports. When the collar is back in an area with sufficient mobile coverage, it will start reporting again.

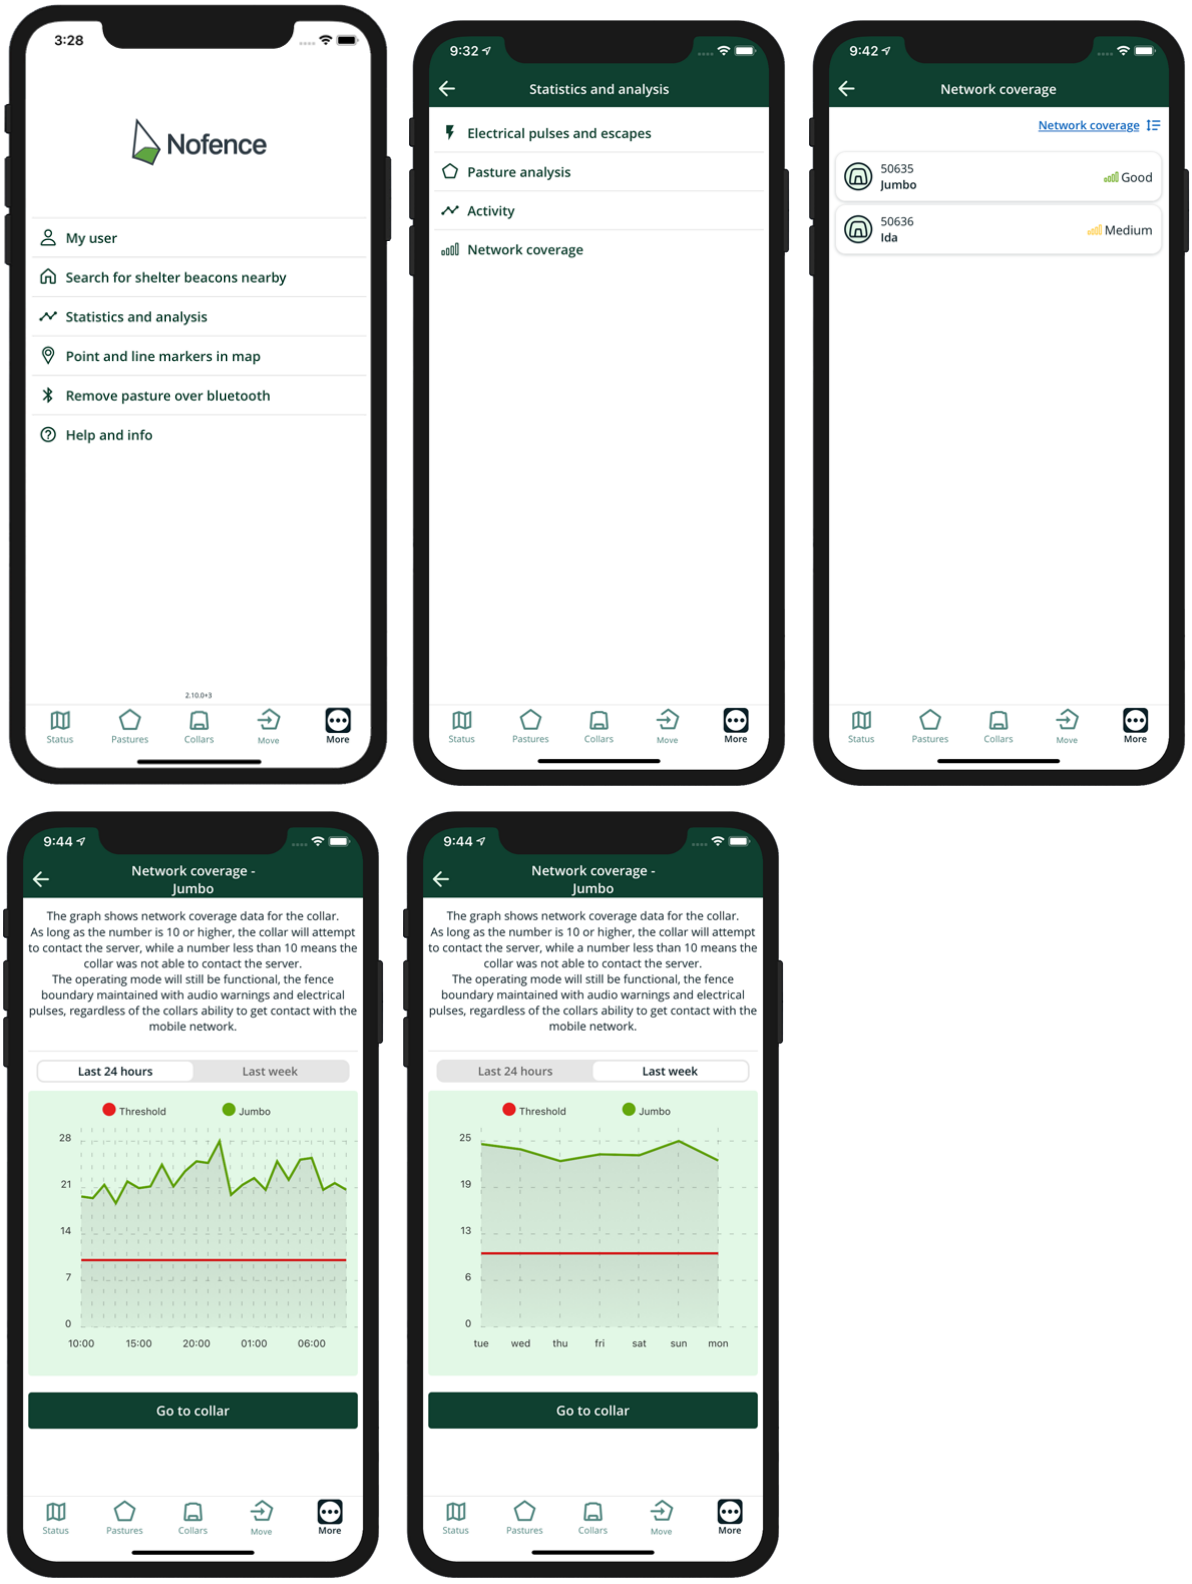

You will also receive information about poor mobile coverage on a pasture level. If the majority of collars in a pasture report of having poor mobile conditions, a pop-up window will notify you of this.

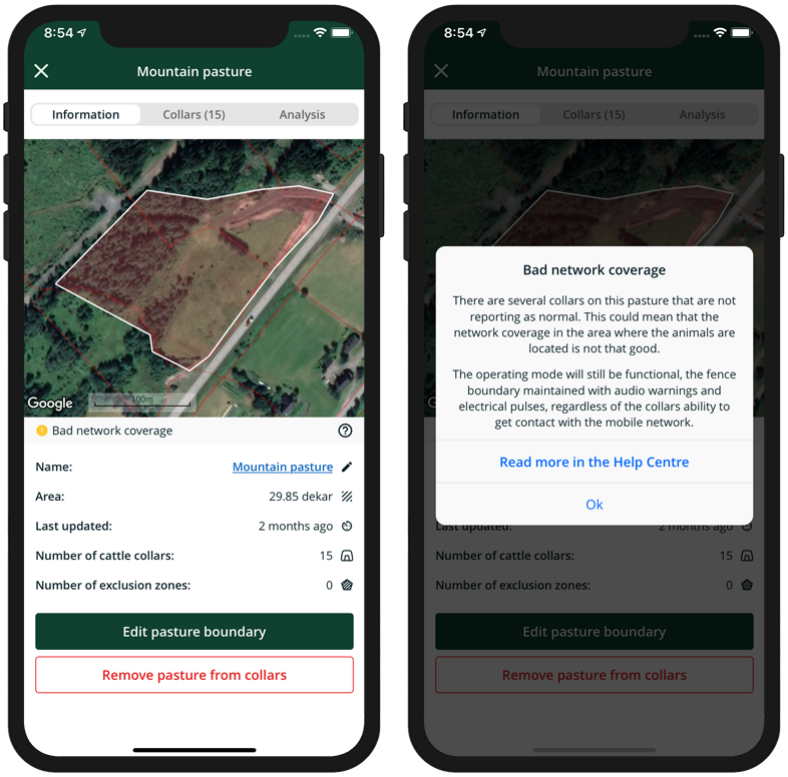
8:54
Mountain pasture
Information
Collars (15)
Analysis
Google
Bad network coverage
Name:
Mountain pasture
Area:
29.85 dekar
Last updated:
2 months ago
Number of cattle collars:
15
Number of exclusion zones:
0
Edit pasture boundary
Remove pasture from collars
8:54
Mountain pasture
Information
Collars (15)
Analysis
Bad network coverage
There are several collars on this pasture that are not reporting as normal. This could mean that the network coverage in the area where the animals are located is not that good.
The operating mode will still be functional, the fence boundary maintained with audio warnings and electrical pulses, regardless of the collars ability to get contact with the mobile network.
Read more in the Help Centre
Ok
Number of cattle collars:
15
Number of exclusion zones:
0
Edit pasture boundary
Remove pasture from collars

4.6.4. Point and line markers in map

If you want to mark the spot where the watering trough or salt block is located in your pasture, use the custom map markers and lines option. The icons will show in the map on the status screen and in the pasture editor.

Go to More in the main menu and select Point and line markers in map. Press the plus icon on the top right of the screen and then choose what marker you want to add. Press on the map to place your maker or line and save on the top right of the screen.

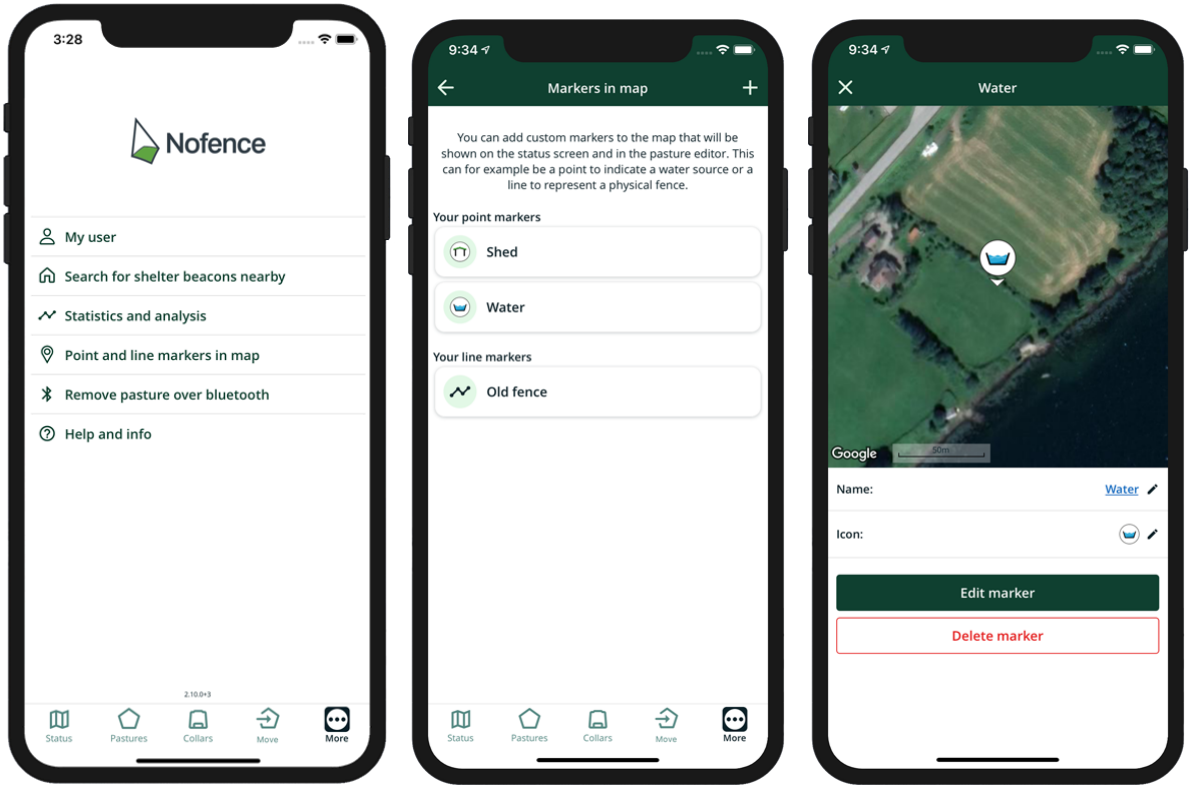

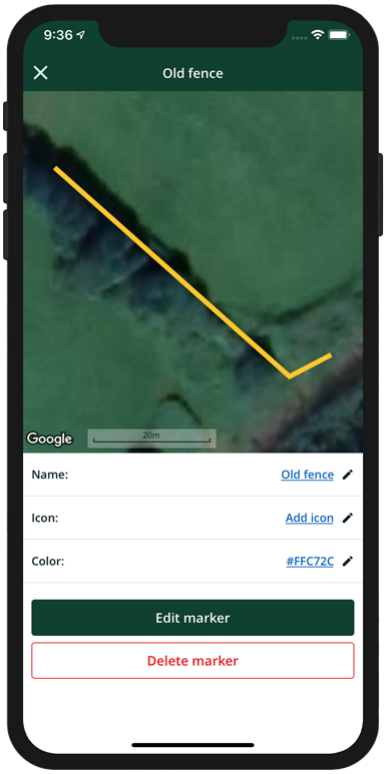
9:36
Old fence
Google
20m
Name:
Old fence
Icon:
Add icon
Color:
#FFC72C
Edit marker
Delete marker

4.6.5. Remove pasture via Bluetooth

Opt for the Remove pasture over Bluetooth option if you are in an area with poor or no mobile coverage, or if you for other reasons are prevented from changing the pasture to No pasture the standard way.

This functionality should only be used if you need to take animals out of a pasture and you are prevented from doing so by poor/no mobile coverage or other unforeseen reason.

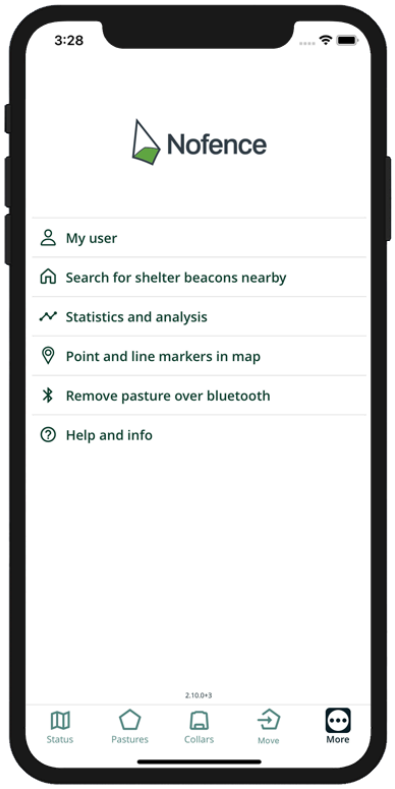

Bluetooth connections work best over short distances and with few obstacles, so double check that all selected collars have had their pasture removed before physically taking the animals out of the old pasture area.

We recommend that you have the animals under control before removing the pasture, as this procedure cannot be undone once the move has been confirmed. The collars will need to regain mobile coverage to be able to load a new pasture.