# Sharemike: Initial Set-Up

1. Ensure the T25 is on. The white power light will glow.

2. Turn on the Sharemike by pressing and holding the power button until the LED lights.

3. Tap the power button to unmute the microphone.  The Mute/Talk light will turn from white to blue.

4. Grip the barrel in the center section.

5. While speaking in a normal voice, increase the volume with the Sharemike until your voice is barely audible.

POWER BUTTON

VOLUME CONTROL

POWER LIGHT

---
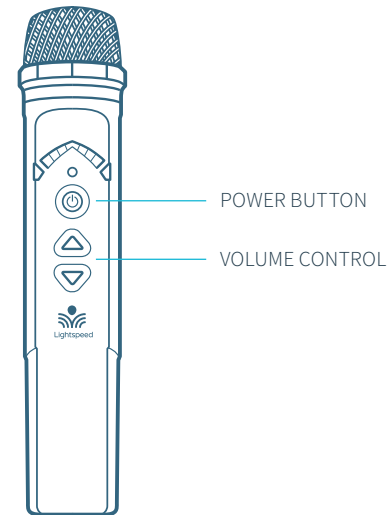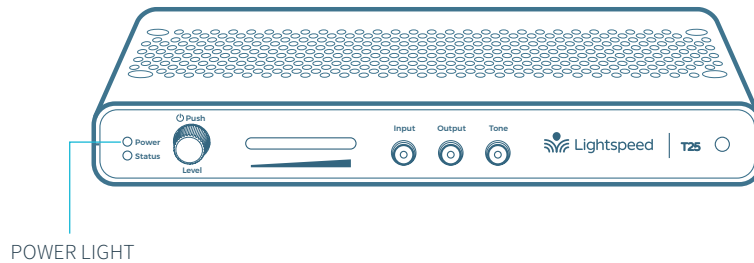
💡 **PLEASE NOTE:** This equipment is designed to supplement and distribute the user's voice so they are able to speak in a conversational tone. Having the volume set too high will result in feedback and listener fatigue.
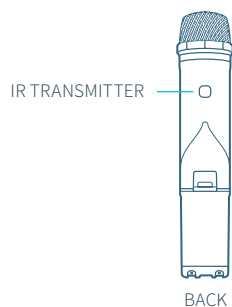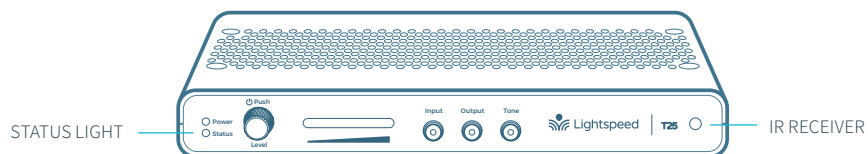
# Pairing your Sharemike

Your system is shipped with microphones and base units pre-paired for quick and easy use.

If for any reason you need to pair new components, follow this pairing process:

**PLEASE NOTE:** All microphones should be out of the charger while pairing.

STATUS LIGHT

IR RECEIVER

IR TRANSMITTER

BACK

**1** From a powered off state, point the IR transmitter lens, located on the back of the microphone, toward the T25.

**2** Press and hold the power button for 5 seconds until the mic 1 and mic 2 lights start flashing, then release the button and let the pairing process finish.
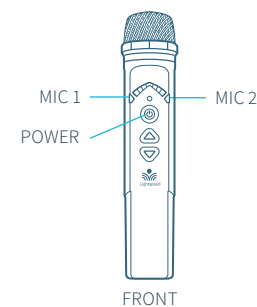
**3** The Status light on the T25 will light up indicating the pairing process is complete. The mic 1 or mic 2 light on the microphone will stay illuminated.

MIC 1

MIC 2

POWER

FRONT

# Media Connector Controls and Indicators

## FRONT PANEL

1. **POWER LIGHT**
   **White light:** Power on

2. **POWER BUTTON / VOLUME ADJUSTMENT:** Press and hold this button to turn the system power on or off. This also functions as an adjustment knob for the volume and tone of the paired T25 depending on the mode selected  (see 4, 5, 6 below).

3. **STATUS LIGHT:** Media Connector link and pair indicators.
   **Solid white:** Media Connector is paired to the system
   **Off:** Media Connector is not paired to the system

4. **AUDIO INPUT VOLUME SELECTOR:** Selects Audio Input as the mode for the adjustment knob (2) for the audio sources connected to the audio inputs on the back of the Media Connector.

5. **AUDIO OUTPUT VOLUME SELECTOR:** Selects Audio Output as the mode for the adjustment knob (2) for the audio devices connected to the audio outputs on the back of the Media Connector.

6. **TONE SELECTOR:** Selects Tone as the mode for the adjustment knob (2) for the microphone. This adjusts the bass or treble that is heard through the classroom speaker.
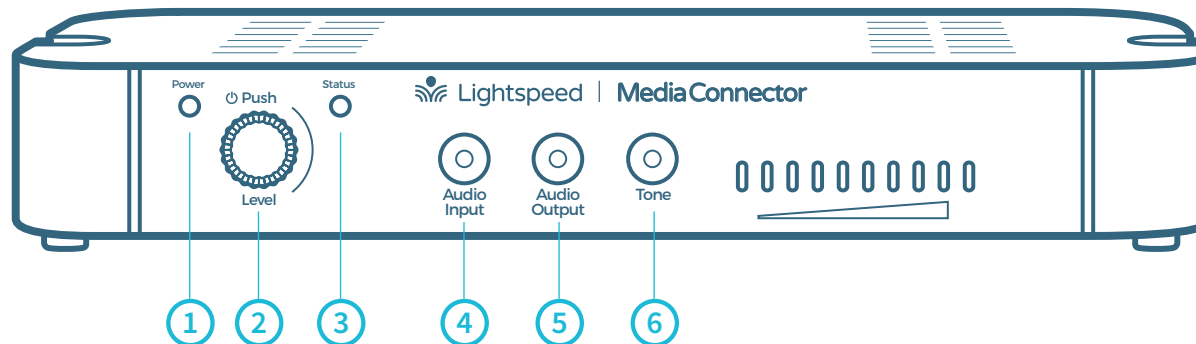
# Media Connector Controls and Indicators

## BACK PANEL

1.  **AUDIO INPUTS:** 3.5mm stereo connectors for connecting classroom audio sources to be played through audio system.

2.  **AUDIO OUTPUTS:** 3.5mm stereo connectors for connecting to an assisted listening device (ALD) or to a computer for recording.

3.  **USB INPUT:** Plug the USB-C end of the power cable into this USB port on the Media Connector.

    *   The USB port supplies power to Media Connector when connected to the Media Connector power supply, or from a laptop.

    *   It also acts as an input for a digital audio when connected to an audio source. Note that when the USB is used for audio input, the other four audio input jacks are not operational.

OPTIONAL ACCESSORIES
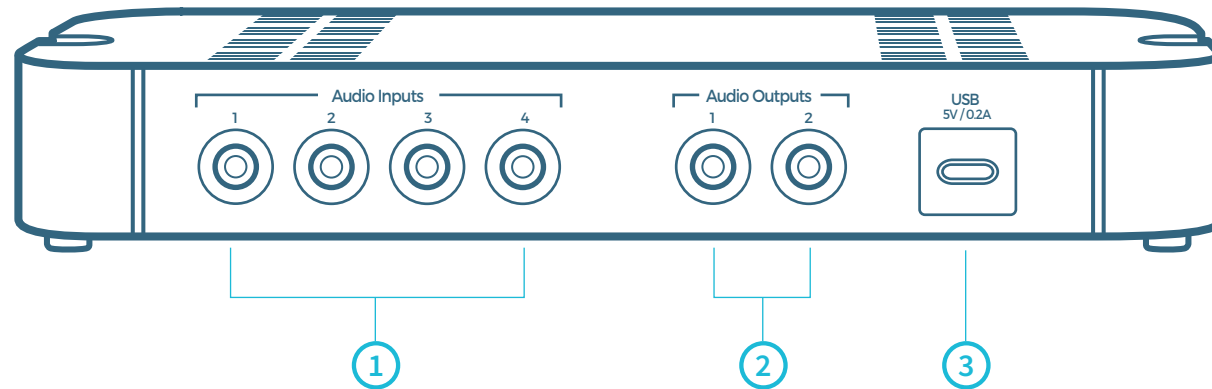
# Media Connector Set Up and Operation

## DETERMINE LOCATION

Media Connector is designed to be connected to the primary media source in the classroom, usually the computer or display panel.

### WALL MOUNT OR DESKTOP

The Media Connector can be placed on a table surface or wall-mounted.

- Choose a location that is convenient to the classroom audio sources and power supply.
- It should be located 3-6 feet off of the floor to allow for good transmission.
- Do not enclose in a metal cabinet or in a location where the signal will be obstructed.

**NOTE:** The Media Connector does not require a direct line of sight to the T25. However it functions best when no obstructions are between the two devices.

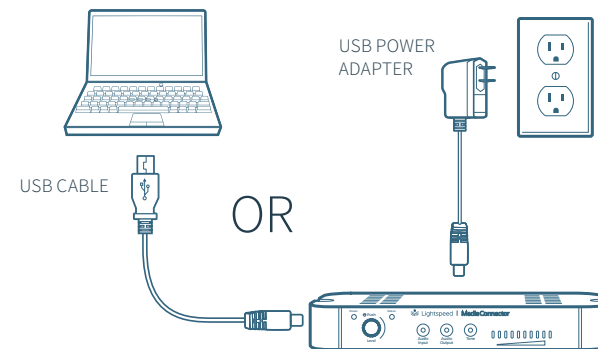

## CONNECT TO POWER

Connect the USB power cord to a computer. Plug the USB cable into the USB input on the back of the Media Connector.

*OR*

Use the USB power adapter to plug into a wall outlet.



USB POWER ADAPTER

USB CABLE

OR

# Connecting Media Connector to Audio

Audio can be connected using either a digital 2-way USB audio or analog audio:

## USB AUDIO

If locating and connecting to computer USB, Media Connector will default to digital USB audio (3.5mm analog audio ports will be disabled). USB audio enables a 2-way audio link to:

**Send audio from the computer to the T25** to ensure all audio can be played through the Topcat speaker.

**Send audio to the computer from the T25** to ensure the teacher's Clearmike and any student microphones are clearly picked up by a video conferencing solution.

## DISABLE/ENABLE USB AUDIO

### TO DISABLE USB AUDIO AND USE COMPUTER USB FOR POWER ONLY

- Unplug USB cable from Media Connector
- Press and hold Audio Output button
- Plug USB cable back to Media Connector
- Status light turns white to indicate USB disabled
- Release Audio Output button and system will reboot with disabled USB-C audio
- Analog Audio Inputs are now active

### TO ENABLE USB AUDIO ON YOUR MEDIA CONNECTOR

- Unplug USB cable from Media Connector
- Press and hold Audio Out button
- Plug USB cable back to Media Connector
- Status light turns blue to indicate USB-C is enabled
- Release Audio Out button and system will reboot with enabled USB-C audio
- Analog Audio Inputs are now inactive

USB-C
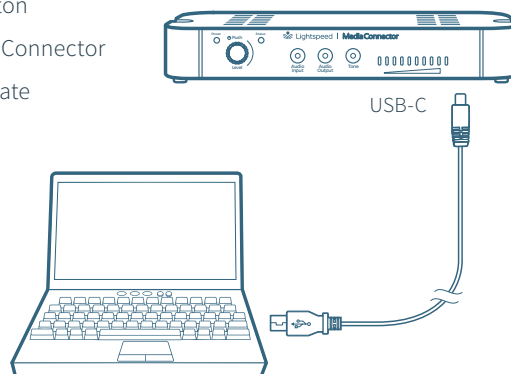
## ANALOG AUDIO

Plug your external audio equipment (e.g., video display) into one of the Audio input jacks.

Adjust the volume as needed by pressing the Audio Input selector and adjusting the level knob as needed.
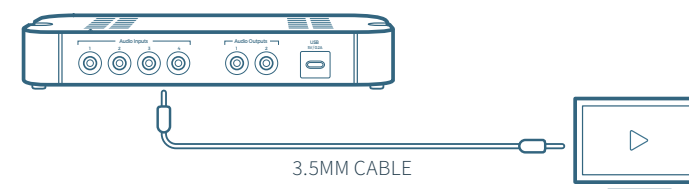
3.5MM CABLE

## COMPUTER SETTINGS

Once connected, open computer sound setting to select "Lightspeed Audio" as the microphone and speaker.

LEVEL          AUDIO INPUT SELECTOR

## SETTING THE VOLUME LEVELS

For recording, or to interface with an Assistive Listening Device, connect a 3.5mm cable to the Audio Output of the Media Connector to the microphone input on the device. Press the button for the desired level adjustment.

- Turn the knob to adjust volumes up or down for Audio Input/Output
- To adjust the Tone (bass/treble) of the speaker, press Tone and use the adjustment knob to turn the bass up and down
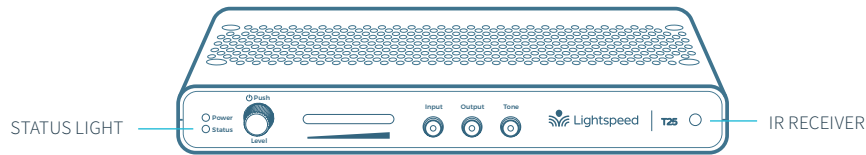
# Pairing T25 to Media Connector

Your system is shipped with microphones and base units pre-paired for quick and easy use. If for any reason you need to pair new components, follow this pairing process:

**PLEASE NOTE:** Microphones should be out of the charger while pairing.

STATUS LIGHT

IR RECEIVER

**1**

With the microphone turned on, point the IR transmitter lens toward the T25 (for Sharemike, the transmitter lens is located on the back of the microphone).

**2**
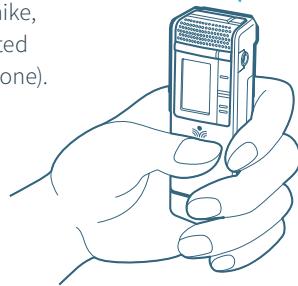
Press and hold the Clearmike power button for 5 seconds until the status light on the T25 starts flashing, then release the button. At this point, the status light on T25 will blink for 30 seconds.

If after 30 seconds the status light blinks rapidly, you will need to start the pairing process again.

POWER     IR TRANSMITTER

**CLEARMIKE**

**3**

On the Media Connector, press and hold the Tone Selector button for 5 seconds to put it into pairing mode.

When the status lights are solid on both the T25 and Media Connector, pairing is successful.

**MEDIA CONNECTOR**

STATUS LIGHT

TONE SELECTOR BUTTON

# Clearmike Battery Replacement

**BATTERY PART #L3.7V**

1. Push down on the latch and carefully pull the battery pack away from the Clearmike.

2. Insert new battery pack as shown and make sure the latch is secure.

3. Place the Clearmike in a cradle charger to charge the battery pack.
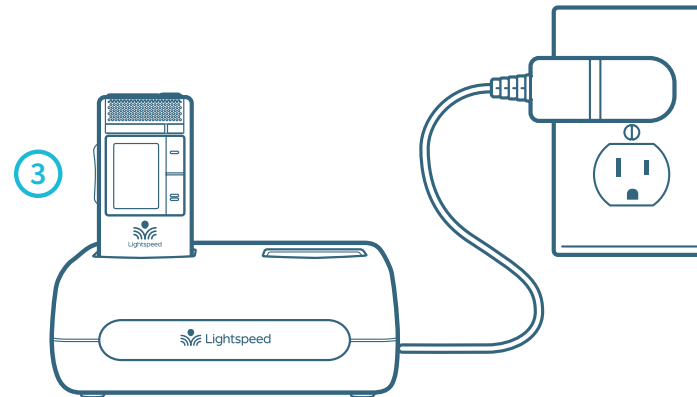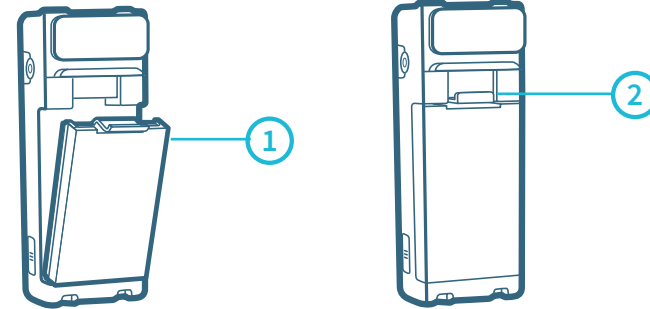
**PLEASE NOTE:** Lithium-ion batteries should not go in household garbage or recycling bins. Lithium-ion batteries should be taken to separate recycling or household hazardous waste collection points .

# Sharemike Battery Replacement

## BATTERY PART #L3.7V

1. Push down on the latch and carefully pull the battery pack away from the Sharemike.

2. Insert new battery pack as shown and make sure the latch is secure.

3. Place the Sharemike in a cradle charger to charge the battery pack.



① 

BATTERY REMOVAL LATCH



②

**PLEASE NOTE:** Lithium-ion batteries should not go in household garbage or recycling bins. Lithium-ion batteries should be taken to separate recycling or household hazardous waste collection points .

# Troubleshooting

**PROBLEM: Low battery indication:** Most problems are directly related to low battery power. Please run through the "Battery Check" items first. For remaining troubleshooting, use known good, fully-charged batteries.

**SOLUTION:** Battery Check

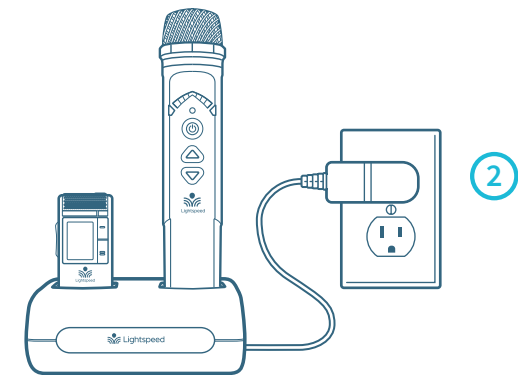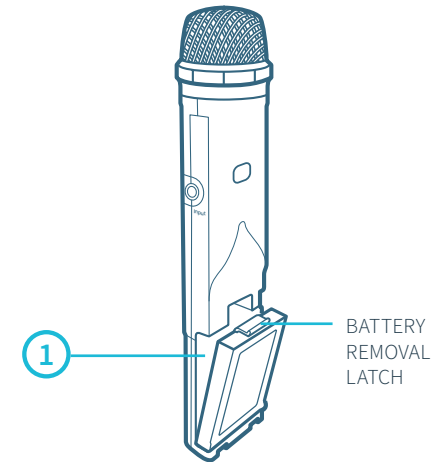• Confirm batteries are charged each night. A blinking red status light on the Clearmike and a solid red status light on the Sharemike indicates a low battery.

• Confirm proper batteries are used: Clearmike and Sharemike require the Lightspeed #L3.7V rechargeable battery pack.

• Make sure the microphones obtain a full charge. A full charge takes 5-6 hours.

• When charging the transmitter, the red charging light is solid. The green light will be solid when a full charge is reached.

**PROBLEM: Microphone doesn't indicate a "Ready" signal (solid white light)**

**SOLUTION:** Follow these steps to ensure the system is ready to use.

• Power cycle the microphone using either the Power/Mute button or by placing in a charger and then removing it. Wait for up to 30 seconds for the white light to turn solid, indicating READY for operation.

**PROBLEM: Low volume or feedback**

**SOLUTION:** Follow these steps to eliminate low volume or feedback:

• If the volume is too high, feedback will occur. Adjust accordingly.

• Adjust the volume level on the Clearmike or move the microphone further from the audio system speakers.

**PROBLEM: No sound from speaker and wireless components**

**SOLUTION:** Follow these steps to produce sound from T25:

• Confirm that the white POWER light located on the front panel of the T25 is on.

• Confirm the microphone is powered on and linked to the T25. The Talk/Mute light will be white indicating the microphone is linked.

• Tap the Power/Mute button to confirm that microphone is not muted. The Talk/Mute light on the front of the microphone will be solid blue indicating microphone is not muted.

• Check speaker connections on the T25. Make sure the cables are properly connected (see page 8 of this manual or the Installation Guide for more information).

• Slowly turn up the volume level while talking into the microphone.

**If you still have questions after reviewing these instructions, call Lightspeed Technical Services at 800.732.8999, 5am–5pm, PST.**

Customers outside the U.S. should contact their local reseller.

# Tips for Optimum Audio Performance

- **Speak in a natural voice.** A normal conversational speech level will provide an adequate signal. It is not necessary to increase the intensity of your voice the audio system provides adequate amplification (approximately 5–10 dB) above ambient room noises.

- Avoid **wearing jewelry** that may rub or bump against the microphone.

- **Mute the microphone** during private conversations with a student, parent, or other classroom visitor. You can tell the mic is muted when the light turns white.

- **Recharge microphones each night.** When recharged nightly, operating time (actual usage) for the microphones will last through a typical school day.

# Five-Year Limited Warranty

Lightspeed Classroom Audio Systems are guaranteed against malfunction due to defects in materials and workmanship for a period of five (5) years, beginning at the date of the purchase invoice. If such malfunction occurs, the product will be repaired or replaced (at Lightspeed's option) without charge during the warranty period.

Lightspeed's Warranty Exchange Program applies to all classroom audio systems within the five (5) year warranty period. If a classroom audio product or component has an issue that requires service, a refurbished replacement will immediately be sent to the customer to minimize downtime. Customers will receive the exchange product(s) or component(s) within 2-3 days. A prepaid return label will be included with exchanged products so original malfunctioned equipment can be returned to Lightspeed. Any exchanged equipment will remain covered under the original five-year warranty.

1. Warranty for T25 is five (5) years.

2. Warranty on Lightspeed NiMH and Lithium Polymer rechargeable batteries is one (1) year.

3. Warranty on microphones and components that support discontinued systems (FMA, SMA and FMCA) is one (1) year.

4. A prepaid shipping label will be provided by Lightspeed for warranty repairs within the United States. Customers outside the U.S. should refer to the Lightspeed website (www.lightspeed-tek.com) for warranty repair instructions.

5. Warranty does not extend to finish, appearance items, or malfunctions due to abuse or operation other than specified conditions, nor does it extend to incidental or consequential damages. Repair by other than Lightspeed or its authorized service agencies will void this warranty. Information on authorized service agencies is available from Lightspeed Technologies, Inc.

**Our Service Department (800.732.8999, 5am–5pm, PST) will handle your repair or replacement needs.**

Customers outside the U.S. should contact their local reseller.

# Safety Warnings and Certifications *(Pending Approval)*

**The lightning flash** with arrowhead symbol inside an equilateral triangle is intended to alert the user to the presence of non insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons.

**The exclamation mark** inside an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying this product.

**USE A LIGHTSPEED SUPPLIED BATTERY ONLY**

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Wall mount using #8 screws with a minimum head diameter of 0.3 inches, in all four mounting holes.

Use only with one of these power supplies:

| Manufacturer | Model |
|---|---|
| Dee Van Enterprise Co Ltd (Lightspeed) | DSA-60PFG-24 1 240250 |
| GlobTek, Inc. | GTM96600-6024-T3 |
| GlobTek, Inc. | GTM96600-6524-T3 |

**CERTIFICATIONS**

This product is listed to UL standards and requirements for electrical safety by Underwriters Laboratories Inc.

This product conforms with the essential requirements of the following European Union Directives: 2004/108/EC Electromagnetic Compatibility (EMC) and 2006/95/EC Low Voltage Directive (LVD).

Lightspeed Technologies launched a formal product recycle program in Europe that complies with the European Union Directive 2002/96/EC on Waste Electrical and Electronic Equipment ("WEEE Directive"). Please visit www.lightspeed-tek.com for more information.

This product is manufactured using lead-free processes and is free of other materials harmful to the environment. It conforms to the most stringent new European guidelines for consumer products (RoHS).

# Précautions De Sécurité et Certifications

## ATTENTION
### RISQUE D'ÉLECTROCUTION
### NE PAS OUVRIR

CONFORMÉMENT AUX NORMES D'INSTALLATION APPLICABLES, CE PRODUIT DOIT ÊTRE INSTALLÉ PAR UNE PERSONNE FAMILIARISÉE AVEC LA CONCEPTION ET LE FONCTIONNEMENT DU PRODUIT ET CONSCIENTE DES RISQUE ENCOURUS.

**L'éclair flèche** dans un triangle équilatéral avertit l'utilisateur de la présence d'une "tension dangereuse" non isolée a l'interieur de l'appareil, qui peut être d'une ampleur suffisante pour constituir un risque d'électrocution.

**Le point d'exclamation** contenu dans un triangle équilatéral avertit l'utilisateur de la présence d'importantes instructions d'exploitation et de maintenance dans la documentation qui accompagne ce produit.

UTILISEZ UNIQUEMENT LA BATTERIE LIGHTSPEED FOURNIE

ATTENTION: Risque d'explosion si la batterie est remplacée par un type incorrect.  Mettre au rebus les batteries usagées selon les instructions.

Batterie soumise à une pression d'air extrêmement faible pouvant entraîner une explosion ou une fuite de liquide ou de gaz inflammable.

Montage mural à l'aide de #8 vis avec un diamètre de tête minimum de 0.3 pouces, dans les quatre trous de montage.

À utiliser uniquement avec l'une de ces alimentations :

| Fabricant | Modèle |
|---|---|
| Dee Van Enterprise Co Ltd (Lightspeed) | DSA-60PFG-24 1 240250 |
| GlobTek, Inc. | GTM96600-6024-T3 |
| GlobTek, Inc. | GTM96600-6524-T3 |

## CERTIFICATIONS

Ce produit est certifié conforme aux normes et aux exigences UL en matière de sécurité électrique par Underwriters Laboratories Inc.

Ce produit est conforme aux principales exigences des directives de l'Union Européenne suivantes : 2004/108/EC Electromagnetic Compatibility (EMC) and 2006/95/EC Low Voltage Directive (LVD).

Lightspeed Technologies a lancé un programme de recyclage de produits en Europe conformément à la directive de l'Union Européenne 2002/96/CE relative aux déchets d'équipements électriques et électroniques (directive « DEEE »). Veuillez visiter notre page Web www.Lightspeed-tek.com pour plus de renseignements.

Ce produit est fabriqué en utilisant des processus sans plomb ni aucune autre matière nuisible à l'environnement. Il est conforme aux nouvelles règles européennes les plus strictes en matière de biens de consommation (RoHS).

# FCC Statements

**FCC STATEMENTS**

**NOTE:** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** Lightspeed Technologies is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the  receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm (8") between the radiator & your body

# Canada, Industry Canada (IC) Notices

This device complies with Industry Canada license exempt RSS standard(s). This Class B digital apparatus complies with Canadian ICES-003 and CAN ICES-3(B)/NMB-3(B).  Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The IC number for this device is 1732B-LSC25. This includes accessories such as the Clearmike (IC 1732B-LSCMT), Sharemike (IC 1732B-LSSMN) and Media Connector (IC 1732B-LSMCN).

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiation source and your body.

### RF RADIATION EXPOSURE STATEMENT

Your microphone is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by Health Canada and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

# Canada, Avis d'Industrie Canada (IC)

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-247.Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement. Le numéro IC de cet appareil est 1732B-LSC25. Ceci inclus les accessoires comme le Clearmike (IC 1732B-LSCMT), Sharemike (IC 1732B-LSSMN) et un Media Connector (IC 1732B-LSMCN).

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

### DÉCLARATION D'EXPOSITION AUX RAYONNEMENTS RF

Votre pied de micro est un émetteur-récepteur radio. Il est conçu pour ne pas dépasser les limites d'exposition aux ondes radio (champs électromagnétiques de fréquence radio) recommandées par les directives internationales. Les lignes directrices ont été élaborées par Santé Canada et comprennent une marge de sécurité importante destinée à assurer la sécurité de toutes les personnes, indépendamment de l'âge et de la santé.

# EU Declaration of Conformity

According to EU Directives EMC 2014/30/EU, LVD 2014/35/EU, RED 2014/53/EU, RoHS 2011/65/EU

**Manufacturer:**    Lightspeed Technologies, Inc.

**Address:**    11509 SW Herman Rd.
Tualatin, Oregon 97062

*We herewith declare that the following systems comply with the appropriate basic safety and health requirements of the Directive based on its design and type, as brought into circulation by us. In case of alteration of the system, not agreed upon by us, this declaration will lose its validity.*

**Products:**    Redcat, Topcat, 975, Access Link, Flexmike, Sharemike, Pod, Activate Station, Media Connector, Mobile PA

**Model Numbers:**    RCN, TCN, 975, ALN, FMN, SMN, POD, ACT, MCN, MPA

As applicable, products conform to the standards listed below:

EN 62368-1:2014

IEC 62133:2012

EN 50385:2017

EN 50566:2017

EN 50663:2017

EN 62479:2010

ETSI EN 301 406 V2.2.2 (2016-09)

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-6 V2.2.1 (2019-04)

EN IEC 63000:2018

The Technical Construction File is available to proper authorities and the product is CE marked.

Lightspeed Representative                      Date: December 6, 2022

Michael Frost, Compliance Engineer

# System Components

## STANDARD COMPONENTS 🇺🇸 🇨🇦

| | |
|---|---|
| **T25** | Wireless audio base station |
| **24V-2.5A-NA** | 24V/2.5A power supply for T25 |
| **FSCC** | Transceiver cradle charger, power supply |
| **5V1C** | 5V power supply for FSCC |
| **CMT** | Clearmike classroom transceiver with battery pack and lanyard |
| **L3.7V** | Lithium Polymer rechargeable battery pack for Clearmike, one per Flexmike |
| **FL** | Microphone lavaliere cord |
| **SPEAKERS** | As ordered |

## STANDARD COMPONENTS (OUTSIDE U.S. AND CANADA)

| | |
|---|---|
| **T25G** | Wireless audio base station |
| **24V-2.5A** | 24V/2.5A power supply for T25, specify country |
| **FSCC -INT** | Transceiver cradle charger, power supply |
| **5V1C -INT** | International 5V power supply for FSCC |
| **CMTG** | Clearmike classroom transceiver with battery pack and lanyard |
| **L3.7V** | Lithium Polymer rechargeable battery pack for Clearmike, one per Clearmike |
| **FL** | Microphone lavaliere cord |
| **SPEAKERS** | As ordered |

## OPTIONAL ACCESSORIES 🇺🇸 🇨🇦

| | |
|---|---|
| **SMN** | Sharemike handheld transceiver with battery pack |
| **L3.7V** | Lithium Polymer rechargeable battery pack for Sharemike |
| **USB C** | Charging cable for Sharemike |
| **EMA** | Earset microphone with TRRS connector for Clearmike |
| **LMA** | Lapel microphone with TRRS connector for Clearmike |
| **MCN** | Media Connector with Access Technology, power adapter and power cord. |

**WARRANTY, SAFETY & SPECIFICATIONS**

# System Specifications

## T25

| | |
|---|---|
| **Description** | Wireless audio hub |
| **Wireless Communication** | Access Technology (1.9 GHz) |
| **Frequency Response** | 20 Hz - 20 kHz Power Amp, 150 Hz - 6.5 kHz Wireless |
| **Power Supply Options** | 24VDC/2.5A |
| **Power Output** | 40 WRMS total (20 WRMS/channel) with 24VDC supply |
| **Tone Control** | Bass/Treble control |
| **Audio Inputs** | Three (3) 3.5mm inputs, one S/PDIF coaxial digital input |
| **Audio Output** | One (1) 3.5mm output |
| **Max Input/Output Level** | 1.4VRMS / 1.4VRMS |
| **Total Harmonic Distortion** | <1% |
| **Analog Control Signals** | Inputs: PageFirst (25/70V page mute), Relay Input |
| | Output: Contact closure (initiated from microphone) |
| **Dimensions (W x H x D)** | 9.0" x 6.1" x 1.2" (229mm x 155mm x 30mm) |
| **Weight** | 17.5 oz (496g) |

## CLEARMIKE

| | |
|---|---|
| **Description** | Pendant-style transceiver |
| **Earbud Lanyard** | Magnetic clasp with integrated earbud |
| **Wireless Communication** | Access Technology (1.9 GHz) |
| **Integrated Microphone** | Uni-directional electret |
| **Analog Audio I/O** | 3.5mm TRRS |
| **Digital Audio I/O** | USB-C |
| **Control Buttons** | Power/mute, volume up/down, alert |
| **Volume Control** | +/- 12dB |
| **Total Harmonic Distortion** | <1% |
| **Display** | E-paper display |
| **Battery Power** | 3.7V LiPo battery pack |
| **Battery Life** | 8 hours (fully charged) |
| **Charging** | Cradle charger or USB-C |
| **Dimensions (L x W x H)** | 3.0" x 1.2" x 0.9" (76mm x 30mm x 23mm) |
| **Weight** | 1.3 oz (37g) |

## SHAREMIKE

| | |
|---|---|
| **Description** | Handheld transceiver |
| **Wireless Communication** | Access Technology (1.9 GHz) |
| **Total Harmonic Distortion** | <1% |
| **Integrated Microphone** | Uni-directional electret |
| **Audio input** | 3.5mm TRS |
| **Battery Power** | 3.7V LiPo battery pack |
| **Battery Life** | 8 hours (fully charged) |
| **Charging** | 2 contacts for cradle charging |
| **Power** | On/off button |
| **Registration** | Push button for registration with Access Link |
| **Dimensions (L x W x H)** | 6.0" x 1.1" x 1.1" (153 x 28 x 28mm) |
| **Weight** | 2.6 oz (73g) |

## MEDIA CONNECTOR

| | |
|---|---|
| **Description** | Wireless audio transceiver |
| **USB power** | 5V USB-C connector |
| **Wireless communication** | Access Technology (1.9 GHz) |
| **Tone control** | 1 bass/treble control |
| **Audio input** | Four (4) 3.5mm inputs |
| **Audio output** | Two (2) 3.5mm outputs |
| **Audio Link indicator** | 1 LED on front panel |
| **Device registration** | Push button for Access Link |
| **Dimensions (W x H x D)** | 7.6" x 5" x 1.13" (193 x 127 x 29mm) |
| **Weight** | 9.6 oz. (272g) |

# Lightspeed

## Dedicated to Access for All

We strive to make a remarkable difference for teachers and students by creating Access to powerful in-the-moment insights to the learning process. Our audio and video solutions improve student engagement, enable teachers to activate small groups, and encourage collaboration.

11509 SW Herman Road

Tualatin, Oregon 97062

Toll Free: 800.732.8999

Phone: 503.684.5538

Fax: 503.684.3197

lightspeed-tek.com