

# NVR Wireless Kit

Quick Operation Guide




V1.0 EN202406

For NVS011


# 1. Install wireless NVR

## 1-1. Device Connection

- (1) Connect the mouse and monitor to the NVR host
- (2) Connect the NVR to the router or switch
- (3) Power on the NVR host and camera (please use the manufacturer's power supply)

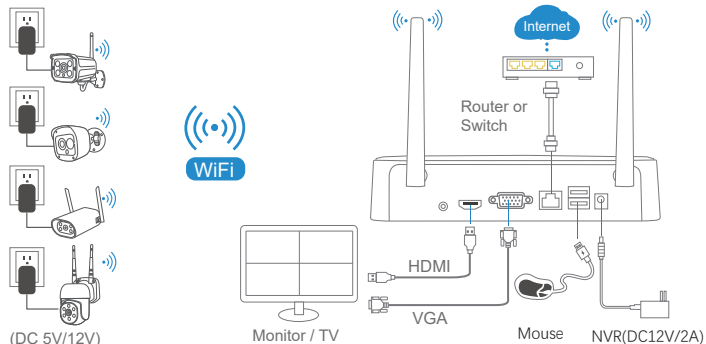

**1-2. When the device is connected and powered on, After successful booting, the camera image will automatically be displayed on the monitor. (Default password: 888888)**

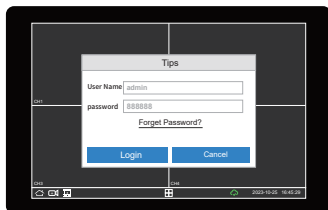

### Notice:

A: When the device leaves the factory, the camera and the wireless NVR host have been paired. If you need to re-pair or add a new camera to the wireless NVR, Please refer to FAQ 3: Add a new camera to NVR.

B: The optimal wireless distance between the camera and NVR is within 30 meters.

C: The lower right corner of the display shows , Indicates connected to the Internet; show  Please check your network connection.

## 2. NVR Remote Access


### Step 1. SriHome App Installation

Method 1: Scan the QR code to download “SriHome” App.

Method 2: Search “SriHome” on Google Play or iOS App Store.




Android

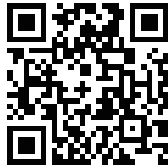


iOS

### Step 2. Register & Login SriHome App

### Step 3. Add the Device to App

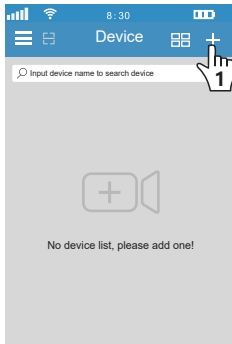

3-1

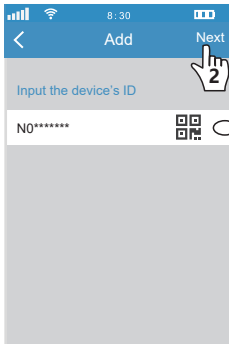

3-2

You can scan the QR code or input the Device ID manually



The label is attached on the NVR

**Not:** For App remote access, the NVR must be connected to network.

## FAQ1: How To Share The Device With Other Users

The device supports multi-user viewing. Download SriHome App to register an account, and then the administrator can share permissions to watch.

**1. Administrator operation:** Administrator logs in to SriHome App, click Settings button->Visitor Management->Add->Select operator/visitor->Scan QR code New user App ID QR code (Figure 6) -> Remarks name -> Next step is completed (Figure 1-Figure 3)

**2. Authorized users:** Return to the APP monitoring interface and scroll down to refresh to view the monitoring.

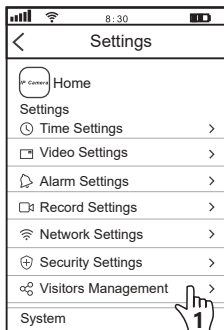


Figure 1

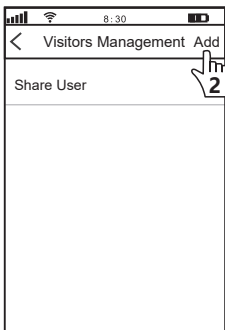


Figure 2

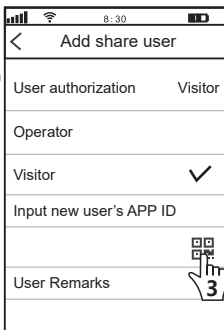


Figure 3

## How to find the user APP ID in the mobile app?

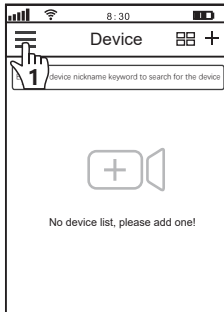


Figure 4

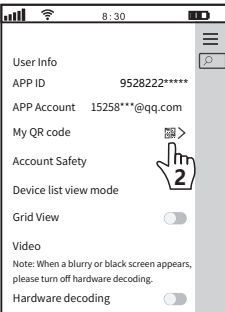


Figure 5




Figure 6

## FAQ2: NVR hard disk installation


If the product you purchased does not come with a hard drive, please purchase a 3.5-inch hard drive by yourself, (maximum support is 16T)

**Note:** Please do not connect the NVR to the power supply before installing the hard disk.

### Install HDD for NVR

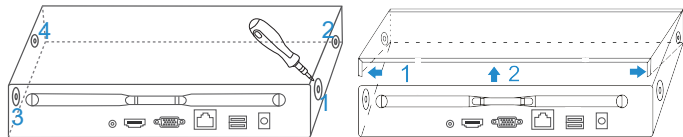

- (1) Loosening the screws on the panel's rear and side.
- (2) Remove the cover from the NVR.

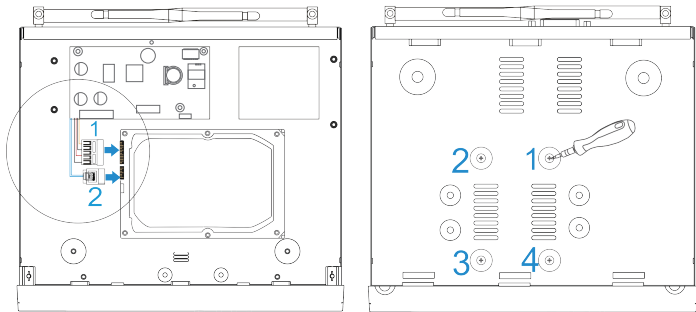

- (3) Insert a hard drive with a SATA interface.
- (4) Connect the data cable and power cable to HDD.
- (5) Fasten the screws on the bottom to fix the HDD.
- (6) Re-install the cover of the NVR and fasten screws.



### FAQ3: How to add a new camera to Wireless NVR

**⚠ Warning: When adding a device, do not delete the camera currently in use. After deletion, you need to pair it again.**

#### Method 1: Scan the QR code to pair and add


30 seconds after the camera is powered on, it will emit continuous "beep" network configuration prompts. After hearing the prompts, follow the following steps:

- (1). Click the icon  in the lower left corner of the monitoring display.
- (2). Click "Add" on the right side of the device list and select "QR Code"

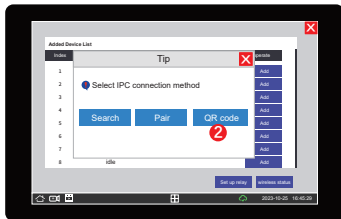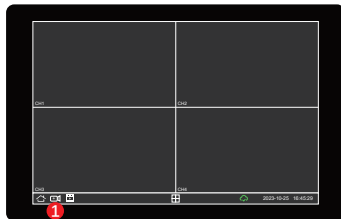


- (3). Aim the camera lens at the QR code and keep a distance of 20-60cm. After the camera recognizes the QR code, the camera will make a "ding" sound, indicating that pairing is in progress. Wait about 10 seconds and hear the second beep to indicate successful pairing.

**(Note: Do not close the QR Code window, otherwise the camera pairing will be unsuccessful)**

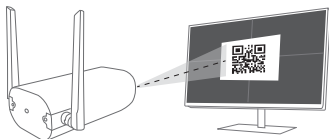


**Note: If the camera does not emit continuous "beep" network configuration prompts 30 seconds after the camera is powered on, please press and hold the camera's "Reset" button for 5 seconds until you hear a long beep to restore factory settings. Then follow the above steps to re-add the device.**

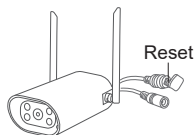

## Method 2: Search and add



Supports adding SriHome IP cameras with RJ45 Net-ports below 5MP.

First, connect the camera and NVR to the same local network, select "Search" -> Double-click the camera that needs to be added in the available device list-> Enter camera password (default password: 888888), click Add and confirm.

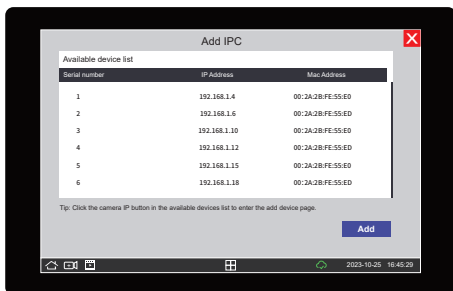



## FAQ4: SriHome APP access prompts no permission

Click the main menu in the lower left corner  > Device Maintenance  > Restore > Select "Others" > Click OK to restore.

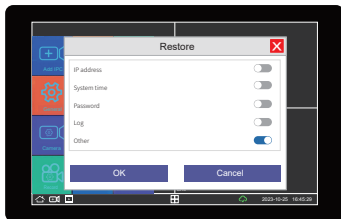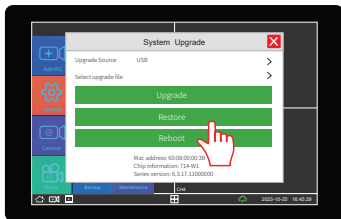

## FAQ5: Retrieve Password

Login panel > Forgot password > Click Retrieve password > Check the recovery key on your bound email account > Enter the key number, and your password will be displayed on the login panel.

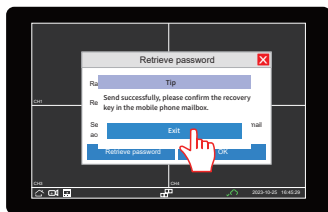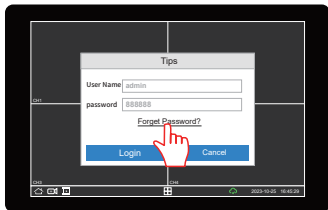



This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should

be installed and operated with minimum distance between 20cm the radiator your body:

Use only the supplied antenna.