


D

D

Electric Vehicle AC Charger

EVL007 Series (NA)-User Manual

此页不印刷

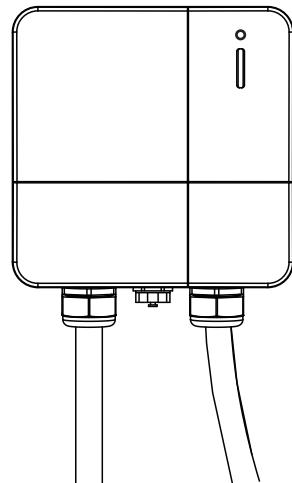


技术要求：
 1. 成品规格：142 x 210 mm；
 2. 印刷方式： 单面印刷； 双面印刷；
 3. 装订方式： 骑马钉； 单面对折；
 4. 材质： 70g双胶纸； 108g铜板纸；
 5. 印刷颜色：单黑色；
 6. 有条码的话，刷码等级需达到B级；
 7. 检验工具：卷尺，尺寸单位均为mm

变更栏								说明书				视图/VIEW	
版本号	修订原因	修订人	修订日期	签名	日期	签名	日期	零件名称	图纸图号	产品名称	产品型号		
				线条图提供者	日期	设计者	日期			EVL007(NA)说明书			
				排版者		审核者	日期						
				庄妍妍	25.03.14								
				文件翻译者		批准者	日期	比例	单位	版次	次料/REG.%		
								1:1	mm				
								Joint				厦门佳因特科技有限公司	

Electric Vehicle AC Charger

EVL007 Series (NA) -User Manual

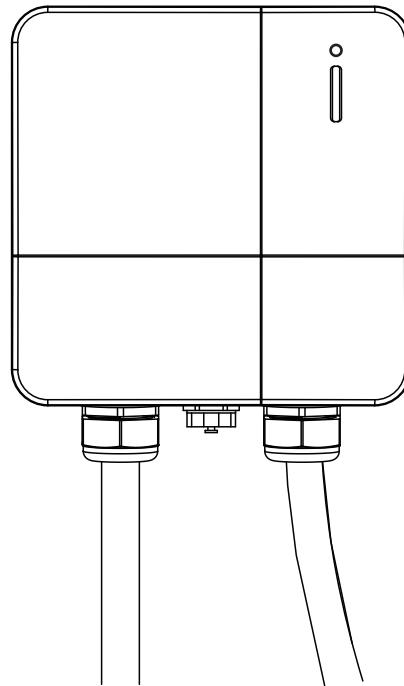

 **WARNING & CAUTION**

TABLE OF CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS	1
2. PRODUCT INTRODUCTIONS.....	5
3. VERIFY CONTENTS.....	7
4. GATHER TOOLS	8
5. PLAN THE MOUNTING	9
6. MOUNT THE CHARGING STATION	10
7. WIRE THE CIRCUIT	11
8. LIGHT CODES.....	12
9. FCC DECLARATION	14
10. WARRANTY AND MAINTENANCE.....	15

1. Important Safety Instructions

1.1 Overall Warnings & Cautions

 **WARNING:** To avoid fire, injury or death, carefully read and follow the instructions during installation, operation and maintenance.

- **DO NOT** put fingers into the electric vehicle connector.
- **DO NOT** use this product if the flexible power cord or EV cable is frayed, insulation-broken, or any other signs of damage.
- **DO NOT** use this product if the enclosure or the EV connector is broken, cracked, open, or shows any other indication of damage.
- **DO NOT** remove cover or attempt to open the enclosure because of risk of electric shock.

 **WARNING:** This device should be supervised when used around children.

 **WARNING:** This device must be grounded.

 **WARNING:** To avoid a risk of fire or electric shock, do not use this device with an extension cord.

 **WARNING:** The suitability of the use of flexible cord in accordance with CEC code, part I, rule 4-012, is to be determined by the local inspection authority.

 **WARNING:** To reduce the risk of fire, connect only to a circuit provided branch circuit over-current protection in accordance with the CSA C22.1-15 Canadian Electrical Code, Part 1 (Canada) or NOM-001-SEDE Electrical installations (utility) (Mexico) or ANSI / NFPA 70 National Electrical Code (USA).

Circuit Breaker Options table				
Output Amperage (A)	16A	32A	40A	48A
Circuit Breaker Options (A)	20A	40A	50A	60A

⚠ WARNING & CAUTION

1.2 Installation Requirements

- ⚠ **WARNING:** Disconnect electrical power prior to installing the charging station.
- ⚠ **WARNING:** Be sure to preview the user manual and ensure local building and electrical codes are reviewed before installing the AC charger.
- ⚠ **WARNING:** The AC charger should be installed by a qualified technician according to the user manual and local safety regulations.
- ⚠ **CAUTION:** Use appropriate protection when connecting to the main power distribution cable.
- ⚠ **CAUTION:** Type B, C or D breaker with the rating current for table should be installed in the upstream AC distribution box.
- ⚠ **CAUTION:** The device shall be mounted at height between 600 mm and 1200 mm from ground.
- ⚠ **CAUTION:** Please keep the charger in a clean area with low humidity. Not recommended to be installed in coastal environments with high humidity or high dust.

1.3 Daily Maintenance


- ⚠ **CAUTION:** Avoid moisture or water in the charger. If there is water or moisture ingress in the charger, it is necessary to immediately power off to avoid immediate danger, and notify the professionals to carry out maintenance before next use.
- ⚠ **CAUTION:** Please use the charger properly. Do not hit or press hard on the enclosure. If it is damaged, please contact a professional technician.
- ⚠ **CAUTION:** Avoid placing the charger near hot objects and at high temperature locations and away from dangerous substances such as flammable gases and corrosive materials.
- ⚠ **CAUTION:** Do not put heavy objects on the charger to avoid danger.

2. Product Introductions





CAUTION: Avoid placing the charger near hot objects and at high temperature locations and away from dangerous substances such as flammable gases and corrosive materials.

2.1 Basic Interface

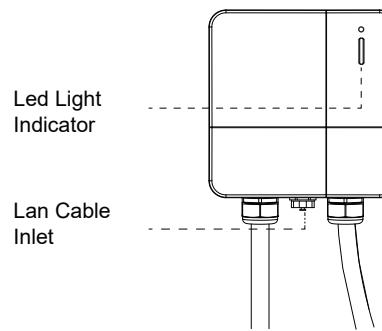

2.2 Basic Dimension

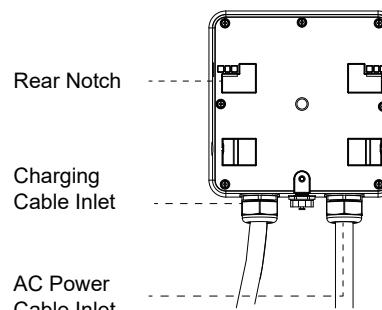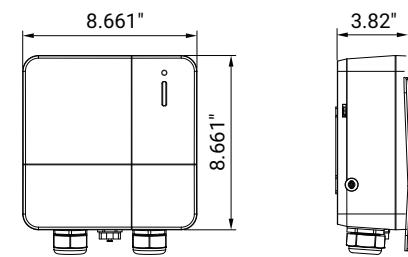


2.3 Specifications


EVL007		
POWER		
Input Rating	208~240V AC	
Output Current&Power	9.6kW (40A)	11.5 kW (48A)
Power Wiring	L1 / L2 / GND	
Input Cord	NEMA14-50 Plug	Hard-wire
Mains frequency	50 / 60 Hz	
Connector Type	SAE J1772 Type1 / SAE J3400 NACS (Optional), 18ft / 25ft (Optional)	
Ground Fault Detection	CCID 20	
Protection	UVP, OVP, RCD (CCID 20), SPD, Ground Fault Protection, OCP, OTP, Control Pilot Fault Protection	
USER INTERFACE		
Status Indication	LED indication	
User Interface	LCharge APP	
Connectivity	Bluetooth, Wi-Fi (2.4G), Ethernet	
User Authentication	Plug & Charge、APP	
Software Update	OTA	
CERTIFICATION & STANDARDS		
Safety & Compliance	UL991, UL1998, UL2231, UL2594	
Certification	ETL / FCC / Energy Star	
Warranty	2 Year+1 Year extension warranty	
GENERAL		
Color	Black	
Enclosure Rating	NEMA4 (IP65), IK08	
Operating Altitude	< 6561ft (2000m)	
Operating Temperature	-22°F ~ +122°F (-30°C ~ +50°C)	
Storage Temperature	-40°F ~ +185°F (-40°C ~ +85°C)	
Operating Humidity	5~95%	
Mounting	Wall mount	
Product Dimensions	8.66" x 8.66" x 3.82" (220mm×220mm×97mm)	

3. Verify Contents


Check the box to ensure you have this installation guide and these parts:

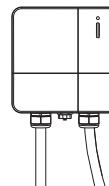

AC Charger x1

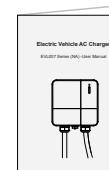


User Manual x1

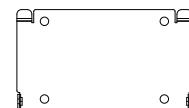


Wall-Mounted
Bracket x1




M5 Anti-Theft Round
Head Screws x2

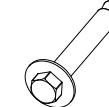


M6 Hexagonal
Expansion Screws x4

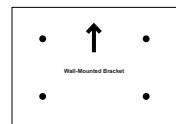


Mounting Template x1

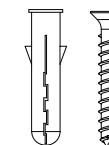

Ø8 Expansion
Screws x3

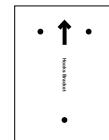

Hook Mounting
Template x1

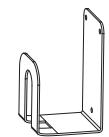


Hook x1

4. Gather Tools

Tools required before installing the Wall-Mounted charger, gather the following tools:


1. Wire stripper
2. Adjustable Wrench
3. Voltmeter or digital multi-meter (for measuring AC voltage at the installation site)
4. Level
5. Pencil or marker
6. Drill

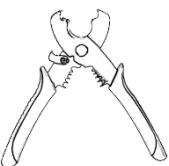


1



2

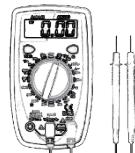

3

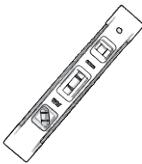

4



5



6

Note: The above tools are very important, please gather them all.

5. Plan The Mounting



WARNING: In areas with frequent thunderstorms, add surge protection at the service panel for all circuits. Ensure all power and ground connections, especially those at the breaker and bus bar, are clean and tight.




CAUTION: Not recommended to be installed in coastal environments with high humidity or high dust.

STEP 1


Select the appropriate mounting location with electrical capacity:

- I. Ensure the owner has chosen a mounting location that allows the charging cable to reach the car's charging port while still providing slack.
- II. The device must be anchored into mounting such as 2" x 6" stud or a solid wall.
- III. The device shall be mounted at height between 2 feet (600 mm) and 4 feet (1200 mm) from ground.

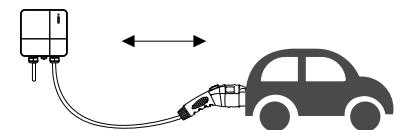

STEP 2


Drill 7 Screw Holes with a diameter of 0.35" and a depth of 2.05" by using 2 mounting templates. Please drill screw holes in the direction of the template arrow. And use two templates at a horizontal distance around 12".

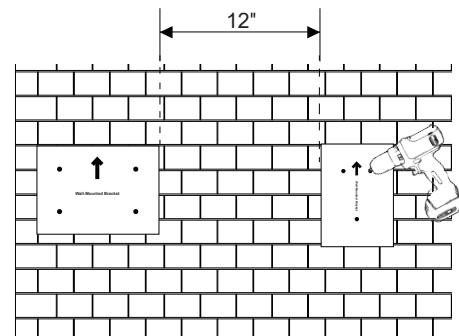


6. Mount the Charging Station

STEP 1

Use M6 Hexagonal Expansion Screws to secure the wall-mounted bracket, and use Ø8 Expansion Screws to secure the hook.

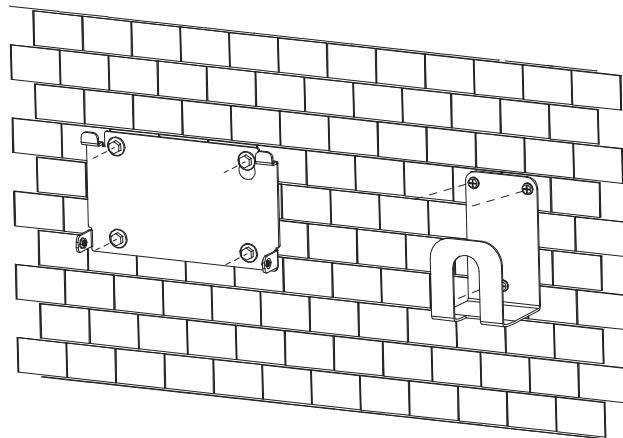


STEP 2

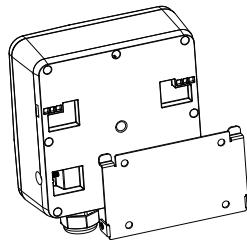

Align the rear notch of charger with the wall-mounted bracket and fit the screw holes of the right and left side.

STEP 3

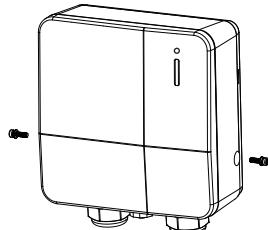

Tighten two M5 anti-theft screws to complete the installation.

7. Wire The Circuit



WARNING: This device must be grounded. Disconnect electrical power prior to installing the charging station.




WARNING: Improper connection of the equipment-grounding conductor would result in a risk of electric shock. Check with a qualified electrician or serviceman if you are not sure whether the product is properly grounded. Do not modify the plug provided with the product – if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.



CAUTION: Use appropriate protection when connecting to the main power distribution cable.

For safe use of electricity, please set circuit breaker protection in the input part of EV Charger. The wiring is not complicated, just need to follow the instructions below: Connect the L1 lead to the grid L1, connect the L2 lead to the grid L2, connect the GND lead to the grid GND.

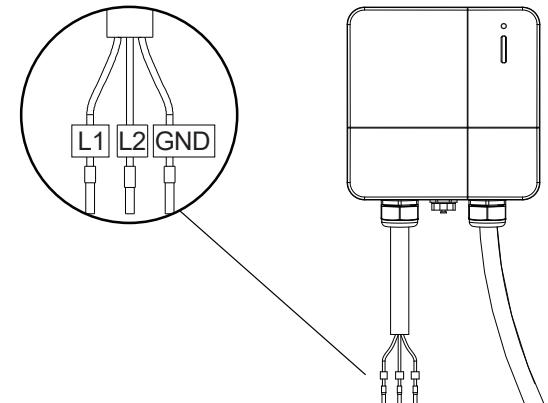

8. Light Codes

8.1 After Start UP

Device Status	Light Codes
Power On	Blue, green and red blinking alternately
Standby	Solid Blue
Plug The Charging Connector	Solid Green
Swipe Card (Optional)	Green Blinking
Charging In Progress	Green Blinking
Finished / Stopped Charging	Solid Green
OTA	Blue Blinking
Device Unavailable	Blue Blinking
Fault	Red
Signal Status	Light Codes
Connected	Solid Blue
Configuration Mode	Blue Blinking
Connecting To The Internet	Green Blinking
No Connec-Tion	Red

8.2 Error and Warning Messages

No.	Fault Status	Red Light	Remark
1	Meter Fault	1 flash followed by 3 sec pause	Auto Recover
2	CP Fault	2 flashes followed by 3 sec pause	Unplug the Connector to Recover
3	UVP	3 flashes followed by 3 sec pause	Auto Recover
4	OVP	4 flashes followed by 3 sec pause	Auto Recover
5	OTP	5 flashes followed by 3 sec pause	Auto Recover
6	OCP	6 flashes followed by 3 sec pause	Unplug the Connector to Recover
7	Ground Fault	7 flashes followed by 3 sec pause	Unplug the Connector to Recover
8	Relay Fault	8 flashes followed by 3 sec pause	Unplug the Connector to Recover
9	RCD Abnormal	9 flashes followed by 3 sec pause	Unplug the Connector to Recover
10	RCD Self-Test Fault	10 flashes followed by 3 sec pause	Reboot to Recover
11	Relay Self-Test Fault	11 flashes followed by 3 sec pause	Reboot to Recover
12	Sensor Fault	12 flashes followed by 3 sec pause	Check sensor or contact after-sales
13	Cable Fault	13 flashes followed by 3 sec pause	Check cable or contact after-sales

9. FCC Declaration

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WIFI module: Containing FCC ID:2AC7Z-ESPWROOM32UE

To satisfy FCC RF exposure requirements, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

10. Warranty and Maintenance

- The warranty period for this charger is two years.
- During the warranty period for any malfunction under normal use according to the User Manual and Service Instructions (to be determined by certified maintenance technicians of sellers), the product shall be repaired free of charge. Except for the following situations, the charger shall be subject to the above warranty terms:
 1. The warranty certificate cannot be provided or the contents of the warranty certificate are modified or inconsistent with the label indication of the repaired product.
 2. Those who are unable to provide valid proof of purchase.
 3. Those who exceed the manufacturer's specified warranty period.
 4. Those who damage the product due to not following the product service instruction for use, maintenance and storage.
 5. Damage or malfunction caused by external object entering.
 6. Unauthorized repair, disassembly or modification.
 7. Damage caused by force majeure (such as lightning, excessive voltage, earthquake, fire, flood, etc.).
 8. Malfunction and damage caused by other unavoidable external factors. Malfunction and damage caused by improper use of equipment, such as water or other solutions entering into the equipment.
 9. Malfunction and damage caused by the grid power supply and voltage which is not specified for use with the charger equipment.

The above guarantees shall be made solely, and no other express or implied warranties shall be made (including the implied warranties of merchantability, particular and applicable reasonableness and adaptability, etc.) whether in the contract, civil negligence, or other aspects, the Company shall not be responsible for any special, incidental or consequential damages.