

PHENYX PRO®

PTU-71

Selectable Frequency UHF Dual Channels
Wireless Microphone System



PHENYX PRO®
www.phenyxpro.com
Designed in US Made in China

OWNER'S MANUAL

Technical Support & Warranty Information

Our Warranty to you:

Phenyx Technology ("Phenyx") warrants Phenyx products against evident defects in material and workmanship for a period of one year from the date of original purchase for use. This warranty is valid exclusively in the US and applies only to the original owner. If you discover a defect covered by this warranty, Phenyx will repair or replace the product at our sole discretion using new or refurbished components. Performance of repairs or replacements under this Warranty is subject to registration of your product at www.phenyxusa.com/registerproduct.

Product failures not covered by this warranty:

This warranty covers defects in manufacturing that arise from the correct use of the device. It is limited to defects in materials or workmanship and does not cover electrical or mechanical damage resulting from abuse, misuse, unauthorized modification, lack of reasonable care, extreme heat, cold, damage due to natural forces, or corrosive environments. This warranty does not cover the normal wear and tear on covers, housing, connectors, and accessories.

Limits of liability:

If your Phenyx product fails or does not perform as warranted, your sole recourse shall be to replace or repair it as described above. Phenyx will not be liable to you or anyone else for any damages that result from the failure of this product. These damages include, but are not limited to, the following: lost profits, lost savings, lost data, damage to other equipment, and incidental or consequential damages arising from the use of or inability to use this product. IN NO EVENT PHENYX SHALL BE LIABLE FOR MORE THAN THE AMOUNT OF YOUR PURCHASE PRICE, NOT TO EXCEED THE CURRENT LIST PRICE OF THE PRODUCT.

How to obtain service under this warranty:

If you are receiving a system that is defective or you have any questions regarding operation or warranty cover, please contact us at support@phenyxpro.com with any questions or concerns and a Phenyx Pro representative will contact you to provide assistance. You can also reach out to us through Facebook page: www.facebook.com/phenyxusa/ or our official website: www.phenyxpro.com

Thank you for purchasing the PHENYX PTU-71 Dual Wireless Microphone System. Please read this manual carefully to ensure proper use and operation, and keep it for future reference.

Table of Contents

- 4 System description
 - Box Contents
 - System Overview
 - Receiver
 - Transmitters
- 8 Operating instructions
 - Set up
 - Operation
- 9 Troubleshooting instructions
- 10 Specifications
- 11 Warranty Information & Technical Support

System Description

Box contents

- 1 x Dual UHF wireless receiver with mixed XLR and 1/4" outputs
- 1 x 1/4" audio cable (6.35mm to 3.5mm adapter included)
- 1 x Power adapter
- 1 x User manual
- 2 x Antenna
- 4 x AA battery

PTU-71A :

- 2 x UHF handheld microphone
- 2 x Anti-rolling ring

PTU-71B :

- 1 x UHF handheld microphone
- 1 x Anti-rolling ring
- 1 x UHF bodypack transmitter
- 1 x headset/lapel combo (black)

System Overview

Phenyx Pro PTU-71 wireless microphone system delivers superior sound quality and professional features. It is designed for a wide range of professional applications with 2x100 selectable frequencies, automatic frequency scanning, and automatic IR synchronization pair up, ideal for professional setup in occasions like live shows, weddings, church, DJs, conference meetings, public speaking etc. Working distance is up to 100m/328ft operating distance in wide open space. For longer distance, please avoid metal blocks, multiple walls, and other electronics devices.

Specifications

Specifications

• Overall System

Carrier frequency range (Depends on local regulations)	UHF:470.2-607.8MHz
Frequency Stability	0.003%
Dynamic Range	>105dB
Frequency Response	50Hz-18kHz
Audio Output Level	1/4 interface: 0-500mV; XLR Interface: 0 – 500mV
Working distance	100m/328ft
XLR Interface	0-500mV
Operating temperature	-10°C~+50°C

• Receiver

Output impedance	XLR connector: 200Ω
RF sensitivity	-105dBm
Image rejection	>110dB
Spurious rejection	>90dB
Power	5W
Power requirement	DC 12- 15V, Current: 300mA, External power adaptor
Dimension	210mm x 160mm x 45mm
Weight	775g (27.3oz)



• Handheld & Bodypack Transmitter

Modulation Mode	FM
Maximum Deviation	75kHz
Handheld Dimension	249mm x 51mm (9.8 x 2 in)
Handheld Weight	306g (10.8oz) (without batteries)
Power Requirement	2 AA alkaline batteries (for each transmitter)
Battery Life	At least 8 hours with original batteries included

Troubleshooting Tips


ISSUE	REASON	SOLUTION
Transmitter battery indicator is rapidly flashing or continuously ON	The batteries are low	Replace with fresh batteries
A howling noise (also known as "feedback") can be heard from the speakers	The microphone is too close to the speaker	Increase the distance between the microphone and the speaker Avoid pointing the microphone directly at the speaker
No sound coming to the receiver	The wireless microphone is outside of the receiver's range	Keep wireless microphone within operating range of the receiver
	The wireless transmitter is off or muted (switch set to "OFF" or "MUTE")	Turn wireless microphone on. Replace batteries if necessary
Sound reaches the receiver, but no sound coming from the receiver	Volume control too low	Turn up the output volume by turning the volume control buttons in the front of the receiver clockwise.
	Output is not (or wrongly) connected	Verify all connections to the rest of your system. Try different connection cables if available.

Receiver

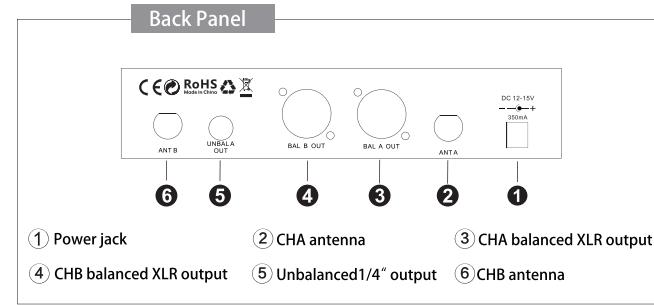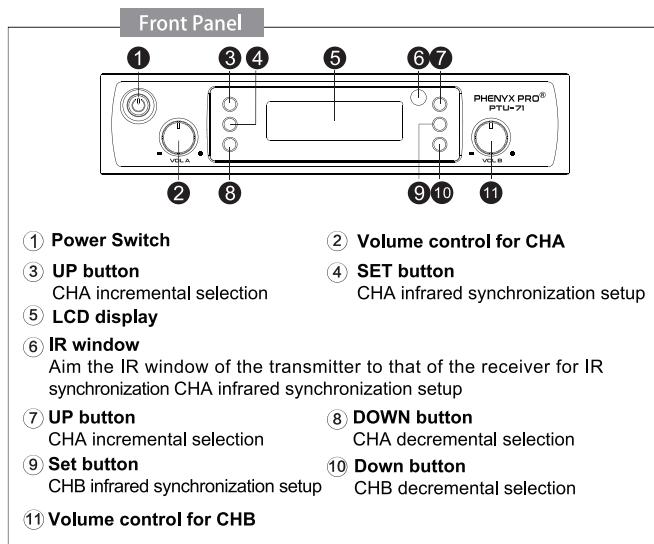


Transmitters

Handheld Microphone

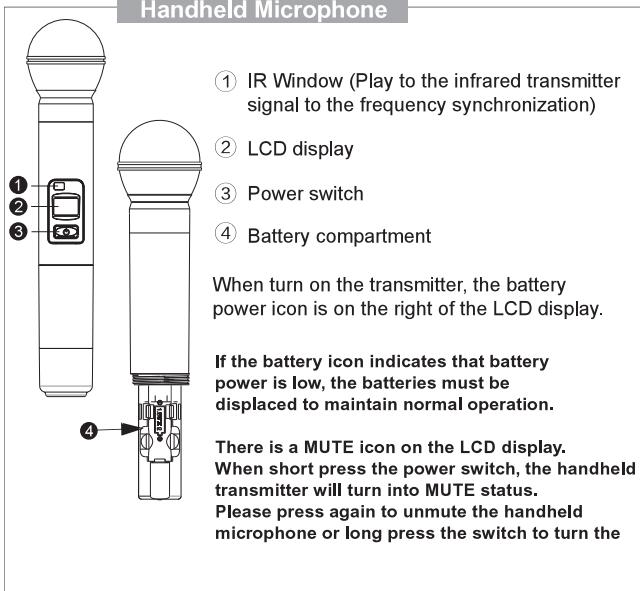

Bodypack

The Phenyx UHF bodypack is to be used with the Phenyx lavalier microphones & headsets

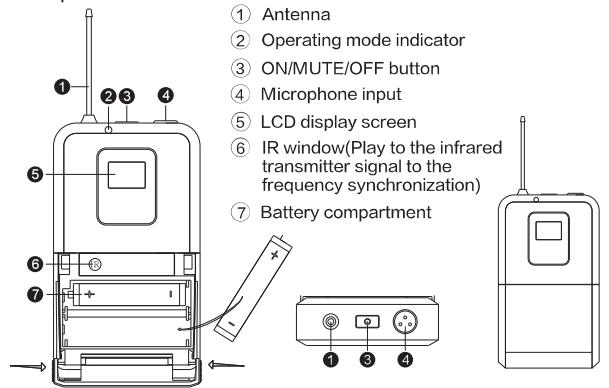

Set Up :

- 1 - Secure the bodypack to clothing, belt or pocket.
- 2 - (a) For a lavalier microphone, clip the microphone to clothing about 1 foot under the mouth.(b) For a headset, install headset comfortably on head so the microphone can be placed close to the mouth.
- 3 - Connect the microphone audio connector to the bodypack microphone input④
- 4 - Turn the bodypack on by press the ON/MUTE/OFF button. The operating mode indicator ② will light up (green), indicating that the bodypack is on.
- 5 - Press SET button on receiver. You will see LCD screen shows "F—" status. Open the battery compartment cover, and aim the transmitter's IR at the receiver's IR window. Once the pairup is completed, you can see the same group and channel number display on the receiver screen and the bodypack screen.
- 6 - Press up or down button to select the desired frequency, then align the two IR windows and press "SET" to confirm setting and pairup again.
- 7 - Press ③ again, operating mode indicator will turn red, which indicates that bodypack is on MUTE. Long press ③ to turn off the bodypack.

Operating Instructions

Set Up

- 1- Install fresh batteries in the transmitters (refer to the section relative to the specific transmitter you are using).
- 2- Connect the AC power adapter to a wall outlet to power on the receiver.
- 3- Screw antenna A, B in, and position them 60 degrees apart from each other
- 4- Connect one of the three outputs available at the back panel to the next stage of your system. Typically, use the 1/4" output to connect to unbalanced equipment such as consumer level receivers, amplifiers, and mixers. Connect to professional equipment using the XLR output (cable not included).
- 5- Make sure the volume of your speaker is off. Turn on the receiver and the transmitters. For auto scan feature, long press SET button until a circle shown on the LCD screen, then wait until the auto scan process complete and a frequency is set. The system will automatically select the least-interference best signal channel. For manual frequency selection feature, press UP or DOWN button to select desired frequency. Phenyx Pro recommends using the auto scan function for optimal operation result.
- 6- Press SET again after frequency selection, LCD screen will show "F--" status. Aim the transmitter's IR window to the receiver's IR window, and they will pair up automatically within seconds. Once the pair up is completed, channel and group number shown on the transmitters should match those on the receiver.
- 7- You can use multiple receivers at the same time, and set all the transmitters to different channels. Theoretically, up to 100 receivers can be used at the same time. Phenyx Pro recommends no more than 20 receivers to be used together.
- 8- For lock function, long press UP button and you will see "L ON" on the screen, which means that the system is in lock status. Long press UP button again to change the status to "L OF". Now the system is unlocked and you can change frequency.

Operation

- 1 - The receiver antennas should be kept away from any metal surface.
- 2 - Before inserting the batteries, please make sure that they are inserted according to the correct polarity.
- 3 - For better result, keep the transmitters at least 2' away from the receiver but within the transmitter's range(100m/328ft). Keep the transmitters in a direct line of sight of the receiver whenever possible.
- 4 - Electronics devices such as mobile phones, radios, and other transmitting devices may interfere with the wireless system transmitters. Please keep transmitter and receiver away from those devices and other possible interfering sources.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.