



In-Wall Relay Switch

Smart Relay (Z-Wave) Instruction Manual

Rev. A-031821

P/N SRZW01

*Please see separate Smart Switch Sub-Assembly manual for complete instructions.


Complete Accessories Include




Smart Relay x1



Double Sided Foam Pad x1



Fixing Screw x1



Instruction Manual x1

Device Identification QR Code (Z-Wave)

Product Introduction

Smart Relay uses Z-Wave wireless technology and may be used in different loads, including incandescent lamps, halogen lamps, LED lamps and fluorescent lamps. It is small in size and may be installed in the box of light fixtures. This device is compatible with standard Z-Wave gateway or devices for remote control and inter-operation.

Technical Specifications

Model Number	SRZW01
Input Voltage	AC 85V~245V
Max. Load Power	AC 110V/300W AC 220V/600W
Min. Load Power	No limit
Type of Load	Lighting
Operating Temperature	0~40°C (32°~104°F)
Relative Humidity	5~85% RH
Wireless Connectivity	Z-Wave
Wireless Profile	Z-Wave 700
RF Characteristics	Operating frequency: 865.2MHz to 926.3MHz Range: 40m~80m Internal antenna
Product Size (L*W*H)	2.34in. x 1.55in. x 0.83in. (59.4mm x 39.3mm x 21.2mm)

Installation Instructions

Caution: Read this manual before attempting to install the device! Using this product in a manner other than intended voids your warranty. Further, Evvr ApS is NOT liable for any damage incurred with the misuse of this product.

Caution: All installations of this device should be performed by a qualified or licensed electrician!

Caution: Product must be installed on a 10A line.

Caution: Metal casings, mirrors, electrical appliances, etc., may affect, reduce, or interfere with wireless communication.



Warning: Turn OFF electrical power from the breaker box or electrical service panel before installing or servicing this product. Improper use or installation can cause SERIOUS INJURY, DEATH, or LOSS/DAMAGE OF PROPERTY.




Caution:
Use this product in an indoor environment.


1 Connect wires per wiring diagram as follows

Caution: If you have purchased a **Smart Switch Sub-Assembly** to use with it, please follow the installation instructions on the **Smart Switch Sub-Assembly** manual.


With **Smart Relay**, you can turn a traditional lamp into a Z-Wave smart lamp. It is recommended to install **Smart Relay** near the lamp.

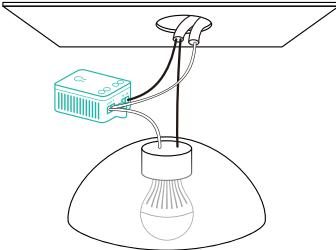



You can choose one of the two diagrams below to connect the wires according to your installation environment.

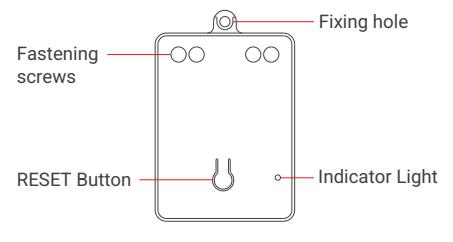

Panel Connection port

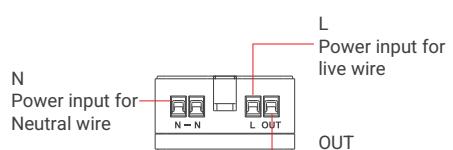

Wire Connection port

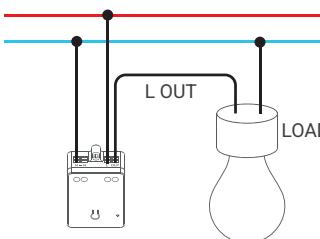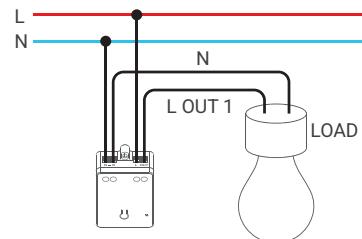


NOTES FOR THE DIAGRAM:

N - neutral wire

L - live wire

L OUT - output live wire

2 Fix Smart Relay on a flat, cleaned surface

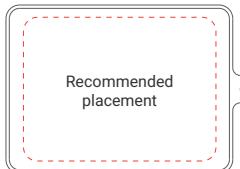

Recommended placement

Stick the foam pad at the recommended position on the **Smart Relay** and then place the relay on a flat, cleaned surface.

Turn ON electrical power and check if the wires are connected correctly. If they are correct, the indicator light will be on when the load light, the light(s) connected to the switch, is on.

Operating Instructions


Important: The In-Wall Relay Switch can be controlled from a mobile phone when used with a Z-Wave gateway.

SmartStart Inclusion

Smart Relay can be added into a Z-wave network by scanning the Z-Wave QR code.

Note: The QR code can be found on the Smart Relay or in the manual.

Note: If your controller does not support SmartStart inclusion, please proceed inclusion manually.

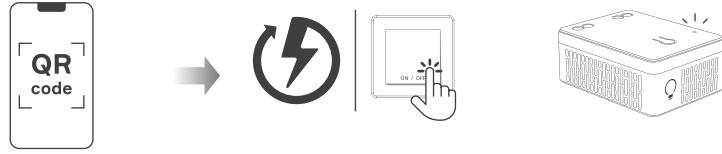


Add the Smart Relay into the controller by scanning the Z-Wave QR code.

The Smart Relay will start SmartStart inclusion by power cycle or turn on the light through Smart Switch Sub-Assembly. If the Smart Relay is successfully paired, the indicator will show BLUE when the load light is on.

Note: After scanning the QR code and powering up near the network, the Smart Relay will be automatically added within 10 minutes if no action is taken.

Manually Inclusion/Exclusion

1. Before pairing or unpairing Smart Relay, you need to set your Z-Wave gateway into inclusion or exclusion mode.

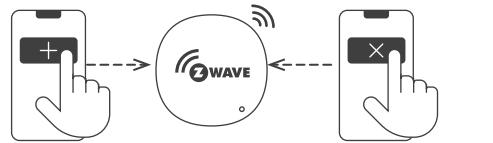


Set Z-Wave gateway into inclusion mode by adding device.

Set Z-Wave gateway into inclusion mode by adding device.

2. Set Smart Relay into inclusion/exclusion mode

Note: The device may require a Device Security Key (DSK) during the inclusion process, which can be found on the Smart Relay or in the manual.

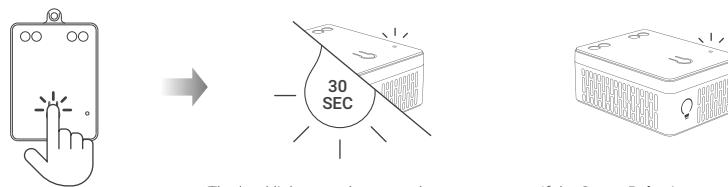

Set the Smart Relay into inclusion/exclusion mode by short press the RESET button.

The load light must be on, at the same time the indicator light will slowly flash blue, wait until inclusion/exclusion is successful or until 30 seconds timeout.

If the Smart Relay is successfully inclusion/exclusion, the indicator will show BLUE/RED when the load light is on.

Restore Smart Relay to factory settings



Press and hold the RESET button for more than 5 seconds.



If the Smart Relay is successfully restored to factory settings, the indicator will show RED when the load light is on.

Troubleshooting

Q1 Smart Relay pairing failed.

- The device may be too far from the gateway/coordinator or routing device, or there may be interference in the current network environment. Add routing devices or bring devices closer to the gateway/coordinator.
- The device is already joined to another gateway. Please restore the device to its factory default.

Certifications (regional)

FCC ID: 2A68U-SRZW01



FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Q2 Cannot be controlled by gateway/coordinator or other Z-Wave devices.

The device may be installed in an unreasonable location, too far from the gateway or routing device, or there may be signal interference. Please check whether there is strong electromagnetic field equipment near the wireless switch and check whether the equipment is installed in a closed metal housing or in a closed concrete wall. Add routing devices or bring devices closer to the gateway/coordinator.

Q3 The light turns off automatically after a short period of time (approximately 2½ minutes or 150 seconds).

The power of the light may exceed the maximum power (AC 110V/ 300W, AC 220V/600W). Please check whether the power of the light exceeds the maximum power.

Q4 In case of power loss while the lights were on, the light status is on when power is restored?

Yes. The device will record the status of the light, and after the device is powered off, re-powering will restore the state before the device was powered off.

Important Announcement Important Note Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Disposal Instructions

This product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warranty Policy

For warranty information, please visit <https://www.evvr.io/warranty>

Please contact us for any technical issue
support@evvr.io