

# Programmable Logic Relays

**8A**  
SERIES



Panels for  
electrical  
distribution



Packaging  
machines



Control and  
management  
of water



Control  
panels for  
pumps



Air  
Conditioner



Building  
automation



Forced-air  
ventilators





## Programmable Logic Relays (PLRs) with 8 input and 4 output relays

### Type 8A.04-8300

- Lite version with USB (type C port), ETH

### Type 8A.04-8310

- Plus version with USB (type C port), ETH and Modbus RS485

### Type 8A.04-8320

- Advanced version with USB (type C port), ETH, Modbus RS485, Wi-Fi and BLE
- 8 digital or analog (0...10V) input
- 4 relay output 10 A
- USB (type C port) port for programming, data logging and powering during configuration
- RJ45 port
- Connectivity (\*according to type):
  - USB
  - 1 Gbit Ethernet TCP/IP or Modbus TCP/IP
  - Modbus RS485\*
  - Wi-Fi + BLE\*
- LED status indicator for each output
- Programmable USER button
- Programming language via IDE as an option IEC-61131-3 (LD - SFC - FBD - ST - IL)
- 70 mm wide
- 35 mm rail (EN 60715) mount

8A.04  
Screw terminal



For outline drawing see page 7

## NEW 8A.04-8300



- Lite version
- USB Port
- RJ45 Port for ETH and Modbus TCP/IP

## NEW 8A.04-8310



- Plus version
- USB Port
- RJ45 Port for ETH and Modbus TCP/IP
- Modbus RS485 Port

## NEW 8A.04-8320



- Advanced version
- USB Port
- RJ45 Port for ETH and Modbus TCP/IP
- Modbus RS485 Port
- Wi-Fi/BLE internal module

## OPTA

Partnership with



H

### Output specification

Contact configuration		4 NO (SPST)
Rated current/Maximum peak current	A	10/15
Rated voltage/		
Maximum switching voltage	V AC	250/400
Rated load AC1	VA	2500
Rated load AC15 (230 V AC)	VA	500
Breaking capacity DC1: 24/110/220 V	A	10/0.3/0.12
Minimum switching load	mW(V/mA)	300 (5/5)
Output operate/release time	ms	6/4
Standard contact material		AgNi
Supply specification		
Nominal voltage (U <sub>N</sub> )	V DC	12...24
Rated power	W	0.6...2.2 (according to type)
Operating range	V DC	10.2...27.6
Input circuit		
Number of input		8 (configurable)
Type		Digital/Analog
Analog input type	V	0...10
Analog input resolution		16 to 12 bit user configurable
Input frequency	kHz	4.5
Input voltage	signal 0/signal 1	<4 VDC / > 5.9 VDC
Input compatibility		NPN/Sink
Reverse polarity protection		YES
Technical data		
Programm language		Arduino via IDE , as option IEC-61131-3 (LD - SFC - FBD - ST - IL)
Minimum input signal	ms	0.2
Electrical life at rated load in AC1	cycles	100 · 10 <sup>3</sup>
Ambient temperature range	°C	-20...+55
Protection category		IP 20
Approvals (according to type)		

## Ordering information

Example: 8A series, Lite PLR version, 4 NO (SPST) - 10 A, 8 digital/analog input, 12...24 V DC.

8 A . 0 4 . 9 . 0 2 4 . 8 3 0 0

**Series** \_\_\_\_\_

**Type** \_\_\_\_\_

0 = Control Relay

**No. of poles** \_\_\_\_\_

4 = 4 NO (SPST)

**Supply version** \_\_\_\_\_

9 = DC

**Supply voltage** \_\_\_\_\_

024 = (12...24) V DC

**Nº of input** \_\_\_\_\_

8 = 8 digital/  
analog input

**Options** \_\_\_\_\_

0 = Standard

**Versions**

0 = Lite version, RJ45, USB (type C port)

1 = Plus version, RJ45, USB (type C port),  
Modbus RS485 port

2 = Advanced version, RJ45, USB (type C  
port), Modbus RS485 port, Wi-Fi/BLE  
module

**Type of output** \_\_\_\_\_

3 = EMR NO contact (SPST)

## Technical data

### Insulation

between input and output circuit	V AC	4000
between open contacts	V AC	1000
Insulation (1.2/50 µs) between input and output	kV	6

### EMC specifications

Type of test		Reference standard	
Electrostatic discharge	contact discharge	EN 61000-4-2	4 kV
	air discharge	EN 61000-4-2	8 kV
Radio-frequency electromagnetic field (80 ÷ 1000 MHz)		EN 61000-4-3	10 V/m
Fast transients (burst) (5-50 ns, 5 kHz) on Supply terminals		EN 61000-4-4	4 kV
Surges (1.2/50 µs) on Supply terminals	common mode	EN 61000-4-5	4 kV
	differential mode	EN 61000-4-5	4 kV
	common mode	EN 61000-4-5	4 kV
	differential mode	EN 61000-4-5	4 kV
Radio-frequency common mode (0.15 ÷ 80 MHz) on Supply terminals		EN 61000-4-6	10 V
Radiated and conducted emission		EN 55022	class B

### Other data


Power lost to the environment	without contact current	W	1.4
	with rated current	W	3.2
PLC to PLC communication and	<b>Ethernet:</b>		
PLC to network communication (Ethernet)	– For Modbus TCP communication – As standard TCP/IP – RJ45 connector CAT5 cable, 2X LAN status led indicators		
Wireless connectivity	<b>RS485:</b>		
	– For Modbus RTU communication – For custom serial communication		
Maximum program memory	Wi-Fi and Bluetooth® Low Energy		
External memory module	1 MB internal		
Data Logging	USB-C pendrive		
Flash memory	USB-C Stick + internal flash memory		
RESET button	2MB int + 16MB Flash QSPI		
USER button	YES		
MCU	Push button configurable for user purposes		
Secure element	STMicroelectronics STM32H747XI Dual ARM® Cortex® M7/M4 IC: 1x ARM® Cortex® -M7 core up to 480 MHz 1x ARM® Cortex® -M4 core up to 240 MHz		
Programming interface	ATECC608B		
RTC power reserve	USB-C + OTA via Web Editor (Cloud) + Ethernet		
RTC accuracy	10 days at 25 °C		
Cloud support	10 min/year @25 °C 37.5 min/year @ -10...+70 °C		
Cloud support	Arduino Cloud via Wi-Fi and Ethernet or the Cloud services		
Response time ON/OFF	ms	6/4	
Bounce time NO/NC	ms	3/6	

### Terminals

		Screw terminals	
Wire strip length	mm	10	
 Screw torque	Nm	0.8	
Min. wire size		solid cable	stranded cable
	mm <sup>2</sup>	0.5	0.5
	AWG	20	20
Max. wire size		solid cable	stranded cable
	mm <sup>2</sup>	1 x 6 / 2 x 4	1 x 4 / 2 x 2.5
	AWG	1 x 10 / 2 x 12	1 x 12 / 2 x 14

H

## Front view

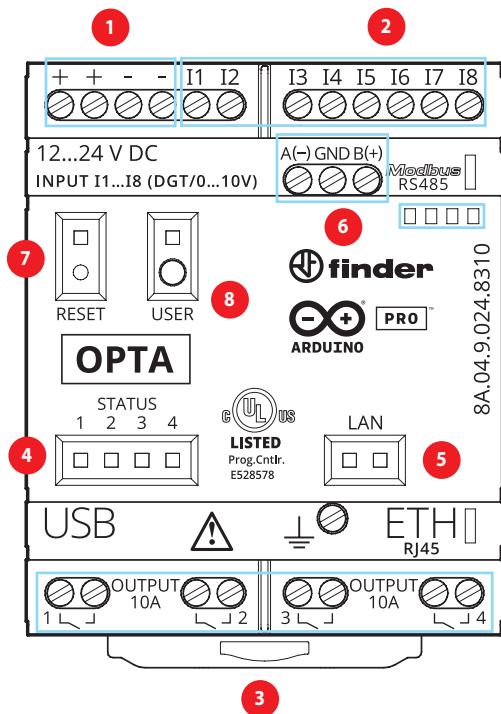

### 1 Supply terminals

12...24 V DC, Split terminals to facilitate wiring.

### 2 Input terminals

I1...I8 digital/analog (0...10 V) input configurable via IDE.

### 3 Output terminals

1...4 Output relay, 10 A 250 V AC, NO contact.

### 4 LED Status

1...4 LED Status configurable via IDE.  
For example for 1...4 output relay LED ON = Contact CLOSE.

### 5 LED Ethernet port status

Status of ETH connection.

### 6 Modbus RS485 Port

Terminals for Modbus over RS485 protocol.

### 7 HARDWARE RESET


Button for hardware reset. BE CAREFUL. Press the 'RESET' button with the tip of a small non-metallic insulated tool.

### 8 Programmable USER button


Button configurable via IDE by user, according to application (ex. RUN/STOP, ON/OFF, BLE pair).

## Contact specification

H 8A - Electrical life (AC) v contact current

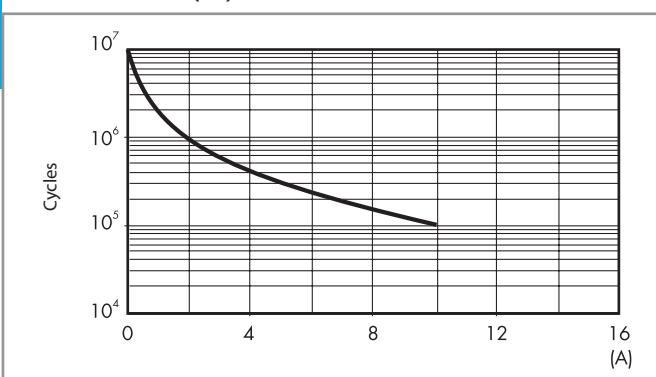


H 8A - Maximum DC1 breaking capacity

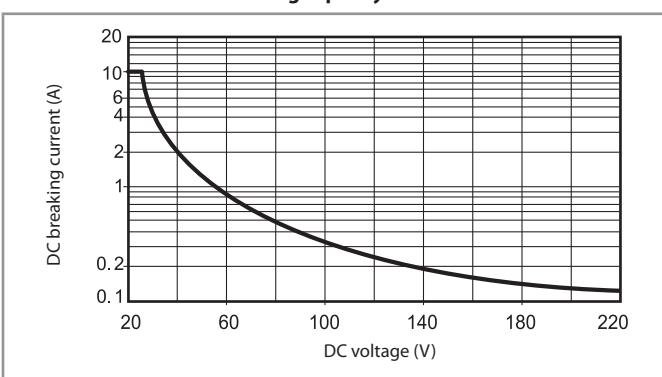


- When switching a resistive load (DC1) having voltage and current values under the curve, an electrical life of  $\geq 100 \cdot 10^3$  can be expected.
- In the case of DC1 loads, the connection of a diode in parallel with the load will permit a similar electrical life as for a DC1 load.  
Note: the release time for the load will be increased.

## Wiring diagrams

Type 8A.04-8300

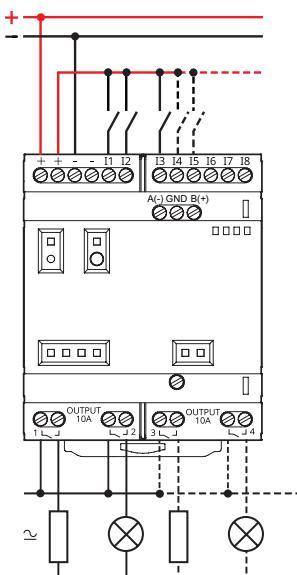

Type 8A.04-8310/8320

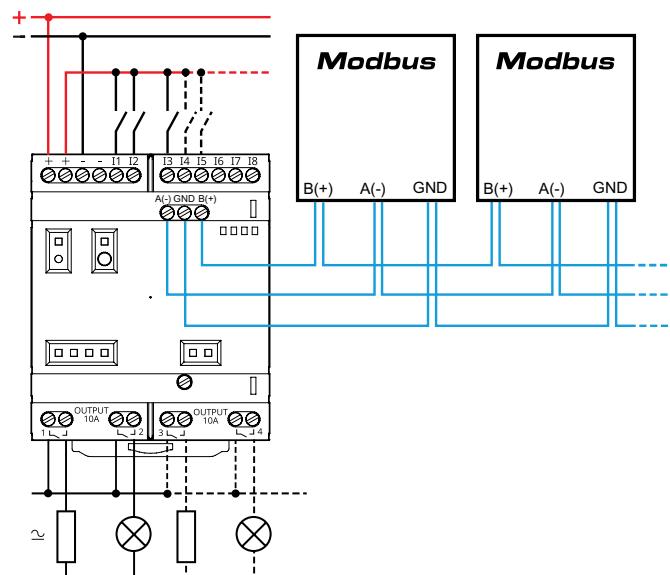

## Getting "Started Guide"

### Getting started - IDE

If you want to program your 8A.04 while offline you need to install the Arduino Desktop IDE.

To connect the 8A.04 to your computer, you'll need a USB-C cable. This also provides power to the board, as indicated by the LED.

<https://www.arduino.cc/en/Main/Software>

### Getting started - Arduino Web Editor

All Arduino boards, including this one, work out-of-the-box on the Arduino Web Editor, by just installing a simple plugin.

The Arduino Web Editor is hosted online, therefore it will always be up-to-date with the latest features and support for all boards. Follow to start coding on the browser and upload your sketches onto your board.

<https://create.arduino.cc/editor>

[https://create.arduino.cc/projecthub/Arduino\\_Genuino/getting-started-with-arduino-web-editor-4b3e4a](https://create.arduino.cc/projecthub/Arduino_Genuino/getting-started-with-arduino-web-editor-4b3e4a)

### Getting started - Arduino IoT Cloud

All Arduino IoT enabled products are supported on Arduino IoT Cloud which allows you to Log, graph and analyze sensor data, trigger events, and automate your home or business.

### Online resources

Now that you have gone through the basics of what you can do with the board you can explore the endless possibilities it provides by checking exciting projects on ProjectHub and the Arduino Library Reference

<https://www.arduino.cc/reference/en/>


### Board Recovery

All Arduino boards have a built-in bootloader which allows flashing the board via USB. In case a sketch locks up the processor and the board is not reachable anymore via USB it is possible to enter bootloader mode by double-tapping the reset button right after power up.

## Outline drawings


Type 8A.04-8300

Screw terminal

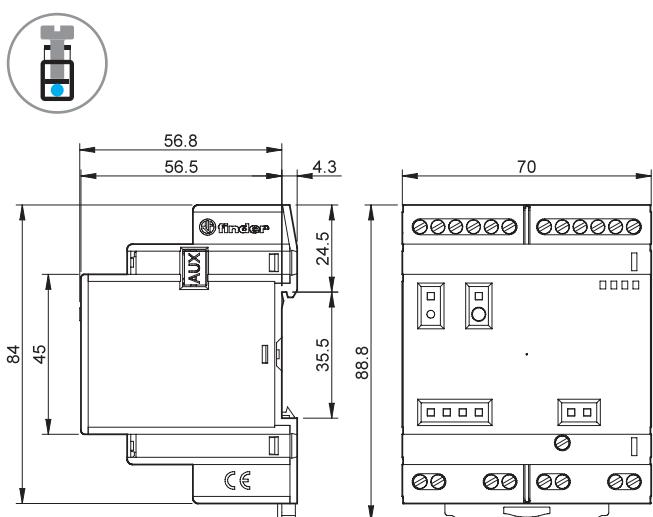

Type 8A.04-8310/8320

Screw terminal

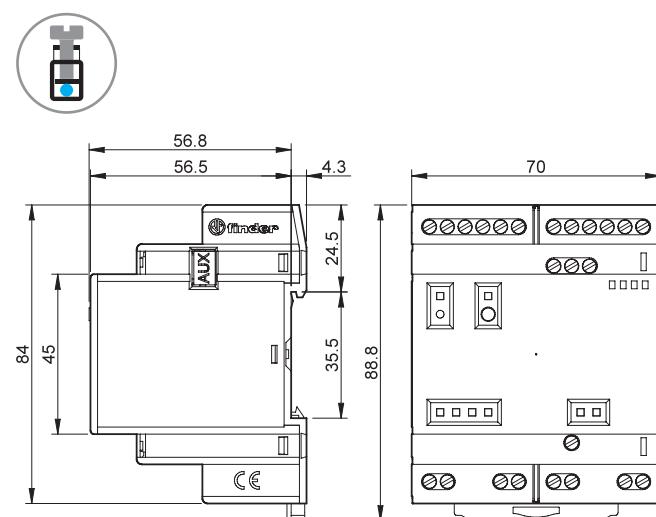

## FCC and RED Cautions (Model 8A.04.9.024.8320)

### FCC

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
3. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### RED

The product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU. This product is allowed to be used in all EU member states.

Frequency bands	Maximum output power (EIRP)
2412 - 2472 MHz (2.4G WiFi)	5,42 dBm
2402 - 2480 MHz (BLE)	2,41 dBm
2402 - 2480 MHz (EDR)	-6,27 dBm