



Model:K66

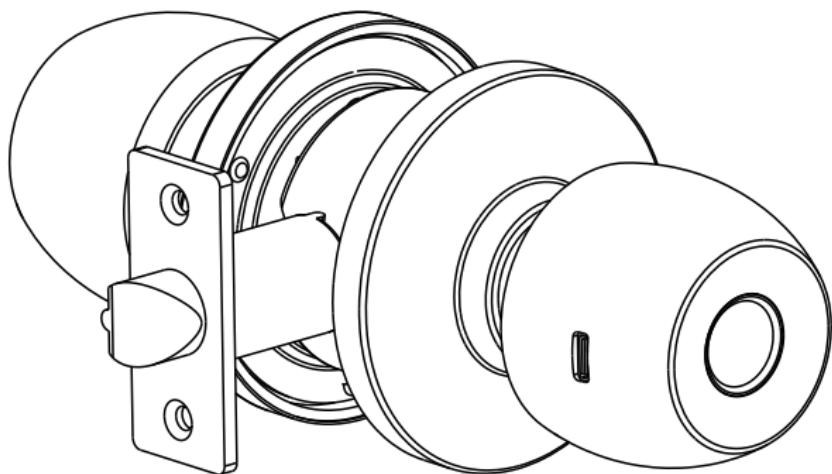


USER MANUAL

IMPORTANT: Read the use manual carefully before operating the appliance and keep them for future reference.

1 Packing List

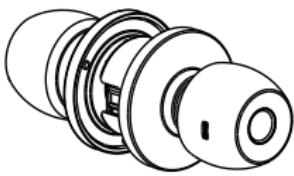


Smart Lock*1

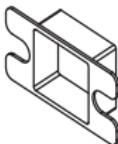


Strike Box*1



Strike Plate*1

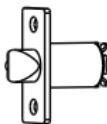

Latch*1
(fits for backset 60mm)

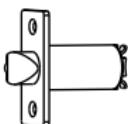

Latch*1



Screw A*4



Screw B*2
(Installed on mounting plate)



Key*2



Pin*1

User Manual*1


TOOL REQUIRED:

(Not Including)



Do not use an electric
screwdriver during installation.

2 Check the Door's Dimensions

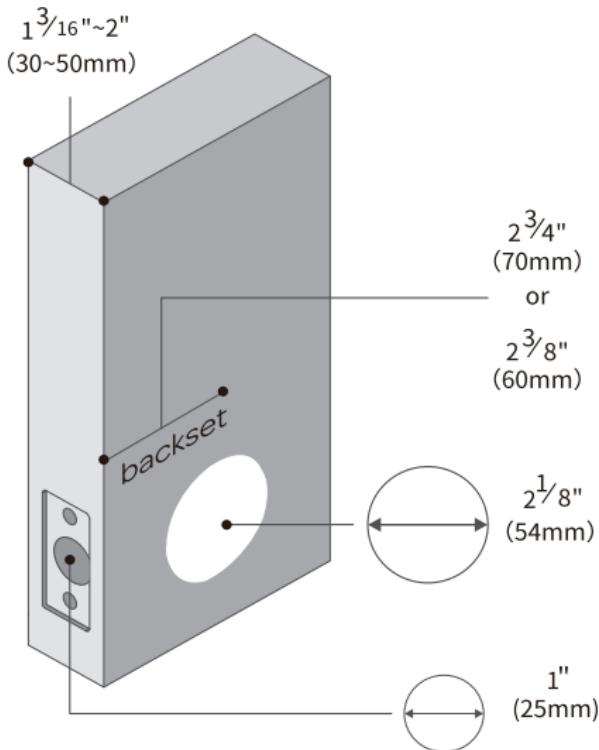



Step 1 : Measure to confirm that the door is between (30mm~50mm) thick.

Step 2 : Measure to confirm that the hole in the door is(54mm).


Step 3 : Measure to confirm that the backset is either-(60 or 70mm).

Step 4 : Measure to confirm that the hole in the door edge is 1"(25 mm).

3 Install Latch & Strike Plate

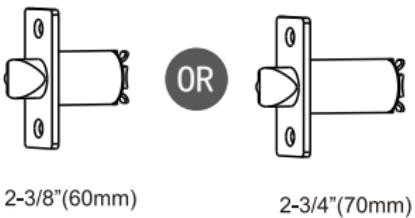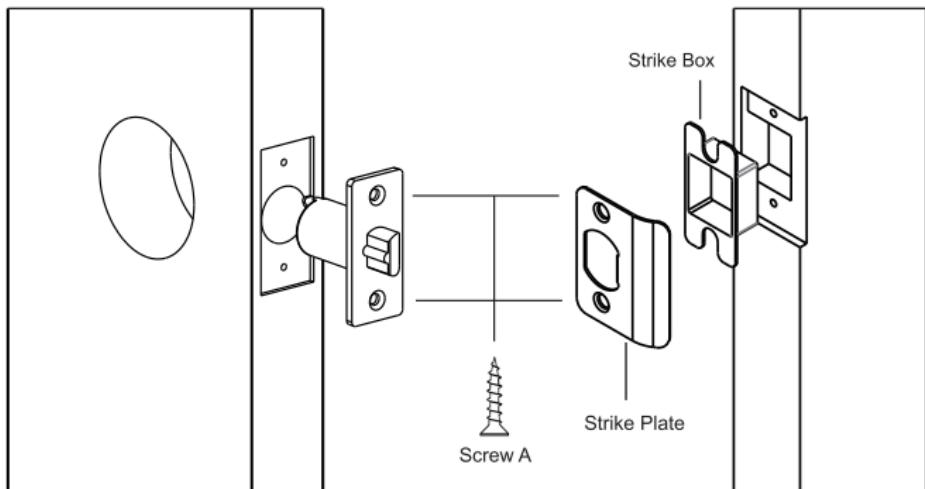


A Select a 60mm or 70mm latch to match your door thickness. Then secure latch, strike box and strike plate with screws A.

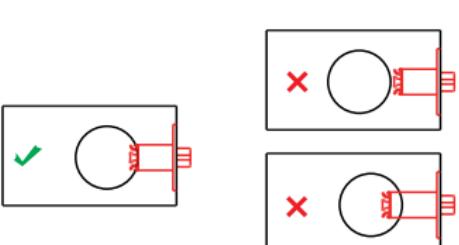



Attention

Verify latch matches door thickness, excessive or insufficient length may cause malfunction.

4 Remove Interior Assembly


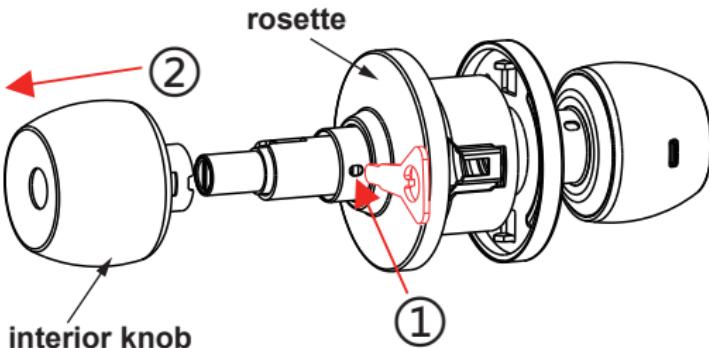


A Insert the pin into the hole and the separate the rosette from the interior knob.

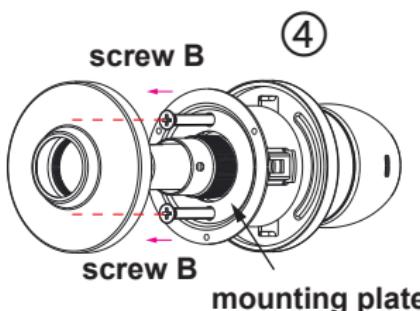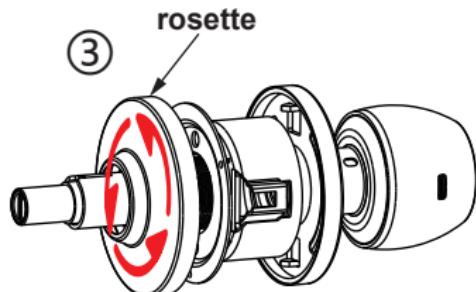

B Rotate the rosette counterclockwise to remove rosette. Then loosen 2 pcs screw B to disassemble the mounting plate .


5 Install Exterior Assembly

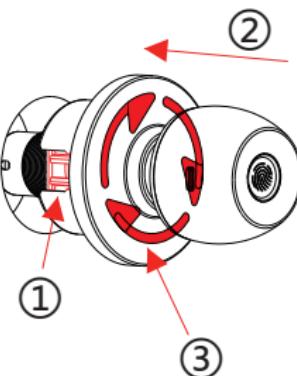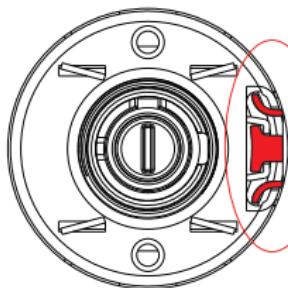

- A** Install the exterior assembly with aligning the end of latch as shown.
- B** Adjust the latch by rotating the rosette of exterior assembly to accommodate the door's thickness.

Note: Ensure the end of latch engages with the exterior assembly as shown.

6 Install Interior Assembly

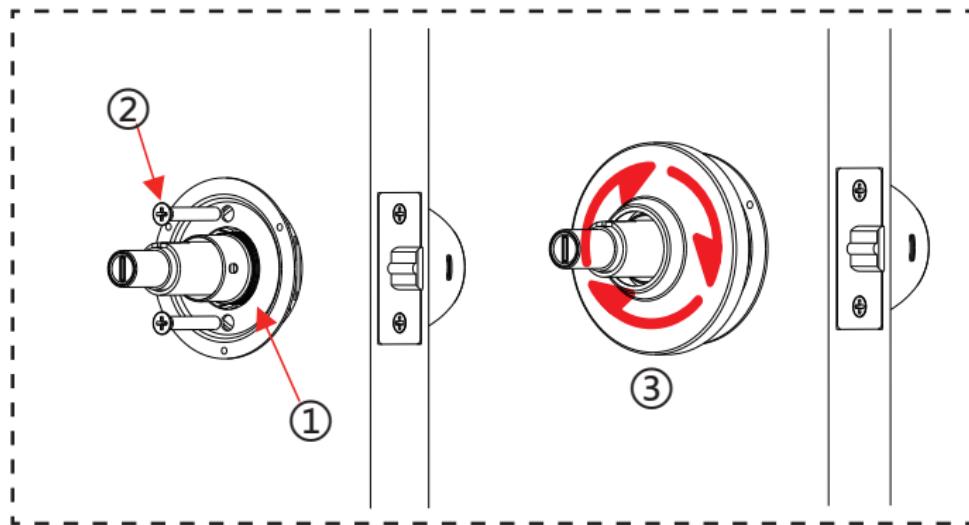


- A** Install the mounting plate and tighten 2 pcs screws B with aligning 2 holes of mounting plate.

- B** Tighten the rosette of interior assembly clockwise until secure.


7

Install the Interior Knob

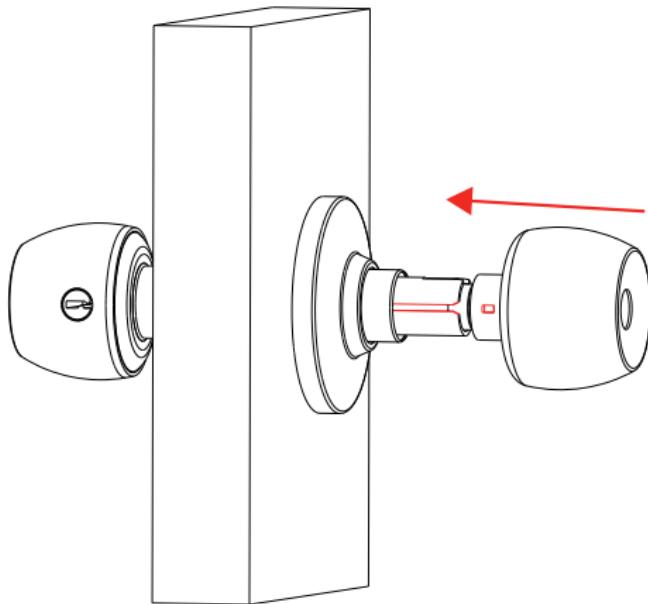

A As illustrated, align the interior knob with the groove and firmly press it into the slot until it clicks into place to complete the installation.

8 Operation Guide

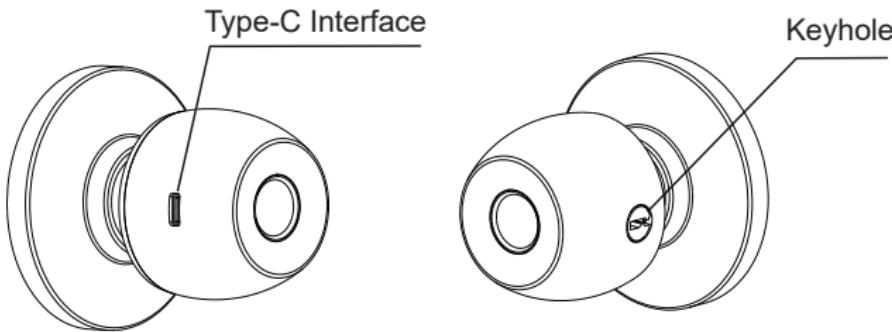

Key to Unlock


Insert the key into the keyhole at the edge of the exterior knob and turn the key 90° to unlock, then turn the knob to open the door.

Low Power Indication

After being unlocked by fingerprint or app successfully, it is time to recharge the lock when the buzzer beeps once and the fingerprint identification area flashes green and then flashes red.


Connect a power bank to the type-c interface on the knob for charging.

8 Operation Guide

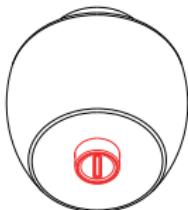

Passage Mode

In the passage mode, the button remains in the raised position as shown in the diagram. In this state, the lock will stay unlocked.

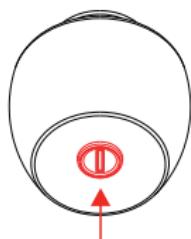

Privacy Mode

Press the button to activate privacy mode as shown. Both members and administrators can unlock via fingerprint and app. Automatic passage mode restoration after unlocking.


Restore the Factory Setting

Insert the mechanical key and rotate the key in alternating direction 5 times. Successful reset will be indicated by audible beep and green LED illumination. After the lock is successfully reset, any fingerprint can be used to unlock it.

9 Pairing the Lock




Step 1: Download 'Smart Life'APP in Google Play or Apple Store.

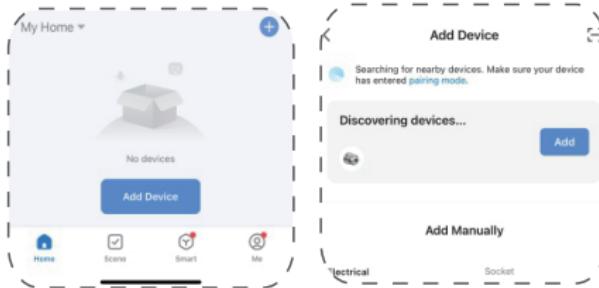


Step 3: Touch fingerprint identification area to activated for automatical searching and add it.

Step 2: Register or Log in an Account.

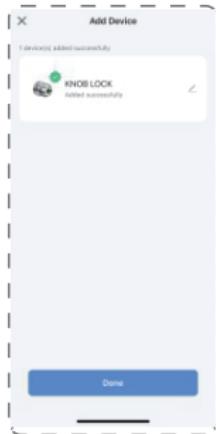


Step 4: You can click the icon ↖ to rename the lock or click 'Done' to complete the pairing.

10 APP Unlock/Lock

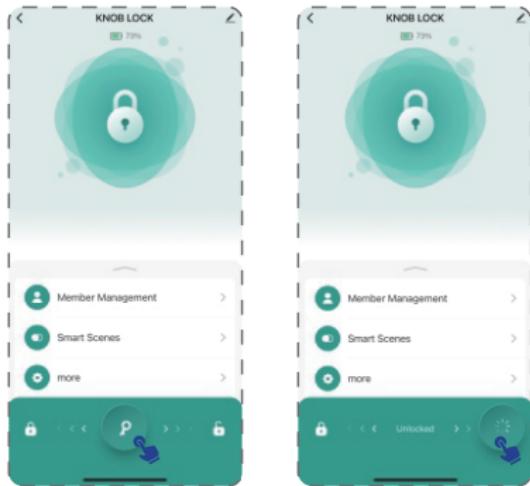


Unlock via Bluetooth
Unlock: Hold and drag the icon "∅" to the icon "🔒".

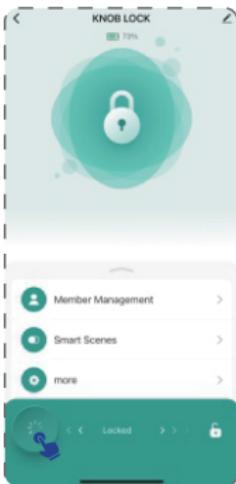

Lock via Bluetooth
Lock: Hold and drag the icon "∅" to the icon "🔒".

11 Member Management

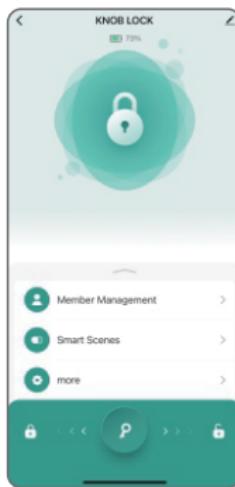


Select "Member Management" and tap "+" to add/share/cancel members.




Warm tips:

If you want to add family members as administrator to manage the APP or add fingerprints by himself.
It is required that your family members also download the app and register. The registered email address is this account.

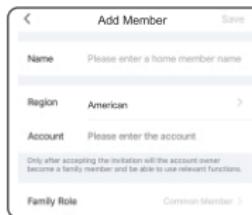


Tap
"Add Member"

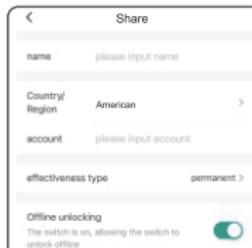

Or

Tap
"Share Member"

12 Fingerprint Input

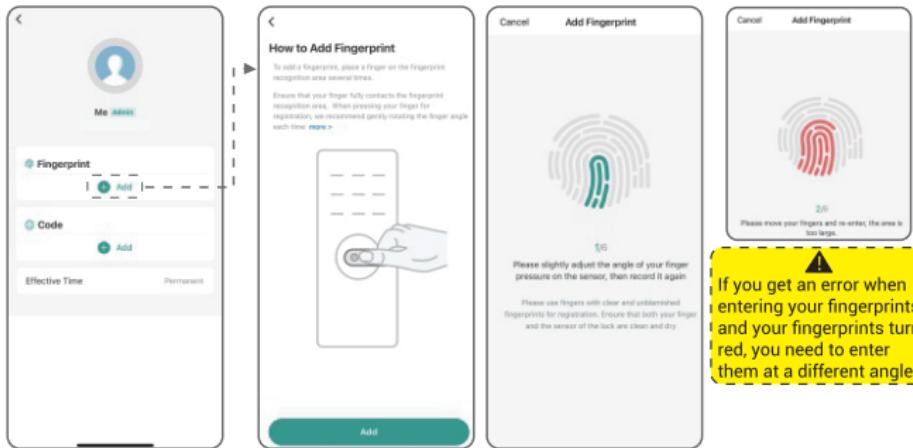


Fingerprint Input: Press "Add" and follow the instructions to add fingerprints.

⚠ Warm tips:




1. Please keep your fingers and sensing area clean and dry before inputting your fingerprint.
2. For improving the fingerprint recognition rate of the elderly, children or people with light fingerprints, it is necessary to create more fingerprint files and input different angles of their fingerprints.
3. For your privacy, your fingerprints will be stored in the device only.

13 Home Management

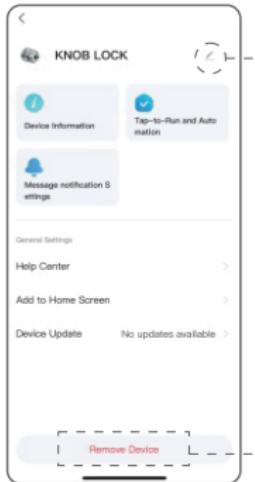

1. Press the product name "" to check and set up the relevant information.

2. Press "Remove Device" to reset all the information of this lock in the app.

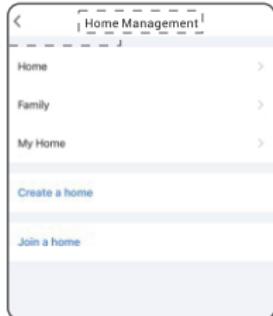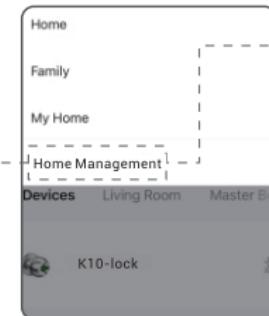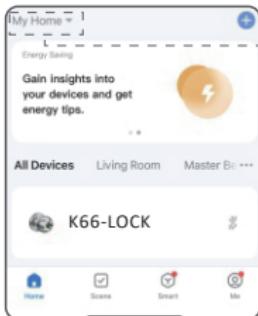

If you need to manage multiple households and family members for your rental business, you can tap your home name and then tap "Home Management" to set up the settings.

14 Technical Parameters

Name	Parameter Description
USB	Type-C/5V2A
Fingerprint Capacity	20
Low power warning	3.3V±0.2
Voltage range	3.0~4.2V
Stand-by current	≤90µA
Working current	≤500mA
Working temperature	23 °F~131 °F(-5°C ~55°C)

Action	Buzzer	Indicator
Fingerprint added successfully	Long Beep	Stay green for a while
Unlocking successful	Beeps once	Blinks green once
Unlocking failure	Beeps twice	Blinks red once
Low battery warning	Beeps once	Blinks green then blinks red
Resetting successful	Long Beep	Blinks green once

15 FAQ

Q: Why can't the door lock recognize my fingerprint well or it failed to unlock with the App?

A: When recording fingerprints, please place your clean and dry finger at different angles and positions to ensure that a larger area is scanned. The old and children may not use their fingerprints effectively, so keep fingers clean before unlocking.

If two apps use Bluetooth to manage one lock at the same time, only one user can connect to control this lock.

Q: If the batteries die, how can I open the door?

A: The smart door knob built-in rechargeable battery. You can use an emergency power supply to charge the smart door knob through a Type C port or use the backup key to open the door.

Q: After installing the new lock, what should I do to pair and set it up?

A: This smart Knob is controlled by the Bluetooth Smart Life app. Please confirm that the Bluetooth and Location permission is turned on for the App. After authorization, you need to touch the fingerprint sensor to wake up the smart lock.

Q: Why is my Smart Lock low-powered?

A: Charge the lock for 3-4 hours before installing. When the low battery warning occurs (fingerprint unlocked first green light then flashing red light), indicating the need for charging.

Q: What is the difference between administrator and user?

A: The first user who adds the knob to Smart Life App is the administrator. The admin can manage the fingerprint.

Q: Why can't I lock the door?

A: Check if you turn the Interior Knob to Passage Mode that Passage Mode is unlock Mode, you can't lock the door no matter how. You need to turn to Normal Mode which you can use the APP to lock the door or it will auto lock in 5s.

Q: Why does my knob flash green on the fingerprint but won't unlock and takes 2-3 more tries?

A: After successful fingerprint unlocking(flash green), wait 2 second before turning the door knob.

If it flashes red, you need to adjust your fingerprint position to recognize it. This can improve the success rate of recognition.

16 FCC WARNING

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on , the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.