



GIGABIT IP PHONE



USER GUIDE

UC862

Version:1.0.3.62

Notices Information

Copyright

Copyright © 2005 - 2014 Nanjing Hanlong Technology CO., LTD. All rights reserved.

Nanjing Hanlong Technology Co., LTD. owns all the right to revise and change this document at any time. And all the illustrations and instructions in this paper are subject to the copyright protection of legal law. No parts of this document may be used or reproduced, transmitted by the third parties for any purposes without the express written permission of Nanjing Hanlong Technology Co., LTD.

When this document is made available on Hanlong's web page, hanlong Technology Co., LTD. gives its right to download and print copies of this content only for private use as a user manual. No parts shall have the right to alter, modify or use as commercial means without the express written permission of Nanjing Hanlong Technology Co., LTD.

Safety cautions

- To use the Phone follow the instructions in this manual.
- To use the power adapter that delivered with the phone. Other power adapters may damage the phone.
- The phone is only for indoor use. And also avoid in high humidity, water and some other liquids.
- Do not use the phone during thunderstorms.
- CE
- FCC

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might damage the surface or internal electronics of the phone.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Table of Content

| | |
|--|----|
| Notices Information | 1 |
| Copyright | 1 |
| Safety cautions | 1 |
| WEEE Warning | 1 |
| Cleaning | 1 |
| FCC Statement | 2 |
| Table of Content | 2 |
| Getting Started | 6 |
| Packing List | 6 |
| Phone Installation | 8 |
| 1. Attach the Foot stand | 8 |
| 2. Connect the Handset and optional Headset | 9 |
| 3. Connect the Network and Power | 9 |
| Initialization | 10 |
| Status | 10 |
| Registration | 12 |
| Idle Screen | 14 |
| Getting Familiar with Your Phone | 16 |
| Hardware Components Preview | 16 |
| Icon Preview | 19 |
| LED Instruction | 22 |
| Power Indicator LED | 22 |
| Line LED:(Line or Memory Key set as Line) | 22 |
| BLF or BLF List Key LED :(Line/Memory Key set as BLF) | 23 |
| Shared Line Key LED :(Line/Memory Key set as Shared Line) | 23 |
| Other Key Led | 23 |
| Info Key Instruction | 24 |
| User Interface | 25 |
| Memory Key Function Overview | 26 |
| Basic Setting Configuration | 29 |
| Web Login | 29 |



Table of Content

| | |
|-------------------------------|----|
| Administrator Password | 30 |
| Basic Network Setting | 31 |
| WAN Port | 31 |
| PC Port | 34 |
| Display Mode | 35 |
| Language | 36 |
| Time and Date | 38 |
| Ring Tone | 42 |
| Font Size | 44 |
| Volume | 45 |
| Wallpaper | 47 |
| Screen Saver | 48 |
| LED Status Setting | 51 |
| Backlight | 51 |
| Contact Management | 52 |
| Directory | 52 |
| Remote Phonebook | 57 |
| Call History | 58 |
| LDAP Phonebook | 61 |
| Broadsoft Phonebook | 63 |
| Call log | 64 |
| Other features settings | 65 |
| Dial Plan | 65 |
| Emergency Call | 66 |
| LED Status Setting | 67 |
| Action URL | 68 |
| Softkey Layout | 68 |
| Programmable Key | 69 |
| Ext Key | 70 |
| Basic Call Features | 70 |
| Place a Call | 70 |
| End a Call | 72 |
| Redial a Call | 72 |
| Receive a Call | 73 |
| Incoming Call Show Mode | 74 |
| Auto Answer | 74 |
| Call Hold | 75 |
| Call Transfer | 76 |
| Call Conference | 79 |
| Call Forward | 80 |
| Call Return | 85 |
| Call Waiting Tone | 86 |
| Hide Caller ID | 87 |
| Reject Anonymous | 88 |
| Call Mute | 89 |



Table of Content

| | |
|--|------------|
| DND | 90 |
| Key as Send..... | 90 |
| No Key Entry Timeout..... | 91 |
| Keypad Lock..... | 92 |
| Hot Line | 93 |
| Function Key Features Settings..... | 95 |
| Line | 95 |
| Speed Dial..... | 96 |
| BLF | 97 |
| BLF List..... | 99 |
| Voice Message..... | 100 |
| Direct Pickup | 101 |
| Group Pickup | 102 |
| Call Park..... | 104 |
| Intercom | 105 |
| DTMF | 106 |
| Prefix..... | 107 |
| Local Group | 109 |
| XML Group..... | 110 |
| LDAP | 111 |
| XML Browser | 112 |
| Broadsoft Group..... | 113 |
| Conference | 114 |
| Forward | 114 |
| Transfer | 115 |
| Hold..... | 116 |
| Group Listening | 116 |
| DND | 117 |
| Redial | 118 |
| SMS..... | 118 |
| Send SMS..... | 118 |
| Set SMS Memory Key | 119 |
| Record | 119 |
| URL Record | 121 |
| Paging | 121 |
| Shared Line | 122 |
| Public Hold | 123 |
| Private Hold | 124 |
| Upgrade | 126 |
| Factory Reset | 126 |
| Pcap Feature..... | 126 |
| System Log | 127 |
| Upgrade..... | 128 |
| Configuration File..... | 130 |
| Troubleshooting | 131 |




| | |
|---|-----|
| Why is the phone LCD screen blank? | 131 |
| Why does the phone display "Network Unavailable"? | 131 |
| Why can't I get a dial tone? | 132 |
| Where to set the tone? | 132 |
| How to download XML Configuration? | 132 |
| How to Import TLS certificate? | 133 |
| How to use Vlan? | 133 |
| How to use LLDP? | 133 |
| How to Set LCD and Web GUI: | 133 |
| How to Upgrade via FTP? | 134 |
| How to make Ringtone? | 134 |
| How to use Open VPN? | 134 |
| Provisioning Guide on Free PBX: | 134 |
| Failover Notes | 134 |
| How to Upload Wallpaper? | 134 |
| How to Use Auto Provision Phonebook? | 134 |
| All Documents | 134 |

Getting Started


Packing List

The package contains the following parts, please check if all the items are not missed:

1. The phone device

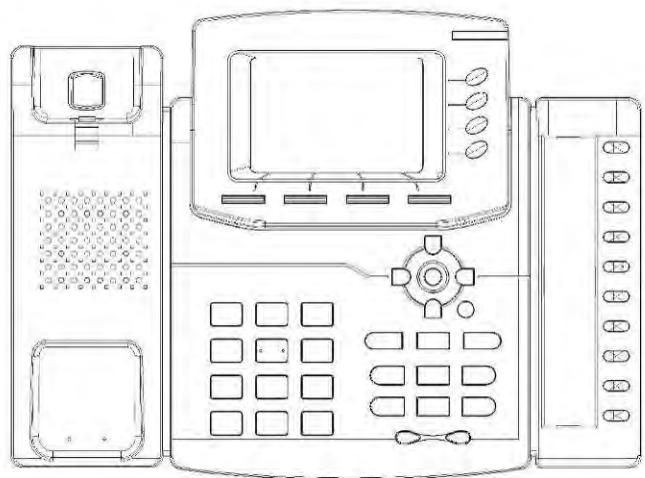


2. The footstand

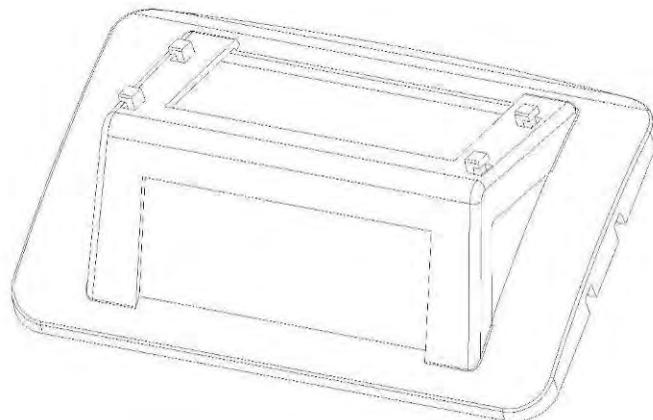


3. Handset




4. Headset cord

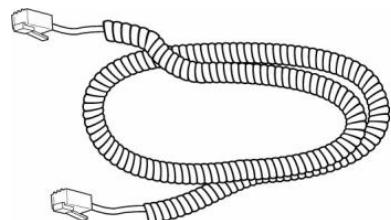

5. Power adapter

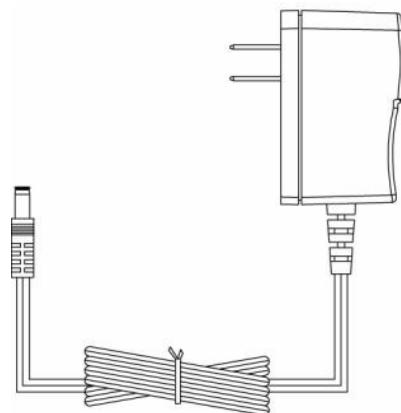

6. Ethernet cable

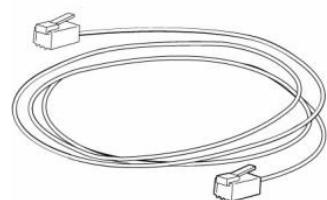


7. Quick installation reference




Phone Installation


1. Attach the Foot stand

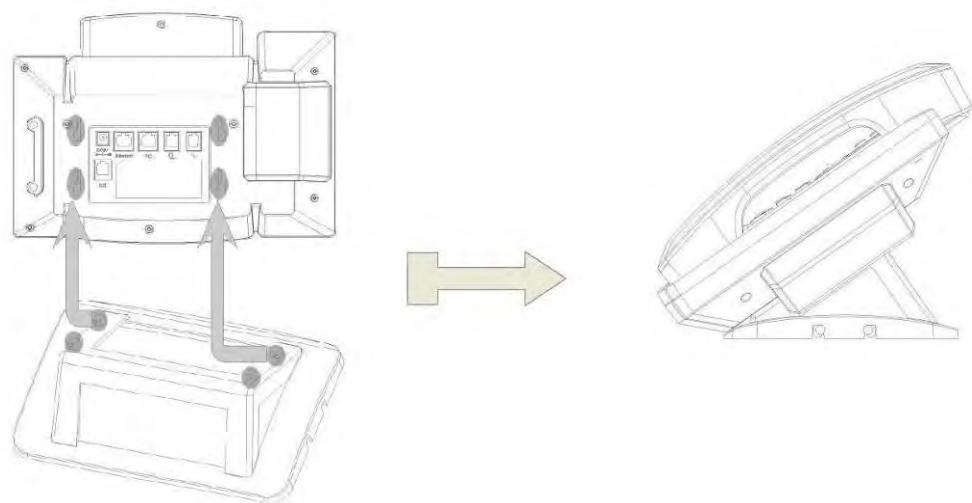

2. Connect the Handset and optional Headset

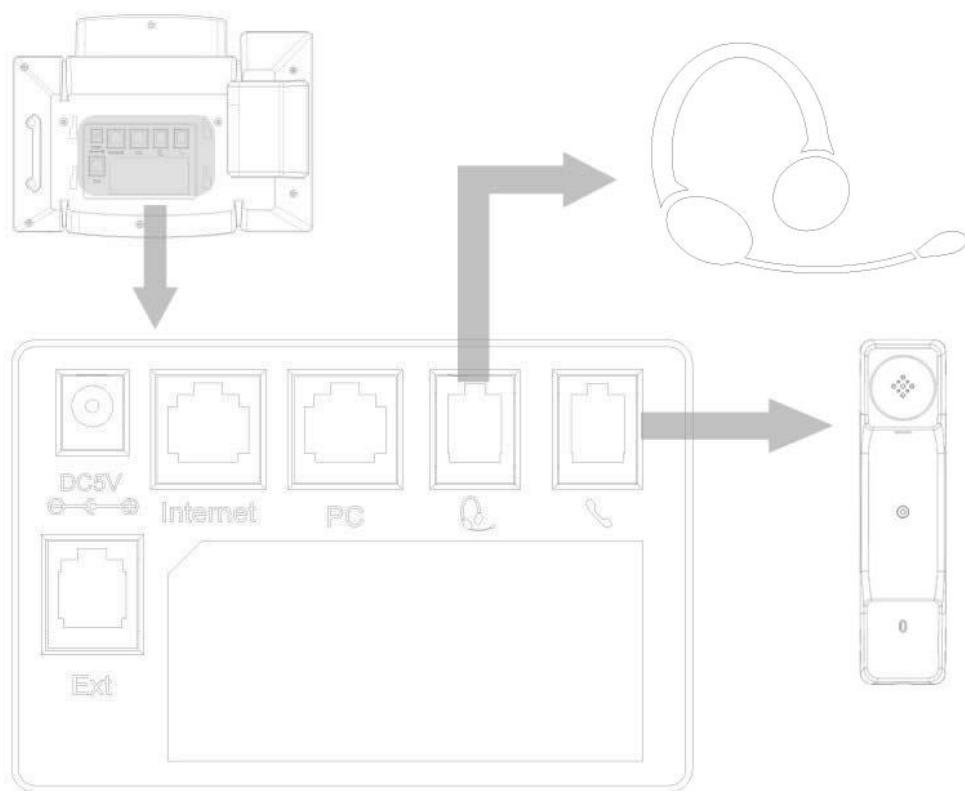

3. Connect the Network and Power

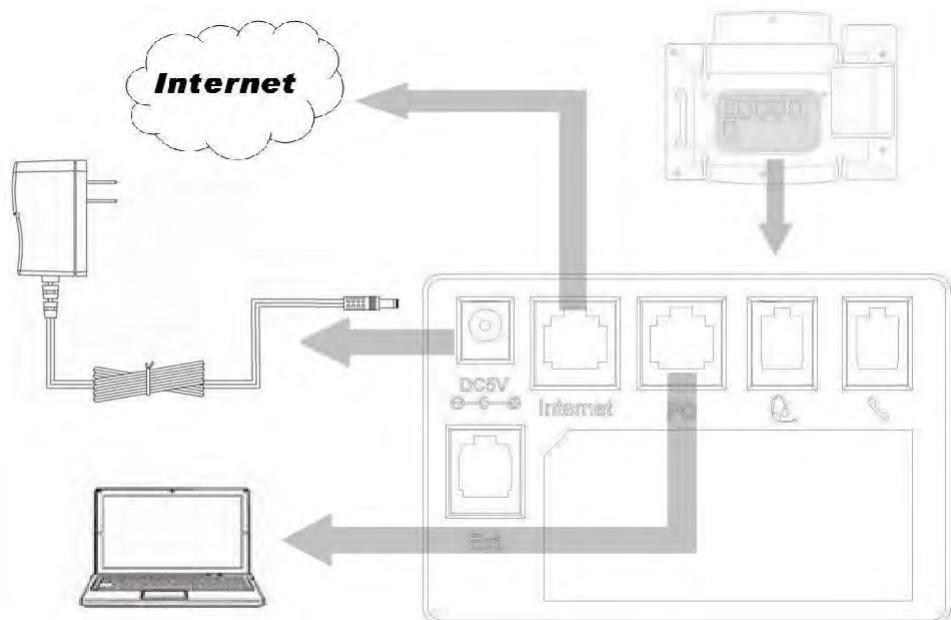

Initialization


After your phone has been powered up, the system boots up and performs the following steps:

Automatic Phone Initialization

The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display "Booting"



And then show "Initializing" during the initialization.

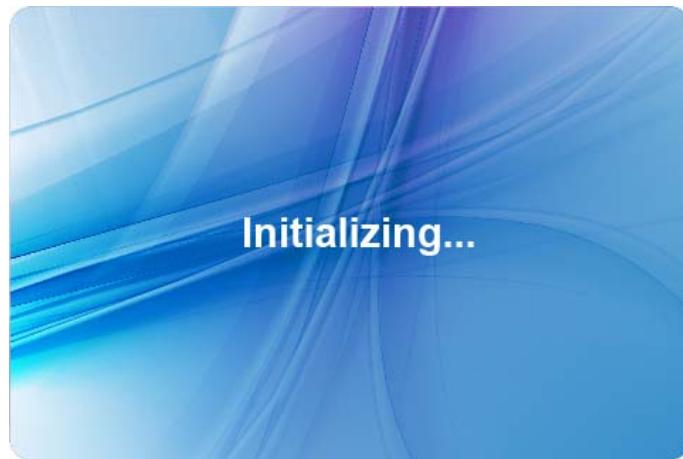

By default the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, default gateway, DNS server.

Status

You can view the system status of your phone via phone user interface or web user interface. The information of phone status includes: Information(e.g., Model, IP, MAC, Firmware, Hardware), Network(e.g., WAN Type, IP, Mask, LAN Type, Gateway, DNS...)Account (e.g., register status

of accounts)

To view the phone status via phone interface:

1. Press Menu → Status → Information Network/ Account



2. Press Menu → Status → Network




3. Press Menu → Status → Account



To view the phone status via Web interface:

Login webpage(For How to login, please refer to [Web Login](#))

View the information of Version, Account and Network.

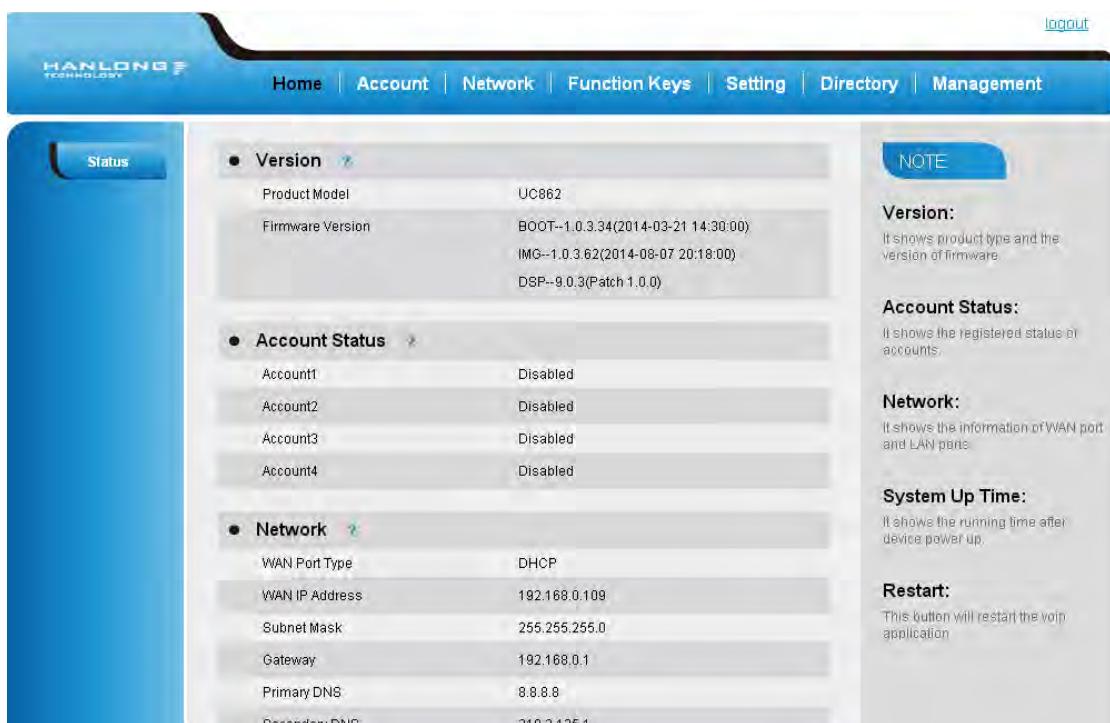

Version:
It shows product type and the version of firmware.

Account Status:
It shows the registered status of accounts.

Network:
It shows the information of WAN port and LAN ports.

System Up Time:
It shows the running time after device power up.

Restart:
This button will restart the voip application.

Registration

To register via phone interface:

Press Menu→ Setting→Advanced setting (default password:admin)→Accounts

Select the desired account

Select Enable for Account active

Filled the SIP Server

Filled the Failover SIP server if need (Optional)

Filled the Outbound Proxy (Optional)

Filled the SIP User ID, Authenticate ID


Filled the password, Name (shown on LCD) and Ringtone.

Press Save to save the configuration.



To register via web interface:

1. Login webpage and Click Account→Basic
2. Select the desired Account
3. Select Yes for Account Active
4. Filled the Primary SIP SERVER and other account information
5. Click **SaveSet** to save the configuration.

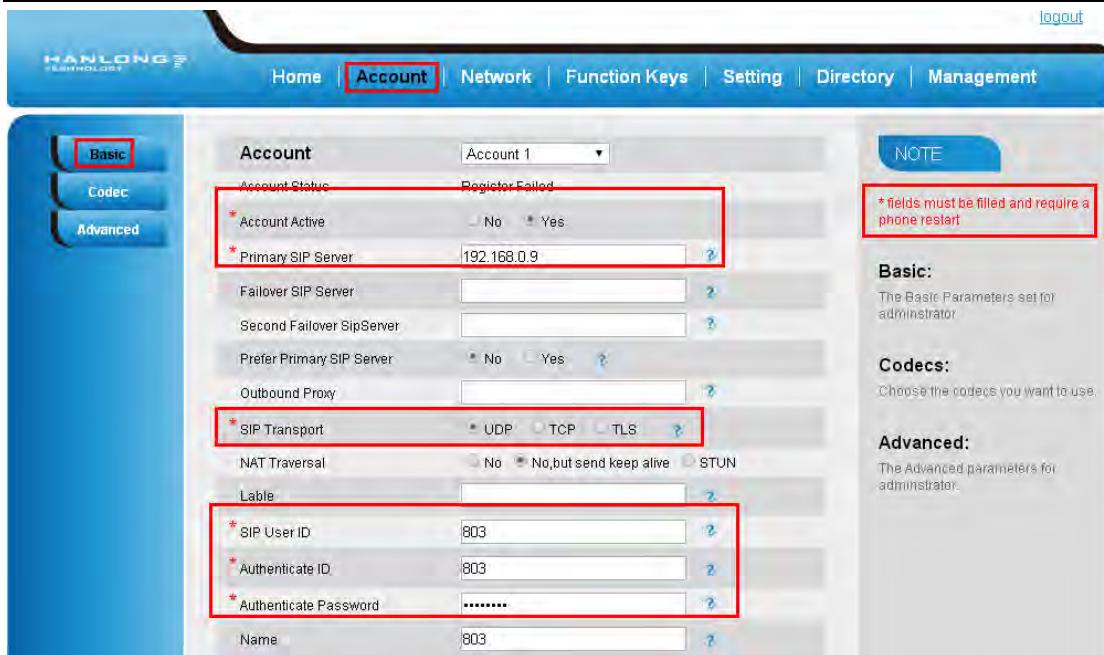

NOTE
* fields must be filled and require a phone restart

Basic:
The Basic Parameters set for administrator.


Codecs:
Choose the codecs you want to use.

Advanced:
The Advanced parameters for administrator.

Note:

1. All fields with * must be filled. If changed, it requires a phone restart.
2. Account Status says the account registered successfully or not.
3. When change the account information via phone, it will show Restart note when back to idle page.

Idle Screen

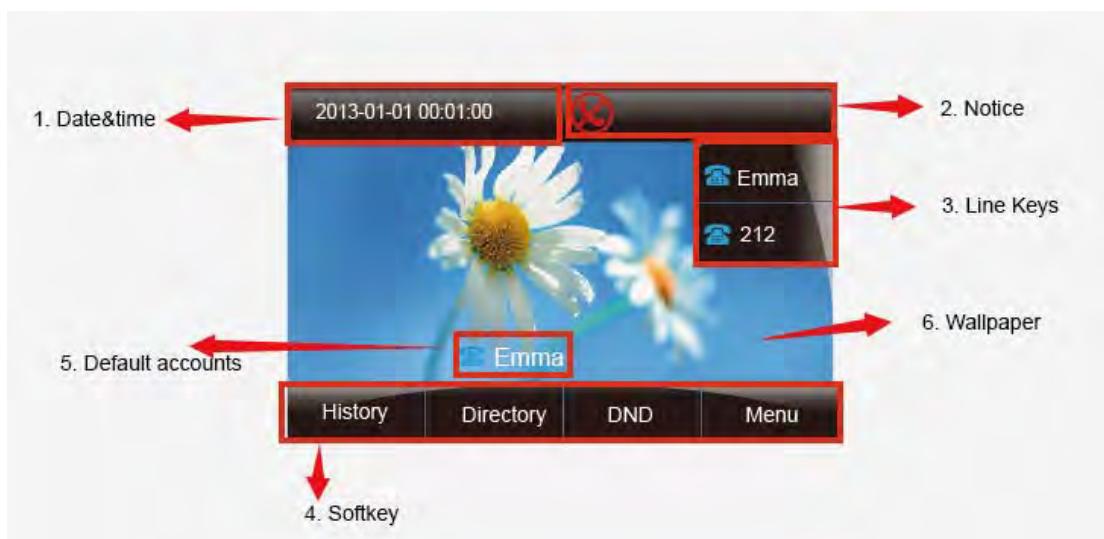

| Name | Description |
|------|-------------|
|------|-------------|




Getting Started

| | |
|--------------------|--|
| 1. Date&Time | It shows the phone's time & date. For Date&time setting, see Time&Date |
| 2. Notice | It shows the phone features status, More see Icon Preview |
| 3. Line Keys | This area shows the four line key labels. Line keys are also can be used as other function keys. For more information you can refer to Memory Keys |
| 4. Soft Key | This area shows the soft key labels. The default soft key labels are “History”, “Directory”, “DND” and “Menu”. More to see Programmable Key |
| 5. Default Account | This shows the current use account. User can use to change the default use account. |
| 6. Wallpaper | This shows the backgrounds picture. You can also change it. For more information you can refer to Wallpaper . |

Getting Familiar with Your Phone

Hardware Components Preview

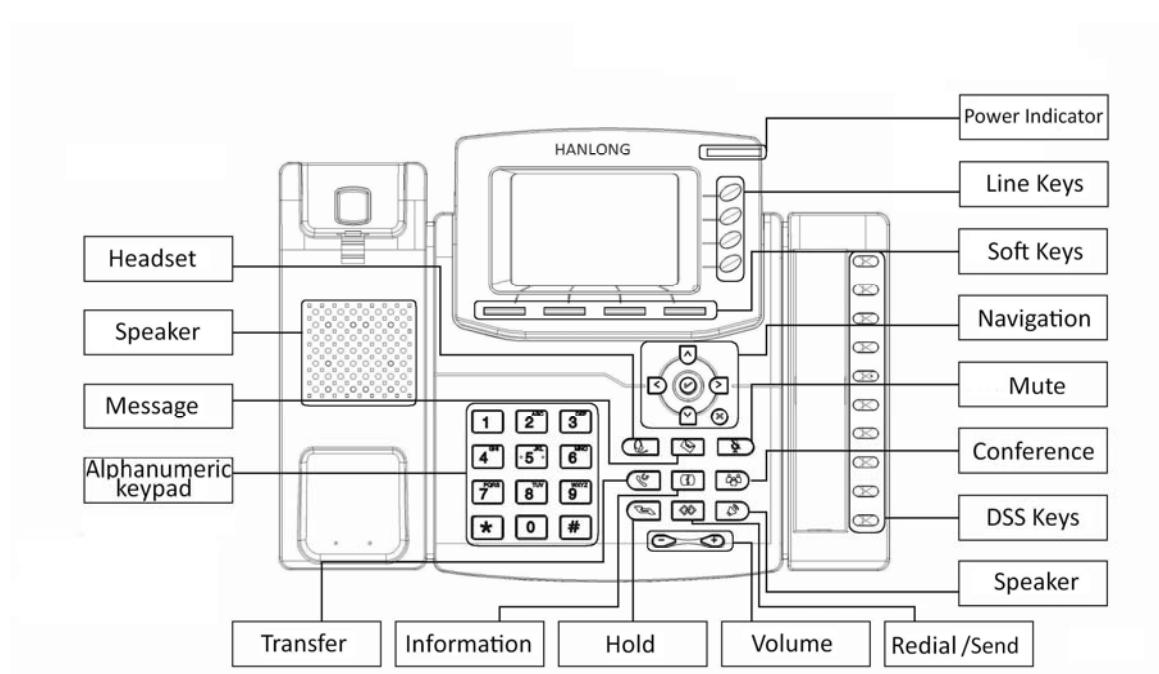

| Item | Description |
|---------------------|--|
| LCD screen | To Presentation all information about the date& time, accounts, soft keys, messages, calls and other some information. |
| Power Indicator LED | To indicate the power status |
| Line keys | The phone supported up to 4 accounts 1. Steady green: idle interface, during a call.. 2. Blink red: a call incoming |
| Soft keys | Labels automatically to identify their context-sensitive features. |
| Navigation keys | <p>1. OK.</p>  <p>Up arrow key: To move up of the selection shows on the screen.</p>  <p>Right arrow key: To move right of the selection shows on the screen.</p>  <p>Left arrow key: To move left of the selection shows on the</p>  |

| | |
|-------------|--|
| |  screen.  Down arrow key: To move down of the selection shows on the screen.  1. To return to idle screen. 2. To cancel the information or call on the screen. |
| Mute key |  1. To mute the voice during the call (green light). 2. To un-mute the call. |
| Conference |  To place a conference call |
| | <p>To be configured as different function as:</p> <ol style="list-style-type: none"> 1. Line 2. Speed Dial 3. BLF 4. BLF List 5. Voice mail 6. Direct Pickup 7. Group Pickup 8. Call Park 9. Intercom 10. DTMF 11. Prefix 12. Hold 13. Conference 14. DND 15. Redial 16. Transfer 17. SMS 18. Hot -desking 19. Call Return 20. Paging 21. Record 22. Shared Line |
| Memory Keys | <p>The LED lights status when set as Shared line:</p> <p>Stay green: Idle Stay red: Busy Blinked green: Ring Back Blinked red: A call incoming Steady orange: During a call Blinked orange: Public Hold Blinked green: Private Hold Light Drown: Unregistered</p> |

| | |
|---------------------|--|
| | |
| Speaker |  Press this button to place a call in hands-free mode. |
| Redial |  To dial the previous dialed number. To act as send key. |
| Volume |  To decrease the volume.  To increase the volume. |
| Hold |  To hold or to resume a call during a conversation. |
| Information |  To show the accounts status and some other relevant information. More refer to Info key instruction . |
| Transfer | To transfer a call to a third party. To enable or disable Forward feature during the idle page. |
| Alphanumeric keypad | To enter the phone numbers, letters and so on. |
| Message |  To indicator the New message, and press to read. |
| Headset |  To indicate that the phone is or not in Headset mode. |

Icon Preview

| Icon | Description |
|---|--------------------------|
|  | Network available |
|  | Network down |
|  | Line(Registered succeed) |
|  | Line (Unregistered) |
|  | Line(Ringing) |
|  | Speed Dial |
|  | BLF |
|  | BLF(Ringing) |
|  | BLF(Talking) |
|  | Speakerphone mode |
|  | Handset mode |
|  | Headset mode |
|  | Voice messages |

| | |
|---|-----------------|
|  | Text message |
|  | Mute |
|  | Do Not Disturb |
|  | Volume is 0 |
|  | Hold |
|  | Dialed calls |
|  | Received calls |
|  | Missed calls |
|  | Forward calls |
|  | Conference |
|  | Keypad locked |
|  | Keypad unlocked |
|  | Pick up |
|  | Call Park |

| | |
|---|-----------------|
|  | Intercom/Paging |
|  | DTMF |
|  | Prefix |
|  | XML Group |
|  | Local Group |
|  | XML Browser |
|  | LDAP |
|  | Broadsoft Group |
|  | Conference |
|  | Forward |
|  | Transfer |
|  | Hold |
|  | Line on Hold |
|  | DND |
|  | Redial |
|  | Call Return |
|  | SMS |
|  | Record |

| | |
|---|-----------------|
|  | Recording |
|  | Group Listening |
|  | Shared Line |
|  | Other Functions |

LED Instruction

This part mainly instructs the LED status. The Power LED Status describe on the premise that the LED setting all set as Yes. For LED status setting, please refer to: [LED Status Setting](#)

Power Indicator LED

| LED Status | Description |
|---------------|-----------------------------|
| Blinked green | Ringing or have missed call |
| Steady Green | Idle status(Power on) |
| Off | Powered off. |

Line LED:(Line or Memory Key set as Line)

| LED Status | Description |
|--------------|-----------------------------------|
| Steady Green | Hold |
| Steady Green | Offhook or during a conversation. |
| Blinked red | Ringing. |
| Off | Idle status |

BLF or BLF List Key LED :(Line/Memory Key set as BLF)

| LED Status | Description |
|--------------|--|
| Steady Green | Idle status for the monitored line |
| Steady Red | The monitored line is calling or during a call |
| Blinked red | The monitored line is ringing. |
| Off | All other unknown status |

Shared Line Key LED :(Line/Memory Key set as Shared Line)

| LED Status | Description |
|----------------|-------------------------|
| Stay green | Idle status |
| Stay red | The line is busy |
| Blinked green | Ring Back, Private hold |
| Blinked red | The line is ringing |
| Steady orange | During a Call |
| Blinked orange | Public Hold |
| Off | Unregistered |


Other Key Led

| Key | Description |
|-------------|--|
| Headset Key | When use in headset mode, the led is steady green or the LED is off. |
| Message Key | Blinked green when there is new messages or the LED is off. |
| Mute Key | Red when the mute the call, or the LED is off. |

Info Key Instruction

Info Key  plays many roles in this phone:


1. Quick get the Information page.

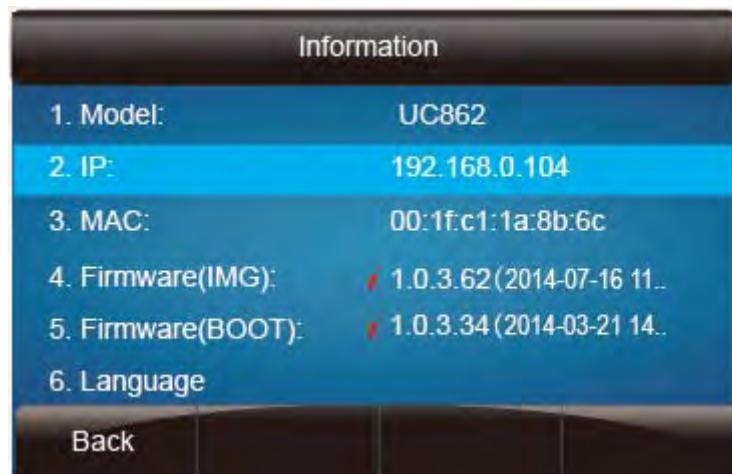


2. Get the full information of the item with *i*. When the item with *i*, it means the information is not full display or there more options for the item. Press info key, you can get the complete content or the prompt list for all options.



3. Fast access to the new missed or Forward calls, New Voicemail or Text Message.

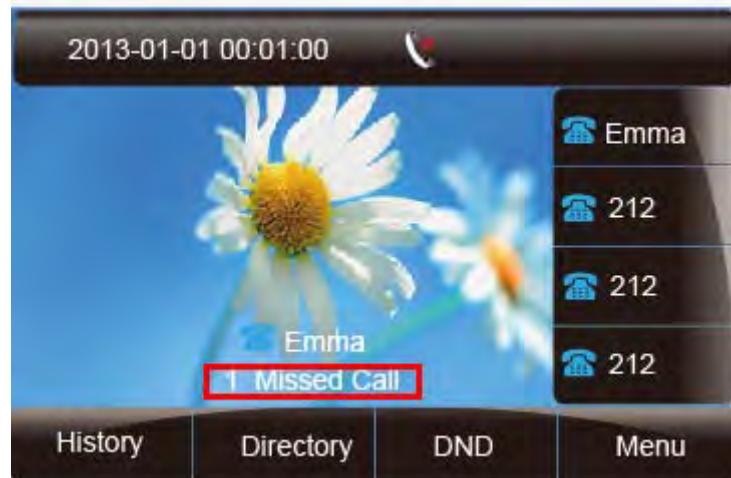

4. Get all other parties information during a conference.

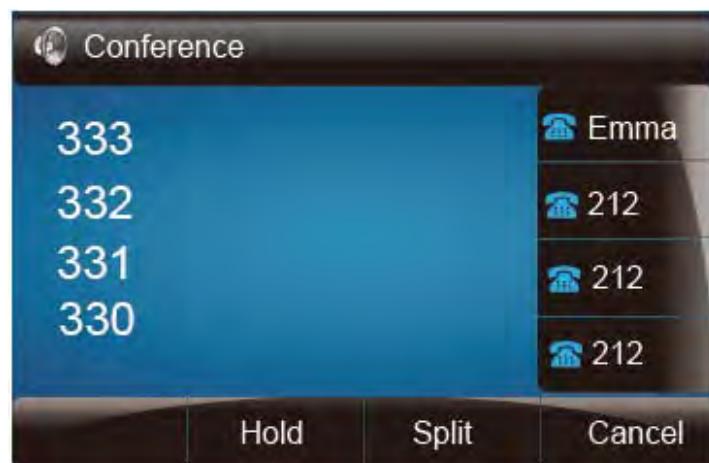

User Interface

There are two ways to customize specific configurations on your IP phone:

- The user interface on the IP phone
- The user interface in a web browser on your PC

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many instances, it is possible to use both the phone user interface and the web user interface to operate the phone and change settings. However, in some instances, it is only possible to use the phone or the web user interface.

Phone Interface Overview

| Option | |
|-------------------|--|
| Status | Model |
| | IP |
| | MAC |
| | Firmware |
| | Hardware |
| | Network |
| | Account |
| Features | Call Forward |
| | Function Key(Line and Memory key setting) |
| | More Key see Memory Key Overview |
| | Key as Send |
| | Hot Line |
| | Anonymous Call |
| | DND |
| Basic Settings | History Setting |
| | Language |
| | Time & Date |
| | Time & Date Format |
| | DHCP Time |
| | Ring tone |
| Advanced Settings | Front Size |
| | Account Registration |
| | Network |
| | Lock |
| | Factory Reset |
| | Password |
| Directory | Auto provision |
| | Add, view and delete |
| | History |
| History | View and delete |
| Message | Voice Mail set and View. |
| Display | Display Mode |
| | Wallpaper |
| | Screensaver |

Memory Key Function Overview

[Line](#)

[Speed Dial](#)

[BLF](#)

[BLF List](#)

[Voice Mail](#)

[Direct Pick Up](#)

[Group Pick Up](#)

[Call Park](#)

[Intercom](#)

[DTMF](#)

[Prefix](#)

[Local Group](#)

[XML group](#)

[LDAP](#)

[XML Browser](#)

[Broadsoft group](#)

[Conference](#)

[Forward](#)

[Transfer](#)

[Hold](#)

[Group Listening](#)

[DND](#)

[Redial](#)

[Call Return](#)

[SMS](#)

[Record](#)

[URL Record](#)

[Paging](#)

[Shared Line](#)

[Public Hold](#)

[Private Hold](#)

Basic Setting Configuration


This part will mainly introduce the basic configuration as the Time, Language, and Volume...

Web Login

1. Get the IP address: Press Menu → Status → Information.



2. Input the IP Address in the web browser.
3. Input the user name (default is admin), password (default is admin).
4. Login successfully.

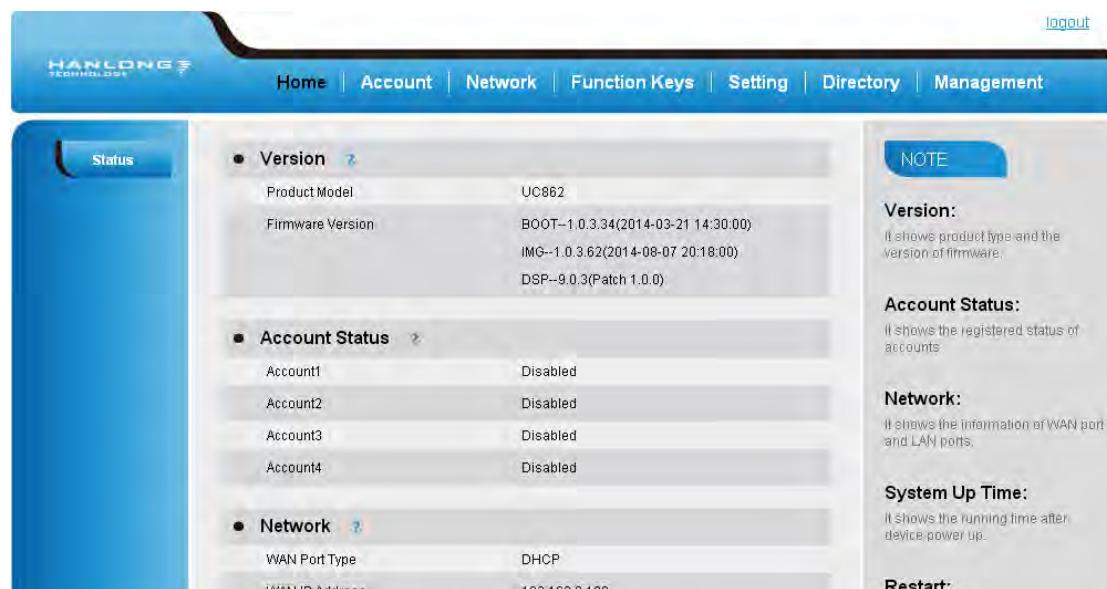

NOTE

Version:
It shows product type and the version of firmware.

Account Status:
It shows the registered status of accounts.

Network:
It shows the information of WAN port and LAN ports.

System Up Time:
It shows the running time after device power up.

Restart:

Note:

The PC and phone should be in the same segment.

When register the accounts in web and the server port is not “5060”, then “SIP Server” should be set as “SIP Server’s IP address: server port.”, for example, “192.168.0.122: 5090”.

Administrator Password

The password is mainly used for login the web interface or set the advanced settings through phone interface. And the default password of the administrator is: **admin**

To change to password via Phone Interface

1. Press Menu → setting → Advanced settings → password (default admin) → Phone Setting → Set Password
2. Enter the current PWD (password), new password and confirm the new password.
3. Press save soft key or  to save the new password.



To change to password via Web Interface

1. Management → Password
2. Fill the value
3. Click  to save the configuration.



Basic Setting Configuration

NOTE

Password:
If you login as an administrator, you can modify admin's password here.

TLS Certs:
you can import TLS certificate file here.

Note:

When you use the web interface: **user name: admin** **password: admin(default)**

Basic Network Setting

Hanlong IP Phone support three mode of Network: DHCP, Static, and PPPoE. The default mode is DHCP, it will obtain IP address and other information automatically.

If your phone cannot contact a DHCP server for any reason, you need to configure a static IP address manually.

When switch DHCP, Static IP and PPPoE to each other, or change the Static IP on webpage, it will show the warning of restart as following.




WAN Port

To configure a static IP address via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →Static mode.
2. Enter the parameters: IP, Netmask, Gateway, Pri. DNS(primary dns), sec. DNS(second DNS) in the corresponding fields.




3. Click Save and restart the phone.

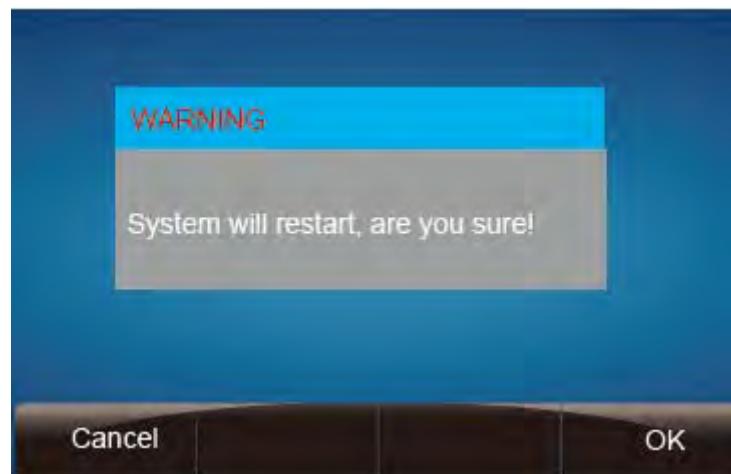

Press the Save soft key to accept the change or the Cancel soft key to cancel. If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. You can set a WAN port to be a PPPoE port. The PPPoE port will perform a PPP negotiation to obtain the IP address. Contact your system administrator for the PPPoE user name and password.

To configure PPPoE via phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WANPort →PPPoE mode.
2. Enter the User ID and password
3. Click Save and restart the phone.

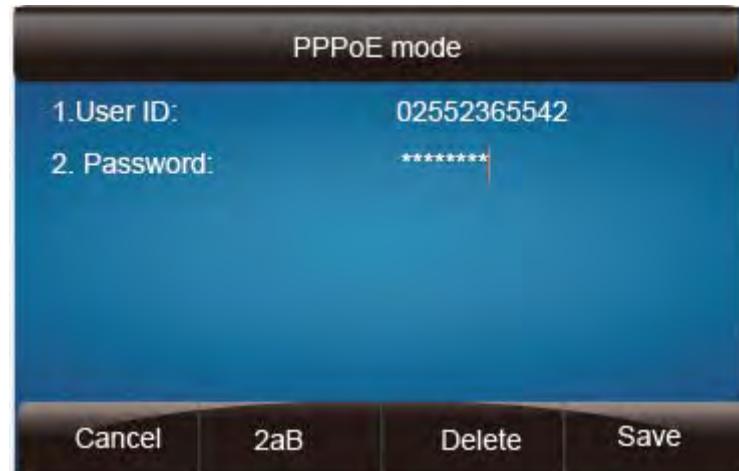**To configure DHCP via phone interface:**

1. Press Menu→Setting→Advanced Settings (password: admin) →Network→WAN Port →DHCP mode.
2. Click Save and restart the phone.

To configure Network via web interface:

1. Click Network→Basic
2. Select the desired Type: DHCP, Static or PPPoE
3. Filled the necessary information.
4. Click the SaveSet and restart the phone.



Basic Setting Configuration

Basic **Network** **Function Keys** **Setting** **Directory** **Management**

WAN

DHCP

DHCP HostName:

DHCP Domain:

DHCP Vendor Class Id:

DHCP User Class:

Static IP Address

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Default Gateway: 0.0.0.0

Primary DNS: 0.0.0.0

Secondary DNS: 0.0.0.0

PPPoE

Account ID: 301

PassWord:

Service Name:

Preferred DNS Server: 8.8.8.8

Reply To ICMP: No Yes

WAN Http Access: No Yes

NOTE

DHCP:
The network configuration will be acquired from DHCP server.

Static IP Address:
Specify the IP address, Subnet Mask, Default Gateway, Primary DNS, Secondary DNS fields manually.

PPPoE:
Contact your ISP if it should be used.

Note:

Wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance. For more information about these parameters, contact your system administrator.

PC Port

Two modes for PC port: bridge and router.

To configure PC Bridge via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin)→Network→PC Port→Bridge mode.
2. Click Save and restart the phone.

To configure PC router via Phone interface:

1. Press Menu→Setting→Advanced Settings (password: admin)→Network→PC Port→Router mode.
2. Enter the IP, Netmask and DHCP server


3. Click Save and restart the phone.

To configure Bridge via web interface:

1. Click Network→Basic

2. Select As Bridge

3. Click and restart the phone

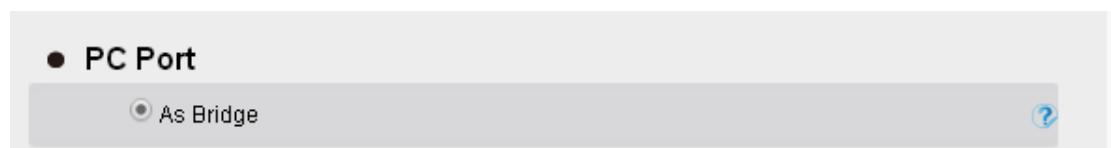
**To configure Router via web interface:**

1. Click Network→Basic

2. Select As Router

3. Fill the IP address and other necessary information.

4. Click and restart the phone

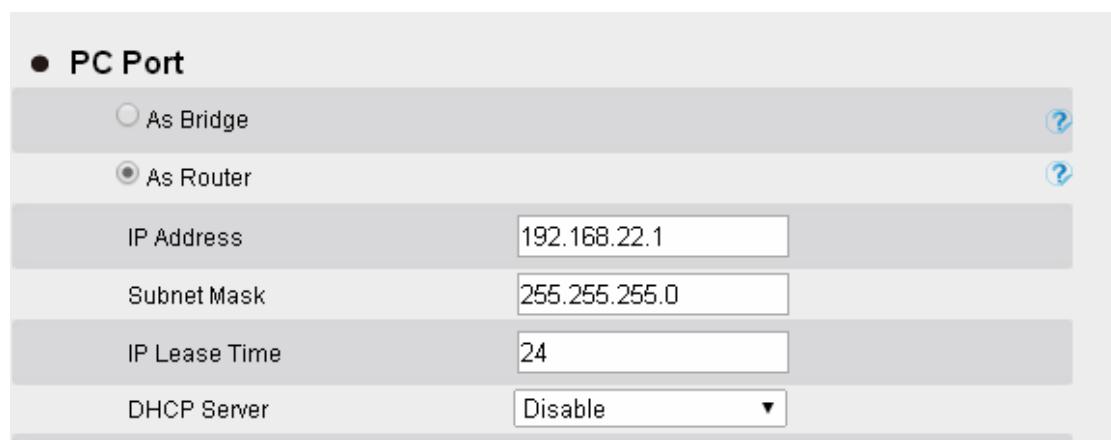

| | |
|---------------|---------------|
| IP Address | 192.168.22.1 |
| Subnet Mask | 255.255.255.0 |
| IP Lease Time | 24 |
| DHCP Server | Disable |

Display Mode

This phone support two Display mode: Text and Icon.

Icon Mode: all Items are shown same as the main with Icon.


Text Mode: Only the 8 main item shown as Icon, and others all text description.

To Configure Display mode via phone interface:

1. Press Menu → Display → Display Mode
2. Select Text or Icon
3. Press Save soft key to save the configuration.

To Configure Display mode via web interface:

1. Login web interface, and click Setting → Preference

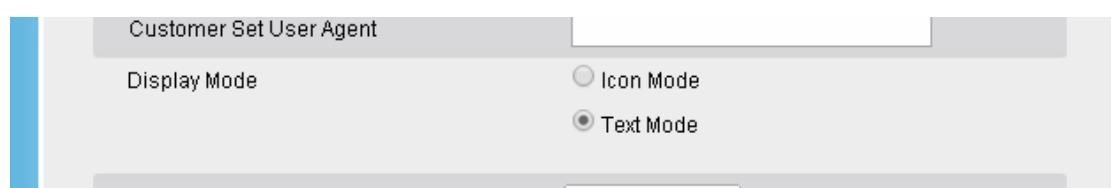


2. Select Icon Mode or Text Mode for the Display mode
3. Click **SaveSet** to save the configuration.

Language


The default Phone interface language is English.

To change the language via Phone interface

1. Press Menu → Setting → Basic Settings → Language.

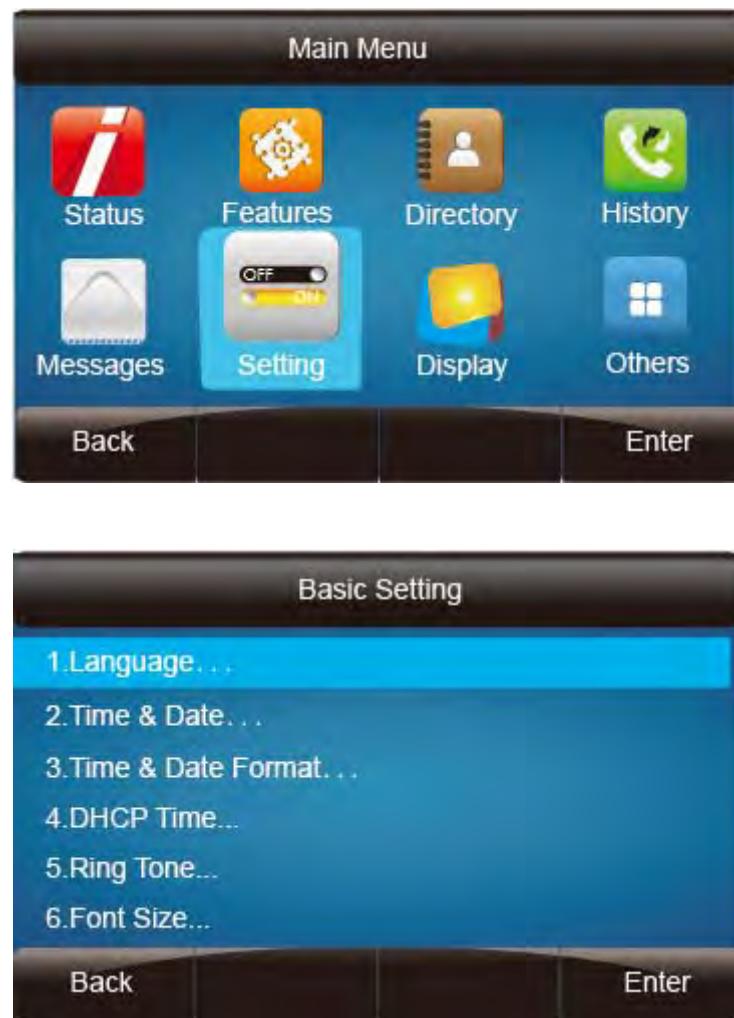

2. Press  or Save soft key to save the configuration.

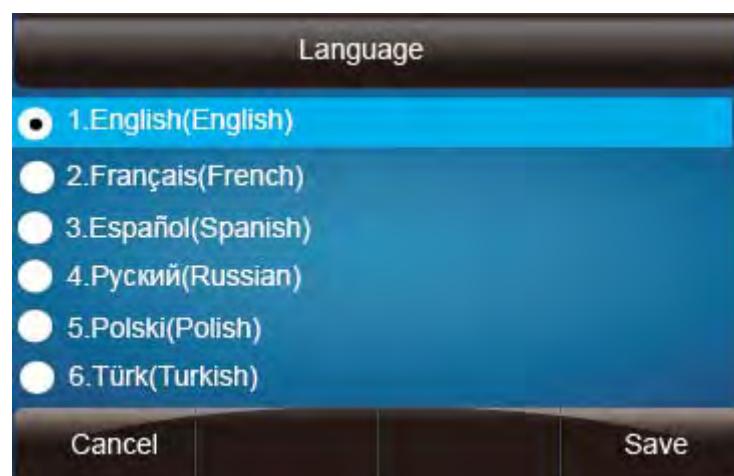

To change the language via Web Interface

1. Setting → Preference → Web Language

2. Select the necessary one.

3. Press  to save the configuration.



Note:

All languages may not be available for selection. The available languages depend on the language packs currently loaded to the IP phone.

Time and Date

The time and date show on the idle page, and it can be set and change by SNTP server automatically or manual setting.

To configure the time and Date by SNTP setting via phone interface

1. To press Menu → Setting → Basic setting → Time & Date → SNTP Settings
2. Press  or , or  to change the Time zone.
3. Fill the NTP server1, NTP Server2, and Daylight Saving.
4. Press  or Save soft key to save the configuration.

**Note:**

Press , all zone will show on the display, select the one you want and press save or confirm key to save the configuration.

To configure time and date manually via phone interface

1. To press Menu → Setting → Basic setting → Time & Date → Manual Settings
2. Press  and  or change the right time, or you can input the right time.
3. Press  or Save soft key to save the configuration.

**To configure the Time & Date Format via phone interface**


1. To press Menu → Setting → Basic setting → Time & Date Format
2. Press  and  or press  to change between 12 Hour or 24 Hour.

3. Press  and  or press  to change among Y-M-D(year-month-day), M-D-Y(month-day-year), D-M-Y(day-month-year).
4. Press  or Save soft key to save the configuration.



To configure the DHCP time via phone interface

1. To press Menu → Setting → Basic setting → DHCP time
2. Press  and  or press  to change between Disable and Enable.
3. Press  or Save soft key to save the configuration.

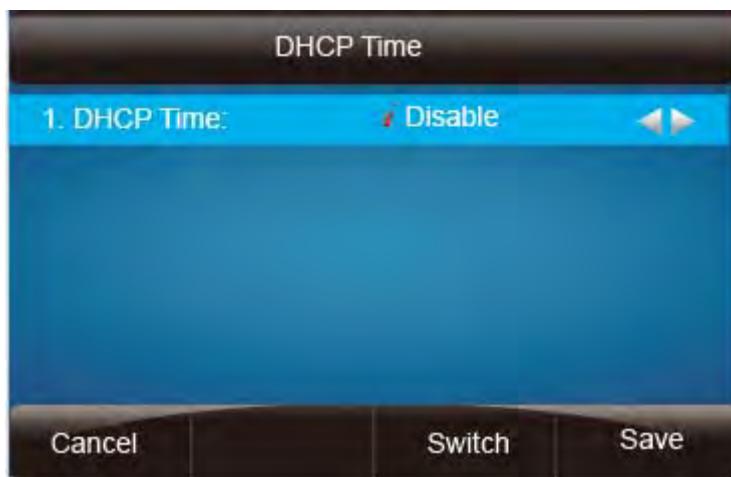


To configure the Time and Date by web interface

Login

Login name: admin, password: admin(default)


Network → Advanced → NTP Server

Fill the value in the blank.

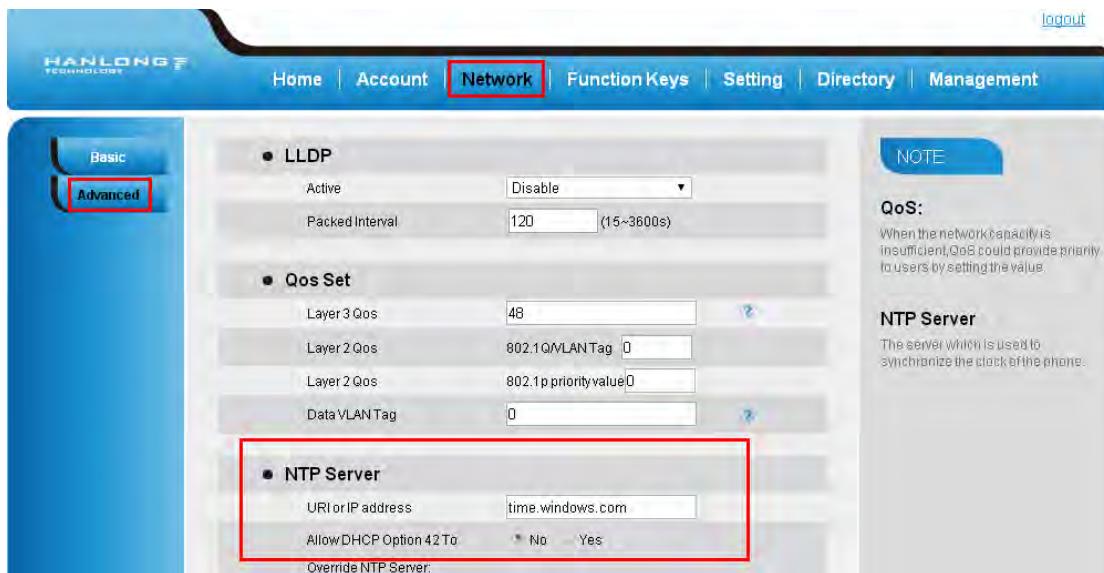

To change the Time Zone and Date Display Format via web interface

1. Setting → Preference → Time Zone
2. Select the necessary one.
3. Press **SaveSet** to save the configuration.

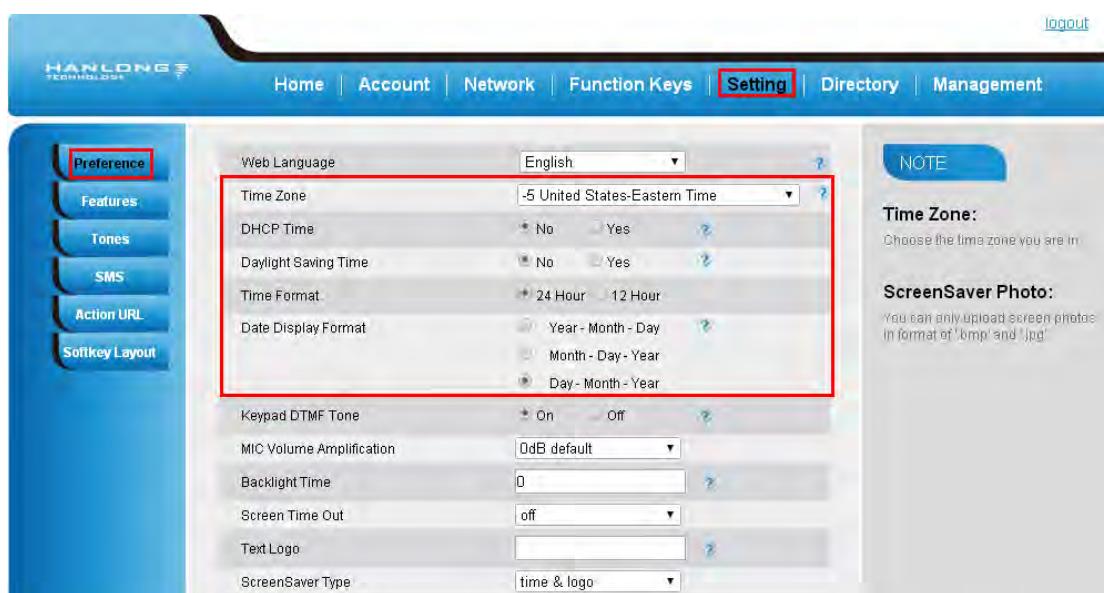

Note:

If the IP Phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP)

server, please contact your system administrator for more information.

Ring Tone

You can adjust the type and volume of the ring tone.

To adjust the Ring Tone Type via Phone interface:

1. Press Menu → Setting → Basic Settings → Ring Tone.
2. Press  and  to select the aimed one.
3. Press  or Save soft key to save the configuration.



To adjust the Ring Tone Type via Web Interface

1. Account → Advanced → Account Ring Tone
2. Select the wanted one
3. Click  to save the configuration.

logout

HANLONG TECHNOLOGY

Home | **Account** | Network | Function Keys | Setting | Directory | Management

Account Account 1

DTMF Payload Type: 101

DTMF IN Audio: No Yes

DTMF Via RFC2833: No Yes

DTMF Via SIP INFO: No Yes

Send Flash Event: No Yes

Enable Call Features: No Yes

Proxy Require:

Use NAT IP:

SRTP Mode: Disabled
 Enabled but not forced
 Enabled and forced

VAD: No Yes

Symmetric RTP: No Yes

Jitter Buffer Type: Fixed Adaptive

Jitter Buffer Length: Low Medium High

Account Ring Tone: Default

NOTE

Basic:
The Basic Parameters set for administrator.

Codecs:
Choose the codecs you want to use.

Advanced:
The Advanced parameters for administrator.

To configure Distinctive Ring Tone via Phone Interface

1. Press Directory
2. Select the target contact
3. Press Detail soft key to edit the contact.
4. Press  and  to select the wanted Ring Tone for the contact
5. Press Save soft key to save the contact.


Emma

| | |
|-------------------|--------------|
| 1. Name: | Emma |
| 2. Number: | 302 |
| 3. Mobile Number: | |
| 4. Other Number: | |
| 5. Account: | Auto |
| 6. Ring: | Default Ring |

Cancel 2aB Delete Save

To configure Distinctive Ring Tone via Web Interface

1. Directory → Directory → Contact
2. Choose the Ring Tone you want to use.
3. Click **Edit** → **Save** to save the configuration.

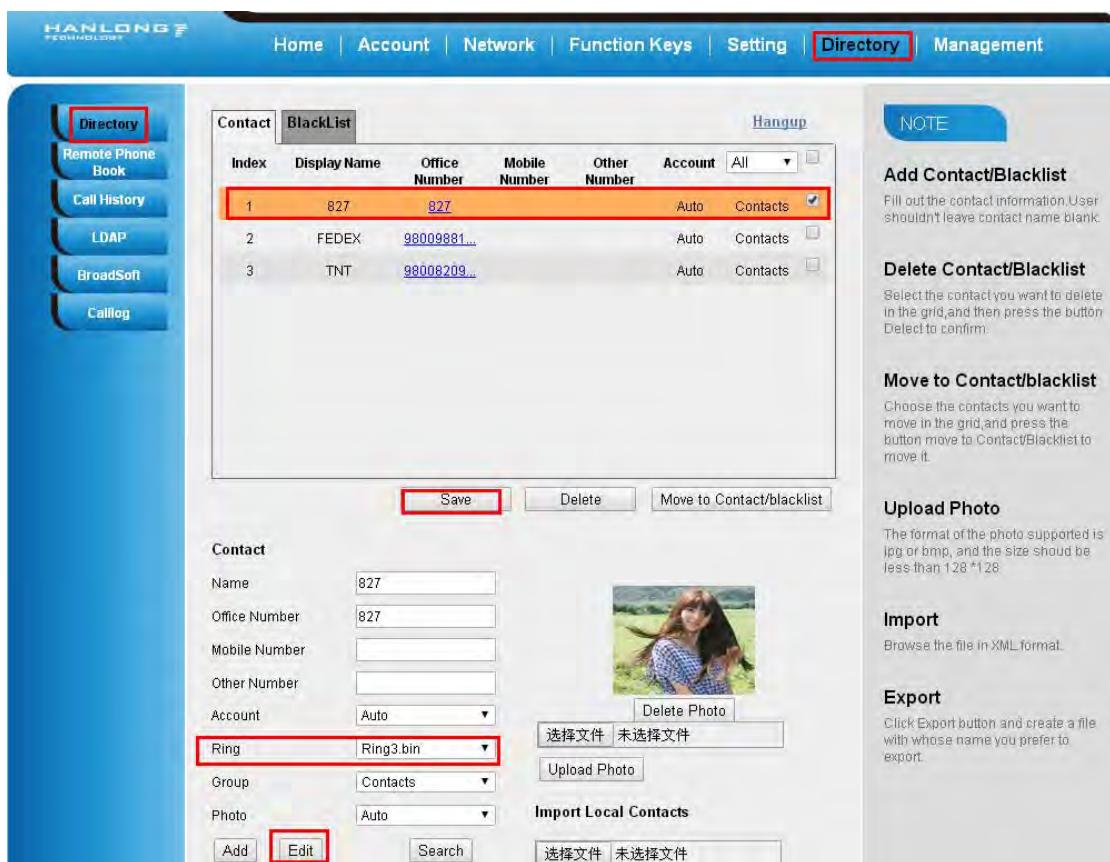

| Index | Display Name | Office Number | Mobile Number | Other Number | Account | Hangup |
|-------|--------------|---------------|---------------|--------------|---------|--|
| 1 | 827 | 827 | | | Auto | Contacts <input checked="" type="checkbox"/> |
| 2 | FEDEX | 98009881... | | | Auto | Contacts <input type="checkbox"/> |
| 3 | TNT | 98008209... | | | Auto | Contacts <input type="checkbox"/> |

Contact

| | | | | |
|---------------|-----------|--|--------|---------------------------|
| Name | 827 | Save <input style="border: 1px solid red; padding: 2px 5px;" type="button"/> | Delete | Move to Contact/blacklist |
| Office Number | 827 |  <input type="button" value="Delete Photo"/> | | |
| Mobile Number | | <input type="button" value="选择文件 未选择文件"/> | | |
| Other Number | | <input type="button" value="Upload Photo"/> | | |
| Account | Auto | <input type="button" value="Import Local Contacts"/> | | |
| Ring | Ring3.bin | <input type="button" value="选择文件 未选择文件"/> | | |
| Group | Contacts | <input type="button" value="Add"/> | | |
| Photo | Auto | <input type="button" value="Edit"/> | | |
| | | <input type="button" value="Search"/> | | |

Click [Ring tone](#) for more information.

Font Size

To configure the Time & Date Format via phone interface

1. To press Menu → Setting → Basic setting → Font Size
2. Press  and  or press  to choose the desired font size: 18, 20, 24, 26.
3. Press  or Save soft key to save the configuration.




To configure Font Size via Web Interface

1. Setting → Preference
2. Find **Phone Font Height Size** and then choose the desired: 18/20/24/26.
3. Click **SaveSet** to save the configuration.



Volume

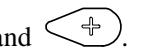You can adjust the volume for the phone by the volume keys:  and .

**To adjust the Ring tone volume via phone interface:**

1. Option 1: To press  and  on the idle page
2. Option 2: To press  and  during the call is ringing.

To adjust the handset volume via phone interface:

To press  and  during a call in handset mode.

**To adjust the headset volume via phone interface:**

To press  and  during a call in headset mode.



To adjust the speaker Volume via phone interface:

To press  and  during a call in speaker mode.



Wallpaper


To change the preferred one picture for you by the following steps:

To change the wallpaper via phone interface:

1. To press Menu → Display → wallpaper
2. Press  and  or press Switch soft key to display the different pictures.
3. Press  or Save soft key to save the selected picture as the wallpaper.

**To change the wallpaper via web interface:**

1. Click Setting→Preference
2. Select the desired wallpaper picture
3. Click **SaveSet** to save the setting.

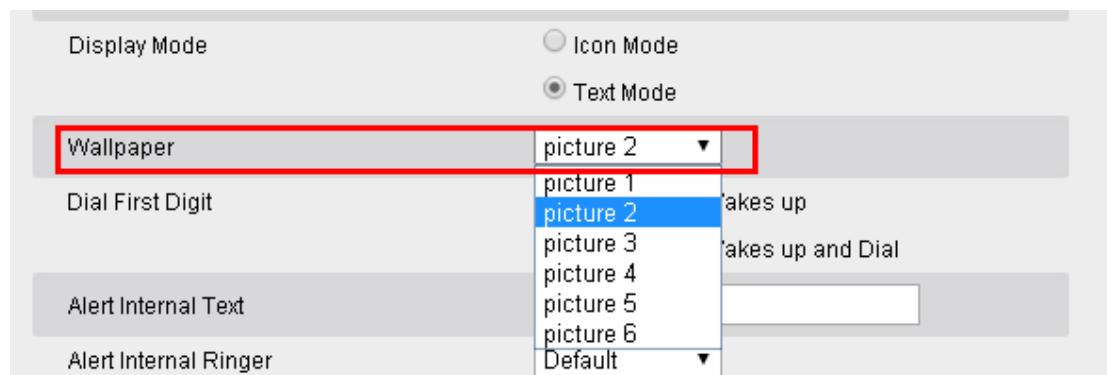

Screen Saver

There are three types of screen saver: Time & Logo, Photo Switch and Photo.

Time & Logo: when the screensaver works, it will show Time and logo in turns.

Photo Switch: all screensaver pictures display one by one.

Phone: Only the select phone display as screensaver.

Text logo: It works with the **Time & Logo**, when enter the value, it will display the time and the entered value in turns.


To enable screen saver via Phone interface:

1. To press Menu → Display → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the Screensaver Type to choose one of the type: Backlight off, Time & Logo and Photo
4. Press  or Save soft key to save the selected configuration.




To disable screen saver via Phone interface

1. To press Menu → Display → Screensaver...
2. Press  and  or press Switch soft key to Choose the Time-out as off.
3. Press  or Save soft key to save the selected configuration.

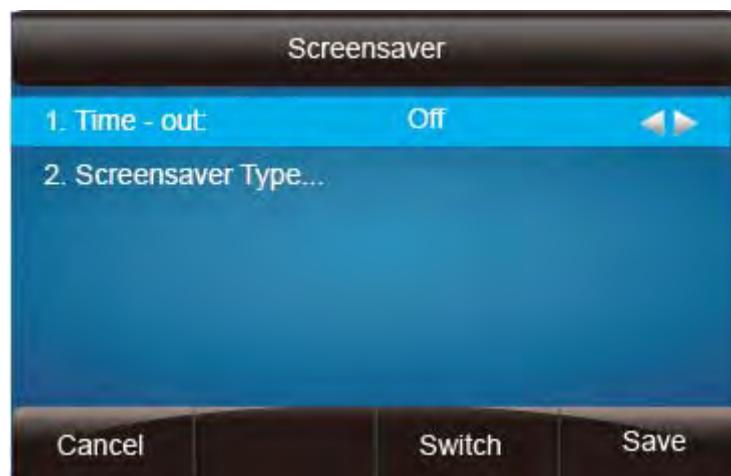

To upload screen saver via Web interface:

1. Setting → Preference
2. Choose the picture wanted to use as screen saver
3. Click **Upload Photo** to save the upload picture

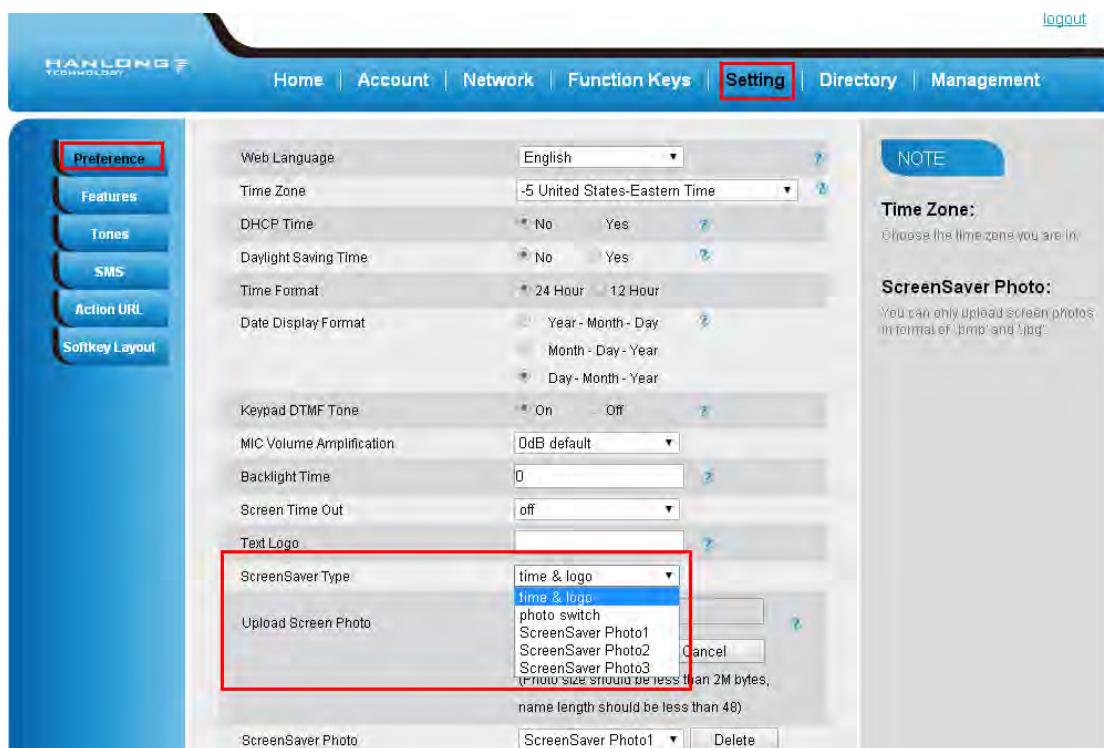

To delete upload screen saver phone via Web interface:

1. Setting → Preference
2. Select the photo that to delete.
3. Click Delete to delete the photo.



To wake up screen saver via Web interface:

1. Setting → Preference
2. Choose Dial First Digit: Screensaver Wakes up or Screensaver Wakes up and Dial



Basic Setting Configuration

| | |
|-------------------------|--|
| Customer Set User Agent | <input type="text"/> |
| Display Mode | <input checked="" type="radio"/> Icon Mode <input type="radio"/> Text Mode |
| Wallpaper | <input type="text" value="picture 6"/> ▾ |
| Dial First Digit | <input checked="" type="radio"/> Screensaver Wakes up <input type="radio"/> Screensaver Wakes up and Dial |
| Alert Internal Text | <input type="text"/> |
| Alert Internal Ringer | <input type="text" value="Default"/> ▾ |
| Alert External Text | <input type="text"/> |

Note:

1. The upload Photo size should be less than 2M bytes, name length should be less than 48, and the File name should be letters, numbers or underline '_' and photo number should be less than 9.
2. The default screensaver photos can not be deleted.

LED Status Setting

Backlight

To set Backlight via web interface:

1. Click setting→Preference
2. Enter the time for Backlight time (In seconds).
3. Click to save the configuration.

The default is 0, which means Backlight is always on.



Basic Setting Configuration

Contact Management

This section provides the operating instructions for managing contacts. The topics include:

- Local Directory
- Blacklist
- Remote Phonebook
- Call History
- LDAP
- BroadSoft Phonebook
- CallLog

Directory

In the directory, you can add or delete your friends, business partner or anyone others' phone No. so you will not forget their number. Or put some anonymous phone No. in the blacklist to prevent from being disturbed.

A. To add contacts list into local directory

To add contacts manually via phone interface

1. Press Menu → Directory → Local Directory
2. Press Add soft key.
3. Enter the necessary information as Name, Phone number...
4. Press save soft key or to add the contacts successfully.

**To add contacts from history via phone interface:**


1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one. (Press  and  switched among the All calls, Dialed calls, Received calls, Missed Calls and Forward Calls).
3. Press Option soft key → Add to Contacts
4. Edit the necessary information as Name, Phone number...
5. Press save soft key or  to add the contacts successfully.

**To add contacts via web interface:**

1. Click Directory

2. Enter the name, number and some other information.

3. Press **Add** and then press **Save** button.

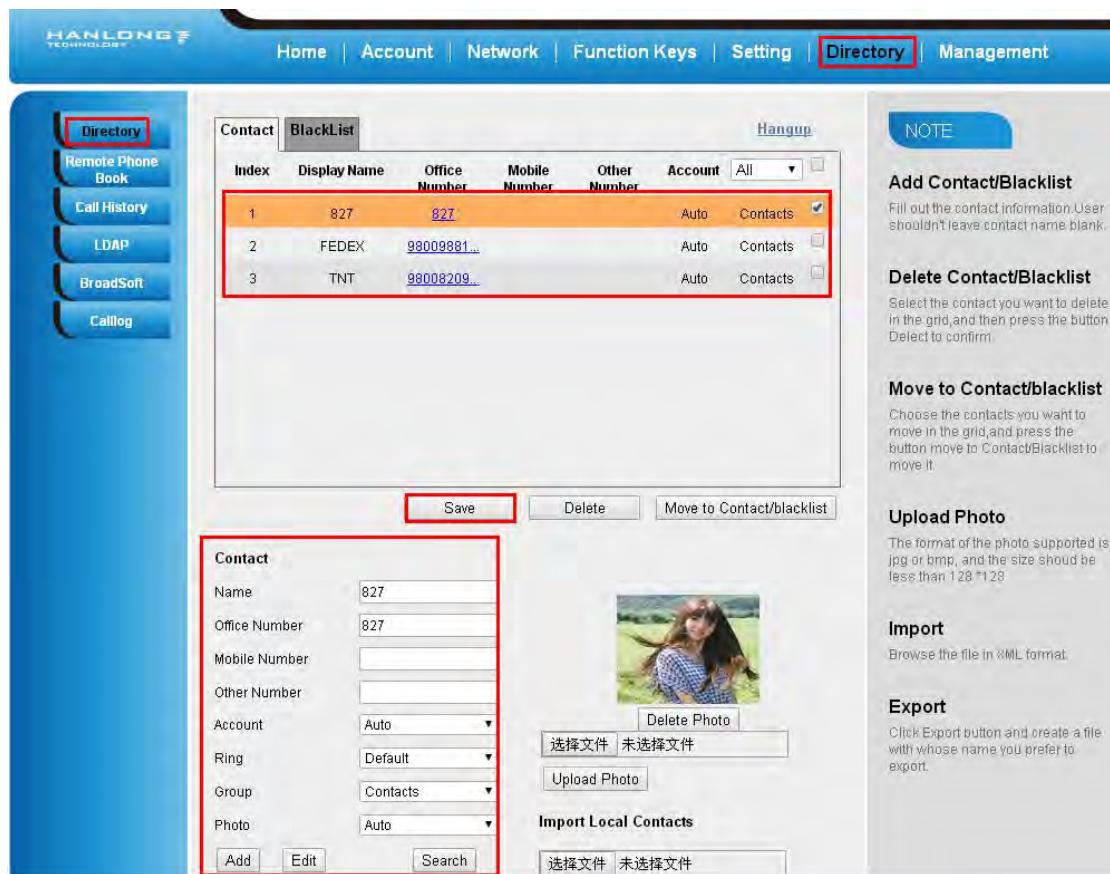

B: To add contacts into blacklist


To add blacklist manually via phone interface:

1. Press Menu → Directory → Blacklist
2. Press Add soft key.
3. Enter the necessary information as Name, Phone number...
4. Press save soft key or  to add the contacts successfully.

To add blacklist from history via phone interface:


1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one.
3. Press Option soft key → Add to Blacklist
4. Edit the necessary information as Name, Phone number...

5. Press save soft key or  to add successfully.

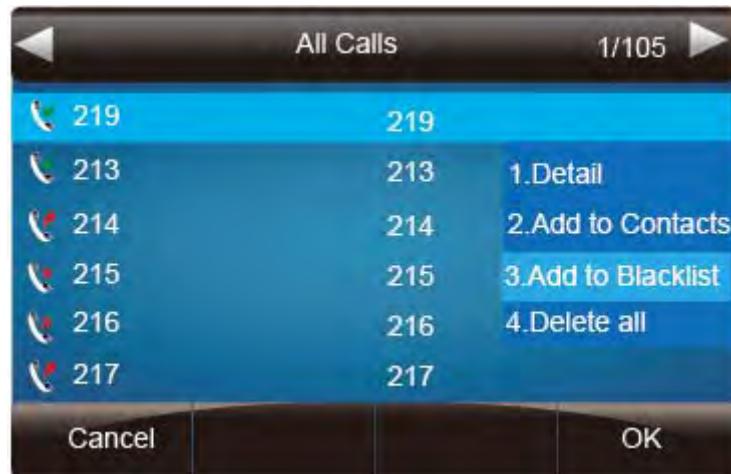


Upload Contacts photo via web interface:

1. Click Directory and select the desired contact.
2. Click Choose file to select the photo for the contact
3. Click **Upload Photo** to upload the photo.

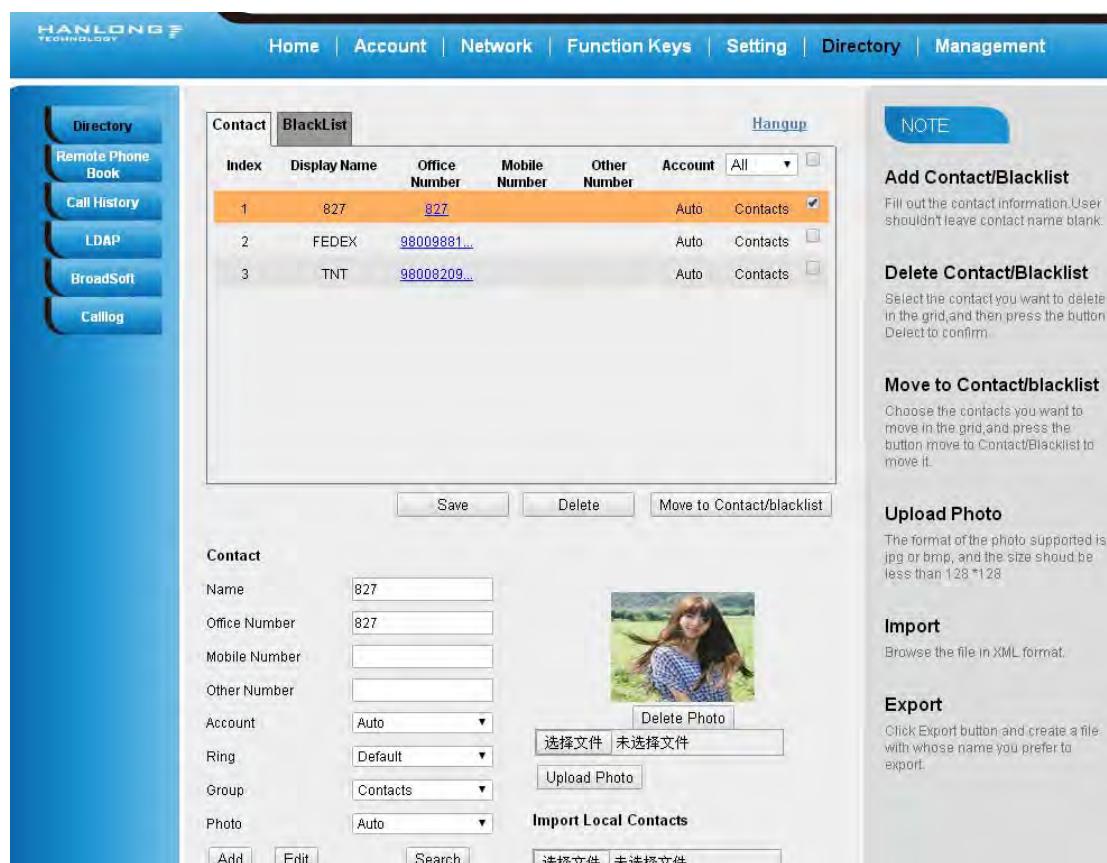

When you place a call from the contact, the phone idle screen will show the contact photo.

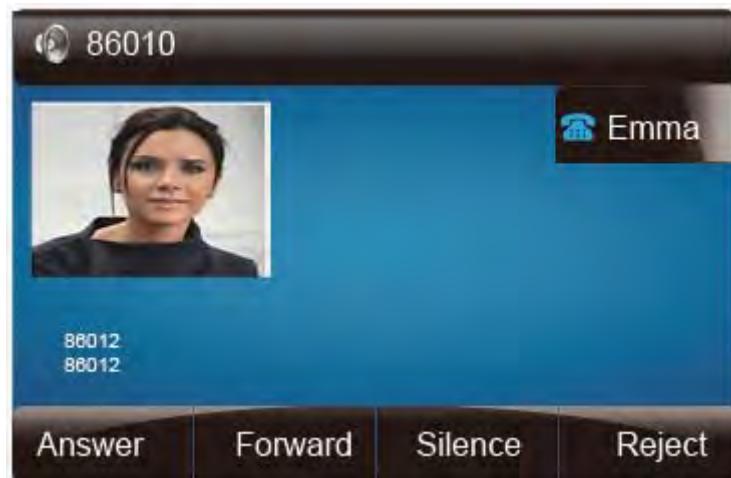

Note:

The format of the photo supported is jpg or bmp, and the size should be less than 128 *128

To import or export the contact list

You can manage your phone's local directory via phone or web user interface. But you can only import or export the contact list via web interface.

To import an XML file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .xml) from your local system.
3. Click Import XML to import the contact list.

To export an XML file of contact list via web interface:

1. Click on Directory
2. Click Export XML to import the contact list.

To import a CSV file of contact list via web interface:

1. Click on Directory
2. Click Browse to select a contact list file (file format must be .csv) from your local system.
3. Click Import Csv to import the contact list.



To export a CSV file of contact list via web interface:


1. Click on Directory
2. Click Export Csv to import the contact list.



Remote Phonebook

To set Remote PhoneBook via web interface:

1. Login the webpage and click Directory→Remote Phone Book
2. Fill the path of the remote file in the Phone Book URL field.
For example,
<http://192.168.0.254/phonebook/Phonebook.xml>
3. Fill the Name and then click **SaveSet** to save the configuration.

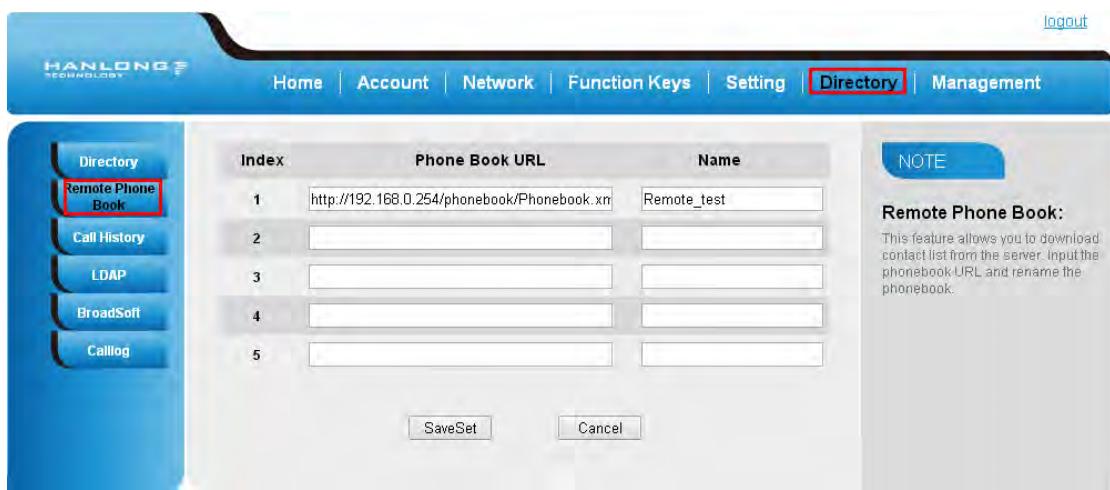

To check the contacts via phone interface:

1. Press Directory→Left Button→Left Button, and then you can see the item you set, press enter you will find the detail.


For More detail, please refer to: [Remote Phonebook](#) on Hanlong webpage.

Call History

This phone maintains call history lists of Dialed Calls, Received Calls, Missed Calls and Forwarded Calls. The call history list supports up to 100 entries in all on phone interface and more than 1500 items. You can check the call history, dial a call, add a contact or delete an entry from the call history list. You should enable the history record feature in advance.

To enable the history record feature via phone interface:

1. Press Menu→Feature→History Setting
2. Press  and  or Switch soft key to enable History record.
3. Press Save soft key to save the configuration.

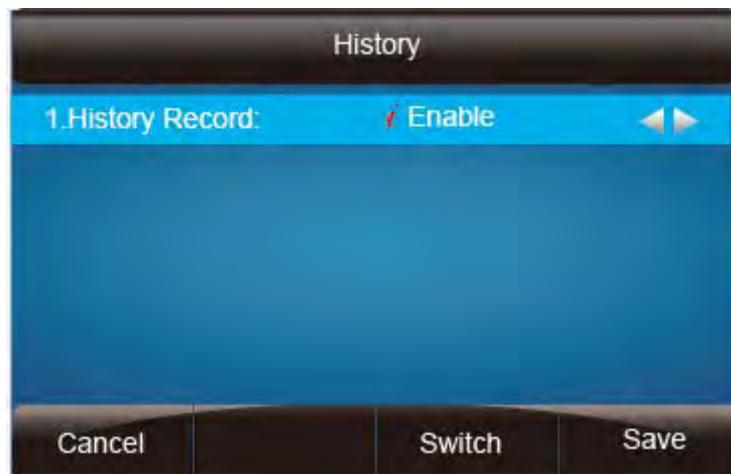

To check the call history via phone interface:

3. Press the History soft key. The LCD screen displays All Calls list.
4. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
5. Press to select the desired entry.
6. Press the Option soft key, and then select Detail from the prompt list.
7. The detailed information of the entry appears on the LCD screen.

**To delete an entry from the call history list via phone interface:**


1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press UP or DOWN key to select the desired entry.
4. Press the Delete soft key.

To delete all entries from the call history list via phone interface:

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press the Option soft key, and then select Delete All from the prompt list.
4. Press the OK soft key.
5. Press the OK soft key to confirm the deleting or the Cancel soft key to cancel.

To check the call history via web interface:


5. Click Directory → Call History
6. Click Dialed List, Missed List, Received List, Forwarded List then you can see the history list.

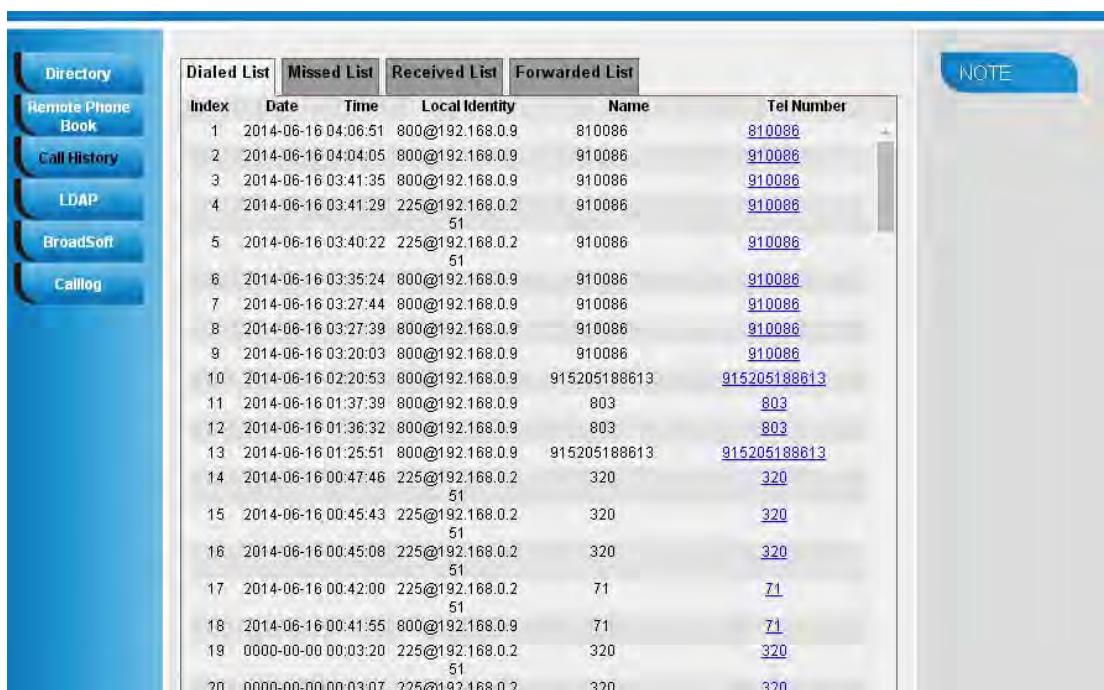

| Index | Date | Time | Local Identity | Name | Tel Number |
|-------|------------|----------|-----------------|--------------|------------------------------|
| 1 | 2014-06-16 | 04:06:51 | 800@192.168.0.9 | 810086 | 810086 |
| 2 | 2014-06-16 | 04:04:05 | 800@192.168.0.9 | 910086 | 910086 |
| 3 | 2014-06-16 | 03:41:35 | 800@192.168.0.9 | 910086 | 910086 |
| 4 | 2014-06-16 | 03:41:29 | 225@192.168.0.2 | 910086 | 910086 |
| | | 51 | | | |
| 5 | 2014-06-16 | 03:40:22 | 225@192.168.0.2 | 910086 | 910086 |
| | | 51 | | | |
| 6 | 2014-06-16 | 03:35:24 | 800@192.168.0.9 | 910086 | 910086 |
| 7 | 2014-06-16 | 03:27:44 | 800@192.168.0.9 | 910086 | 910086 |
| 8 | 2014-06-16 | 03:27:39 | 800@192.168.0.9 | 910086 | 910086 |
| 9 | 2014-06-16 | 03:20:03 | 800@192.168.0.9 | 910086 | 910086 |
| 10 | 2014-06-16 | 02:20:53 | 800@192.168.0.9 | 915205188613 | 915205188613 |
| 11 | 2014-06-16 | 01:37:39 | 800@192.168.0.9 | 803 | 803 |
| 12 | 2014-06-16 | 01:36:32 | 800@192.168.0.9 | 803 | 803 |
| 13 | 2014-06-16 | 01:25:51 | 800@192.168.0.9 | 915205188613 | 915205188613 |
| 14 | 2014-06-16 | 00:47:46 | 225@192.168.0.2 | 320 | 320 |
| | | 51 | | | |
| 15 | 2014-06-16 | 00:45:43 | 225@192.168.0.2 | 320 | 320 |
| | | 51 | | | |
| 16 | 2014-06-16 | 00:45:08 | 225@192.168.0.2 | 320 | 320 |
| | | 51 | | | |
| 17 | 2014-06-16 | 00:42:00 | 225@192.168.0.2 | 71 | 71 |
| | | 51 | | | |
| 18 | 2014-06-16 | 00:41:55 | 800@192.168.0.9 | 71 | 71 |
| 19 | 0000-00-00 | 00:03:20 | 225@192.168.0.2 | 320 | 320 |
| | | 51 | | | |
| 20 | 0000-00-00 | 00:03:07 | 225@192.168.0.2 | 320 | 320 |

To Dial a call from Call History via web interface:

1. Click Directory → Call History
2. Select the desired history item, and click Tel Number.
3. Then the call is dialed on phone.

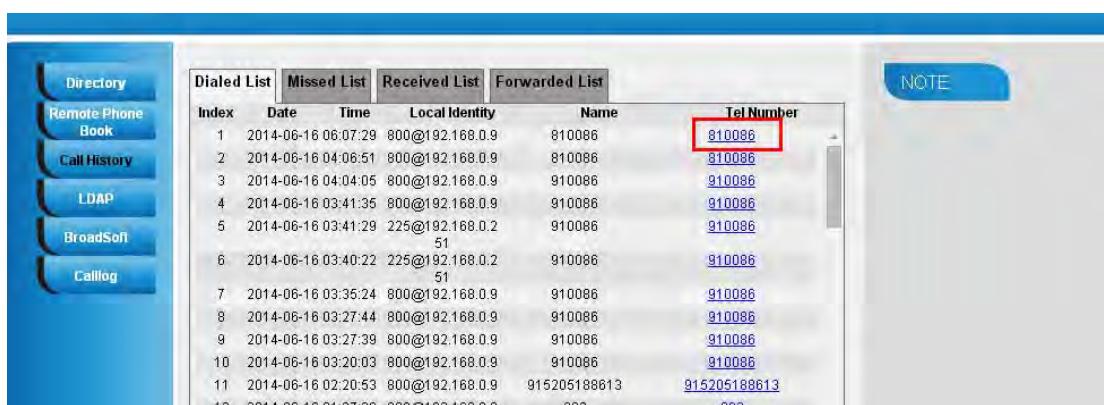

| Index | Date | Time | Local Identity | Name | Tel Number |
|-------|------------|----------|-----------------|--------------|------------------------------|
| 1 | 2014-06-16 | 06:07:29 | 800@192.168.0.9 | 810086 | 810086 |
| 2 | 2014-06-16 | 04:06:51 | 800@192.168.0.9 | 810086 | 810086 |
| 3 | 2014-06-16 | 04:04:05 | 800@192.168.0.9 | 910086 | 910086 |
| 4 | 2014-06-16 | 03:41:35 | 800@192.168.0.9 | 910086 | 910086 |
| 5 | 2014-06-16 | 03:41:29 | 225@192.168.0.2 | 910086 | 910086 |
| | | 51 | | | |
| 6 | 2014-06-16 | 03:40:22 | 225@192.168.0.2 | 910086 | 910086 |
| | | 51 | | | |
| 7 | 2014-06-16 | 03:35:24 | 800@192.168.0.9 | 910086 | 910086 |
| 8 | 2014-06-16 | 03:27:44 | 800@192.168.0.9 | 910086 | 910086 |
| 9 | 2014-06-16 | 03:27:39 | 800@192.168.0.9 | 910086 | 910086 |
| 10 | 2014-06-16 | 03:20:03 | 800@192.168.0.9 | 910086 | 910086 |
| 11 | 2014-06-16 | 02:20:53 | 800@192.168.0.9 | 915205188613 | 915205188613 |
| 12 | 2014-06-16 | 01:37:39 | 800@192.168.0.9 | 803 | 803 |

To Dial a call from Call History via phone interface:

1. Press History soft key or press Menu → History → Local history
2. Press  and  to select the targeted one.
3. Press the Send soft key, or  , or  , or the corresponding line key.

LDAP Phonebook

When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure LDAP via web interface:

1. Login webpage and click Directory→LDAP
2. Filled the LDAP Name Filter:
 - a) This parameter specifies the name attributes for LDAP searching. The “%” symbol in the filter stands for the entering string used as the prefix of the filter condition.
 - b) For example (cn=%), when the name prefix of the cn of the contact record matches the search criteria, the record will be displayed on the IP PHONE LCD.
3. Filled LDAP Number Filter:
This This parameter specifies the number attributes for LDAP searching.
4. Filled Server Address: Fill the domain name or IP address of the LDAP Server.
For example: 192.168.0.124
5. Port(the port of the LDAP Serve) Base, User Name, Password
6. Max.Hits: the maximum number of the search results to be returned by the LDAP server.
7. LDAP Display Name: the display name of the contact record displayed on the LCD screen.
8. Filled the relative value and then click save button the save the settings.

Following is the example screenshot for the configuration.



Basic Setting Configuration

Basic Setting Configuration

Home | Account | Network | Function Keys | Setting | **Directory** | Management

NOTE

LDAP Name Filter: (cn=%)

LDAP Number Filter: (|(telephoneNumber=%))

Server Address: 192.168.0.9

Port: 389

Base: dc=pbx,dc=com

User Name: cn=admin,dc=pbx,dc=co

Password: *****

Max.Hits(1~32000): 32000

LDAP Display Name: cn

Search Delay(0~2000ms):

Protocol: Version2 Version3

LDAP Lookup For Incoming Call: On Off

LDAP Sorting Results: On Off

SaveSet Cancel

To Configure LDAP Key

To configure LDAP Key via web interface:

1. Click Function Key → Memory Key → choose Memory Key 1(for example)
2. Select LDAP in the Type field.
3. Click Saveset to save the configuration.

Function Keys

| Key | Type | Value | Account | Pickup Code |
|-------------|-----------|-------|-----------|-------------|
| Memory Key1 | LDAP | | Account 1 | ** |
| Memory Key2 | Call Park | | Account 1 | ** |

NOTE

Key Type:

To Configure LDAP Key via phone interface:

1. Press Menu → Feature → Function Keys → Memory Keys as Function Keys → Memory Key 1
2. Select LDAP in the Type field
3. Press save or OK key to save the configuration.

When press the LDAP Key the LCD will display as following:



For More detail, please refer to [LDAP Notes](#) on www.hanlongtek.com

Broadsoft Phonebook

You can access the BroadSoft directory through your phone. You can add local contacts from the BroadSoft directory. You can also dial a contact from the BroadSoft directory. You can configure your new phone to access up to 6 BroadSoft directories. Contact your system administrator for the access URL of the BroadSoft directory.

To Configure Broadsoft via web interface:

1. To click Directory→Broadsoft
2. Select the desired Broadsoft Item
3. Enter the Display name
4. Enter the Server, port, User and password
5. Click  to save the configuration.



Basic Setting Configuration

The screenshot shows a web-based configuration interface for a HANLONG IP phone. The top navigation bar includes links for Home, Account, Network, Function Keys, Setting, Directory, and Management. On the left, a sidebar menu lists Directory, Remote Phone Book, Call History, LDAP, BroadSoft, and Calllog. The main content area is titled 'Basic Setting Configuration' and shows a form for 'Call log' configuration. The form fields are: BroadSoft Item (dropdown menu showing 'BroadSoft 1'), Display Name (text input 'Broadsoft group'), Server (text input 'http:xsp1.iop1.broadworks.net/com:broadsoft'), Port (text input ' '), User (text input '215452325454@as.iop1'), and Password (text input '....'). Below the form are 'SaveSet' and 'Cancel' buttons. A 'NOTE' box is located on the right side of the page.

Call log

You can access the call log of the BroadSoft user through the IP phone. The call log contains call information such as remote party identification, time and date. You can check the call log and dial a call from the call log list. The BroadSoft call log allows users to view and dial the stored numbers in the following lists: missed, received, and placed. You can configure the IP phone to access up to 3 call log items. Contact your system administrator for the access URL of the BroadSoft call log.

To Configure Call log via web interface:

1. To click Directory→Call log
2. Select the desired Broadsoft Item
3. Enter the Display name
4. Enter the Server, port, User and password
5. Click **SaveSet** to save the configuration.



Other features settings

Other features settings

Dial Plan

Dial plan is a string of characters that governs the way this phone processes the inputs received from your phone keypad. This phone supports dial plan with following accept digits:


1,2,3,4,5,6,7,8,9,0,*,#

| Grammer | Description |
|---------|--|
| x | any digit from 0-9; |
| xx+ | at least 2 digit number; |
| ^ | exclude; |
| , | hear dial tone; |
| [3-5] | any digit of 3, 4, or 5; |
| [147] | any digit 1, 4, or 7; |
| <2=011> | replace digit 2 with 011 when dialing. |

To configure dial plan via web interface:

1. Click Account—Advanced—Dial Plan.
2. Filled the value in dial plan field.

3. Click SaveSet to save the configuration.

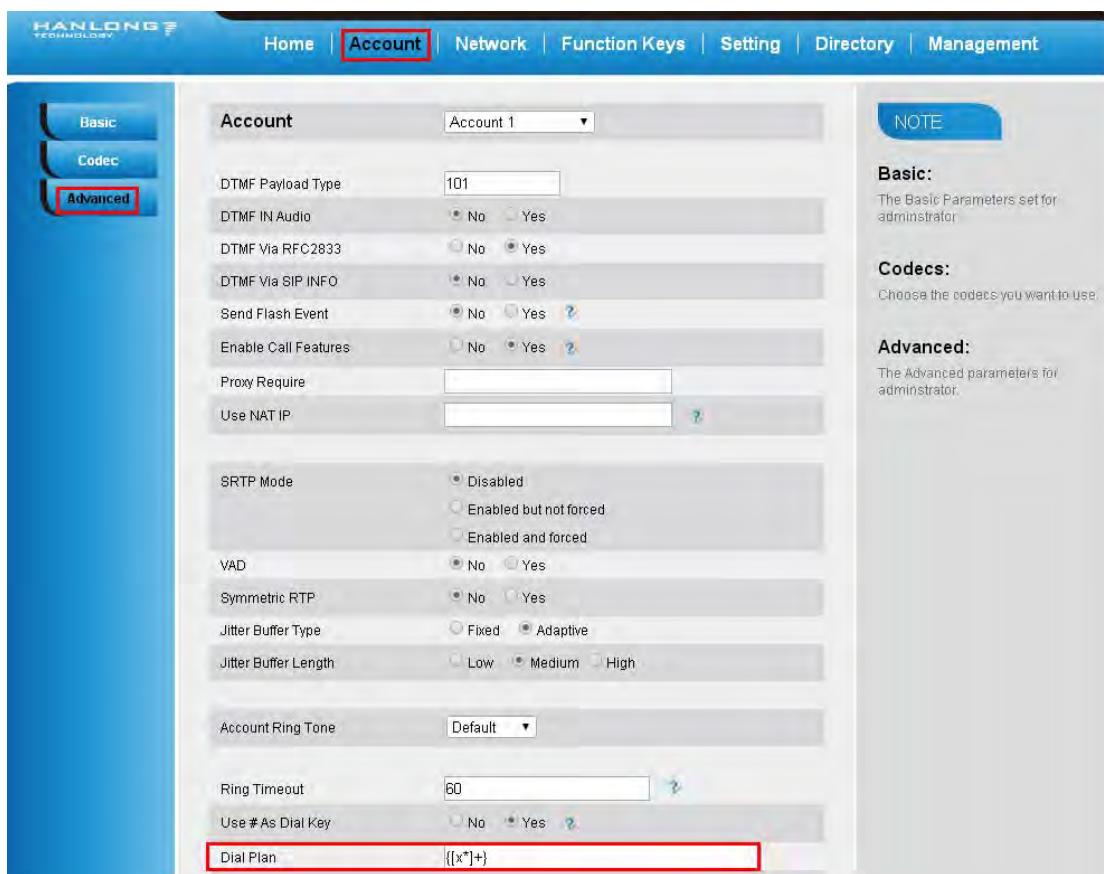

The screenshot shows the 'Account' configuration page in the HANLONG IP phone web interface. The 'Advanced' tab is selected on the left sidebar. The 'Dial Plan' field is highlighted with a red box and contains the value '{[x*]+}'.

Note:

Illegal input will fall back to default: {[x*]+}. For More, please refer to [dial plan](#) on www.hanlongtek.com

Emergency Call


Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when required. The emergency telephone number may differ from country to country. It is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency number for each of the different emergency services.

You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

To configure emergency call via web interface:

1. Click Setting→Features→Phone Lock
2. Enter the emergency services number in the Emergency field

3. Click **SaveSet** to save the configuration.

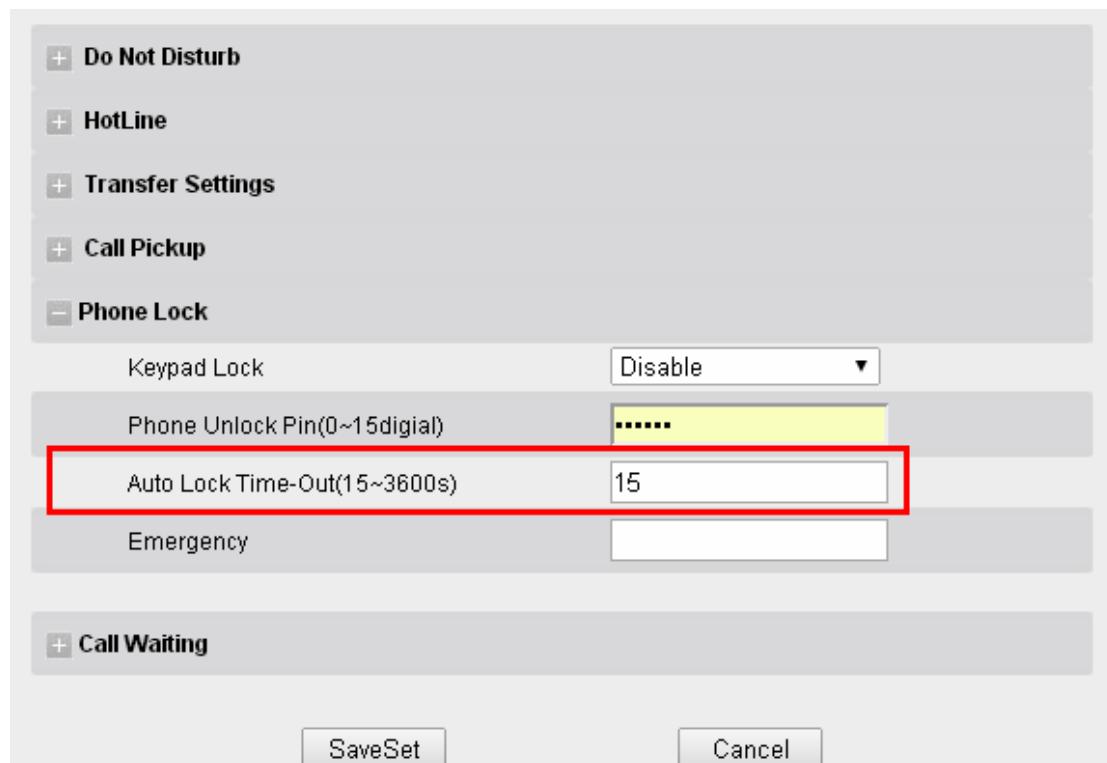


LED Status Setting

The LED Status setting mainly defines the power indicator LED.

To configure action url via web interface:

1. Click Setting→Preference
2. Select Yes or No for Power Status, Ringing Status, Miss Calls Status.
3. Click **SaveSet** for the setting.

For the LED status description, see: LED Instruction [Power Indicator LED](#)

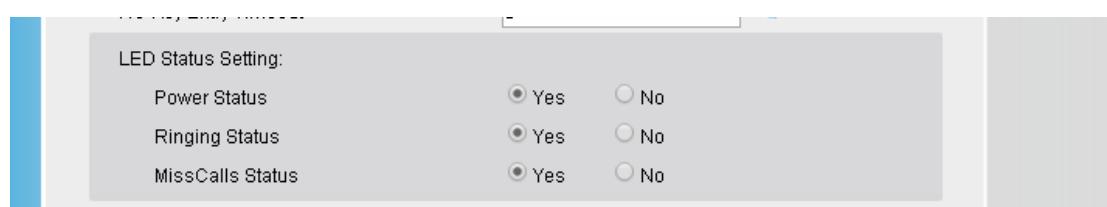


Action URL

To configure action url via web interface:

1. Click Setting→Action URL
2. Filled the needed value in the necessary blank.
3. Click  to save the setting.

Click [Action URL](#) for more how to use, or check on www.hanlongtek.com

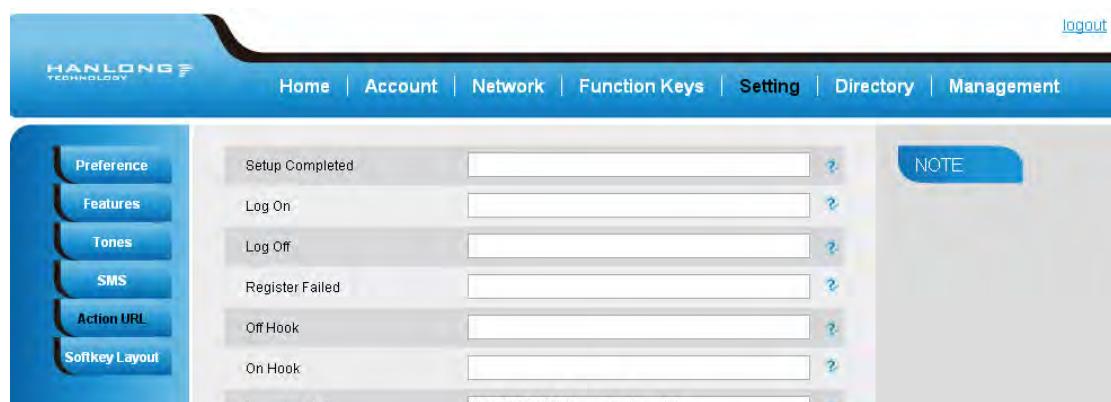

Softkey Layout


This feature mainly defines which shown on the soft key in some status. For example, what the soft key displays when dialing, or talking.


To configure Soft key via web interface:

4. Click Setting→Softkey Layout
5. Select Enable for Custom Softkey
6. Select call States.
7. Select the feature form the disable key to enable key field by 

 Disable to Enable field.  Delete the Enable, and it will back to Disable field.

8. Click  or  to change to position or each feature.

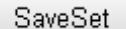9. Click  to save the configuration.

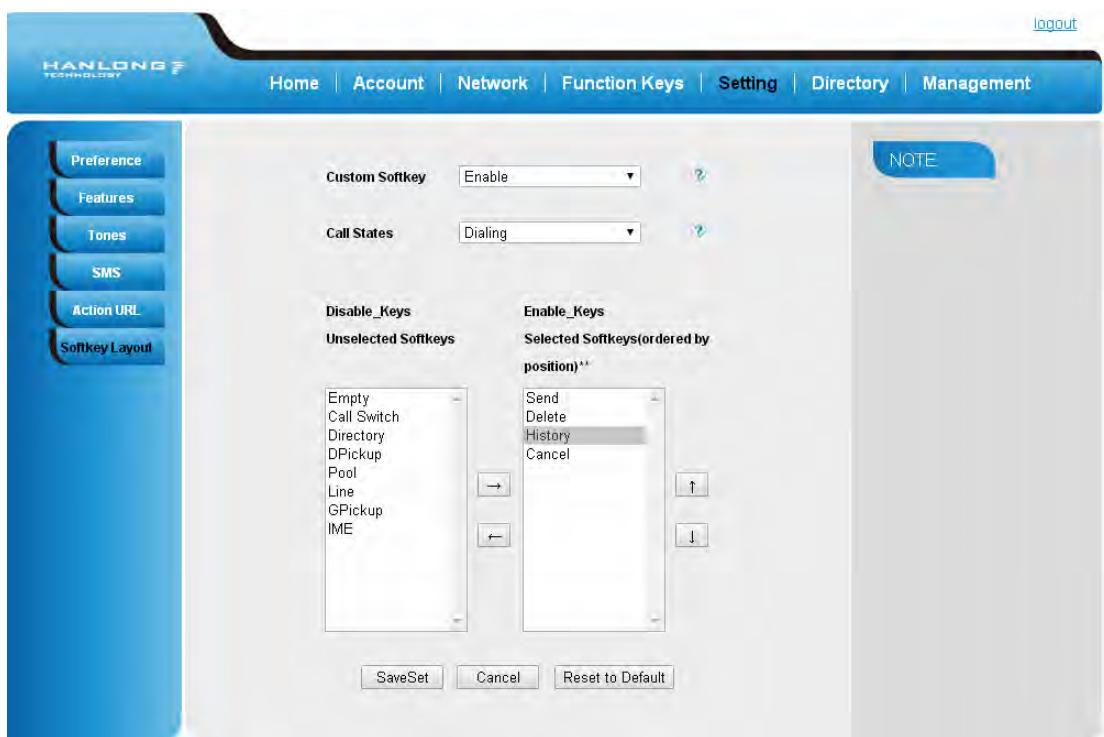

Note:

1. When there more than 5 items in the Enable field, the last softkey will display More, and last two item will show in the next page softkey, you can check by press more.

Programmable Key

For the default keys as Soft keys, Navigation keys and so on, you can define them as some specific feature, and it works only on the idle page.


To configure Programmable Key via web interface:

1. Click Function Keys→Programmable Keys

2. Select the desired Key to set.

3. Click  to save the setting.

4. By clicking **Reset To Default**, all setting of the keys will be back to default.

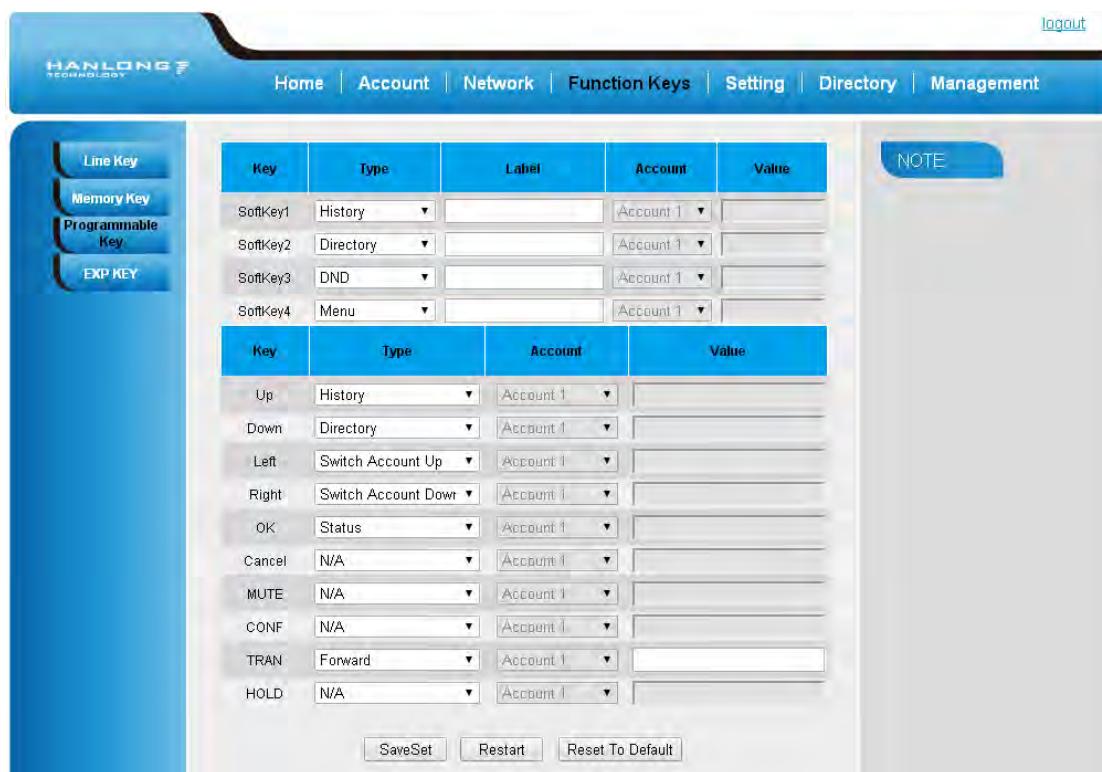

| Key | Type | Label | Account | Value |
|----------|-----------|-------|-----------|-------|
| SoftKey1 | History | | Account 1 | |
| SoftKey2 | Directory | | Account 1 | |
| SoftKey3 | DND | | Account 1 | |
| SoftKey4 | Menu | | Account 1 | |

| Key | Type | Account | Value |
|--------|---------------------|-----------|-------|
| Up | History | Account 1 | |
| Down | Directory | Account 1 | |
| Left | Switch Account Up | Account 1 | |
| Right | Switch Account Down | Account 1 | |
| OK | Status | Account 1 | |
| Cancel | N/A | Account 1 | |
| MUTE | N/A | Account 1 | |
| CONF | N/A | Account 1 | |
| TRAN | Forward | Account 1 | |
| HOLD | N/A | Account 1 | |

Ext Key

It only works when there is expansion module connected with the phone.

For Ext Key configuration, please refer to: [UC40 User manual](#).

Basic Call Features

Place a Call

There are three ways to dialing a call: Handset, Headset and Hands-free speakerphone.

To place a call by Handset

Pick up the handset, or press a line key and dial the necessary number.


Press  or  or press the send softkey, then the call is sending.

To place a call by Headset:

1. Press the  (light is Green),
2. Enter the desired number.
3. Press  or , or press the Send softkey, then the call is sending.

Using headset to place and answer calls for all time

1. Click webpage Setting → Preference
2. HeadSet Priority → Enable
3. Ring Device For HeadSet → User Headset
4. Press 

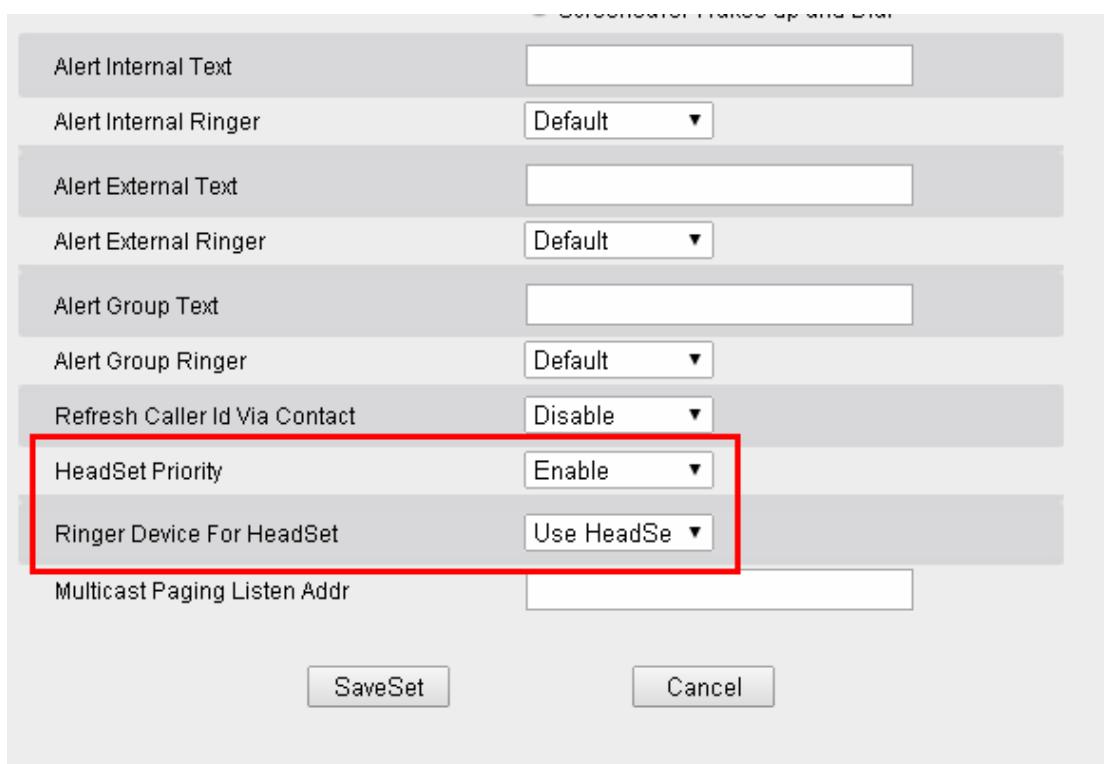

Placing a call by hands-free speakerphone

1. Press the , or press the Line key, then you can hear the dial tone.
2. Press the number.
3. Press  or  press the Send soft key, then the call is sending.

To place a call by call history or Directory via phone interface.

1. Press the History soft key (On the idle page) or Menu → History /Directory
2. Press  and  to select the targeted one.
3. Press the Send soft key, or , or , or the corresponding line key, then the call is sending.

Note:

1. The  key is set to be a send key. You can set the * key as send key or set some other to be as send keys. For more information, refer to the Key as Send on page
2. During the call, you can also change among **Headset**, **Handset** or **Free-speaker mode**.

Making two calls with one line and one account

1. Press a line key and dial one phone number, then make a call.
2. Press the corresponding line key
3. Dial another phone number,
4. Press the Send soft key, or , then make the second call.

End a Call

Here shows to end a call during three modes:

To end a call by Handset

1. Press the Cancel soft key or hang up the handset, or press 

To end a call under Headset Mode

1. Press the Cancel soft key or press , or press 

To end a call under hands-free speakerphone Mode

1. Press the Cancel soft key or press , or press 

Note:

1. During the conference, to end the call is same as mentioned above.

Redial a Call

To redial the last placed call from the IP Phone

Press  directly when LCD is on the idle interface.

Receive a Call

There are three ways to receive a call when the phone is ringing:

To receive a call by handset

Pick up the handset the conversation is built.

To receive a call by headset


Press  and now the conversation is built.

To receive a call by hands-free speaker

1. Option 1: Press  directly.
2. Option 2: Press Answer soft key.
3. Option 3: Press the Line key (flashes red).

Moreover, some other action can be done by soft key when the call is coming.

1. To press the Reject soft key to reject the call. Or press  to reject the current call.
2. To press Forward to forward to another phone.
3. To press Silence soft key, and then the call will keep silent, no ring tone display.

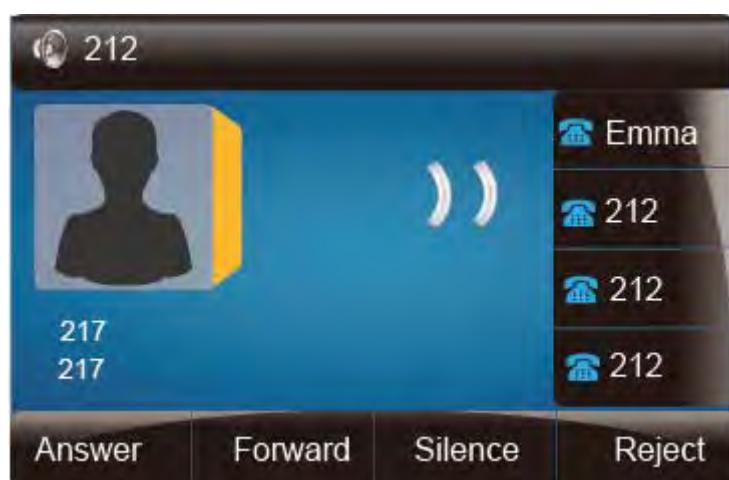


Incoming Call Show Mode

There are two incoming call show modes for this phone:

1. name and number of the contacts
2. name and number of the incoming call and the account which is connecting

To set incoming call show mode via web interface:

1. Click setting → preference
2. Select the desire mode for the incoming call show mode
3. Click  to save the setting.

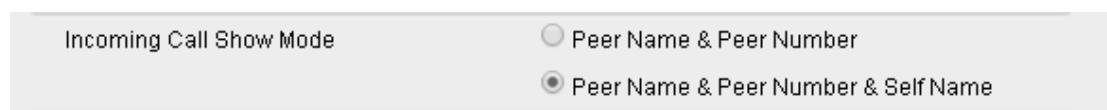

Incoming Call Show Mode

Peer Name & Peer Number


Peer Name & Peer Number & Self Name

Auto Answer

Enable auto answer feature, you will answer all incoming call automatically.

To enable Auto Answer via Web interface

1. To Click Account → Advanced
2. To choose Yes for the Auto Answer.
3. To click Saveset to save the configuration.

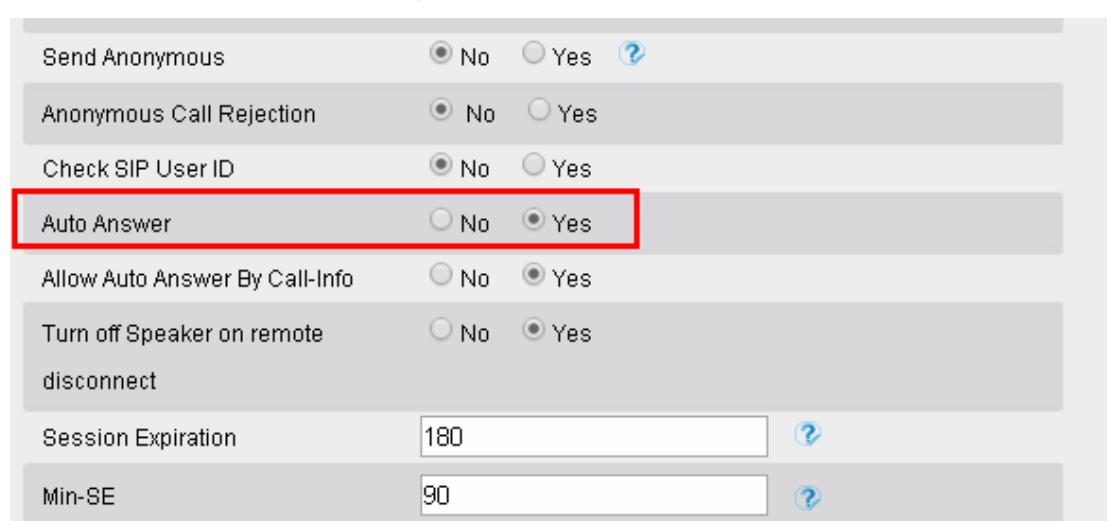

Send Anonymous No Yes 

Anonymous Call Rejection No Yes

Check SIP User ID No Yes

Auto Answer No Yes

Allow Auto Answer By Call-Info No Yes

Turn off Speaker on remote disconnect No Yes

Session Expiration 180 

Min-SE 90 

To Disable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose No for the Auto Answer.
3. To click Saveset to save the configuration.

Call Hold

When use hold feature, the Hold icon will show on the display.



To make a call on hold during three modes:

To hold a call under handset mode:

1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

To hold a call under headset mode:

1. Press Hold soft key or  to hold the current call.
2. Press Resume soft key or  to resume the call on hold.

To hold a call during the speaker mode:

1. Press Hold soft key or  to hold the current call.

2. Press Resume soft key or  to resume the call on hold.

Call Transfer

This phone supports blind, attended and Semi-Attended Transfer.

Blind Transfer

When you use this feature, you can transfer

1. Press  or Transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfers to.
3. Press  and now the blind transfer completed.


NOTE:

The “Enable Call Feature” must be configured to “Yes” to enable this feature.

Attended Transfer

When you use this feature, you can

1. Press  or transfer soft key during the conversation, the call is on hold now.

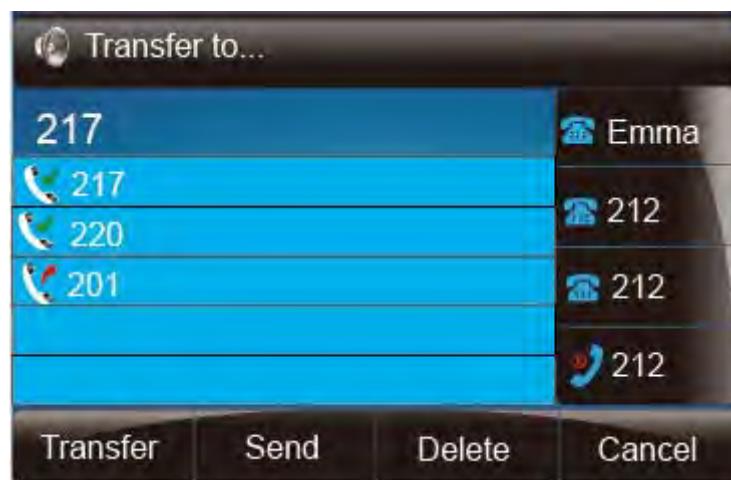

2. Enter the number that transfer to, and press the send soft key or .

3. Start the second conversation, press  or transfer soft key, then, transfer completed.

NOTE:

To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile. To use this function, should at least one line key set as Auto.

Semi-Attended Transfer

1. Press  or transfer soft key during the conversation, the call is on hold now.
2. Enter the number transfer to, and then press , then you can here the ring tone.
3. Press  or the Tran soft key, and now the Semi-attended transfer completed.


NOTE: To use this function, should at least one line key set as Auto.

BLF Transfer

1. Set a Programmable Key or line key is set as BLF. For how to set BLF, please refer to [BLF](#)
2. Press  or transfer soft key during the conversation, the call is on hold now.
3. Press BLF key then realize blind, attended and Semi-Attended Transfer.

Hold transfer on hook:

1. Setting → Features → Transfer Setting: Hold Transfer On Hook: ON.
2. A place a call to B, B answer, A press the hold softkey and place a call to C, A cancel the call when C is ringing or answering, then C and B in the same call and the transfer is successful.

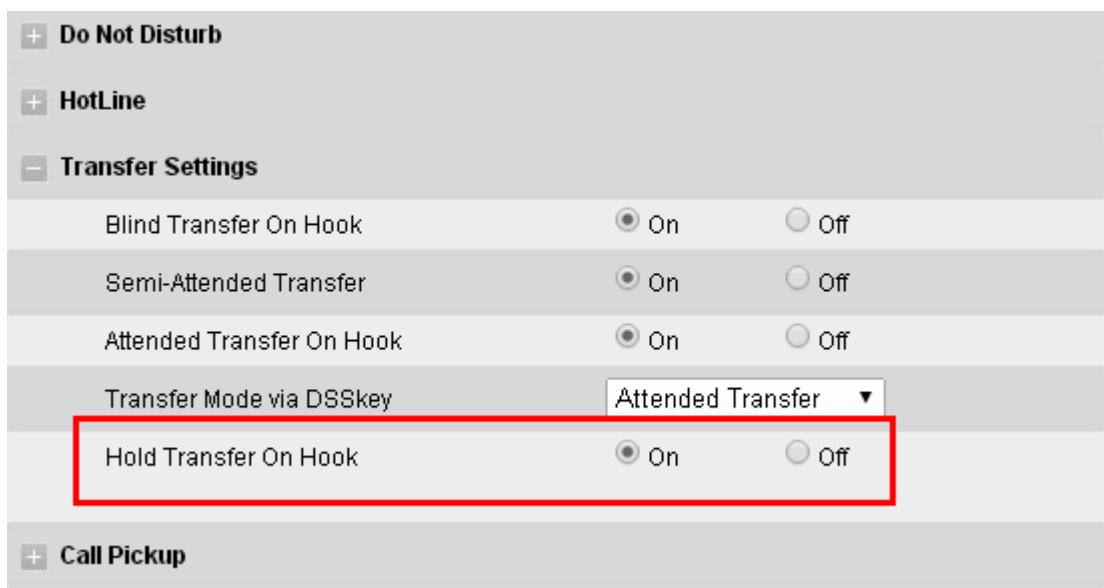


Transfer Settings

| | | |
|---------------------------|-------------------------------------|---------------------------|
| Blind Transfer On Hook | <input checked="" type="radio"/> On | <input type="radio"/> Off |
| Semi-Attended Transfer | <input checked="" type="radio"/> On | <input type="radio"/> Off |
| Attended Transfer On Hook | <input checked="" type="radio"/> On | <input type="radio"/> Off |
| Transfer Mode via DSSkey | Attended Transfer ▾ | |
| Hold Transfer On Hook | <input checked="" type="radio"/> On | <input type="radio"/> Off |


Transfer to New Call via web interface

1. Click Setting → Feature
2. Select Transfer Mode via DSS key → New Call
3. Select the desired Line or Memory key and select Transfer in the Type.
4. Enter the phone number in the Value field.

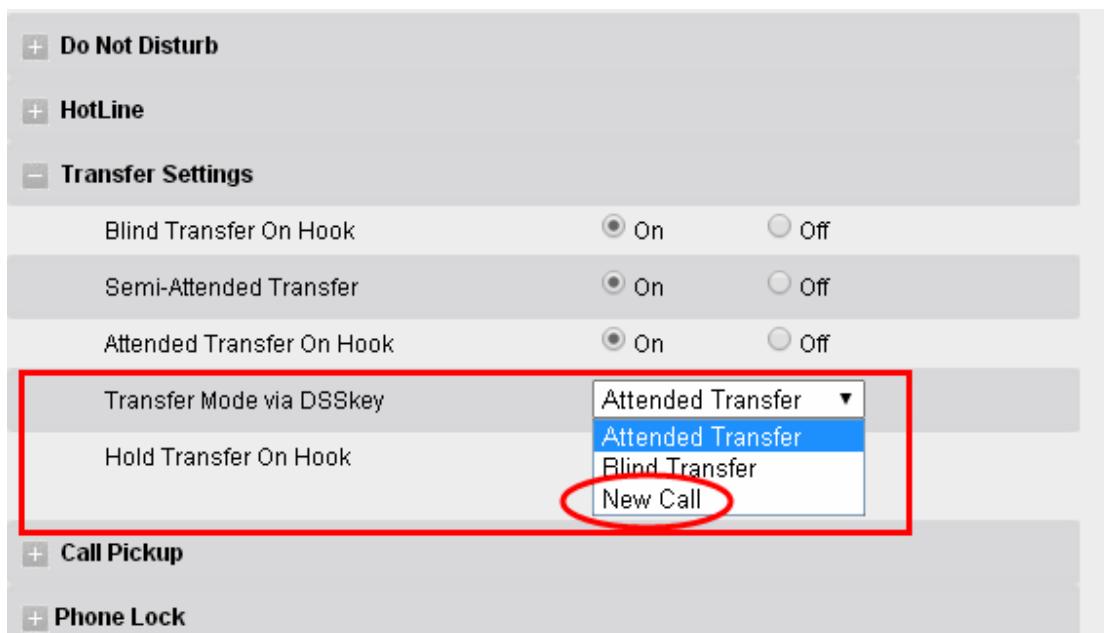

Transfer Settings

| | | |
|---------------------------|--|---------------------------|
| Blind Transfer On Hook | <input checked="" type="radio"/> On | <input type="radio"/> Off |
| Semi-Attended Transfer | <input checked="" type="radio"/> On | <input type="radio"/> Off |
| Attended Transfer On Hook | <input checked="" type="radio"/> On | <input type="radio"/> Off |
| Transfer Mode via DSSkey | Attended Transfer ▾ | |
| Hold Transfer On Hook | <input checked="" type="radio"/> Attended Transfer | |

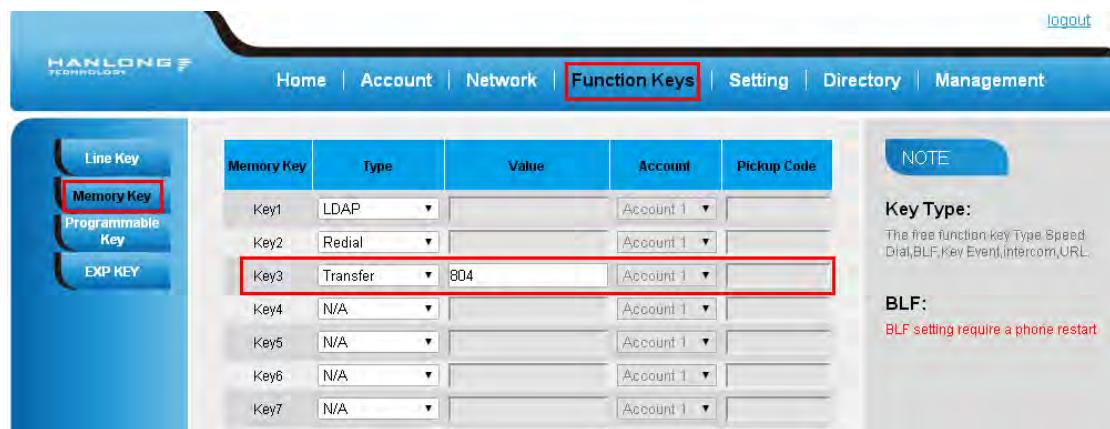

| Memory Key | Type | Value | Account | Pickup Code |
|------------|----------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | N/A | | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |

NOTE: if the person that wanted to be spoken to do not want to answer the call, then the person that answered the coming call could use this function.

Call Conference

This IP Phone supports up to 5-way conference.

5-way conference

1. Assuming that call party A and B are in conversation. A wants to bring C, D and E in a conference
2. A press line 2 key, the call is placed on hold.
3. A enter the number of C and then press send soft key or .
4. C answering the call.
5. A press  or the conference soft key, then A, B and C are now in a conference.(and now this is **3-way conference**)
6. A press line 3 key, the current 3-way conference is placed on hold.
7. A enter the number of D and then press send soft key or .
8. D answering the call.
9. A press  or the conference soft key, then A, B, C and D are now in a conference.(and now this is **4-way conference**)
10. A press line 4 key, the call is placed on hold.

11. A enter the number of E and then press send soft key or .
12. E answering the call.
13. A press  or the conference soft key, then A, B, C, D and E are now the **5-way conference** is built.
14. A end the call, the conference is finished.

**Note:**

1. If C does not answer the call, A can back to continue the conversation with B;
2. Once A hangs up the call, the conference is ended, while if B or C drops the call, A&C or A&B conversation continues.
3. The conference feature is not available on all servers. For more information, contact your system administrator.
4. To realize the 5 way conference, the line should be all available.
5. Press  to get all parties information.

Call Forward

This phone supports static forward (always forward, busy forward and no answer forward) and dynamic forward




To configure static forward

To configure always forward

With this feature, all incoming calls will forward immediately to configured number.


1. Press Menu → Features → Call forward → Always Forward.
2. Press  and  or press  to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.

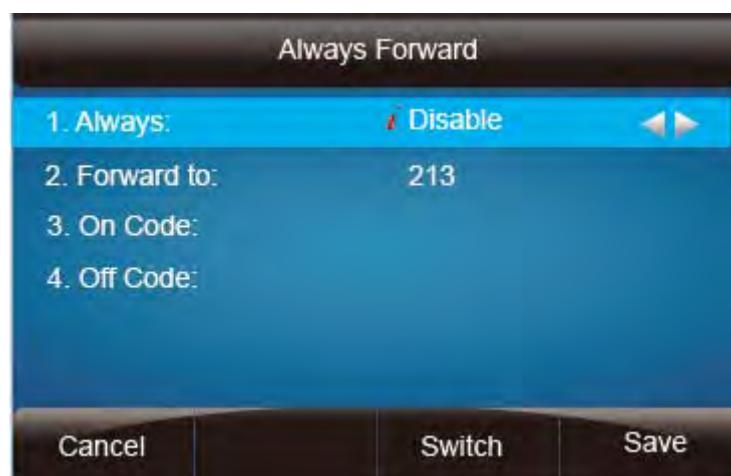

To configure busy forward

With this feature, the incoming calls are immediately forwarded if the phone is busy.


1. Press Menu → Features → Call forward → Busy forward.
2. Press  and  or press  to select the enable choice.
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.

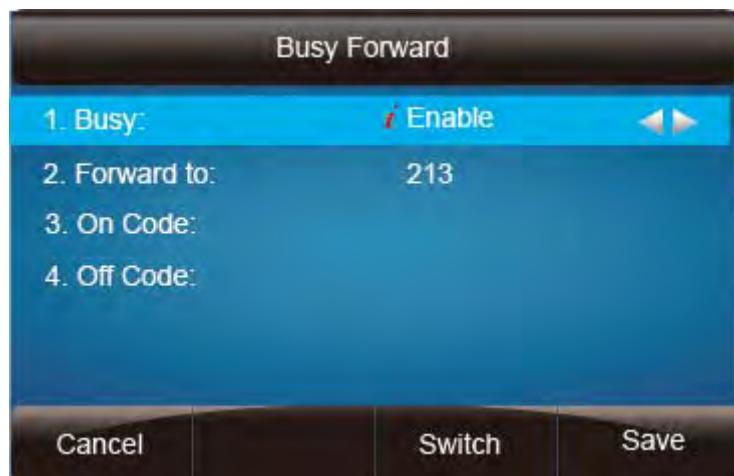

To configure no answer forward

No Answer Forward: Incoming calls are forwarded if not answered after some time.

1. Press Menu → Features → Call forward → No answer forward.
2. Press  and  or press  to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press  or Save soft key to save the configuration.

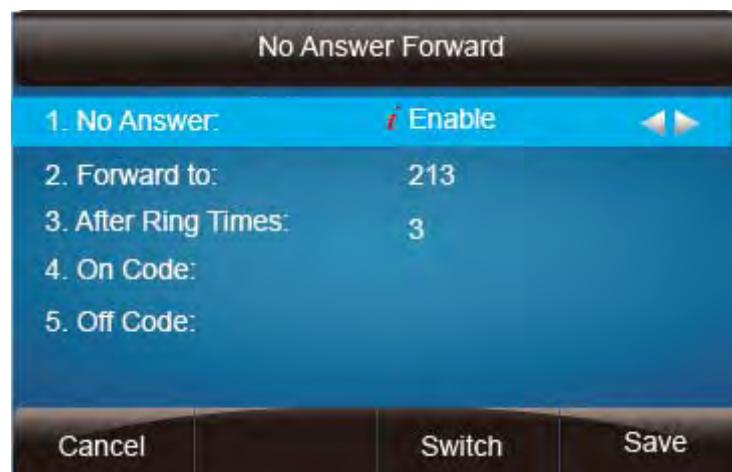

When the Forward feature is enabled, the Icon  will display on Top of the LCD.



To configure Forward via Web Interface

1. Setting → Features
2. Click On for the Always/Busy/No Answer
3. Fill the Forward to Number
4. (Optional) fill the on/off code
5. Click **SaveSet** to save the configuration



Basic Call Features

Forward:

| Condition | Target | On Code | Off Code |
|-----------|---|---------|----------|
| Always | <input type="radio"/> On <input checked="" type="radio"/> Off | | |
| Busy | <input type="radio"/> On <input checked="" type="radio"/> Off | | |
| No Answer | <input type="radio"/> On <input checked="" type="radio"/> Off | | |

NOTE

Forward::
This feature allows you to forward an incoming call to another phone number.

Target:
The number to which the incoming calls will be forwarded.

On Code:
The code that will be sent to PBX when it is switched On.

Off Code:
The code that will be sent to PBX when it is switched Off.

To cancel the forward feature via Phone Interface

1. Option 1: To press the  key to disable the forward feature.
2. Option 2: Press Menu → Features → Call forward → Always/Busy/No answer Forward

Press  and  or press  to select the disable choice

Press  or Save soft key to save the configuration.


To cancel the forward feature via Web Interface

1. Setting → Features
2. Click Off for the Always/Busy/No Answer
3. Click  to save the configuration

To configure dynamic forward

Forward an incoming call during the ringing.

1. When the phone is ringing, press Forward soft key.
2. Enter the forward number.
3. Press  or press the send soft key, then the call is forwarded.

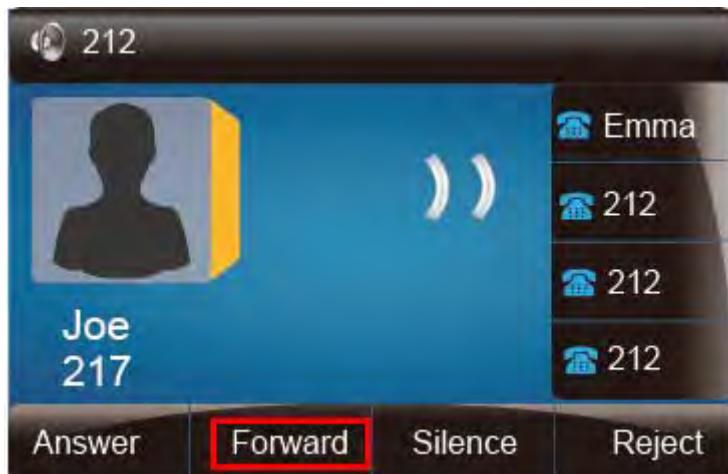**Note:**

If the Programmable Key or line key is set as BLF, when an incoming call ringing, press this BLF key directly to realize the dynamic forward.

Call Return

This feature allows you to dial the last phone call you received.

To configure the Call Return via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the Key Event in the type field.
4. Press  and  or press  key to select the Call Return.
5. Press  or Save soft key to save the configuration

To configure the Call Return via Web interface

1. Click Function keys → Line or Memory key.

2. Select the desired Line or Memory key and select Call Return in the Type.

3. Click the  to save the configuration.

Call Waiting Tone

1. Click Account → Advanced

2. Select Turn off speaker on remote Disconnect: Yes



Anonymous Call Rejection No Yes

Check SIP User ID No Yes

Auto Answer No Yes


Allow Auto Answer By Call-Info No Yes

Turn off Speaker on remote disconnect No Yes

Session Expiration 

3. Click Setting → Features


4. Select Call Waiting: On and Call Waiting Tone: On

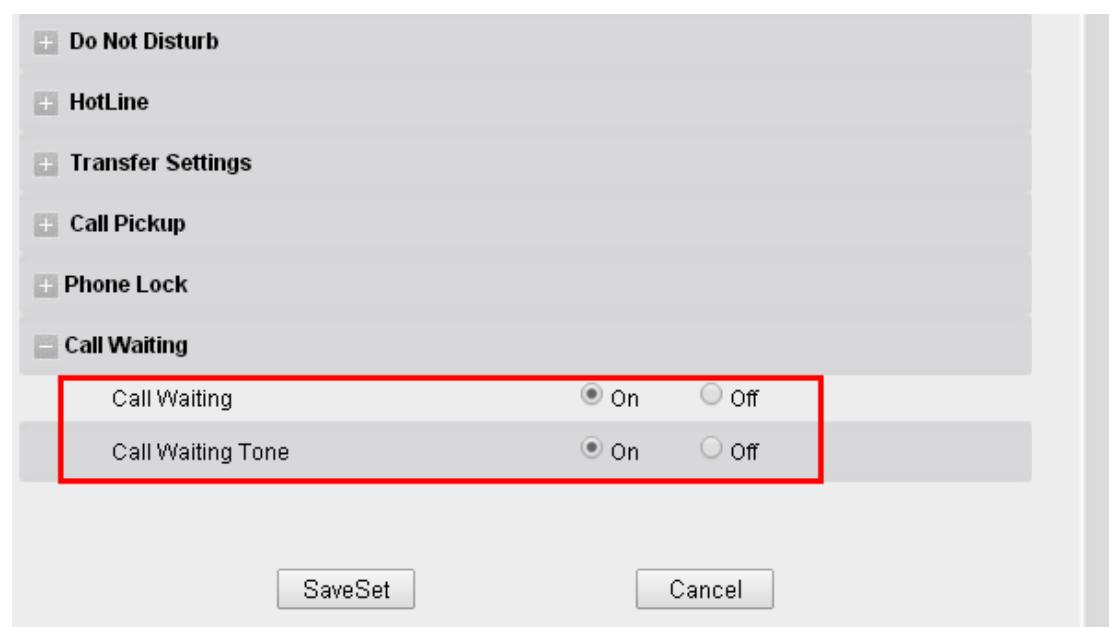

- + Do Not Disturb
- + HotLine
- + Transfer Settings
- + Call Pickup
- + Phone Lock
- Call Waiting


Call Waiting On Off

Call Waiting Tone On Off

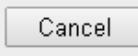To Change the Call Waiting Tone time via Web interface

1. Click Setting → Tone

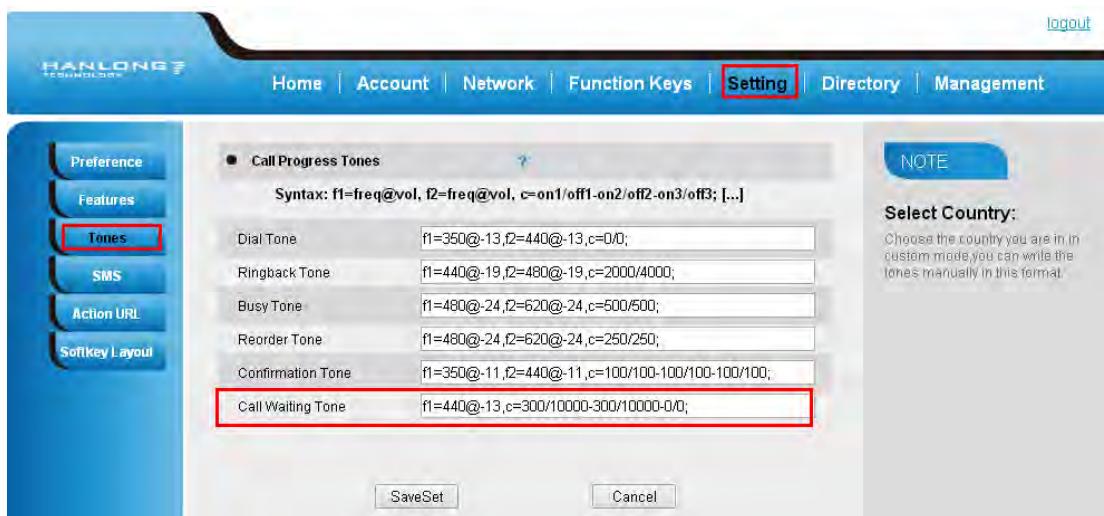

The screenshot shows the 'Call Progress Tones' configuration page. The 'Call Waiting Tone' field is highlighted with a red box. The syntax for the tone is `f1=440@-13,c=300/3000-300/3000-0/0;`

2. Change the Tone Time as you want (for example 3s)



The screenshot shows the 'Call Waiting Tone' configuration page with the modified tone syntax: `f1=440@-13,c=300/3000-300/3000-0/0;`


Hide Caller ID

Just enable the anonymous call feature, you can set your ID do not appear on the other phone that you called.

To configure anonymous call

1. Press Menu → Features → Anonymous Call
2. Press  and  or press  to change the Line ID
3. Press  and  or press  to select the enable choice in Anonymous Call filed.
4. Enter the call on code (optional), call off code (optional).

5. Press  or Save soft key to save the configuration.

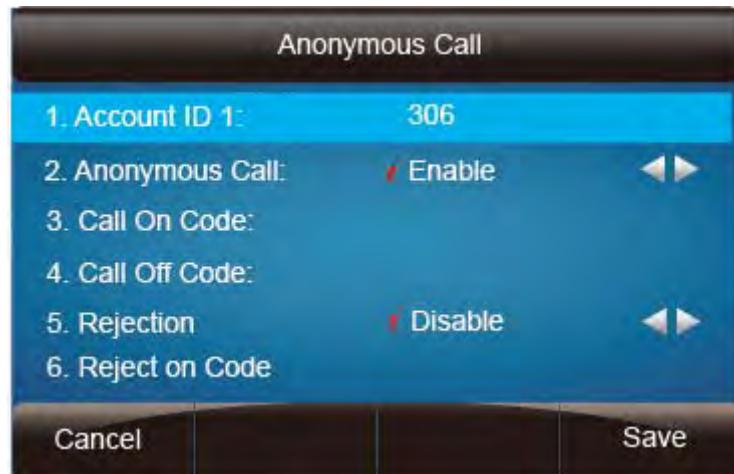

To cancel anonymous call feature


1. Press Menu → Features → Anonymous Call
2. Press  and  or press  key to select the disable choice in Anonymous Call filed.
3. Press  or Save soft key to save the configuration.

Reject Anonymous

If you do not want to be disturb by anonymous calls, you can set the reject anonymous call features, so you will not hear the unknown calls

To configure rejecting anonymous call

1. Press Menu → Features → Anonymous Call
2. Press  and  or press  key to change the Line ID
3. Press  and  or press  key to select the enable choice in Rejection filed.
4. Press  or Save soft key to save the configuration

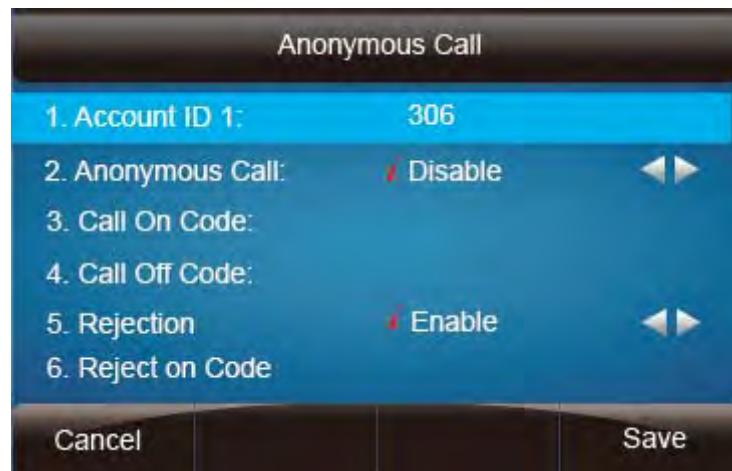

To cancel rejecting anonymous call

1. Press Menu → Features → Anonymous Call
2. Press  and  or press  key to select the disable choice in Rejection filed.
3. Press  or Save soft key to save the configuration.

Call Mute

When you use the Mute feature, the other parties will not hear your voice while you can hear their voice. Call mute applies to all modes (handset, headset, and speakerphone).



To mute the call during a call (including a conference call)

1. Press the mute key , then the mute key glows green, and the LCD display



2. To disable the mute function, press  again.

DND

When you use the DND feature, the phone is to reject all incoming calls automatically and you

 can see the mute icon  shown on the Top of the LCD on idle page.



To enable DND feature via phone interface:

1. Press the DND soft key when the phone is idle, and then  shown on the LCD.

To disable DND feature via phone interface:

1. Press the DND soft key again, and then there is no  on the LCD.


Key as Send

To configure Key as Send via phone interface:

1. Press Menu → Features → Key as Send

2. Press  and  or press  key to select the enable choice.

3. Press  or Save soft key to save the configuration

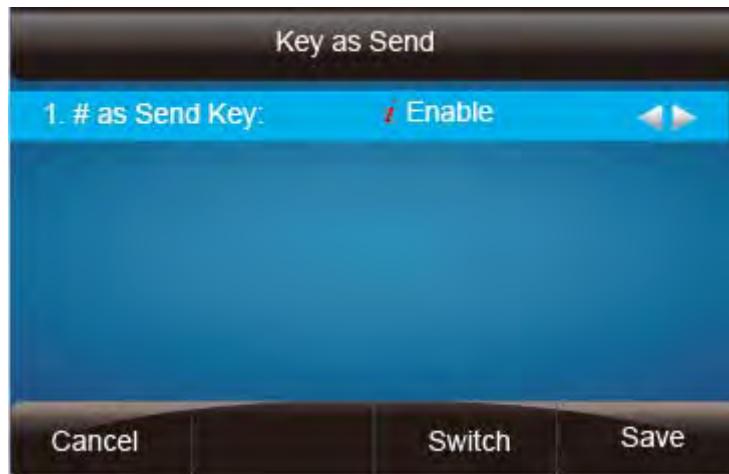


To cancel # Key as Send via phone interface:


1. Press Menu → Features → Key as Send
2. Press  and  or press  key to select the disable choice.
3. Press  or Save soft key to save the configuration

No Key Entry Timeout

No Key Entry Timeout means that when you enter the number, it will dial out automatically after some time when you stop enter the number.

To configure No Key Entry Timeout via web interface:

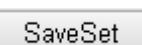1. Click Webpage Setting → Preference
2. Fill the blank of No Key Entry Timeout: for example 5(seconds).(0 means never timeout, you should press the send key the dial out the number.)
3. Click the  to save the configuration.

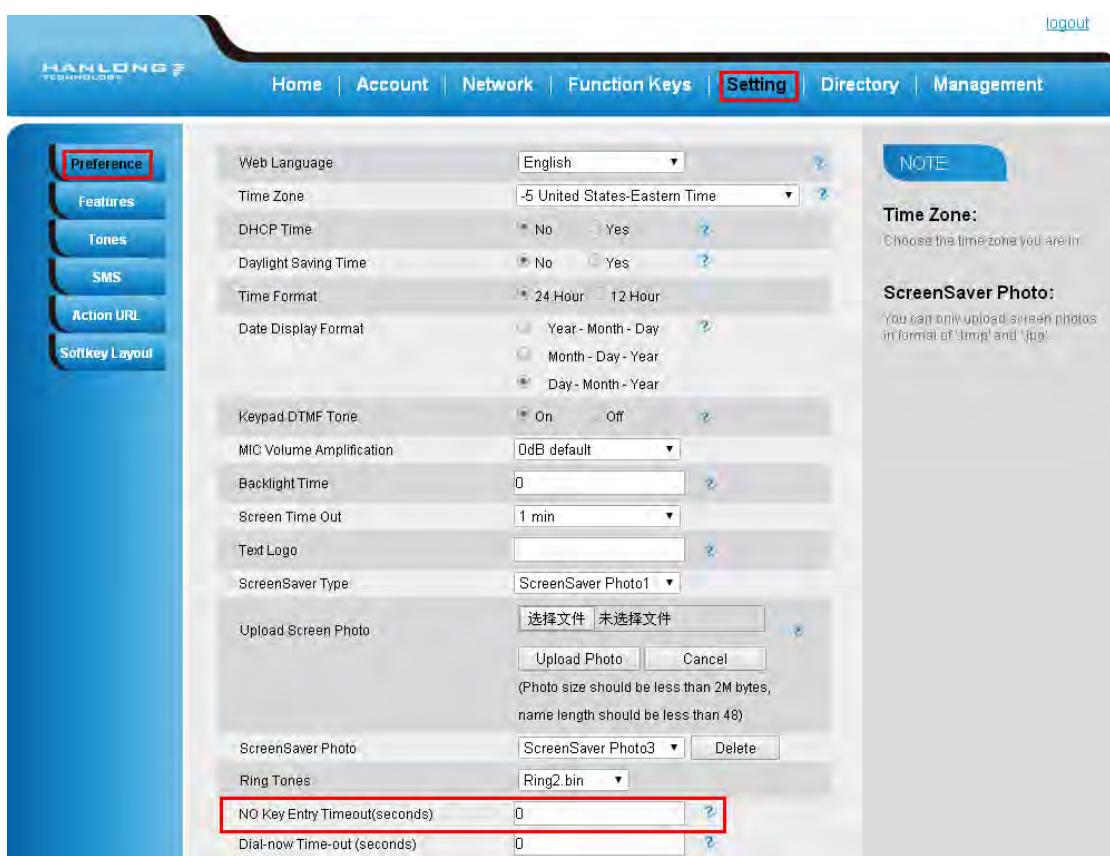

logout

Home | Account | Network | Function Keys | **Setting** | Directory | Management

Preference

Web Language: English

Time Zone: -5 United States-Eastern Time

DHCP Time: No

Daylight Saving Time: No

Time Format: 24 Hour

Date Display Format: Year - Month - Day

Keypad DTMF Tone: On

MIC Volume Amplification: 0dB default

Backlight Time: 0

Screen Time Out: 1 min

Text Logo: (empty)

ScreenSaver Type: ScreenSaver Photo1

Upload Screen Photo: 选择文件 (未选择文件) | Upload Photo | Cancel | (Photo size should be less than 2M bytes, name length should be less than 48)

ScreenSaver Photo: ScreenSaver Photo3 | Delete

Ring Tones: Ring2.bin

NO Key Entry Timeout(seconds): 0

Dial-now Time-out (seconds): 0

NOTE

Time Zone:
Choose the time zone you are in

ScreenSaver Photo:
You can only upload screen photos in format of 'Jmp' and 'Jpg'.

Keypad Lock

To enable Keypad Lock via Phone


1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose lock type:All Keys Menu Key Function Key Lock & Answer
3. Press Save or OK key to save the configuration.

To enable Keypad Lock via Phone

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change to choose Off.
3. Press Save or OK key to save the configuration.

To enable Keypad Lock via Webpage

1. Click Webpage Setting → Features
2. To choose the Phone Lock.
3. To fill the unlock PIN and auto lock time
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click **SaveSet** to save the configuration.

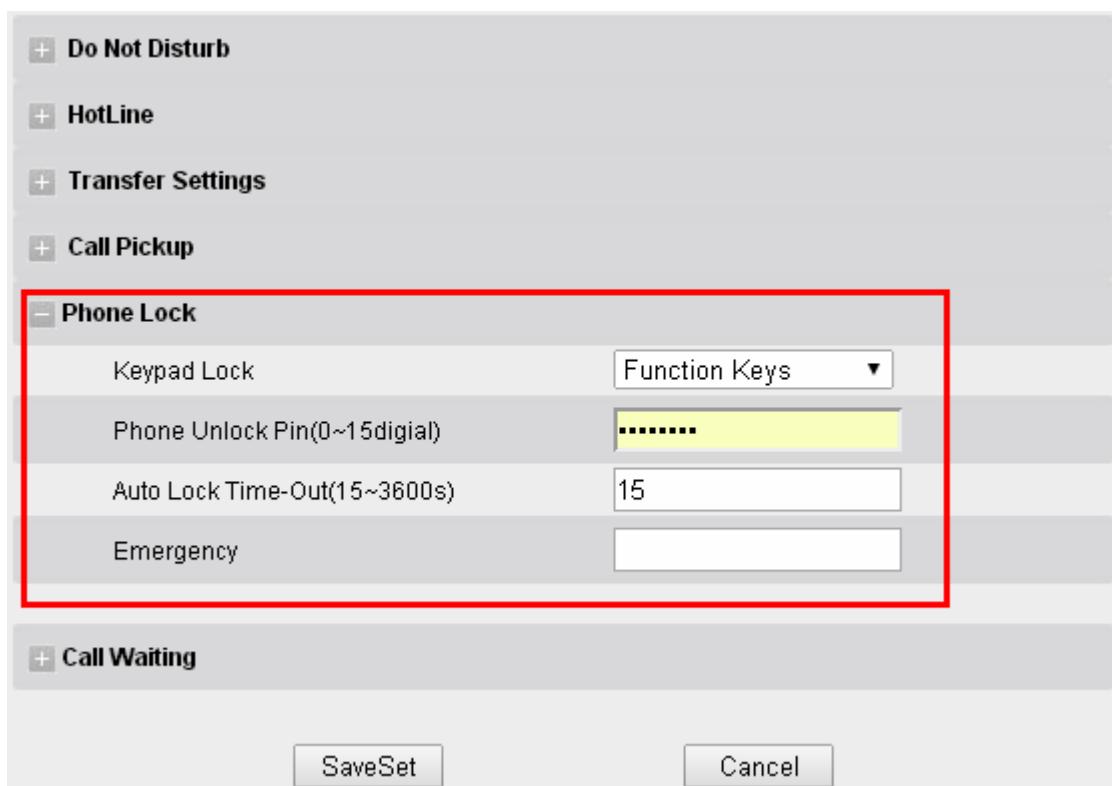

To Disable Keypad Lock via Webpage


1. Click Webpage Setting → Features
2. To choose Disable for the Phone Lock.

3. To click **SaveSet** to save the configuration.

Hot Line


To configure Hot Line

1. Press Menu → Features → Hot Line
2. Enter the Number and delay time (as present, we support off hook auto dial).
3. Press  or Save soft key to save the configuration

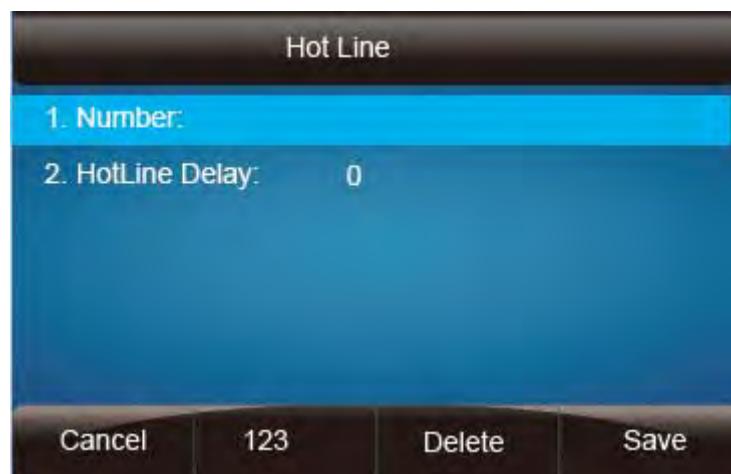

To configure Hotline auto dial via Web Interface

1. Setting → Features.
2. Fill the number in the Hotline Number and Hotline Time-out.
3. Click  to save the configuration.

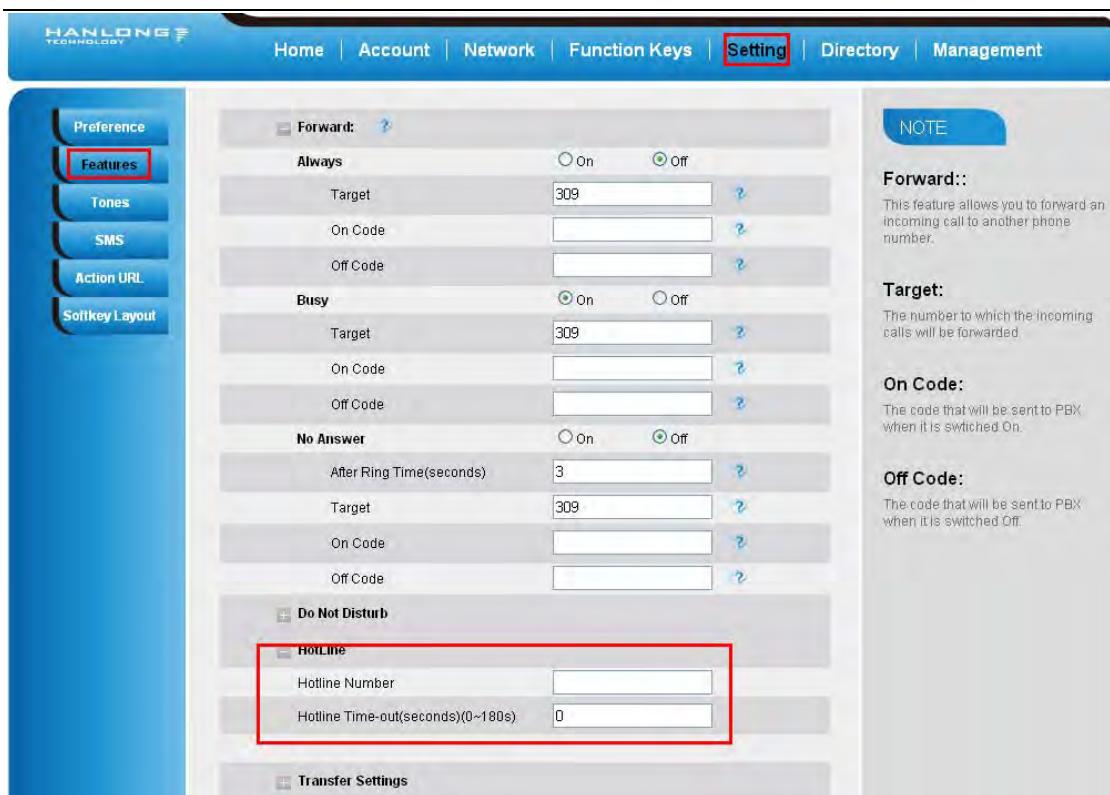

NOTE

Forward::
This feature allows you to forward any incoming call to another phone number.

Target:
The number to which the incoming calls will be forwarded.

On Code:
The code that will be sent to PBX when it is switched On.

Off Code:
The code that will be sent to PBX when it is switched Off.

Delete the number and save the configuration, and then now the Hotline auto dial is cancelled.

Function Key Features Settings

Line

It works same as Line keys.

To configure Line Feature via Web Interface

1. Click Function keys → Line or Memory Key.
2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the **SaveSet** to save the configuration.

| Memory Key | Type | Value | Account | Pickup Code |
|------------|----------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | BLF | 508 | Account 1 | |
| Key5 | Line | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

Speed Dial

With this feature, you can dial one directory by press the definite key.

To configure Speed Dial feature via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Press and or press key to select the Speed Dial in the type field.
3. Enter the targeted Number.
4. Press or Save soft key to save the configuration

Then the selected Line or Memory key will work as Speed Dial.

To configure Speed Dial feature via Web Interface


Click Function keys → Line or Memory key.

Select the wanted Line or Memory key and set as Speed Dial.

Enter the desired phone number in the Value field.

Select the Account ID

Click the **SaveSet** to save the configuration.

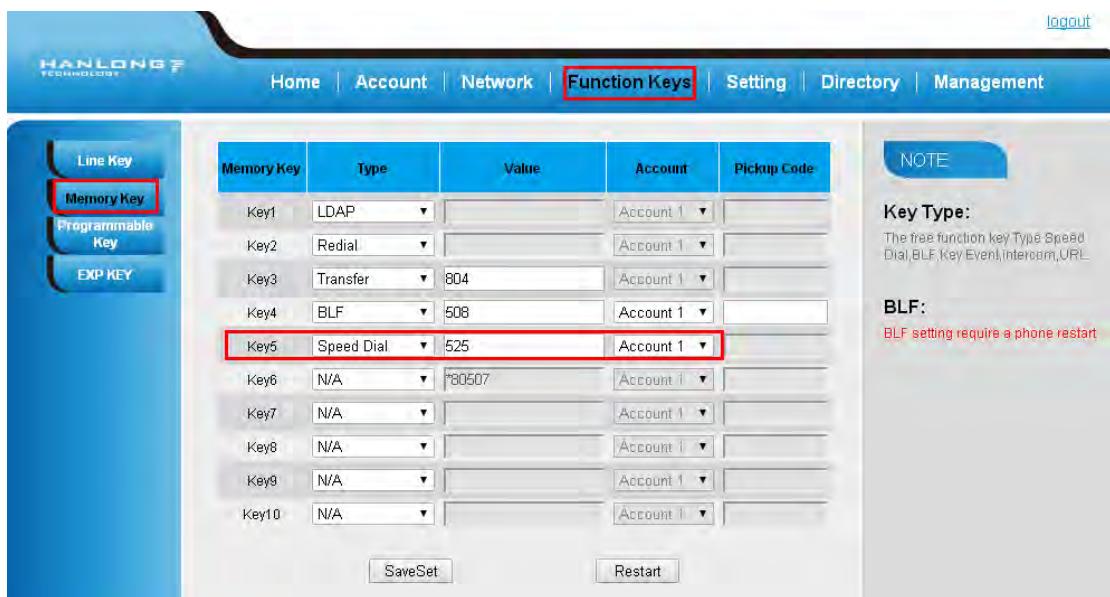

| Memory Key | Type | Value | Account | Pickup Code |
|------------|------------|--------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | BLF | 508 | Account 1 | |
| Key5 | Speed Dial | 525 | Account 1 | |
| Key6 | N/A | 780507 | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific line whether it is busy or free.

1. When the monitored line is idle, the light is steady green.
2. When the monitored line is ringing, the light is blinking red, press the BLF key to pick the phone up directly.
3. When the monitored line is calling or in a conversation, the light is steady red.

To configure a BLF key by phone

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example).
2. Select the targeted Line or Memory key.
3. Press  and  or press  key to select the BLF in the type field.
4. Enter the targeted Value Number.

5. Press  and  or press  key to select the Account ID.

6. Enter the Pickup Code.

7. Press  or Save soft key to save the configuration

To configure a BLF key by web

4. Click Function keys → Line or Memory key.


5. Select the desired Line or Memory key and select BLF in the Type.

6. Enter the monitored phone number in the Value field.

7. Select the Account ID

8. Filled the Pickup code.

9. Click the  to save the configuration.

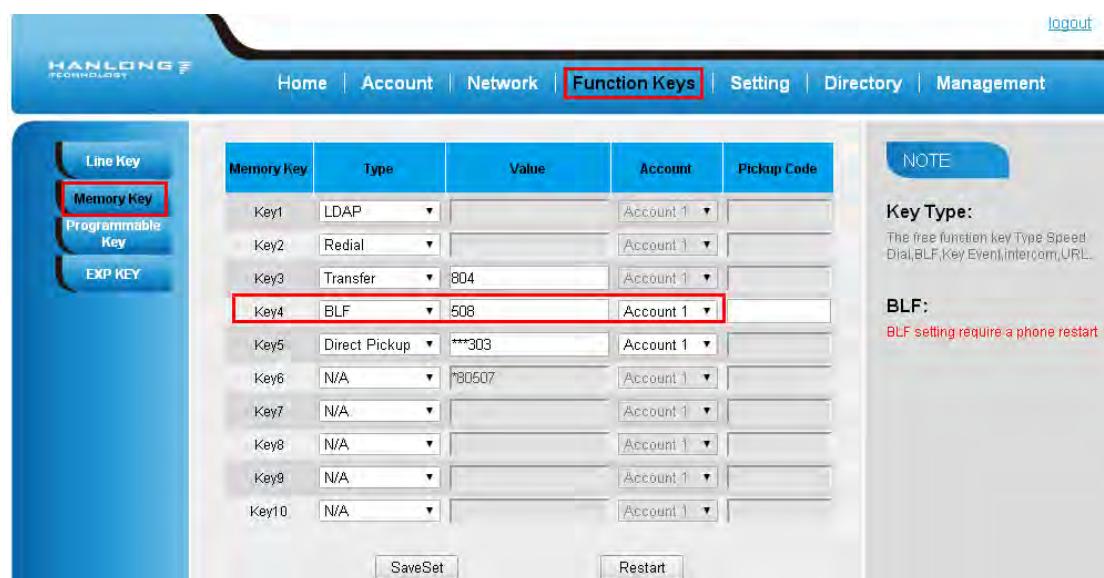

| Memory Key | Type | Value | Account | Pickup Code |
|------------|---------------|--------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | BLF | 508 | Account 1 | |
| Key5 | Direct Pickup | ***303 | Account 1 | |
| Key6 | N/A | 80507 | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

Note:


This feature is not available on all servers. For more information, contact your system administrator.

After setting the BLF key, do not need to restart the phone.

BLF List

To configure BLF List via web interface:

1. Login and click Account

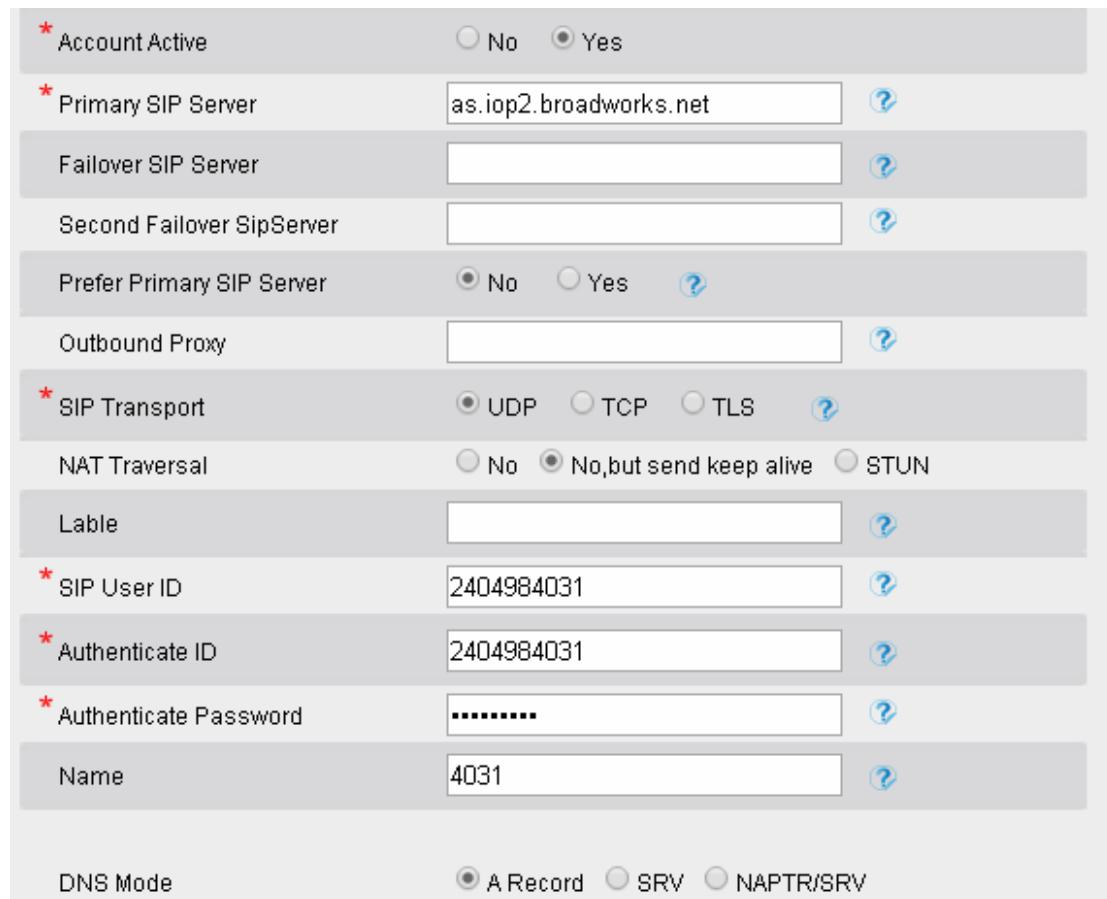

* Account Active No Yes

* Primary SIP Server as.iop2.broadworks.net

Failover SIP Server

Second Failover SIP Server

Prefer Primary SIP Server No Yes

Outbound Proxy

* SIP Transport UDP TCP TLS

NAT Traversal No No, but send keep alive STUN

Label

* SIP User ID 2404984031


* Authenticate ID 2404984031

* Authenticate Password

Name 4031

DNS Mode A Record SRV NAPTR/SRV

2. Click Advanced and then fill the Eventlist BLF URL.

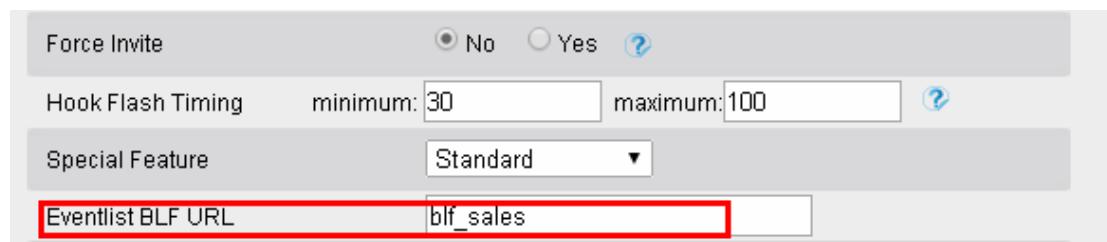

Force Invite No Yes

Hook Flash Timing minimum: 30 maximum: 100

Special Feature Standard

Eventlist BLF URL blf_sales

3. To configure BLF List Keys

3.1 Click → Function Keys → Memory Key

3.2 Select the BLF List in the Type Field.

3.3. Select Account

3.4 Click  to save the configuration.



For more information, please check [BLF list Note](#) on Hanlong web.

Voice Message

This phone supports Voicemail, and when there is message, the message will  will light green. Moreover, when pick up the handset, or press speaker key, you will hear some quick busy tone.



To configure the Voice mail feature via phone interface:

1. Press Menu→Messages→Voice Mail→Set Voice Mail.
2. Enter the Account1/2/3/4 NO.
3. Press  or Save soft key to save the configuration

To configure Voice Mail Memory Key via Web Interface:

1. Click Function keys → Memory Key.
2. Select the wanted Key.
3. Enter the desired voicemail feature codes in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the  to save the configuration.

To configure a Voice mail key by phone interface:

Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example).

Select the targeted Line or Memory key.

Press  and  or press  key to select the Voice mail in the type field.

Enter the Value Number.

Press  and  or press  key to select the Account ID.

Press  or Save soft key to save the configuration

Note:

This feature is not available on all servers. For more information, contact your system administrator.

Direct Pickup

With this feature, you can pick up the set line when it ringing.

To configure Direct Pickup feature via phone interface


1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)

2. Press  and  or press  key to select the Speed Dial in the type field.
3. Enter the value.
4. Press  or Save soft key to save the configuration

Then the selected Line or Memory key will work as Direct Pickup.

To configure Direct Pickup feature via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the wanted Line or Memory key and set as Direct Pickup.
3. Enter the pickup code and followed the desired phone number in the Value field.
4. Select the Account ID
5. Click the  to save the configuration.

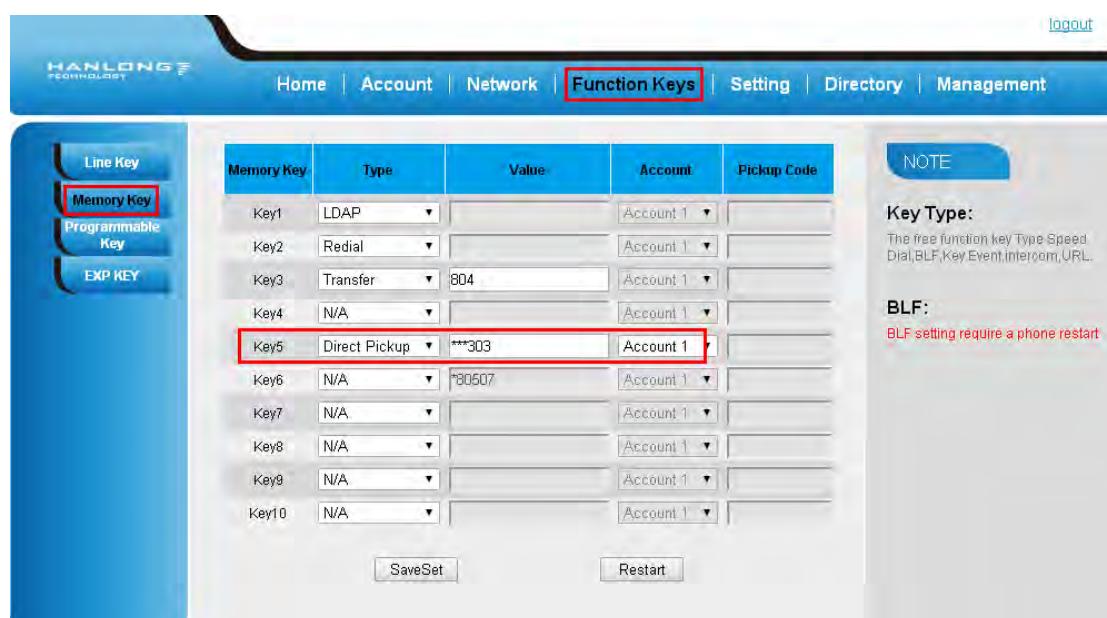

| Memory Key | Type | Value | Account | Pickup Code |
|------------|---------------|--------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | N/A | | Account 1 | |
| Key5 | Direct Pickup | ***303 | Account 1 | |
| Key6 | N/A | 80507 | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

Group Pickup


With this feature, you can pick up the specified group that you want incoming calls.

To configure the Pick up via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the Group Pickup in the type field.
4. Enter pickup code and followed the desired group number
5. Press  or Save soft key to save the configuration

To configure the Group Pick up via Web interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Click the  to save the configuration.

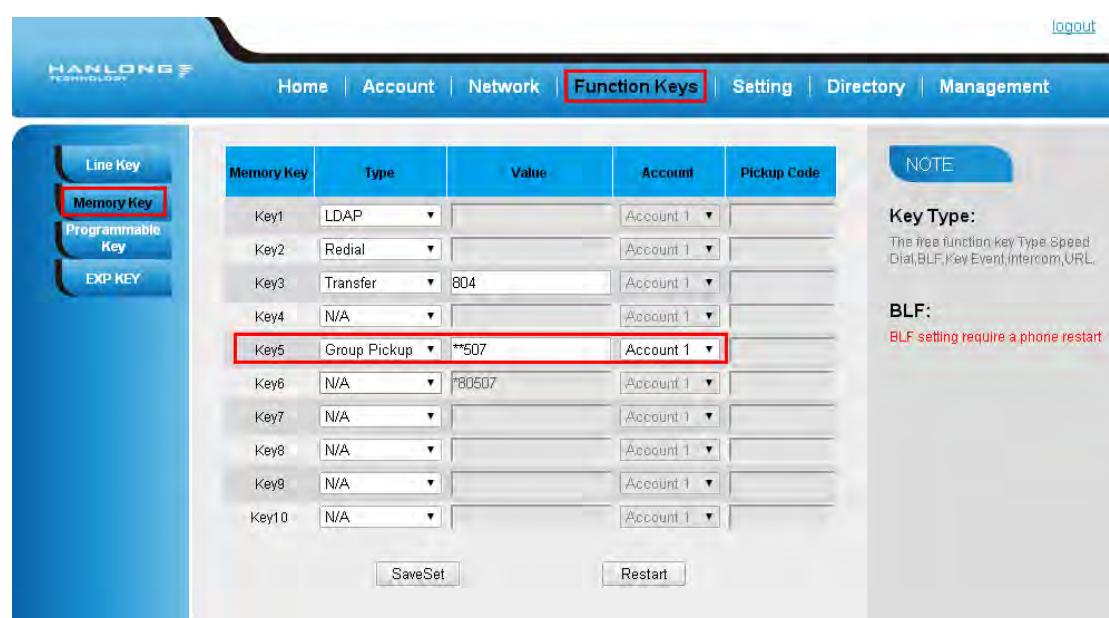

| Memory Key | Type | Value | Account | Pickup Code |
|------------|--------------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | N/A | | Account 1 | |
| Key5 | Group Pickup | **507 | Account 1 | |
| Key6 | N/A | 80507 | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

Call Park


With this feature, you can put a call on hold and continue the conversation from another phone.

To configure the Call Park via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press Switch soft key to select the Key Event in the type field.
4. Press  and  or press Switch soft key to select the Call Park.
5. Press  or Save soft key to save the configuration

To configure the Call Park via Web interface

1. Click Function key → Line or Memory key.
2. Select the desired Line or Memory key and select Direct Pickup in the Type.
3. Click the  to save the configuration.

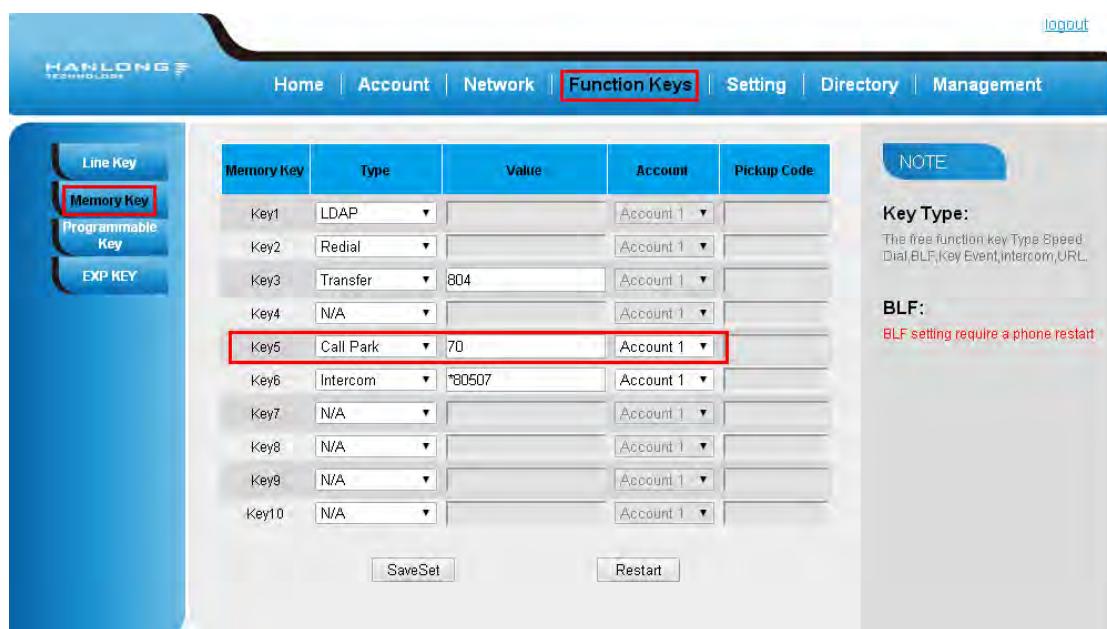

| Memory Key | Type | Value | Account | Pickup Code |
|------------|-----------|--------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | N/A | | Account 1 | |
| Key5 | Call Park | 70 | Account 1 | |
| Key6 | Intercom | *80507 | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

For More information for Call Park, please see: [Call park note](#) on hanlong website:
<http://www.hanlongtek.com>

Intercom

When use the intercom feature, you can quickly get access connect to the configured one.

To configure intercom feature via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Press  and  or press  key to select the intercom in the type field.
3. Enter the intercom codes followed by desired number.
4. Press  or Save soft key to save the configuration

Then the selected Line or Memory key will work as intercom.

To configure Intercom feature via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the wanted Line or Memory key.
3. Enter intercom codes followed by desired number in the Value field.
4. Select the Account ID
5. Click the  to save the configuration.

| Memory Key | Type | Value | Account | Pickup Code |
|------------|----------|--------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | N/A | | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | Intercom | *80507 | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

NOTE

Key Type:
The free function key Type& Speed Dial, BLF, Key Event, Intercom, URL.

BLF:
BLF setting require a phone restart

Note:

This feature is not available on all servers. For more information, contact your system administrator.

DTMF

When the key is configured as DTMF key, you are allowed to send out the desired DTMF number during the conversation.

To use this feature, you should sure that the DTMF Tone is on.

To configure the DTMF via Web Interface

1. Click Setting→Preference
2. Select On for Keypad DTMF Tone.
3. Click the **SaveSet** to save the configuration.

Keypad DTMF Tone On Off


To configure the DTMF via Phone Interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)

2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the DTMF in the type field.
4. Enter the value with the Desired DTMF number
5. Press  or Save soft key to save the configuration

To configure the DTMF via Web interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select DTMF in the Type.
3. Fill the value with the Desired DTMF number.
4. Click the  to save the configuration.

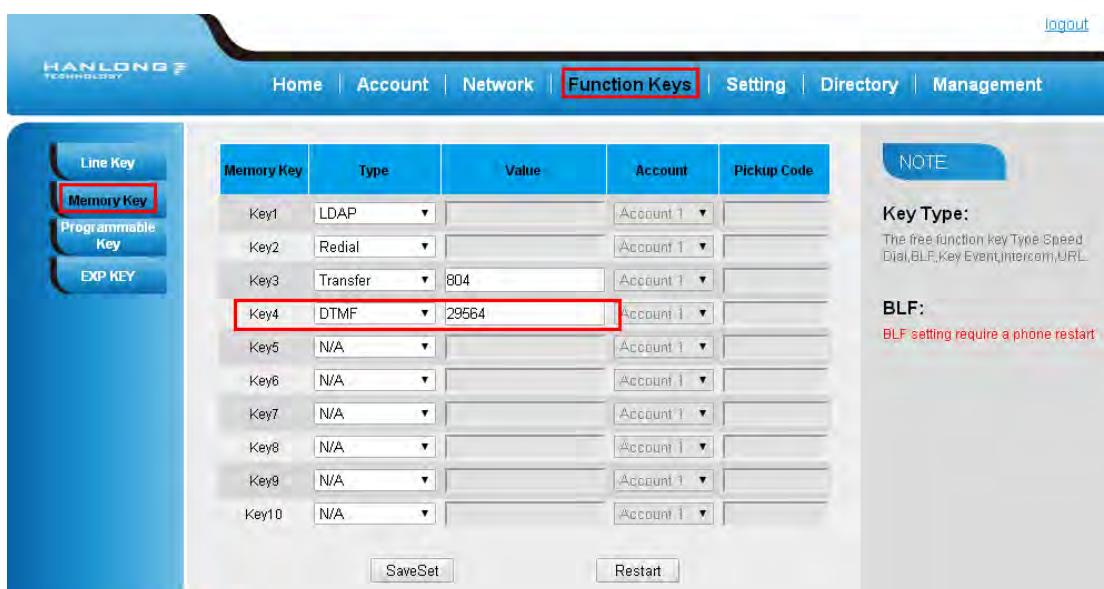

| Memory Key | Type | Value | Account | Pickup Code |
|------------|----------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | DTMF | 29564 | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

NOTE

Key Type:
The free function key Type Speed Dial, BLF, Key Event, Intercom, URL.

BLF:
BLF setting require a phone restart.

Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.

To configure the Prefix via Phone Interface



Function Key Features Settings

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.

3. Press and or press key to select the Prefix in the type field.

4. Enter the value with with number that you want to set as prefix

5. Press or Save soft key to save the configuration

To configure the Prefix via Web interface

1. Click Function key → Line or Memory key.
2. Select the desired Line or Memory key and select Prefix in the Type.
3. Fill the value.

4. Click the to save the configuration.

Then when you press this key, the set value is input directly.

| Memory Key | Type | Value | Account | Pickup Code |
|------------|----------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | Prefix | 8625 | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

NOTE

Key Type:
The free function key Type Speed Dial,BLF,Key Event,Intercom,URL

BLF:
BLF setting require a phone restart

Local Group

When use the Local Group feature, press the key and enter the local Contacts interface quickly.


To configure the Local group via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the Local group in the type field.
4. Press  or Save soft key to save the configuration

To configure the Local Group via Web interface

1. Click Function key → Memory Key.
2. Select the desired Key and select Local group in the Type.
3. Click the  to save the configuration.

Then you can press the local group key to access the pre-defined contact group in the local directory quickly.

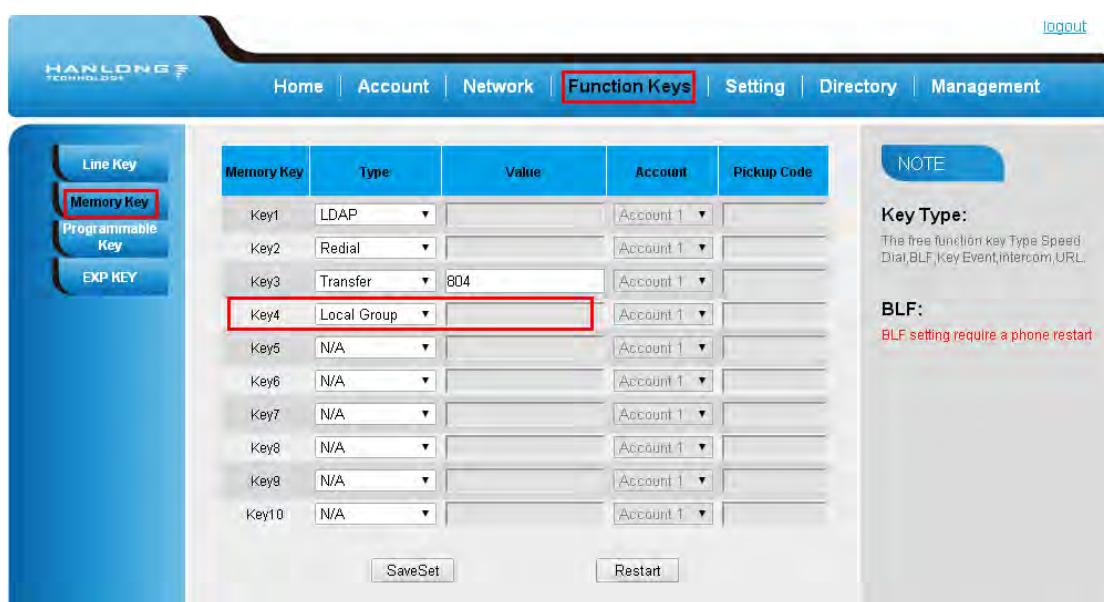

| Memory Key | Type | Value | Account | Pickup Code |
|------------|-------------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | Local Group | | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

NOTE

Key Type:
The free function key Type Speed Dial, BLF, Key Event, intercom, URL.

BLF:
BLF setting require a phone restart

XML Group


When use the XML Group feature, press the key and enter the Remote Contacts interface quickly.

To configure the XML group via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the XML group in the type field.
4. Press  or Save soft key to save the configuration

To configure the XML Group via Web interface

1. Click Function key → Memory Key.
2. Select the desired Key and select XML group in the Type.
3. Click the  to save the configuration.

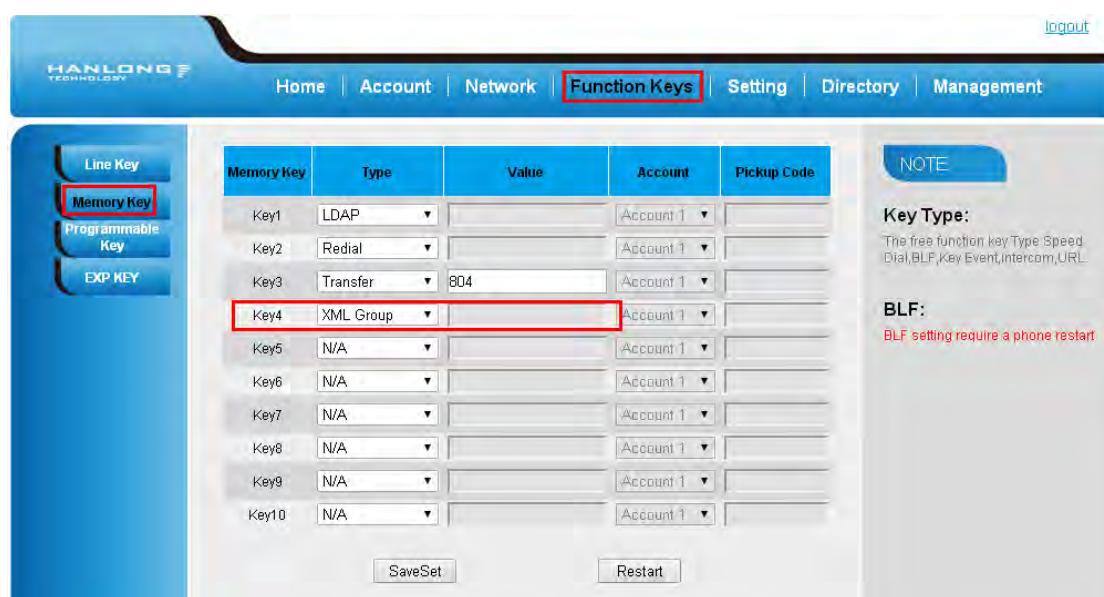

| Memory Key | Type | Value | Account | Pickup Code |
|------------|-----------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | XML Group | | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

NOTE

Key Type:
The free function key Type is Speed Dial, BLF, Key Event, Intercom, URL.

BLF:
BLF setting requires a phone restart.

LDAP


When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure the LDAP via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the LDAP in the type field.
4. Press  or Save soft key to save the configuration

To configure the LDAP via Web interface

1. Click Function key → Memory Key.
2. Select the desired Key and select LDAP in the Type.
3. Click the  to save the configuration.

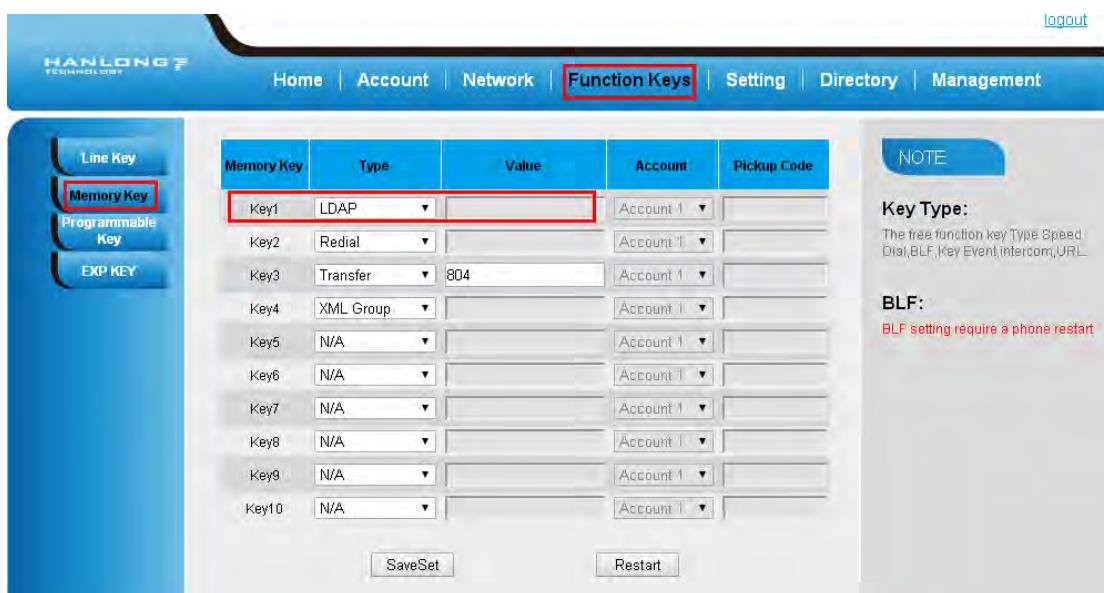

| Memory Key | Type | Value | Account | Pickup Code |
|------------|-----------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | XML Group | | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

NOTE

Key Type:
The free function key Type Speed Dial, BLF, Key Event, Intercom, URL

BLF:
BLF setting require a phone restart

XML Browser


You can use this key feature to access the Xml browser quickly. The Xml browser allows you to create custom services which meet your functional requirements on the server. You can customize practical applications, such as weather report, stock information, Google search, etc.

To configure the XML Browser via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the XML Browser in the type field.
4. Filled the access URL for xml browser
5. Press  or Save soft key to save the configuration

To configure the XML Browser via Web interface

1. Click Function key → Memory Key.
2. Select the desired Key and select xml browser in the Type.
3. Filled the access URL for xml browser
4. Click the  to save the configuration.

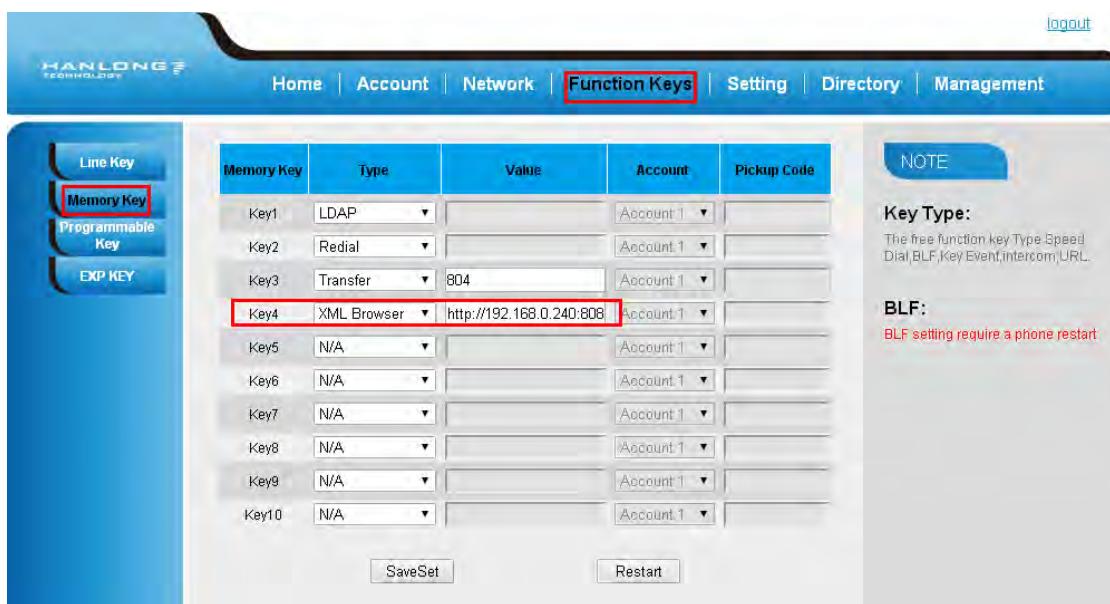

| Memory Key | Type | Value | Account | Pickup Code |
|------------|-------------|--------------------------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | XML Browser | http://192.168.0.240:808 | Account 1 | |
| Key5 | N/A | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

SaveSet **Restart**

Broadsoft Group

When use the BroadSoft Group feature, press the key and enter the Remote Contacts interface quickly.

To configure the Broadsoft group via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the Broadsoft group in the type field.
4. Press  or Save soft key to save the configuration

To configure the Broadsoft group via Web interface

1. Click Function key → Memory Key.
2. Select the desired Key and select Broadsoft group in the Type.
3. Click the  to save the configuration.

Conference

The HanLong IP Phone supports up to 5-way conference. You are allowed to configure the programmable key to be used as a conference key. This key works same as .

To configure the Conference via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the Conference in the type field.
4. Press  or Save soft key to save the configuration

To configure Conference via Web Interface

1. Click Function keys → Memory Key.
2. Select the desired Key and select Conference in the Type.
3. Click the  to save the configuration.

Forward

If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the number will be forwarded to the set number automatically.

To configure the Forward via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.

3. Press  and  or press  key to select the Forward in the type field.
4. Enter the Number that to forward.
5. Press  or Save soft key to save the configuration

To configure Forward via Web Interface

1. Click Function keys → Memory Key.
2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward
4. Click the  to save the configuration.

Transfer

You are able to configure the key as a transfer key to perform the Blind/Attended Transfer.

To configure the Transfer via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the Transfer in the type field.
4. Enter the Number that transfer to
5. Press  or Save soft key to save the configuration

To configure Transfer via Web Interface

1. Click Function keys → Memory Key.

2. Select the desired Key and select Transfer in the Type.
3. Enter the Value with the number that wanted transfer to
4. Click the  to save the configuration.

Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

To configure the Hold via Phone Interface

5. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
6. Select the wanted Memory key.
7. Press  and  or press  key to select the Hold in the type field.
8. Press  or Save soft key to save the configuration

To configure Hold via Web Interface

1. Click Function keys → Memory Key.
2. Select the desired Key and select Hold in the Type.
3. Click the  to save the configuration.

Group Listening

With this feature, you can use Headset, Handset and speaker at the same time.

To configure the Group listening via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the group listening in the type field.
4. Press  or Save soft key to save the configuration

To configure Group listening via Web Interface

1. Click Function keys → Memory Key.
2. Select the desired Key and select Group listening in the Type.
3. Click the  to save the configuration.

DND

If the key is configured as DND key, you are allowed to active the DND function immediately when you press it and the phone is to reject all incoming calls automatically. Press it again to deactivate DND mode.

To configure the DND via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the DND in the type field.
4. Press  or Save soft key to save the configuration

To configure DND via Web Interface

1. Click Function keys →Memory Key.
2. Select the desired Key and select DND in the Type.
3. Click the  to save the configuration.

Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

To configure Redial via Web Interface


1. Click Function keys →EXP Key.
2. Select the desired Key and select redial in the Type.
3. Enter the Label displayed on LCD.
4. Click the  to save the configuration.

SMS

Send SMS

To send SMS via web Interface

1. Click Setting→SMS
2. Select the account(form which account the sms sent)
3. Enter the target number
4. Input the content of SMS, and click Send.

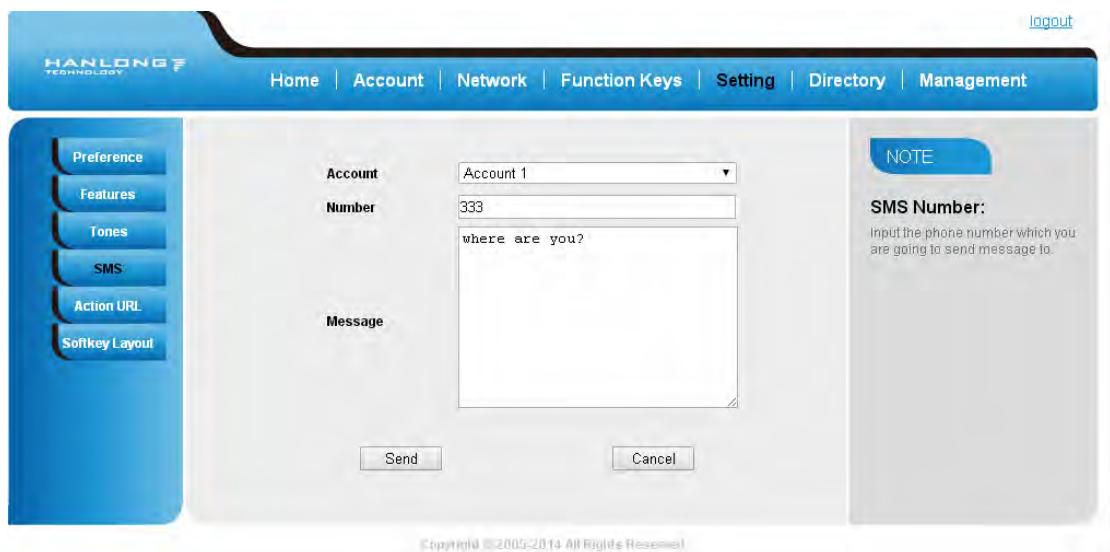

Set SMS Memory Key

To configure the SMS via Phone Interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Memory key.
3. Press  and  or press  key to select the SMS in the type field.
4. Press  or Save soft key to save the configuration

To configure SMS via Web Interface

1. Click Function keys → Memory Key.
2. Select the desired Key and select SMS in the Type.
3. Click the  to save the configuration.

Record


With record feature, you can record calls by pressing a record key on the phone.

To configure the record via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the Record.
4. Press  or Save soft key to save the configuration


To configure the record via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Record in the Type.
3. Click the  to save the configuration.

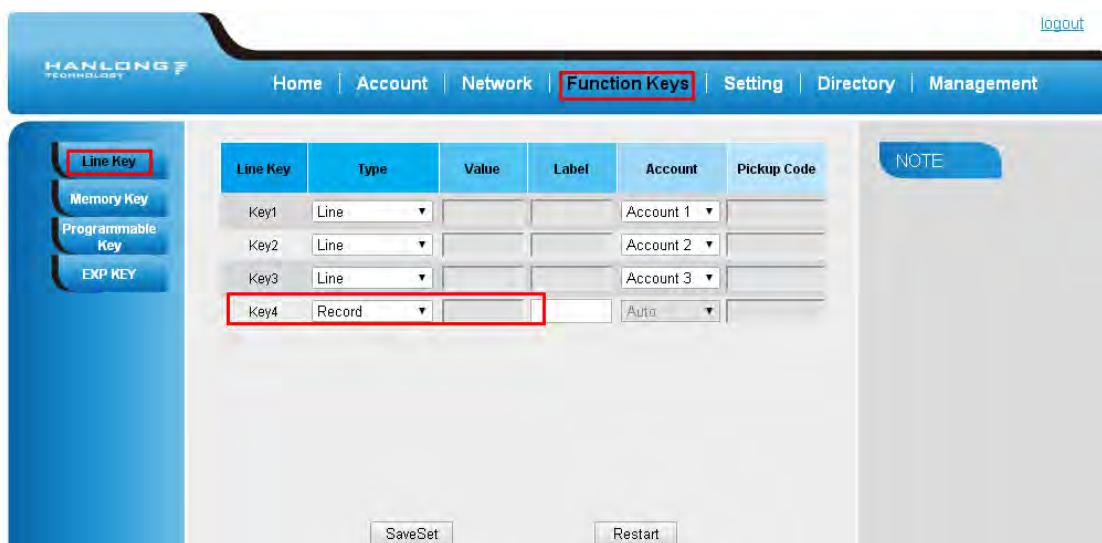

| Line Key | Type | Value | Label | Account | Pickup Code |
|----------|--------|-------|-------|-----------|-------------|
| Key1 | Line | | | Account 1 | |
| Key2 | Line | | | Account 2 | |
| Key3 | Line | | | Account 3 | |
| Key4 | Record | | | Auto | |

Note:

Please contact the system administrator whether support this feature or not.

URL Record

The phone sends HTTP URL request to trigger a recording. Contact your system administrator for the predefined URL.

To configure the URL record via phone interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the URL Record.
4. Press  or Save soft key to save the configuration

To configure the record via Web Interface

1. Click Function keys → Memory key.
2. Select the desired Line or Memory key and select URL Record in the Type.
3. Click the  to save the configuration.

Paging

With this feature, you can call a phone directly.

To configure the paging via phone interface

1. Press Menu → Features → Function Keys → Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the Paging.

4. Enter the paging code followed the number.
5. Press  or Save soft key to save the configuration

To configure the Paging via Web interface

1. Click Function keys → Memory key.
2. Select the desired Memory key and select Paging in the Type.
3. Enter the paging code followed the number.
4. Click the  to save the configuration.

Shared Line


This feature allows subscribers to share SIP lines. Moreover it also provides status monitoring of the shared line.

To configure the line key as shared line via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the Shared Line in the type field.
4. Press  and  or press  key to select the Account ID.
5. Enter the Label
6. Enter the Value
7. Press  or Save soft key to save the configuration

To configure the line key as shared line via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Shared Line in the Type.
3. Enter the Value.
4. Enter the Label.
5. Select the Account ID
6. Click the **SaveSet** to save the configuration and then restart.

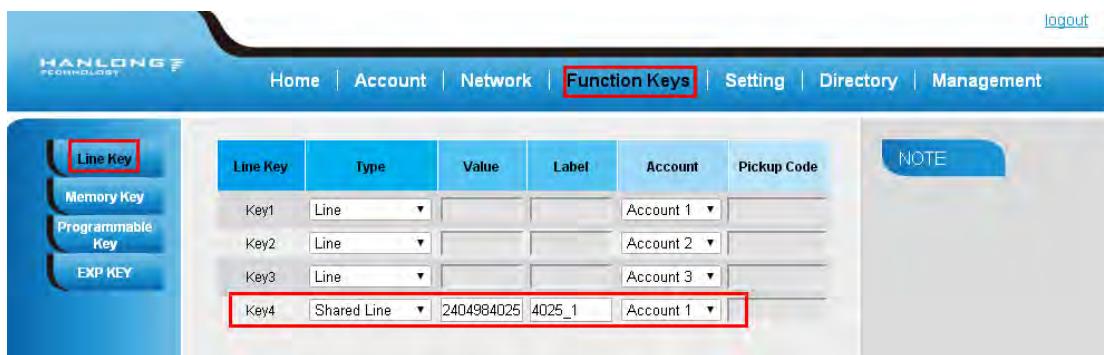

Note:

This feature is not available on all servers. For more information, contact your system administrator.

Public Hold


The key can be configured as a public hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold or resume a call.

To configure the Public hold via phone interface

1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the Public Hold.
4. Press  or Save soft key to save the configuration

To configure public hold via Web Interface

1. Click Function keys → Memory Key.
2. Select the desired Key and select public hold in the Type.
3. Click the **SaveSet** to save the configuration.

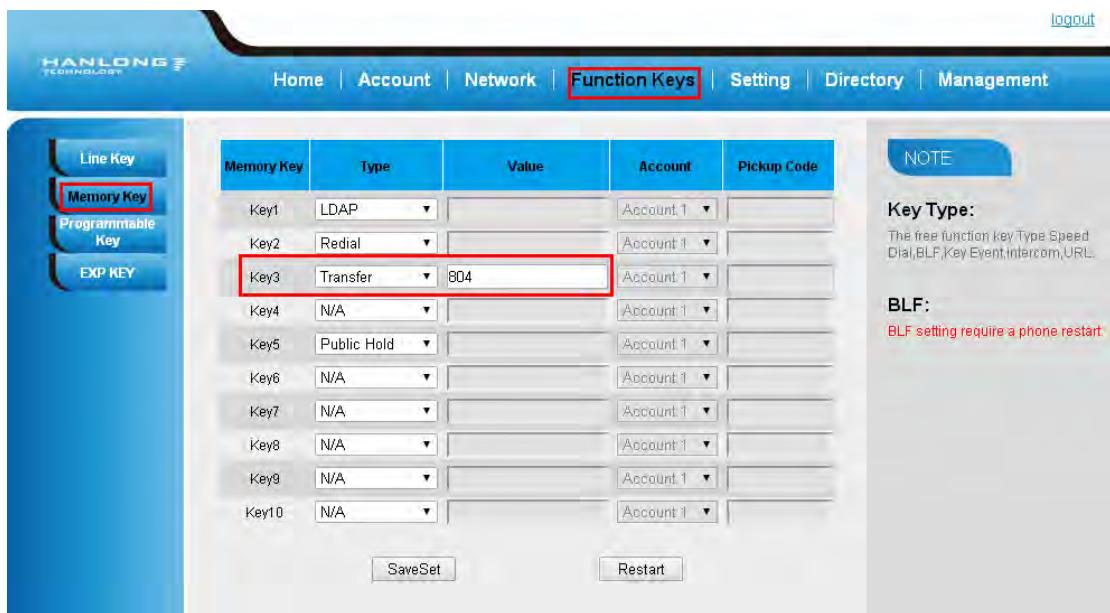

Private Hold

The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.

To configure the Private hold via phone interface


1. Press Menu → Features → Function Keys → Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press  and  or press  key to select the Private Hold.
4. Press  or Save soft key to save the configuration

To configure private hold via Web Interface

1. Click Function keys → Memory Key.

2. Select the desired Key and select Private hold in the Type.

3. Click the **SaveSet** to save the configuration.

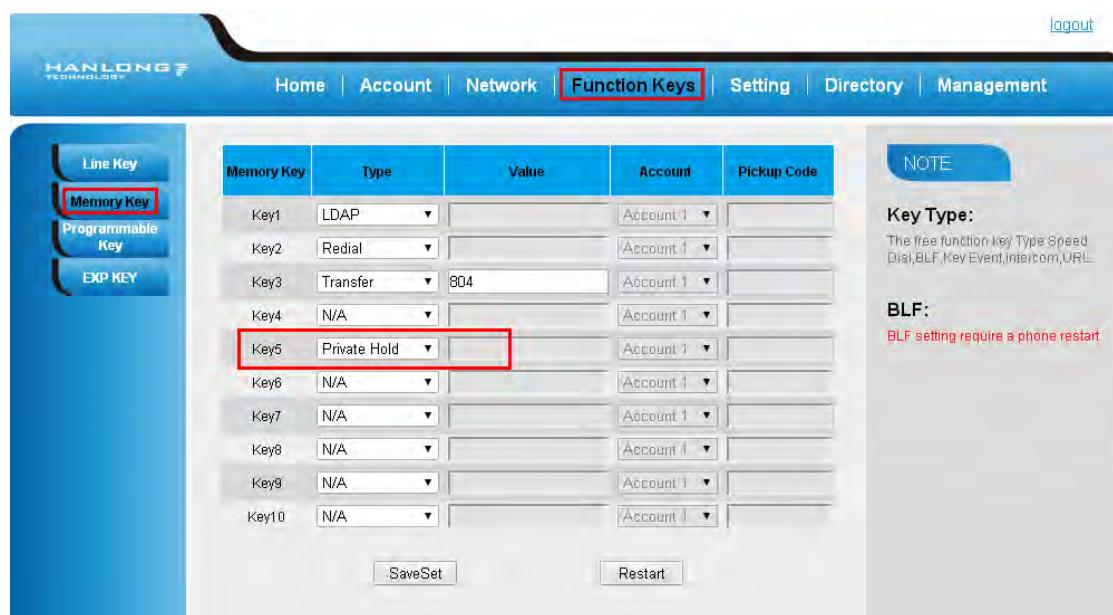

NOTE

Key Type:
The free function key type Speed Dial,BLF,Key Event,Intercom,URL

BLF:
BLF setting require a phone restart

| Memory Key | Type | Value | Account | Pickup Code |
|------------|--------------|-------|-----------|-------------|
| Key1 | LDAP | | Account 1 | |
| Key2 | Redial | | Account 1 | |
| Key3 | Transfer | 804 | Account 1 | |
| Key4 | N/A | | Account 1 | |
| Key5 | Private Hold | | Account 1 | |
| Key6 | N/A | | Account 1 | |
| Key7 | N/A | | Account 1 | |
| Key8 | N/A | | Account 1 | |
| Key9 | N/A | | Account 1 | |
| Key10 | N/A | | Account 1 | |

SaveSet Restart

Upgrade

Factory Reset


To set Factory Reset by phone interface

1. Press Menu → Setting → Advanced Setting(default password: admin)→ Factory Reset
2. Press OK soft key in the warning page.

To set Factory Reset via web interface

Click Management → Upgrade

Click **Reset To Factory** and then confirm the setting.

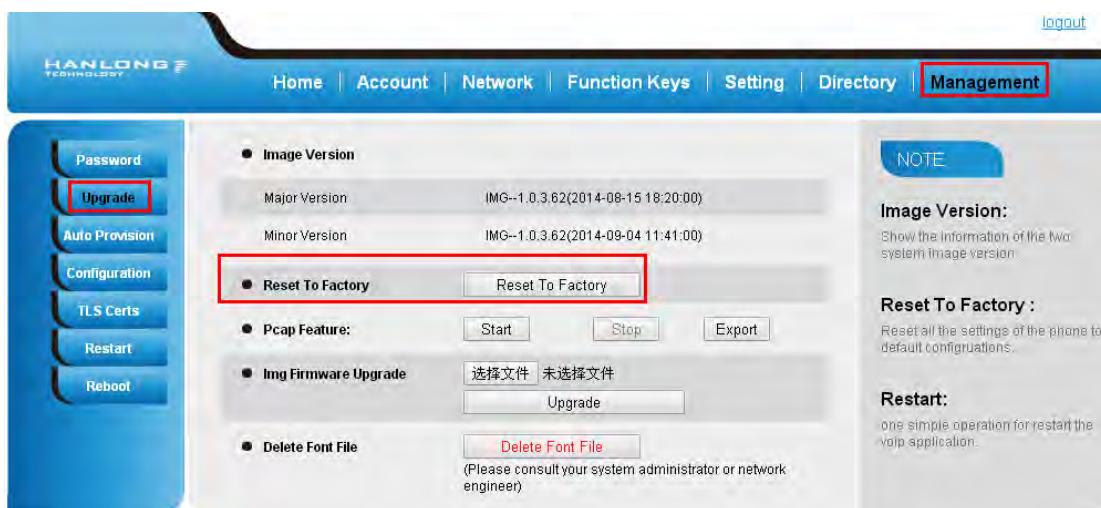

Pcap Feature

To use pcap via web interface:

1. Click Management → Upgrade
2. Click Start and then operation the phone
3. When finish the operation, click stop and then click Export.



Upgrade

4. Then you'll get the Pacp captures.



System Log

To download system log via web interface:

1. Click Management→Configuration
2. Click of the system Log
3. Then you'll get a txt file: syslog.txt.





Upgrade

NOTE

Configure File:
Export the configuration files to backup the settings, and could import all the settings after reset.

System Log:
There are two methods to export the system log: Local or Server.

Upgrade

To upgrade software, this phone can be configured with a TFTP server where the new code image is located. The TFTP upgrade can work in either static IP or DHCP mode using private or public IP address. It is recommended to set the TFTP server address in either a public IP address or on the same LAN with the phone.

To configure the TFTP server via the Web configuration interface

Input the admin password to enter the configuration screen. From there, enter the TFTP server address in the designated field towards the bottom of the configuration screen.


Once the TFTP server is configured, please power cycle the phone.

TFTP process may take as long as 1 to 2 minutes over the Internet or just 20+ seconds if it is performed on a LAN. Users are recommended to conduct TFTP upgrade in a controlled LAN environment if possible. For those who do not have a local TFTP server, Hanlong provides a NAT-friendly TFTP server on the public Internet for firmware upgrade. Please check the Service section of Hanlong's Web site to obtain this TFTP server's IP address.

Directory to configure local TFTP

1. Unzip the file and put all of them under the root directory of the TFTP server.
2. The PC running the TFTP server and the UC IP PHONE should be in the same LAN segment.
3. Go to File -> Configure -> Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade.

4. Start the TFTP server, in the UC IP PHONE's web configuration page.
5. Configure the Firmware Server Path with the IP address of the PC.
6. Update the change and reboot the unit.

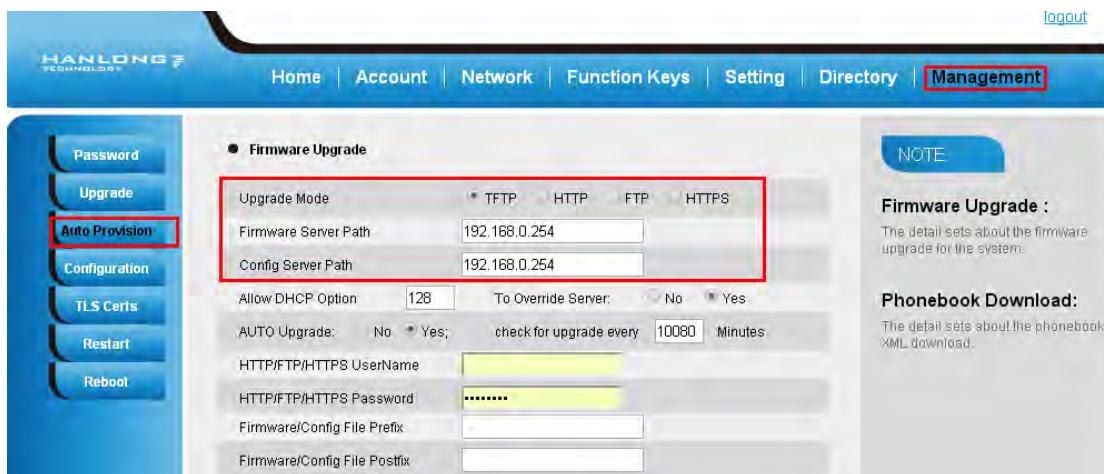

NOTES:

When Hanlong IP Phone boot up, it will send TFTP or HTTP request to download configuration files, there are two configuration files, one is “cfg.txt” and the other is “cfg001fc1xxxxxx”, where “001fc1xxxxxx” is the MAC address of the phone. These two files are for initial automatically provisioning purpose only, for normal TFTP or HTTP firmware upgrade, the following error messages in a TFTP or HTTP server log can be ignored.

Download and install a free TFTP or HTTP server to the LAN to perform firmware upgrades. A free Windows version TFTP server is available:

http://www.solarwinds.com/products/freetools/free_tftp_server.aspx.

To upgrade manually via the Web configuration interface


Download the firmware.

Click Management → Upgrade

Click Brower or the blank.

Select the firmware and then click **Upgrade**.

Restart.

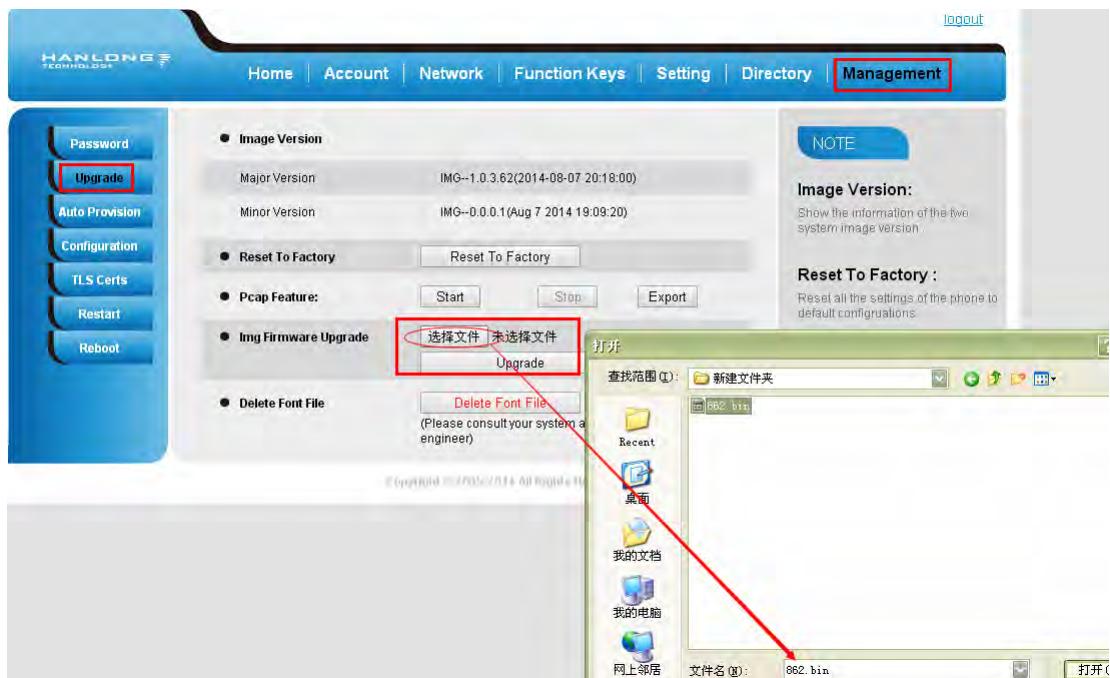

Configuration File

To download configuration file:

1. Click Management → Configuration → Download Device Bin Configuration
2. Then you can get a file: cfg.bin




To Restore configuration file:

1. Click Management → Configuration → Restore configuration

2. Select the cfg.bin file, and then Click the **Restore Bin Configuration** button.

3. Restart the phone.

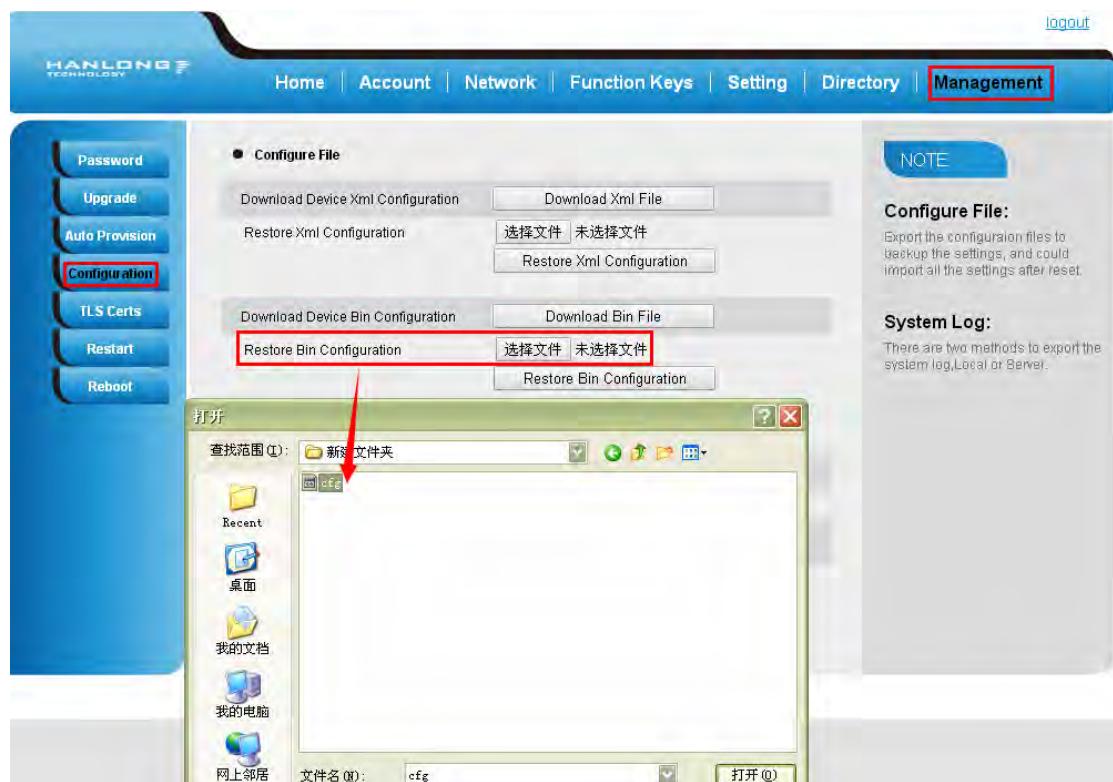

Troubleshooting

Why is the phone LCD screen blank?

1. Ensure your phone is properly plugged into a functional AC outlet.
2. Ensure that the phone isn't plugged into a plug controlled by a switch that is off.
3. If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
4. If your phone is powered from PoE, ensure you use a PoE compliant switch or hub, or contact your system administrator for more information.
5. Check that the power LED is on to ensure the phone is powered on.

Why does the phone display "Network Unavailable"?

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.
- Contact your system administrator for more information.


Why can't I get a dial tone?

- Check for any loose connections and that the phone has been installed properly. For the Installation instructions, refer to [Phone Installation](#).
- Check whether dial tone is present on one of the audio modes.
- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether dial tone is present for one of the audio modes.
- If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

Where to set the tone?

You can set the tone on web interface:

- Click Setting→Tones
- Define the dial tone, ringing, busy tone...
- For the tones, you can check with your system administrator.
- More Click [Tone Notes](#).

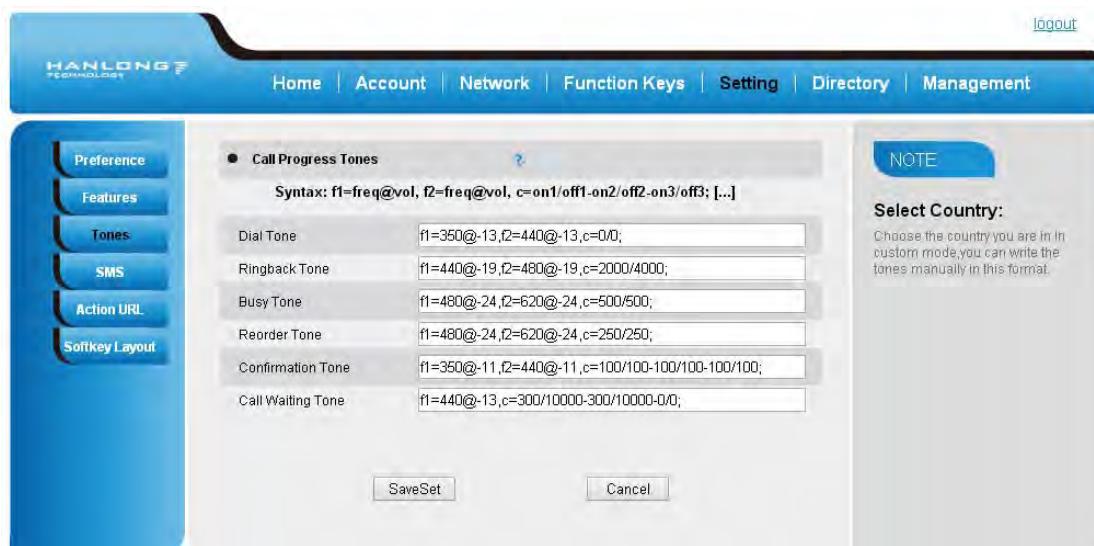

Call Progress Tones

Syntax: f1=freq@vol, f2=freq@vol, c=on1/off1-on2/off2-on3/off3; [...]

| | |
|-------------------|--|
| Dial Tone | f1=350@-13,f2=440@-13,c=0/0; |
| Ringback Tone | f1=440@-19,f2=480@-19,c=2000/4000; |
| Busy Tone | f1=480@-24,f2=620@-24,c=500/500; |
| Reorder Tone | f1=480@-24,f2=620@-24,c=250/250; |
| Confirmation Tone | f1=350@-11,f2=440@-11,c=100/100-100/100-100/100; |
| Call Waiting Tone | f1=440@-13,c=300/10000-300/10000-0/0; |

NOTE

Select Country:
Choose the country you are in. In custom mode, you can write the tones manually in this format.

How to download XML Configuration?

- Click Management→Configuration→ **Download Xml File**



Configure File


Download Device Xml Configuration **Download Xml File**

NOTE

Configure File:

How to Import TLS certificate?

- Click Management→TLS Certs
- Click Choose file to select the certificate
- Click **Import TLS Certificate**

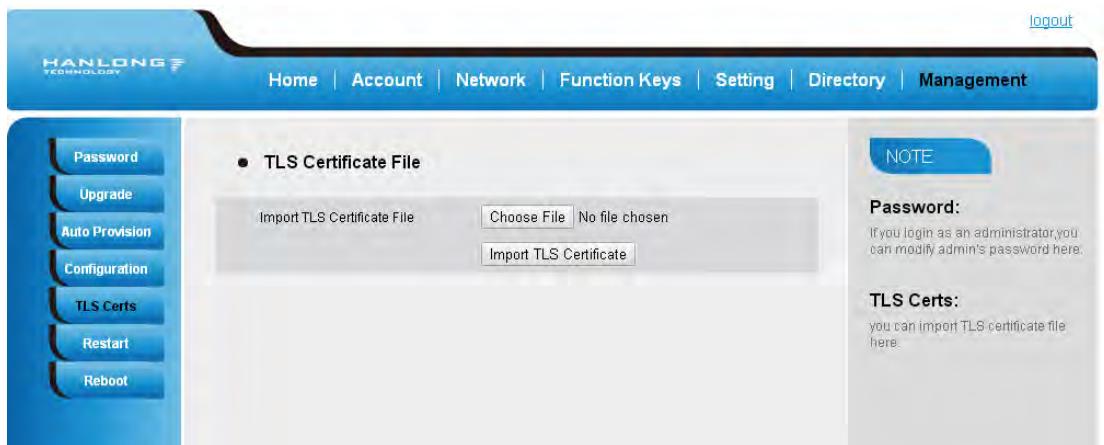

How to use Vlan?

- For Vlan information, please click [VLAN Note](#)

How to use LLDP?

- For LLDP information, please click [VLAN Note](#)
- VLAN Notes including:
 1. Voice VLAN
 2. Major Benefits of Using VLANs
 3. VLAN discovery method on hanlong ip phones
 4. LLDP Feature on Hanlong IP Phones
 5. Supported TLVS of IP Phones
 6. Configuring LLDP Feature
 7. DHCP VLAN
 8. Open the DHCP VLAN on the Hanlong IP Phones
 9. VLAN under Bridge Mode
 10. VLAN underNAT Mode

How to Set LCD and Web GUI:

- Click [LCD and Web GUI custom Guide](#)

How to Upgrade via FTP?

- Click [How to Upgrade Note](#)

How to make Ringtone?

- Click [How to Make Ringtone](#)

How to use Open VPN?

- Click [Open VPN note](#)

Provisioning Guide on Free PBX:

- Click [Set Auto Provision on FreePBX](#)

Failover Notes

- Click [Failover Note](#)

How to Upload Wallpaper?

- Click [Wallpaper Upload Notes](#)

How to Use Auto Provision Phonebook?

- Click [About AP Phonebook](#)

All Documents

- Click [Documents Guide](#), you can get all tech files.