
Wireless Z-Wave Control ZRP-110NA **Z-Wave Repeater**

USER MANUAL



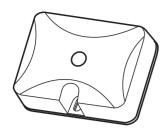

Introduction:

Thank you for choosing ZRP-110 Z-Wave Repeater product. ZRP-110 is a Z-Wave repeater with best RF performance to replicate Z-Wave signals in a network. The repeater re-transmits an input Radio Frequency (RF) signal by routing the signal around obstacles and radio dead spots to ensure that the signal is received at its

ZRP-110 is a security enabled Z-Wave plus device. A security Enabled Z-Wave Plus Controller must be used in order to fully utilize the product.

Glossary


Device or Node	ce or Node Devices and nodes are all terms to describe an individual Z-Wave device. These are all interchangeable when setting up your Z-Wave network.	
Inclusion	Add a Z-Wave device to the network.	
Exclusion	Remove a Z-Wave device from the network.	
Remove	To take a device out of a group, scene or association group while that device still exists in the same Z-Wave network.	
Network Wide Inclusion (NWI)	Network Wide Inclusion (NWI) enables both end-user friendly, Plug and Play like Z-Wave network installation as well as professional installation scenario where the inclusion process, in terms of time will be reduced significantly. NWI is a feature supported by a new frame type named Explorer which enables the Z-Wave protocol to implement Adaptive Source Routing.	
Z-Wave Network	A collection of Z-Wave devices is controlled by primary and secondary controllers operating on the same system. A Z-Wave network has its own unique ID code so that controllers not in the network cannot control the system.	
Primary Controller	The first controller is used to set up your devices and network. Only the Primary Controller can be used to include or remove devices from a network. It is recommended that you mark the primary controller for each network for ease in modifying your network.	
Association	Association is used to organize nodes in different groups allowing the device to identify the nodes by a group identifier. The groups can also be copied to other devices.	
Security S2	Security S2 enables secure communication for the devices that run for years on a single battery.	


Key Features:

- Supports Network Wide Inclusion (NWI) and Explore Frames
- Reliable and best RF performance to repeat Z-Wave signals
- Ultra-low power consumption
- Complex, thin and small size form factor
- Does not block lower outlet when plugged into upper outlet of a duplex wall receptacle and vice versa
- External fixture for different wall receptacle mounting


Product Overview

- A Status LED
- B PROG Push buttor C Fixing hole
- E External screw fixture Washer





D AC plug



Installation Location

WARNING:

To avoid fire, shock, or death; turn off power at circuit breaker or fuse and test that power is off before dismount or mount the unit with the screw!.

In case that the user needs to mount the unit with screw, please refer to below figures and select the desired configuration. It is recommended that a qualified electrician perform this installation.











Grounded AC outlet

When plug the ZRP-110 into the AC receptacles, there will be an air gap between ZRP-110 and wall plate. User can use additional 1 or 2 washers to fill up this air gap and to stabilize the installation.

ZRP-110 will not block lower outlet when plugged into upper outlet of a duplex wall receptacle and vice versa. Possible configurations are illustrated below

Grounded AC outlet Un-grounded Grounded AC outlet with AC outlet with center screw lower screw center screw 0 0 0 AC outlet (11) Installed at lowe AC outlet 0 0 0

Z-Wave setup and operations

Include/Exclude ZRP-110 to/from a Z-Wave Gateway Include or Exclude the ZRP-110 from the existing Z-Wave Home Control Network with your primary controller.

- Refer to your primary controller instructions to process the inclusion / exclusion setup procedure.
- When prompted by your primary controller, triple click the PROG button within 1
- second.
- The primary controller should indicate that the action was successful. If the controller indicates the action was unsuccessful, please repeat the procedure.

Notes:

- 1. It is recommended to perform the Remove (Exclude) procedure before performing an Add (Include) procedure
- 2. The unit will enter classical inclusion/exclusion first, then jump to NWI, and after 20 seconds, it will finally exit NWI mode automatically if there is no inclusion/ exclusion request.
- 3. ZRP-110 will not support Basic Command Class
- 4. All configuration parameters value will keep no change after exclude the unit from network

The Below listed Command Class are all supported the Security S2 COMMAND_CLASS_ASSOCIATION COMMAND CLASS ASSOCIATION GRP INFO COMMAND_CLASS_DEVICE_RESET_LOCALLY COMMAND_CLASS_MANUFACTURER_SPECIFIC COMMAND_CLASS_POWERLEVEL COMMAND_CLASS_SUPERVISION COMMAND_CLASS_VERSION

LED Indication Status

Operations	LED Indication Status
Device not currently paired into a Z-Wave network	LED will continuously flash two times per second.
Learning / NWI mode: Triple click on PROG button	If the device already existing in the network, LED will flash slowly for 20 seconds, and then return to previous ON or OFF status. If the device does not exist in the network, LED will keep flash slowly and waiting for Network Wide Inclusion (NWI) (The device will exit NWI mode automatically after 20 seconds)
Receive command / Send command or data	LED will flash 2 times, and then return to previous ON or OFF status.
Configure command error	LED will rapidly flash 6 times, and then return to previous ON or OFF status.

Restoring Factory Defaults

All Configuration Parameter values and Association information will be restored to factory default settings and excluded from the network.

Step	Setup Key	LED Indication Status on ZRP-110
1	Press and keep holding the PROG button for not less than 10 seconds.	- LED state will toggle for first 5 seconds of being pressed. - LED state will toggle again after the remaining 5 seconds.
2	Release the PROG button then triple click the PROG button within 2 seconds of step 1.	LED will stay in previous ON or OFF status.

Support for Association Groups

ZRP-110 supports 1 association group Association Group #1

Association Group #1 (max. 1 node) is default to associate with the primary controller (Gateway/Hub/Controller) for Z-Wave Repeater Status change report, refer to below

a) Device Reset Locally Notification (Only report when the Z-Wave Repeater has been

Wireless Information

Wireless range:

This device has an open-air line-of-sight transmission distance of 40m, which is compliant with Z-Wave Plus standards. Performance can be vary depending on the type of obstacles, such as walls and furniture, between the Z-Wave devices. Every Z-Wave device set up in your network will act as a signal repeater, allowing them to talk to each other and to find alternate routes in the case of reception dead spots caused by these obstacles.

Radio frequency limitations:

- 1. Each wall or object (i.e.: refrigerator, bookshelf, large TV, etc) can reduce the maximum range by up to 20 to 30%. Plasterboard and wooden walls will have less effect on the signal than concrete, brick, or tile.
- 2. Wall mounted Z-Wave devices will also suffer a loss of range if they are housed in metal junction boxes, which could reduce the range by up to 20 to 30%

Maintenance

- 1. Do not expose your unit to dust, strong sunlight, humidity, high temperatures or mechanical shocks.
- 2. Do not use corrosive or abrasive cleansers on your unit
- 3. Keep the unit dust free by wiping it with a soft, dry cloth.
 4. Do not disassemble your unit; it contains no user-serviceable parts.

Technical Specifications

Model no.	BW8141US (ZRP-110NA)
RF frequency	908.42MHz
Input voltage / frequency	120Vac / 60Hz
Input power and current	0.5W / 12mA @ 120Vac
RF operating distance	up to 40m (line of sight between the Wireless Controller and the closest Z-Wave receiver module at open area)
Dimension (L x W x T)	64 x 48 x 23mm
Weight	50g
Storage Temperature	-10~60 °C
Operation Temperature	0~40 °C
Relative Humidity:	5~95%
Environment	Indoor use only

Note: Specifications subject to change without notice due to continuing product improvement

Certifications

UL Listed:

This power unit is intended to be correctly orientated in a vertical or floor mount position

FCC Information

FCC ID : 2ADPENNG001

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired of

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Notice: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment

IC information

IC: 12524A-NNG001

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditionssuivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Warnings

- Do not modify the unit in any way.
- Risk of fire.
- Risk of electrical shock
- Risk of burns.
- Do not dispose of electrical appliances and unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available
- There is no user serviceable parts in this unit

Warranty

ONE-YEAR LIMITED WARRANTY: Remotec warrants this product to be free from defects in materials and workmanship under normal use and service for a period of one year from the original date of purchase from the distributor or dealer

REMOTEC shall not be liable for:

- damages caused by defective devices for indirect, incidental, special, consequential or punitive damages, including, inter alia, loss of profits, savings, data, loss of benefits, claims by third parties and any property damage or personal injuries arising from or related to the use of the device.
- Service trips to provide instruction on product use.
- Shipping costs for replacement products

This warranty is limited to the repair or replacement of this product only, if the purchase date cannot be substantiated, the warranty period will begin on the date of manufacture as indicated on this product. All warranty claims must be made to Remotec appointed distributors or dealers during the applicable warranty period. This warranty gives you specific legal right and you may also have other rights which vary in each country.

Website: http://www.remotec.com.hk

Printed in China F820-8141-0000