



THE HUBSAN X4 FPV BRUSHLESS

ITEM NO.: H501S
FOLLOW ME FUNCTION AND RTH FUNCTION SEE PAGE 17-19

HubSAN FPV X4 Brushless

V1.0 2015.01

Please read the instruction manual carefully!

IMPORTANT SAFETY NOTES

OPERATION:

Be extremely careful and responsible when using the FPV X4 . Small electronic components can be damaged by crashing or by dropping the X4 in water. To avoid further damage to the unit, people, or property, damaged spare parts should be replaced in time.

Flight:

- Take responsibility for your safety and the safety of others when you fly the X4 !
- Do not fly the X4 in crowded places. It needs plenty of space to operate.
- Do not fly in bad weather.
- Never try to catch the X4 while it is in flight.
- This model is intended for experienced pilots age 14+.
- Power off the X4 after flight, to prevent the propellers from causing injuries.
- Always remove the battery after you stop flying to avoid injuries from accidentally powering on the motors.
- Always use great caution to protect yourself when near the propellers. The flight system will start after
- power on regardless of the transmitter signal. The high speed propellers are very dangerous.

Power off the X4 after every flight or the propellers may still rotate and cause injury.

SYMBOL EXPLANATION

 No operating  Important Notice  Instruction  Explanation, reference

USAGE ADVICE

HubSAN provides you with two files

1. "Disclaimer"
2. "User Manual"

Please view the instruction videos and Disclaimer first, then read the manuals.

LIPO BATTERY SAFETY NOTES

If the X4 doesn't in use for a week or more, please store the battery approximately 50% charged to maintain battery performance and battery life.



SAFETY ADVISORY NOTICE

Lithium-Polymer (LiPo) Batteries

LiPo batteries are different from conventional batteries in that their chemical contents are encased in a relatively lightweight foil packaging. This has the advantage of significantly reducing their weight, but does make them more susceptible to damage if roughly or inappropriately handled. As with all batteries, there is a risk of fire or explosion if safety practices are ignored:

- Charge and store LiPo batteries in a location where a battery fire or explosion (including smoke hazard) will not endanger life or property.
- Keep LiPo batteries away from children and animals.
- Never charge the LiPo battery that has ballooned or swelled.
- Never charge the LiPo battery that has been punctured or damaged.
- After a crash, inspect the battery pack for signs of damage. Discard in accordance with your country's recycling laws.
- Never charge the LiPo battery in a moving vehicle.
- Never overcharge the LiPo battery.
- Never leave the LiPo battery unattended during recharging.
- Do not charge LiPo batteries near flammable materials or liquids.
- Ensure that charging leads are connected correctly. Reverse polarity charging can lead to battery damage, fire, or explosion.
- Have a suitable fire extinguisher (electrical type) OR a large bucket of dry sand near the charging area . Do not try to extinguish (LiPo) battery fires with water.
- Reduce risks from fire/explosion by storing and charging LiPo batteries inside a LiPo charge sack.
- Protect your LiPo battery from accidental damage during storage and transportation. (Do not put battery packs in pockets or bags where they can short circuit or can come into contact with sharp or metallic objects.)
- If your LiPo battery is subjected to a shock (such as a crash), place it in a metal container and observe for signs of swelling or heating for at least 30 minutes.
- Do not attempt to disassemble, modify, or repair the LiPo battery.

INDEX

IMPORTANT SAFETY NOTES	02	
SYMBOL EXPLANATION	02	6. START TO FLY
USAGE ADVICE	02	6.1 The Flight Environment
LIPO BATTERY SAFETY NOTES	03	6.2 Check Before Flying
INDEX	04	6.3 The Link Of The Transmitter And The Quad Copter
INTRODUCTION	05	6.4 Compass Calibration
1 ITEMS INCLUDED IN THE BOX	05	7. START/ STOP THE MOTORS
2 QUAD COPTER	06	8. BASIC FLIGHT
2.1 Flight Control System Introduction	06	9. ADVANCED PERFORMANCE SETUP
2.2 Quad Copter Motor Led Indicator	06	9.1 Reversing channel setup
3 QUAD COPTER BATTERY	07	9.2 Sensitivity set up
3.1 Introduction	07	9.3 Set manual setup
3.2 Install the Battery	07	9.4 Headless Mode
3.3 Charging	07	9.5 Follow Me Mode
4. PROPELLER	08	9.6 RTH MODE
4.1 Introduction	08	9.7 FAILSAFE MODE
4.2 Assembly	08	10 OPTIONAL TRANSMITTER
4.3 Disassembly	08	H501S TROUBLESHOOTING
5. Transmitter	09	
5.1 Input key function	10	FCC Information
5.2 Install the TX battery	11	
5.3 Transmitter calibration	11	
5.4 Frequency selectable 5.8Ghz	12	

INTRODUCTION

Thank you for buying the HUBSAN quad copter. The X4 quadcopter is designed as an easy-to-use, full-featured RC model, capable of hovering, fast forward and aerobatic flight maneuvers. Please read the manual carefully and follow all the instructions. Be sure to retain the manual for future reference, routine maintenance and tuning.


FPV: First Person View Function enables you to experience every live moment of the flight from the quad's view.

1. ITEMS INCLUDED IN THE BOX

Check all the items in the box before use.

S/N	Part Name	Photos	Q'ty	Remarks
1	Quad copter		1PC	Equipped with smart flight controller, GPS and compass
2	Propellers		8PCS	Propeller A 4pcs, Propeller B 4pcs
4	Transmitter		1PC	FPV Transmitter, equipped with 4 X AA battery (Not included)
5	7.4V LiPo battery		1PC	For quad copter
7	LiPo Balance charger		1PC	Use to recharge the LiPo battery
6	LiPo Charger Adapter		1PC	110-240V
9	4G TF card		1PC	Inserted into the quad copter
3	Assistant wrench		1PC	For removing propellers
8	User Manual		2PCS	Disclaimer Hubsan X4 Instruction Manual

2. QUAD COPTER

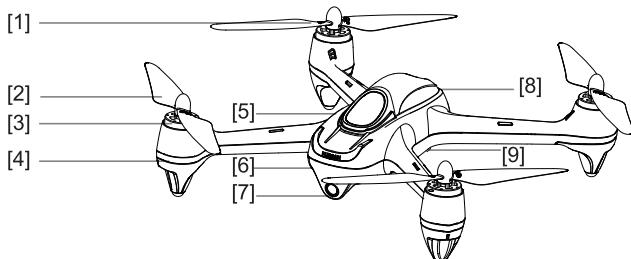

[1] Propeller B [2] Propeller A [3] Motor [4] Motor LED indicator [5] Upper body shell
[6] Lower body shell [7] 1080P HD Camera [8] Battery compartment [9] TF card plug

2.1 FLIGHT CONTROL SYSTEM INTRODUCTION

The quad copter's flight control system with a built-in GPS and compass that is used to control the quad copter's functions such as ascend and descend, pitch and roll.

Modules on flight control system	Function
Main Control Module	CPU of the flight control system, connects to all the modules for central control processes.
IMU Module	Includes inertial sensor, stabilizes flight; includes a barometer to measure the flight altitude.
GPS & Compass Module	Position hold and Navigation.
LED indicator	Indicating the flight control system's condition.

2.2 QUAD COPTER MOTOR LED INDICATOR

Indicator Status:

1. Power on: 4 LED indicators blink in white simultaneously
2. Compass calibration: 4 LED indicators blink in yellow cycling
3. Flight : 4 LED indicators blink simultaneously, 2 front LED indicators keep blink in white and the 2 back LED indicators blink colors are as following:
 - 1) Standard: blink in yellow
 - 2) GPS : blink in green
 - 3) HOME: blink in blue
 - 4) Battery in low capacity: blink in red


3. QUAD COPTER BATTERY

3.1 INTRODUCTION

The quad copter battery is a rechargeable lipo battery with 2700mAh capacity and 7.4V voltage. The battery should only be charged with the HUBSAN charger.


3.2 INSTALL THE BATTERY

Push the battery into the battery compartment correctly and connect the battery plugs in correct polarity. Close the battery compartment cover.

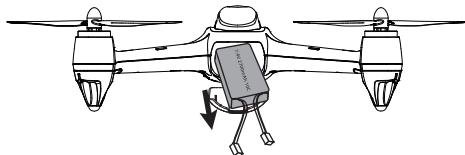

3.3 CHARGING

Connect the battery to the balance charger and wall charger. The balance charger indicator is in solid red when charging and turns solid green when the battery is fully charged. It takes around 150 minutes to finish the complete charge.

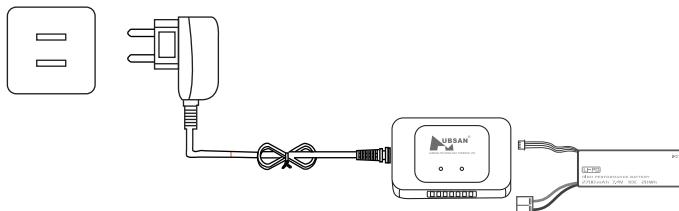

Pls fully charge the batteries to avoid loss of control due to low voltage

4. PROPELLER


4.1 INTRODUCTION

The quad copter uses the 7.3-inch propellers which are marked by A and B. Damaged propellers should be replaced in time to maintain the good performance.

	propeller A	propeller B
Diagram		
Installation Position		
Symbol explanation	 LOCK: In this direction, tighten the propeller onto the motor shaft	 UNLOCK: In this direction, remove the propeller from the motor shaft

4.2 ASSEMBLY

Assemble the propellers on the motor threads that marked the same letter and lock them according to the instruction way.

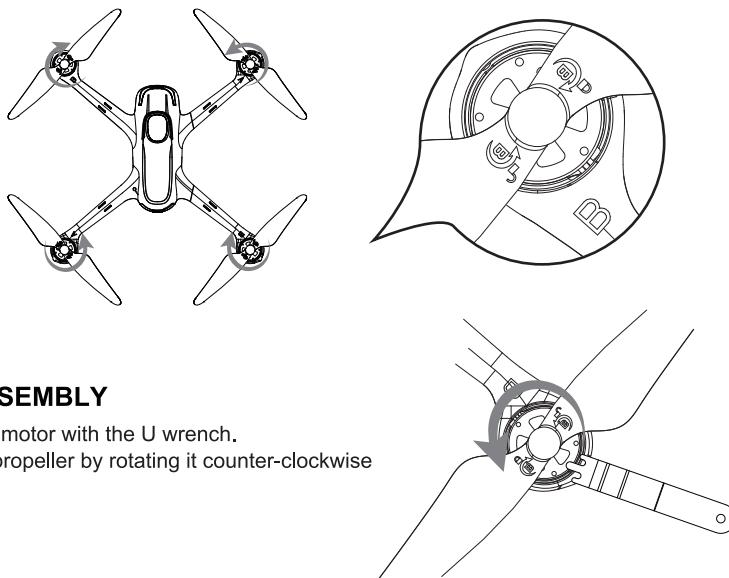


4.3 DISASSEMBLY

Deadlock the motor with the U wrench.



Remove the propeller by rotating it counter-clockwise to unlock.

- The propellers are designed to tighten automatically. Do not overtighten the screws and do not use any type of screw glue.
- Make sure that the A and B propellers are installed correctly. The X4 will not fly if propellers are improperly installed.
- Wear gloves when install the propellers to avoid scratches from the thin, sharp propellers.

5 TRANSMITTER

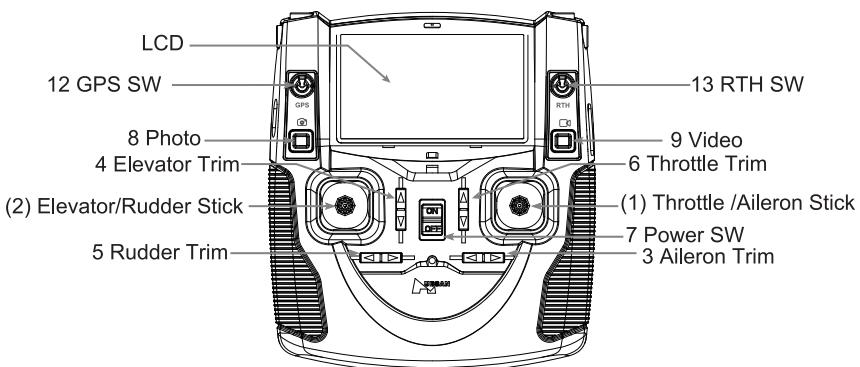

(MODE 1)

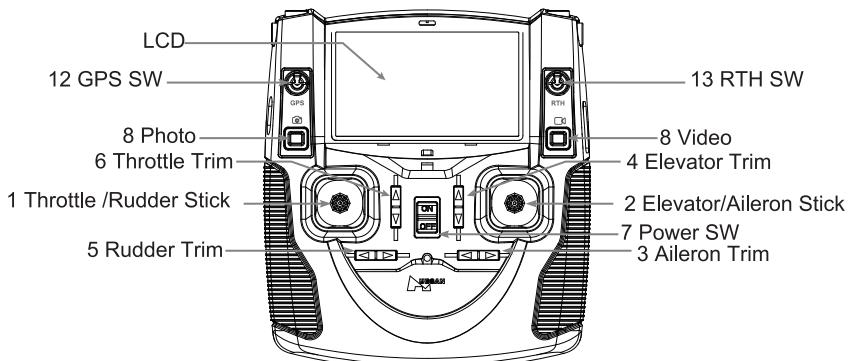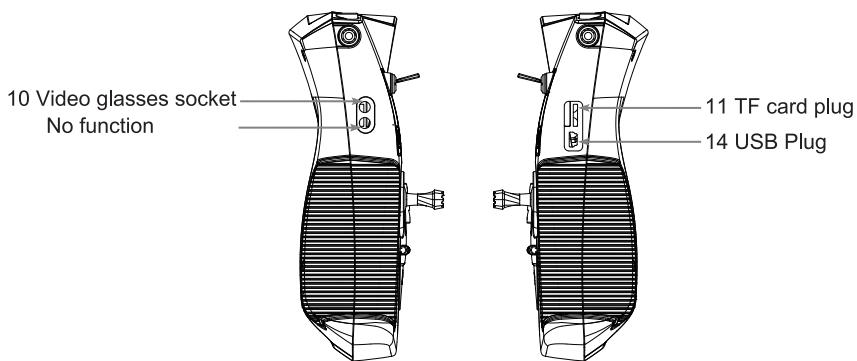


(MODE 2)

5.1 INPUT KEY FUNCTION

S/N	Mode/ Control	Function
(1)	MODE 1 Throttle/Aileron Stick	Push the stick forward or backward and the quadcopter will ascend or descend; Push the stick left or right and the quadcopter will fly left or right.
(2)	MODE 1 Elevator/Rudder Stick	Push the stick forward or backward and the quadcopter will fly forward or backward; Push the stick left or right and the quadcopter will rotate in counter clockwise or in clockwise.
1	MODE 2 Throttle/ Rudder Stick	Push the stick forward or backward and the quadcopter will ascend or descend; Push the stick left or right and the quadcopter will rotate in counter clockwise or in clockwise
2	MODE 2 Elevator /Aileron Stick	Push the stick forward or backward and the quadcopter will fly forward or backward; Push the stick left or right and the quadcopter will fly left or right
3	Aileron Trim	Aileron trim adjusts for left and right drift.
4	Elevator Trim	Elevator trim adjusts for forward and backward drift.
5	Rudder Trim	Rudder trim adjusts for drift of left and right rotation or yaw.
6	Throttle Trim	Throttle trim normally left at neutral. The lower trim turns LEDs on and off.
7	Power Switch	Push to ON to turn on the transmitter. Push to OFF to turn off.
8	Photo	Press the photo button to shoot a photo;
9	Video	Press video button and start the record and press again to stop
10	Video glasses socket	Connect Hubsan video glasses, which not included and need purchase
11	TF card plug	The TF card can be inserted into the card plug on the TX or the quad copter. (Recommend on the quad copter)
12	GPS SW	Push the switch up, the bulit-in GPS will calculate the quad copter's position and height and help to lock the quad copter in a stable hover (ONLY FOR OUT DOOR)
13	RTH SW	Push the switch up, the quad copter will return to the takeoff point automatically (ONLY FOR OUT FOOR)
14	USB plug	Only for engineer to upgrade the software, please do not use it to connect computer

5.2 INSTALL THE TX BATTERY

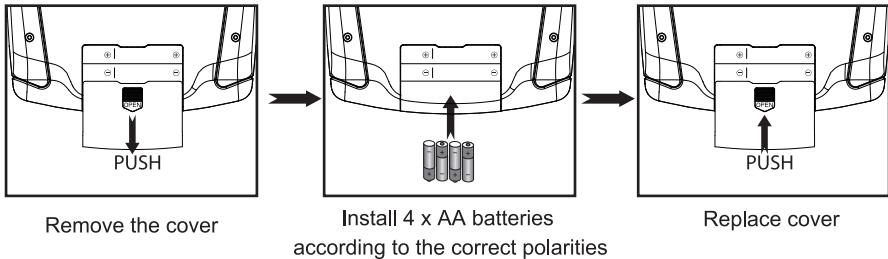


- Do not mix old and new batteries
- Do not mix different types of batteries
- Do not charge non-rechargeable battery.

5.3 TRANSMITTER CALIBRATION

Mode 2: Push both sticks to the upper left position and power on the transmitter simultaneously, rotate both sticks twice. Hold down any trim until the LED on the transmitter blinks in red, indicating a successful calibration.

Mode 1: Push the left stick to the upper left position and right stick to the upper right position and power on the transmitter simultaneously, rotate both sticks twice. Hold down any trim until the LED on the transmitter blinks in red, indicating a successful calibration.

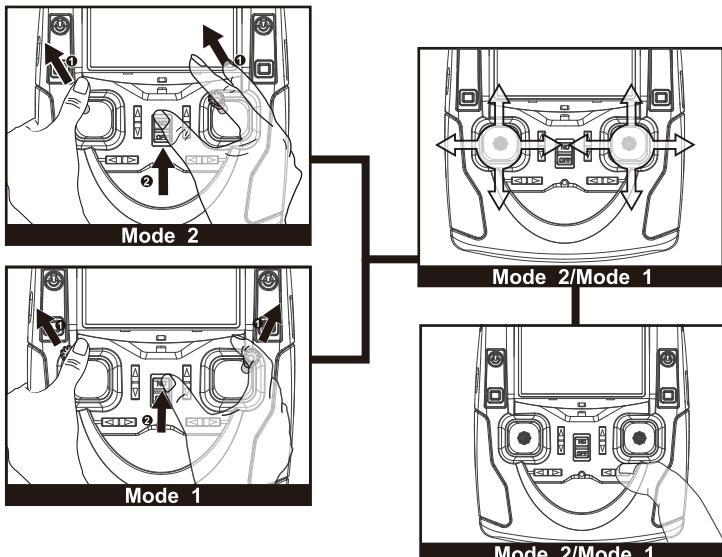

You can change the mode as you like by following the above method.


Notice :

1. The video will stop when the transmitter battery is low.
2. When the SD card is full, it can't record anymore and the screen will display "SD Full".
3. It is best to use a 4G+, and class 4+ SD card. Format in the transmitter before use.
4. When the power on the transmitter is low, the red LED will blink quickly and the LCD screen will turn black. The transmitter and X4 will not bind if the batteries are low. Please replace with new batteries.
5. If the batteries in the transmitter are running low whilst flying the X4, you will still have control. Please land the X4 and then replace batteries in the transmitter.
6. The Transmitter can only use 4XAA batteries or NI-MH AA batteries, other batteries will damage the Transmitter.

5.4 FREQUENCY SELECTABLE 5.8GHZ

The transmitter will automatically find the best frequency to ensure a quality live video transmission. In case any interference, please re-select the frequency from 5730MHZ to 5845MHZ to get a better video transmission.

Pull the throttle stick to the lowest position and long press the Elevator stick to enter into the MAIN MENU interface. Push the Elevator stick up/down to select "5.8G Frequency", push the stick right to enter into the " 5.8G frequency" interface, select a matched frequency.

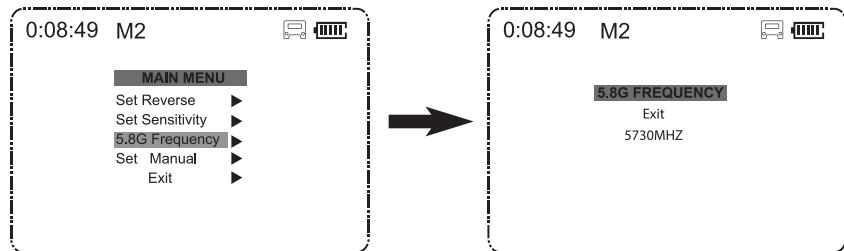

6. START TO FLY

When assembly is finished, please allow yourself to get some practices or trainings before the first flight. Flight simulators are highly recommended. Please fly your X4 in a safe and open place.