



TS1921 Occupancy Sensor

Installation Guide





Table of Contents

1	What is in the box?	4
2	Sensor Overview	5
3	Pairing the Sensor	6
4	Mounting the Sensor on the wall	10
5	Placing the Sensor on a flat surface	11
6	Ready for use	12
7	Changing Occupancy Detection settings on the Portal	13
8	Occupancy Detection	14
9	Connectivity	19
10	Specifications	20
11	Environmental-Friendly Features	22
12	Replacing the battery	23
13	Troubleshooting	24



Welcome!

Thank you for choosing the TrickleStar TS1921 Occupancy Sensor.

This Occupancy Sensor is an accessory for the TrickleStar Wi-Fi Smart Thermostat. The Sensor helps the Thermostat to maximize comfort to your room as the sensor can detect occupancy as well as measure the temperature in the room. Maximum 6 sensors can be connected to the thermostat via bluetooth.

This Installation Guide describes how to install the Sensor and pair it to a TrickleStar Wi-Fi Smart Thermostat.

If you have any inquiries about TrickleStar products or need technical support, visit our website for tutorials, videos and Frequently Asked Questions (FAQ). You can also contact us by email or phone.

Website: www.tricklestar.com

Email: customer.service@tricklestar.com

Toll Free: 1-888-700-1098

Instruction Videos

If you want to see the Installation Instructions as videos, visit our YouTube channel:


<https://www.youtube.com/user/TrickleStarUS/>






Preparation


What is in the box?

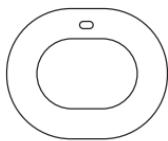

Occupancy
Sensor

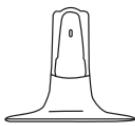

Stand



Double-sided
adhesive




QR code sheet




Lithium cell battery
(CR2477X x 1)



Sensor Overview

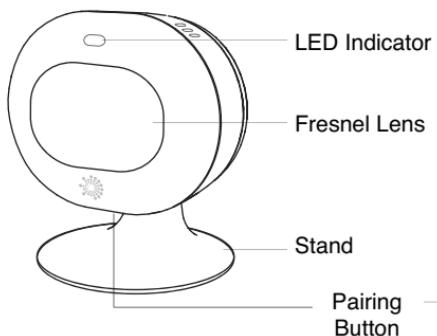


Battery Cover




Top View

Pairing
Button



Bottom View

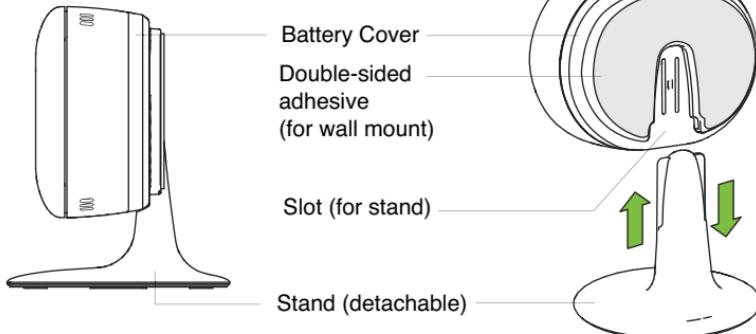





Pairing the sensor

Step 1: Pull the plastic tag

To power up the Sensor, pull out the plastic tag from the Sensor gently.

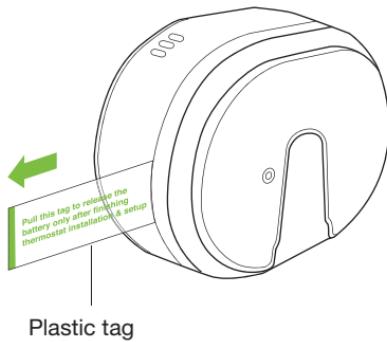


When the Sensor is powered up, it enters Pairing mode automatically. The LED starts blinking and continues blinking up to eight minutes.

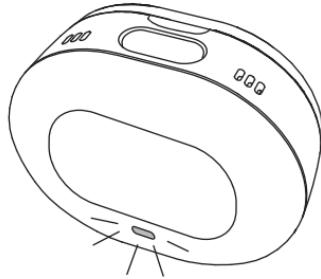



If the LED does not blink after the Sensor is powered up or after battery insertion or the Sensor exits Pairing mode after eight minutes, hold the Pairing Button for 2 seconds to re-initiate pairing to the thermostat. The sensor will enter Pairing mode again and broadcast itself for 8 minutes for thermostat scanning. LED will blink briefly in the mode.

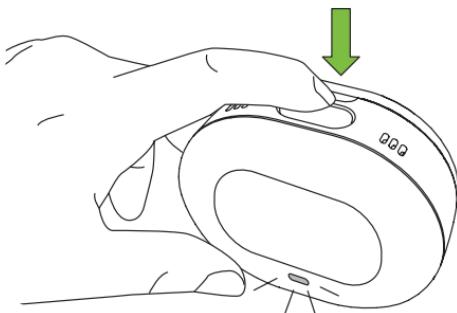

Step 2: Add Occupancy Sensor to the system

1. Log in to your TrickleStar Portal account at: portal.tricklestar.com You can also use the QR code here.
2. At Dashboard screen, select Devices, then click on your Thermostat Name to enter Thermostat page.
3. Select Sensors on the left panel, then click on “+” to add a new sensor.
4. Enter the name for your sensor.




5. Press Next once your sensor LED is blinking to complete the pairing process. This will initiate a scan function and Thermostat will scan for sensors in range. Sensors that are detected will be listed by their MAC addresses. User can select from the list if there is more than one sensor to be paired and add the sensors. Note: It may take up to 30 seconds to detect and pair a new sensor.
6. Once your sensor is successfully added, the Connection Status, Temperature and Occupancy State will be "Not Used". Wait for 1-2 minutes then click on the "Refresh Sensor Data" button to update the sensor readings.

A screenshot of the TrickleStar mobile application interface. The top navigation bar includes the TrickleStar logo, a back arrow, the device name 'TS09', and user information 'John'. The main title is 'Thermostat - Sensors'. The left sidebar has a 'Sensors' tab selected, along with 'Control', 'Modes', 'Schedules', 'Settings', and 'Services'. The main content area shows a table of sensor data with the following columns: Sensor Type, Name, Humidity, Temperature, Occupancy, Occupancy Detection, Status, and Weighting. There are two entries: 'Built-in' (Humidity 72%, Temp 84°F, Occupancy -, Status -) and 'Occupancy Sensor' (Name 'Sensor 01', Temp 84°F, Occupancy Occupied, Detection Enabled, Status Connected, Weighting 100%). A red box highlights the '+' button in the top right corner of the table header, which is marked with a red circle containing the number '6'. The bottom of the screen shows navigation icons and the text 'Showing 1 to 2 of 2 records'.



If pairing is successful, the LED will blink twice. Then, the Bluetooth indicator appears on the Thermostat display.

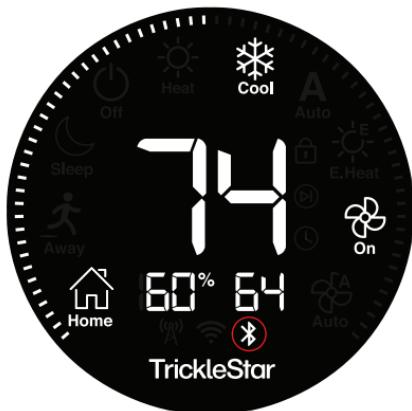

If pairing is unsuccessful or time-out after 8 minutes, the LED will stop blinking and the Sensor will go into standby mode. In Standby mode, the connection between the sensor and the thermostat is not set up. All the sensor circuits will be shut down to save power. Hold the Pairing Button for 2 seconds to initiate the Pairing mode again.




Note: If the sensor is previously registered, it will be added to the thermostat network automatically in Pairing mode. The sensor LED will blink twice, then Pairing mode finishes, and change to Normal mode. If disconnected, the sensor will change to Pairing mode automatically and try to reconnect with the thermostat. User can also press the pairing button to restart the sensor in Pairing mode.

Mounting the Sensor on the wall

Before you mount the Sensor on the wall, be sure to check that:

- The sensor is connected to the Thermostat.
- The sensor is mounted away from direct heating or cooling sources, such as a fireplace or an air ventilator.

Attach the double-sided adhesive to the Sensor. Then, mount the Sensor at a height of approximately 5 ft. (1.5 m) on the wall.

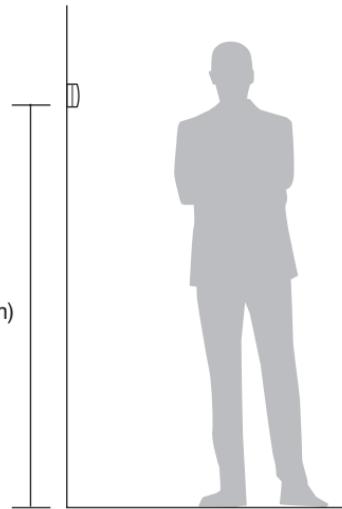


Placing the Sensor on a flat surface

Before you place the Sensor on a flat surface, be sure to check that:

- The sensor is connected to the Thermostat.
- The sensor is placed on an even surface and at a safe location.
- The sensor is facing the direction which you want to detect occupancy.

Attach the stand to the Sensor. Then, place the Sensor on a flat surface.

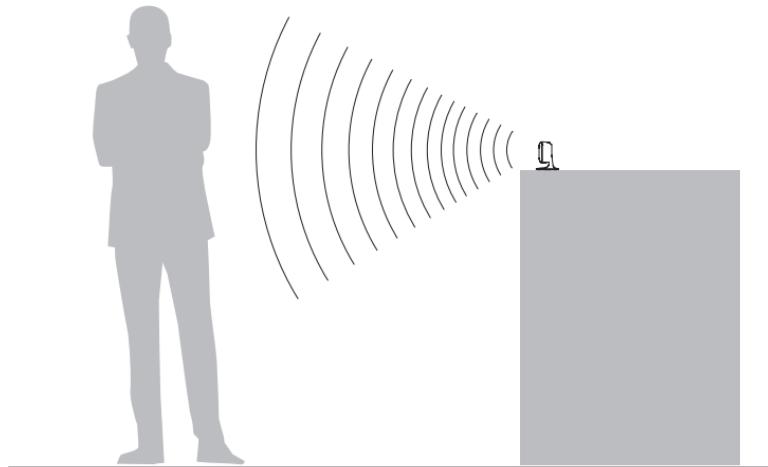


Ready for use

Normal mode

The Occupancy Sensor is now ready for use. In Normal mode, the connection between the sensor and the thermostat is set up. The sensor will automatically update the Connection Status, Room Temperature, Occupancy State and Sensor Battery Level in the Tricklestar Portal and Tricklestar App.

You can enable or disable the sensor detection LED operation in Normal mode through the TrickleStar Portal Sensor settings (Occupancy Detection LED). This option also disables the sensor detection LED by default, meaning the sensor LED will not blink when it detects a movement. If the LED is enabled, it will blink once when there is a confirmed movement detection in every 30 seconds interval.

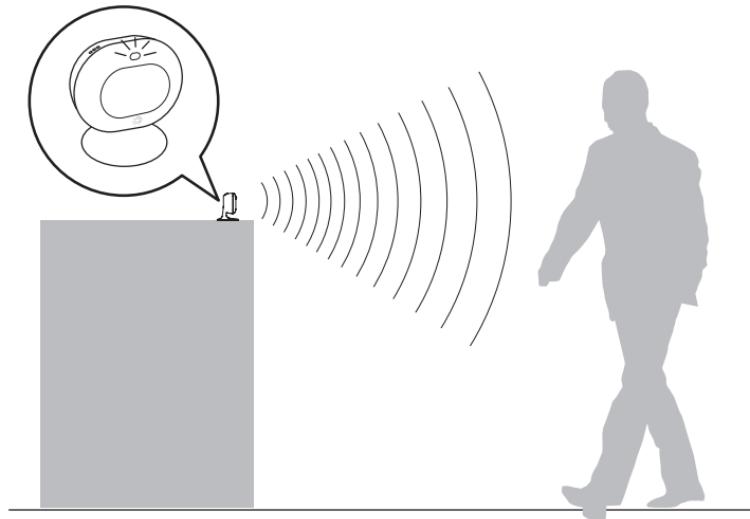



Occupancy Detection

The occupancy sensor is equipped with an occupancy detection function. It uses PIR sensor to detect the infrared signal of moving human bodies. You can also enable or disable the occupancy detection function for each sensor individually through the Portal or App. When disabled, the individual sensor detection circuit will be shut off and the occupancy states will not be available.

You can adjust the Absence Detection Sensitivity and Occupancy Detection Sensitivity, and enable or disable the Occupancy Detection feature of the thermostat. If disabled, regardless of any sensor output and individual sensor settings, the thermostat will ignore the occupancy status received and will not automatically change the Mode. However, it will not shut off the sensor detection circuit and you can still check the occupancy states for each sensor through the Portal or App.

The occupancy detection feature is enabled if:

- a) The Occupancy Detection is set to Enabled at the Portal.
- b) The Occupancy Detection of each individual sensor is set to Enabled at the Portal.
- c) The Sensor Status in the Portal is Connected.
- d) The active Mode is Home or Away (not Sleep).
- e) The Thermostat is on Schedule mode, not on Temporary/Permanent/Vacation Hold or when user has changed the Mode manually.



Changing Occupancy Detection settings on the Portal

This screenshot shows the 'Thermostat - Sensors' page in the TrickleStar Portal. The left sidebar is for device 'TS09' and the main content shows a table of sensors. A red box labeled '1' highlights the 'Sensors' tab in the sidebar. A red box labeled '2' highlights the gear icon in the top right corner of the main content area.

Sensor Type	Name	Humidity	Temperature	Occupancy	Occupancy Detection	Status	Weighting
Built-in		72%	84°F	-	-	-	100%
Occupancy Sensor	Sensor 01	-	84°F	Occupied	Enabled	Connected	100%



This screenshot shows the 'Thermostat - Sensor Settings' page in the TrickleStar Portal. The left sidebar is for device 'PPN02'. The main content is a configuration form for an 'Occupancy Sensor 1'. A red box labeled '3' highlights the 'Occupancy Detection' section. The entire configuration section is enclosed in a red box.

Thermostat Temperature Sensor

Weighting	100% (default)
Occupancy Sensor General Settings	
Occupancy Detection	Enabled
Absence Detection Sensitivity	5 minutes
Occupancy Detection Sensitivity	0 seconds (default)
Occupancy Detection Restart Time	0 minutes
Occupancy Detection LED	Enabled
Occupancy Sensor 1	
Name	Sensor 01
MAC Address	E2-FA-5D-27-66-EA
Serial Number	0941-O205-00098
Weighting	100% (default)
Occupancy Detection	Enabled
Status	Connected
Temperature	85°F
Occupancy	Occupied
Battery Voltage	2.99V



Occupancy detection algorithm

The thermostat changes the Mode automatically based on the received occupancy states from the sensors:

If the Mode is “Home”

You can set the Absence Detection Sensitivity as shown in the illustration above (Thermostat Sensor Settings). When the occupancy sensor detects no movement within the Absence Detection Sensitivity time set, the Mode will automatically change to “Away (set by sensor)” and follow your preset Away Mode setting as shown below:



Lounge

Devices > Lounge > Control

System: Heat

Fan: Auto

Schedule: No hold (run current schedule)

Mode: Away (set by sensor)



Thermostat - Modes


Devices > Lounge > Modes

#	Name	Set Temperature (Heat)	Set Temperature (Cool)	Set Fan (Heat)	Set Fan (Cool)	Used In
1	Home	68°F	78°F	Auto	Auto	Default Schedule
2	Away	64°F	Off	Auto	Auto	Default Schedule
3	Sleep	64°F	80°F	Auto	Auto	Default Schedule
4	Vacation	50°F	Off	Auto	Auto	Vacation Schedule



If the Mode is “Away”

You can set the Occupancy Detection Sensitivity as shown in the illustration above (Thermostat Sensor Settings). When the occupancy sensor detects a movement within the Occupancy Detection Sensitivity time set, the Mode will automatically change to “Home (set by sensor)” and follow your preset Home Mode setting as shown below:

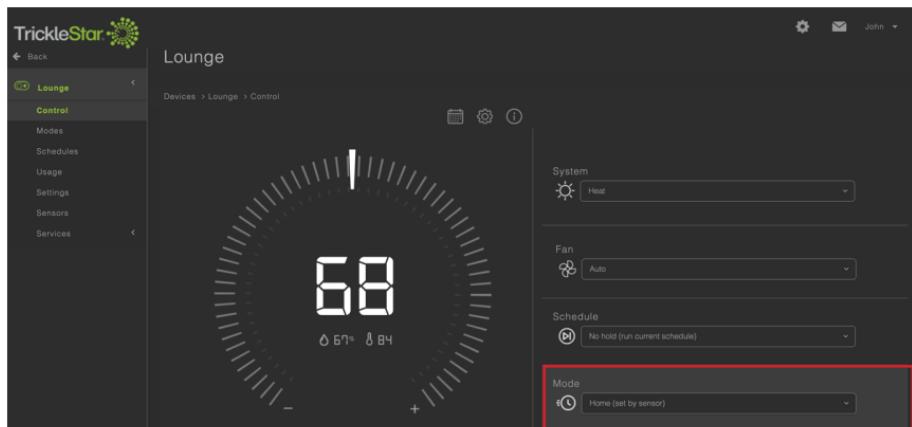

Lounge


Devices > Lounge > Control

System: Head

Fan: Auto

Schedule: No hold (run current schedule)

Mode: Home (set by sensor)

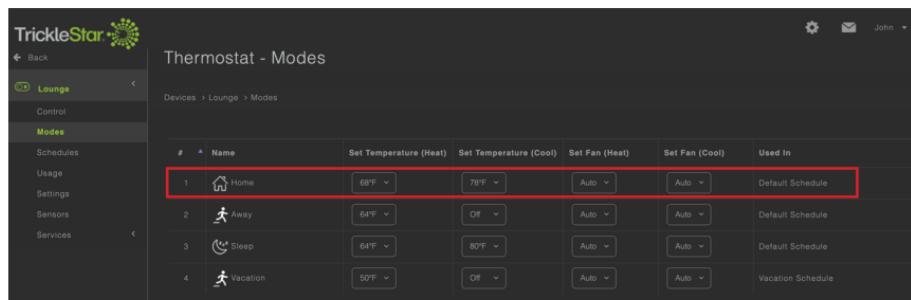

Thermostat - Modes

#	Name	Set Temperature (Heat)	Set Temperature (Cool)	Set Fan (Heat)	Set Fan (Cool)	Used In
1	Home	68°F	78°F	Auto	Auto	Default Schedule
2	Away	64°F	Off	Auto	Auto	Default Schedule
3	Sleep	64°F	80°F	Auto	Auto	Default Schedule
4	Vacation	50°F	Off	Auto	Auto	Vacation Schedule



If the Mode is “Sleep”
The thermostat will not change the Mode.

To cancel the Mode change
Press jog dial for 3 seconds to return to Schedule Mode.



Connectivity

- Bluetooth Low Energy (BLE v4.2) connection with the TrickleStar Wi-Fi Smart Thermostat
- Connection range: 98 ft. (30m)
- Data refresh rate: 30 seconds (Connection Status, Temperature, Occupancy State, Battery Voltage)

Specifications

Temperature range

Measurement	: 32°F to 104°F (0°C to 40°C)
Sensitivity	: 0.1°F (0.05°C)
Accuracy	: ±1°F (60°F to 80°F), ±2°F (any others)
Operating	: 32°F to 122°F (0°C to 50°C)

Humidity range

Operating	: 5% to 95% RH (non-condensing)
-----------	---------------------------------

Storage

Temperature	: -4°F to 140°F (-20°C to 60°C)
Humidity	: 5% to 95% RH (non-condensing)

Product dimension

(Width/Height/Depth) (Approx.)	: 2.4 in. x 1.9 in. x 1.1 in. (60.5 mm x 48.3 mm x 28.7 mm) (without the stand)
	: 2.4 in. x 2.5 in. x 1.1 in. (60.5 mm x 64.5 mm x 28.7 mm) (with the stand)

Product weight



(Approx.)	: 1.4 oz. (40.7 gm)
-----------	---------------------

Battery

Battery voltage measurement	: Yes
Battery voltage measurement resolution	: 0.1 V
Battery warning level	: 2.6 V
Battery critical level	: 2.3 V
Battery life	: 2 years

Detection Range

Occupancy detection method	: Passive Infrared (PIR)
Horizontal	: 36 ft. (11 m) (0°), 29.5 ft. (9 m) (+/- 30°), 16.4 ft. (5 m) (+/- 60°)
Vertical	: 6.6 ft. (2 m) (30° downward), 3.3 ft. (1 m) (45° downward)

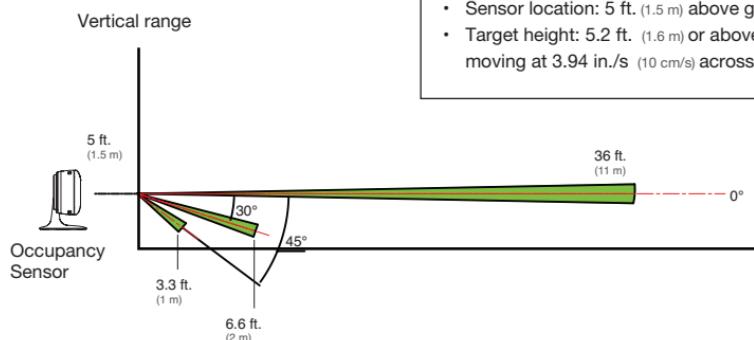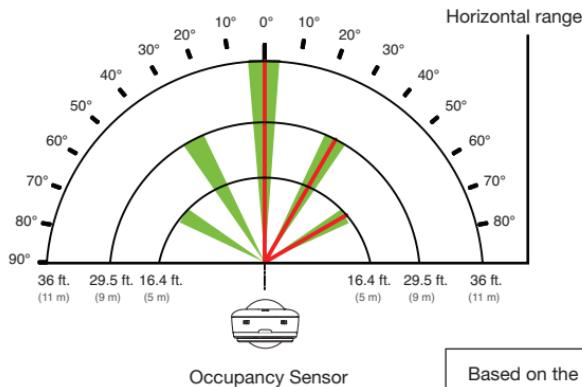



Environmentally-friendly features

- Recyclable packaging
- Mercury-free
- Arsenic-free
- PVC-free
- PBT-Free

Approvals

FCC, IC (REL) - Canada, UN 38.3, RoHS compliant



CA PROP 65


California Proposition Compliant



Replacing the battery

There is no low battery indication on the sensor. The Portal or App will send notification to remind you to change the sensor battery when the battery voltage drops to warning level (2.6 V) or critical level (2.3 V). When the voltage drops to Battery critical level or below, normal operation of the sensor cannot be guaranteed.

Remove the Battery Cover and replace the battery in the battery compartment. Put back the Battery Cover. The Sensor will automatically power up and reconnect to the TrickleStar Wi-Fi Smart Thermostat.

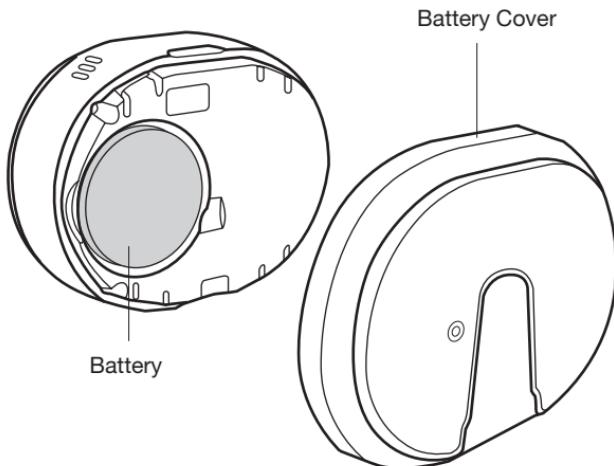



Troubleshooting

Symptom	Solution
The Occupancy Sensor does not pair with the TrickleStar Wi-Fi Smart Thermostat	<ul style="list-style-type: none">Check that the plastic tag has been pulled out fully from the Sensor and the sensor LED is flashing continuously.Check if the Sensor is within the Radio Frequency (RF) range of 98 ft.If the sensor LED does not flash, hold the Pairing Button for 2 seconds to initiate pairing to the Thermostat.
When you have added the Occupancy Sensor but the Connection Status, Temperature and Occupancy State is "Not Used"	Wait for 1-2 minutes, then click "Refresh Sensor Data" button to update the sensor readings.

If the problem persist, you can refer to the Frequently Asked Questions (FAQ) section on our website, or email or call our technical support:

Website: www.tricklestar.com

Email: customer.service@tricklestar.com

Toll Free: 1-888-700-1098



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID:2AG8Q-TS1921



IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC:7723A-TS1921

HVIN:TS1921



For technical support, go to:

Website: www.tricklestar.com

Email: customer.service@tricklestar.com

Toll Free: 1-888-700-1098

Patent Pending

© 2021 TrickleStar Inc.

TrickleStar® is a registered trademark of TrickleStar Ltd. All other trademarks are the property of their respective owners. The information in this document is subject to change without notice. TrickleStar assumes