



QUICK START GUIDE


RFID Access Control Reader

Applicable Model: ProID 101, ProID 102, ProID 103


Version: 1.2
Date: August 2023

Green
Label

1. Product Overview

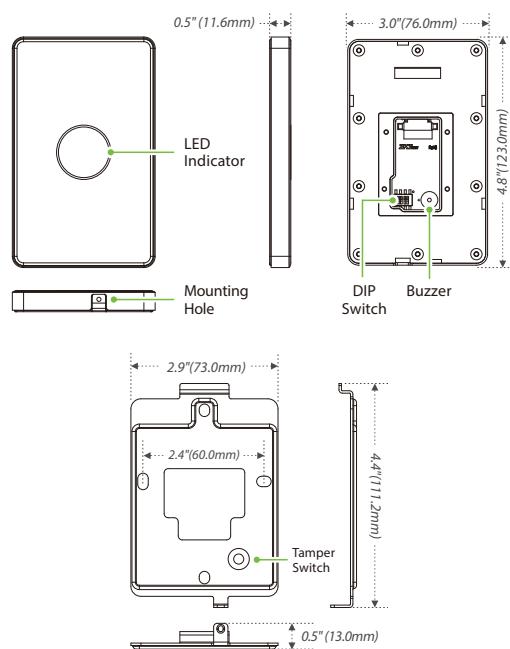


2. Terminal Block

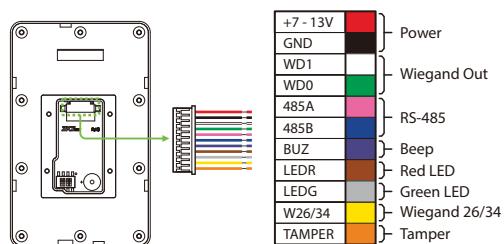

3. Device Installation

Install on the wall


- ① Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
- ② Secure the back plate on the wall with the wall mounting screws.
- ③ After passing the wires through the wiring hole and connecting them to the device, and then attach the device to the back plate from top to bottom.
- ④ Fasten the device to the back plate with a security screw.

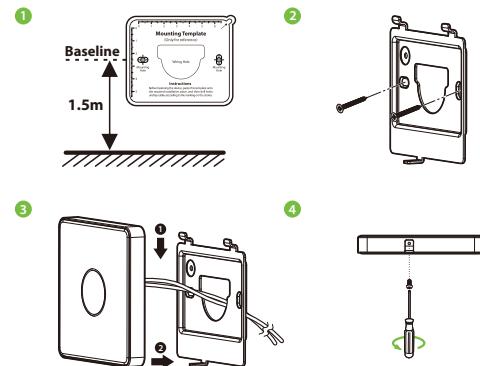

Mounting on the wall through Asian gang box










- ① Install the Asian gang box (or single gang box, mullion mount) into the wall.
- ② Fix the back plate onto the Asian gang box (or single gang box, mullion mount) using two wall mounting screws.
- ③ Pass the cables through the wire hole.
- ④ Then insert the device into back plate.
- ⑤ Use security screw to fasten the device to the back plate.

Note: The installation method of single gang box is the same as that of Asian gang box. Only Asian gang box installation method is illustrated as an example in this quick start guide.

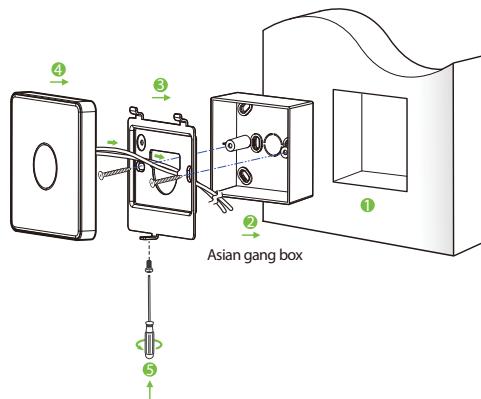


4. DIP Switch Settings

As shown in the table below, places 1-3 of the DIP switch are used to set the device number for RS-485 communication, and place 4 is for setting the RS485 termination resistance. If the RS-485 communication wire is longer than 100 meters, it is needed to set the 4th DIP switch of the last reader to **ON** state, that is parallel a terminal resistance of 120 ohm between 485+ and 485-.

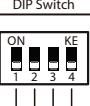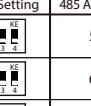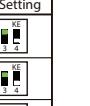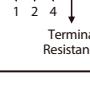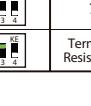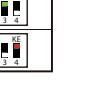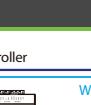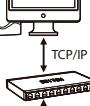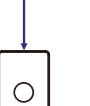DIP Switch	485 Address	Switch Setting	485 Address	Switch Setting
	1		5	
	2		6	
	3		7	
	4		Terminal Resistance	


5. Standalone Installation

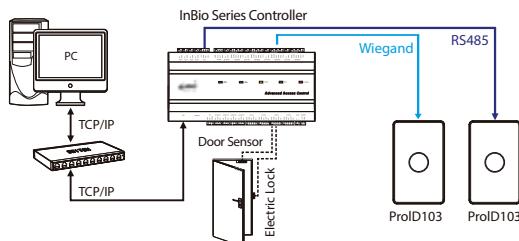

6. Controller Connection

This ProID series reader needs to be connected to a host machine in order to transmit card information via RS-485 or wiegand. The following is an example of the connection to InBio Series controller.


❖ Connect the controller via RS485

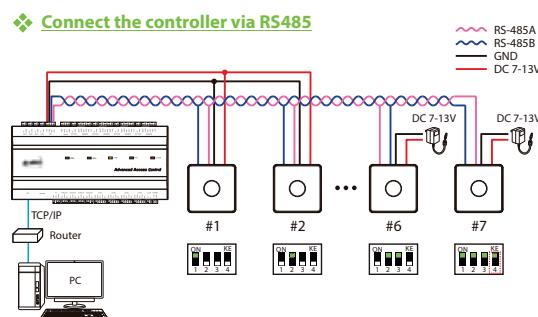


Notes:

1. A maximum of seven readers can be connected to one controller.
2. Before connecting RS-485 readers, open the rear panel of the reader and set the RS-485 address of the reader via DIP switch according to the connection of each reader.
3. If the RS-485 communication wire is longer than **100** meters, it is needed to set the 4th DIP switch of the last reader to **ON** state.
4. The DIP switch needs to be set with the controller powered off and takes effect after restart. After setting, the DIP switch does not need to be set back to its original position.

❖ Connect the controller via Wiegand

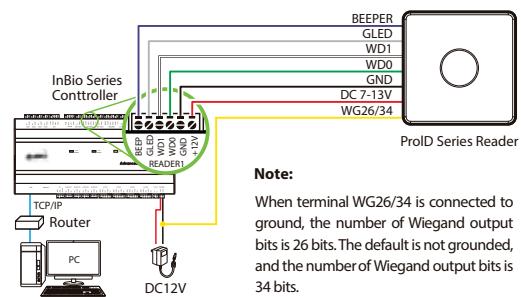


7. Access Control Device Connection

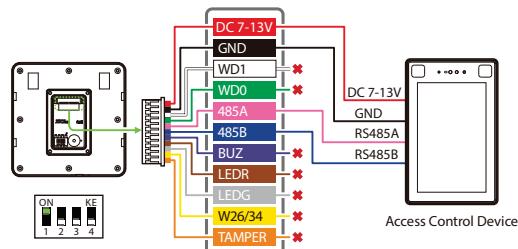


8. Tamper Switch Connection

When the tamper switch terminal is successfully connected to the controller, the device will sound an alarm when the back plate of the device is opened, and an alarm signal will be sent to the software side.

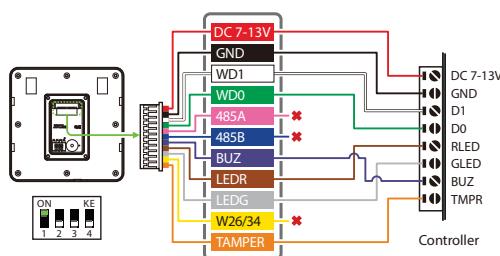

9. Power Connection

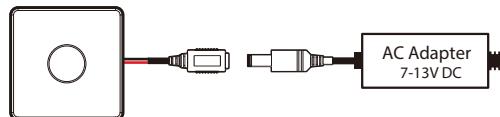

- Recommended AC adapter: **7 to 13V DC**, Current Draw > **350mA/5V**.
- Use an AC adapter with a higher current rating to share power with the other devices.

10. Buzzer, Indicator Light Prompt Instructions

When the ProID series reader works normally, the buzzer and indicator prompts are shown in the following table.

Working Status	Indicator Light	Buzzer
When the reader is powered on.	LED bright white light, then switch to white light breathing state after 0.4s.	1 short sound
When punching the card.	LED bright white light.	1 short sound
Card is registered	LED indicator lights green.	1 short sound
Card not registered	LED indicator (red) lights up briefly twice.	2 short sound

Note: In Wiegand communication mode, the status of LED and buzzer is controlled by the host when the card is swiped.

11. Specifications

Operation Voltage	7 to 13V DC
Current Draw	≤350mA 5V
Processor	32-bit ARM Cortex-M0 48MHz
Card Type	ID/IC Card
Read Range	0 to 3 cm
Output Format	Wiegand 26bit or 34bit (Adjustable), RS485
Operating Temperature	-20 °C to 65 °C
Operating Humidity	10% to 90% RH, Non-Condensing
Protection Rating	IK04
Installation	Asian gang box, single gang box, mullion mount
Color	Black & White
Certification	ISO9001, ISO14001, CE, FCC

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Compliance

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



ZKTeco Industrial Park, No.32, Industrial Road,
Tangxia Town, Dongguan, China.
Phone :+86 769 - 82109991
Fax :+86 755 - 89602394
www.zkteco.com

Copyright © 2023 ZKTECO CO., LTD. All Rights Reserved.

