


MODEL 374UT

UNIVERSAL MINI REMOTE CONTROL

1 Press and hold the bottom button on the remote control until LED goes OFF(about 9 seconds) then release the button, now enter into programming mode.

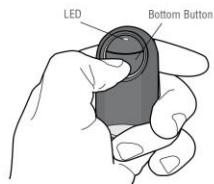


2 Press and release the Remote Control button you wish to use, the number of times ... that corresponds with the below garage door opener type:

Press Times:	Garage Door Opener Type:
... 1 time	891LM Yellow Learn Button 2011-Current
... 2 times	371LM Purple Learn Button 2005-Current 315mhz
... 3 times	971LM Orange or Red Learn Button 1997-2005 390mhz
... 4 times	81LM Green Learn Button 1993-1996 390mhz
... 5 times	Genie Overhead Door® Intellicode 1995-Current 315mhz
... 6 times	Genie Overhead Door® Intellicode 2005-Current 390mhz
... 7 times	Linear® Mega-Code 1997-Current 318mhz
... 8 times	Wayne Dalton® Rolling Code 372.5 MHz 1999-Current

⚠ Attention: * LiftMaster, Chamberlain, Do-It, Master Mechanic, Raynor, True Value are compatible with Sears Craftsman technology.

3 Once you finished programming, just wait 3 seconds(LED flash then OFF) to exit programming mode automatically, programming is now complete.


4 Press and release the learn button on garage door opener, the learn LED light will glow steadily for 30 seconds.

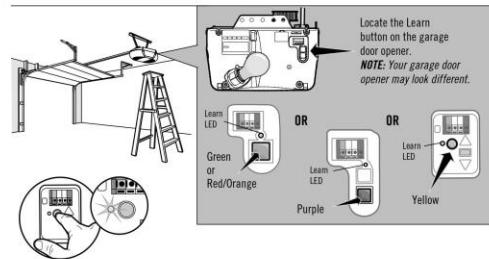

5 Within 30 seconds, press and hold the programmed button of remote until garage door opener lights flash or two clicks are heard. It has learned the code.




6 To test, press the programmed remote button, the garage door opener will activate. If opener does not activate, repeat the above programming steps again.

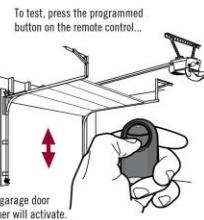

⚠ To program the remote to more than one garage door opener, repeat the steps above to program another remote button.

BATTERY

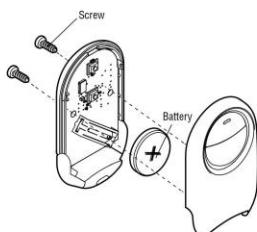

⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.
- To reduce risk of fire, explosion or chemical burn:
 - Replace ONLY with 3V2032 coin batteries.
 - DO NOT recharge, disassemble, heat above 212° F (100° C) or incinerate.

Dispose of batteries properly. Replace ONLY with 3V CR2032 coin batteries.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.