




Smart Lock L60

QUICK START GUIDE

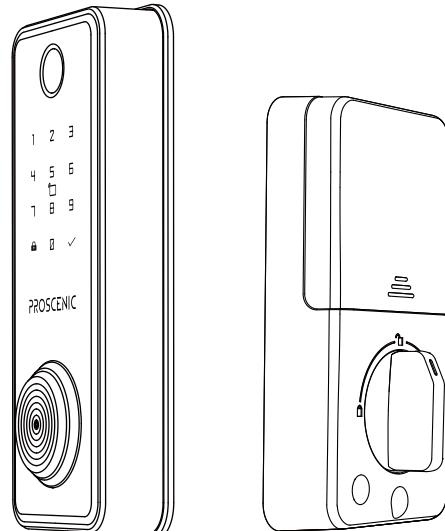

Proscenic Technology Co., Ltd.

To ensure you get better customer support guarantee

www.proscenic.com

We are always here to protect your rights


support@proscenic.com

- Please read this manual carefully before use.
- The smart lock is available for both left-handed and right-handed doors. To avoid any unexpected issue, such as the opposite of lock and unlock, please carefully refer to the instructions.
- Any problem, please contact customer service first!


TABLE OF CONTENTS

AT A GLANCE	01
IN THE BOX	02
INSTALLATION	03
HOW TO USE	07
LOCK OVERVIEW	08
PRODUCT SPECIFICATIONS	13
PRODUCT NOTES	13

AT A GLANCE

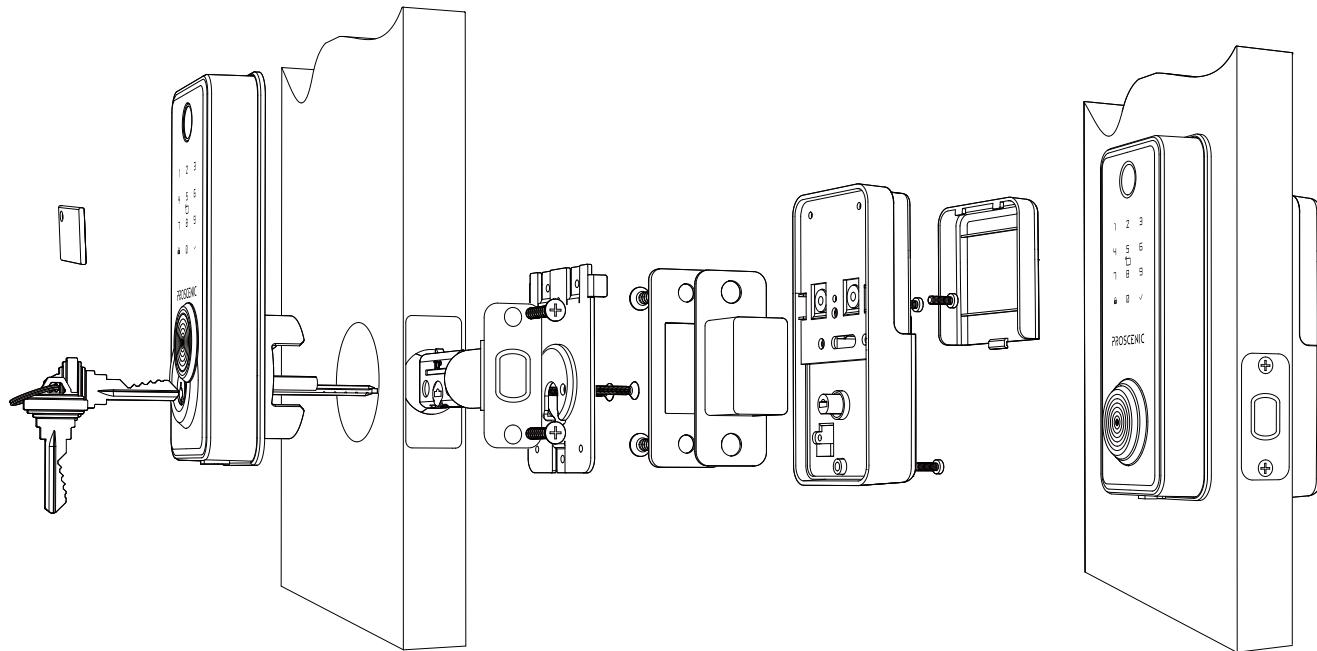

IN THE BOX

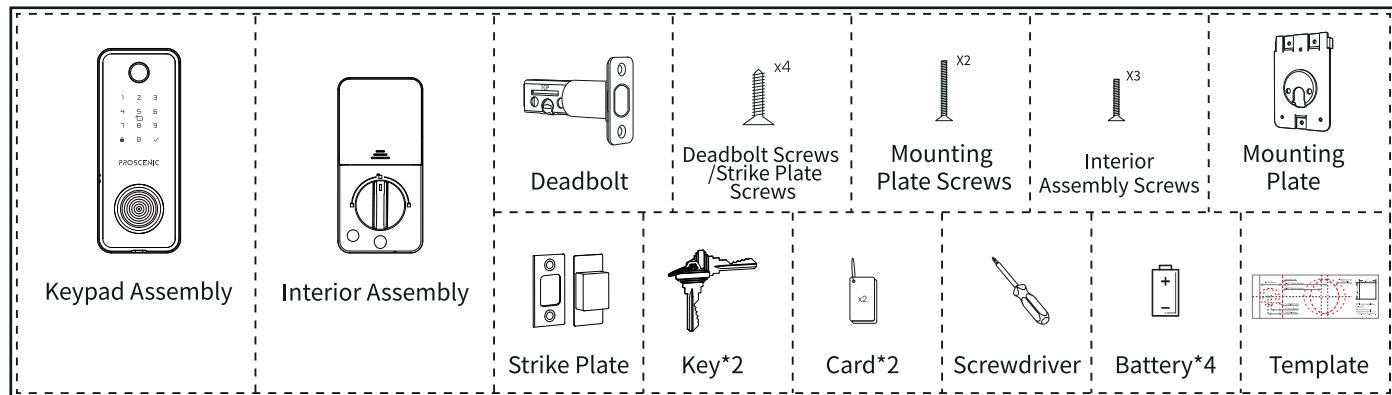

Installation Video




Scan the QR code or visit www.proscenic.com for an easy step-by-step installation guide before installing the Smart Lock L60.

Or you can also view the website directly.
<https://youtu.be/KDJqBbfpBPY>


INSTALLATION

Step 1 Prepare the door and check dimensions

A. If you have a standard deadbolt, you will need to remove your existing deadbolt from your door.

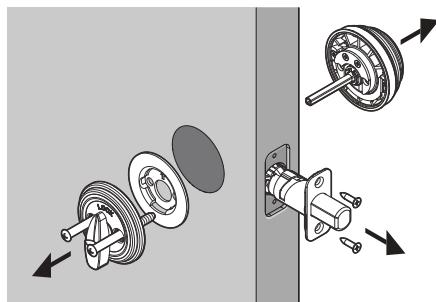


B. Make sure your door is compatible.

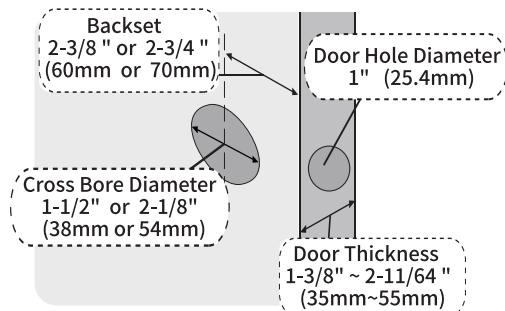


C. If you have a new door, you will need to drill the following holes on your door.

1. Select the desired height and backset on the door face. Use the template to mark the center of the circle on the door face and the center of the door edge.
2. Use your marks as guide to drill a 2-1/8" (54 mm) hole through the door face. For the latch, drill a 1" (25.4 mm) hole through door face's edge.

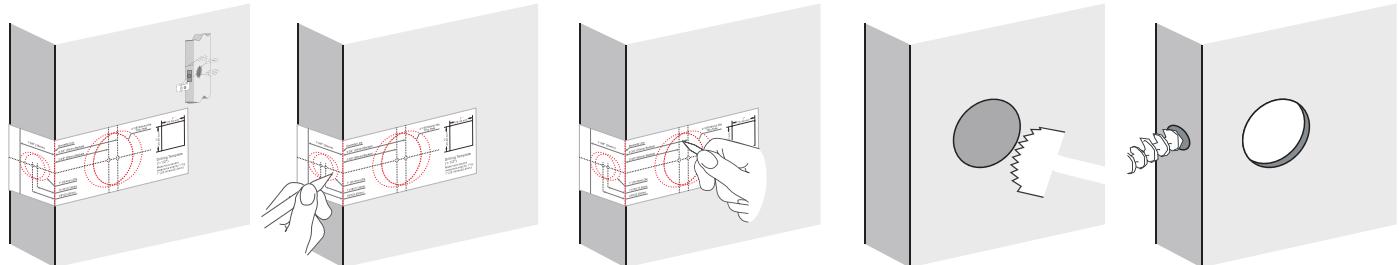


Step 2 Install the deadbolt and strike plate

A. Check your door to see if the deadbolt requires adjustment.

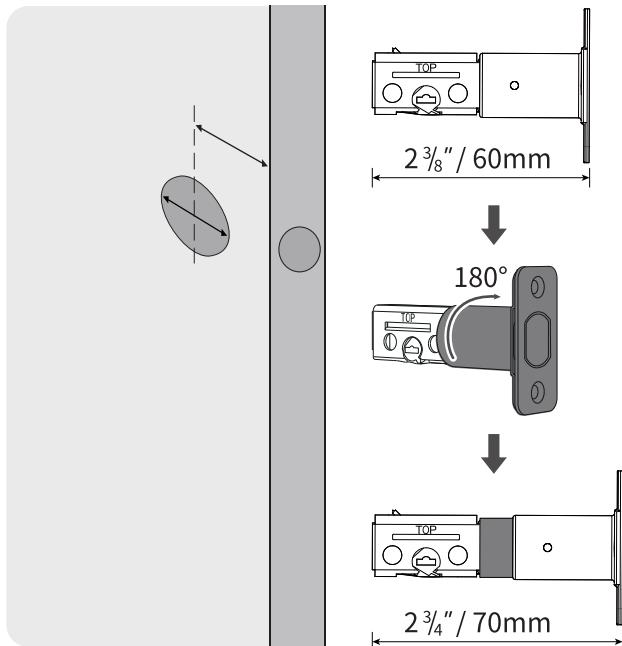


B. Insert and screw the deadbolt into the doorframe.

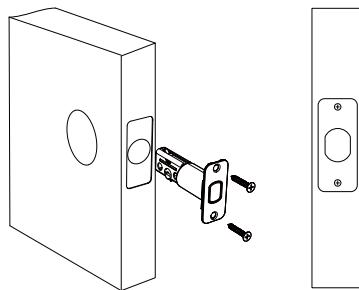

C. Install the strike plate on the door frame.


 Make sure the hole in the door frame is drilled a minimum of 1" (25.4mm) deep.

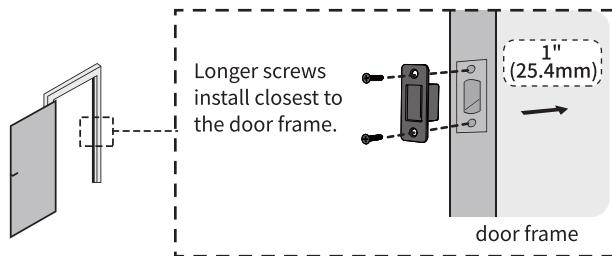


Step 3 Install the keypad assembly and mounting plate

A Remove the spacer before installation if you have a 1-1/2"(38mm) cross bore.


**Diameter is 2-1/8"
(54 mm)**

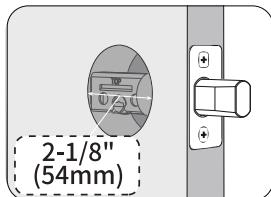

**Diameter is 1-1/2"
(38 mm)**

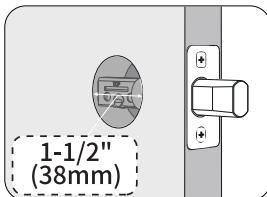


B Install the keypad assembly and mounting plate.

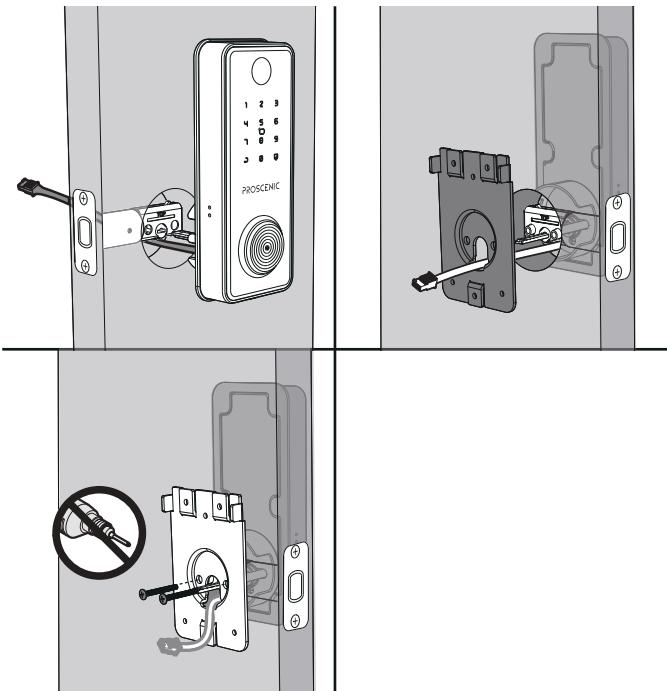


Step 4 Install the interior assembly


A. Connect the keypad assembly cable plug to the interior panel, making sure that the cable is securely connected.

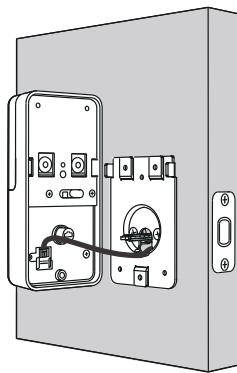


B. Align the interior panel with the cylinder for installation. After pressing the panel onto the door surface, manually turn the knob to ensure that the latch can extend and retract smoothly.

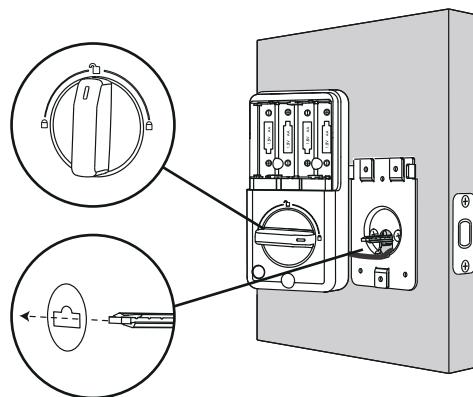

C. Secure the interior panel screws and install the battery.

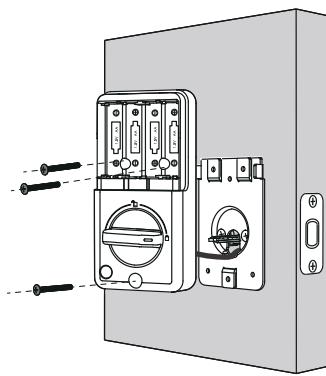


D. Install the 4 AA batteries provided with the correct polarity.

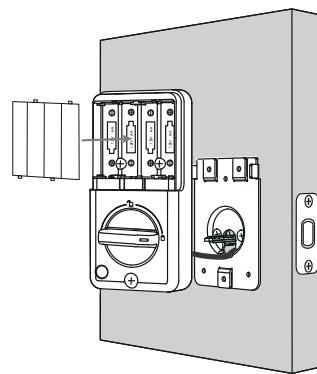

HOW TO USE

1. Product overview

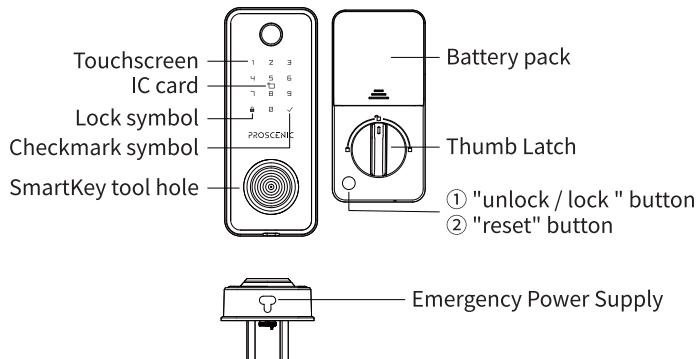


2. APP Download & Installation

- Search "Proscenic APP" through APP Store or Google Play to complete the download and installation.
- Scan the QR code below to complete the download and installation.



3. Register and login to the APP


Click "Create an account" to get the verification code by email to complete the account registration

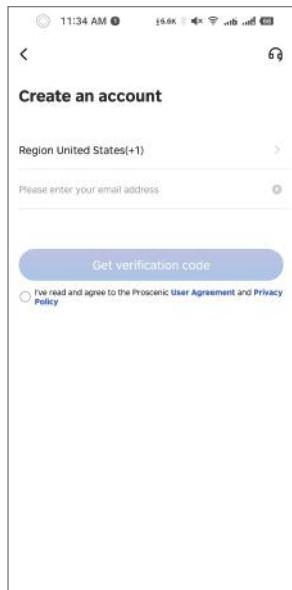

4. Add Device


A. Open the app, tap "+" to add device,choose the "L60" and follow the guide to finish the device binding.

B. Touch the keypad panel to activate it; then, you can search for "L60" on the App and bind it. After 10 seconds, the panel will automatically turn off, and Bluetooth will deactivate.

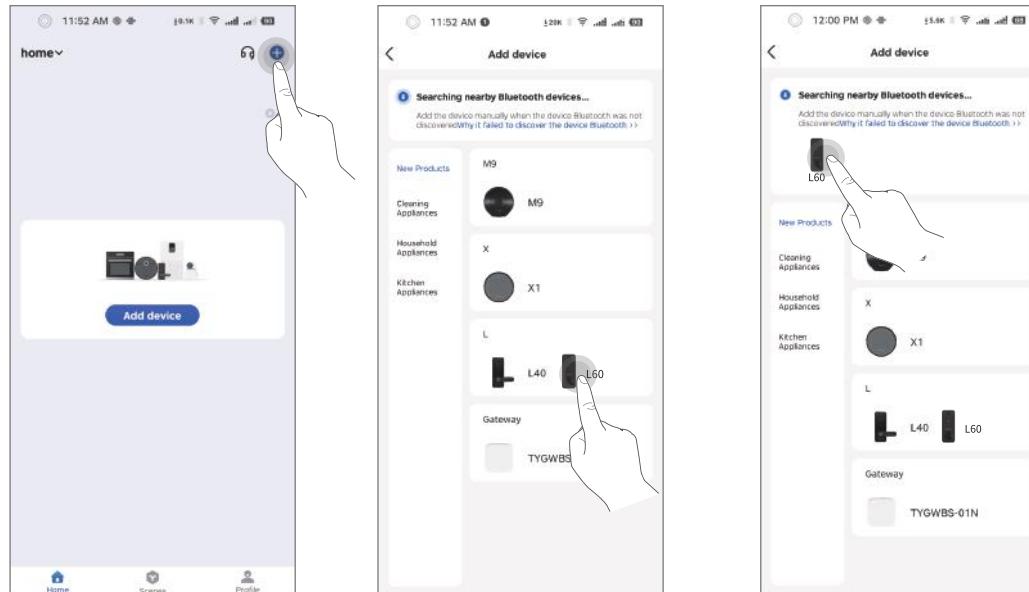


5. Function Introduction

5.1 Home page

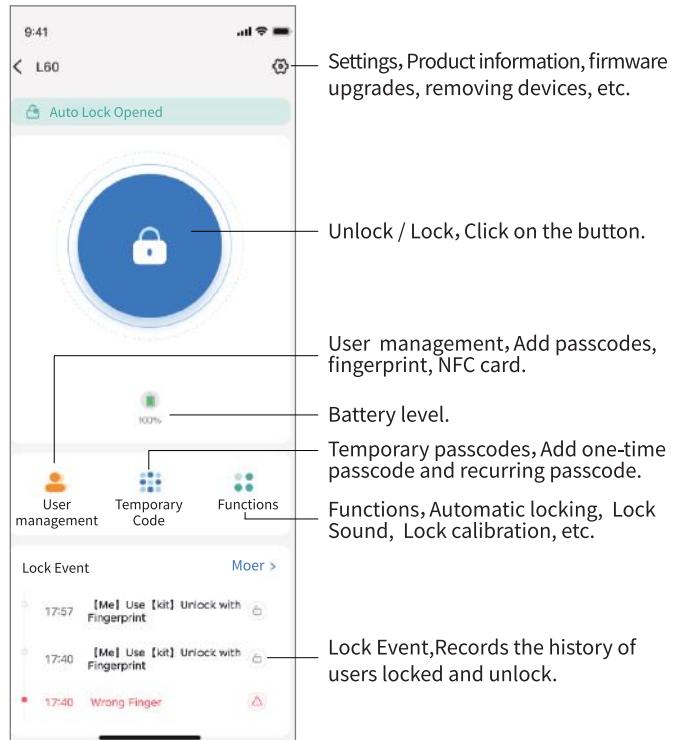

5.2 User management



Add lock members, manage user passcodes, fingerprint, NFC card information;

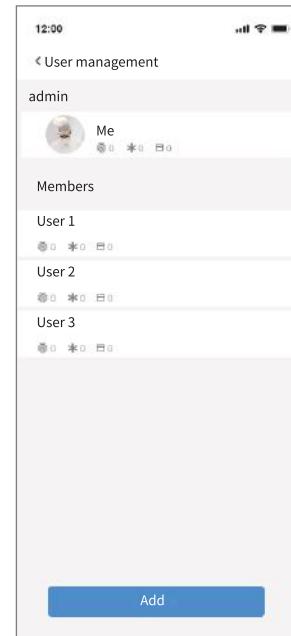

5.3 Temporary passcodes

One-Time passcode: Passcode that can only be used once in 6 hours;

Time-Limited passcode: Passcodes are valid for a period of time;

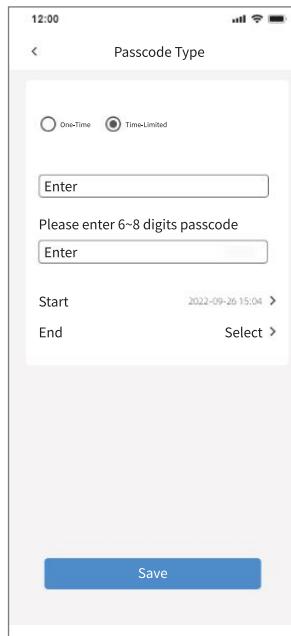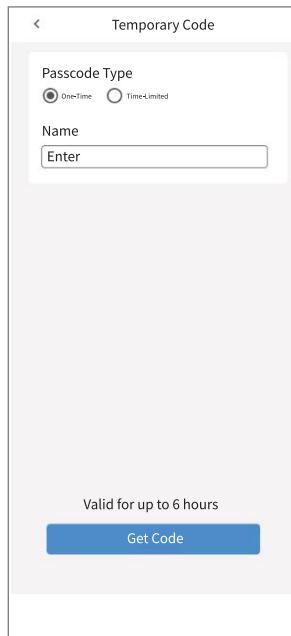


5.4 Functions

Auto Lock : Auto-lock function switch, user set auto-lock time;


Lock Sound: Lock volume is adjustable to mute, low, normal, and high mode.

Lock calibration: When the lock is not functioning properly, you can use this feature to calibrate the lock.

Voice unlocking: You can voice control the lock by connecting to Google Assistant, Alexa, IFTTT;

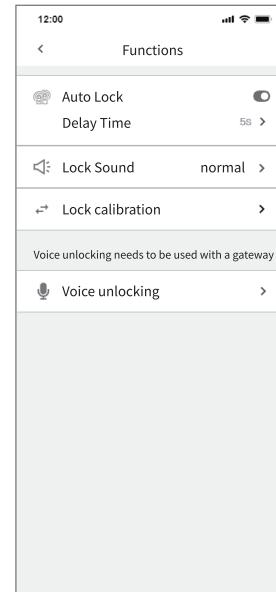

5.5 Settings

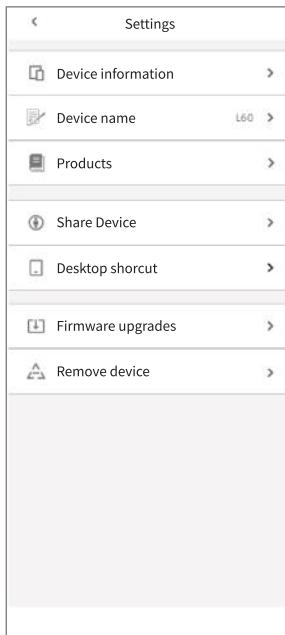

Device information: Provide device ID, Mac address, connection status, etc.

Device name: Adding a name to a device.

Products: Includes product manuals and functional descriptions.

Share Device: Share the lock with other users in the household.

Desktop shortcut: Create a desktop shortcut mode for the lock, making it easy for the user to operate the lock.

Firmware upgrades: The lock firmware update.

Remove device: Delete the lock on the app and reset the factory device.

PRODUCT SPECIFICATIONS

Model	Smart Lock L60
Power Modes	4 AA Batteries (6V); USB-C Emergency Port (5V)
Wireless Protocols	Ble5.0 , NFC
Operating Temperature	-25~55°C
Operating Humidity	0 ~ 93% RH, no condensation

PRODUCT NOTES

1 How to restore factory settings?

- A. Local unbundling: press and hold the "unlock / lock" button on the rear panel for 8s, the voice reminds "Please press key to confirm", then tap "√" on the keypad to confirm;
- B. APP Unbinding: On the app, remove the device in the device settings;

2 What should I do when the lock runs out of power?

- A. To make sure that the door lock can be opened when there is an abnormality in the lock, please store at least one key outside the door, so that the lock can be opened by the key when the lock runs out of power;
- B. There is a reserved Type-C on the keypad assembly, through the data cable you can give temporary power to the lock, and open the lock by passcode or fingerprint;

3 How can the device be operated remotely?

The device is a bluetooth device, which can only support operation within 33 feet/10 m, if there is a need for remote control, please purchase a gateway separately, through the gateway can realize remote operation of the lock.

4 How often do I need to replace the batteries of this lock?

According to the estimation of opening and closing the door 10 times a day, the battery can last more than 12 months; when replacing the new battery, please replace the alkaline dry batteries to avoid mixing different types of batteries;

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC ID: 2ARZX-L60

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Proscenic - Limited Warranty

- The limited warranty applies to purchases made from authorised retailers of Proscenic. Warranty coverage applies to the original owner and to the original product only and is not transferable.
- Proscenic warrants that the unit shall be free from defects in material for a period of one year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in this instruction manual, subject to the following conditions and exclusions. Refurbished products sold by Proscenic come with their own unique warranty that you can find on the product listing or contact us at support@proscenic.com with your order receipt for confirmation. Non-consumables such as motor bought separately come with 3-month limited warranty.

Product Registration

Apart from sufficient proof of purchase, online product registration may also be required in case of warranty claim, thus we highly recommend that upon purchase, you register your product(s) on Proscenic's official website (www.proscenic.com) for reference and enjoy potential exclusive benefits. To register, please select the corresponding purchase channel along with the correct order number and product's serial number (SN).

REMEDY

- 1.The original unit deemed defective, according to Proscenic's sole discretion, will be repaired or replaced for up to one year from the original purchase date.
- 2.In the rare event that a replacement unit is issued, the warranty coverage ends ninety (90) days following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is greater. If the unit is replaced, Proscenic reserves the right to replace unit with one of equal or greater value.

EXCLUSION

Unless agreed in writing, the Limited Warranty will not apply to consequential and incidental damages and not apply if the defect(s) relate to:

- 1.Consumable parts such as filters or brushes etc. that are subject to normal wear and tear, and require regular maintenance and/or replacement to ensure the proper functioning of your unit.

- 2.Defects caused by rough or inappropriate handling or use or damage caused by accident, misuse, neglect, fire, water, lightning or other acts of nature, external sources such as weather, electrical outages or power surges.
- 3.Improper operation or maintenance, use not in accordance with the Product instructions or connection to improper voltage supply.
- 4.Negligent use or care, neglect or careless operation or misuse of the Product.
- 5.Accident, abuse, misapplication, or any unauthorised repair, modification or disassembly or opening of the chassis of the Product.
- 6.Any failure by Buyer or a third party to comply with environmental and storage requirements for the Product specified by Seller.
- 7.Any failure to adequately package the Product for transportation.
- 8.If the battery has been short-circuited, if the seals of the battery enclosure of the cells are broken or show evidence of intervention or if the battery has been used in equipment other than that for which it has been specified.
- 9.Use of parts not in accordance with the Product instructions.
- 10.Use of parts and accessories other than those produced or recommended by Proscenic.
- 11.Use in a commercial environment as the Product is designed for residential use only.
- 12.Extreme or external causes beyond our reasonable control including but not limited to: breakdowns, fluctuation, or interruptions in electric power, ISP (internet service provider) service or wireless networks.
- 13.Weak and/or inconsistent wireless signal strength in your home.

14. Any product(s) purchased from unauthorised dealers/re-sellers.
15. Products used outside the country of purchase. Lost and/or stolen products.

DISCLAIMER

This Limited Warranty is your sole and exclusive remedy against Proscenic's sole and exclusive liability in respect of defects in your Product. This Limited Warranty replaces all other Proscenic warranties and liabilities, whether oral or written.

WARRANTY SERVICE

For Retailer Store purchasing

If you wish to make a warranty claim, please contact your local distributor.

Upon contacting your distributor, please have the serial number of your Product ready and the original proof of purchase from an authorised reseller, showing the date of purchase and full details of the Product.

For Online Store purchasing

Please reach us by either of these channels

Live Chat: www.proscenic.com

Email: support@proscenic.com

Tel: (Only in English and Japanese currently. More languages support coming soon...)

EU: +44 (0)808 273 7688 Mon-Fri

US & CA: +1(833) 313 1310 Mon-Fri

JP: 050-5533-2720 Mon-Fri

When calling the customer support center, please have the order number for the purchase of the Proscenic product from the authorised retailer ready.



Customer Service

Email: support@proscenic.com

Europe	North & South America	Japan
+44 (0)808 273 7688	+1(833) 313 1310	050-5533-2720
Mon-Fri	Mon-Fri	Mon-Fri

Tel: (Only in English and Japanese currently. More languages support coming soon...)

Proscenic Technology Co., Ltd. (Authorized manufacturer)

Shenzhen Proscenic Technology Co., Ltd. (manufacturer)
Floor 8, Block A, building 5, Tusincere Park, Longcheng street,
Longgang district, Shenzhen City, China

PROSCENIC EU LTD

71-75 Shelton Street, Covent Garden, London, WC2H 9JQ, ENGLAND



PROSCENIC TECHNOLOGY GmbH

Laubenhof 23, Essen Nordrhein-Westfalen 45326 Deutschland
E-mail:proscenicde@outlook.com Tel: +49211 9753 8868

尺寸:210*140mm

材质:封面封底200g铜板纸+哑膜

内页157g铜板纸

封装方式:骑马钉

印刷颜色:单黑印刷