




Welcome to start

Your mobile payment solutions

POS Terminal

PT7010

Quick reference guide

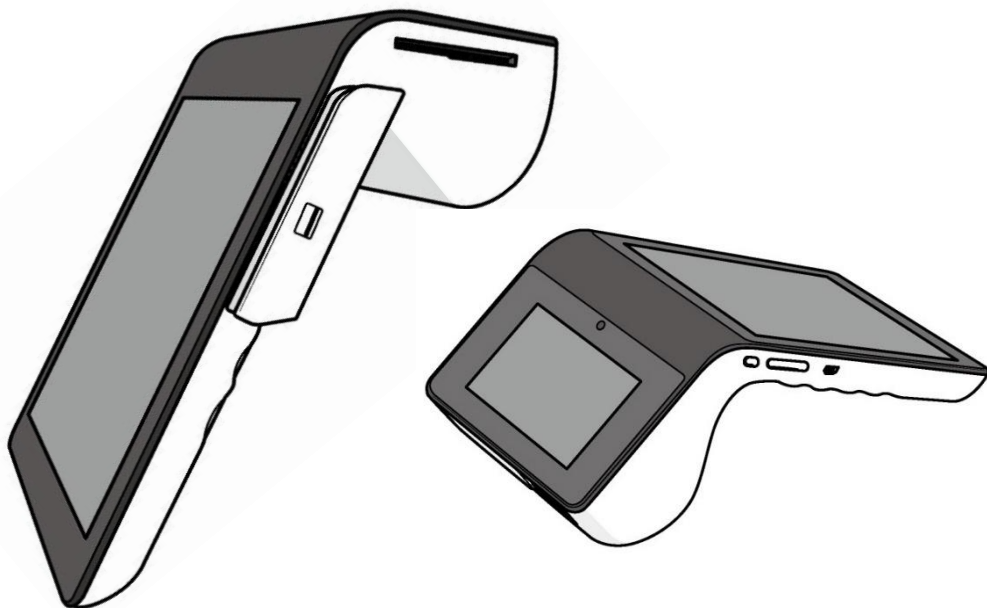

Introductions

Thank you for purchasing a PT7010 product from TOUSEI.

This quick reference guide is designed to help users effectively operate the device.

1. Please read this reference guide carefully before using the device for safe and proper use.
2. This device may only be used in countries where it is sold.
3. The components and colors of this device in this reference guide may differ from the actual product.
4. Features and specifications are subject to change without prior notice.
5. Some screens or illustrations used in this reference guide may differ from the actual screens of the device.
6. Except where noted, device illustrations used in the reference guide are the PT7010MS full option model.

Notice before using device

1. This device is qualified for the standard of the safety of human body against electromagnetic wave.
2. Use only specified original batteries and standard power adapter. Keep indoors the temperature between 0~40°C (32~104°F). The guarantee duration of the battery is 6 months from the sales.
3. When charging the battery, you must use the supplied standard power adapter. If the original adapter is not used, the battery life may decrease and may explode. (In this case you cannot receive the free repair service.)
4. Please make sure that nothing rests on the power cord when connecting the power cord, and the location where the power cord will not be stepped on or cause to stumble.
5. Please backup the data and information from your device. During the repair or upgrade, there is a slight possibility of your data being erased.
6. When a device is not in use for a long time, please charging device and unplug the power cord and place it at a safe place where it won't drop. Even for fully charged battery, the lifetime can be decreased because of its own properties of voltage decrease.
7. Do not remodel, take apart, or repair the device. If not the case, you will not be able to get your free repair service. Only authorized agent or service center has access to the device.
8. Do not press power button on the device if the device is wet or do not touch adapter or power cord with wet hands. There is risk of electric shock.

Quick Reference Guide 1


9. In case your device is wet, do not put your device in heaters, microwaves, or etc to dry- there is a risk of explosion or it can be the cause of malfunction. (Please note there is a label in the device that changes color when it gets wet. In this case you will not be able to get your free repair service.)
10. This device is not waterproof. Do not use in places of high temperature and high humidity. The following can be the causes of malfunction: getting wet from the rain, spilling drinks, and taking it in with you at the high temperature places.
11. Do not place the device in a high temperature, heating equipment or direct sunlight.
12. Do not use your device at an explosive danger zone.
13. Do not place this device on an unstable stand or table, lest it fall, causing unnecessary damage and personal injury.
14. Do not place credit cards, phone cards, bankbook, and tickets next to the device. The magnetic forces of the device can damage the information of listed item.
15. Do not place your device at a dusty place. Keep your power cord away from any heating device. Unplug the power cord when cleaning. If there are any dusts or residue clean the power cords pins thoroughly.
16. Do not paint your device and Do not place heavy or sharp objects on the LCD screen or on the device. It can damage your screen or your device's exterior.

Cleaning the device

1. Please make sure that the machine is turned off before cleaning the device.
2. Please use a soft and lint-free and dry cloth to clean the device.
3. If the stain is difficult to remove, please use a clean, soft and lint-free cloth stained with a little ammonia-free non-alcoholic ingredient, and non-abrasive cleaner to wipe the surface of the shell.
4. Do not directly spray cleaning fluids or spilled on the device.

Package contents

Please make sure all the above components are included.

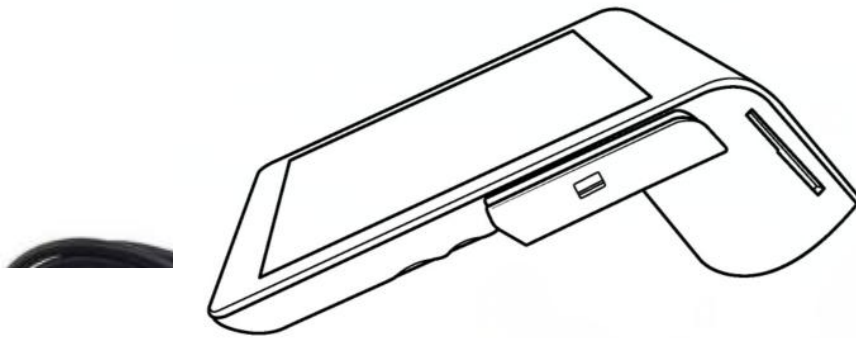


POS Terminal Device




Adapter 5V 2A

Power cord

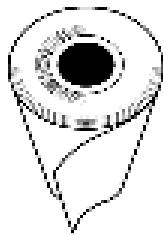

Thermal paper

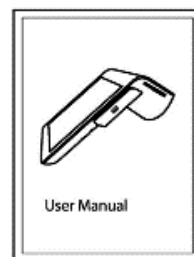

Quick reference guide

Device features

Chip card reader (Optional)

7-inch Touch screen

Magnetic stripe
card reader (Optional)

Camera (Optional)

Customer display (Optional)

Power button

Paper feed button
Volume +

NFC reader (Optional)

Scan button
Volume -

Micro USB port




Speakers

Barcode scanner (Optional)

Thermal printer

Charging port

Card slot

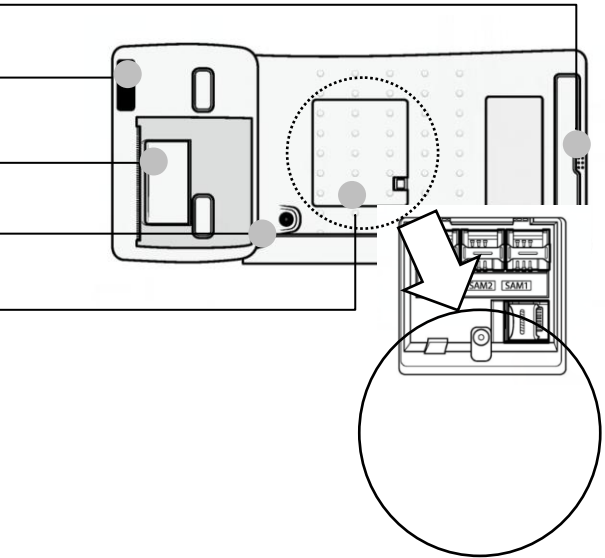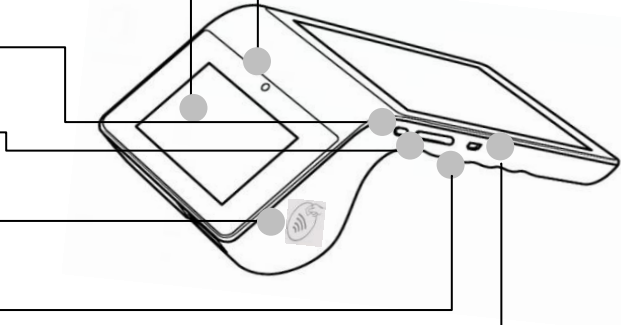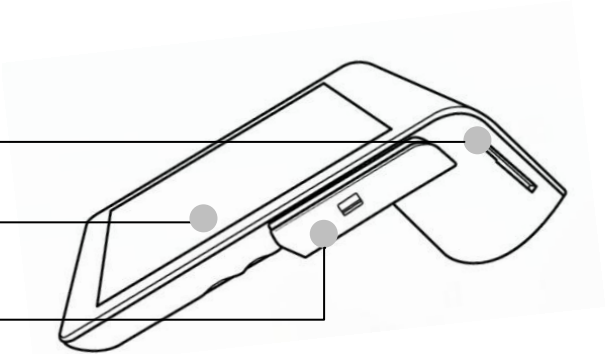

Charge in your POS terminal device

1. Plug in the battery charger in the device charging port.
2. Attach the power cord to the power brick and plug the power cord into a power source.
3. The charger lamp is red, (The lamp will be green fully charged), A battery icon will appear on the screen.
4. Press and hold the power button until the Android logo appears on the screen.
5. POS terminal should now be powered on.

Connect the POS terminal to a network


Once your PT7010 has started, select your primary language for your device

■ Connect device via 4G

For the PT7010 device support 4G/3G/2G net, which can be chosen via local net situation,

Install the SIM card in the slot, POS device will automatically connect via the 4G network, restart the machine. Please wait about a minute for the SIM card to verify that it's connected to the 4G network. Tap Next when the mark appears.

Insert the SIM card into the SIM card slot with the card meeting the angled edge.

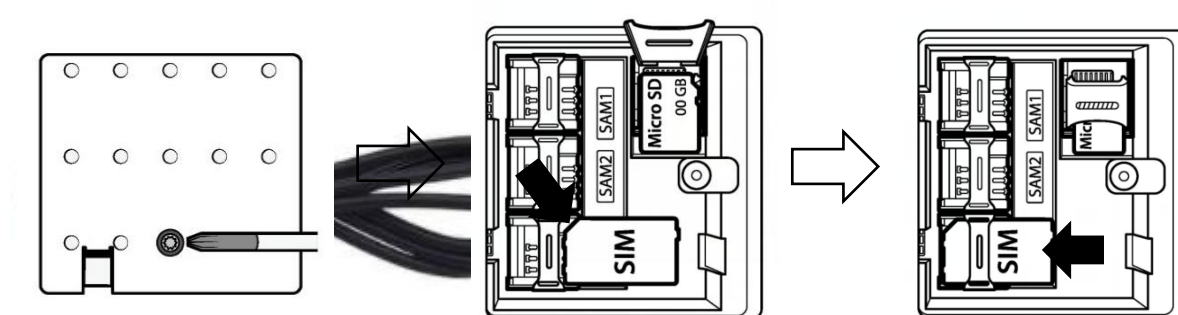

■ Connect device via Wi-Fi

1. On the setting screen, tap Wi-Fi.
2. Tap on to set Wi-Fi on (Blue).

3. Select your wireless network from the list of available wireless network.
4. Enter in your wireless network password.
5. Tap connect.


Quick Reference Guide5

■ Connect device via Bluetooth


1. On the Setting screen, tap Bluetooth.
2. Tap on to set Bluetooth on .
3. Select your Bluetooth from the list of available Bluetooth.
4. Connect the external device via Bluetooth.

Function operation display


■ Installing a micro SD card

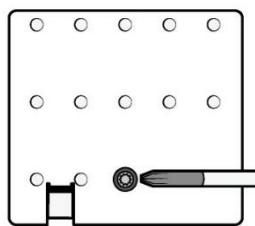

Open the SD card slot cover by screw drivers.

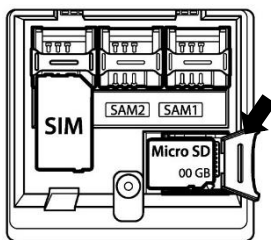


Open the SD card holder by lifting up the flap.

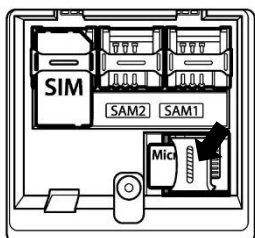


Insert the SD card into the SD card slot then push flap.

■ Insert paper roll into printer


To make sure your printer is ready, load the paper into your device and press print test receipt.

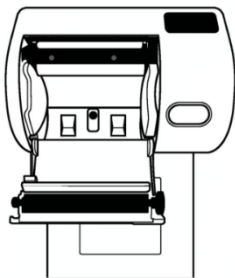


- Open the printer cover by lifting up the latch lever.
- Remove any remaining core of a fully used paper roll.

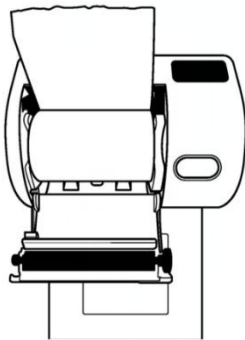

- Insert the roll paper as shown in the image.
(Make sure to put paper roll in the right direction)
- Make sure the paper sticks out of tray.

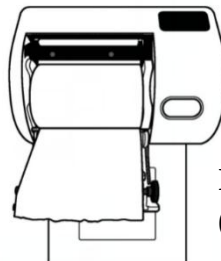


Incorrect example
(Can't print)

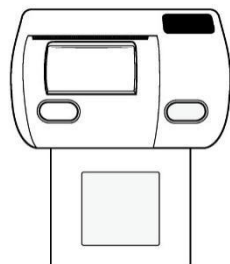


- Close the printer cover.
- Again, make sure the paper sticks out of tray.

■ Using magnetic stripe card readers

1. Make sure the card with the magnetic stripe facing inward.
2. Swipe the card from top to bottom quickly and slightly.
(When swiping the card, the recommended swiping speed is 100 ~ 120mm/sec)

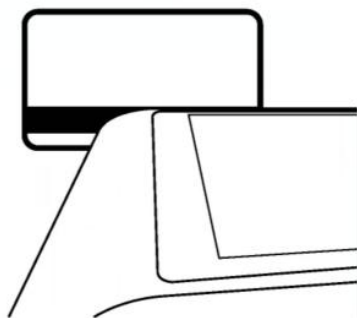


Correct example
Magnetic stripe facing inward

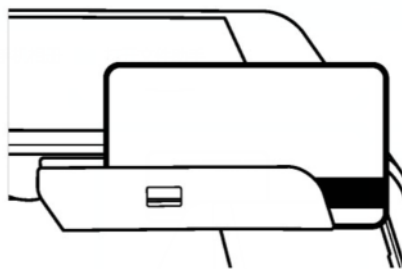


Incorrect example
Magnetic stripe facing outside
(Can't read the card.)

■ Using chip card readers

1. Insert the card with the chip facing down.
2. Remove the card when prompted by the device, then follow the next step.

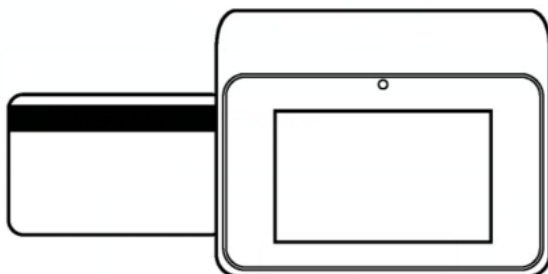


Correct example
Chip facing down

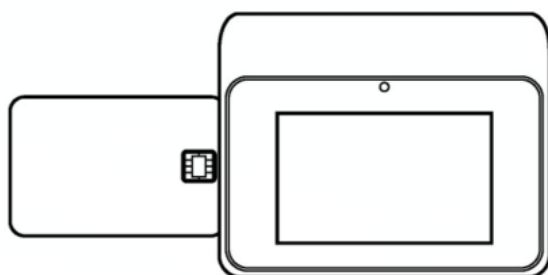

Incorrect example
Chip facing up
(Can't read the card.)


■ Using NFC readers

1. Tap chip cards with contactless capabilities with contactless payments on the NFC marks.
2. Reading distance within 40mm from the NFC marks.

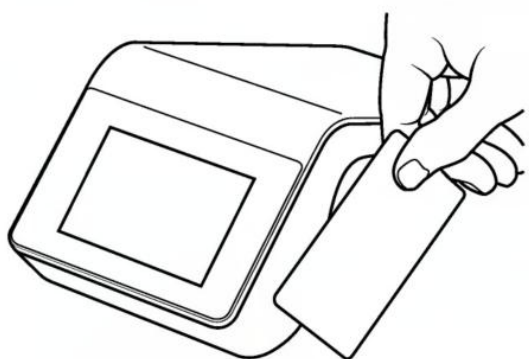

■ Barcode scanning

1. Point the scanner window toward the barcode at intervals of approximately 10cm from the item or the receipt, and press the scan button or scan application to read the barcode.
2. If the scanner window is perpendicular (0°) to the barcode, it is impossible to read barcode due to characteristics of the laser barcode engine. Thus, scan at a little inclined angle, not a right angle.

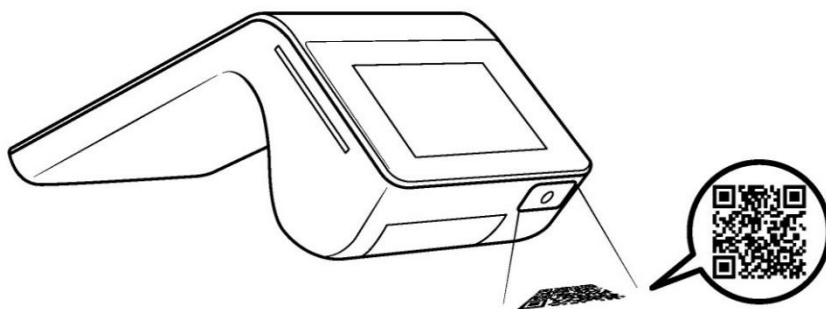

When scanning barcode, do not direct the scanner window toward eyes of a man/ an animal. It may cause damage to the retina and eyesight damage.

Device specifications

Operation system	Android 12.0
Application CPU	ARM Cortex A53 Octa core 2.0GHZ
Storage memory	RAM 2GB+Flash ROM 16GB
Dual display	7.0inch IPS TFT LCD, HD 800×1280 pixel 3.5inch 320×480 pixel
Touch screen	Capacitive Multi Touch Screen
Communication	LTE (FDD) : B1/B3/B5/B8/ LTE (TDD) : B34/38/39/40/41 TD-SCDMA: B34/39 GSM :B3/B5/B8
Wi-Fi	2.4 G/5.8 G,WiFi 802.11a/b/g/n/ac
Bluetooth	BT v2.1+EDR , 3.0+HS,v4.1+HS,V5.0
GPS	GPS/BeiDou/GLONASS or GPS/BeiDou/Galileo, A-GPS(Optional)
Magnetic stripe card	1/2/3 track, two-way card (Optional)
Smart card	EMV Standards
NFC	ISO/IEC 14443 Type A/B, Mifare® standard
Printer	Thermal Direct 58mm, 40mm/sec, Max 35mm
Front camera	5 MP fixed (Optional)
Scanner	1D&2D barcodes scanner (Optional)
Card slots	1 SIM Card slot, 2 PSAM or SAM Card slots
Extended storage	1 Micro SD/TF Card slot
Physical interface	Micro USB
Physical keys	1 Power, 1 Volume
Speaker	Built in 1.0W
Certification	EMV L1, L2, CE, FCC
Dimension & Weight	255*121*91mm, 800g (include battery)
Battery	Built in Li-ion Polymer, 3.7V/7800mAh
Charging adapter	DC 5.0V/ 2.0A
Receiver category (According to the ETSI	Category 3:Standard reliable SRD communication media e.g. Inconvenience to persons , which can simply be overcome by

EN300 440 V2.1.1	other means(e.g.manual)
------------------	-------------------------

Quick Reference Guide 10

Common troubleshooting

Problem	Solution
Can't open device	Check if the battery is dead and need to charge it.
The battery does not charge properly.	1. Ensure that your device and the charging cable are connected is functioning correctly. 2. If the battery does not charge completely, it may be dead or defective. (The warranty period for battery replacement is 6 months.)
Dropped the device in the water.	Turn off the device. Place the device in a dry place. Let them dry completely for a considerable period of time, and then turn the device back on. If it does not turn back on, contact our service center.
Device gets too hot to touch.	It is normal for the device to warm up while it is performing an intense workload or charging. It should cool down if you stop using the device for a certain amount of time. If the problem continues, contact our service center. It may result in a burst battery or fire.
Read magnetic stripe card failed	1. Check if the magnetic strip is facing inward. 2. Check if there is something wrong in the swipe slot. 3. Check if the card is weakened or degaussed. 4. Swipe the card at a constant speed and close the bottom of the slot.
Read IC card failed	1. Check if the chip is facing inward. 2. Check if the IC chip card insert into the bottom. 3. Check the IC card whether is scratch-ed or damaged.
Read NFC failed	1. Check the frequency band of the NFC in advance. 2. Check the position and distance.
The printer can't work	1. Check whether have the paper or not. 2. Check if the direction of the paper roll is correct.
Scanning failed	Try to align barcode scanning.

Warranty certificate

TOUSEI warrants this device against defects in materials or workmanship for 12months parts from the original ship date. During this period, TOUSEI will repair or replace defective parts with new or reconditioned parts at TOUSEI option, without additional charges.

Warranty conditions

1. This warranty extends only to products distributed and/or sold by TOUSEI.
2. No warranty extension will be granted for any replacement part(s) furnished to the purchaser in fulfillment of this warranty.
3. TOUSEI and its authorized agent or service center accepts no responsibility for any software programs, data or information stored on any media or any parts of any product returned for repair.
4. All pre-installed software programs are licensed to customers under non-TOUSEI software vendor's term and conditions provided with the packages.
5. This warranty does not cover any third-party software or virus-related problems.
6. TOUSEI makes no warranty either expressed or implied regarding third-party (non-TOUSEI) software.

Warranty limitation and exclusion

1. The case of the device has been opened by anyone other than TOUSEI repair department or authorized repair centers.
2. The device is modified or disassembled by anyone other than TOUSEI repair department or not under supervision by an authorized TOUSEI support specialist.
3. The serial number of the device is removed or unable to be deciphered.
4. Any catastrophic event independent of the normal functioning of the hardware such as flooding or other water damage, fire, transient power surges or insufficient line voltage.
5. Any device failure caused by installing or operating device under conditions not in accordance with installation and operation guidelines or damaged by contact with tools or surroundings.
6. The device is damaged in shipping due to poor packaging.

RMA (Returning Material Authorization) policy

1. If repairs are required, the customer must clearly and in detail record the devices problem on the RMA request form or email.
2. In all cases, TOUSEI has the right to evaluation and inspect the faulty device. TOUSEI will evaluation the device according to the description of the problem on the RMA request form or in the email.
3. After evaluation, Warranty or Out-of-Warranty status will be determined.
4. If the description of the problem is the same as listed on the RMA request form or in the e-mail, the device will be repaired under warranty at no charge and shipped back to the customer.
5. If the description of the problem is different from the problem listed, or damaged from delivery, we will contact the customer. After evaluation, the customer shall be notified of the repair cost. If the customer desires an expedited method of return, the device will be shipped collect on delivery.

RF Output Power

Function	Operation Frequency	Max RF output power:
BLE	2402MHz~2480MHz	-2.42 dBm
BT(BR+EDR)	2402MHz~2480MHz	4.57 dBm
WIFI 802.11b/g/n/(HT20/40)	802.11b/g/n (20MHz): 2412~2472MHz; 802.11n (40MHz):2422~2462MHz	16.91 dBm
Wi-Fi 5.2G(802.11a/n20/n40/ac20/ac40/ac80)	802.11a/ n20/ac 20:5180MHz~5240MHz 802.11 n40/ac 40:5190MHz~5230MHz 802.11 ac 80:5210MHz	11.38 dBm
Wi-Fi 5.3G(802.11a/n20/n40/ac20/ac40/ac80)	802.11a/ n20/ac 20: 5260MHz~5320MHz 802.11 n40/ac 40: 52700MHz~5310MHz 802.11 ac 80: 5290MHz	12.68 dBm
Wi-Fi 5.6G(802.11a/n20/n40/ac20/ac40/ac80)	802.11a/ n20/ac 20: 5500MHz~5700 MHz 802.11 n40/ac 40: 5510MHz~5670MHz 802.11 ac 80: 5530MHz~5610MHz	13.16 dBm
Wi-Fi 5.8G(802.11a/n20/n40/ac20/ac40/ac80)	802.11a/ n20/ac 20:5745MHz~5825MHz 802.11 n40/ac 40:5755MHz~5795MHz 802.11 ac 80:57750MHz	11.66 dBm
GSM 900	TX(Uplink):880M-915MHZ; RX(Downlink):925M-960MHZ	32.74 dBm
GSM 1800	TX(Uplink):1710M-1785MHZ; RX(Downlink):1805M-1880MHZ	29.33 dBm
WCDMA B1	TX(Uplink):1920-1980MHz; RX(Downlink):2110-2170MHz	23.55 dBm
WCDMA B8	TX(Uplink): 880-915MHz; RX(Downlink):925-960MHz	22.46 dBm
LTE FDD B1	TX(Uplink):1920-1980MHz; RX(Downlink):2110-2170MHz	23.25dBm
LTE FDD B3	TX(Uplink) :1710-1785MHz; RX(Downlink):1805-1880MHz	23.62dBm
LTE FDD B8	TX(Uplink): 880MHz to 915 MHz RX(Downlink): 925 MHz to 960 MHz	23.39 dBm
LTE TDD B34	Uplink & Downlink: 2010 MHz to 2025 MHz	24.01 dBm
LTE TDD B38	Uplink & Downlink: 2570 MHz to 2620 MHz	23.33 dBm
LTE TDD B40	Uplink & Downlink: 2300 MHz to 2400 MHz	23.45 dBm
NFC	13.56MHz	11.13dBuA/m@10m
GPS	Rx(Downlink): 1.57542GHz	--

Product Name: POS Terminal

Model number:PT7010

Operating Temperature: 0 °C to 40 °C

This device was tested for typical body. To comply with RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the Smart phone, including the antenna. The similar accessories used by this device should not contain any metallic components. Body operations that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or

an approved antenna.

This device in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. All essential radio test suites have been carried out.

1. CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



2. The product shall only be connected to a USB interface of version USB 2.0
3. Adapter shall be installed near the equipment and shall be easily accessible.
4. The plug considered as disconnect device of adapter

Please note: Any modification to HW/FW will lead to non-compliance with the essential requirement of RED.

Care for the environment! Must not be discarded with household waste!

This product can be used across EU member states. The WLAN function for this device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

Quick Reference Guide 15

	BE	BG	CZ	DK	DE	EE
	IE	EL	ES	FR	HR	IT
	CY	LV	LT	LU	HU	MT
	NL	AT	PL	PT	RO	SI
	SK	SE	UK			

WEEE (Waste Electrical and Electric Equipment) Symbol Information



Correct disposal of this product (Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Device PT7010 (FCC ID: 2ASHJPT7010) has been tested against this SAR limit. SAR information on this can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical operations 0mm from the body. To maintain compliance with FCC RF exposure requirements, 0mm separation distance should be maintained to the user's bodies

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However,

there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

commercial wastes for disposal. This product is RoHS compliant.



Correct disposal of batteries in this product

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

Quick Reference Guide 16

The logo for Tousei, featuring a stylized blue 'T' with a large loop at the top, followed by the word 'TOUSEI' in a blue serif font.

TOUSEI ANLINX CO., LTD.

Address: 2nd floor, #248, HuaQing road, QingHu, LongHua district, Shenzhen City, China
518109

Technology support link: www.tousei.com.cn/download/

Common Trouble Shooting: www.tousei.com.cn/contact-us/