




SyberSense

XPD03-E-1433-00 Door/Window Sensor Manual

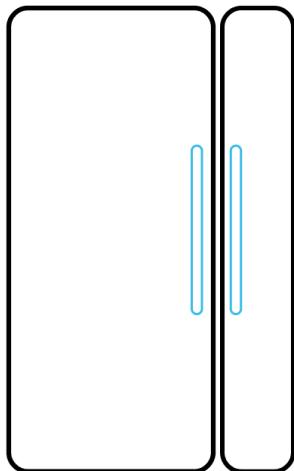

Part number:

Door/Window Sensor, White (XPD03-E-1433-00)

Description

The XPD03-E-1433-00 Door/Window Sensor is a magnetic sensor device designed to fit seamlessly alongside a door frame or windowsill. When the door or window are opened, the magnetic contact is disrupted, and the sensor transmits an alarm notification to the control panel.

Important safety instructions

Before you install this sensor, be sure to:

- Read, keep, and follow all instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not expose the device to water.

- When there is a low battery, replace with a compatible lithium ion battery.


Installation

The door/window sensor can be installed using the provided adhesive or screws.

Mounting orientation

The sensor and magnet should be placed near the top of the door with the sensor attached to the unmoving part of the closure. For example, attach the main body of the sensor to the door frame, not the door. We recommend that the sensor is placed in the top corner of the opening side of the door, see Figure 1.


Figure 1: Sensor orientation

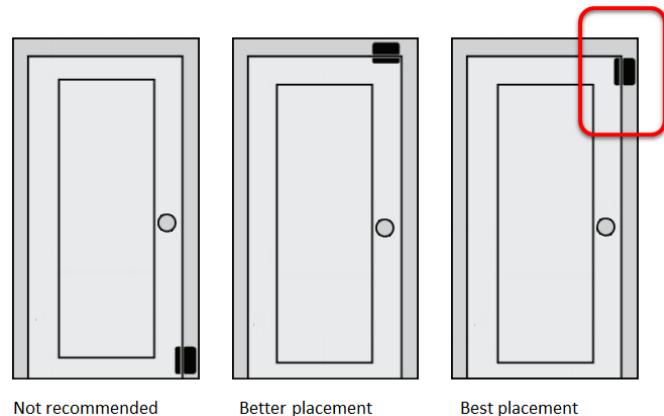

The sensors and magnet each have a slightly engraved line. This line denotes where the sensors align to function properly. If the sensor and magnet, when together/closed, do not line up correctly, the sensor will not report correctly. See Figure 2, on page 2.

- c. Remove the adhesive film cover. (Optional)

Figure 2: Sensor alignment

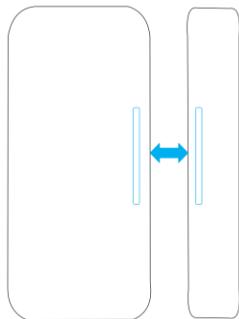

To install the door/window sensor:

1. Select the desired position for the sensor and magnet.

Notes


- The sensor and magnet must be within .25 inch of each other on final installation. See Table 1, on page 4 for different gap ranges for metallic and non-metallic mounting surfaces.
- Verify that the sensor and magnet are aligned correctly. See Figure 2, on page 2.

2. Remove the sensor's battery pull tab.
3. Adhere the sensor to the wall using the provided screws and/or adhesive.

Note: We recommend using the provided screws for installation. This method is more secure than using adhesive.

Screws


- a. Locate the bottom of the sensor (the slotted short end).
- b. Turn the sensor over, and then gently slide a fingernail/fingertip into the slot pushing the sensor's back plate up and away from the sensor body.(You can see the FCC label on the inside of back plate.)

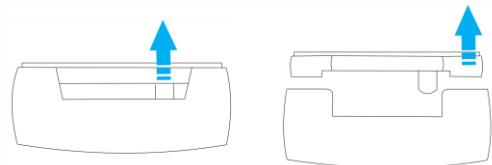

- c. Remove the adhesive film cover. (Optional)
- d. Place the back plate against the door frame/windowsill, making sure that the orientation is correct for the desired position.

Note: Once the adhesive is secure, the sensor cannot be moved.


- e. (Optional) Mark the screw hole locations, then using a power drill, drill holes and install the 2 provided wall anchors.
- f. Insert the first screw into the non-breakaway screw hole, and then use a screwdriver to partially secure the screw in the wall.
- Do not fully insert the screw until the second screw has secured the sensor position.
- g. Insert a second screw into the breakaway screw hole, and then partially secure in the wall.

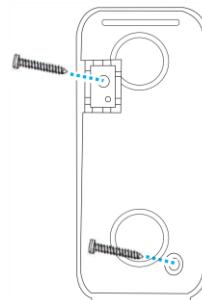

- h. Observe the sensor position. When satisfied with position, use a screwdriver to fully secure each screw in the wall.
- i. Press the front of the sensor against the base, until there is an audible snap.

Adhesive

- a. Select the desired position for the sensor.
- b. Peel one side of the adhesive tape, and then press the tape firmly against the sensor.

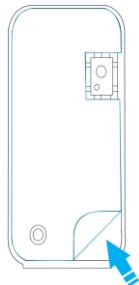

Note: Once the adhesive is secure, the sensor cannot be moved.


- c. Peel the other side of the adhesive, and then press the sensor against the wall.
4. Line the magnet up with the sensor, verifying that they align properly, and then adhere the sensor to the wall using the provided screws or adhesive.

Screws

- a. Locate the bottom of the magnet (the slotted short end).




- b. Turn the magnet over, and then gently slide a fingernail/fingertip into the slot pushing the magnet's back plate up and away from the magnet body.

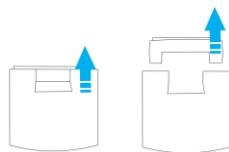

- c. Remove the adhesive's film cover (Optional), and then place the back plate against the door/window, making sure that the orientation and alignment are correct for the desired position.

Note: Once the adhesive is secure, the magnet cannot be moved.

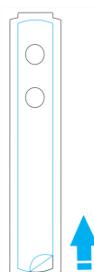

- d. (Optional) Mark the screw hole locations, then using a power drill, drill holes and install the 2 provided wall anchors.
- e. Insert the first screw into a screw hole, and then use a screwdriver to partially secure the screw in the wall.

Do not fully insert the screw until the second screw has secured the magnet position.

- f. Insert a second screw into the remaining hole, and then partially secure in the wall.




- g. Observe the magnet position. When satisfied with position, use a screwdriver to fully secure each screw in the wall.
- h. Press the front of the magnet against the base, until there is an audible snap.

Adhesive

- a. Select the desired position for the magnet.
- b. Peel one side of the adhesive tape, and then press the tape firmly against the magnet.

Note: Once the adhesive is secure, the magnet cannot be moved.

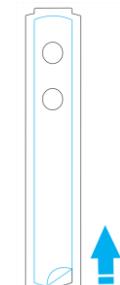


- c. Peel the other side of the adhesive, and then press the magnet against the wall.

5. Add the sensor to the panel.
6. Once added, test the sensor. Verify that when the door/window is opened that the panel notes that the sensors is faulted.

Note: Testing all sensors to the alarm monitoring station is strongly advised.

Table 1: Sensor and magnet gap range

Non-metallic surface		Supports	Metallic Surface	
Open	Close	Direction	Open	Close
31 mm	29 mm	X	30 mm	25 mm
34 mm	31 mm	Y	36 mm	35 mm
35 mm	31 mm	Z	45 mm	40 mm

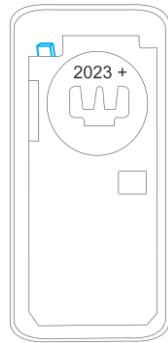


Battery replacement

The XPD03-E-1433-00 Door/Window Sensor requires a CR2032 battery. Once the battery is low, the panel displays a low battery icon next to the sensor in the devices list. The battery must be replaced within 7 days of the first low battery notification. If the battery is not replaced within 7 days, the sensor may not function properly.

WARNING: If an incompatible replacement battery is used, or the battery is installed incorrectly explosion or damages may occur.


To replace the battery:

1. Locate the bottom of the sensor (the slotted short end).
2. Gently slide a fingernail/fingertip into the slot and pull the sensor cover out and away from the sensor's base.

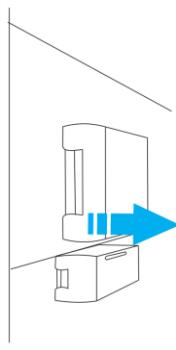


3. The sensor containing the battery and circuit board is no longer attached to the door/window.

Locate the tab holding the circuit board in the sensor.

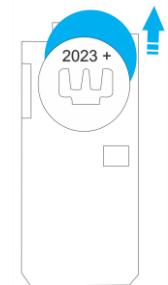

4. Press and hold the tab away from the circuit board, and then turn the sensor over.
5. Use a fingernail/fingertip to push the battery out of the casing, noting the polarity of the battery.

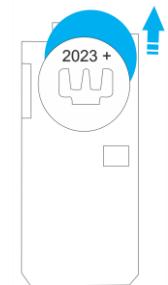

6. Slide a new CR2032 battery into the battery casing, making sure that the polarity is correct.
7. Press the circuit board back into the sensor casing until secure. There will be an audible snap.
8. Press the sensor back onto the base.
9. Test the sensor.

Specifications

Wireless signal range	820.21 ft. (250 m)
Transmitter frequency	433.95MHz TX
Encrypted	Yes
Transmitted indications	Tamper Low battery
Battery type	CR2032 (220mAh)
Battery life	5 years
Screw size	M3 x 16mm
Adhesive	3M 4930
Sensor dimensions (W x H x D)	1.69 x 2.52 x .51 in. (43 x 64.05 x 13 mm)
Operating environment	
Temperature	32 to 122.6°F (0 to 50°C)
Relative humidity	85% max
Water resistant	No

Regulatory information

Manufacturer	Syber Sense
North American standards	ETL listed to: UL 634, ULC ORD634

FCC compliance	FCC ID: 2AVDCXP03-E-1433 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
----------------	--

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.