

Quick Installation Guide

REV.2.0

Quick Installation

1 Power on

Plug in next to your router, Wait until the WLAN LED is blinking.



2 Connect

For Windows Users




Disconnect your Ethernet (wired) connection from your computer. Click the Wi-Fi icon on the taskbar and connect to the Repeater's network (e.g. [WiFi-Repeater](#)).

For Mac OS X Users



Disconnect the Ethernet (wired) connection from your computer (if any). Click the Wi-Fi icon in the top right corner of the screen, and connect to the Repeater's network (e.g. [WiFi-Repeater](#)).

For Wired

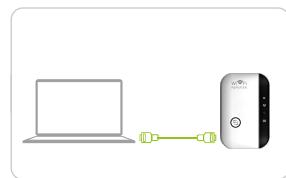

Disable the Wi-Fi on your computer. Connect your computer to the Repeater via an Ethernet cable.

3 Configure the Repeater Mode

1 Launch a web browser and type <http://myrepeater.net> or <http://192.168.10.1> in the address field. Enter admin (all lowercase) for both Username and Password, then click Login.

3 Select your Wireless router's Network, Either keep the default SSID or customize it for extended network and insert the key of your network.

Note: The default Repeater ssid is set to be **xxx_ext**(xxx indicates host Router's SSID) and the Security Key is the same as your host Router's WiFi key.



2 After logging in, you will see the web page below:



Click on "Repeater" to continue.

4 Click on "Apply" button, The Wi-Fi Repeater will restart. After the reboot has been completed, the Wi-Fi Repeater is accessible under the SSID and the Wireless key.

Use the Repeater as a Network Adapter

The Repeater can be used as a wireless adapter to connect any Ethernet-enabled device, such as a Blu-ray player, game console, DVR, or smart TV, to your wireless network.

After the Repeater connected to the Internet, you can connect an Ethernet-only device to the Repeater using an Ethernet cable.

Ethernet Connection



LED Explanation

Icon	Indication	Status
	POWER LED	ON: The device is power on OFF: The Device is not receiving electrical power
	WLAN LED	Wireless signal
	WPS LED	Flashing: WPS connection is established or WPS signal of another device is expected
	LAN LED	ON: The LAN port is connect OFF: The LAN port is disconnected Flashing: Transferring data to/from a network device

Button Explanation

WPS Button: If your host router supports WPS function, you can press the WPS button and then press the WPS button of the WiFi Repeater to establish a secure connection between the host router and the WiFi Repeater.

Reset Button: This button is used to restore The Repeater's factory default settings. With the Repeater powered on, use a pin to press and hold the Reset button for about 8 seconds.

LAN Port: One 10/100Mbps RJ45 Ethernet port is used to connect an Ethernet-enabled device to a Wi-Fi network, such as Internet TV, DVR, Gaming console and so on. Please note that this port cannot be connected to a router.

4

Relocate

Plug in the Repeater halfway between your router and the Wi-Fi dead zone.



Enjoy!

The Repeater WiFi-Repeater to the end of the host network's SSID and uses the same Wi-Fi password.



5

Configure the AP Mode

1 Follow process 1~3.1, After logging in, you will see the web page below:



Click on "AP" to continue.

2

Change the SSID and Password, Click on "Apply" button, The WiFi Repeater will restart.



SSID	SSID of the WiFi Extender
Channel	Auto (recommend)
Security type	Set the wireless security and encryption to prevent from unauthorized access and monitoring. Supports WEP,WPA,WPA2, WPA/WPA2 encryption methods.
Security Key	The "password" of the WiFi Extender

3

After the Repeater reboot has been completed, connect it to your router's Ethernet port with an Ethernet cable.

6

Using WPS

WPS is an easier way to extend your host network. You are recommended to use this method if your host router has a WPS button.

Note: your host router should support WPS.

The button might look like one of these: Otherwise, please setup Using a Web Browser.

1)Press the WPS Button on your host Router.

2)Press and hold the WPS Button on the side of the WiFi Repeater for one second within 2 minutes.

3)If the connection is successful, The default Repeater ssid is set to be xxx_ext (xxx indicates host Router's SSID) and the Security Key is the same as your host Router's WiFi key.

8

Factory Default and Settings Backup, Restore

You can backup all Setting of this router to a file, so you can make several copied of router configuration for security reason.

Click "Manage -> Save/Reload setting" located at the home page, the following message will be displayed on your web browser.



7

Change Management password

Default password of the WiFi Extender is "admin", and it's displayed on the login prompt when accessed from web browser. There's a security risk if you don't change the default password, since everyone can see it. This is very important when you have wireless function enabled.

1)Click "Manage -> Password" located at the home page, the following message will be displayed on your web browser.



Username	Enter your current username
New Password	Enter your new password
Retype Password	Re-enter your new password

2)Click Save to save the settings.

9

Firmware Upgrade

1)Get from your service provider firmware file.

2)Click "Manage -> Upgrade Firmware" located at the home page.



Please DO NOT power off the Repeater during the upgrade process.

3)Make sure the firmware version is the same as the hardware version, then click "Browse" to select the firmware file.

4)Click "Upgrade". The upgrade process takes a few minutes to complete and the Repeater will automatically reboot itself when finished.

FAQ(Frequently Asked Questions)

Q1.What should I do if I cannot access the Repeater's web management page?

A1: Make sure your computer is connected to the extended network.

A2: Make sure your computer is set to obtain an IP address automatically.

A3: If the Repeater has connected to the router, you should go to your router's DHCP client list to obtain the Repeater's current IP address.

A4: Reset the Repeater

Q2.Why does the wireless transmission rate speed down, while the wireless signal is stronger after repeated by the Repeater?

A1:In compliance with the wireless transmission protocol, all the Repeater devices are set to work in half-duplex instead of full-duplex mode. In other words, the Repeater has to process one-way communication between your root Wireless router (or AP) and the terminal clients; so the transmission time will be double-increased, while the speed will be decreased. Recommends that you connect to the extender

when your home network connection is poor, or when you want a larger wireless coverage to eliminate "dead zones".

Q3.Why the devices connected to the Repeater cannot get an IP address from the Repeater and cannot access the Internet.

A1: Maybe you enabled a wireless MAC filter, wireless access control, or access control list (ACL) on your router. To solve this problem, please log into your router and disable the MAC filter, wireless access control or ACL.

A2:Maybe the Repeater has not been successfully connected to your router, please reset the Repeater and Reconfiguration.

A3:Maybe the IP address of the router is occupied or the wireless device connected by the router has reached the limit. please reboot your router, then reset the Repeater and Reconfiguration.

FCC ID: 2AXEHROUTER-300

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.