




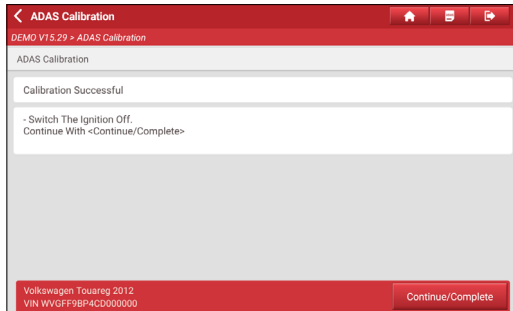


Switch the ignition off, tap **Continue/Complete** to continue.

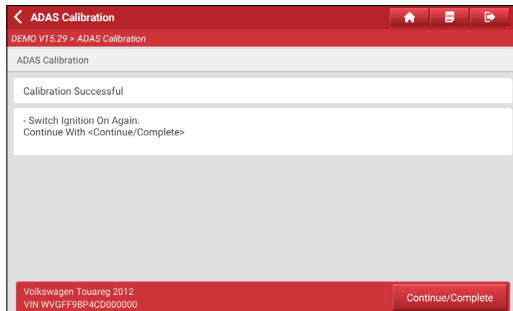

Switch the ignition on again, tap **Continue/Complete** to code the Driver Assistance systems front camera data into the vehicle's ECU.

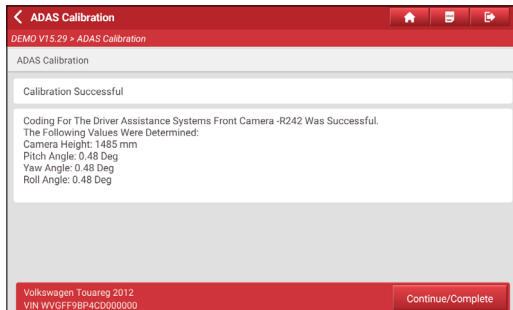

After successfully coding the front camera, tap **Continue/Complete** to continue.

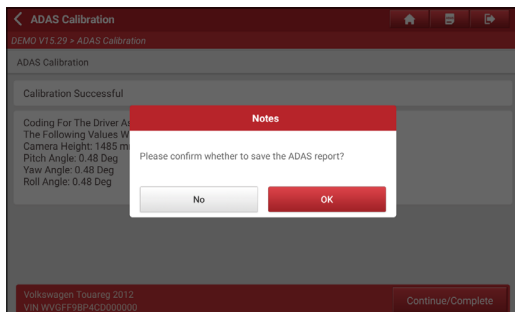

Tap **OK** to save the ADAS report. The ADAS reports are saved under the **ADAS Report** tab in **ADAS Report** on the Job Menu.

5.3.4 Health Report

After performing ADAS calibration, use this option to re-scan all control modules of the vehicle and check whether the DTCs related to the ADAS systems has been cleared or not.

6 Diagnose


Two methods are available to access the vehicle diagnostic software.

6.1 VIN SCAN

This function enables you to quickly access the vehicle diagnostic software through reading the vehicle's VIN (Vehicle Identification Number).


For this method, camera scan and manual input are available.

Tap **VIN scan**, the following screen will appear:

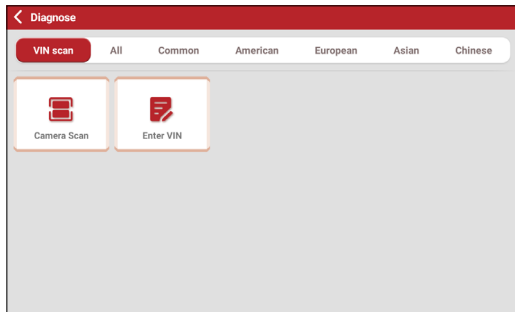

A. Camera Scan: This mode allows you to identify the vehicle model via scanning the vehicle VIN.

Tap **Camera Scan**, the following screen will appear:

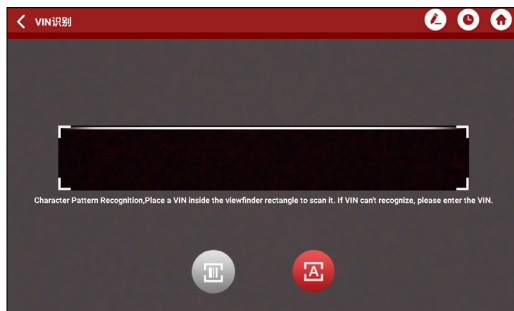

Place the VIN inside the viewfinder rectangle to scan it. The most recognizable location for this number is in the top left corner on the vehicle's dashboard. Other locations include the driver's door or post, and the firewall under the hood.


- If you have scanned the VIN of the vehicle, tap  to choose it from the record list.
- In case the tablet failed to detect it, tap  to enter it manually.
- Tap  to switch the camera to barcode pattern recognition mode.
-  indicates the camera is in character pattern recognition mode (default mode).

Once scanning is complete, the tablet will enter the diagnostic software of the vehicle directly.

Tap the desired option to perform the corresponding function.

B. Enter VIN: In this mode, input the VIN manually to enter the diagnostic software of the vehicle. In general, vehicle identification numbers are standardized - all contain 17 characters. VIN characters may be capital letters A through Z and numbers 1 through 0; however, the letters I, O and Q are never used in order to avoid mistakes of misreading. No signs or spaces are allowed in the VIN.

Tap **Enter VIN**, the following screen will appear:

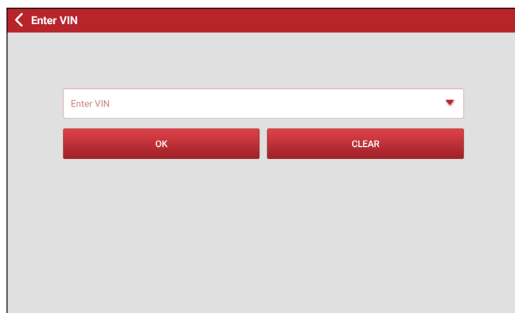


Input the VIN, and tap **OK**, the tablet will automatically identify the vehicle model and enter the diagnostic software of the vehicle.

6.2 Manual Selection

In this mode, tap the appropriate vehicle logo, then follow the on-screen instructions to access the diagnostic software.

Take **DEMO** as an example to demonstrate the basic procedures on how to diagnose a vehicle.

1). Select diagnostic software version: Tap **DEMO** to go to Step 2.

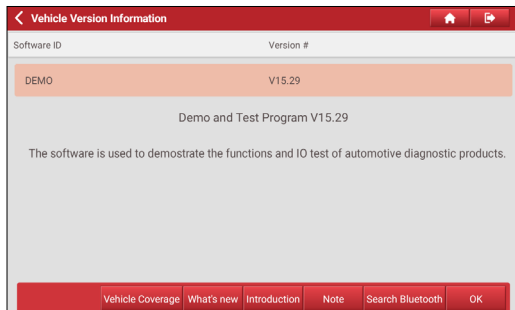

The diagnostics toolbar contains a number of buttons that allow you to print the displayed data or make other controls. It is displayed on the upper right corner of the screen and goes through the whole diagnostic session. The table below provides a brief description for the operations of the diagnostics toolbar buttons:

 Home	Tap to navigate to the Job Menu.
 Exit Session	Tap to exit the current diagnostic session.

On-screen Buttons:

Vehicle Coverage: Tap to view the vehicle models that the current diagnostic software covers.

What's new: Tap to view the optimized items and enhancements.


Introduction: Tap to check the software function list.

Note: Tap to read some precautions on using the current diagnostic software.


Search Bluetooth: Tap to start searching for Bluetooth VCI dongles.

OK: Tap it to go to next step.


- 2). Select vehicle model (varies with different versions): Select the desired vehicle model. Here we take Ford for example to demonstrate how to diagnose a vehicle.

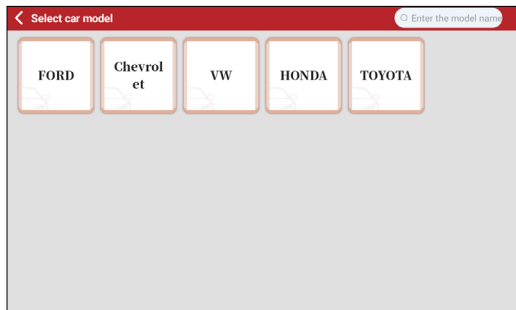


- 3). Turn the ignition key to ON: Set the ignition switch to on.

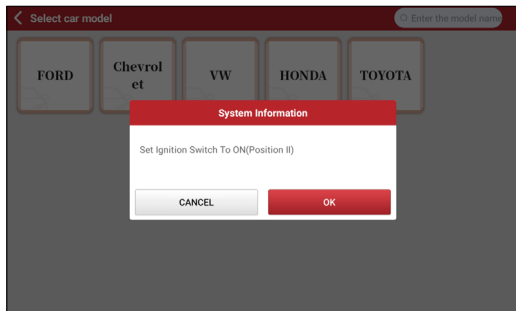

- 4). Read vehicle information: After reading the vehicle information, double check if the vehicle information is correct or not. If yes, tap **YES** to continue.

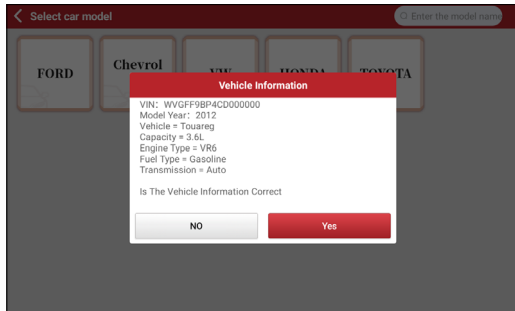


5). Select test item: Select the desired test item to proceed.

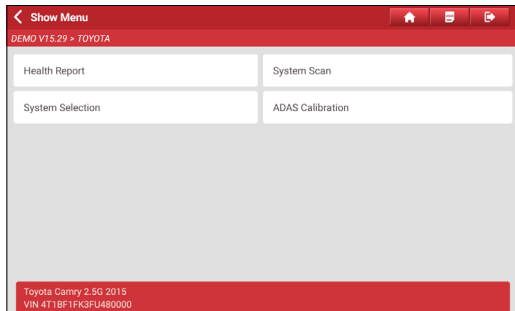

6.2.1 Health Report (Quick Test)

This function varies from vehicle to vehicle. It enables you to quickly access all the electronic control units of the vehicle and generate a detailed report about vehicle health.

Tap **Health Report** on the test item selection screen to scan the vehicle control modules. When scanning is complete, the following screen will appear:

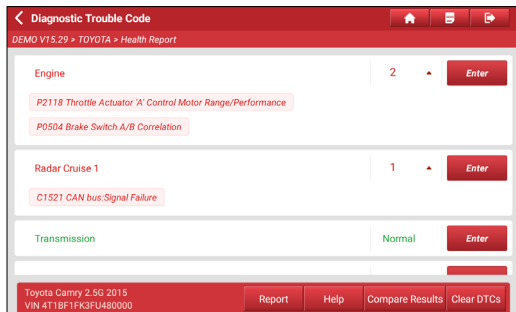

Systems with fault codes are displayed in red. Systems functioning normally are displayed in black.

Warning: DTCs (Diagnostic Trouble Codes) or Fault Codes can be used to identify which engine systems or components that are malfunctioning. Never replace a part based only on the DTC definition. Retrieving and using DTCs for troubleshooting vehicle operation is only one part of an overall diagnostic strategy. Follow testing procedures (in vehicle's service manual), instructions and flowcharts to confirm the locations of the problem.

On-screen Buttons:

▼: Tap to view detailed Diagnostic Trouble Code information. Tap ▲ to hide it.

Enter: Tap to select other test functions. Refer to the Chapter 6.2.3 for further information.

Report: Tap to save the diagnostic result as a diagnostic report in text format.

Report Information

Report Type
Pre-Repair ▼

Vehicle Information

Toyota	Camry 2.5G
2015	56525 km
4T1BF1FK3FU480000	License #:

Report Info
Toyota_4T1BF1FK3FU480000_DataStream_20210201165855

Skip OK

Tap ▼ to choose the report type from the drop-down menu and input the required information, and then tap **OK**.

Note: Diagnostic report is classified into three categories: Pre-Repair report, Post-Repair report and Diagnostic Scan. No matter which type you saved the report as, the report type will be appended as a tag on the upper right corner of the diagnostic report for easier identification.

To facilitate the comparison of the pre-repair and post-repair reports and get accurate test result, please make sure you saved the right type of the diagnostic report.

To save the report as a common diagnostic report, select **Diagnostic Scan**.

Input the technician and customer name and then tap **OK** to enter the report details screen. To ignore the workshop information, tap **Skip**.

On the report details screen, tap **Save** to save it. All diagnostic reports can be accessed from **Job Menu -> ADAS Report -> Diagnostic Report**.

Help: Tap to view the help information of the selected Diagnostic Trouble Code.

Compare Results: Tap to select the pre-repair report to compare. By comparison of the pre- and post- repair reports, you can easily identify which Diagnostic Trouble Codes are cleared and which remain unfixed.

< Compare Results		
DEMO Y15.29 > TOYOTA > Health Report		
DTC	Post	Pre
Engine		
P2118 Throttle Actuator 'A' Control Motor Range/Performance	Cleared	Found
P0504 Brake Switch A/B Correlation	Cleared	Found
Radar Cruise 1		
C1521 CAN bus:Signal Failure	Cleared	Found



Note: Before performing this function, please make sure that:

- You have saved a pre-repair report of the currently tested vehicle, and
- You have already made some repairs and service and cleared the DTCs after the pre-repair reported is generated. Otherwise, no differences exist between the pre- and post-repair reports.

Clear DTCs: Tap to clear the existing diagnostic trouble codes.



Note: Clearing DTCs does not fix the problem(s) that caused the code(s) to be set. If proper repairs to correct the problem that caused the code(s) to be set are not made, the code(s) will appear again and the check engine light will illuminate as soon as the problem that cause the DTC to set manifests itself.

6.2.2 System Scan

This option allows you to quickly scan which systems are installed on the vehicle.

Tap **System Scan** on the test item selection screen, the system starts scanning the systems. Once the scanning is complete, the screen will display the result.

System Name	Result
Engine	Equipped
Transmission	Equipped
ABS/VSC/TRAC/EPB	Equipped
SRS Airbag	Equipped
Main Body	Equipped
Theft Deterrent	Equipped
Steering Angle Sensor	Equipped

Toyota Camry 2.5G 2015
VIN 4T1BF1FK3FU480000

Tap the desired system to advance to the test function selection page. For detailed operations on test function, please refer to Chapter 6.2.3 System Selection.

6.2.3 System Selection

This option allows you manually select the test system and function step by step.


Tap **System Selection** on the test item selection screen, the following screen will appear:

Engine	Transmission
ABS/VSC/TRAC/EPB	SRS Airbag
Main Body	Theft Deterrent
Steering Angle Sensor	Tire Pressure Monitor
Telematics	D-Door Motor
P-Door Motor	Combination Meter

Toyota Camry 2.5G 2015
VIN 4T1BF1FK3FU480000

Swipe the screen from the bottom to view the vehicle system on the next page.

Tap the desired system (take **Engine** for example) to enter the test function selection screen.

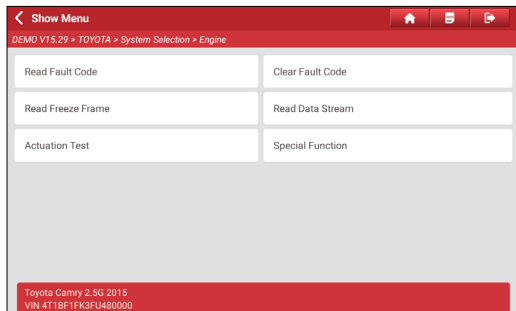


Note: Different vehicle has different diagnostic menus.

A. Read Fault Code

This function displays the detailed information of DTC records retrieved from the vehicle's control system.

Tap **Read Fault Code** on the test function selection screen, the screen will display the diagnostic result.

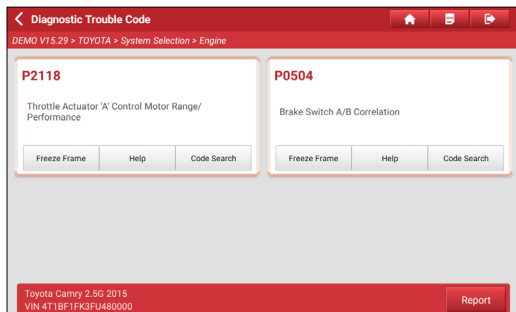

Warning: Retrieving and using DTCs for troubleshooting vehicle operation is only one part of an overall diagnostic strategy. Never replace a part based only on the DTC definition. Each DTC has a set of testing procedures, instructions and flow charts that must be followed to confirm the location of the problem. This information can be found in the vehicle's service manual.

On-screen Buttons:

Freeze Frame: When an emission-related fault occurs, certain vehicle conditions are recorded by the on-board computer. This information is referred to as freeze frame data. Freeze frame data includes a snapshot of critical parameter values at the time the DTC is set.

Help: Tap to view the help information.

Code Search: Tap it to search for more information about the current DTC online.

Report: To save the current data in text format. All diagnostic reports can be accessed from **Job Menu -> ADAS Report -> Diagnostic Report**.

B. Clear Fault Code

After reading the retrieved codes from the vehicle and certain repairs have been carried out, you can use this function to erase the codes from the vehicle. Before performing this function, please be sure the vehicle's ignition key is in the ON position with the engine off.

Clearing DTCs does not fix the problem(s) that caused the code(s) to be set. If proper repairs to correct the problem that caused the code(s) to be set are not made, the code(s) will appear again and the check engine light will illuminate as soon as the problem that cause the DTC to set manifests itself.

Tap **Clear Fault Code** on the test function selection screen, a confirmation dialog box pops up on the screen. Tap **Yes** and the system will automatically delete the currently existing trouble code.



Note: After clearing, you should retrieve trouble codes once more or turn ignition on and retrieve codes again. If there are still some trouble codes in the system, please troubleshoot the code using a factory diagnosis guide, then clear the code and recheck.

C. Read Freeze Frame

This option presents you with a snapshot of critical vehicle parameter values at the time the DTC is set.


D. Read Data Stream

This option lets you view and capture (record) real-time Live Data. This data including current operating status for parameters and/or sensor information can provide insight on overall vehicle performance. It can also be used to guide vehicle repair.



Danger: If you must drive the vehicle in order to perform a troubleshooting procedure, always have a second person help you. Trying to drive and operate the diagnostic tool at the same time is dangerous, and could cause a serious traffic accident.

Tap **Read Data Stream** on the test function selection screen, the system will display data stream items.

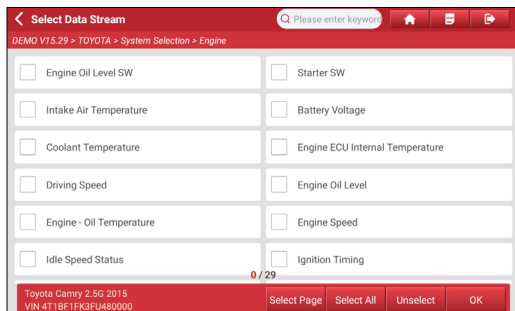

On-screen Buttons:

Select Page: Tap to select all items of the current page.

Select All: Tap to select all items. To select certain data stream item, just check the box before the item name.

Unselect: Tap to deselect all data stream items.

OK: Tap to confirm and go to the next step.

After selecting the desired items, tap **OK** to enter the data stream reading screen.

Data Stream				
DEMO V15.29 > TOYOTA > System Selection > Engine				
Name	T	Value	Standard Range(Data Stream Sample)	English Metric
Engine Speed		822.51	580.3 - 826.5	rpm
Idle Speed Status		Active	0 - 100	
Ignition Timing		-0.42	-0.43 - -0.38	degree KW
Battery Temperature		62.53	61.52 - 63.54	degree C
Pedal - Travel Sensor		0	0 - 0	%
Toyota Camry 2.5G 2015 VIN 4T1BF1FK3FU480000				
Compare Sample Save Sample Graph Report Record				

Notes:

1. Tap **T**, the following popup will appear.

Style set			
Engine Oil Level SW		B	A
Starter SW		B	A
Intake Air Temperature		B	A
Battery Voltage		B	A
Coolant Temperature		B	A
Engine ECU Internal Temperature		B	A
Driving Speed		B	A

Here the user can set different display style for each selected item.

indicates sticky top. If it is tapped, it will change into . On the data stream display screen, the data stream item with will be shown on the top of the selected data stream list. To remove it from the top of the list, just tap it again.

B indicates this item will be displayed in **Bold**.

A indicates this item will be displayed in **Red**.

2. Tap **English** or **Metric** to switch the measurement unit.
3. If the value of the data stream item is out of the range of the standard (reference) value, the whole line will display in red. If it complies with the reference value, it displays in blue (normal mode)

There are 3 types of display modes available for data viewing, allowing you to view various types of parameters in the most suitable way.

- Value – this is the default mode which displays the parameters in texts and shows in list format.
- Graph – displays the parameters in waveform graphs.

- **Combine** – this option is mostly used in graph merge status for data comparison. In this case, different items are marked in different colors.

On-screen Buttons:

 Tap it to view the waveform graph of the current data stream item.




 **Note:** The waveform can be zoomed in or out via: Spread apart/pinch together.

To zoom in manually, place two fingers on the screen and then spread them apart. To zoom out, place two fingers apart on the screen and then pinch them together.

- **Min/Max:** Tap to define the maximum/minimum value. Once the value goes beyond the specified value, the system will alarm.

 **Note:** The real time (Live Data) vehicle operating information (values/status) that the on-board computer supplies to the tool for each sensor, actuator, switch, etc. is called Parameter Identification Data (PID).

Graph: Tap to view the waveforms of the selected data stream items.

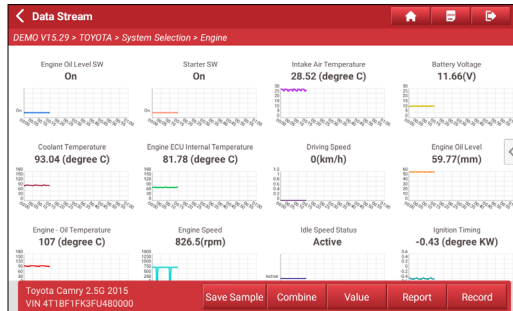

- **Combine:** This option is mostly used in graph merge status for data comparison. Select (Maximum 4 data stream items can be selected)/deselect the desired items and then screen will display/remove the waveforms corresponding to these items immediately.
- **Value:** Tap to display the parameters in texts.

Compare Sample: Tap to select the sample DS file, the values you customized and saved in process of data stream sampling will be imported into the **Standard Range** (See below) column for your comparison.



Note: Before executing this function, you have to sample the values of data stream items and save it as an sample DS file.

Data Stream				
DEMO V15.29 > TOYOTA > System Selection > Engine				
Name	Value	Standard Range(Data Stream Sample)	English	Metric
Engine Speed	822.51	580.3 - 826.5	rpm	
Idle Speed Status	Active	0 - 100		
Ignition Timing	-0.42	-0.43 - -0.38	degree KW	
Battery Temperature	62.53	61.52 - 63.54	degree C	
Pedal - Travel Sensor	0	0 - 0	%	
Toyota Camry 2.5G 2015 VIN 4T1BF1FK3FU480000				
Compare Sample Save Sample Graph Report Record				

Report: To save the current data as a diagnostic report. All diagnostic reports can be accessed from **Job Menu -> ADAS Report -> Diagnostic Report**.

Record: Tap to start recording diagnostic data. Recorded live data can serve as valuable information to help you in troubleshooting of vehicle problems. All diagnostic records can be replayed from **Job Menu -> ADAS Report -> Diagnostic Record**.



Note: The saved file follows the naming rule: It begins with vehicle type, and then the product S/N and ends with record starting time (To differentiate between files, please configure the accurate system time).


Help: Tap to view the help information.

Save Sample: This item enables you to customize the standard range of live data stream items and save it as Data Stream Sample file. Each time you run the data stream items, you can call out the corresponding sample data to overwrite the current standard range.

Tap it to start recording the sample data, and the following screen will appear:



Note: Only the data stream items with measurement units will be recorded.

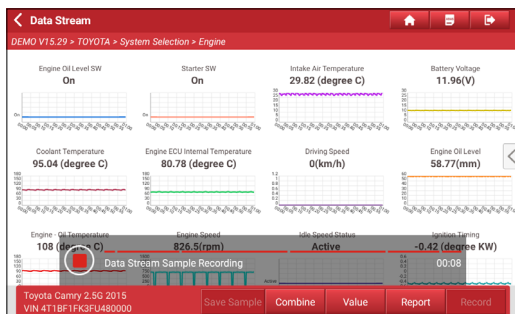

Tap  to stop recording and enter the data revision screen.

Name	Min Value	Max Value	Unit
Battery Temperature	61.52	63.54	degree C
Battery Voltage	9.2	11.96	V
Coolant Temperature	88.0	97.04	degree C
Driving Speed	0.0	0.0	km/h
Engine - Oil Temperature	78.0	109.0	degree C

Toyota Camry 2.5G 2015
VIN 4T1BF1FK3FU480000

Save

Tap the Min./Max. value to change it. After modifying all desired items, tap **Save** to save it as a Data Stream Sample file. All Data Stream Sample files are stored under the **Data Stream Sample** tab in **Job Menu -> Others -> User Info**.

E. Actuation Test

This option is used to access vehicle-specific subsystem and component tests. Available test vary by vehicle manufacturer, year, and model. During the actuation test, the tablet outputs commands to the ECU in order to drive the actuators, and then determines the integrity of the system or parts by reading the ECU data, or by monitoring the operation of the actuators, such as switching a injector between two operating states.

Tap **Actuation Test** on the test function selection screen, simply follow the on-screen instructions and make appropriate selections to complete the test. Each time when an operation is successfully executed, **Completed** displays.

6.2.4 ADAS Calibration

This function provides another access to the ADAS calibration. Different from the ADAS Calibration module on the Job Menu, it allows you to directly perform the ADAS calibration operation without starting from the scanning of the vehicle model.


7 Software Update

This module allows you to update the diagnostic software & App and set frequently used software.

If you did not download the software in process of product registration or a pop-up message prompting you that some new software can be updated, you may use this option to download it or keep it synchronized with the latest version.

7.1 Update Diagnostic Software & APP

Tap **Update** on the Job Menu to enter the update center.

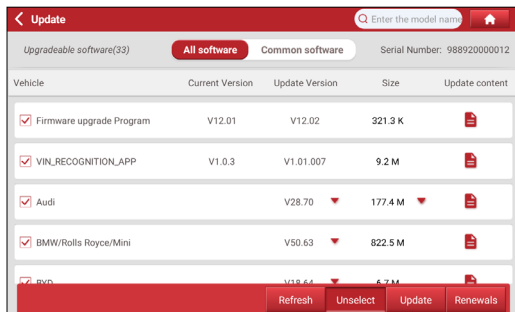

By default, all diagnostic software is selected. To deselect certain software, tap **Unselect**, and then check the box next to vehicle model. Tap **Update** to start downloading.


It may take several minutes to finish it, please be patient to wait.

Once download is finished, the software packages will be installed automatically.

7.2 Set Frequently Used software

To easily locate and quickly update some frequently used software, you can use the **Common Software** option to create a frequently used software list.

Tap **Common software**, the following screen will appear.

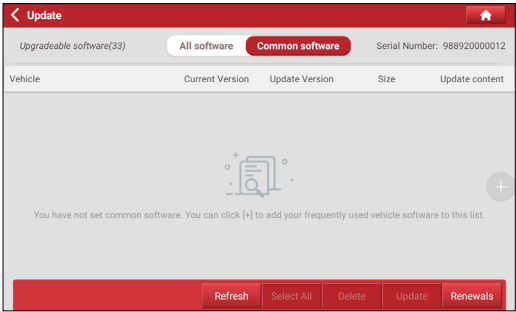


Tap , a pop-up window will appear. Select the checkbox before the software name and tap **SAVE**, the software will be displayed in the Common software list. Next time you want to update it, just go to **Common Software**.

8 ADAS Report

This option is used to view and manage the saved reports.

Tap **ADAS Report** on the Job Menu, there are total 3 options available.

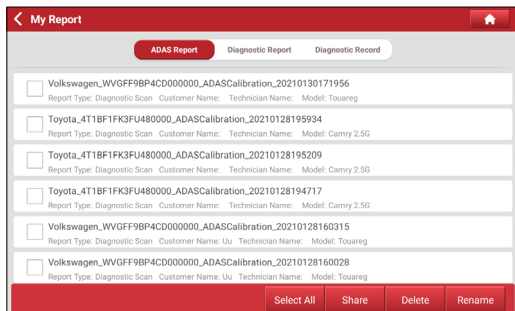


1. If the ADAS calibration result is saved in process of the ADAS calibration, the files will be listed under the **ADAS Report** tab.

- To select certain report, check the box before the report. To select all reports, tap **Select All**. To deselect all, tap **Unselect**.
- To share the report with others, select the desired one and then tap **Share**.
- Select the desired report and then tap **Delete** to delete it.
- To change the filename of report, tap **Rename**.


2. If the DTC result is saved on Read Trouble Code page, the files will be listed under the **Diagnostic Report** tab.

3. If user records the running parameters while reading data stream, it will be saved as .x431 file and appear under the **Diagnostic Record** tab.

Tap the desired one to enter, the following screen will appear:

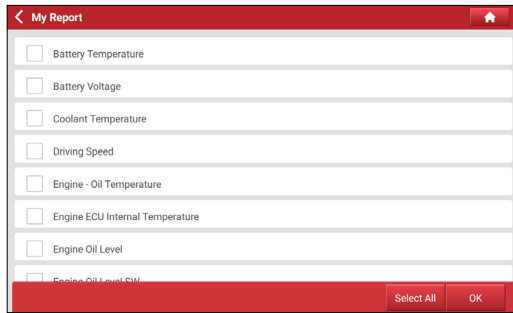

Select the desired data stream items and tap **OK** to jump to the playback page:

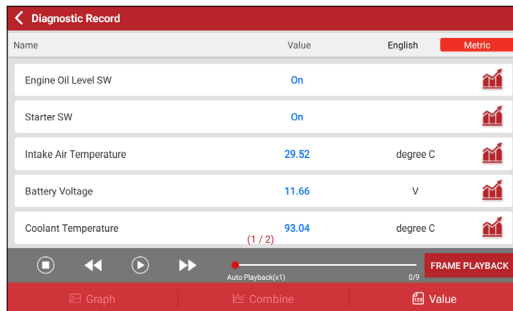

On-screen Buttons:

Graph – displays the parameters in waveform graphs.

Combine – this option is mostly used in graph merge status for data comparison. In this case, different items are marked in different colors.

Value – this is the default mode which displays the parameters in texts and shows in list format.

FRAME PLAYBACK – plays back the recorded data stream items frame by frame. Once it is in frame playback mode, this button changes into **AUTO PLAYBACK**.

9 Others

9.1 Tablet Setting

The function allows you to make some settings of Android system.

9.2 User Info


9.2.1 VCI

This option allows you to manage all your activated VCI dongles.

If several VCIs are activated on this tool, a list of VCIs will be displayed on the screen. Once you choose the VCI that belongs to other account, you have to log out, and then input the right account to continue.

9.2.2 Activate VCI

This item lets you activate the VCI dongle in case you ignore the **Activate VCI** step in process of the initial product sign-up.

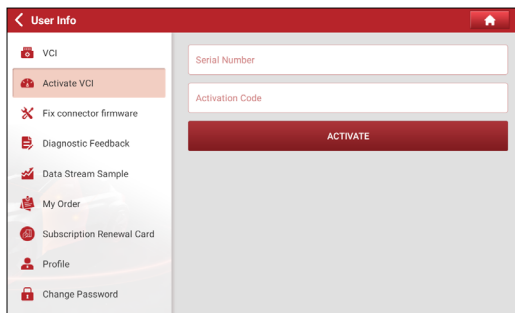


Input the Serial Number and Activation Code on the included password envelope, and then tap **Activate** to activate it.

9.2.3 Fix Connector Firmware

Use this item to download and update the VCI firmware if you are experiencing difficulties communicating with the VCI dongle.

During fixing, keep the VCI dongle powered up and do not cut power or switch to

other interfaces.

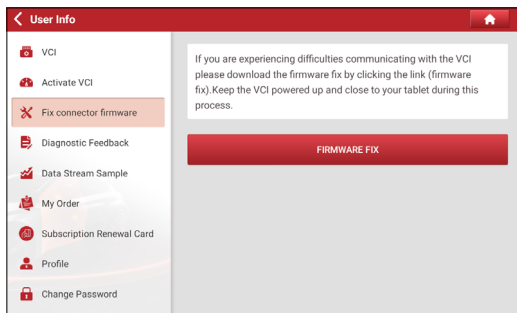


9.2.4 Diagnostic Feedback

This item allows you to feedback your diagnostic problems to us for analysis and troubleshooting.

Tap **Diagnostic Feedback**, the following 3 options will be displayed on the left column of the screen.

A. Feedback

Tap a tested vehicle model to enter the feedback screen.

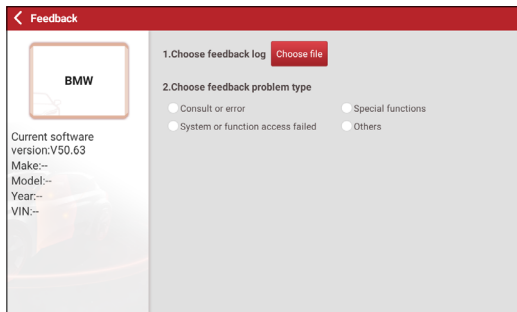

- 1) Tap **Choose File** to open the target folder and choose the desired diagnostic logs.
- 2) Choose the failure type and fill in the detailed failure description in the blank text box and telephone or email address. After inputting, tap **Submit Result** to send it to us.

B. History

Tap it to view all diagnostic feedback records. Different process states are marked with different colors.

C. Offline list

Tap it to display all diagnostic feedback logs which have not been submitted successfully due to network failure. Once the tablet gets a stable network signal, it will be uploaded to the remote server automatically.

9.2.5 Data Stream Sample


This feature allows you to manage the recorded data stream sample files.

9.2.6 My Order

This item allows you to check the status of all your orders.

9.2.7 Subscription Renewal Card

This item is used to check the status of the subscription renewal card.

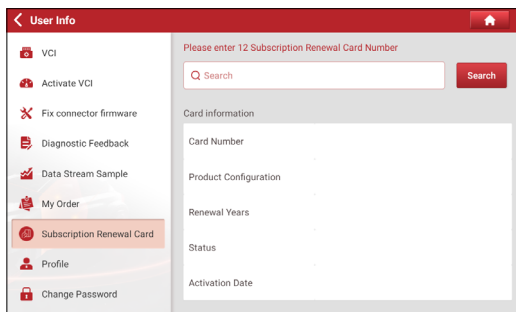

1. Input the 12-digit subscription renewal card number.
2. Tap **Search** to get the search result.

9.2.8 Profile

Use this item to view and configure personal information.

- Tap the user image to change it.

- Tap > next to “Free Upgrade Period” to check the due date of all diagnostic software.

9.2.9 Change Password

This item allows you to modify your login password.

9.2.10 Diagnostic Software Clear

This item allows you to hide/clear the diagnostic software that is not frequently used.

Tap **Diagnostic Software Clear**, the screen displays as follows:

Under the **Hide Software** tab, select the desired software logo (a “Checkmark” will show in the checkbox located at the lower right corner) and tap **Hide**, it will become invisible. Tap **Unhide** to undo the hide operation.

Under the **Remove Software** tab, select the desired software logo and tap **Delete**, it will disappear from the screen.



Note: Removing software may completely delete the software from the tablet. If some software is not used and the tablet runs out of space, you can use this feature to remove it. To re-download it, go to **Job Menu -> Update -> All Software**.

9.2.11 Settings

It enables you to make some application settings and view software version information etc.

A. Units

It is designed to configure the measurement unit. Metric System and English System are available.

B. Clear Cache


This item is used to clear the App cache.

Tap **Clear Cache**, a pop-up window will appear on the screen. Tap **OK** to clear cache and the system will restart the App.

C. Mode Switch

There are two USB ports available on the tablet. This option allows you to switch to different USB function modes according to the application requirements.

Tap **Mode Switch**, the following screen will appear.

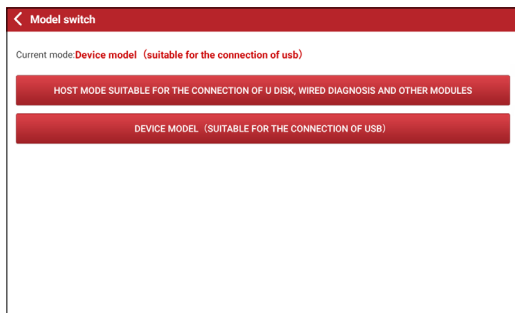

- If the HOST MODE is selected, plug the external storage device into the USB expansion slot of the tablet directly to exchange data or connect the VCI dongle to the tablet via the included data cable (Type-A to Mini B) to perform wired vehicle diagnosis.
- When in DEVICE MODE, connect the tablet to the PC via the included charging cable (Type-A to Type C) for charging or data exchange.

D. About

The software version information and service agreement etc. are included.

E. Diagnostic Software Auto Update

This option is used to set whether automatic update function is ON.

F. Log In/Log Out

To logout the current user ID, tap **Log Out**.

To login the system again, tap **Log In**.


9.3 System OTA Upgrade

An Over-the-Air (OTA) update is the wireless delivery of new operating system, software or data to tablets and mobile phones. Wireless carriers have traditionally used over-the-air updates to deploy firmware and configure phones or tablets for use on their network.



Note: While performing OTA update, please make sure the tablet battery has at least 70% and DO NOT run any other programs during the update.

1. In the Job Menu, tap **Others -> System OTA Upgrade**.

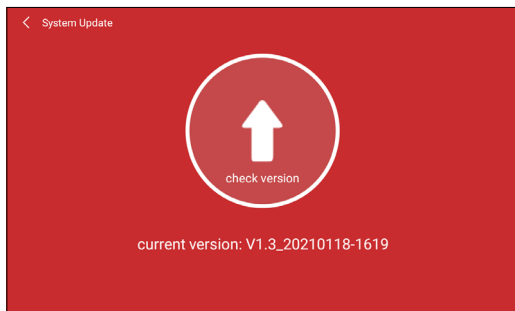

2. Tap **Check version**. Once a newer version is found, follow the on-screen instructions to download and install the update file.
3. Be patient to wait until the update is done.

9.4 TeamViewer QS


TeamViewer is a simple, fast and secure remote control interface, which enables you to receive remote support from technician fellows, colleagues or friends by allowing them to control your tablet on their computer or TeamViewer software on the mobile device.

Computer and mobile devices that run TeamViewer are identified by a globally unique ID. The first time the TeamViewer is launched, this ID is generated automatically based on the hardware characteristics and will not change later on.

This app allows you to request a remote support from a partner.

Follow the steps below to proceed:

1. In the Job Menu, tap **Others -> TeamViewer QS**. The TeamViewer interface displays and the device ID is generated and shown.

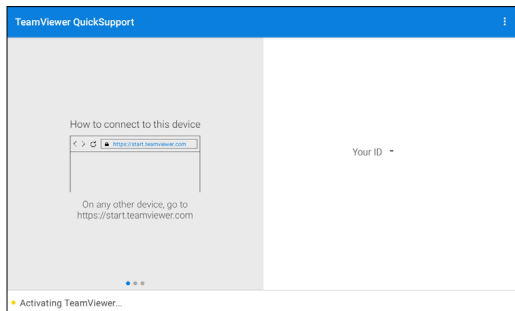

2. Your partner must install the TeamViewer full version program (if not installed, go to <http://www.teamviewer.com> to download it), and then start the software on his/her computer at the same time, in order to provide support and take control of your tablet remotely.
3. Provide your ID to the partner, and wait for him/her to send you a remote control request.
4. A dialog box asking for your confirmation to allow remote control on your tablet will appear.
5. Tap **Allow** to accept, or tap **Deny** to reject.

For more information, please refer to the associated TeamViewer documents.

9.5 Browser

This browser is a simple and convenient web browsing tool.

It can help you quickly and securely search for the content you need. It is powerful and can ensure that users can make the browser run quickly and stably when multiple pages are opened.

9.6 Files

ES File Explorer is a file and application manager. You can access and create folders on the tablet without needing to connect it to a computer.

The app also features an application manager, task killer and download manager. Another excellent feature is support for cloud storage accounts. This means you can download files directly to the folders you want without using a separate app.

The app has built-in ZIP and RAR sources, so you can access compressed files

without unpacking them on your tool first.

For more information, please refer to the associated ES file explorer documents.

9.7 Gallery

This function allows you to take new pictures and manage the picture library (including screenshots).

9.8 Recording Master

It is an easy-to-use, free screen recorder app, allowing you to capture any area of your screen either as a screenshot or a screencast video file.

9.9 Email

The function allows you to send and receive email.



Note: Before sending or receiving email, you have to set up an email account. In addition, this function required a stable network connection.

1. In the Job Menu, tap **Other -> Email**.
2. Input the Email address, tap **NEXT**.
3. Choose the desired email account type.
4. Input the password, tap **Next**.



Note: If “Manual setup” is selected, please consult your email service provider for detailed parameter setting.

5. Follow the on-screen instructions to proceed until the system prompts you that the account setup has been finished.

10 FAQ

1. How to save power?

- Please turn off the screen while the tablet keeps idle.
- Set a shorter standby time.
- Decrease the brightness of the screen.
- If WLAN connection is not required, please turn it off.

2. Communication error with vehicle ECU?

Please confirm:

1. Whether the VCI dongle is correctly connected.
2. Whether ignition switch is ON.
3. If all checks are normal, send vehicle year, make, model and VIN number to us using Diagnostic Feedback feature.

3. Failed to enter into vehicle ECU system?

Please confirm:

1. Whether the vehicle is equipped with this system.
2. Whether the VCI dongle is correctly connected.
3. Whether ignition switch is ON.
4. If all checks are normal, send vehicle year, make, model and VIN number to us using Diagnostic Feedback feature.

4. How to reset the tablet?

Resetting may cause data loss. Before doing so, please make sure important data and information has been backed up.

Do the following to reset the tablet:

1. Tap **Others -> Tablet Setting -> System -> Reset options**.
2. Tap **Erase all data (factory reset)**.
3. Tap **RESET TABLET**.
4. Tap **ERASE EVERYTHING** to start resetting until the tool automatically reboots.

5. What to do if the language of vehicle diagnostic software does not match the

system language?

English is the default system language of the tool. After the system language is set to the preference language, please go to the update center to download the vehicle diagnostic software of the corresponding language.

If the downloaded diagnostic software is still displayed in English, it indicates that the software of the current language is under development.

Warranty

THIS WARRANTY IS EXPRESSLY LIMITED TO PERSONS WHO PURCHASE SMARTSAFE PRODUCTS FOR PURPOSES OF RESALE OR USE IN THE ORDINARY COURSE OF THE BUYER'S BUSINESS.

SMARTSAFE electronic product is warranted against defects in materials and workmanship for one year from date of delivery to the user.

This warranty does not cover any part that has been abused, altered, used for a purpose other than for which it was intended, or used in a manner inconsistent with instructions regarding use. The exclusive remedy for any automotive meter found to be defective is repair or replacement, and SMARTSAFE shall not be liable for any consequential or incidental damages.

Final determination of defects shall be made by SMARTSAFE in accordance with procedures established by SMARTSAFE. No agent, employee, or representative of SMARTSAFE has any authority to bind SMARTSAFE to any affirmation, representation, or warranty concerning SMARTSAFE automotive meters, except as stated herein.

Disclaimer

The above warranty is in lieu of any other warranty, expressed or implied, including any warranty of merchantability or fitness for a particular purpose.

Purchase Order

Replaceable and optional parts can be ordered directly from your SMARTSAFE authorized tool supplier. Your order should include the following information:

- Order quantity
- Part number
- Part name

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

THANK YOU FOR CHOOSING SMARTSAFE!

If you have any questions or comments please contact:

SHENZHEN SMARTSAFE TECH CO.,LTD.

Addr: 3F, Building B, Qiao'an Technology Industrial Park, Guanlan, Longhua
New District, Shenzhen

Zip: 518110

Tel: 86-755-89589916

<http://www.newsmartsafe.com>