


JARTON
Partner for life. Since 1979

Wireless Router


Quick Installation Guide

1.Package Contents

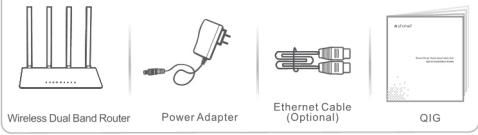

This QIG is for all Stonet wireless dual band routers, the product model shown in this QIG is N2S, as an example.
*You can visit our website: www.stonet.cc to get more supports.
*Ethernet Cable is optional for some models.

2.Hardware Connection

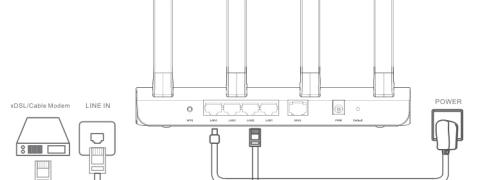

2.1. Power off your Modem.
2.2. Connect the **WAN** port on Router to the Modem's **LAN** port with an Ethernet cable.
2.3. Connect your computer to one of the **LAN** ports on Router with an Ethernet cable.
2.4. Power on your Modem.
2.5. Plug the provided Power Adapter into the **PWR** jack of Router and the other end to a standard electrical socket. Then wait for one minute.

1

3.One button networking setup steps

3.1 Add router:

1. Connect the router to the power supply, connect the router's WAN port and the external network interface with a network cable, and confirm that the WAN indicator light is on.
2. Follow the instructions to set up the wireless network and connect the phone to the network.
3. You can search for "Tuya Smart" in App Store and Android application stores, download and install. Or scan the QR code to download.



4. Open the Tuya Smart APP and click on the upper right corner .
5. Click Auto Discover to start searching for routers.
6. After the router icon is found, click Next to complete the addition of the router.

3.2 Add WiFi smart devices:

WiFi smart device:
Support one button networking devices:

1. Open Tuya Smart APP.
2. Add devices through the pop-up window on the APP homepage, router panel search, and automatic discovery.

Devices that do not support one button networking:
Add a device by short pressing the WPS button

2

4.Configure the Router via Web Management Page

4.1. Set the IP address of the wired network adapter on your computer as "Automatic" or "DHCP".

For Windows 10/8/7/Vista

- 1) Go to "Settings" (Win 8) / "Start" (Win 7/Vista) > "Control Panel".
- 2) Left-click on "Network and Internet" > "Network and Sharing Center" > "Change adapter settings" (Win 8/7) / "Manage network connections" (Win Vista).
- 3) Right-click on "Local Area Connection" and left-click on "Properties".
- 4) Double-click on "Internet Protocol Version 4 (TCP/IPv4)".
- 5) Select "Obtain an IP address automatically" and "Obtain DNS server address automatically" then left-click on "OK".

For Windows XP/2000

- 1) Go to "Start" > "Control Panel".
- 2) Left-click on "Network and Internet Connections" > "Network Connections".
- 3) Right-click on "Local Area Connection" and left-click on "Properties".
- 4) Double-click on "Internet Protocol (TCP/IP)".
- 5) Select "Obtain an IP address automatically" and "Obtain DNS server address automatically" then left-click on "OK".

For MAC OS

- 1) Click on the "Apple" menu > "System Preferences".
- 2) Click on the "Network" icon.
- 3) Click on "Ethernet" in the left side box and click on "Advanced" in the lower right corner.
- 4) In the top options, select "TCP/IP".
- 5) In the pull-down menu next to "Configure IPv4", select "Using DHCP".
- 6) Click "OK" then "Apply".

4.2. Open your browser and type <http://login.stonet.cc> in the address field to visit router's web management page.

 <http://login.stonet.cc>

3

4.3. Select the language as you need on the top box, default is in English.

4.1 In "Quick Setup" page, select your **Internet Connection Type**.

If "DHCP (Cable Modem)" is selected, the router will automatically receive the IP parameters from your ISP (Internet Service Provider).
If "Static IP" is selected, please enter the **IP Address/Subnet Mask/Default Gateway/DNS Servers** given by your ISP.
If "PPPoE" is selected, please enter the **Username** and **Password** given by your ISP.

2) Under **Wireless Setup**, configure your wireless network name (SSID) and password.

3) Left-click on "Save" to make your settings take effect.

Tip 1:
Default address: <http://login.stonet.cc>
http://192.168.1.254


Username : **guest** Password: **guest@XXXX**
2.4G SSID: **netis_2.4G_XXXX**
WiFi Password: **password**
("XXXX" "XXXX" :Last 4 digits of LAN MAC Address)

Tip 2:
You can click on "Advanced" button on the top for other Internet connection types and further settings.

5.Troubleshooting

Q How do I restore my netis Router's configuration to its default settings?

A With the router powered on, use a pin to press and hold the **Default** button on the rear panel for 8 to 10 seconds before releasing it. The router will reboot and all configurations are back to factory default.

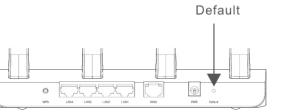

4

FCC Statement
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement.

Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

5