

SAFETY NOTE

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING:** the drive shall be disconnected from its power source during cleaning, maintenance and when replacing parts.
- The instructions shall state that the A-weighted emission sound pressure level of the drive is equal to or less than 70 dB(A), e.g. by writing $L_pA \leq 70$ dB(A).
- The mass and the dimension of the driven part shall be compatible with the rated torque and rated operating time.
- The type of driven part the drive is intended for.
- WARNING:** Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.
- Do not allow children to play with fixed controls. Keep remote controls away from children.
- Frequently examine the installation for imbalance and signs of wear or damage to cables and springs. Do not use if repair or adjustment is necessary.
- Watch the moving shutter and keep people away until the shutter is completely closed.
- WARNING:** Important safety instructions. Follow all instructions, since incorrect installation can lead to severe injury.
- Before installing the drive, remove any unnecessary cords and disable any equipment not needed for powered operation.




Li-ion

Do not dispose of in general waste.
Please recycle batteries and damaged electrical products appropriately.

WM35L Series

Instruction | v1.0 Dec 2023

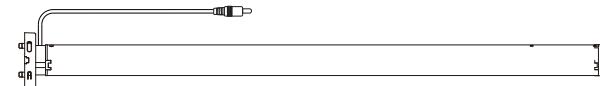

Features

- Built-in Receiver
- Jog & Tilt
- Built-in Lithium Battery
- Status Feedback
- Switch Direction
- Reset to Factory Mode
- Memorized Setting
- Electronic Limit
- Preferred Stop Position
- Speed Regulation
- Scene Control

Fields of Application



The motor is suitable for motorization of roller blinds.

Specifications

Working temperature: -10°C ~ +50°C	Radio Frequency: 433.925MHz
Input Voltage: 12~18V (WM35L)	Maximum Running Time: 6 minutes

Following data for reference


Model	Rated Torque (N.m)	Rated Speed (rpm)	Rated Power (W)
WM35L	6	24	20

* For reference only.

Attention

Never drop, knock, drill or submerge the motor. Keep the power cable in right position as following. Important safety instructions to be read before installation.

Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.

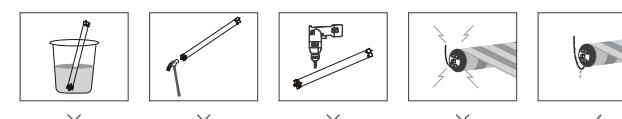

Caution

1. Do not expose motor to humid or extreme temperature conditions.
2. Do not drill into motor.
3. Do not cut the antenna and keep it clear from metal objects.
4. Do not allow children to play with this device.
5. If power cable or connector is damaged, do not use.
6. Ensure correct crown and drive adaptor are used.
7. Ensure power cable and aerial is clear and protected from moving parts.
8. Cable routed through walls shall be properly isolated.
9. Motor is to be mounted in horizontal position only.
10. Before installation, remove unnecessary cords and disable equipment not needed for powered operation.
11. Installation and programming to be performed by a qualified professional, use or modification outside the scope of this instruction may void warranty.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines.
This equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.



Important Safety Instructions To Be Read Prior To Operation.



Setting Notice

The motor will prompt when set, please proceed to the next step after the prompt.

Please read following points of attention carefully before setting.

1. Don't operate motors when low voltage alarm.
2. Operating:
 - ① The valid interval of the emitter button is 10S, the emitter will quit the set after 10S.
 - ② The motor will respond when setting, please proceed to the next step after the motor response.
3. Set the limit position:
 - ① After the upper / lower limit setting, and the upper / lower limit position can't be at the same position.
 - ② After the limit setting, with power off and memory function.
 - ③ Limit delete will clear all limit memory.
 - ④ It will exit limit setting when program there is no operation for 2 minutes.
4. If the emitter lost, please set up again with the new emitter.
5. One motor can store maximum 10 channels; after fully stored, if pair new channels, only the last one will be covered circularly.

Button Instructions

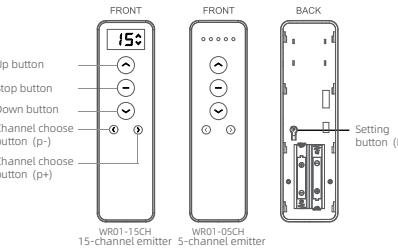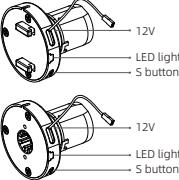

Functions of S button

1. Cycle Operation: Press S button once and every press the motor will run upward → stop → downward circularly.
2. Pairing / Pair Additional Emitter: Press S button for 2S, motor jog once, release button, motor is ready for pairing or pair additional emitter.
3. Press and hold the S button on the motor head for 6 seconds until the motor jog twice then release the button. indicates that you entered the pairing mode.
4. Radio Lock: Press and hold S button for 10S, the motor will jog twice, release button, the motor enters radio lock status, the motor won't receive any signal; Press and hold S button for 2S to disable Radio Lock.
5. Reset to Factory Mode: Press and hold S button for 14S, the motor will jog 4 times, release button, the motor has been reset to factory mode. At this point the motor will go into deep sleep. After entering deep sleep, the motor can't be controlled. At this time, you need to press S button for 2S and then the motor turns to prompt to exit deep sleep.

Essential Settings

The steps in factory mode must be completed to ensure proper operation.

Factory mode

1 Pairing



Press S button for 2S (1 jog), release button and make a long noise, press STOP for 2S (2 jogs and 3 beeps), the motor has been paired successfully.

* If within 10S, the motor doesn't receive STOP signal from the any emitter, it will exit the pairing mode automatically.

2 Switch Rotating Direction (Optional)

If press UP, the motor runs downward, try below to switch direction

1 No Limits



Press and hold UP and DOWN buttons simultaneously for 2S, motor jog once, the direction has been switched successfully.

* The operation is only valid when there is no limits. If the motor has already set the upper and lower limit, look at the next step.

2 Have Limits



Press P (1 jog), press UP and DOWN (1 jog), the direction has been switched successfully.

3 Upper and Lower Limits Setting

1 Set upper limit



Operate the motor to desired upper position, press and hold UP and STOP buttons simultaneously for 2S (2 jogs and 3 beeps), upper limit is set.

* If exit the limits setting status before you finish the limit setting, then the motor will take the previous limits if has; After the limits have been set successfully, the motor will enter the user mode.

2 Set lower limit



Press DOWN for 2S, operate the motor to desired lower position, press and hold DOWN and STOP buttons simultaneously for 2S (2 jogs and 3 beeps), lower limit is set.

* If exit the limits setting status before you finish the limit setting, then the motor will take the previous limits if has; After the limits have been set successfully, the motor will enter the user mode.

User mode

1 Add A Preferred Position

1 Set preferred position



Check both upper and lower limits are set. Operate the product to desired preferred position. Press P (1 jog and 1 beep), press STOP (1 jog and 1 beep), STOP again (1 jog and make a long noise), the preferred position is set.

* Press STOP for 2S, the motor moves to preferred position automatically.

2 Remove preferred position



Press P (1 jog and 1 beep), press STOP (1 jog and 1 beep), STOP again (1 jog and make a long noise), the preferred position is deleted.

* Press STOP for 2S, the motor moves to preferred position automatically.

2 Jog Mode & Running Mode Switch



Press and hold UP and DOWN buttons simultaneously for 5S (1 jog), press STOP (1 jog and make a long noise), switch to jog mode, if motor jog twice and beep 3 times, switch to running mode.

* When in jog mode, press UP or DOWN once, the motor will be jog running, if press more than 2 second, the motor will be continuously running.

3 Adjust Limits

1 Adjusting the upper limit



Press and hold UP and STOP buttons for 5S (1 jog and make a long noise), operate the product to desired new upper limit position, press and hold UP and STOP buttons for 2S (2 jogs and 3 beeps), the new upper limit is programmed successfully.

2 Adjusting the lower limit



Press and hold DOWN and STOP buttons for 5S (1 jog and make a long noise), operate the product to desired new lower limit position, press and hold DOWN and STOP buttons for 2S (2 jogs and 3 beeps), the new lower limit is programmed successfully.

* After entering the limits fine tuning mode, the original preferred position will not be deleted; If there is no button operation within 2 minutes, it will arrive within 2 minutes, and the motor will turn to prompt, and automatically exit the route adjustment mode; When fine-tuning the limit, press S for more than 2S to exit the mode.

4 Pair / Unpair Additional Emitter

Method one




P(a) P(a) P(b)

Press P (1 jog and 1 beep) and P (1 jog and 1 beep) on existing emitter, press P on new emitter to add (2 jogs and 3 beeps), new emitter is paired to the motor.

* Repeat same procedure will unpair additional emitter.

Method two

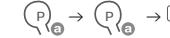


P(a) P(a) STOP(b)

Press P (1 jog and 1 beep) and P (1 jog and 1 beep) on existing emitter, press STOP on new emitter for 2S to add (2 jogs and 3 beeps), new emitter is paired to the motor.

* Repeat same procedure will unpair additional emitter.

Method three

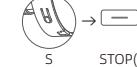

S STOP(b)

Press S button for 2S (1 jog), release button and make a long noise, press STOP on new emitter for 2S to add (2 jogs and 3 beeps), new emitter is paired to the motor.

* Repeat same procedure will unpair additional emitter.

* (a) as existing emitter, (b) as new emitter to pair/unpair; Adding the emitter should be carried out when there is a limits; All the setting of the motor will be kept after adding the new emitter.

5 Speed Regulation

1 Acceleration setting



P UP UP

Press P (1 jog and 1 beep), UP (1 jog and 1 beep), UP again (motor response frequency corresponds to 3 levels of speed), the motor running speed is accelerated.

2 jogs and 2 beeps: Is the second speed level

3 jogs and 3 beeps: Is the third speed level

2 Deceleration setting



P DOWN DOWN

Press P (1 jog and 1 beep), DOWN (1 jog and 1 beep), DOWN again (motor response frequency corresponds to 3 levels of speed), the motor running speed is decelerated.

1 jog and 1 beep: Is the first speed level

2 jogs and 2 beeps: Is the second speed level

* If the motor no response, it has already been the Max. or Min speed.

Quick Index

	Settings	Steps
1 Pairing		S (hold down 2S) → Stop (hold down 2S)
2 Switch Rotating Direction		Up + Down (hold down 2S)
3 Upper and Lower Limits Setting	Set upper limit Set lower limit	Up (hold down 2S) → Up + Stop (hold down 2S) Down (hold down 2S) → Down + Stop (hold down 2S)
4 Add / Remove Preferred Position		P → Stop → Stop
5 Jog Mode & Running Mode Switch		Up + Down (hold down 5S) → Stop
6 Adjust Limits	Adjusting the upper limit Adjusting the lower limit	Up + Stop (hold down 5S) → Up or Down → Up + Stop (hold down 2S) Down + Stop (hold down 5S) → Up or Down → Down + Stop (hold down 2S)
7 Pair / Unpair Additional Emitter	P(a) → P(a) → P(b) P(a) → P(a) → Stop (b) (hold down 2S) S (hold down 2S) → Stop (b) (hold down 2S)	P(a) → P(a) → P(b) P(a) → P(a) → Stop (b) (hold down 2S) S (hold down 2S) → Stop (b) (hold down 2S)
8 Speed Regulation	Acceleration setting Deceleration setting	P → Up → Up P → Down → Down

Troubleshooting

Issues	Possible causes	Solution
The motor has no response	Battery in motor is depleted	Recharge with compatible AC adaptor
	Power Failure Or Incorrect Connection	Double check power and cable connections, follow wiring instructions.
	emitter battery is low capacity	Replace battery
	Radio interference / shielding	Check antenna on motor is intact and exposed. Check for possible source of radio interference.
	Out of radio control range	Try control within closer range
The emitter can't control single motor	Multiple motors are paired to the same channel.	Pair single motor with emitter correctly
The motor doesn't run or starts too slowly or make loud noise	Connections are incorrect. Installation is improper or overload	Check connections Check installation or overload
The motor stops during the up and down running	The motor has reached the lower limit The running time more than 6min	Adjust the new lower limit Consult the sales for more information