




[Down tilt/25%]: Short press to down tilting; long press for 1.5s to run to the IP3 limit position, the default is 25%.

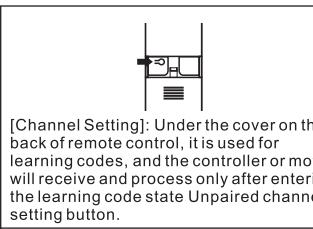

[Channel Setting]: Under the cover on the back of remote control, it is used for learning codes, and the controller or motor will receive and process only after entering the learning code state. Unpaired channel setting button.

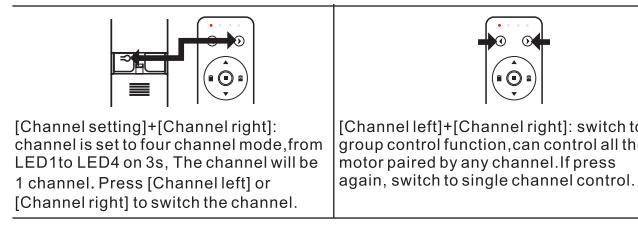


[Channel setting]+[Channel right]: channel is set to four channel mode, from LED1 to LED4 on 3s. The channel will be 1 channel. Press [Channel left] or [Channel right] to switch the channel.

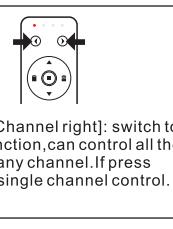


[Channel left]+[Channel right]: switch to group control function, can control all the motor paired by any channel. If press again, switch to single channel control.


◆ Combination button function

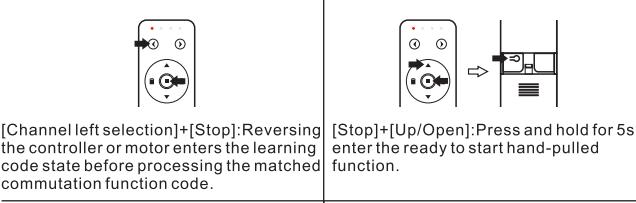


[Channel left selection]+[Stop]: Reversing the controller or motor enters the learning code state before processing the matched commutation function code.

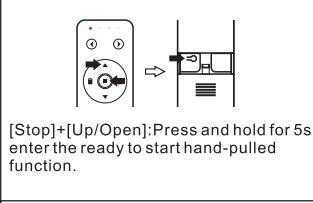


[Stop]+[Up/Open]: Press and hold for 5s to enter the ready to start hand-pulled function.

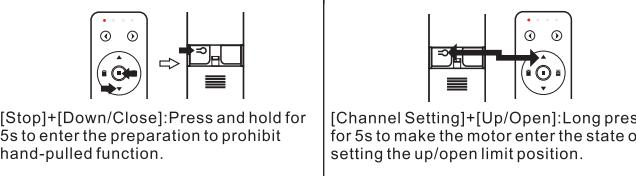


[Stop]+[Down/Close]: Press and hold for 5s to enter the preparation to prohibit hand-pulled function.

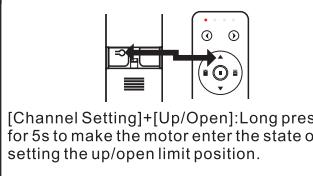


[Channel Setting]+[Up/Open]: Long press for 5s to make the motor enter the state of setting the up/open limit position.

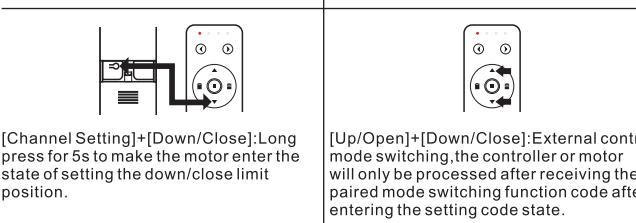


[Channel Setting]+[Down/Close]: Long press for 5s to make the motor enter the state of setting the down/close limit position.

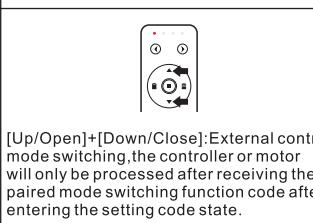


[Up/Open]+[Down/Close]: External control mode switching, the controller or motor will only be processed after receiving the paired mode switching function code after entering the setting code state.

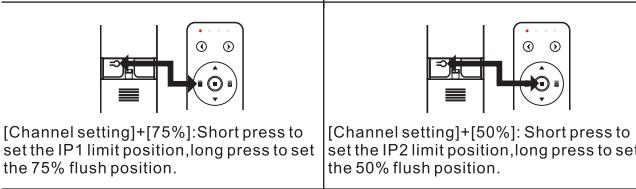


[Channel setting]+[75%]: Short press to set the IP1 limit position, long press to set the 75% flush position.

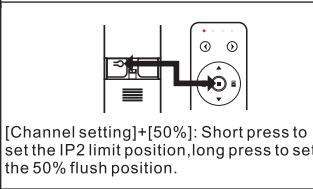


[Channel setting]+[50%]: Short press to set the IP2 limit position, long press to set the 50% flush position.

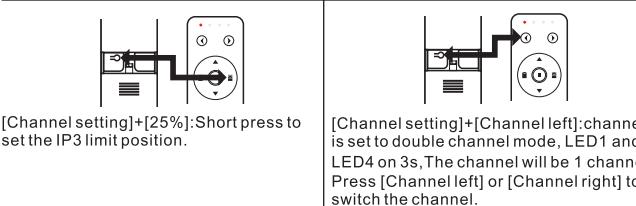

[Channel setting]+[25%]: Short press to set the IP3 limit position.

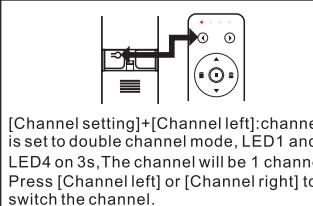


[Channel setting]+[Channel left]: channel is set to double channel mode, LED1 and LED4 on 3s, The channel will be 1 channel. Press [Channel left] or [Channel right] to switch the channel.

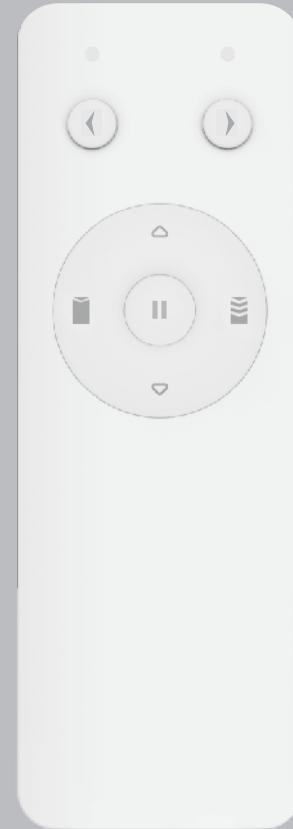

YR3202
Remote control manual


product information

1. Product size

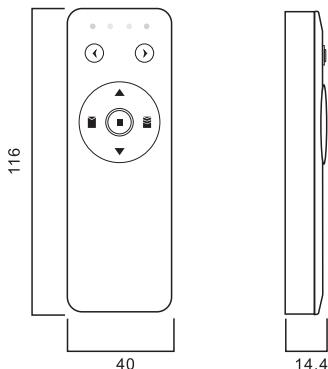

Note: The length L of the remote control depend on product specifications (unit: mm)

2. Button function

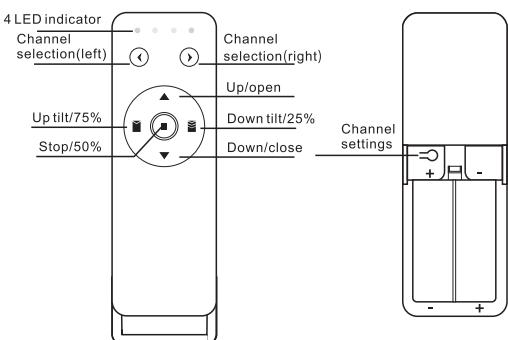

Note: The [channel setting] button is under the cover on the back of remote control.


3. Product Specifications

Product model	YR3202		
Transmit frequency	433.92MHz±75KHz	Modulation	ASK
Battery model	AAA BATTERY X 2pcs	Transmit channel	4


Note: Reverse battery polarity will damage the remote control!

LED indicator function


◆ Two channels modes

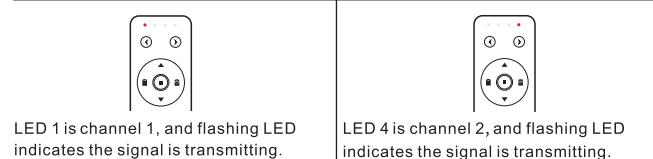


◆ Four channels modes

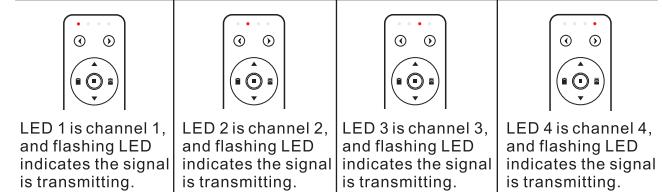

◆ Four channel mode




Select the previous channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 4→channel 3→channel 2→channel 1. If there is no operation within 3 seconds, the LED will go out.



Select the latter channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 2→channel 3→channel 4→channel 1. If there is no operation within 3 seconds, the LED will go out.


◆ Group control channel




Press the [channel left selection]+[channel right selection] keys at the same time to switch to group control channel. (If in double channel mode, LED1 and LED4 last on 3S, if in four channel mode, LED1, LED2, LED3, LED4 last on 3S)

Channel setting

◆ The way to switch two channels and four channels modes

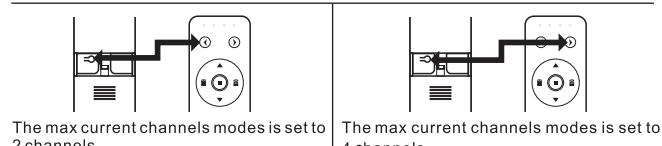

◆ Double channel mode

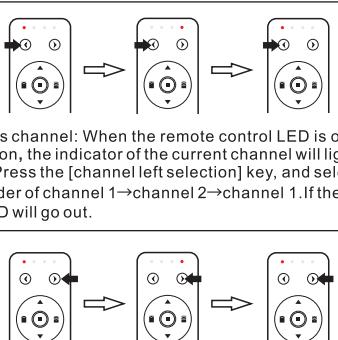

Select the previous channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 2→channel 1. If there is no operation within 3 seconds, the LED will go out.

Select the latter channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 2→channel 1. If there is no operation within 3 seconds, the LED will go out.

Button function

◆ Single button function

[channel left](in four channel mode): turn left, Select channels circularly in the order of channel 1→channel 4→channel 3→channel 2→channel 1.	[channel right](in four channel mode): turn right, Select channels circularly in the order of channel 1→channel 2→channel 3→channel 4→channel 1.

[Up/Open]: Open the curtain.	[Down/Close]: Close the curtain.

[Up tilt/75%]: Short press to up tilting; long press 1.5s to run to the IP1 limit position, the default is 75%.	[Horizontal position/50%]: Short press to stop the curtain; long press for 7s to run the IP2 limit position, the default is 50%.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.