
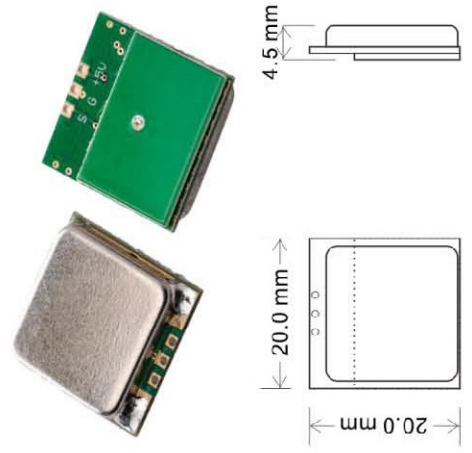


Data Sheet of M54L

LOW COST 5.8GHz (C-Band) TRANSCEIVER

MICROWAVE SENSOR MODULE

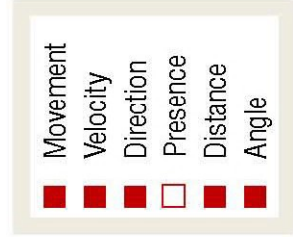

bottom view side view
Mechanical Outlines

Size	20.0×20.0×4.5mm				
Standby Power Consumption	0.01W±0.005W				
ON/OFF Mode	TTL level 0V-5V				
Frequency	5.725-5.875GHz, ISM band				
Installation Height	1M-6M				
Parameter	Min	Typ	Max	Units	
Radiated Power (EIRP)	0.2	0.225	0.25	mW	
Settling Time	5	10	20	mS	
Received Signal Strength	80	150	180	μVp-p	
Noise	0.5		1.5	mVrms	
Supply Voltage	4.75	5.00	5.25	VDC	
Pulse Repetition Frequency	2	2.2	3	KHz	
Pulse Width	15	50	70	μSec	
Operating Temperature	-30		100	°C	

Applications

- Door Openers
- Lighting Control
- Security Alarm
- Home Automation
- Industrial Automation

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference, and
2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

