


1.Download GlocalMe App • Download and install GlocalMe app on your mobile phone



2.Create a GlocalMe Account (In App) Click (Login)-(Register) • Follow the steps to register an account



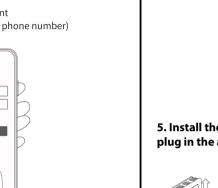


3. Link R40 to GlocalMe App • Open GlocalMe App and click [Device] - [Add a device by QR code] Scan the device QR-code on the back of the R40



4. Purchase GlocalMe Data Plans (In App) • Choose the data plans that suit your needs. (You might skip this




5. Install the antenna Remove the protective cover, plug in the antenna and adjust the direction.

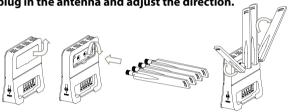


6.Turn on R40

• Plug in electric adapter and press the power button of R40 until 3G/4G lights are steady on

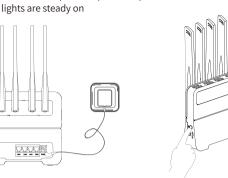

7.Connect To Wi-Fi

• Find the Wi-Fi network name and password at the back of R40 and connect the network on your mobile device(s) at Wi-Fi setting.

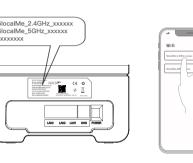


• You can also plug in the network cable through the LAN port and

8.Connect to LAN (optional)

connect to your computer and other devices




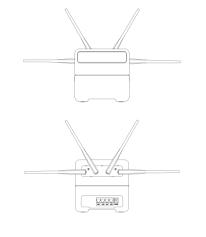

[How To Use A Physical SIM Card?]

- (R40 is default to run on GlocalMe Cloud SIM services, but it also supports local SIM cards)
- Turn Off R40 • Insert the SIM card (see the direction showing at below graphic)
- Power on and wait until the 3G/4G light staying on. • When the network is ready for access, connect your computer or smart terminal to the R40 via WiFi setting or Ethernet cable. Type 192.168.169.1 into your web's browser address bar to access
- Enter the username "admin" and password "admin" to access the
- management page.

 Click [Network] -- [Mobile Network Settings] -- Select Mode [Physical

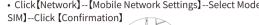




[Unlock the SIM Card (If PIN protected)]

• If your SIM card is protected by a PIN code, please insert the SIM card into your phone and follow the prompts on your mobile phone to unlock the PIN.

【Set The APN Manually】

If you still cannot connect to the network after the above steps, Access the web page entering 192.168.169.1 in the browser address bar. Click [Network] -- [Mobile Network Settings] --- Select Mode select [Physical SIM] Access Point Name(APN) setting APN, Click [Save]

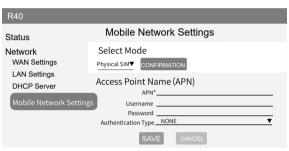


POWER SIGNAL WIFE 3G/4G WAN

Name Description Status Status Description

1. Indicator Status

POWER	Power Indicator	On	The device is powered on
		Off	The device is not powered on
Signal	Cellular Networks Signal strength indicator	1 Bar	Weak signal
		2, 3 Bar	Moderate signal
		4Bar	Strong signal
Wi-Fi	Wi-Fi status	On	There are 2.4GHz and 5GHz Wi-Fi signals
		Off	There are no 2.4GHz and 5GHz Wi-Fi signals
3G/4G	Cellular Networks status	On	The cellular network can access the internet normally
		Off	The cellular network cannot access the internet
		Flashing	The cellular network is experiencing an issue
WAN	Wide Area Network	On	Connected via wired network
		Off	Disconnected from wired network
The Signal light, 3G/4G light, and WAN light are all flashing.			Restore to factory settings
The Signal light, 3G/4G light, and WAN light are all flashing.			FOTA upgrade

2.Product overview

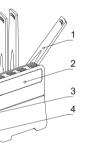

- 1.LTE extension antenna
- 2.Indicator status 3. Power on/off buttor 4.SIM card slot
- 6.Network port 7.Wi-Fi Protected Setup button 8.Reset button

3.General questions

5.Power port

Q: The power light doesn't turn on when you power on the device. A: Please ensure that the power adapter is properly connected and verify that the power button is pressed.

Q: I am unable to find the Wi-Fi network. A: Firstly, check if the Wi-Fi light is on. If it is, verify if the SSID is correct or if it is set to hidden.

You can make the necessary changes by logging into the management page. If the power light is on but the Wi-Fi light remains off, kindly

contact customer service for further assistance.

Q: How many antennas are required for normal internet access? A: For normal internet access, four antennas are required. Please verify if they are installed correctly.

Q: How can I change the Wi-Fi name and password? A: Follow these steps to change the Wi-Fi name and password:

Power on the device and connect your computer or smart terminal to the R40 using Wi-Fi or an Ethernet cable. Open a web browser and enter "192.168.169.1" in the address bar. Enter the username "admin" and password "admin" to access the

management page. Navigate to [Network] -> [Wireless 2.4GHz/Wireless 5GHz] -> [Interface Settings] -> [General Setup] and locate the SSID bar. Modify the Wi-Fi name (SSID) accordingly and click "Save." Proceed to [Wireless Security] to modify the password and click "Save" to

apply the changes. 4.Specification

- Certification Model No.:GLMR23A01
- Size:175*170*55mm
- Cellular Networks: 4G LTE Theoretical Maximum Upstream: 150Mbps
- 4G LTE Theoretical Maximum Downlink: 600Mbps • North America: LTE:B2/B4/B5/B7/B12/B13/B14/B25/B26/B29/
- B30/B66/B71/B41/B48 WCDMA:-
- LTE:B1/B3/B5/B7/B8/B20/B28/B32/B38/B40/B41 WCDMA:B1/B3/B5/B8
- LTE:B1/B3/B8/B18/B19/B26/B41 WCDMA:B1/B6/B8/B19

- WLAN: IEEE 802.11a/b/g/n/ac Maximum wireless connections: 32
 - Network port:1000Mbps WAN *1;1000Mbps LAN*3;
 - Button: Power on/off button, WPS Button, RESET Button • Power input: DC12V/3A
 - SIM card: 2FF SIM card
 - Work environment: Operating temperature: 0°C to +40°C Storage temperature: -20°C to 75°C
 - Operating humidity: 10% to 90% Storage humidity:10% to 90%

Operation frequency (Max power)

Radio	Frequency	Max. power
WiFi 2.4G	2412-2472MHz	20dBm
WiFi 5G	5150-5250MHz	18.5dBm
WIFI 5G	5725-5850MHz	13.9dBm
WCDMA	Bands 1/3/5/8	25dBm
LTE FDD	Bands 1/3/5/7/8/20/28	25dBm
LTE TDD	Bands 38/40/41/42/43	25dBm

For more information, please download the complete guide on glocalme.com/manuals. This manual is for reference only, the actual product shall prevail. The information is subject to change without notice.

RF exposure statement

RF exposure information: The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of 20 cm between the device and the human body. To maintain compliance with RF exposure requirement, use product that maintain a 20cm distance between the device and human body. The device is restricted to indoor use when operated in the

European Community using frequency 5150MHz-5250MHz to reduce the potential for interference. Restriction in BE, BG, CZ, DK, DE, EE, IE, EL, ES, FR, HR, IT, CY, LV, LT, LU, HU, MT, NL, AT, PL, PT, RO, SI, SK, FI, SE, UK(NI).

EU Regulatory conformance

Hereby, UCLOUDLINK (SINGAPORE) PTE.LTD declares that the radio equipment type GLMR23A01 is in compliance with Directive 2014/53/EU and this product is allowed to be used in all EU member states.The full text of the EU declaration of conformity is available at he following internet address: www.glocalme.com

FCC Regulatory conformance

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause. Undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur during installation. If the device does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is suggested to try to correct the interference by the following

--Reorient or relocate the receiving antenna. --Increase the distance between the equipment and receiver. --Connect the equipment to an outlet on a different circuit to the

--Consult the manufacturer or an experienced radio/TV technician for help.



Information on the disposal and recycling of the device This symbol (with or without a solid bar) on the device, batteries (if included), and/or the packaging, indicates that the device and its electrical accessories (for example, a headset, adapter, or cable) and batteries should not be disposed of as household garbage. These items should not be disposed of as unsorted municipal waste and should be taken to a certified collection point for recycling or proper disposal. For detailed information about device or battery recycling,

Disposal of the device and batteries (if included) is subject to WEEE. Directive Recast (Directive 2012/19/EU) and Battery Directive (Directive 2006/66/EC). The purpose of separating WEEE and batteries from other waste is to minimize the potential environmental impacts and human health risk of any hazardous substances that may be present.

Do not disassemble or modify, do not short-circuit, do not dispose in fire, do not expose to high temperature, be disable after soaking. Do not squeeze or bump the battery. Do not continue to use if serious.



UK REP

For more information, please download the complete guide on glocalme.com/manuals. This manual is for reference only, the actual product shall prevail. The information is subject to change without notice.

> UCLOUDLINK (SINGAPORE) PTE.LTD. Live chat: GlocalMe website / GlocalMe mobile app

Hotline: +852 8191 2660 Facebook: GlocalMe

Instagram: @GlocalMeMoments Twitter: @GlocalMeMoments

YouTube: GlocalMe

Address: 80 ROBINSON ROAD #02-00 SINGAPORE(068898)

Listed wireless data transfer rates are the theoretical maximum. The actual data transfer rate may vary depending on the network environment and carrier's coverage.