

ECMC3 User Manual

Table of Contents

1	OVERVIEW	3
1.1	PURPOSE	3
1.2	SCOPE OF APPLICATION	3
2	TERMS AND ABBREVIATIONS	3
3	PRODUCT DEFINITION	4
4	ELECTRICAL CHARACTERISTICS	8
	TEMPERATURE AND HUMIDITY REQUIREMENTS	8
4.1	PRODUCT OPERATING VOLTAGE AND POWER CONSUMPTION	8
5	OPERATING INSTRUCTIONS	9
6.1	START-UP	11
6.2	BLUETOOTH CONNECTION	11
6.3	WIFI CONNECTION	11
6	WARNING	12

1 Overview

1.1 Purpose

This document covers the complete set of all the basic functions that ECMC3 needs to implement.

1.2 Scope of Application

It is an in-vehicle product that is only applicable to LOTUS vehicles

2 Terms and Abbreviations

Abbreviation	English original
ACC OFF	ACC hardwire signal is low. (Crank, ACC hardwire signal is also low.)
ACC ON	ACC hardwire signal is high.
AC	Air Conditioning
AM	Amplitude Modulation
AMP	Amplifier
APA	Assit
AVM	All View Monitor
BSD	Blind spot vehicle Discern System
BLE	Bluetooth Low Energy
BT	Bluetooth
CAN	Controller Area Network
CVBS	Composite Video Broadcast Signal
DLNA	DIGITAL LIVING NETWORK ALLIANCE
DVR	Digital Video Recorder
ENT	Entertainment
FM	frequency modulation
GPS	Global Position System
HMI	Human Machine Interface
HUD	Head Up Display
IHU	Infotainment Head Unit
IME	Input Method Editor
IPK	Instrument Pack
LIN	Local Interconnect Network
LVDS	Low Voltage Differential Signal
MCU	Microcontroller Unit
MIC	Microphone
MMI	Multi-Media Infotainment
PPM	Play Position Memory
RSE	Rear Seat Entertainment
RVC	Rear View Camera
CPU	Central Processing Unit
SVC	Surround View Camera


Abbreviation	English original
SWC	Steering Wheel Control
TCP	Transmission Control Protocol
TTS	Text To Speech
USB	Universal Serial Bus
VR	Voice Recognition
T-BOX	Telematics Box
RRS	Reverse Radar System
PAC	Parking Assist Control
PEPS	Passive Entry/Passive Start
BCM	Body Control Module
E-CALL	Emergency Call
B-CALL	Breakdown Call

3 Product Definition


The in-vehicle multi-media infotainment system is mainly composed of DHU, central control display, radio antenna, Bluetooth antenna, speakers (bass, mid-range, treble, subwoofer, etc.), external power amplifier, microphone. There are switch keys and interfaces related to the system on the steering wheel.




DHU mainly allows you to access radio, USB audio and video playback, clock display, Bluetooth phone connection, GPS navigation, information display, vehicle settings, voice control function requirements, reversing video/dynamic Park Assist/panoramic video/reversing radar icon display, DVR video display and controls, air conditioning information display and settings, and other functions.



3.1.1 Interface Definition Description

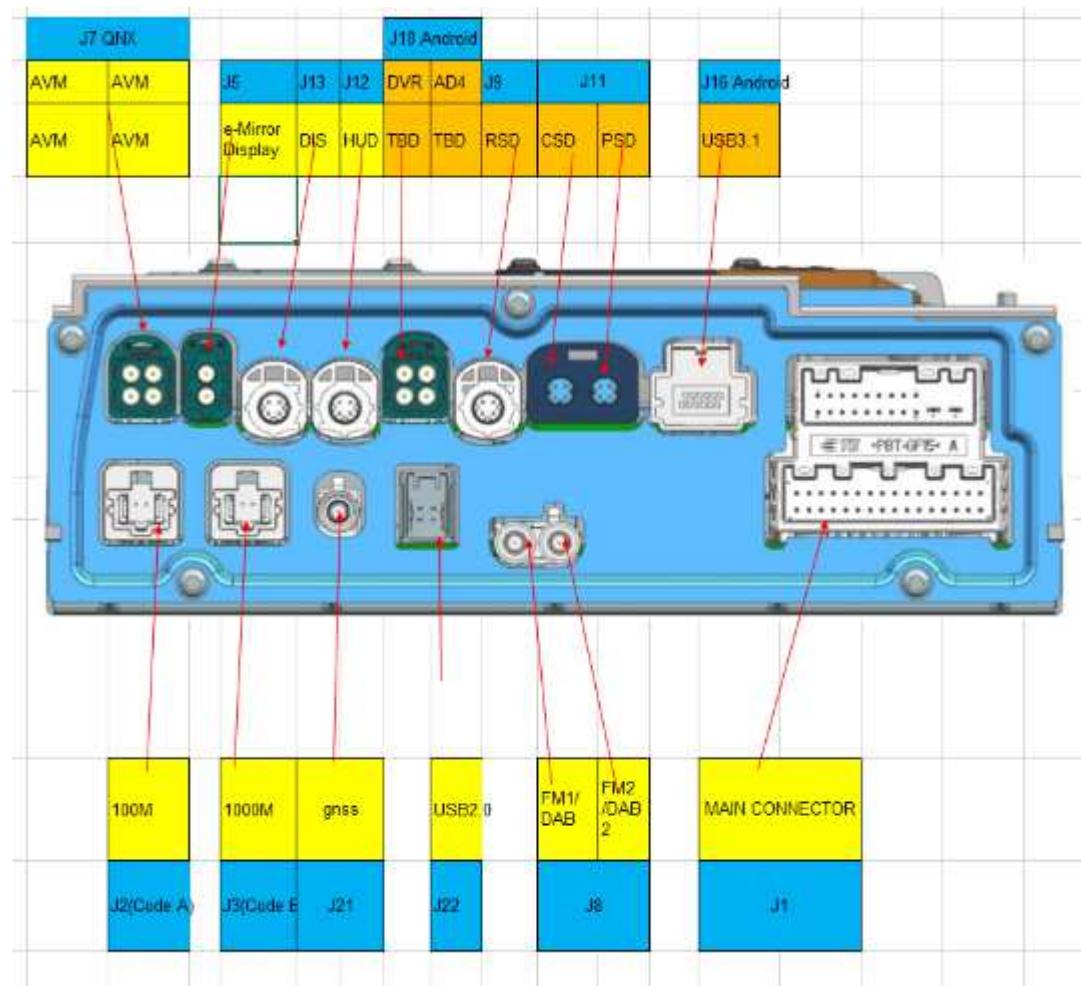

3.1.2 Structural design

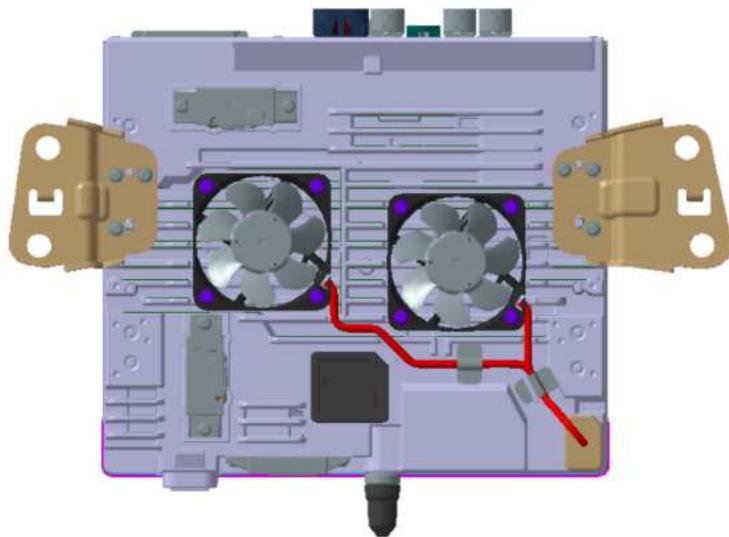

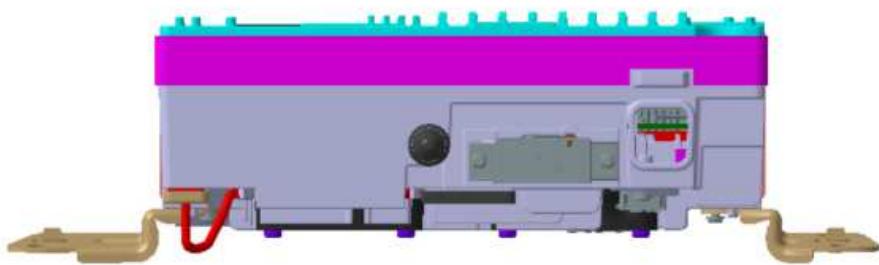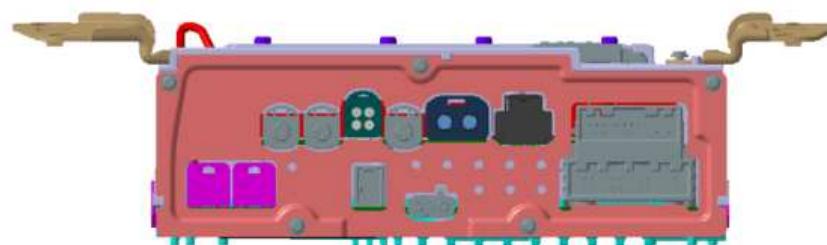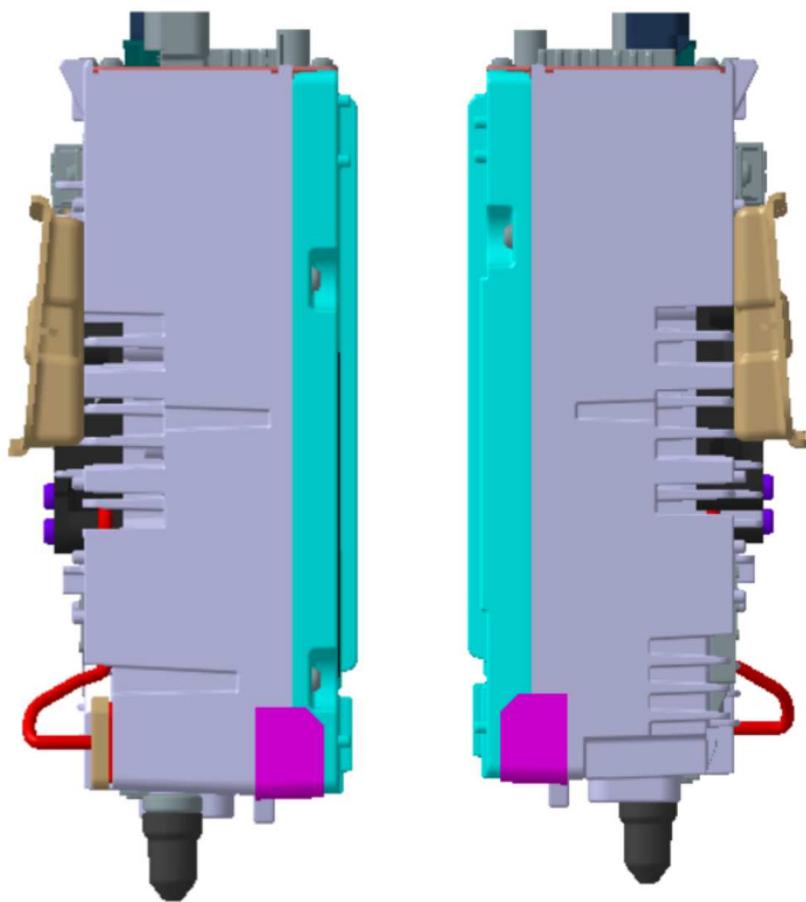

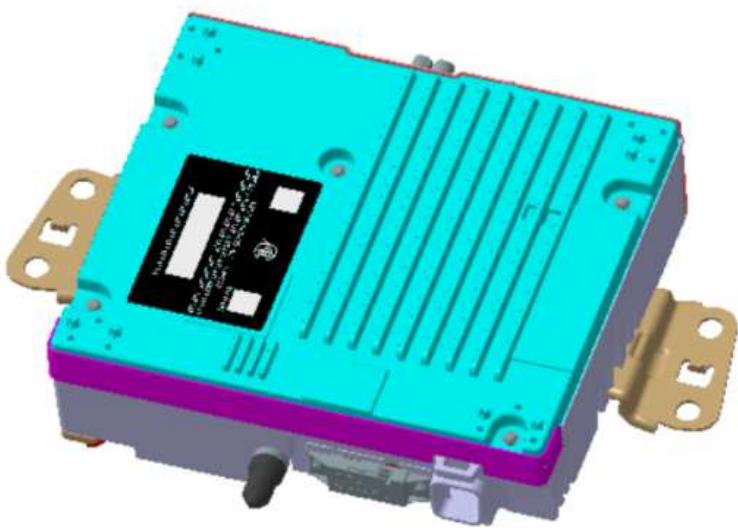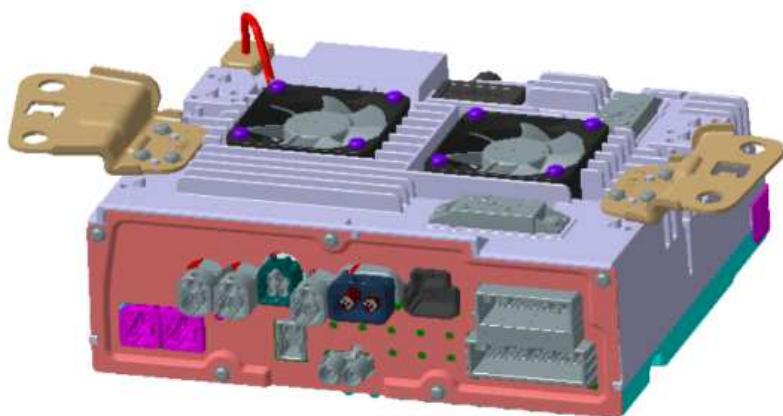

3.1.3 Product Size

Size: 183mm * 184mm * 89mm (including bracket);
Weight: 1220 ± 50 g

3.1.4 Installation Requirements

- Keep the BT/WIFI antenna side at least 50 mm away from the metal parts of the body.
- Keep an operating space of at least 50 mm on the connector side to facilitate the bending of the wire harness.
- Keep at least 35 mm of natural convection space on both sides of the host to ensure enough space for heat dissipation. If the requirements cannot be met, be sure to use a convection vent.
- To ensure the effect of the cooling fins, make sure that the intersecting angle between the Z' axis of the host and the Z axis of the car remains square, no more than $\pm 90^\circ$.
- It is recommended to keep the host away from the air conditioning duct, as the size of the cooling hole is 2.6mm and has three side openings. There is no way to guarantee it will not be damaged by water.

4 Electrical Characteristics

Temperature and humidity requirements

Temperature range:

Operating temperature: $-40^\circ\text{C} \sim 85^\circ\text{C}$

Storage temperature: $-40^\circ\text{C} \sim 85^\circ\text{C}$

Low temperature storage: 24 hours at -40°C

High temperature storage: 504 hours at 85°C


Relative humidity: 5% ~ 80%

4.1 Product Operating Voltage and Power Consumption


Product operating voltage	Static power consumption	Normal power consumption
12V	≤ 0.2 mA	< 5 A

5 Operating Instructions

The desktop system adopts two forms, which distinguish the display according to whether the car is stationary or driving. In the desktop we display 3 areas, the status bar at the top and the quick action bar at the bottom. The middle area will display a 3D car model when the vehicle is stationary. The car model can realize rotation and vehicle control related operations such as opening/closing the trunk, locking the door, adjusting the sky fog, etc. At the same time, we provide widgets on the desktop to display the current vehicle mileage, weather temperature and vehicle location information

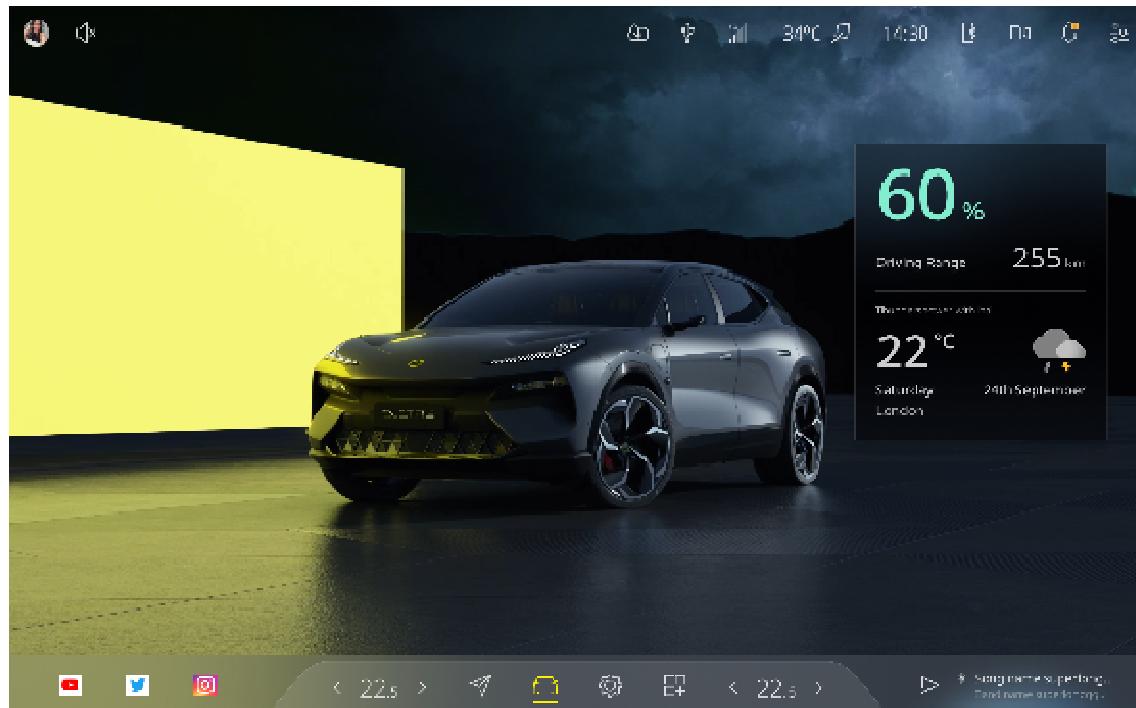

In the driving state of the vehicle, we will divide the left 1/3 area on the desktop to display the auxiliary driving window, and the right 2/3 area to display the map navigation window. In the assisted driving application window, the lane keeping assist system sets the marking lines of the road on which the vehicle is traveling by means of the camera. When the system is set to the fact that the vehicle may deviate from the lane, it can remind the driver or intervene the steering system to adjust the driving route in time. Objects such as pedestrians and side-side vehicles such as motorcycles are identified by lidar, so as to ensure the driver's driving safety.

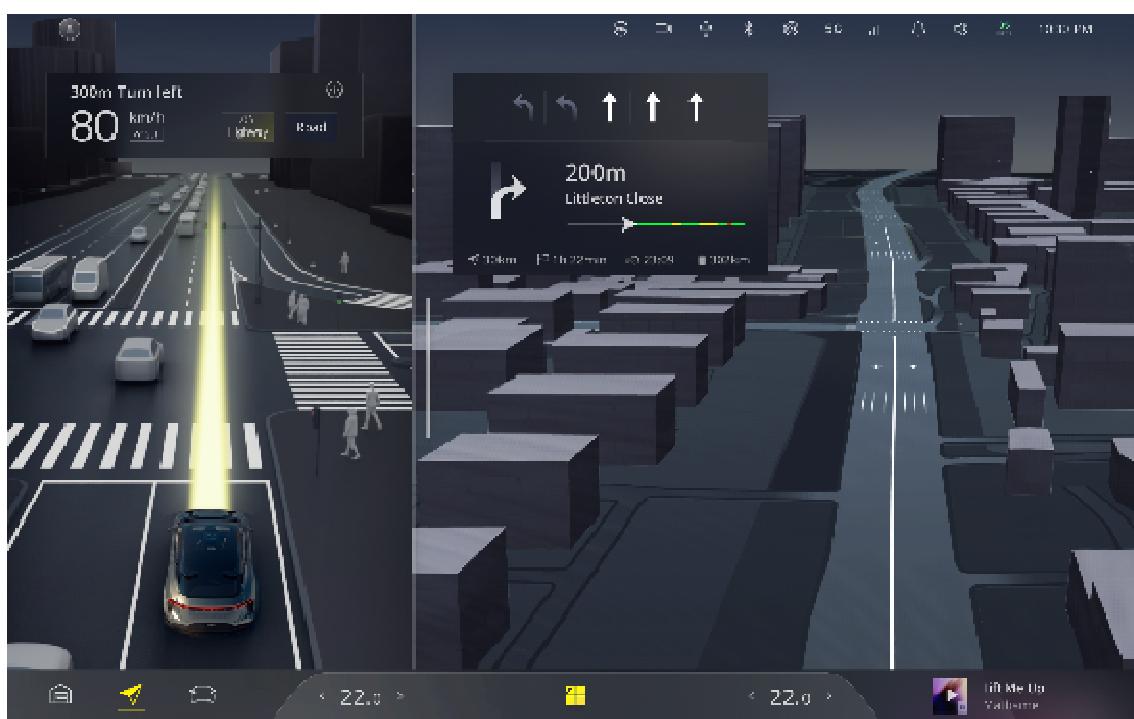

Slide down from the top to drag out the quick center, and you can easily turn on common functions, including HUD, reading lights, trunk, etc. It also supports the viewing and management of message notifications, the switching of intelligent modes, and the adjustment of atmosphere lights.

Click on the application management shortcut bar at the bottom to see the rich variety of applications provided, such as reversing images, charging energy management, multimedia (radio, Bluetooth music and USB music) and other applications




6.1 Start-up

In the case of system shutdown, the user can manually open the door, remote unlock and remote start, or insert the charge and discharge gun when the vehicle is not locked, etc., to start the vehicle.

6.2 Bluetooth connection

Click on the status bar [Bluetooth icon] - [Connect] - [Bluetooth]

Turn on Bluetooth and turn on your phone's Bluetooth at the same time. Perform a device search, find the device and click Connect.

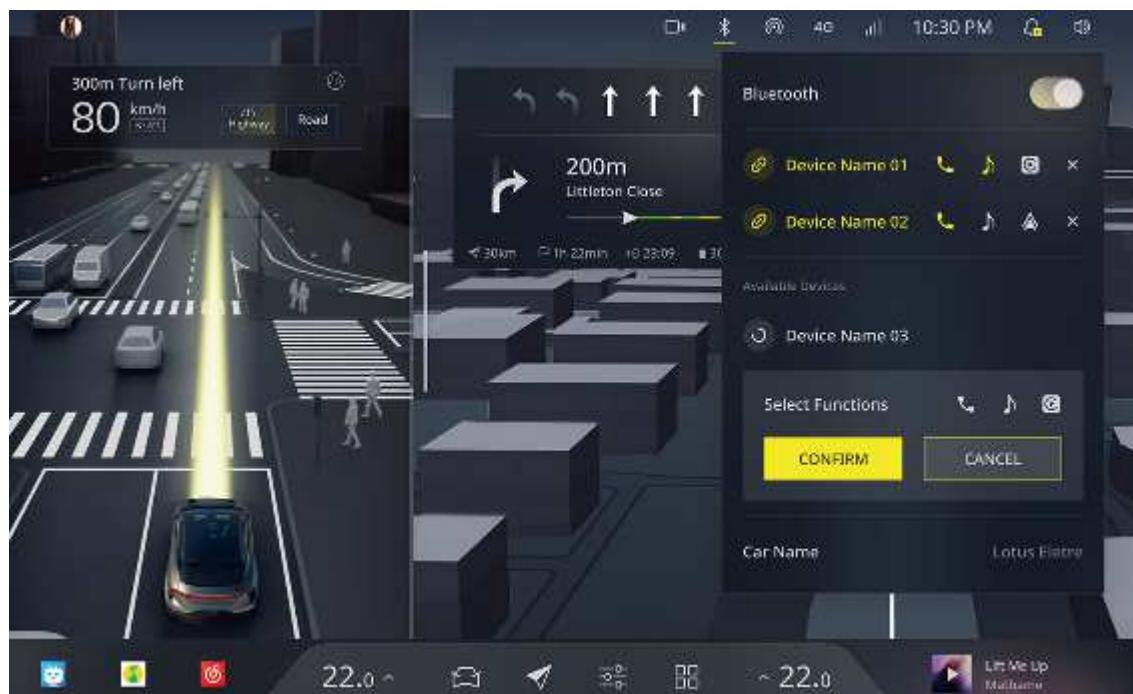

Select the device among the available devices and click "Confirm" to connect

A paired message alert will be received on the phone.

Mobile terminal: Please confirm the pairing;

If you cannot synchronize your contacts, click on the corresponding Bluetooth name to unpair and reconnect.


If the pairing phone is included in the selection, the connected Bluetooth address book will be synchronized after the pairing is successful

6.3 WIFI connection

Type [status bar wifi icon] - [connection] - [wireless network]

<All the above information is owned by ECARX (Hubei) Technology Co., Ltd., and shall not be disclosed.>

After turning on the wireless network, select the corresponding wifi connection.

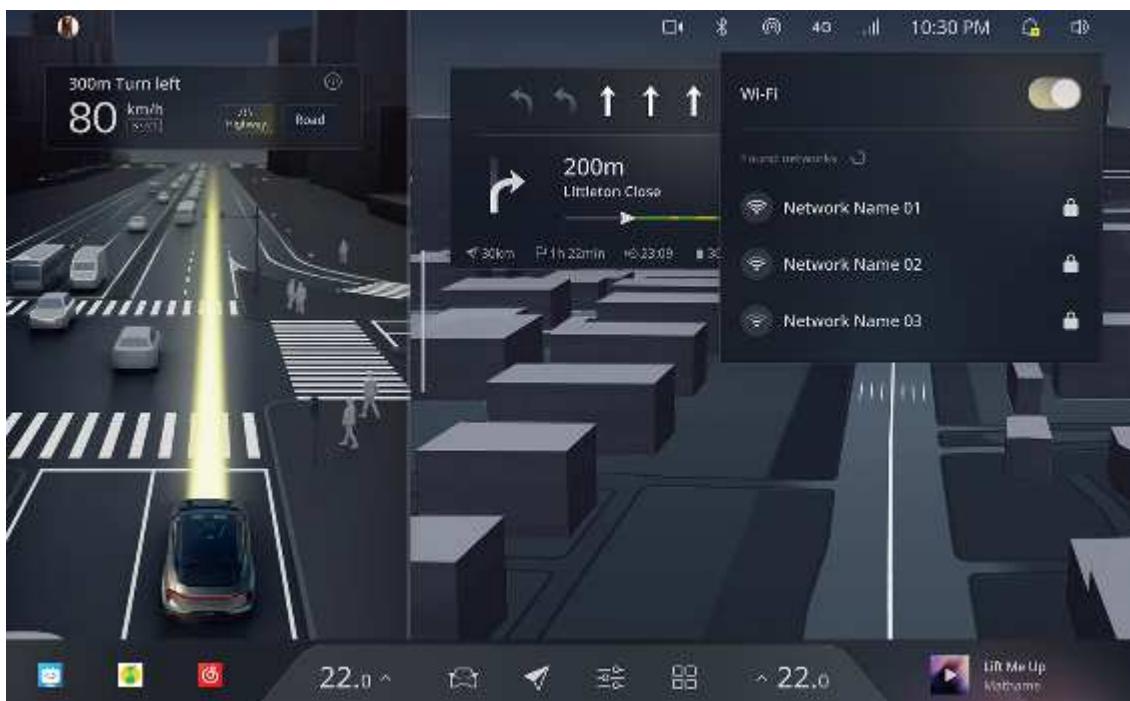

Enter the password to complete the WiFi connection

6 Warning

6.1 FCC Statement

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information:

The radiated output power of this device meets the limits of FCC/ISED radio frequency exposure limits. This device should be operated with a minimum separation distance of 20 cm between the equipment and a person's body.

6.2 ISED Statement

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

<All the above information is owned by ECARX (Hubei) Technology Co., Ltd. , and shall not be disclosed.>

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage.
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The radiated output power of this device meets the limits of FCC/ISED radio frequency exposure limits. This device should be operated with a minimum separation distance of 20 cm between the equipment and a person's body.

La puissance de sortie rayonnée de cet appareil est conforme aux limites de la FCC/ISED limites d'exposition aux fréquences radio. Cet appareil doit être utilisé avec une distance minimale de séparation de 20 cm entre l'appareil et le corps d'une personne.