

Presto 2

User Manual

V1.4

Guangdong World Precision Technology Co.,Ltd.

Address: No.6,Wanjiang Section, Gangkou Avenue, Wanjiang Subdistrict,
Dongguan City, Guangdong Province,China.523061


Revision History

Overview

The **Presto 2** is a built-in fixture designed for charging and recognizing compatible wireless devices.

The fixture consists of 6 wireless Qi chargers, 6 NFC readers that are interconnected and controlled through a USB HUB and USB Relay and powered via an internal power supply. The fixture is designed so that six devices can be placed into it at any given time.

The **Presto 2** does not have an internal CPU, memory or embedded software of any kind. It must be connected to a computer to be controlled via USB with custom software to achieve customer demands.

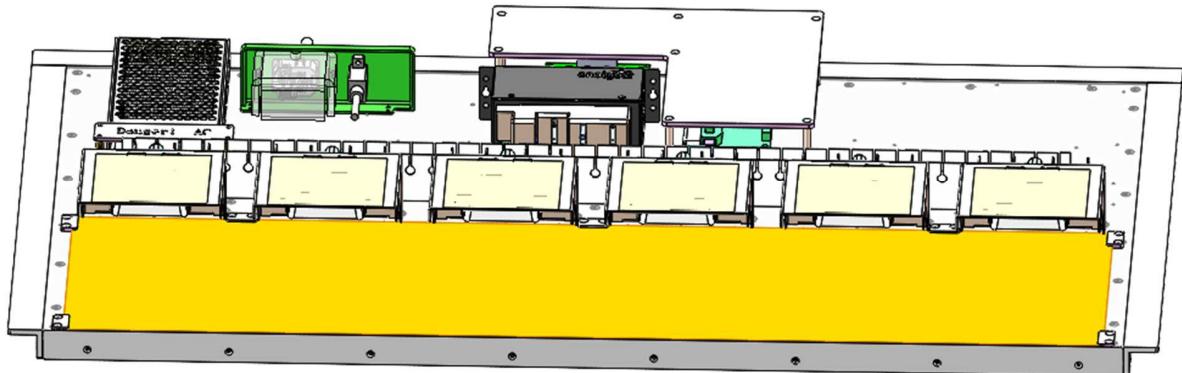

Presto 2 Spec Sheet

Model

9040034310

General Info

Dimensions: L x W x H

39.17 x 22.34 x 3.54 (in)

995 x 567.5 x 90 (mm)

Weight: 35.64 lbs / 16.2 kg

Electrical

AC Input: 100-240 VAC

DC Voltage: 12 V


Max Power: 150 W

Nominal Power: 70 W

Single Wireless Charger Output: 7.5W / Max

Installation

It needs to be installed on a fixed shelf, and only three layers are allowed.

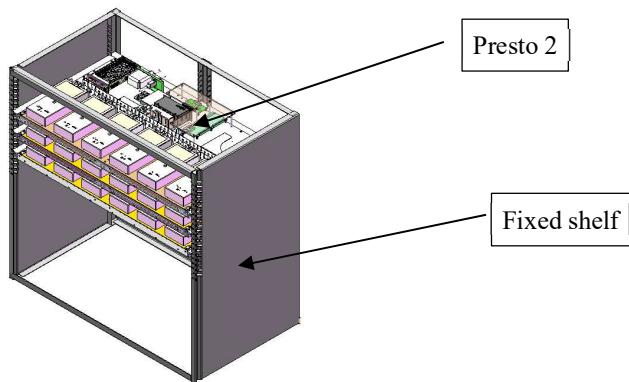

Required Accessories

- USB-B to USB-A Cable OR USB-B to USB-C Cable for connection to PC

- AC Power Cable (region-dependent)

AC Power Cable (European Standard)

Specification

Brand: Misumi

Model: CEE3P-W-2

Rated Current: 10A

Rated Voltage: 250V

AC Power Cable (British Standard)

Specification

Brand: Jing Gong Dian Qi

Model: UK(13A)-C13

Rated Current: 13A

Rated Voltage: 250V

AC Power Cable (Japanese Standard)

Specification

Brand: Misumi

Model: 3P-W-2

Rated Current: 7 A

Rated Voltage: 125V

AC Power Cable (American Standard)

Specification

Brand: Misumi

Model: UL3P-W-2

Rated Current: 10 A

Rated Voltage: 125V

Brand

WORLD AUTOMATION



Service


Presto 2 The structural components, NFC card readers, and wireless chargers on a single module may require further repair and service if damaged

Internal Fixture Critical Components


Item	Definition	Brand	Specification	country of origin	Qty.
1	USB HUB	Coolgear	CG-12U3ML	USA	1
2	USB Relay PCBA	National Control	R85PL-USB	USA	1
3	Power Supply	MEAN WELL	RSP-150-12	China	1
4	QI CHARGER	Kew Labs	UTS-1 (Thin)	USA	6
5	NFC READER	ACS	ACR1252U-M1	USA	6
6	IEC C14 CONNECTOR	MISUMI	APCJ-101-1FSA-01	China	1

Wiring Diagram


Note:
1, the USB of the HUB must be connected according to the order of the drawing
2, the screw of the wiring terminal on the circuit board must be locked

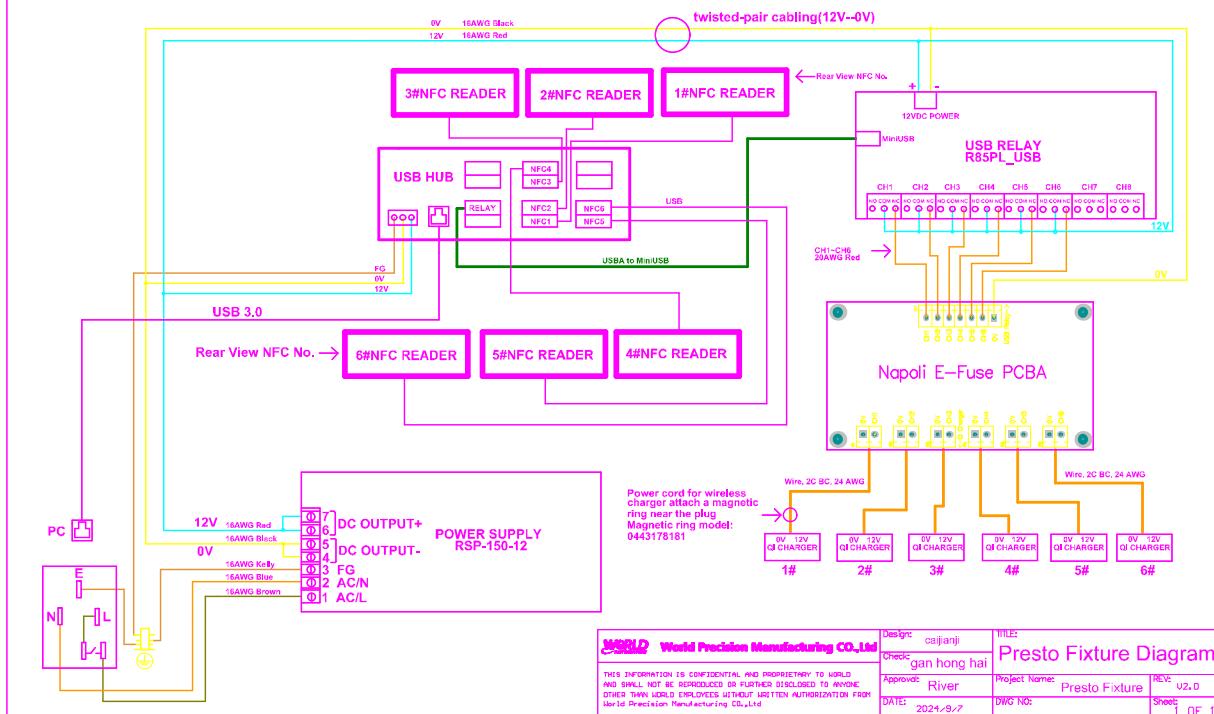

Internal Fixture Wiring

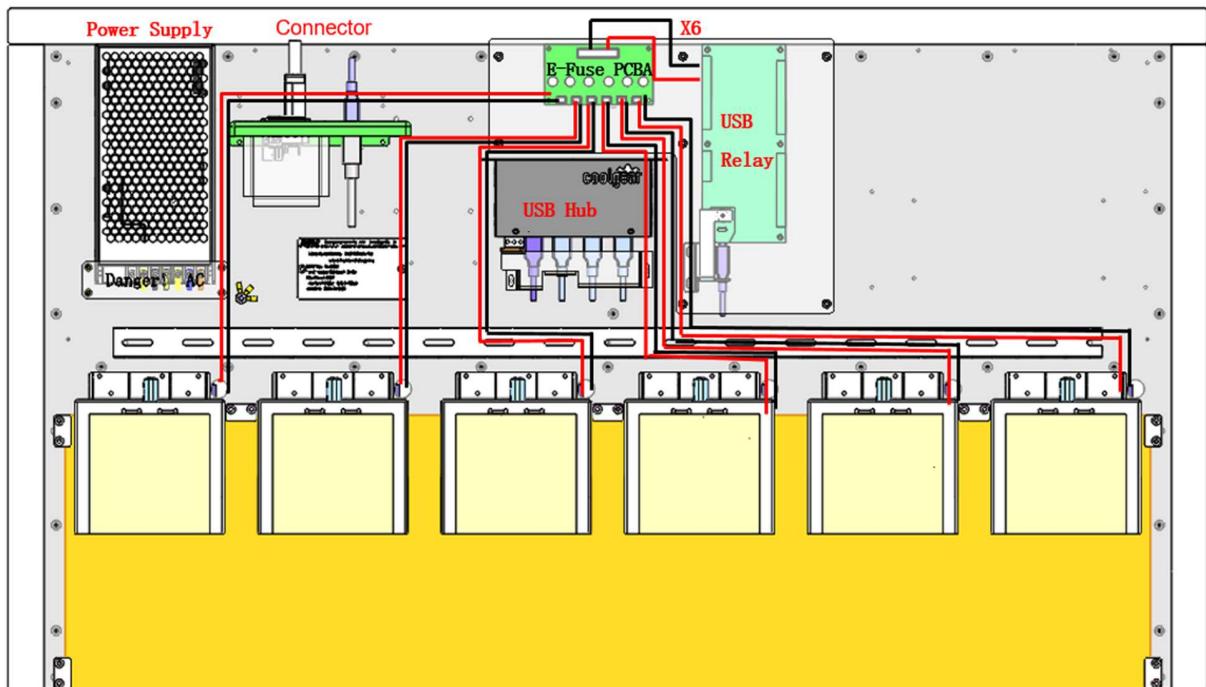

Fixture Mechanical Assembly Breakdown

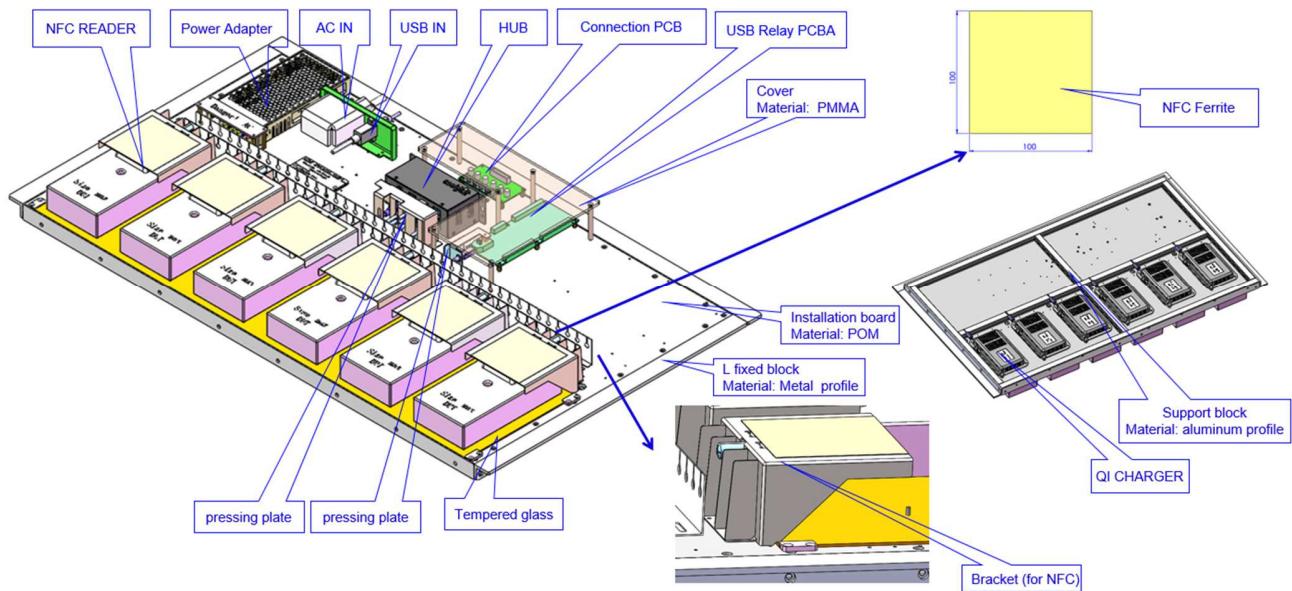

Use Guide

Before Applying Power

Verify wall power is 110 or 220V

Verify the power cable is certified, in good condition, not frayed or torn.

If a power strip is used, ensure it is certified, in good condition, not frayed or torn.


Verify the USB cable is certified, in good condition, not frayed or torn.

Regular Operation & Device Compatibility

Operation of the fixture with wireless devices for charging & recognition is to be controlled by an external computer and software to meet customer's unique demands.


Coil-Coil Perpendicular Distance

The use of an off-the-shelf wireless charger leads to a minimum and maximum distance between the coil of the wireless charger and the charging coil of the device. This range has been tested to work between 11-17 mm. A plate is built into the fixture of a thickness of 9.1 mm to help bring in scope a variety of devices.

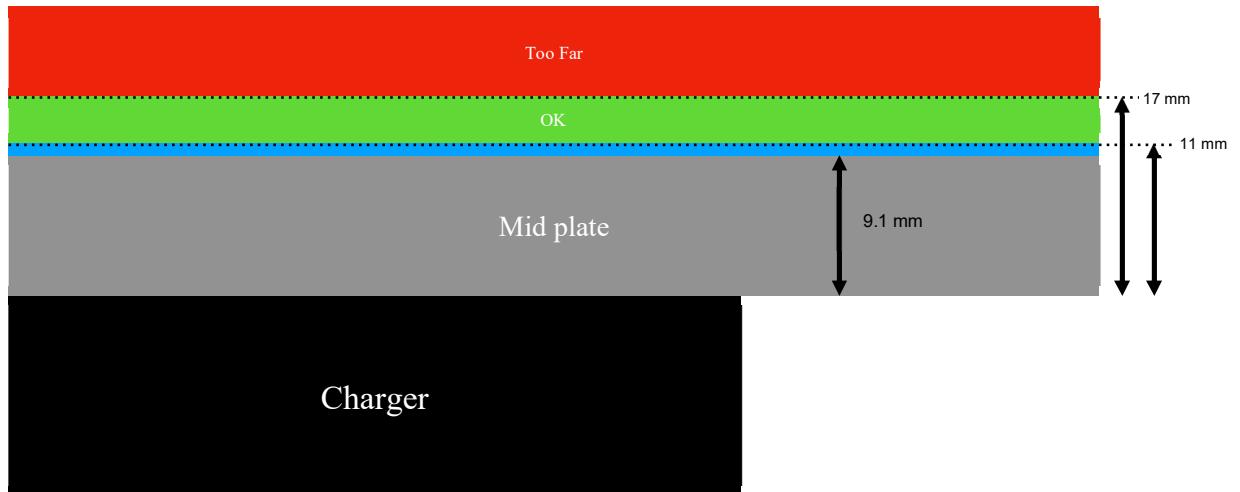

Coil-Coil Radial Distance

The lateral distance between the charger coil and the device coil must be <4 mm for reliable

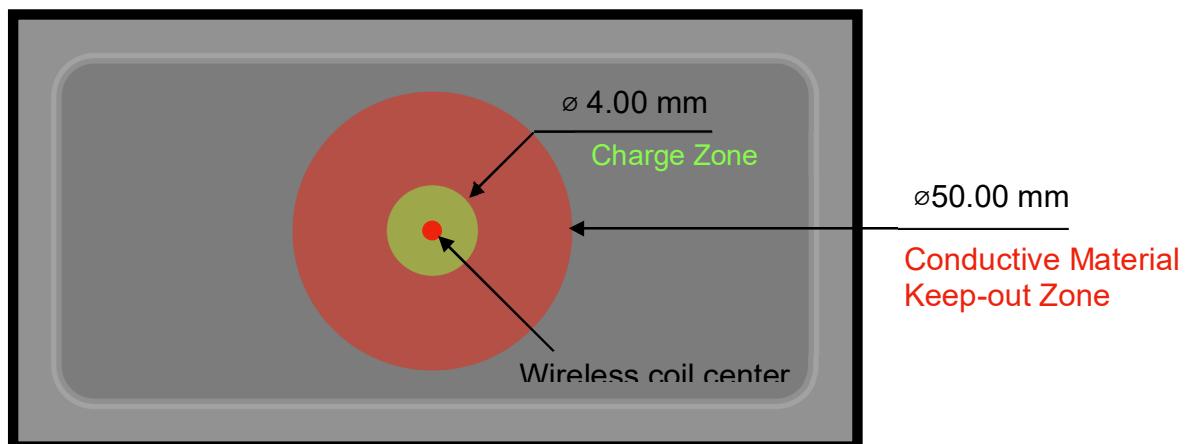

charging. This makes the charge zone effectively a 4mm diameter from the charger coil center.


SAFETY WARNING

Do not place any conductive materials in a 50 mm diameter zone around the charger coil center. Placement of any conductive material in this zone may result in non-functional charging, over-heating or fire safety risks.

Box Compatibility

If tested and approved by the end customer, some wireless devices may be placed into the fixture while inside of their packaging boxes. The device charging coil must still meet the coil-coil perpendicular and lateral distance requirements and the box must not contain any conductive materials between the device and the charging coil.

Any box in the size range provided below will be centered by the mechanism built into each module. Do not exceed the maximum recommended box size dimensions.

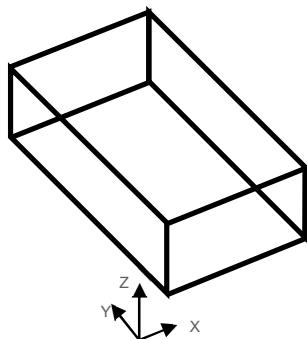

Dimension	Min	Max
Width (X)	84.5mm	102.5mm
Length (Y)	162.3mm	180.3mm
Depth (Z)	-	43mm

Shipping & Handling

Ensure the fixture is stabilized during shipping or transportation so that it is not bouncing, shaking or sliding around. Use vendor approved and tested packaging for any transport.

Always use the handles on the left and right side of the fixture to lift and transport the fixture. Do not attempt to lift the fixture using just one handle.

Keep the fixture level when lifting and moving during setup.

Environmental Requirements

1. Indoor use only in air conditioned lab, office, store or warehouse environments.
2. The fixture can be left in standby mode indefinitely but should be Powered OFF at the end of every shift, when it is to be left alone and or unsupervised for prolonged periods of time.
3. Temperature Range:
 1. Operating ambient temperature: 32° to 95° F (0° to 35° C)
 2. Non-operating temperature: -4° to 113° F (-20° to 45° C)
4. Relative Humidity Range: 5% to 95% noncondensing
5. Any and all liquids, hazardous, flammable or not, should be kept at a distance and never allowed to touch or enter the fixture to prevent contamination, corrosion or potential for electrical shorts
6. Do not operate the instrument in the presence of flammable gases or fumes
7. The fixture should be used in an environment with adequate ventilation where no flammable vapor-air or gas air is present. Adequate ventilation is defined as ventilation (natural or artificial) that is sufficient to prevent the accumulation of significant quantities of vapor-air or gas-air mixtures in concentration above 25% of their lower flammable (explosive) limit, LFL

(LEL)

Storage

When the fixture is not in use, pack properly and store in a controlled environment.

1. Indoor temperature -4° to 113° F (-20° to 45° C)
2. Indoor Relative Humidity Range: 5% to 95% noncondensing
3. Do not store in direct sunlight
4. Keep away from water, oils and other liquids
5. Keep away from areas containing volatile components or corrosive gases
6. Store in a dust-free place.
7. Avoid subjecting the fixture to regular vibration shocks above 0.5G.

Cleaning

The fixture's outer surfaces may be cleaned as follows:

1. Power OFF the fixture
2. Allow fixture to cool down to room temperature (minimum 15 minutes).
3. Clean with lint free wipes
4. Do not use compressed air or vacuums to clean internally.
5. Do not use liquid or sprays of any kind.

Maintenance and Malfunction

This fixture does not require regular maintenance from the technician.

If the operator encounters any malfunction, broken parts or components, discontinue use immediately, power the fixture off, unplug and notify management and or engineering staff.

If the operator encounters any unexpected electrical behavior such as unintended power cycling (on/off), power drops as evidenced by changes to fixture lighting, fans, sounds, sparking or malodor, discontinue use immediately, power the fixture off, unplug and notify management and or engineering staff.

If any other abnormal issues are encountered, discontinue use immediately, power the fixture off, unplug and notify management and or engineering staff.

Service and Repair

Do not remove any panels or covers of the fixture. Technicians or operators must not remove any protective or enclosure panels on the fixture, or disassemble any other parts of the fixture.

This fixture is not designed to be serviceable by end users. Component replacement and / or internal adjustment should only be performed by authorized service personnel / engineering staff. Service by Authorized Personnel

The fixture is designed to have swappable modules and can accommodate more complicated repairs such as component replacements, wiring fixes, etc. The most basic servicing for the fixture is the **module swap**.

Module Swap

A treatment consists of 6up test group, NFC reader, and qi charger. If any of these components fails, there is a problem that needs to be diagnosed.

Swapping a module requires the following steps:

1. Unplug back of fixture from power and USB
2. While removing the module, string NFC reader USB cable through mid plate of fixture and unplug power cable from the Qi charger
3. Remove module retention screws
4. Acquire new module

5. Plug in power cable from the Qi charger
6. Route NFC USB cable through the back hole
7. Plug in NFC USB cable into the correct USB port
8. Install both module retention screws

Grounding



Terminal which is bonded to conductive parts of equipment for safety purposes.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance of 7 cm between the radiator and your body.