


ELEMENT[®]



HELIX 1500
BALLISTIC LASER RANGEFINDER

INDEX

1)	INTRODUCTION & OVERVIEW	1
2)	BATTERY INSTALLATION	2
3)	OBTAINING A CLEAR IMAGE	3
4)	DISPLAY ORIENTATION	4
5)	RANGING & TARGETING MODES	6
6)	PAIRING WITH BLUETOOTH DEVICES	8
7)	WARRANTY INFORMATION	11
8)	SPEC SHEET	12

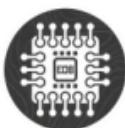

ELEMENT
BALLISTICS
CHIP



FEATHERWEIGHT
DESIGN



1500M
RANGE



DUAL-COLOR
T-OLED
DISPLAY



6x22
OPTICAL
SYSTEM



BLUETOOTH
CONNECTIVITY



BAG
INCLUDED



WEATHER
RESISTANT



PLATINUM
WARRANTY

The HELIX 1500 is not just any rangefinder. Despite its ultra-lightweight & compact form, this unit will present you with an accurate firing solution out to 1500 Meters, harnessing the full power of the integrated Ballistics Chip to factor in weather conditions, incline, spin drift and more. Create a ballistic profile on an app, send it across in seconds, and have the relevant data displayed on a crisp T-OLED Display.




The HELIX 1500 uses a CR2 Battery. This comes pre-installed from the factory, but has a protective film that needs to be removed. To open the battery compartment:

- 1) Lift up the finger tab (Fig 1.1)
- 2) Twist the cap anti-clockwise to unscrew (Fig 1.2)
- 3) Remove the protective film from the top of the battery, and refit battery cap.



ALWAYS install battery with the flat side (negative) facing DOWN, and positive side facing up as shown in Fig 1.3

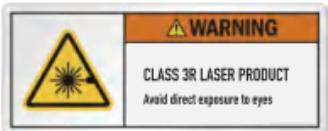


As with all optical devices, the HELIX 1500 will need to be adjusted to your eye.

- 1) To start, hold the unit up to your eye and look through the eyepiece towards a featureless background.
- 2) Then, switch on the display by pressing the red **RANGE** button (Fig 2.1) and turn the diopter (Fig 2.2) until the display appears sharply in focus.



- 3) Display Brightness can be adjusted by holding in the **RANGE** button and then pressing the black **MODE** button (Fig 2.3) to cycle through the 6 brightness settings.

The HELIX 1500 has a Dual-Colour Transparent OLED (T-OLED) Display. It is important to understand what each icon means before continuing.

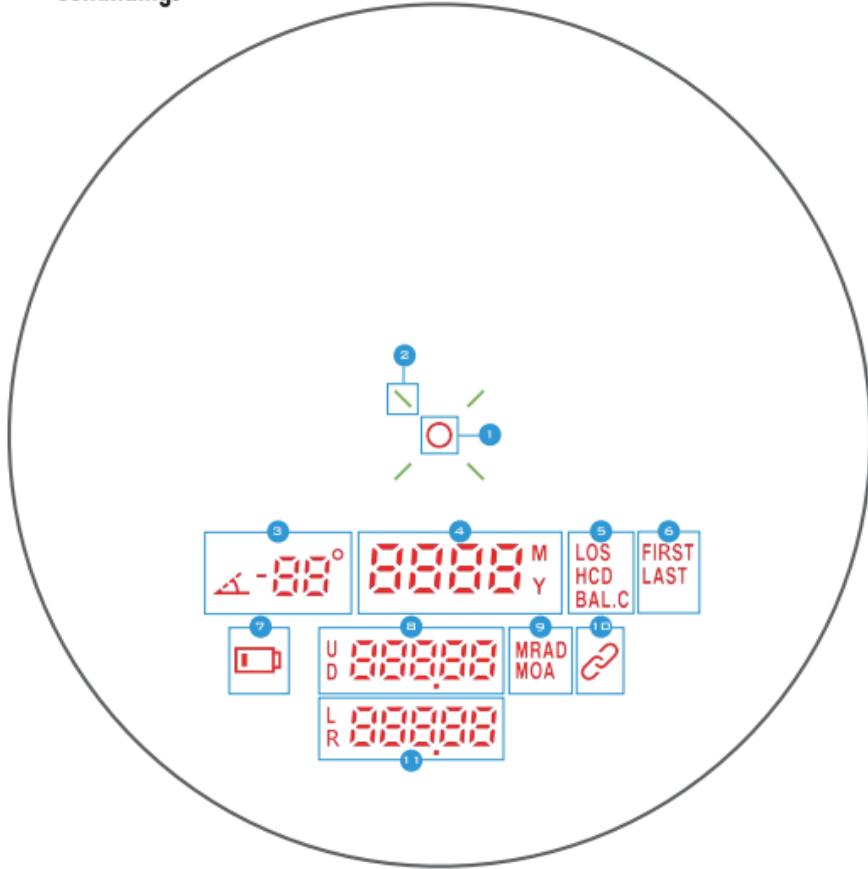

- 1) **LASER RETICLE:** Hold this on the object you want to range.
- 2) **LASER ACTIVITY INDICATORS:** These 4 Green lines illuminate when a laser beam is being emitted.
- 3) **INCLINOMETER:** Indicates the angle (degrees) of the target being ranged.

4. **DISTANCE TO TARGET:** Displayed in METERS (M) or YARDS (Y). To switch between M and Y, Double-Tap the black MODE button.
5. **RANGING MODE:**
 - **LOS (LINE OF SIGHT):** Direct distance to target
 - **HCD (HORIZONTAL COMPONENT DISTANCE):** The angle-compensated distance to your target, useful when referencing a bullet drop chart for given distances.
 - **BAL.C (BALLISTIC CALCULATOR):** Direct Target Distance shown, but additionally, Elevation & Windage data also displayed.
6. **TARGET PRIORITY MODE:**
 - **FIRST:** The processor prioritises the signal from the closest target detected. Useful when ranging an object in an open field.
 - **LAST:** The processor prioritises the signal from the closest target detected. Useful when ranging through vegetation.
 - **NONE (BEST):** The processor prioritises the strongest signal returned.
 - **SCAN MODE** can be activated by holding in the RANGE button. This gives a continuous distance readout.
7. **LOW BATTERY INDICATOR:** It's time to plug me in.
8. **ELEVATION:** Shown as a numerical value and U (up) or D (down).
9. **BALLISTIC SOLUTION UNIT:** Shown as MRAD or MOA (more on Page 9)
10. **DEVICE CONNECTED:** Displayed when the HELIX 1500 is paired to the Element Ballistics App or a HYPR Riflescope.
11. **WINDAGE:** Shown as a numerical value and L (left) or R (Right). More information on Page 9.


The HELIX 1500 features a number of different ranging and targeting modes, making it easier to obtain an accurate reading in challenging conditions.

RANGING MODES:

By changing Ranging Modes, you allow the processor to change the way it reads out the data it has measured. As demonstrated in the below graphic, **LOS** mode gives you the direct distance to the target you have ranged, while **HCD** mode gives you the horizontal component of that distance, i.e. the actual distance multiplied by the cosine of the angle. Since gravity only acts vertically, the HCD more accurately predict how much bullet drop you need to account for.




To cycle between **LOS**, **HCD** and **BAL.C**, use short presses of the black MODE button.

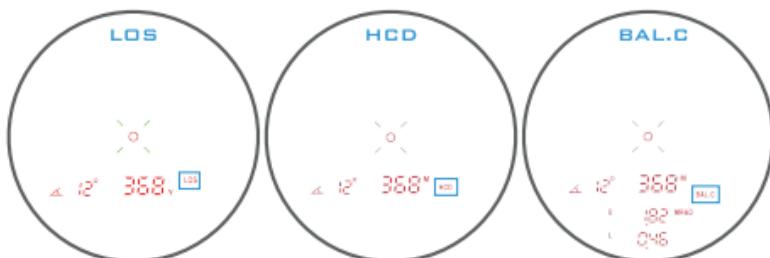

TARGET PRIORITY MODES:


No matter how powerful the laser system in a rangefinder is, a returning laser signal still has to be read and processed. The processor may receive multiple return signals from different objects downrange, and needs to predict which one is the one you want a reading for. By changing modes, you can instruct the processor to focus on specific data, giving you a better chance of obtaining the reading you want. These modes are summarised in PAGE 5.

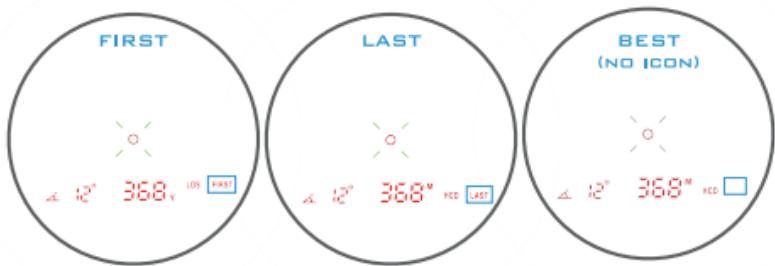

To switch between Target Priority Modes, hold in the black MODE button for 3 Seconds.

The HELIX 1500 also has a **SCAN** function which can be used in any mode. To activate, simply hold in the red **RANGE** button. This will give a continuous reading for a few seconds. This feature is useful when trying to obtain a reading off a small target - By scanning past the target and watching the readout, you may be able to detect a sudden change in the range value, possibly indicating a return signal from the small target as the beam passes by.

The HELIX 1500 is compatible with a number of external Bluetooth devices, including the Element HYPR-7 and, most importantly, the Element Ballistics mobile app, from which you can create & send ballistic profiles and change preferences.

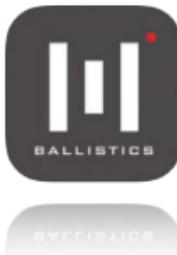

HYPR-7

The HELIX 1500 will automatically pair with the HYPR-7 when in range, displaying the "device connected" icon: A red circle with a white 'C' inside, with a dashed red arrow pointing from the text to the icon.

When paired, the rangefinder transmits range & incline data to the riflescope, providing an instant firing solution with no need for manual input. Note that when in **BAL.C** mode, the HELIX 1500 will display ballistic data from the HYPR-7, bypassing its own ballistic chip. This means that a spotter/shooter pair will always be working with the same data.




ELEMENT BALLISTICS APP

The Element Ballistics App is available for free on the Apple and Android app stores. Before using the Ballistic Calculator function on the HELIX 1500, you will need to install the app and create a profile for your rifle.

Once downloaded and installed, the following steps should be followed:

1) **SELECT UNIT PREFERENCES.** Click on the “**UNITS**” tab on the bottom left of the home screen (Fig.3D, pg.10) and select the units you feel most comfortable with. These will be needed when creating profiles, but more importantly for us, the **ANGLE UNITS** selection (Fig.4A) will determine how data within the ballistic display area of the rangefinder will be shown. If **MRAD** or **MOA** are selected, the rangefinder will display this unit preference in-screen. If any other unit is selected, the rangefinder will display a click value only.

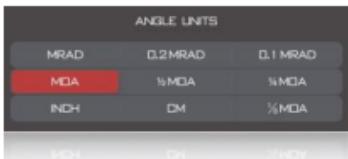

- 2) CREATE PROFILE. Select a profile tab (Fig.3A) and begin to enter all required data (Bullet, Scope Height, Zero Distance, Muzzle Velocity, etc). You can also update weather data and input wind conditions (Fig.3B)
- 3) CONNECT TO YOUR HELIX 1500. Ensure your bluetooth is activated and rangefinder switched on. You will see a tab on the home screen indicating that the HELIX 1500 is within range (Fig.3C). Tap on this tab, and the device will pair.



4) SET SCREEN TIMEOUT & UPLOAD PROFILE. Select your preferred screen timeout on the configuration screen (Fig.5A) and choose a profile you'd like to upload (Fig.5B). Ensure that you send the correct profile, as the HELIX 1500 can only store one at a time.

FIG.3

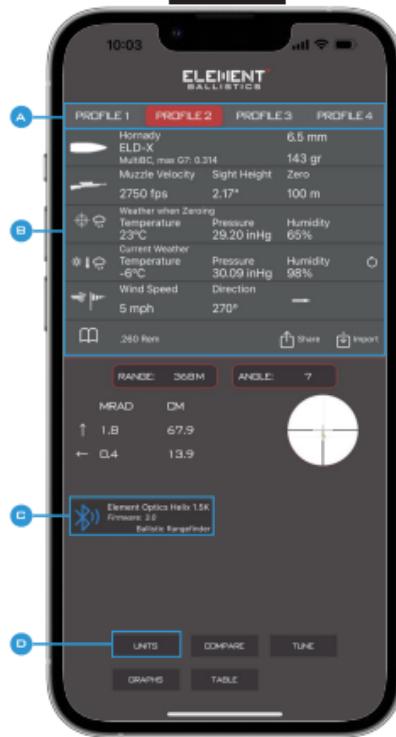


FIG.4



FIG.5

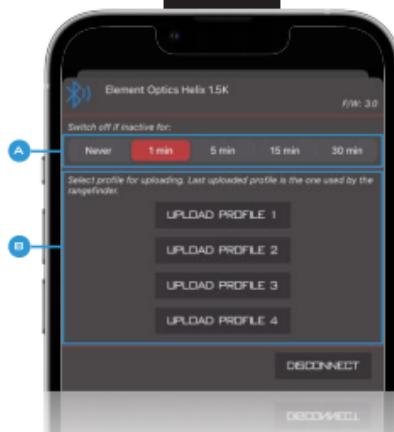


FIG.6



As shooters, we know that there is nothing worse than being let down by your equipment. We have made every effort to build a rugged, reliable product that will not break under any normal circumstances, and have implemented some of the strictest quality control measures in the industry. However, we know that things can go wrong, and therefore we back our electro-optics with a 3 year warranty, which is fully transferable. This warranty requires proof of purchase.

For full terms and information, visit element-optics.com/warranty or scan the QR code below.



The Element Optics 3 Year Warranty applies to Electro Optics only, and does not cover accessories purchased separately. Theft, loss, deliberate damage and cosmetic damage that does not hinder the operation of the riflescope is not covered. If your product can not be repaired and a replacement model is no longer in production, a model of equal value will be substituted.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1)This device may not cause harmful interference.

(2)This device must accept any interference received, including interference that may cause undesired operation.

SPEC SHEET

MAGNIFICATION	6x
OBJECTIVE DIAMETER	22mm
LASER LENS	10mm
RENGING DISTANCE	5-1500m
CONNECTIVITY	Bluetooth
FIELD OF VIEW	7 Degrees
BATTERY	CR2
LENGTH	100mm (3.94")
WEIGHT	150g (5.29oz)
WEATHER RESISTANT	YES
BALLISTIC CHIP	YES
DISPLAY TYPE	T-OLED



@WeAreElementOptics



Element Optics



element_optics



www.element-optics.com



