



Model No. ES15
Original Instructions



Electric scooter G11 Max
USER MANUAL

140 mm

V1.0

Before using the product, please read this manual.
IMPORTANT! Read carefully and keep for future reference.



140 mm



Use Camera or QR Scanner to Scan
Email Address: aftersales@invanti.com



The illustrations and function descriptions in this user manual are for illustration purposes and reference only, and the products are subject to the real product. The mentioned technical performance indicators are based on the specific experimental environment, and the actual indicators may vary depending on the setting and environment. This product needs to be used with mobile phones or other smart devices. The realization of all functions of this product requires network support, with the network fee being subject to the supplier's service rate. This product is only used to assist safety management and cannot replace other safety measures. Do not use this product for any illegal purpose. Some services are provided and supported by third parties, which may change at any time. Invanti does not provide any guarantee for third-party services. Please read the terms of the third-party service and privacy policy carefully before use.

The text and logo of 5TH WHEEL are trademarks or registered trademarks of enterprises affiliated with Invanti. Other company, product or service names mentioned may be trademarks or registered trademarks of their respective owners.

Model No. ES15
Original Instructions



Electric scooter G11 Max

USER MANUAL

V1.0

Before using the product, please read this manual.
IMPORTANT! Read carefully and keep for future reference.

Contents

- ① EN —— 1-29
- ② ES —— 30-58
- ③ FR —— 59-87

EN-Contents

1.Safety Instructions -----	2
2.Introduction to Functions -----	9
3.Product Display -----	11
4.Scooter Assembly -----	13
5.Unfolding/Folding/Carrying -----	14
6.Riding and Parking -----	17
7.Control System -----	18
8.Indication Description -----	21
9.About Charging -----	22
10.About the Battery and Charger -----	22
11.App Descriptions -----	24
12.Maintenance -----	25
13.Parameter Configuration -----	26
14.Authentication -----	27


* Please read and know the instructions described in the user manual carefully before using the electric scooter and keep it for future reference.

Please do not dispose of this product casually, it needs to be disposed of in accordance with local recycling regulations.

Welcome

EN

Thank you for choosing the 5th Wheel Electric Scooter. Please enjoy the pleasure brought by this scooter.

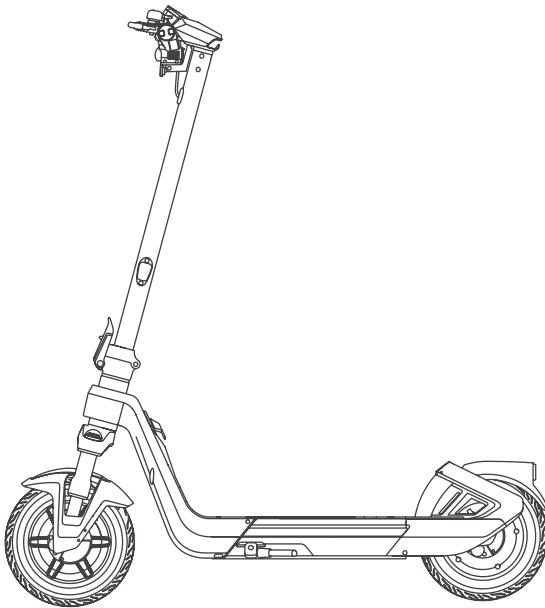


The electric scooter is a sports and entertainment tool, rather than a means of transportation. However, once you drive it into a public area (if it is allowed by your regional and national laws and regulations), it will also have the attributes of a means of transportation. Therefore, there are possible safety risks of all vehicles. Driving in strict accordance with the instructions set forth in this manual will protect you and others to the greatest extent, and ensure that you will comply with national and provincial traffic laws and regulations.

1 Safety Instructions


Note: Before using this product, please carefully read the following important safety information.

The vehicle not intended for use in high altitude locations shall indicate that they are not intended for use at elevations greater than 2000 m above sea level.

1.This electric scooter can be used by one adult only.
Never carry others.


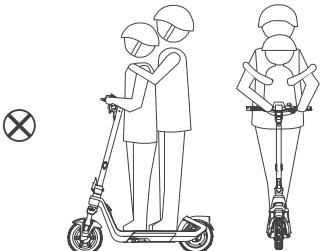


2.Wear safety helmet and other protective equipment while using this product.

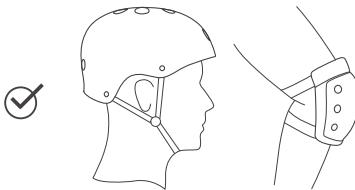


3.Never ride this product in an unsafe or illegal place.


4.Please practice in an open area (not on lanes) first and use this product until you are skilled in operation.

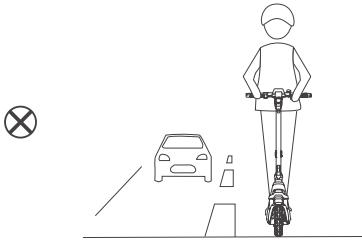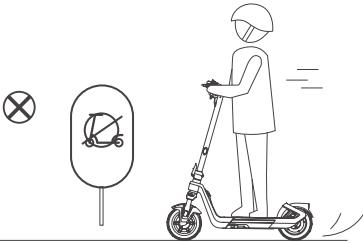

5.Do not make dangerous actions or ride with one hand only. Keep your feet on the scooter.

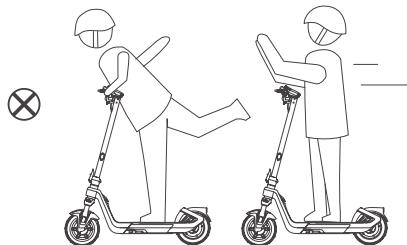

6.Avoid obstacle jumps and anticipate and adapt your trajectory and speed to those of a pedestrian before crossing these obstacles. Meanwhile, get out of the vehicle when these obstacles become dangerous due to their shape, height or slippage. Do not try to directly pass steps are higher than 1.2inch.

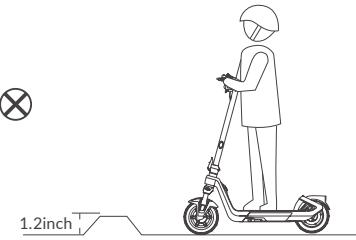


7.For your safety, please control the speed to be less than 20mph. Avoid using it at night as much as possible. If you use this product at night, turn on the headlight and control the speed to 9.3 mph or less.




8.Do not use this product at the ambient temperature below 14°F.Temperature range of cycling environment:14°F-140°F.



9.In the event of bumps or poor road conditions, please use this scooter slowly or get off the scooter and push it forward.

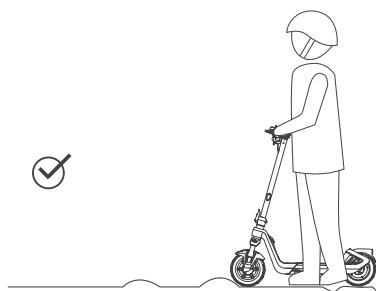

10.Do not use this product on an oily or icy surface.

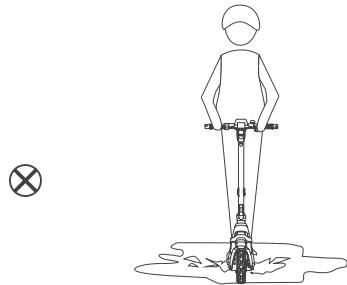


11.To avoid damage caused by water to its electrical parts, Please Do not immerse this product at a depth of more than 1.57inch in water.




12.Avoid using this product as much as possible in bad weather such as rain, snow and wind, to prevent unnecessary damage caused by insignificant factors.



13. Use this product in accordance with relevant instructions in this manual. Do not use this product beyond the allowable load range.

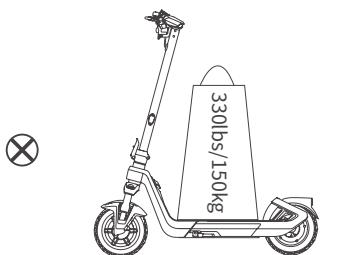

14. Avoid using or keeping this product at high or extremely low temperatures, or keeping this product together with flammables.

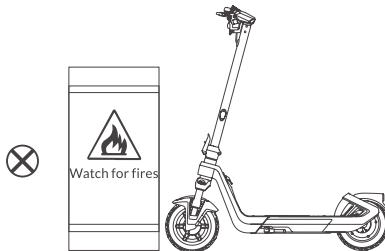


15. The scooter is a special riding product. Please ride it on smooth roads without pits.




16. Do not attach any load to the handlebar which will affect the stability of the vehicle.



17.Engage the kickstand when the vehicle is not in use; Flip up the kickstand before use; Do not park the vehicle on the slope.

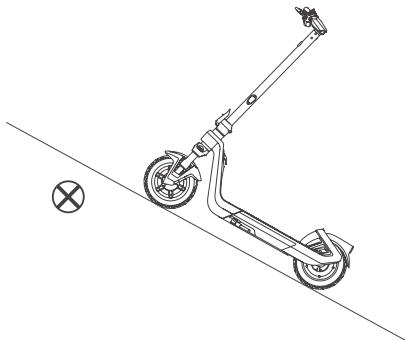


18.The minimum height of the user is 55 inch, while the maximum height is no more than 86.6 inch; the maximum age of the user is 70 years old, while the minimum age is no less than 13 years old.

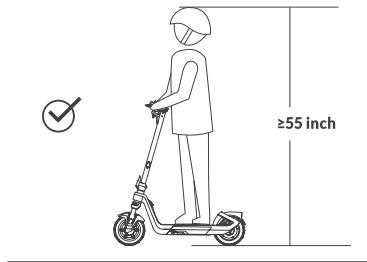


19.Braking performance and friction between the tire and road deteriorates in wet conditions, so it is harder to control the speed and easier to lose control. Slow down and brake early when it is raining.




20.WARNING Keep plastic covering away from children to avoid suffocation.

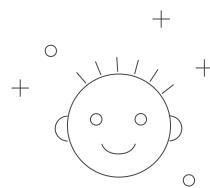

21.The user shall take the time to learn the basics of the practice to avoid any serious accident that can take place in the first month.

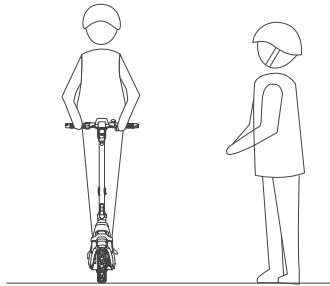

22.Notify your presence when approaching a pedestrian or cyclist when you are not seen or heard. Avoid high traffic areas or overcrowded areas.

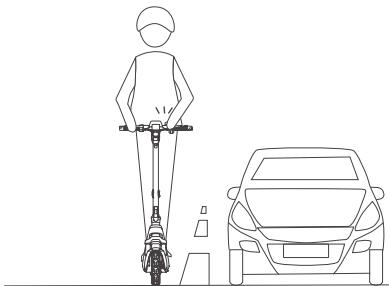


23.Cross the protected passages while walking. In all cases, take care of yourself and others.




24.Do not divert the use of the vehicle, This vehicle is not intended for acrobatic use.




25.Caution, the brake may become hot in use. Do not touch after use.

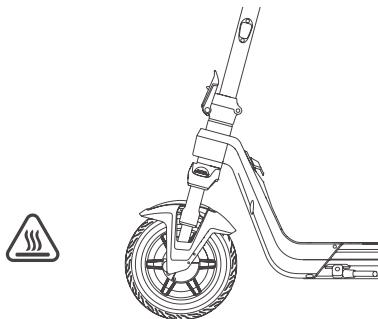


26.Eliminate any sharp edges caused by use. Do not modify or transform the vehicle, including the steering tube and sleeve, stem, folding mechanism and rear brake.

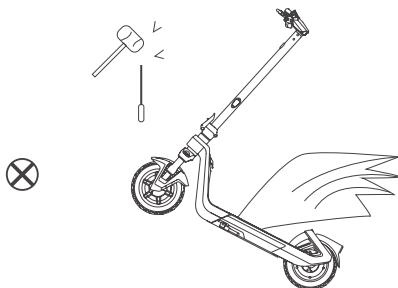

27.The user has the obligation to always wear shoes when riding.

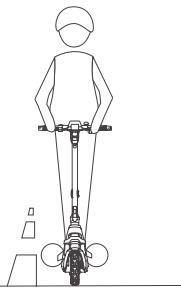


28. In any case, anticipate your trajectory and your speed while respecting the code of the road, the code of the sidewalk and the most vulnerable. If any, local special laws and regulations should be observed during riding of this product.

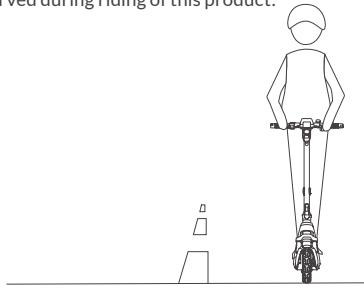

2 Introduction to Functions

1. Product Overview

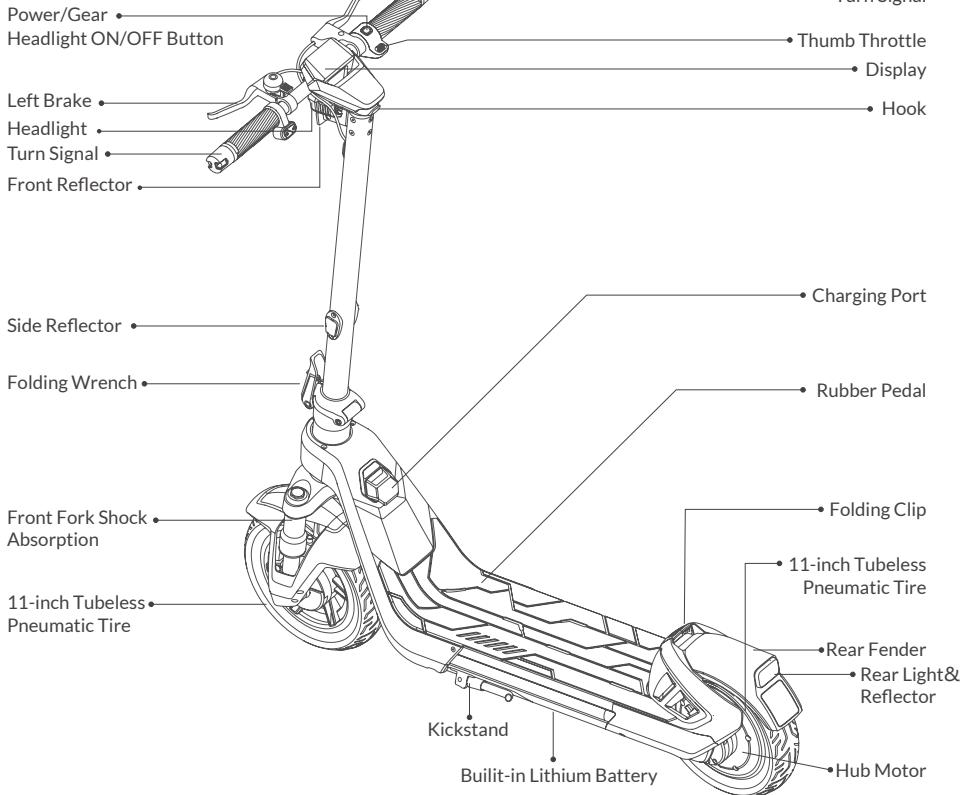


*The accessories and any additional items which are not approved by the manufacturer shall not be used.

Accessories



Manual

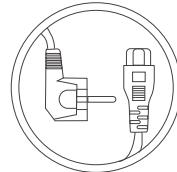M5*12 Screw×7
(1 spare)3.0mm
Screwdriver

Power Cable


Note: Please check out all the items in the package carefully. If anything is missing or damaged, please contact email: aftersales@invanti.com

Product Contents	Quantity
User Manual	1
M5*12 Screw	7 (1 spare)
Screwdriver	1
Power Cable	1


3 Product Display

EN

Unfolded status

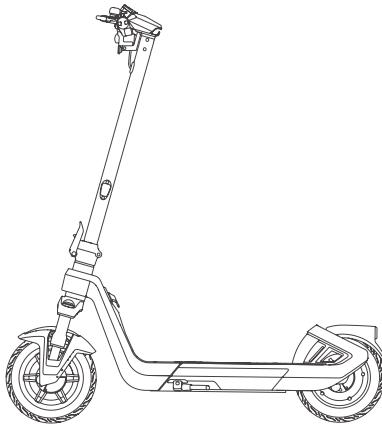

Folded status

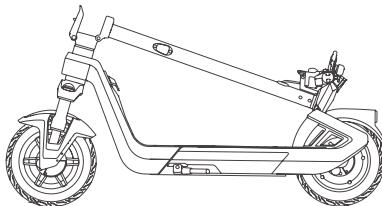



This QR code is a video tutorial for product use. It is recommended to scan this QR code to learn more about how to use the product.




Pay attention before riding!

1. Press the power key to open the scooter.
- ⚠ 2. For safety, the factory setting of scooter is non-zero start, you need to slide the scooter to 2mph, and the throttle can be used normally.
3. The scooter can be turned on normally and cannot ride in walking mode, but can only be pushed.
- ⚠ 4. Can't start when charging.
5. Do not throw away the manual, please refer to the manual for specific operations.
6. The suspension system have been fixed well in the manufacture, please contact with customer service if any issue occurred.


4 Scooter Assembly

1.Unfold the folding mechanism of the scooter and put down the kickstand.

Unfold the scooter and fix the folding mechanism.
(Refer to "Folding and Carrying" for details of unfolding.)

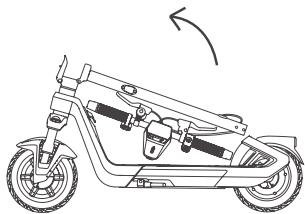


2.Insert the handlebar into the scooter stem.

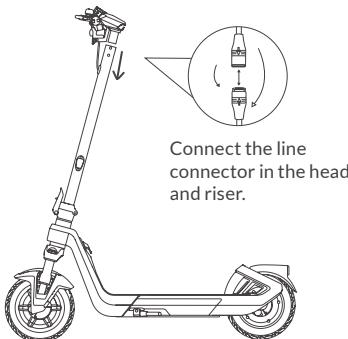


Connect the line connector in the head and riser.

3.Use the tools included in the package to tighten the screws.

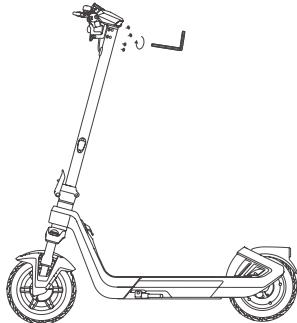


4.After assembly, check whether the power switch can work normally.

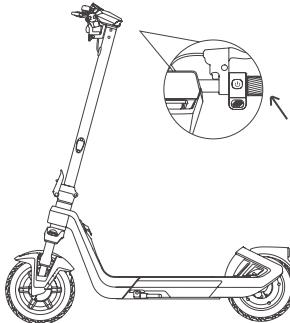


5 Unfolding/Folding/Carrying

1. Unfolding Operations


1. Turn the folding clip clockwise until it is fully open.

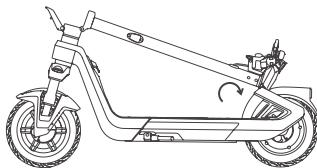


2. Pull up the body lever while opening the folding clip.

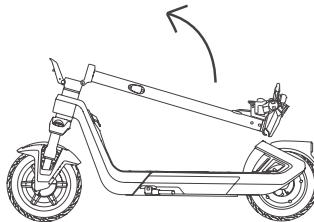

3. Turn the folder clockwise until it is fully snapped.

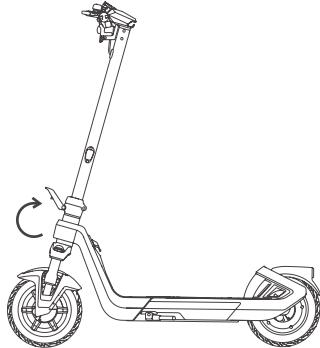


4. Check whether the folder key is returned to the bottom.

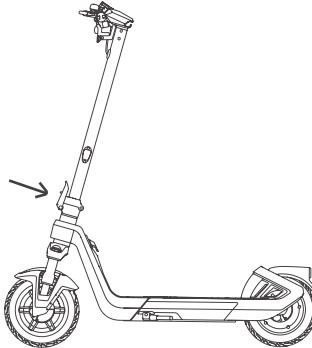


2. Folding Operations

Note: For safety, it is recommended to fold the scooter after it is shut down.


1.Lift the folder key up.

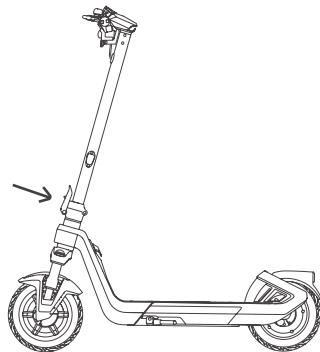


2.Rotate the folder counterclockwise while lifting the folder key.

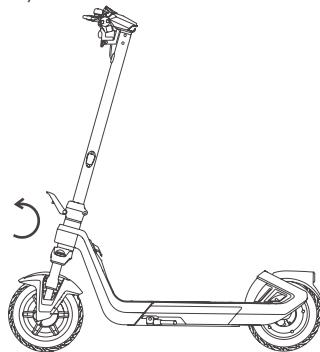


3.Lower the body rod slowly.

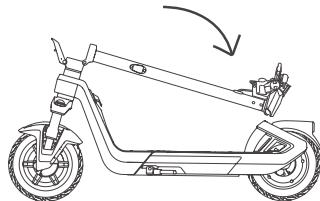

4.Align it to the position of the mudguard hook, and finally hook the hook under the dashboard to the rear end of the body.

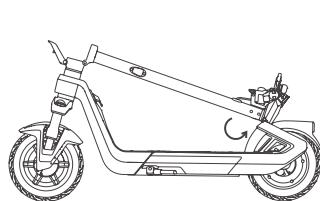



3. About Carrying

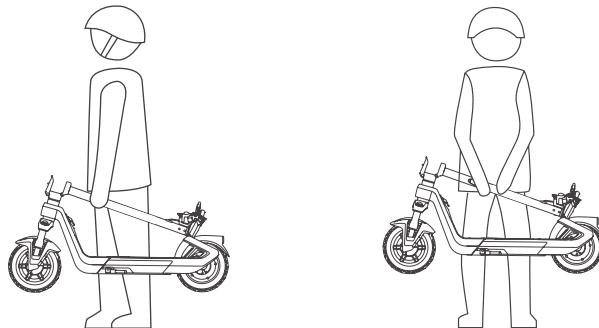

After folding, you can carry the scooter with one or two hands.

4. About Charging

⚠ Insert the charge cable, press the power button and the battery power will be shown on the LED Display, and when fully charged, FL will be indicated. LED Display will be turned off after 10 seconds. During charging, you cannot ride the scooter. Only after you unplug the charge cable, can you ride the scooter.

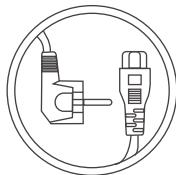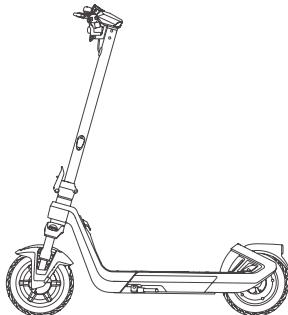


6 Riding and Parking

EN

Preparation for riding


- 1.Select an appropriate riding place.
- 2.Unfold the scooter according to the unfolding instructions and wear protective equipment.
- 3.It is necessary to check that the steering system is correctly adjusted, that all connection elements (such as a folding system) are correctly tightened and not broken, and that the brakes and wheels are in good condition.

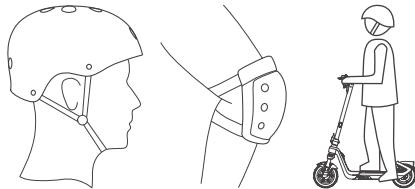

Riding


- 1.Press the power button to turn on the scooter.
- 2.Put one foot on the footboard and the other foot on the ground.
- 3.Make the scooter body slide forwards to 2mph and gently press the right thumb accelerator. The scooter will slowly run forwards. When the scooter is running steadily, put the other foot onto the footboard. The larger holding angle of the right thumb accelerator, the higher the speed.

Note: For the riding safety, the scooter has a non-zero start mode. The accelerator cannot be enabled until the body slides forwards for a certain distance.

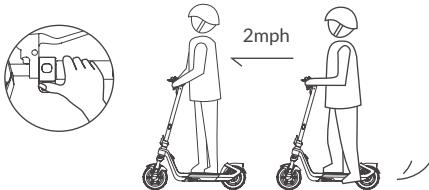

Stop

Under normal circumstances, hold either brake lever on the left or right, the motor will be immediately powered off and subjected to electric braking, meanwhile the drum brake will also effect. The harder you hold, the greater the braking force you get. More safety will be provided by holding the brake levers on both sides at the same time.

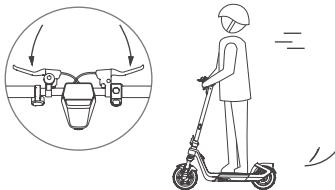

7 Control System

EN

Instrument Display

Speed Unit	Wireless Connection
Pedestrian Mode	Alert
ECO Mode	Real-Time Speed
D Mode	Charging Capacity
S Mode	Lock
Headlight	Turn Signal Icon
Battery	

Disc Brake

Hold the left brake handle. The greater the pressure, the greater the braking force.

Turn Signal

Turn Signal Control


Turn signal button function: Short press the left/right button to turn the left/right turn signal on/off; Press and hold the left or right button for 3 seconds to activate the flash function. Press the left or right button to deactivate the flash function;

LED

Power on/off status light display, red light slides from left to right when power on, red light slides from right to left when power off;

Throttle acceleration status light display, green light fades from dark to bright when accelerating;

Brake status light display, red light fades from dark to bright when braking.

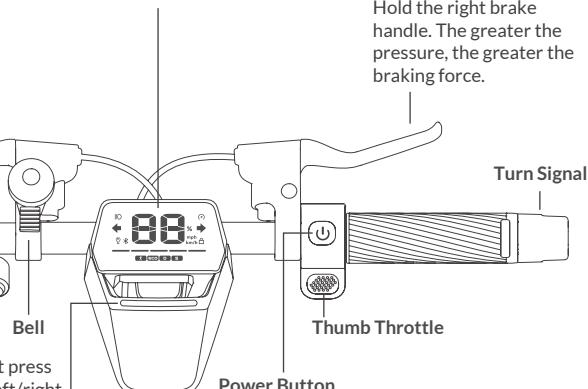


Power Button

Short press to turn on, long press to turn off;

Press the button once to turn on the headlight;

Double press the button to shift the gear mode;
Triple press the button to shift the speed unit.

LED Display

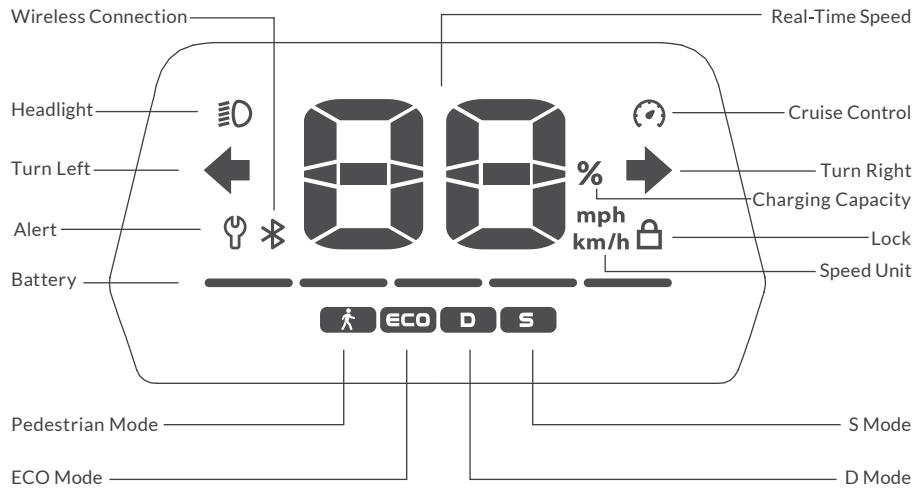

Power Switch

Power button function:

Short press to turn on, long press to turn off;

Press the button once to turn on the headlight; Double press the button to shift the gear mode; Triple press the button to shift the speed unit.

Two startup modes:

1. Non-zero start, power-assisted gliding speed is greater than 2mph, press the dial motor to start working;

2. Brake lever start, the factory default mode is turned off, turn this mode on in the APP, hold the brake lever and release it within 3 seconds, then press the accelerator paddle motor to start working; If the brake lever is released for more than 3 seconds and pressing the accelerator is ineffective, you need to repeat this action and press the accelerator again within 3 seconds to start working;

Gear Setting

Press the power button twice quickly to switch the gear. The gear can be set to Level ECO (max. 10mph), Level D (max. 15mph), Level S (max. 20mph) and the pedestrian mode(max. 3mph).

Brake Control

Hold either brake to lower the speed, the harder you hold the stronger brake force you get.

LED Headlight Switch

After switching on the scooter, click the LED headlight switch to turn it on/off.

Emergency Braking

Under normal circumstances, do not use emergency braking vigorously during high-speed driving, so as to avoid the riding risk or damage to the rear wheel. The company is not responsible for the damage.

Turn Signal Control

Turn signal button function: Click the left button to switch the left turn signal; click the right button to switch the right turn signal; long press the left or right button for 3 seconds to turn on the flash function; click the left or right button to turn off the flash function.

Noise Emission



The A-weighted emission sound pressure level of the vehicle in operation is less than 70 dB(A).

8 Indication Description

If there is anything abnormal about the scooter, the warning indicator will flash, with the flashing value1-22 displayed.

Codes	Errors	Solutions
01	Communication Fault	Communication Fault. It is recommended to check whether the connection line between the instrument and the controller is well connected. If it is connected well, or contact the official after-sales personnel.
02	2nd Brake fault	Please check if the 2nd brake lever is reset to zero position, and check the brake line, brake lever, and related circuits, or contact official after-sales personnel.
03	Controller Fault	Controller fault, it is recommended to replace the controller or contact official after-sales personnel.
04	Controller Overheated	High temperature alarm. The temperature of the controller is too high. It is recommended to let the scooter cool before restarting.
05	Motor Fault	Motor fault, it is recommended to check if the motor and controller cables are properly connected. If they are already connected, please contact the official after-sales personnel.
06	Motor Stall	Motor stuck. Please release the throttle and restart the vehicle to observe if the fault disappears. If it still persists, please contact the official after-sales personnel.
07	Motor Hall Fault	Motor Hall fault. Please check the wiring related to the controller and motor Hall, or contact the official after-sales personnel.
09	Motor Current Sensor Fault	Motor current sensor fault. Please check the circuit related to the controller and motor phase line, or contact the official after-sales personnel.
10	Motor Overheat	Motor overheat, it is recommended to cool down for a period of time and wait for the motor temperature to drop before use. At the same time, try to avoid sudden braking during use.
11	Throttle Fault	Throttle fault. Please check if the throttle is reset to zero, and check the cable, throttle, and related circuits, or contact official after-sales personnel.
12	Brake Fault	Brake fault. Please check if the brake lever is reset to zero, and check the brake line, brake lever, and related circuits, or contact official after-sales personnel.
13	Over Current Protect	Overcurrent protection, please contact official after-sales personnel.
14	Over Voltage Protect	Overvoltage protection, please contact official after-sales personnel.
15	Under Voltage Protect	Undervoltage protection, please check the battery voltage and capacity, or contact official after-sales personnel.
16	BMS Fault	BMS fault. It is recommended to check whether the controller and battery cables are well connected, or contact official after-sales personnel.
17	Battery low temperature alarm	Battery temperature alarm, battery temperature is too low. Please check the battery temperature and restart after meeting the conditions.
18	Battery overheat alarm	Battery temperature alarm. The battery temperature is too high. Please check the battery temperature and let it sit for a period of time before turning it on.
19	Battery low temperature charging alarm	Battery low temperature charging alarm, battery temperature is too low. Please check the battery temperature and wait until the conditions are met before charging.
20	Battery charging over temperature alarm	Battery charging over temperature alarm. The battery temperature is too high. Please check the battery temperature and let it sit for a period of time before charging.
21	Battery cell voltage disbalance alarm	Battery fault. It is recommended to contact the official after-sales personnel.
22	Short circuit fault in battery AFE cell detection cable	Battery fault. It is recommended to contact the official after-sales personnel.

9 About Charging

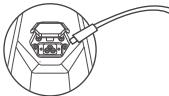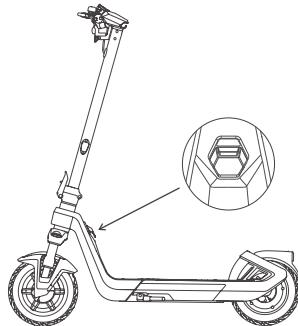

Open the protective cover of the charging port.

Connect the charger.

After charging, push the protective cover back in

1. Open the charge port cover, insert the charge cable, and insert the power plug into the power socket.
2. Press the power button, battery power will be shown on the LED Display.
3. Turn charging, the scooter cannot be ridden.

Charging capacity

When charging, "%" lights up and real-time display of charging progress.

The adapter is built-in, and when starting to charge, the instrument panel will display the battery level, and the % number on the instrument panel will be highlighted.

10 About the Battery and Charger

Each electric scooter is equipped with a dedicated lithium battery and charger cable. Both the scooter and its accessories have product identification numbers. It is forbidden to use the charger cable of other brands. The charger cable provided by the company must not be used for other purposes. The company is not responsible for the resultant damage to the battery or charger.

Battery

The lithium battery provided by the company can be recharged for at least 800 times, and more than 1,000 times under normal circumstances. Please charge full battery for the first time before using it. The battery can be charged at any time, and there is no any damage to charge it frequently. Meanwhile, please don't forget to charge it per 3 months if you don't use it for a long term.

Operating Temperaturee

Charging: 0°C~45°C

Discharging: -20°C~60°C

Built in Charger adapter

The dedicated charger provided by the company has charging protection function for the built-in charger. When the battery is 100% charged, the charger will be powered off automatically. The charging time is about 5-6 hours. Damage to the battery arising from water, collision and other abnormal factors is excluded from the warranty policy.

Production factory: Weihai Hitai Electronics Co.,Ltd

MODEL: HT-A89-54625

INPUT: AC100-240V 50/60Hz 2.0A MAX

OUTPUT: 53.6V == 2.5A

Charging instructions

1. Open the cover and insert the plug into the hole;
2. Insert another plug of the cable into the electric outlet;
3. Please shut down and keep away from water before charging.
4. Only use the specified cable for charging.
5. Warning: Please be careful not to get electric shock.

Kinetic energy recovery

Press the brake in the running process to enable the kinetic energy recovery system and convert part of kinetic energy into electrical energy to be stored and used. The kinetic energy recovery system can enhance the experience of emergency braking. At the same time, the recovered kinetic energy can help increase the endurance. Changes in the power are displayed simultaneously.


11 App Description

We pay great attention to user experience and constantly inject new functions into the App, so the App UI may change with version updating. The following contents are for reference only, please follow the instructions based on the current App version.

1. Please use your mobile phone to scan the QR code to download the App, or search "Invanti", "InvantiMobility", "5thWheel" or "5thWheelTrip" in the app store to download and install it. If you have installed the App, please ensure it is the latest version.



2. Open the App, complete the registration for the first time use. After registering, please login to the homepage, tap "+" on the upper right or Search Devices button in the mid-lower section, then follow prompts to add your scooter. Please keep your Bluetooth and scooter on, and try again if you fail to scan.

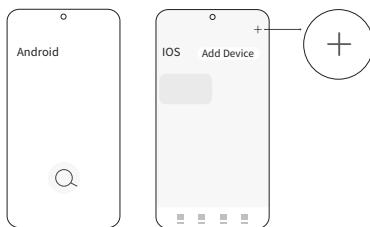

Special note: About the locking function, it can only ensure that the scooter can't run normally. Due to the light weight of the whole scooter and the whole scooter is composed of mechanical parts, it can be removed with corresponding tools. To prevent your electric scooter theft, suggest always park your scooter in a well-lit and highly visible area for you, or invest in a high-quality and sturdy lock that can keep it securely locked up.

12 Maintenance

Lubrication



For maintenance, add a small amount of white grease or lubricant to the folded part once every six months. Check the scooter once every three months for screw loosening. Tighten the loose screw.

Battery



When you get the electric scooter for the first time, please fully charge the battery before using the scooter. The battery can be charged at any time to ensure the power supply. It will not be damaged during charging. When not in use, the battery needs to be charged once every three months.

*Laboratory data

Storage and daily maintenance



Avoid leaving scooter under direct sunlight or in severely humid places for a long time.

Keep the scooter clean.

Regularly check the tightening of the various bolted elements, in particular the wheel axles, the folding system, the steering system and the brake shaft.

WARNING! As with any mechanical component, a vehicle is subject to high stresses and wear. The various materials and components may react differently to wear or fatigue. If the expected service life for a component has been exceeded, it may break suddenly, therefore risking causing injuries to the user. Cracks, scratches and discoloration in the areas subject to high stresses indicate that the component has exceeded its service life and should be replaced.

Cleaning Recommendations



If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth.

Do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to prevent dire damage. Do not wash the scooter with a high-pressure water spray. During cleaning, make sure that the scooter's turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

Routine Inspection



1. Before riding, please confirm the folding mechanism is locked;
2. Please check whether the tires are badly worn. Please contact the local authorized dealer if they needs to be replaced;
3. Please check whether the tire pressure is at the standard value. If the tire pressure is too low, please inflate the tires immediately;
4. Please check whether the wear condition of the brake pad affects the use of the brake system. If so, please contact the local authorized dealer to deal with the problem;
5. The screws used in this product are self-tightened screws. Please note that the effect may be gone after several times of tightening.
6. WARNING – Risk of Fire and Electric Shock – No User Serviceable Parts.
7. Prolonged Exposure to UV Rays, Rain and the Elements May Damage the Enclosure Materials, Store Indoors When Not in Use.

Get closer to your seller so he can refer you to an appropriate training organization.

13 Parameter Configuration

Parameter	Product Name	Electric Scooter
	Model	ES15
Size	unfolded: L x W x H	46.46inch*24.41inch*51.18inch
	Folded: L x W x H	46.46inch*24.41inch*24.41inch
Weight	Net Weight	58.43lbs
Status	Max Load	330.69lbs
Rider	Age	14-60 years old

Main Parameters	Max Speed	20mph
	Full-battery ^[1] Endurance	40.4mile
	Maximum slope ^[2]	Approx. 30 %
	Tire	11 - inch tubeless pneumatic tire
	Tire Pressure	35 - 50 psi
	IP Class	IP X4
	Brake System	Front/rear drum brake+Electronic brake
	Display	Speed, Gear mode,Battery capacity,Funcitons etc.
	Lighting System	LED high-brightness headlight taillight,Turn signals.
	Rated Power	500 W
	Peak Power	1000 W
	Battery	48 V - 13 Ah
Charger	Output Power	134 W
	Input Voltage	100 V - 240 V ~ 50/60 Hz
	Output Voltage	54.6 V MAX
	Output Current	2.5 A
	Charging Time	5 - 6 h
Wireless Parameters	Wireless Frequency Range	2402 ~ 2480 MHz
	Wireless Maximum Output Power	Max 5 dbm

[1] Full-battery Endurance:Depending on the environment, angle, speed, driving habits and other factors.

[2] Maximum Slope:The maximum gradient that driver weighting 165lbs(75kg) gets through at a constant speed of 5mph (8km/h) in the ambient temperature of 77°F(25 °C) in case of a full battery.

14 Authentication

Applicable model: ES15

The product has passed the ANSI/CAN/UL-2272 certification.

The battery complies with the UN/DOT 38.3.

According to the Federal Communications Commission (FCC) Compliance Statement as follows:

The product complies with part 15 of the FCC rules, and the operation must meet the following two conditions: (1) the product should not cause harmful interference, and (2) the product must accept any received interference, including interference that may lead to accidental operation. Any change or modification not expressly approved by the responsible party may make void the user's right to operate the product.



The EU Compliance Statement is as follows:

WEEE needs to properly dispose of and recycle the product. This sign indicates that the product should not be disposed of together with other domestic waste throughout the EU.

Therefore, in order to prevent possible harm of uncontrolled waste treatment to the natural environment or human health, it is necessary to recycle it and promote the sustainable reuse of material resources. To recycle the used product, use the return and collection system or contact the retailer who can use the product for environmentally safe recycling.



EU Battery Recycling Information:

Batteries or battery compartments are marked in accordance with the European Directive 2006/66/EC and the amendment 2013/56/EU on batteries and accumulator cells and scrap batteries and accumulator cells.

The directive applies to the recycling framework of waste batteries and accumulator cells throughout the EU. The label on the battery indicates that the battery should not be discarded, but recycled at the end of its service life according to the directive.

According to the European Directive 2006/66/EC and the amendment 2013/56/EU, batteries and accumulator cells are labeled to indicate that they will be collected separately and recycled at the end of their service life. The label on the battery may also contain the chemical symbols of the relevant metals in the battery (Pb, Hg and Cd). Users should not dispose of batteries and accumulator cells as garbage, but use the collection framework available to customers to recycle and dispose of batteries and accumulator cells. With the engagement of users, it is important to minimize any potential impact of batteries and accumulator cells on the environment and human health due to the presence of potentially hazardous substances.

Before placing electrical and electronic equipment (EEE) into a waste collection stream or waste collection facility, users of equipment containing batteries and/or accumulator cells must remove these batteries and accumulator cells for separate collection.

Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive.

The products and parts (cables, wires, etc.) of Invanti (Beijing) Technology Co., Ltd comply with the requirements of directive 2011/65/EU on restricting the use of certain hazardous substances in electrical and electronic equipment ("RoHS recasting" or "RoHS 2")

5TH WHEEL and the 5TH WHEEL logo are trademarks of Invanti (Beijing) Technology Co., Ltd., used under license. Android and Google Play are trademarks of Google Inc. and the App Store is the service mark of Apple Inc. Their respective owners reserve the trademark rights mentioned in this user manual.

The products involved in the registered trademark of 5TH WHEEL are protected by relevant patent laws.

In this user manual, we make our utmost to describe all the instructions and functions of the electric scooter. With constant updates and iteration, the electric scooter received may be slightly different from the product features shown in this manual. For more information, please visit the Apple App Store (iOS) to download the App.

Please note that Invanti has developed products with many functions and different models of products, and some of the functions mentioned here may not be applicable to the product or equipment received. The manufacturer reserves the right to change the design and function of the electric scooter and documents without notice.

2025 Invanti (Beijing) Technology Co., Ltd all rights reserved.

Contact Us

If you encounter any problems when using the product, please feel free to contact us through the following methods or scan the QR code to get a quick response and a satisfactory solution.

Amazon Platform: "Contact Seller"
Email Address: aftersales@invanti.com

Use Camera or QR Scanner to Scan



Get 24/7 Customer Service

RF exposure warning:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.


ES-Índice de contenidos

1. Instrucciones de seguridad -----	116
2. Introducción a las funciones -----	125
3. Visualización del producto -----	127
4. Cómo ensamblar el patinete -----	129
5. Desplegar/Plegar/Transportar -----	130
6. Conducir y aparcar -----	133
7. Sistema de control -----	134
8. Descripción de las indicaciones -----	136
9. Cómo cargar -----	138
10. Acerca de la batería y el cargador -----	138
11. Descripción de la aplicación para el móvil -----	140
12. Mantenimiento -----	141
13. Configuración de los parámetros -----	142
14. Autenticación -----	143

* Lea detenidamente y conozca las instrucciones que se describen en el manual de usuario antes de usar el patinete eléctrico y guarde el manual para futuras referencias.

No se deshaga de este producto de forma casual, debe hacerlo de acuerdo con la normativa local de reciclaje.

Gracias por elegir el patinete eléctrico de 5th Wheel. Disfrute del placer que le proporciona este scooter.

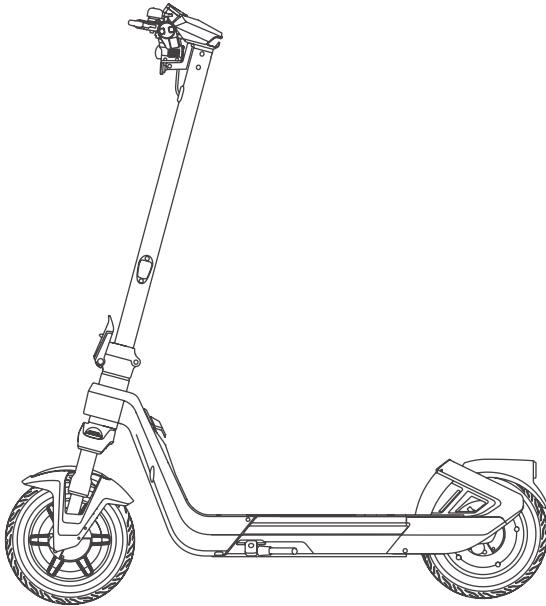


El scooter eléctrico es una herramienta deportiva y de entretenimiento, más que un medio de transporte. Sin embargo, una vez que lo conduzcas en una zona pública (si lo permiten las leyes y normativas regionales y nacionales), también tendrá los atributos de un medio de transporte. Por lo tanto, existen posibles riesgos para la seguridad de todos los vehículos. Conducir siguiendo estrictamente las instrucciones establecidas en este manual le protegerá a usted y a los demás en la mayor medida posible, y le garantizará el cumplimiento de las leyes y normas de tráfico nacionales y provinciales.


1 Instrucciones de seguridad

Nota: Antes de usar este producto, lea detenidamente la siguiente información importante sobre seguridad. Los vehículos no destinados a ser utilizados en lugares de gran altitud indicarán que no están destinados a ser utilizados a elevaciones superiores a 2000 m sobre el nivel del mar.


1. Este patinete eléctrico sólo lo puede usar una sola persona. Nunca lleve a otros.

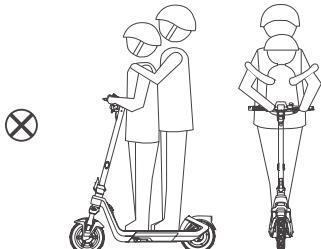


2. Lleve puesto el casco y otro equipo de protección mientras usa este producto.

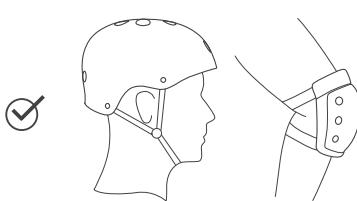


3. No utilice este producto en lugares prohibidos o inseguros.

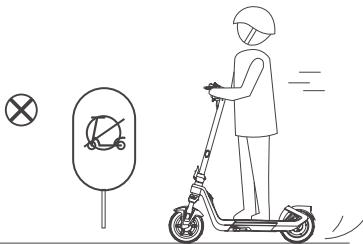


4. Practique primero en una zona abierta (no en una carretera) hasta que sea diestro en el manejo.

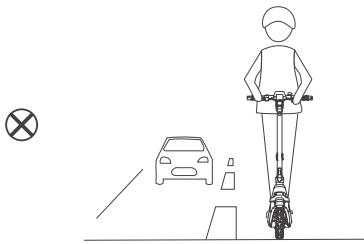


5. No realice maniobras peligrosas ni conduzca solo usando una mano. Mantenga los pies sobre el patinete.

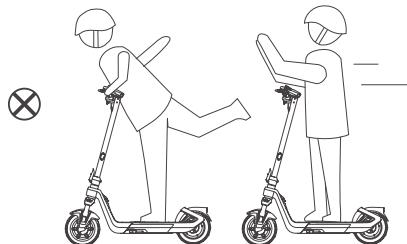

6. Evite saltar obstáculos y anticipé y adapte su trayectoria y velocidad como las de un peatón antes de cruzar estos obstáculos. Mientras tanto, bájese del vehículo cuando estos obstáculos sean peligrosos por su forma, altura o deslizamiento. No intente pasar escalones que sean mayores de 1,2 pulgadas.

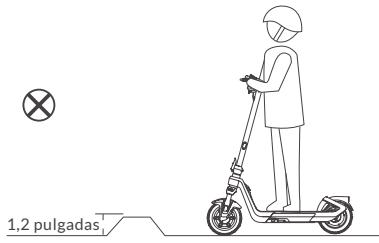

7. Por razones de seguridad, controle la velocidad para ir a menos de 20mph. Evite usarlo de noche siempre que pueda. Si utiliza el producto de noche, encienda el faro delantero y controle la velocidad a 9.3 mph o menos.

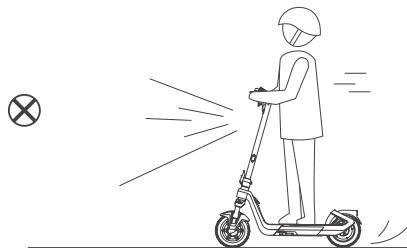

8. No utilice este producto cuando la temperatura ambiente sea inferior a 14 °F. El margen de temperatura de carga y conducción: 14 °F - 140 °F.

