


印刷说明

材质：双铜版纸

对折尺寸：95x150mm

装订方式：折页

注意：此页不做印刷

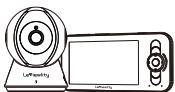

BABY MONITOR

Vivid Imaging, Guarding Your Moments

7. Charge and Install Monitor & Camera

Charge the Monitor:

Before using the monitor for the first time, fully charge the monitor. Connect the USB Type-C cable to the monitor and adapter. The power indicator will be red while charging and turn off when fully charged, which takes about 5 hours.

Charge the Camera:

Connect the camera to the adapter using the included USB Type-C cable.

Add Camera:

This step is not required out of the box. The camera and monitor are pre-paired at the factory and will automatically connect and display video when powered on. If there is an disconnection or you need to repair the camera, do the following:

1. On the monitor, press the Menu button, go to Camera Setting>Add Camera, and follow the on-screen instructions.



2. On the camera, short press the pairing button twice until you hear a prompt sound, signaling it's in pairing mode.




3. Wait for the camera to pair with the monitor, which usually takes about 60 seconds. Ensure the camera is within 2 meters of the monitor while it pairs.

Camera Installation

Install the camera about 3 feet from the baby's crib for clear visibility. Choose from these 3 methods:

1. Flat Installation:


Place the camera on a flat surface such as a table or countertop, and connect the camera to the power supply.

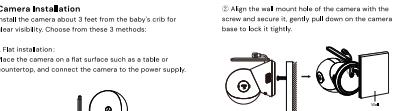

2. Align the wall mount hole of the camera with the screw hole on the camera base to lock it tightly.

3. Wall mounting:

① Install the screw into the wall, making sure the screw head 6mm of the screw exposed.

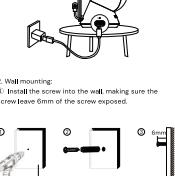

② Use the monitor's directional buttons to adjust the camera's position and ensure it is stable and not shaking.




③ Adjust the angle of the bracket so that the camera can clearly view the baby or the baby's crib.

④ Use the monitor's directional buttons to adjust the camera and verify that it is securely mounted without any shaking.

3. Bracket Installation

① Align the bracket mounting hole of the camera with the bracket. Rotate the camera clockwise to fix it onto the bracket.

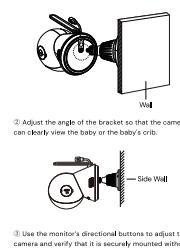

8. Q&A

Q1: Camera fails to power on?

A: Check if the camera is properly connected to power and if the monitor is turned on.

B: Ensure the camera is paired with the monitor before use.

C: The monitor may be in sleep mode. Press any button to activate the monitor.

Q2: Monitor fails to power on?

A: Press and hold the monitor's power button for 3 seconds to turn it on. If it doesn't power on, the monitor battery might be depleted. Charge the monitor using the charging cable and try again.

Q3: Disconnect between monitor and camera?

A: The distance between the monitor and camera may be too far. Move the camera closer to the monitor.

B: Check for large metal obstructions such as doors, mirrors, file cabinets, or refrigerators that could interfere with signal transmission between the camera and monitor.

C: Broadcast radiation from electrical devices like TVs, computers, phones, and microwaves can affect signal strength. Keep the monitor and camera away from such devices.

D: Try upgrading the devices, then power them off for 15 seconds before attempting to pair them again.

Q4: No image on the monitor?

A: Check if the camera is properly connected to power and if the monitor is turned on.

B: Ensure the camera is paired with the monitor before use.

C: The monitor may be in sleep mode. Press any button to activate the monitor.

Q5: No sound from the monitor?

A: Check the volume settings on the monitor. Ensure the volume is not too low or muted. Turn on the volume switch and increase the volume.

Q6: Continuous black and white image?

A: Check if night vision mode is activated. Check if night vision mode is on. Set night vision mode to auto mode or off.

Q7: The video is not smooth?

A: The distance between the camera and monitor may be too far, causing signal loss and incomplete video transmission.

B: Ensure there are no routers or smartphones between the camera and monitor. Keep them away for better signal reception.

C: Adjust the antenna position for improved connection.

On the same floor, place the antenna vertically; on different floors, place it horizontally.

Q8: Pairing failure?

A: Ensure the camera is powered on and the monitor is properly turned on and in pairing mode (blue light flashes slowly).

B: Short press the camera's pairing button 2 times to enter pairing mode (blue light flashes slowly).

Q9: Temperature is not accurate?

A: Keep the temperature sensor away from the camera body.

B: Place the camera away from areas with strong airflow, such as within the range of air conditioners and fans.

C: Keep the camera away from sources of heat radiation such as walls, windows, lamps, and heated electrical devices.

Q10: The video is not smooth?

A: The distance between the camera and monitor may be too far, causing signal loss and incomplete video transmission.

B: Ensure there are no routers or smartphones between the camera and monitor. Keep them away for better signal reception.

C: Adjust the antenna position for improved connection.

On the same floor, place the antenna vertically; on different floors, place it horizontally.

9. Notice

FCC Statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

(1) Reorient or relocate the receiving antenna.
(2) Increase the separation between the equipment and receiver.

(3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

(4) Consult a dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure Statement

This device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure condition. The min separation distance is 20cm.

The model of the camera and the monitor is BM-01.

10. Warranty

12-month warranty for the product.

60-day money-back guarantee for quality issues.

Note: Damages caused by the disregard of this user manual are not subject to warranty.

The model of the camera and the monitor is BM-01.

11. Contact Us

At LevieCam, we truly value your experience. If you have any questions about our product, please contact us through our website or our dedicated customer support. We are committed to providing you with the support you need. Thank you for choosing LevieCam, and we look forward to serving you.