


User Manuals

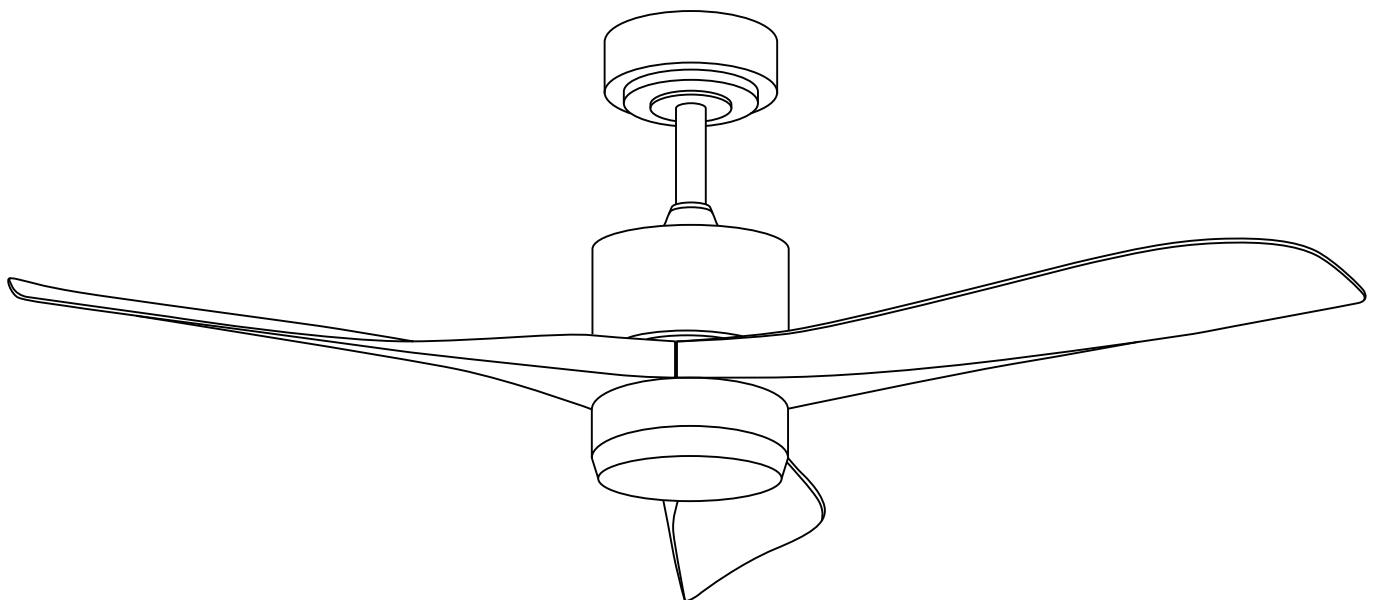

After-sales email: ChXiwsifo3515@163.com

Thank you for purchasing our product


Before using the product, please read this manual carefully and keep it in a safe place

The Product details page has a product installation video, the video can be faster to complete the installation, In the installation process of any problem please contact customer service through the after-sales mailbox or station.


PREPARATION

First read the safety information on page 3 and use the parts list to ensure that all hardware and software is present and in good condition. If any parts are missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: Approximately 30-60 minutes.

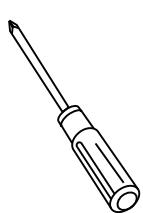

Phillips screw driver

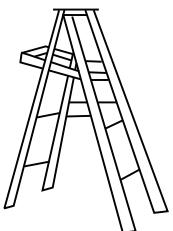


Step ladder




Gloves


ACCESSORIES PACKAGE

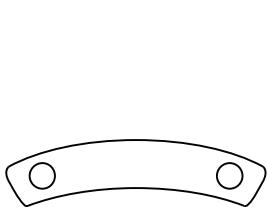


AA

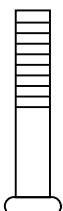

BB

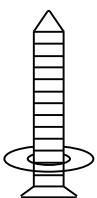

CC

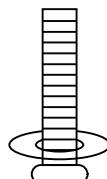


DD




EE



FF

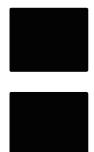


GG

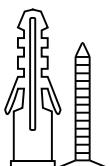


HH

AA	Fixed iron piece (52mm)	3
BB	Round head screws (M6*30)	7
CC	Self-tapping screws (M5*30)	4
DD	Mounting box screws	2
EE	Terminal cap	5
FF	Balance Clip	1
GG	Balance sticker	2
HH	Wall mount screws (M3*25)	2


PACKAGE CONTENTS

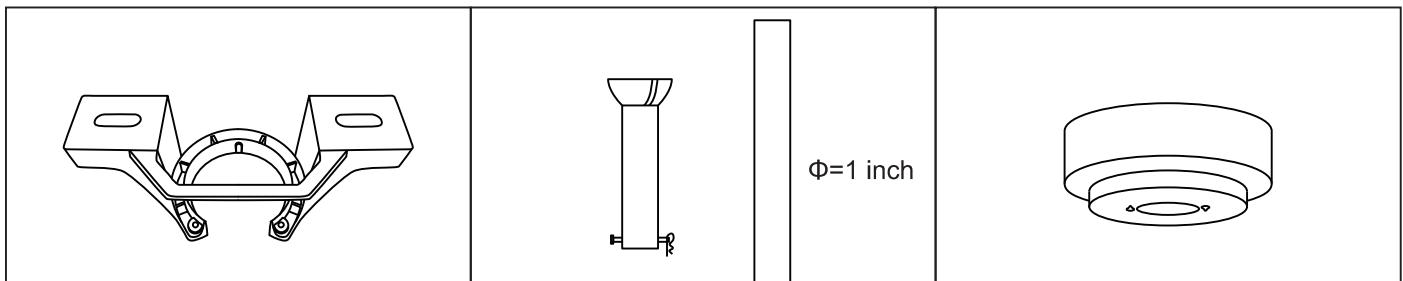


A	Mounting brackets	1	B	Boom Pole (5 or 10 inch)	1	C	Mounting box	1
----------	-------------------	---	----------	--------------------------	---	----------	--------------	---

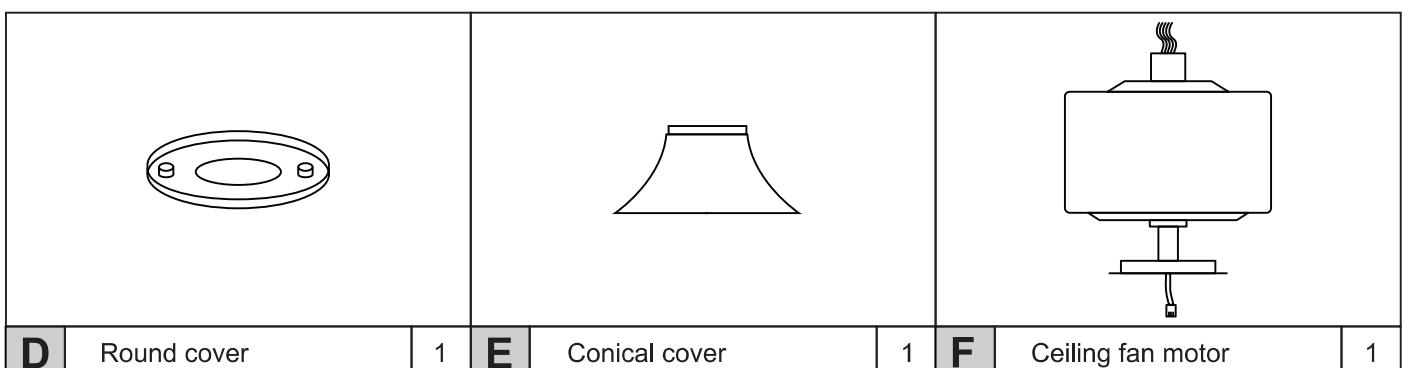

D	Round cover	1	E	Conical cover	1	F	Ceiling fan motor	1
----------	-------------	---	----------	---------------	---	----------	-------------------	---

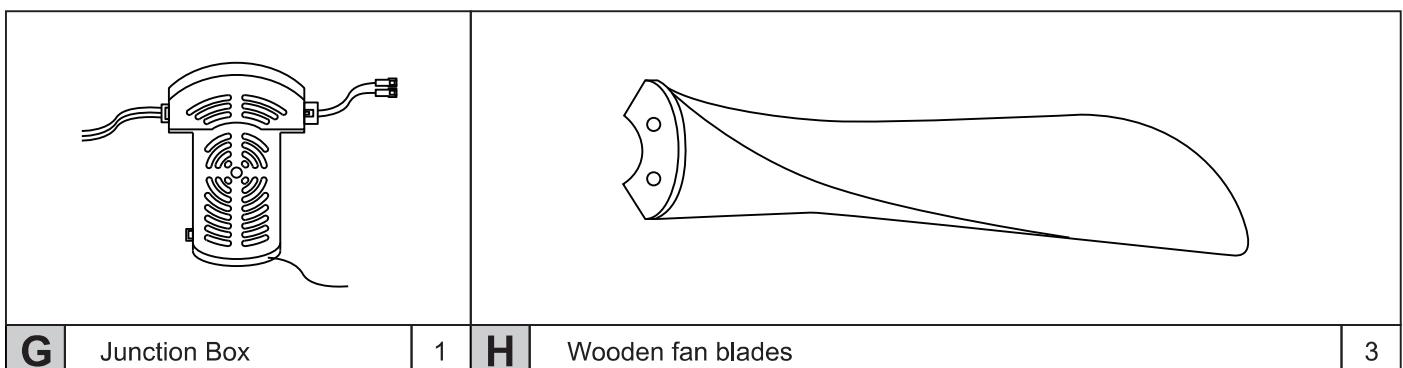

G	Junction Box	1	H	Wooden fan blades	3
----------	--------------	---	----------	-------------------	---

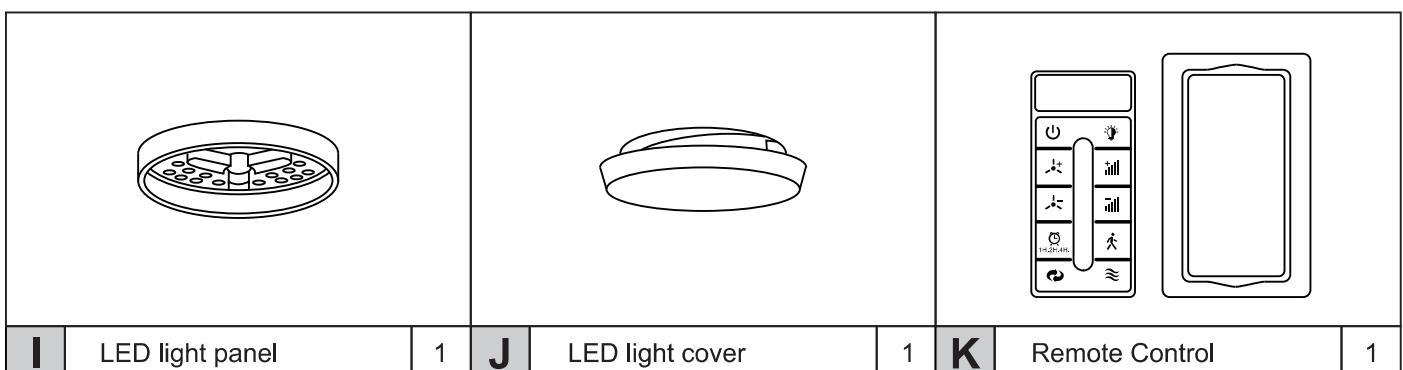

I	LED light panel	1	J	LED light cover	1	K	Remote Control	1
----------	-----------------	---	----------	-----------------	---	----------	----------------	---

SAFETY RULES

1. To reduce the risk of electric shock, turn off all power sources.
2. All wiring must comply with the National Electrical Code and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. **WARNING:** To reduce the risk of personal injury, use only the two steel screws (and lock washers) provided with the outlet box for installation. Most outlet boxes are typically used to support lighting devices instead of fans and may need to be replaced. If in doubt, please consult a qualified electrician.



WARNING

TO REDUCE THE RISK OF FIRE,
ELECTRIC SHOCK OR PERSONAL INJURY,
MOUNT FAN TO OUTLET BOX MARKED
"ACCEPTABLE FOR FAN SUPPORT".


4. The outlet box and support structure must be securely installed and capable of reliably supporting at least 50 lbs. Use only receptacle boxes marked CUL Listed "For Fan Support".
5. Mount the fan at least 7' from the floor.
6. Do not turn the fan blades until the fan installation is complete.
7. To avoid personal injury or damage to the fan and other items, work and clean the fan with care.
8. Do not use water or detergents to clean the fan or fan blades. A dry rag or slightly damp cloth is suitable for cleaning.
9. After marking the electrical connections, the spliced conductors should be turned up and carefully pushed up into the outlet box. The wires should be spread out except for the ground conductor and the equipment ground conductor on one side of the outlet box.
10. Electrical diagrams are for reference only. Lighting kit fans not included must be CUL listed and marked suitable for use with your model fan being installed. The switch must be a CUL universal switch. Please refer to the instructions used with the packaging for properly assembled lighting kits and switches.



WARNING


TO REDUCE THE RISK OF PERSONAL INJURY,
DO NOT BEND THE BLADE BRACKETS OR FLANGES DURING
ASSEMBLY OR AFTER INSTALLATION.
DO NOT INSERT OBJECTS
IN THE PATH OF THE BLADES.

PREPARATION

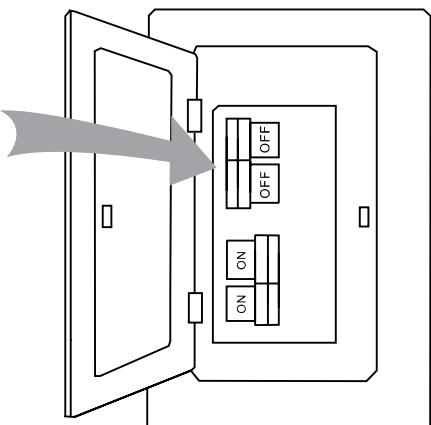


Turn off the main circuit power switch and wall fan switch.

⚠ Failure to disconnect the power supply prior to installation may result in serious injury or death.

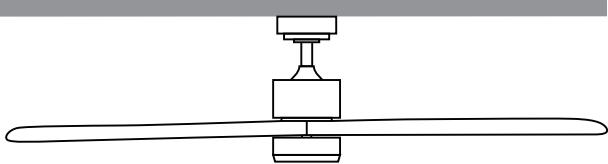


Horizontal installation

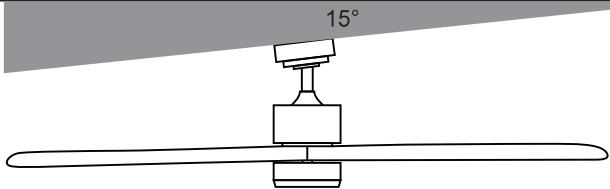

Inclined surface installation

Proper installation: The ceiling fan must be mounted vertically to a sturdy ceiling, and the fan must be mounted in a position to withstand gravity greater than 66lbs. If mounted on a slanted ceiling, the opening of the hanger must be tilted upward and the slot should be stuck inside the ear.

⚠ Safety Tips: Inclined surface installation is only applicable to inclined surface installation below 15° horizontally.

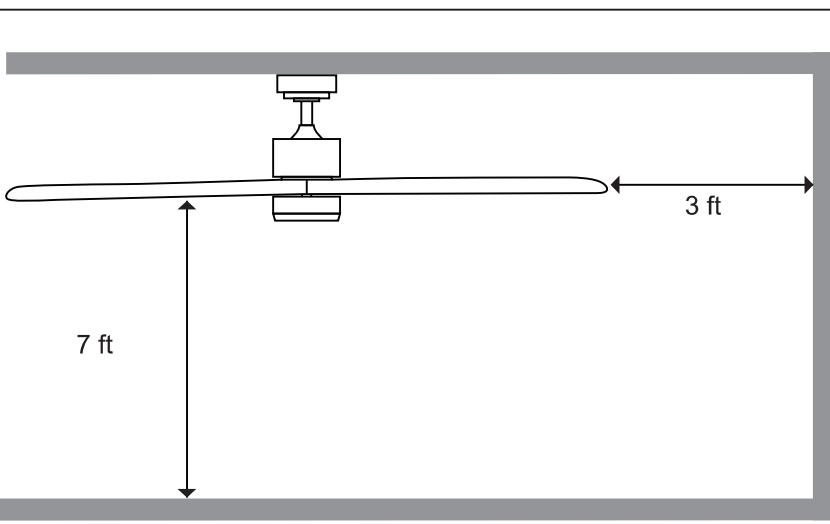

Ensure the blades will be at least 3 ft. from any obstruction. Also check the downrod length to ensure the blades will be at least 7 ft. above the floor.



SPECIAL NOTE

This step must be performed in the first step

Remove it and throw it away




Please be sure to remove this accessory before installing the fan light! This accessory is only designed separately to prevent the motor from being bumped during transportation and is not a spare part for this fan light.

INITIAL INSTALLATION


STEP 1

Attach the fan blade to the motor (using iron piece "AA" and screw "BB")

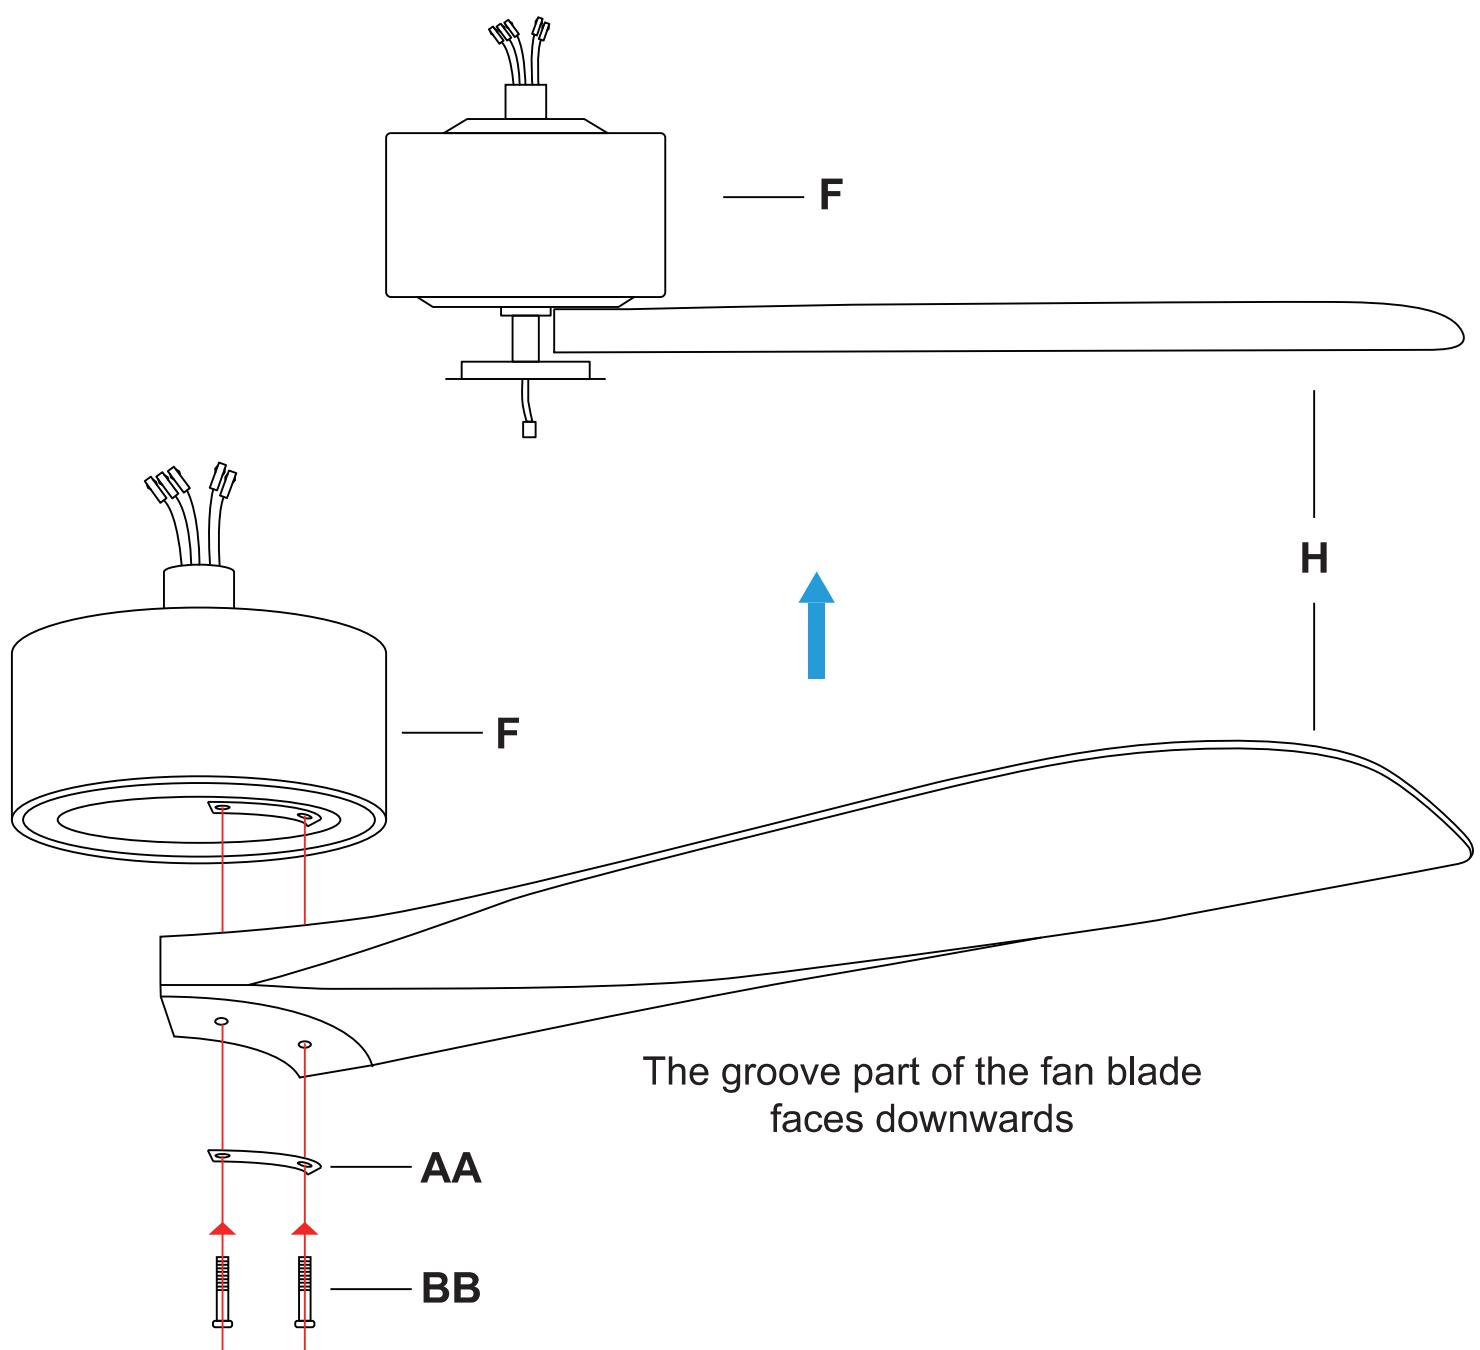

STEP 2


Remove the 3 screws on the bottom of the motor (F) with a screwdriver.

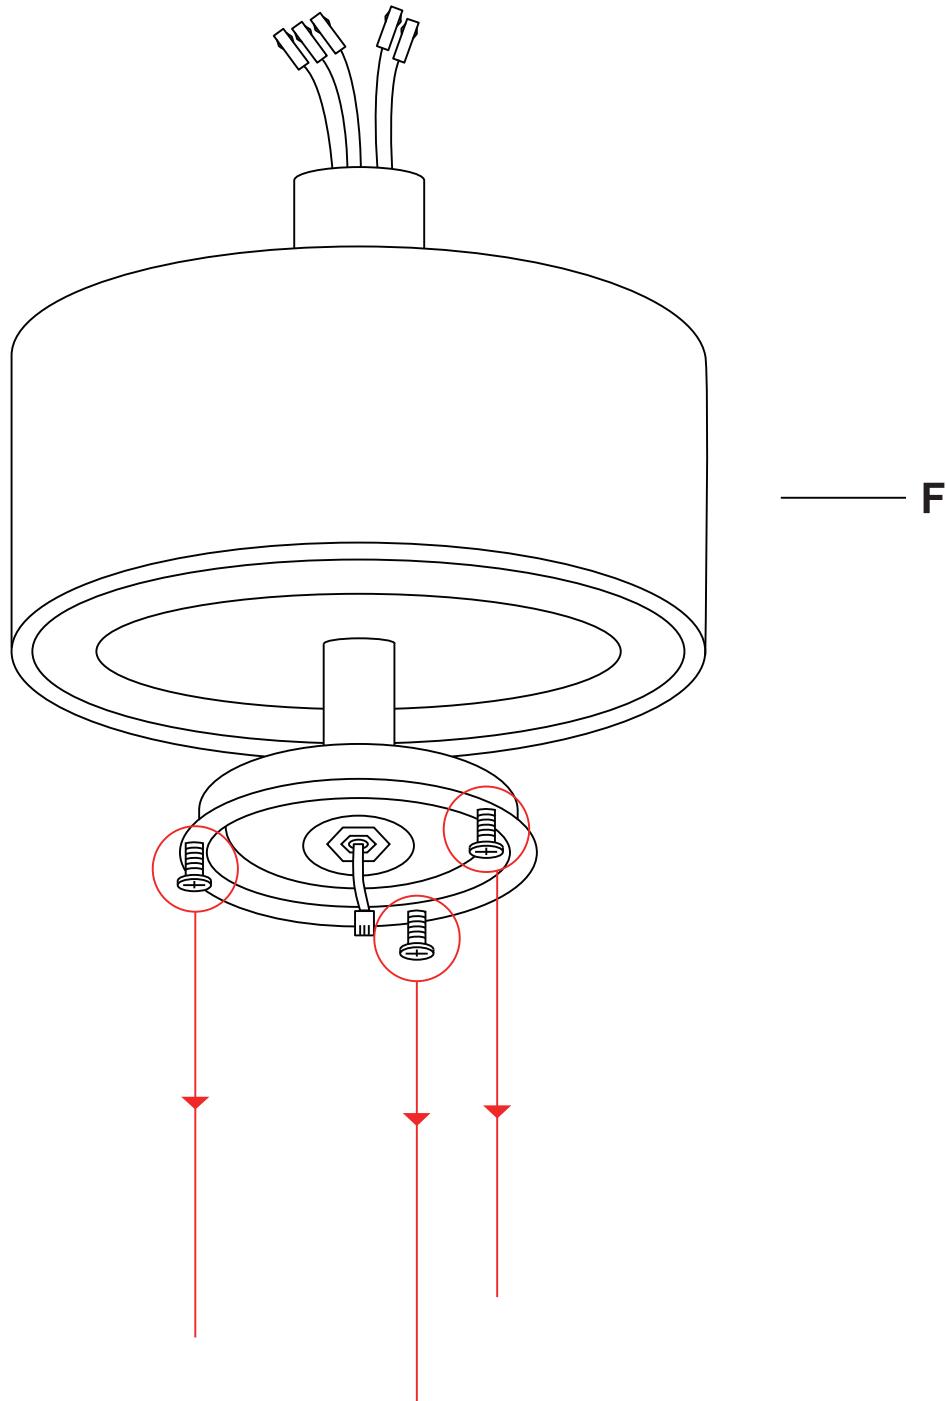

These 3 screws are used to secure the light board in step 3

STEP 3


Fixing the light panel and connecting the LED light source.

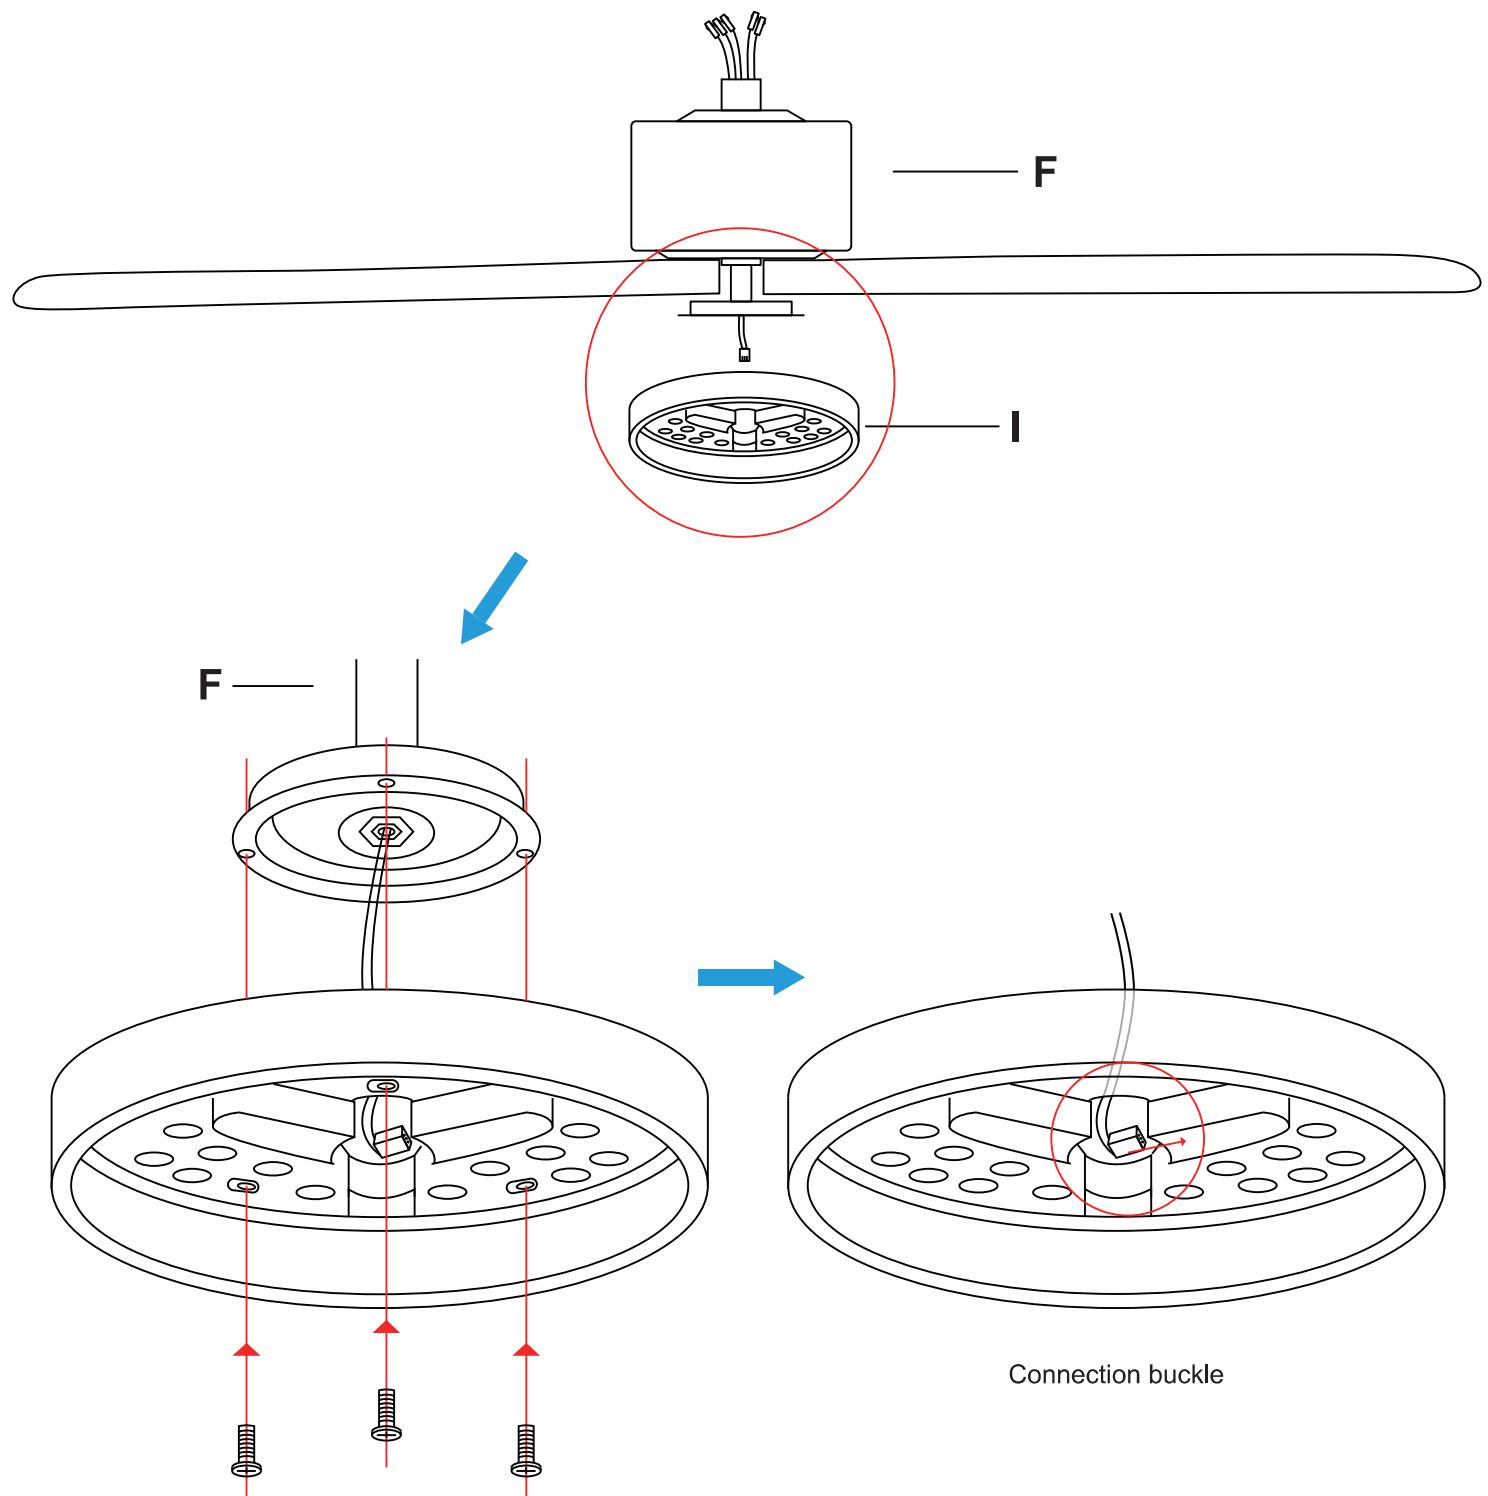

To reduce the risk of electric shock, make sure that the power to the circuit breaker or fuse box has been turned off before connecting the wires.


STEP 4

Install Attachment "J" below Attachment "I".

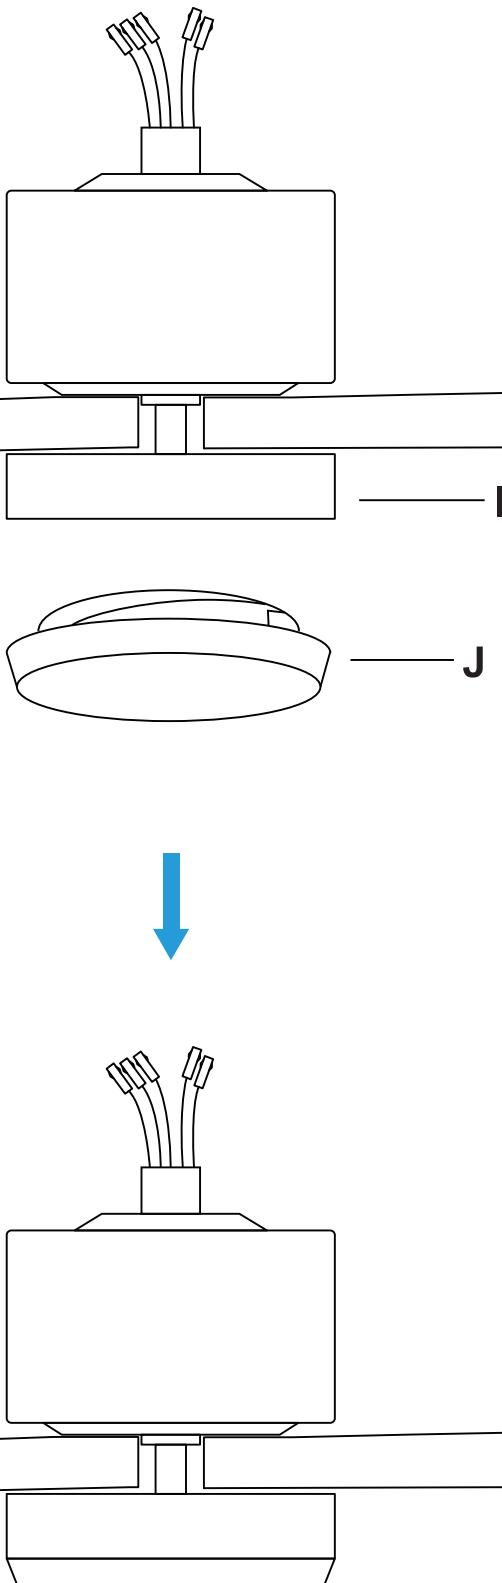


STEP 5


1. Take out the accessory "B", pull out the R-shaped pin below it.

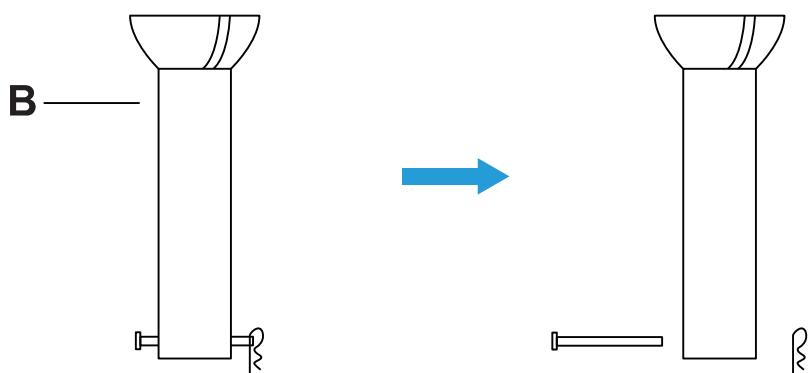

2. Insert the accessory "C", "D", and "E" into the accessory "B" in sequence.

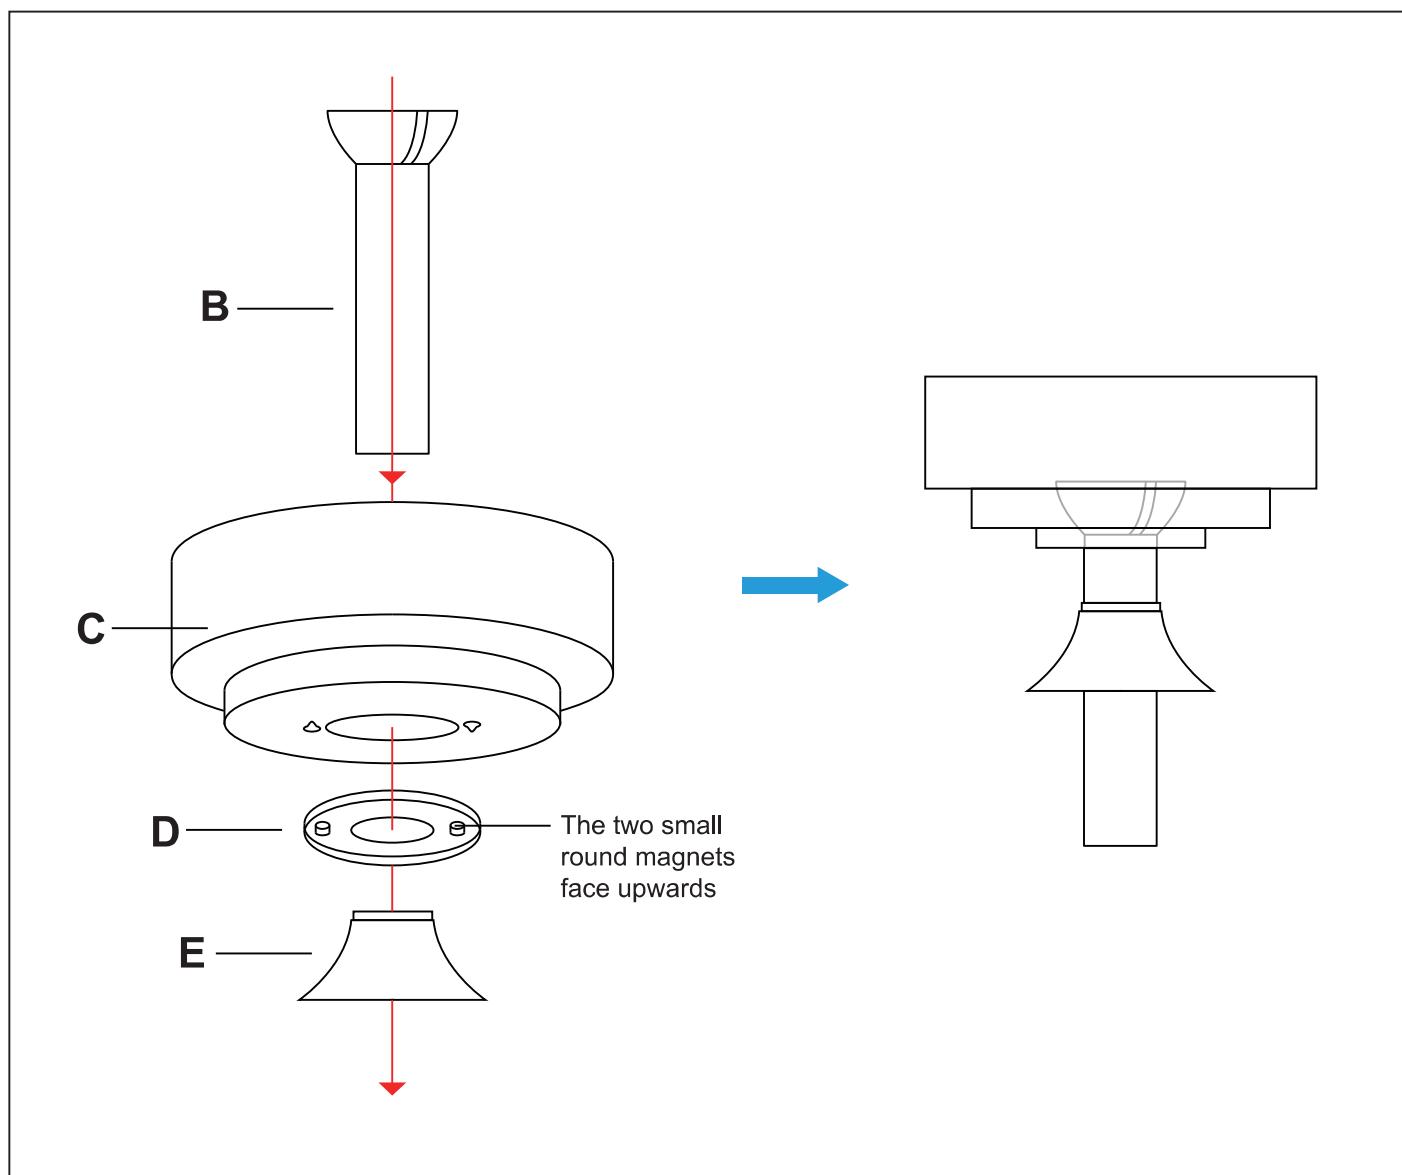


STEP 6



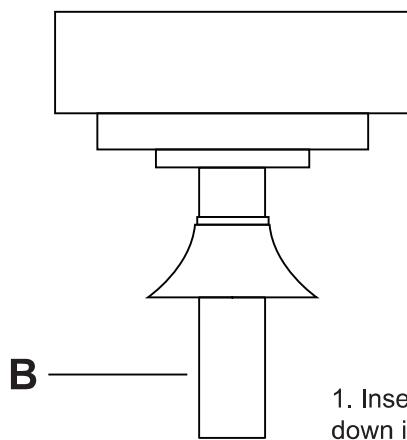


B

1. Insert the assembled "B" down into the hole of the "F". and pass all the wires of "F" through the middle hole of the accessory "B".

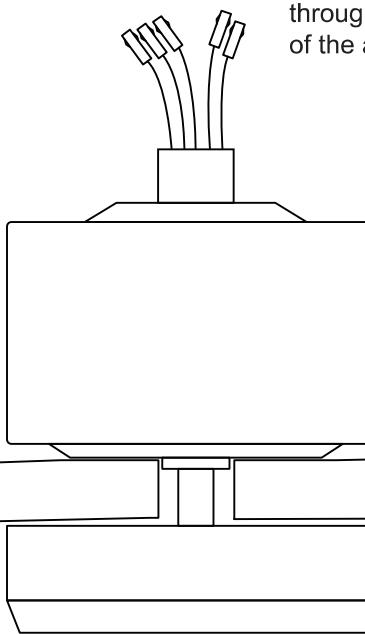

F

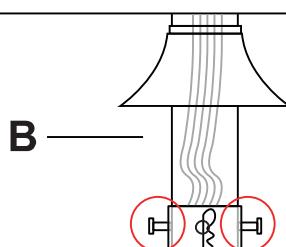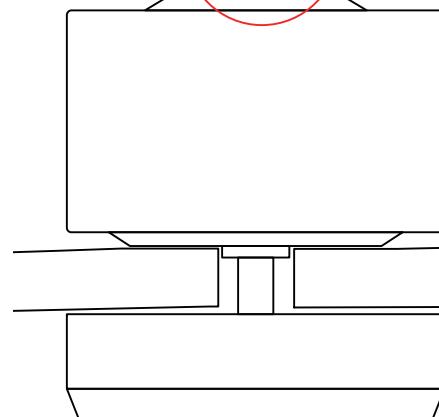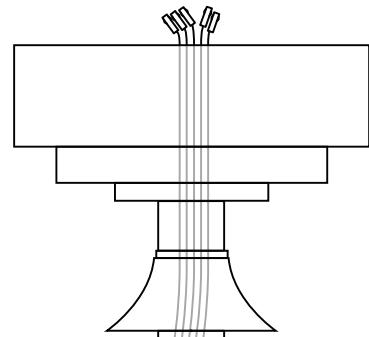


F

3. Tighten the 2 screws near the R pin to make the 2 pipes of "B" and "F" more stable.

STEP 7


Match the harness connector of motor "F" to the harness connector of controller "G" (wires are butted together in the same color)

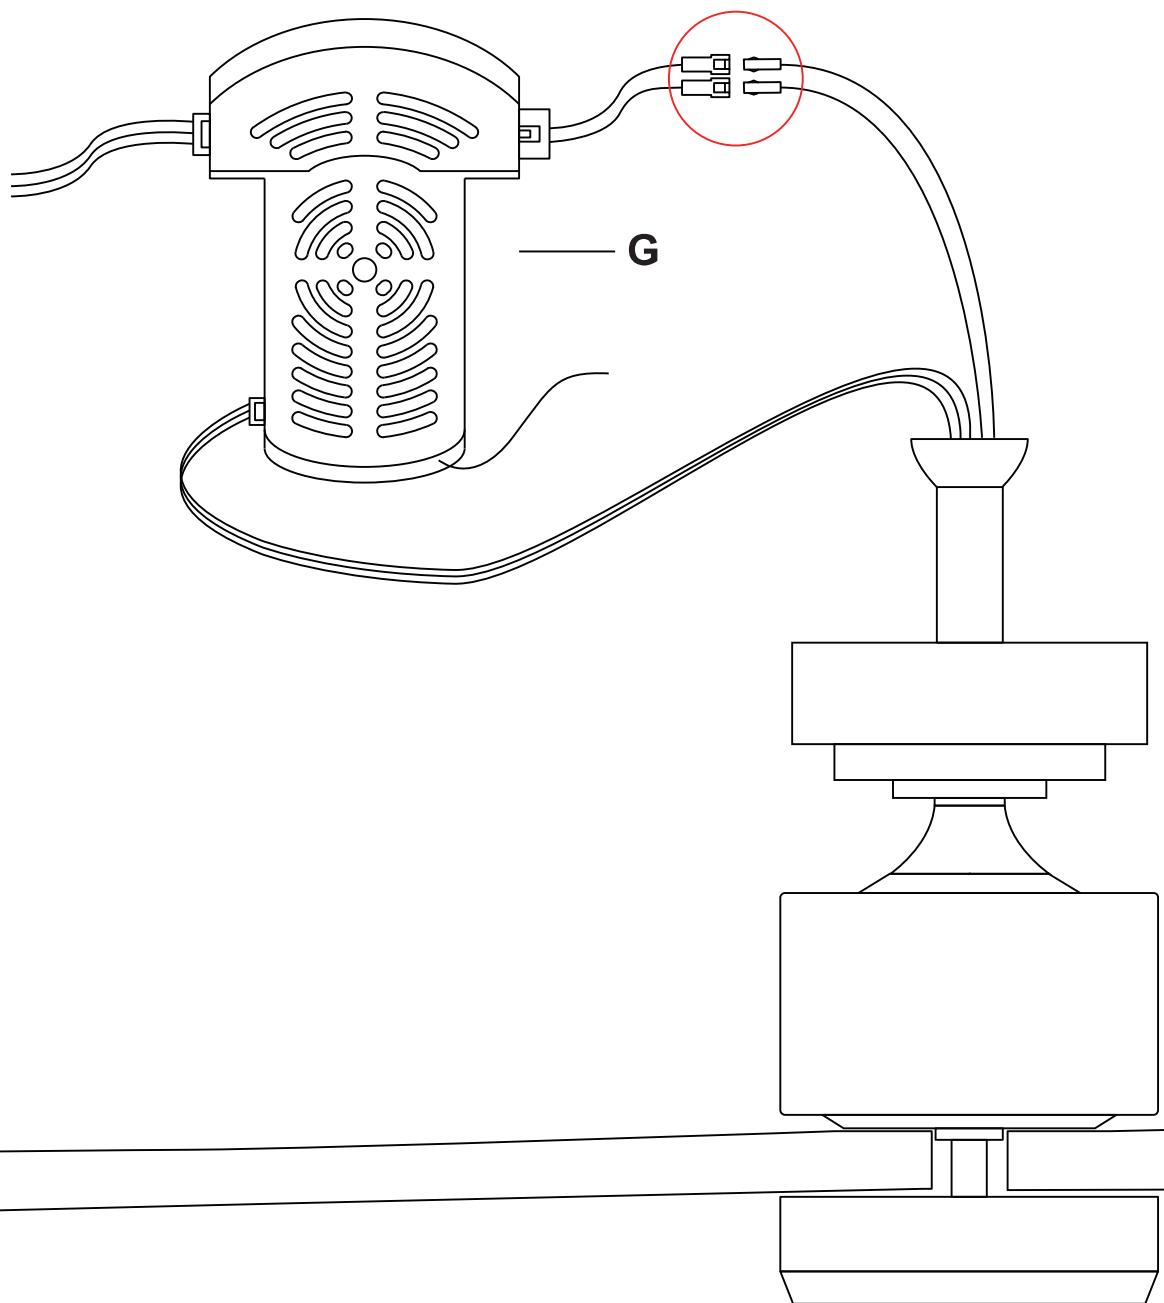


STEP 8

Secure Hanger "A" to the ceiling using screws "CC".

Scenario 1

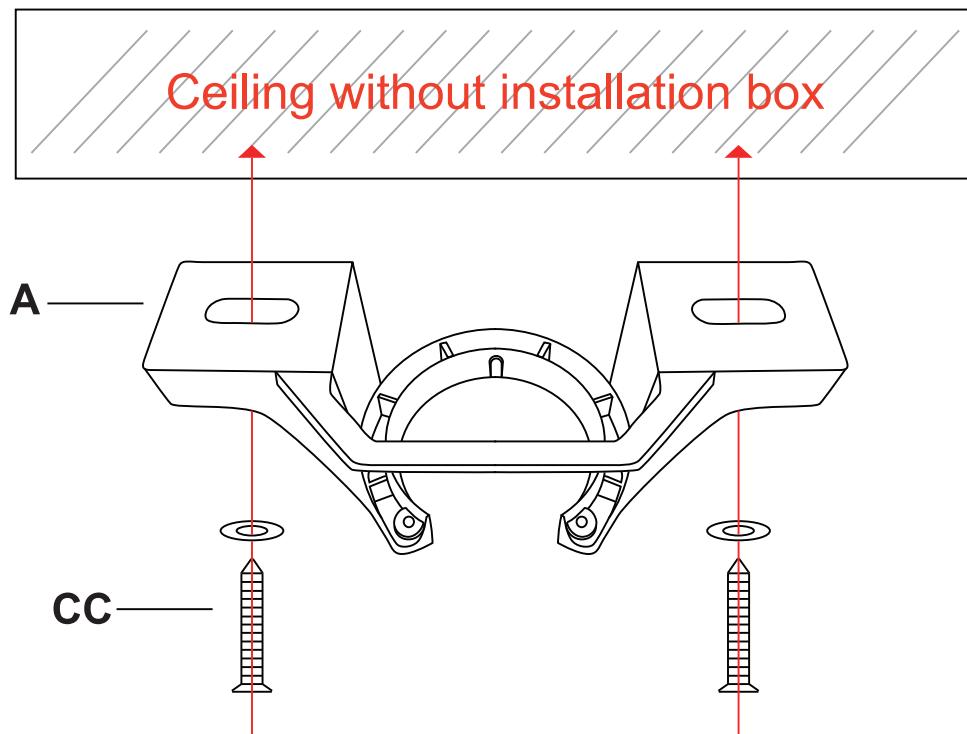


Scenario 2

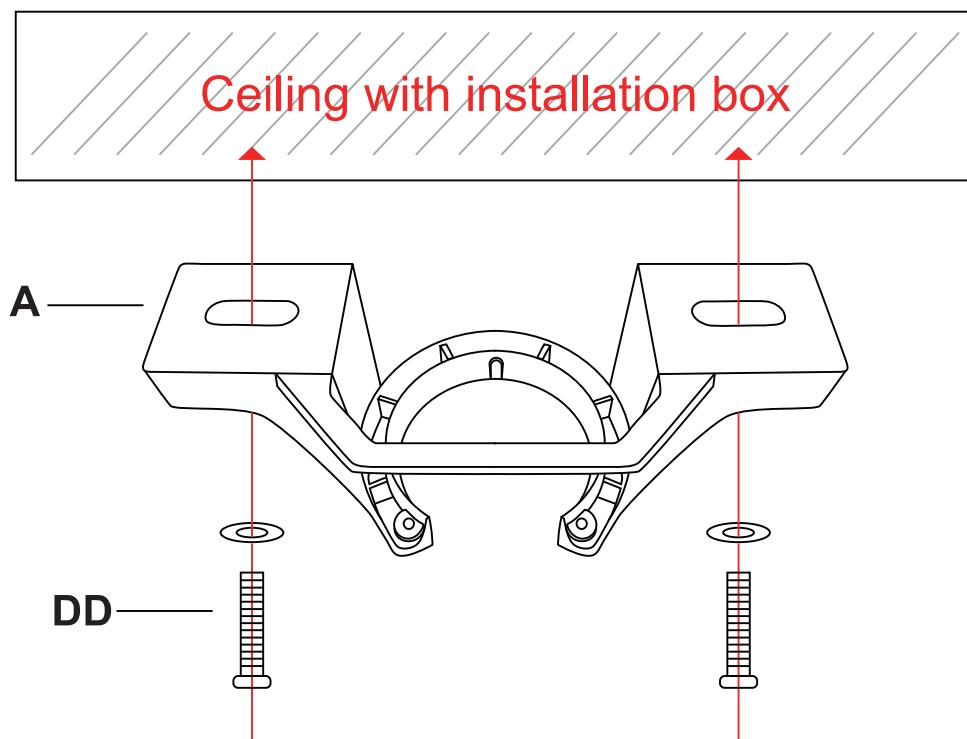


STEP 9

Secure the installed ceiling fan to the ceiling hanger (attach the drop bar "B" to hanger "A").

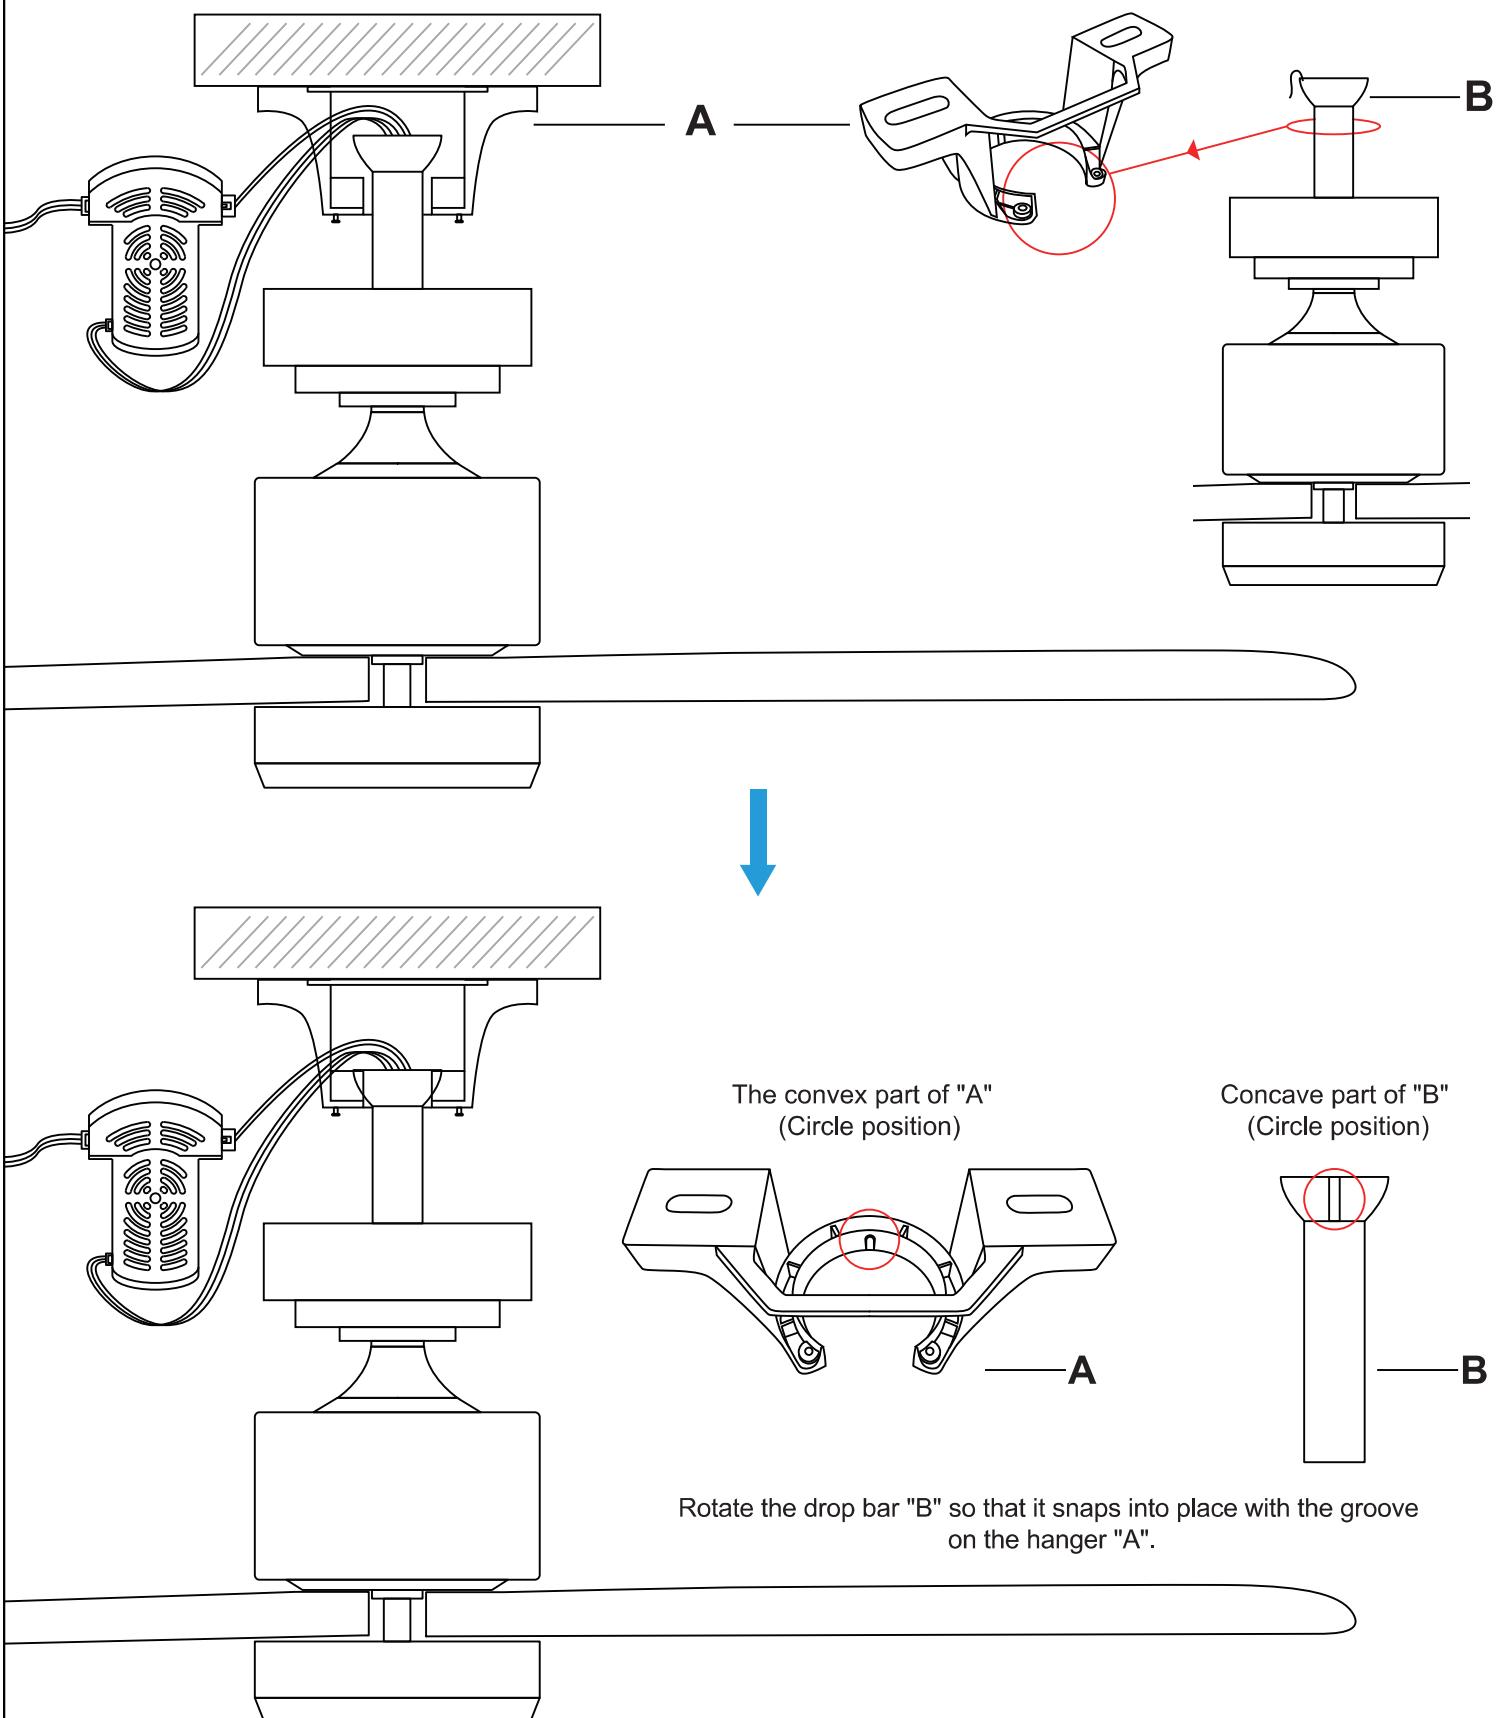


STEP 10

Ceiling

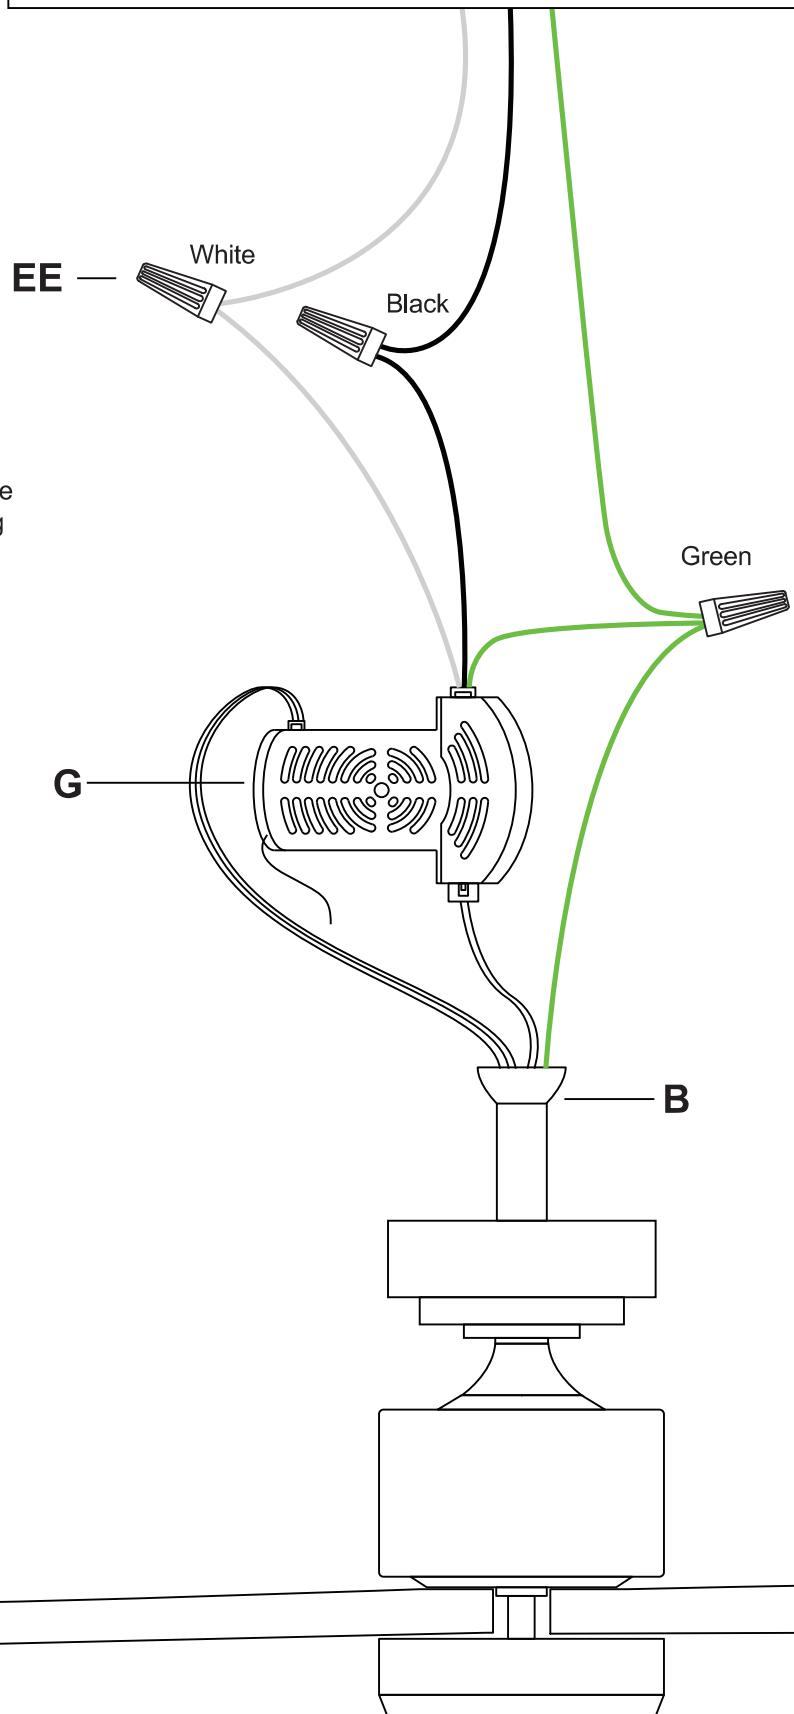


STEP 11

Place the controller "G" on the hanger "A".

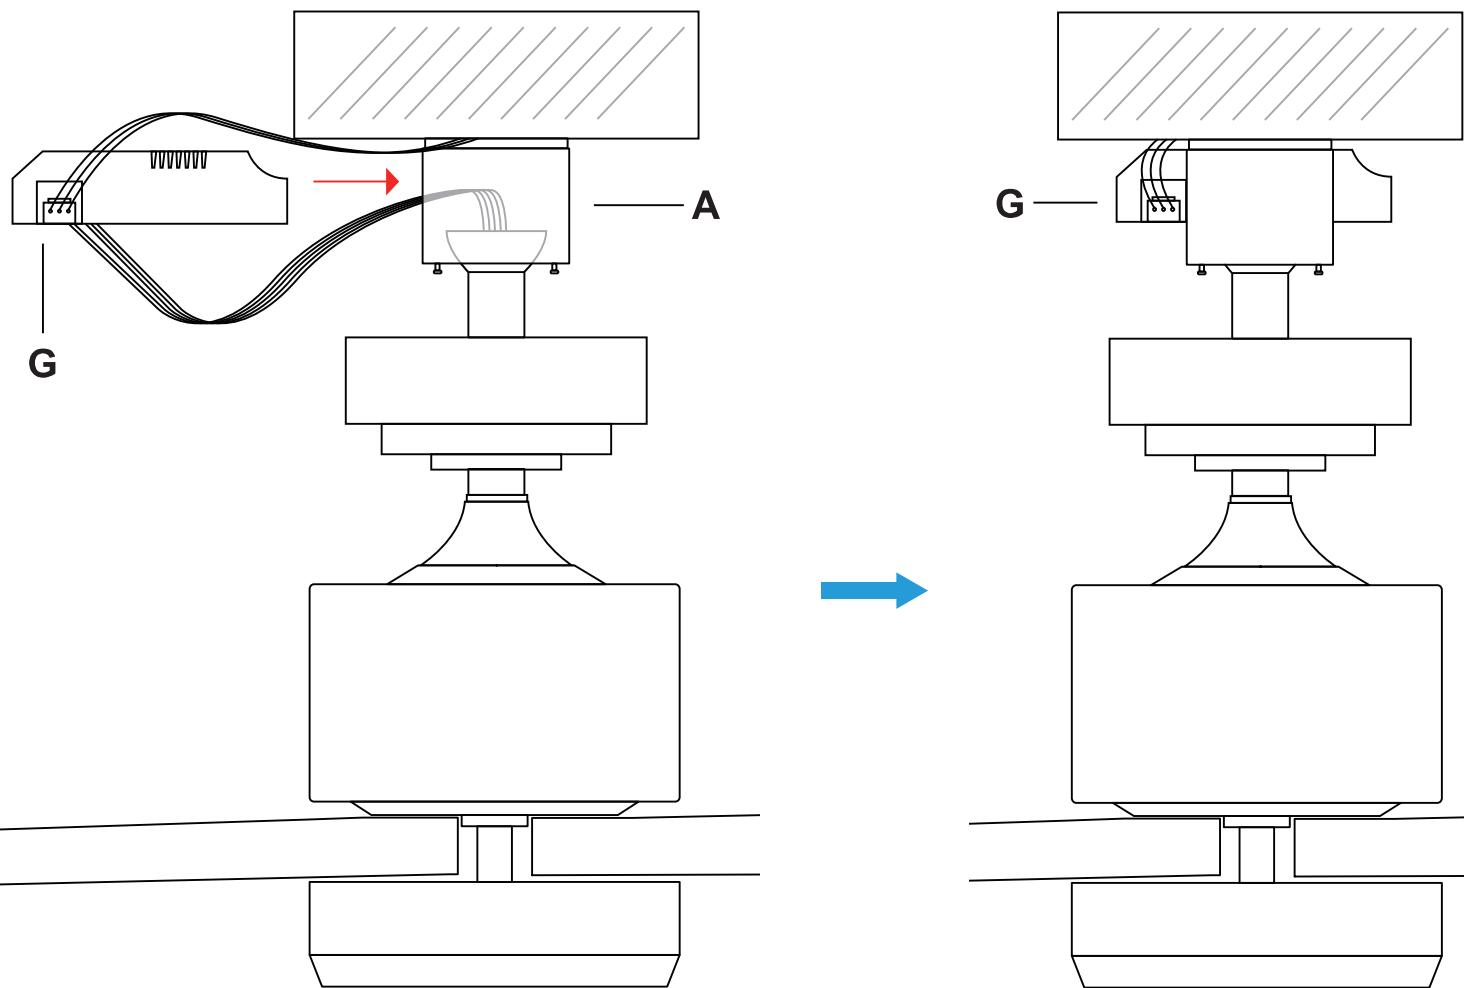


STEP 12

1. Separate attachment "D" from attachment "C" and place attachment "D" underneath. Move the attachment "C" up to completely cover the attachment "A".
2. Rotate attachment "C" until the large holes under attachment "C" line up with the two screws protruding (marked with red circles in the image below)under attachment "A".

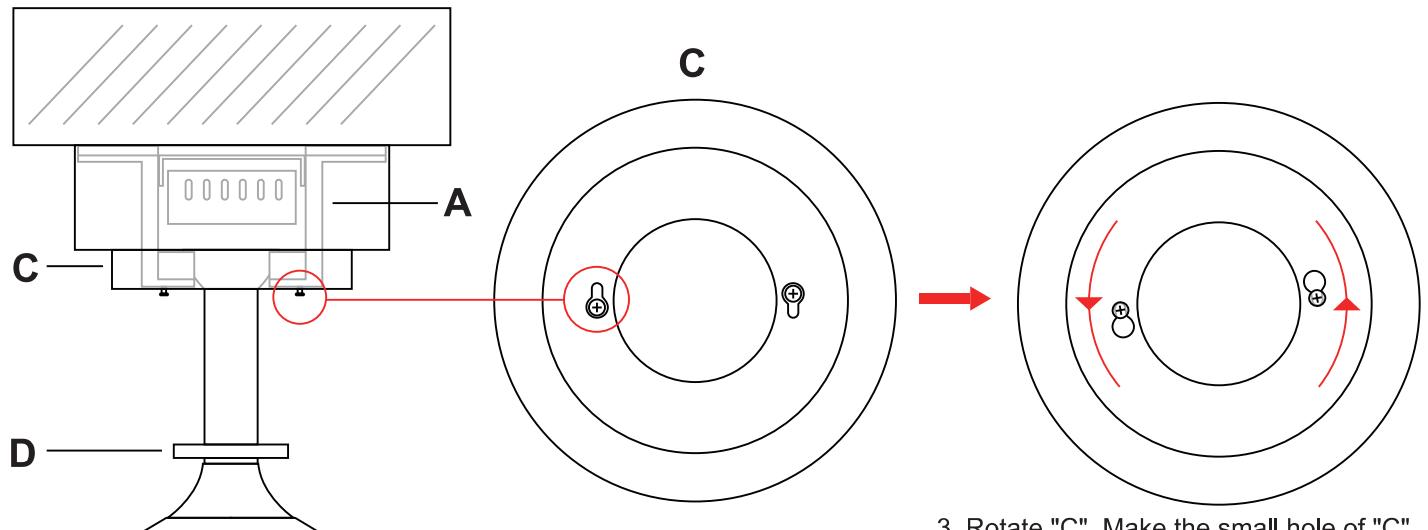

3. Rotate "C". Make the small hole of "C" close to the screws protruding from under "A". And tighten the screws

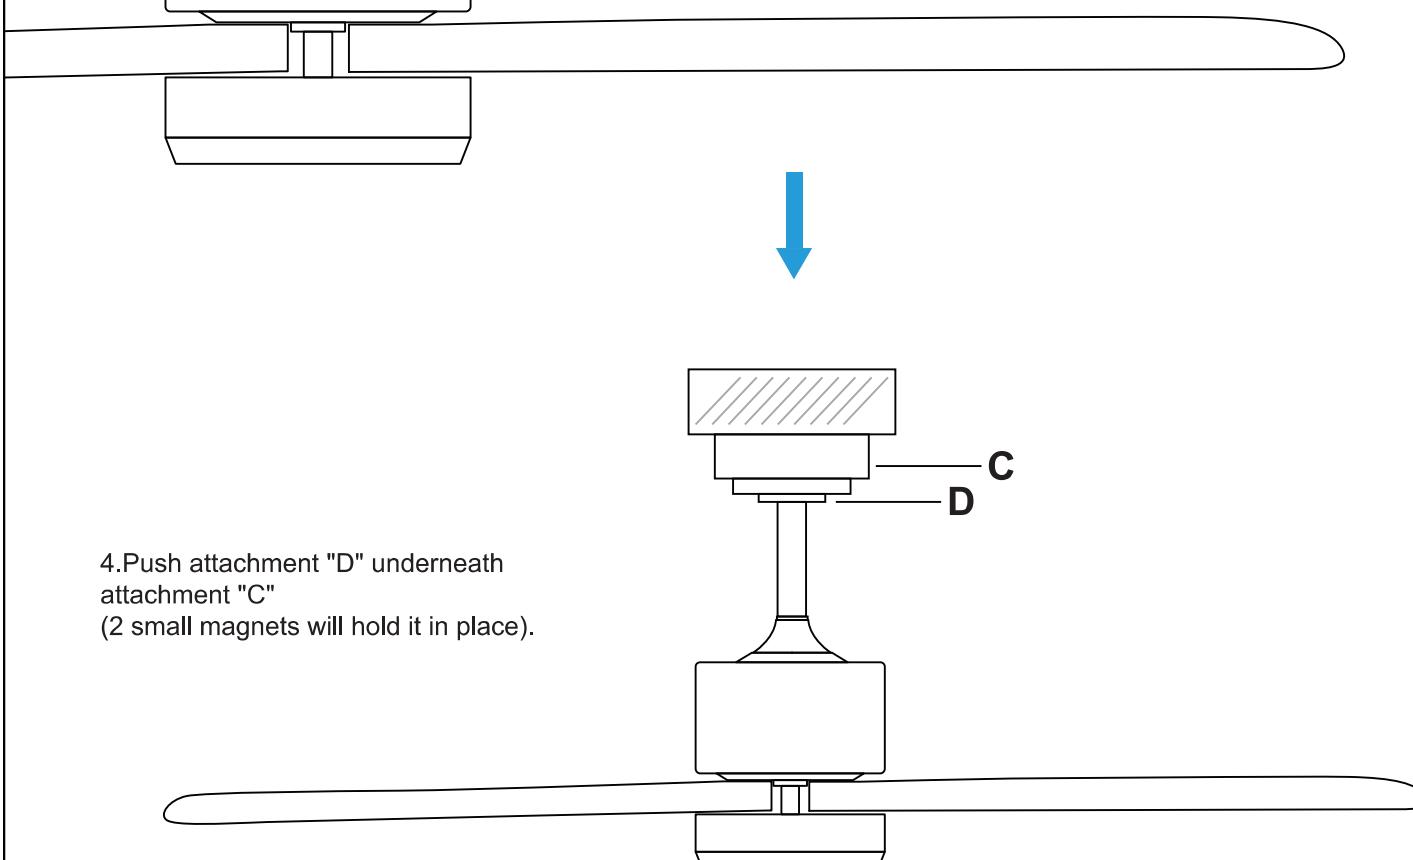

4. Push attachment "D" underneath attachment "C" (2 small magnets will hold it in place).

FINISH

BALANCE CORRECTION

If the fan suspension shakes, please confirm that all screws are fastened and whether the fan blade screws are locked.

If one of the above parts is not locked, lock and retest. If it still shakes, please adjust as follows:


1. Take out the balance clip from the balance bag, select a fan blade, and clip it on the edge of the tail of the fan blade.
2. Turn on the switch and see if the wobble of the ceiling fan diminishes. If not, try again on the other blades until you find the problematic fan blade.
3. Place the balance clip on the problematic blade and move it inward or outward at the edge of the blade. Turn on the ceiling fan and adjust repeatedly to find the best position for the balance clip.
4. Tear off the double-sided tape of the balance block and stick it on the center line above the fan blade near the balance clip.

OPERATION FOR REMOTE


Button function instruction:

1. Close with one click
2. Start / shut down LED power
3. Increase wind speed
4. Increase brightness
5. Reduce wind speed
6. Reduce brightness
7. Sleep timing control, 1 -2 -4 hours control
8. Walk Away Light Delay 90s
9. Wind direction adjustment
-clockwise/counterclockwise control
10. Simulate natural wind

Battery transmitter: UM-44 AAAR03 DC 1.5Vx2

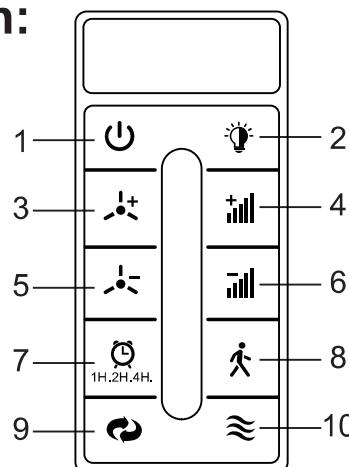

Installation of transmitter wall
Mount holder with two screws

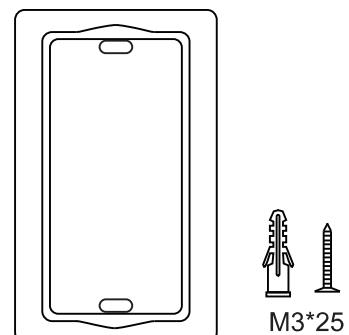

MEMORY LIGHT USE INSTRUCTIONS

Switch to your favorite color temperature turn off the light and wait 10 seconds, turn on the light again, at this time the light will automatically save the color temperature

Pairing method: Within 3 seconds after powering on the fan, press the light on/off button in the upper right corner of the remote control for five seconds, and the pairing will be successful.

Note:

Connect the relevant components strictly according to the instructions on the label. Otherwise, it will directly affect the life of the switch and cause the switch to fail.

1. The fan switch must be turned on, our product can control the fan.
2. When the transmitter cannot control the receiver:
 - A) Check whether the battery is installed correctly, the positive and negative poles are placed correctly, and the power is sufficient.
 - B) Check if there is a similar remote control product in use nearby and if the start button is pressed. Remote control products that transmit the same radio waves will interfere with each other, and the reception effect will be affected when the fan remote control is installed. Disable the other remote and continue setting up the fan remote. After the fan is successfully set, it will respond to another remote control.
3. Use only products with the correct voltage. Check the label parameters for voltage ranges and related technologies.
4. Please remove the battery when not in use for a long time.
5. Requirements for each load: bulb <300W; fan <120W.


TROUBLESHOOTING

Problem	Solution
Fan will not start	<ol style="list-style-type: none">1. Check circuit fuses or breakers of the home2. Check all electrical connections to insure proper contact <p>CAUTION: Make sure main power is off.</p>
Fan sounds noisy	<p>Fan sounds noisy.</p> <ol style="list-style-type: none">1. Make sure all motor housing screws are snug.2. Make sure the screws that attach the fan blade brackets to the motor are tight.3. Make sure wire nut connections are not rubbing against each other or the interior wall of the switch housing.4. Allow a 24-hour "breaking-in" period. Most noise associated with a new fan disappear during this time.5. If using an optional light kit, make sure the screws securing the glassware are tight. Check that the light bulb is also secure.6. Some fan motors are sensitive to signals from solid-state variable speed controls. If you have installed this type of control, choose and install another type of control.7. Make sure the upper canopy is a short distance from the ceiling, It should not touch the ceiling. <p>CAUTION: Make sure main power is off</p>
Fan wobble	<ol style="list-style-type: none">1. Check that all blade and blade arm screws are secure.2. Most fan wobbling problems are caused when blade levels are unequal. Check for balance by selecting a point on the ceiling above the tip of one of the blades. Measure this distance. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. The distance deviation should be equal within 1/8".3. Use the enclosed Blade Balancing Kit if the blade wobble is still noticeable4. If the blade wobble is still noticeable, interchanging two adjacent (side by side)blades to redistribute the weight and possibly result in smoother operation.


CONTACT US

- The most effective way to solve problems is through communication. Therefore, we are committed to solving any problem that may be bothering you within 24 hours through our professional online customer service.
- Via Amazon:


① Log into your Amazon.com account, click "Returns&Orders" on the top-right corner

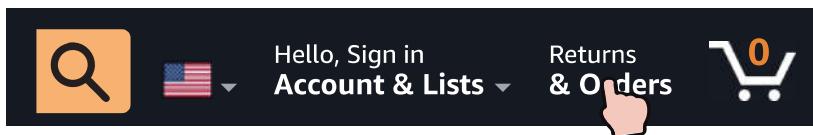


② Find your order in list and click "View order details"

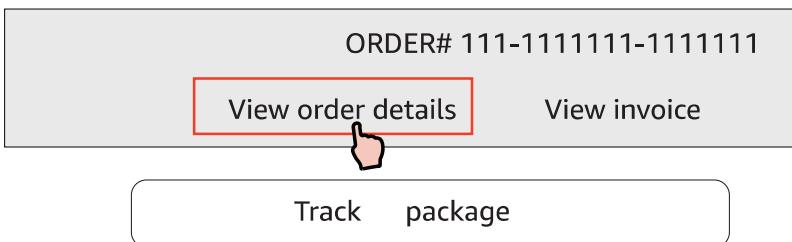

③ Click the "store name" following the Sold by, below the product title

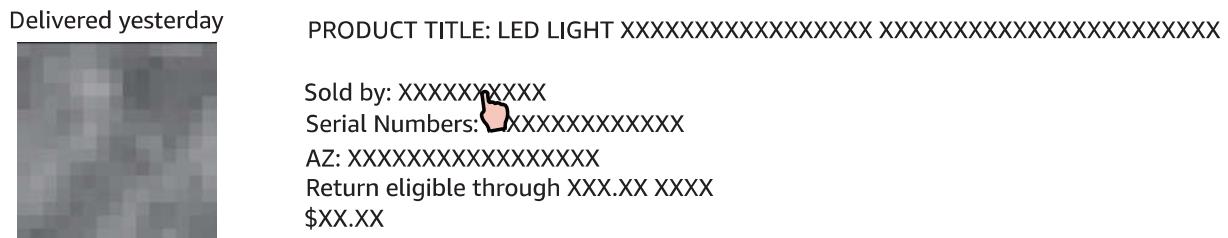

④ Click the yellow button "Ask a question", on the top-right corner, to contact the seller

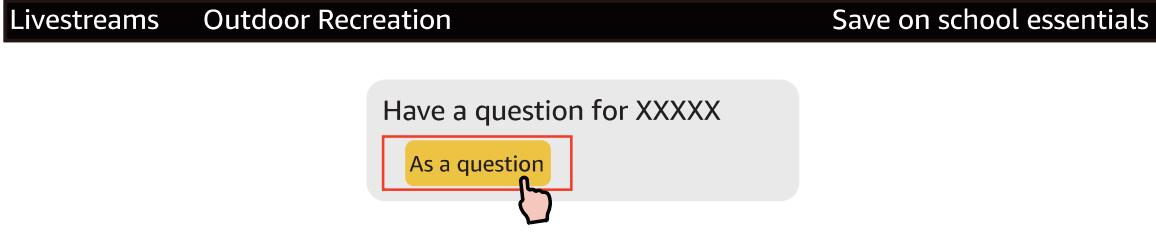

- Contact via Email: ChXiwsifo3515@163.com

CUSTOMER SERVICE

· 30-Days Full Refund Guarantee	· Friendly Reminder
If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.	It's better to contact us than leave a negative shopping experience. Nothing is more important than your satisfaction and we will do our best to serve you.
· Quick Response within 24 Hours	· 3 - year Warranty
You can contact us at any time, we will reply you within 24 hours. (You can provide us with videos or pictures so that we can find the cause of the failure.) In case of emergency. See Troubleshooting in the manual.	If a part is damaged or the remote control is lost within 3 years from the date of purchase, we will send a new part free of charge.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.