


Connecting the Cable to the LED Driver

Step 1: Connect the pair of wires to the LED Driver.

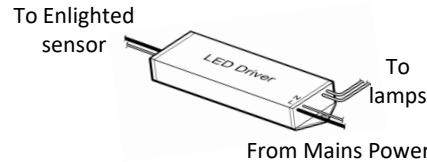

Step 2: Turn the power on by switching on the circuit breaker and wait for the green LED to appear.

LED Description

Note: The purpose of wiring test is to serve as a sanity check regarding connectivity to the sensor. However, the overall responsibility of the quality of the device must meet the QC criteria for the light fixture manufacturer.

LED Status	Description/Solution
LED not on	The sensor is not powered on. Check power and wiring
Blinking Green	The commissioned sensor has powered up and has detected motion. If there is no motion in the sensor's field of view, the blinking will stop. Wave your hands below the sensor to restart LED blinking.
Solid Green	The uncommissioned sensor has powered up successfully and completed the wiring test with no unexpected conditions – waiting for discovery.
Blinking Red	The uncommissioned sensor has powered up and completed the wiring test with one or more conditions unexpected of a typical LED fixture – waiting for discovery.
Solid Red	Faulty sensor – replace the sensor.
Solid Blue	Sensor received a request to identify itself.
Blinking Blue	The uncommissioned sensor powered up successfully, but the sensor is unable to detect an energy measurement device (CU or Driver), waiting for discovery.
Blinking Magenta	When the sensor is connected to a DALI emergency driver that is currently in the process of an emergency test or an emergency test pending.
Interrupted Green	Un-commissioned fixtureless sensors.



Copyright © Enlighted Inc. All rights reserved.
All other brand or product names are trademarks of their respective companies or organizations.



Micro Sensor, 2-wire (SU-6E-2W) Install Guide



Micro Sensor, 2-wire

Company Contact Information

Location: 3979 Freedom Circle, #210,
Santa Clara, CA 95054
Phone: +1.650.964.1094
Web: enlightedinc.com
DoCs: <https://www.enlightedinc.com/eu-docs/>
Support Portal: support.enlightedinc.com

Model No. SU-6E

Product Code: SU-6E-2W

Power: 180 mW

FCC ID: AQQ-SU6E

IC: 10138A-SU6E

HVIN: 01-03335-03



This device complies with Part 15 of the FCC Rules and Innovation, Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by Enlighted could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, ET (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Pour éviter la possibilité de dépasser les limites d'exposition aux radiofréquences FCC et IC, la proximité humaine avec le radiateur ne doit pas être inférieure à 20 cm pendant le fonctionnement normal.

Shipped Components

- Enlighted Micro Sensor, (SU-6E-2W)

Supplemental Components

- Tile Mount Carrier (TMC-SU-5E)*
- Hard Ceiling Mount Carrier (HCMC-SU-5E)*
- 18 AWG (0.75 mm²) solid copper wire

Tools you may Need

- 7/8" or 23 mm Drill bit (1/2" or 13 mm knock out trade size)
- Hand drill
- Wire stripper

* Sold separately. Contact Enlighted Customer Support.

Caution

A qualified electrician must perform installation and maintenance under local, state, and national electrical codes (NEC) and requirements. For installations outside of North America, qualified personnel must conform to appropriate standards when installing and maintaining products powered by FELV circuits, such as some DALI installations.

Warning

 FELV circuits are not safe to touch.



- Isolate the circuits connected to any FELV source from the AC mains supply of the control gear.
- Ensure to protect the FELV circuit from any accidental contact.





- When installing the Radio Module, de-energize the FELV source and any AC main sources near the FELV.
- Place the Radio Module in a luminaire or other suitable enclosure only (when powered by FELV).
- Circuits connected to any FELV control terminal must be insulated for the LV supply voltage of the control gear, and all terminals connected to the FELV circuit must be protected from accidental contact.
- To avoid the possibility of exceeding the FCC and ISED radio frequency exposure limits, human proximity to the radiator shall not be less than 20cm during normal operation.

Fixture Mount Sensor Installation

Step 1: De-energize the luminaire.

Note: For fixture mounting, use the fixture carrier and nut that is shipped with the sensor. The fixture mount can accommodate up to 0.25" (6.35 mm) thickness materials.

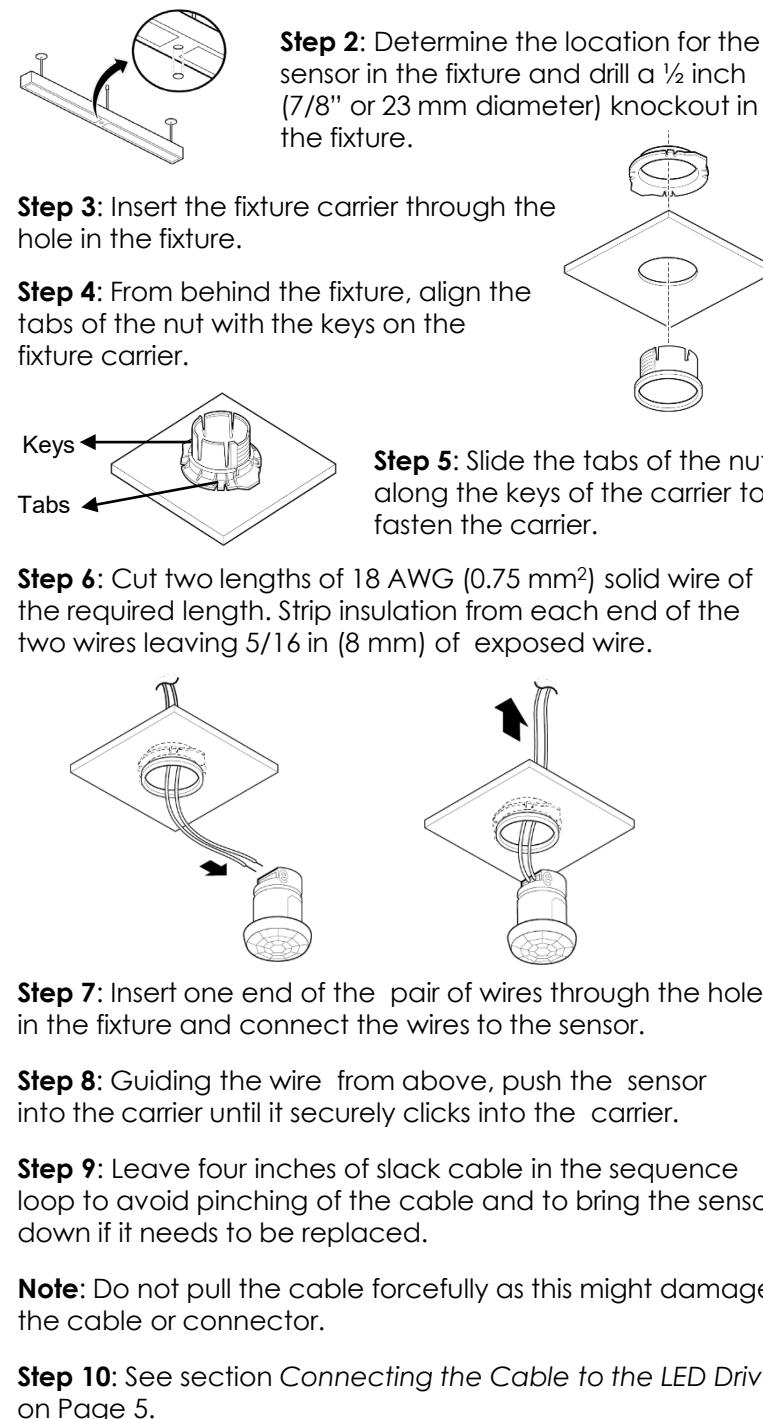

Tile Mount Sensor Installation

Note: For tile mounting*, the tile carrier and nut must be ordered separately. The tile mount can accommodate up to 1.5" (38 mm) thick tiles.

