

**Step 5:** Secure the sensor cable to the bracket or fixture using cable ties, electrical tape, clips, etc., as appropriate for the installation.

**Step 6:** Energize the luminaire and confirm that the green LED is on solid.

## LED Description

LED Status	Description/Solution
LED not on	The sensor is not powered on. Check power and wiring.
Blinking Green	The commissioned sensor has powered up and has detected motion. If there is no motion in the sensor's field of view, the blinking will stop. Wave your hands below the sensor to restart LED blinking.
Solid Green	The uncommissioned sensor has powered up successfully and completed the wiring test with no unexpected conditions – waiting for discovery.
Blinking Red	The uncommissioned sensor has powered up and completed the wiring test with one or more conditions unexpected of a typical LED fixture – waiting for discovery.
Solid Red	Faulty sensor – replace the sensor.
Solid Blue	Sensor received a request to identify itself.
Blinking Blue	The uncommissioned sensor powered up successfully, but the sensor is unable to detect an energy measurement device (CU or Driver), waiting for discovery.
Interrupted Green	Un-commissioned fixtureless sensors.



Copyright © 2024 Enlighted Inc. All rights reserved.  
All other brand or product names are trademarks of their  
respective companies or organizations.

### Company Contact Information

Location: 3979 Freedom Circle, #210,  
Santa Clara, CA 95054  
Phone: +1.650.964.1094  
Web: [enlightedinc.com](http://enlightedinc.com)  
DoCs: <https://www.enlightedinc.com/eu-docs/>  
Support Portal: [support.enlightedinc.com](http://support.enlightedinc.com)

### Model No:

SU-6S-8W-H: High Bay Sensor, 8-pin

### Product Code:

SU-6S-xxx: IoT Node (IoT), Connected Lighting (CL) **FCC**

ID: AQQ-SU6S

IC: 10138A-SU6S

Suitable for Use in Other Environmental Air Space (Plenums) in Accordance with Section 300.22, (C) of the National Electrical Code.

Purpose and Action of control: Type 1 Operating Control, accessory Photo Sensor.



This device complies with Part 15 of the FCC Rules and Innovation, Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation of the device.


Changes or modifications not expressly approved by Enlighted could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, ET (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Pour éviter la possibilité de dépasser les limites d'exposition aux radiofréquences FCC et IC, la proximité humaine avec le radiateur ne doit pas être inférieure à 20 cm pendant le fonctionnement normal.



## High Bay Sensor, 8-pin Install Guide

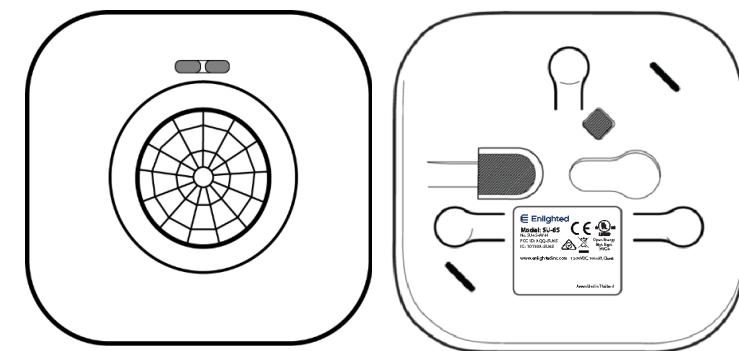

High Bay Sensor, 8-pin, (Front and Rear)

### Shipped Components

- High Bay Sensor, 8-pin, (SU-6S-8W-H)
- Anchor Screw

### Supplemental Components

- Enlighted Sensor Cable: CBL-RJ45-RJ45-7F
- Enlighted Control Unit (CU-4)
- Adjustable Mounting Bracket: BRKT-SU-2-00

## Caution

Installation and maintenance must be performed by a qualified electrician in accordance with local, state, and national electrical codes (NEC) and requirements.

## Installation

The High Bay sensor, 8-pin, can be mounted to ceiling tiles using an anchor screw or to pendant and industrial fixtures using the adjustable mounting bracket.


**Step 1:** De-energize the luminaire.

**Step 2:** Mount the Control Unit (CU) in a UL approved enclosure. Refer to the *Control Unit Installation Guide* for installation and wiring instructions. The sensor cable from the CU terminating in an RJ45 connector must be connected to the sensor.


## Mounting using an Anchor Screw

The sensor (SU-5S) should be mounted to the ceiling tile within a few inches (between 1 3/4" to 3") of the lighting fixture.


**Step 1:** Determine the location of the sensor. Push and rotate the anchor screw to the tile at that location.

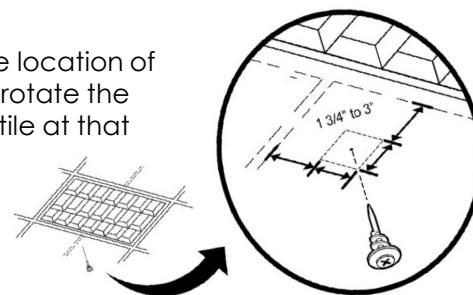


**Step 2:** Select a place near the anchor screw for the RJ45 connector of the sensor cable from the CU to exit. Make a small cut in the ceiling tile for the cable to exit.

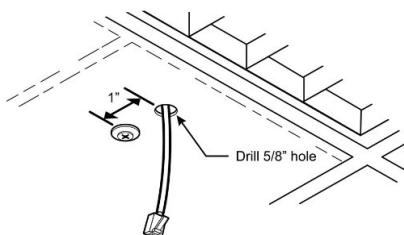

**Step 3:** Connect the sensor cable's RJ45 connector to the sensor bottom.

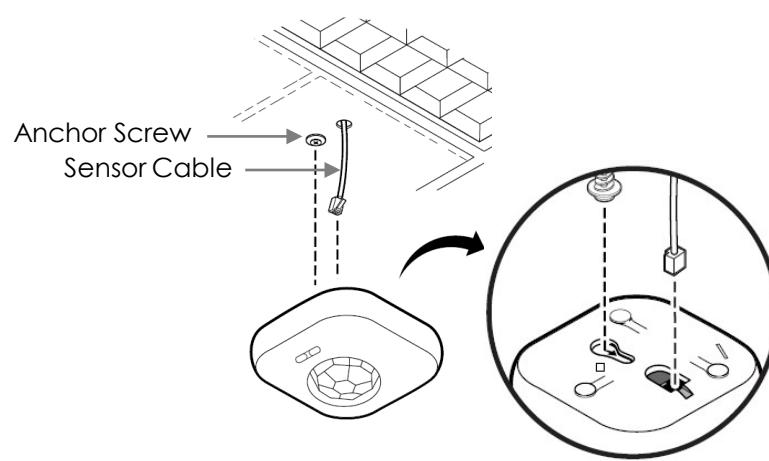

**Step 4:** Align the anchor screw with the slot provided on the sensor bottom. Slide the sensor onto the screw head.

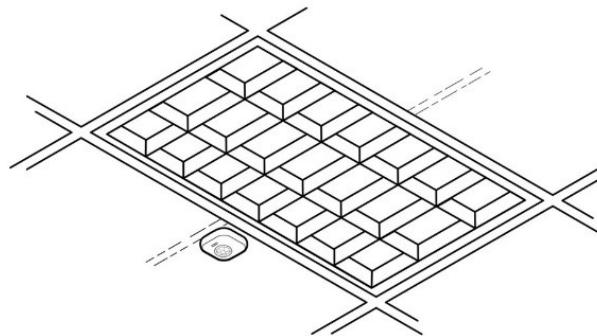


**Step 5:** Slip the excess sensor cable up into the plenum area and adjust the ceiling tile to the original position.

**Step 6:** Energize the luminaire and confirm that the green LED is on solid.

## Mounting using Adjustable Mounting Bracket

The sensor (SU-5S) can be mounted to pendant and industrial fixtures using the mounting bracket.

**Step 1:** Determine the mounting location of the sensor on the fixture. To ensure that the view of the sensor is not obstructed by the fixture, level the sensor to the bottom of the fixture and provide enough clearance from the fixture. See examples below.

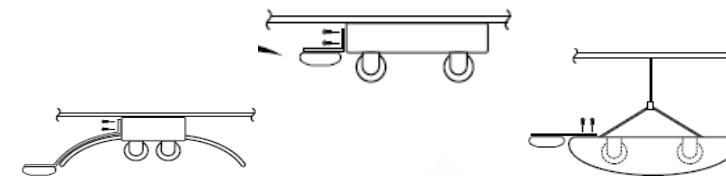


**Step 2:** Bend the adjustable mounting bracket to the required shape. Fasten the bracket to the fixture using two 8" screws.



Mounting  
Bracket  
Head

Sensor  
Cable

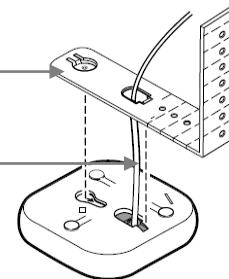

**Step 3:** Connect the sensor cable's RJ45 connector from the CU to the bottom of the sensor.

**Step 4:** Slide the sensor onto the head of the mounting bracket.

