

Chapter Four

Client Appliance

Network Access

The Network Access service permits a Bluetooth client to use a Local Area Network connection that is physically attached to another Bluetooth device (the server).

Possible Network Access servers include


- Bluetooth-enabled computers that have a hardwired Ethernet connection
- Stand-alone Bluetooth Network Access Points

The Bluetooth server must be specifically configured to provide the Network Access service.


After a Bluetooth device is configured as a Network Access server it cannot act as a Network Access client without being re-configured.

Network Access Setup for Windows 2000



- From the Windows Control Panel, select

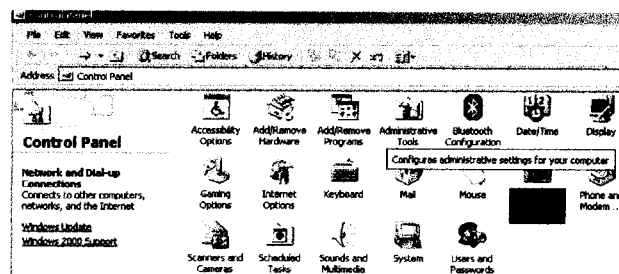

- Right-click the Local Area Connection icon and select Properties

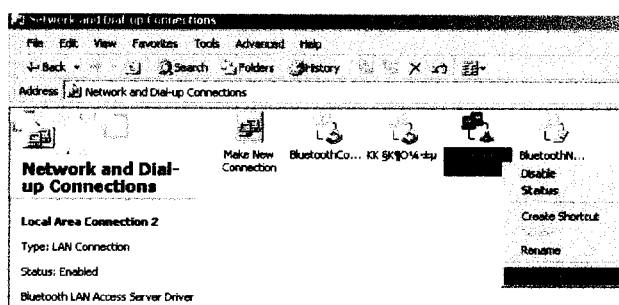

- In the Local Area Connection Properties dialog box, on the Sharing tab, select Enable Internet Connection Sharing for this connection and then click OK.

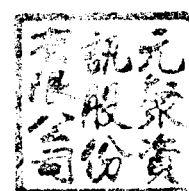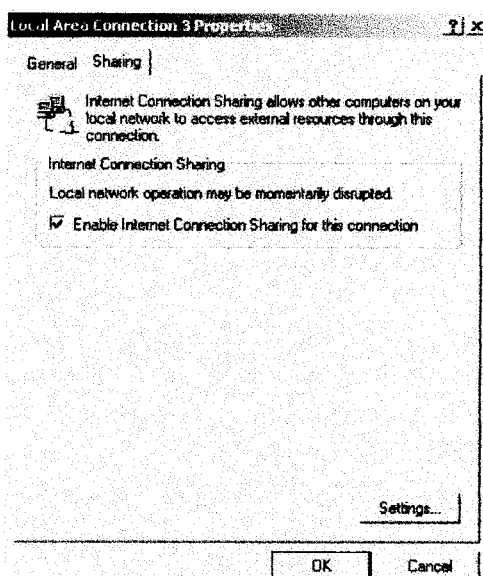

Bluetooth Dongle User's Guide

Click YES in the confirmation dialog box to enable Internet connection sharing

Network Access Setup for Windows 98SE & Windows

Me

Internet Protocol routing software is required on Windows 98SE and Windows Me servers; a downloadable trial version of Win Route Lite is available on the Tiny Software, Inc.

Configure the server:

- From the Windows Control Panel, double-click the Network icon.
- On the Configuration tab, select TCP/IP-> Bluetooth LAN Access Server Driver (scroll down if necessary).
- Click Properties and select the IP Address tab.
 - Select Specify an IP address
 - Enter an IP Address (suggested value 192.168.1.1).
 - Enter a Subnet Mask (suggested value 255.255.255.0).
- Click OK twice to close the dialog boxes.

- Click YES to restart the computer.

Configure the routing software:

- In the Windows system tray, right-click the Win Route icon and select Administration
- On the Settings tab, select and network adapter
- From the Network adapter drop-down list, choose any adapter other than the adapter, and then click the Settings button.
- On the DHCP tab, in the Adapter drop-down list, select the Bluetooth Windows 9x Adapter.
- Select Enable DHCP Server.
- Fill in the client IP address range fields:
 - From 10
 - To 40

Click the OK button and then minimize (do not close) the Win Route administration configuration panel.

Bluetooth Serial Port

The Bluetooth Serial Port service allows two Bluetooth devices to establish a wireless connection through virtual communications ports and then use that



BlueTooth Dongle User's Guide


connection as if it were a hardwired serial cable between the devices.

To establish a Bluetooth serial port connection


Connections are initiated from the client:

- On the client, in the Folders pane of My Bluetooth Places, select Entire Bluetooth Neighborhood.


- In the right pane of Entire Bluetooth Neighborhood, right-click anywhere *except on a device name* and select Refresh from the pop-up menu.

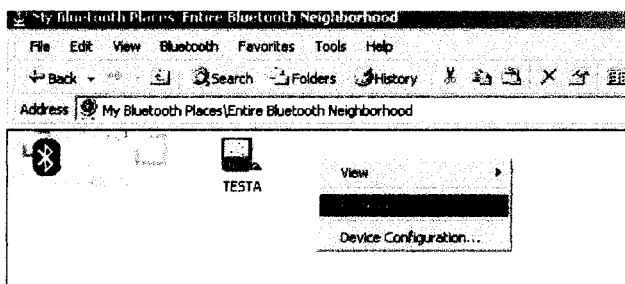

- In the Folders pane of My Bluetooth Places, right-click the server you want to establish a connection with and select Discover Available Services from the pop-up menu to update the available services list. The available services will be displayed in the right pane of My Bluetooth Places.

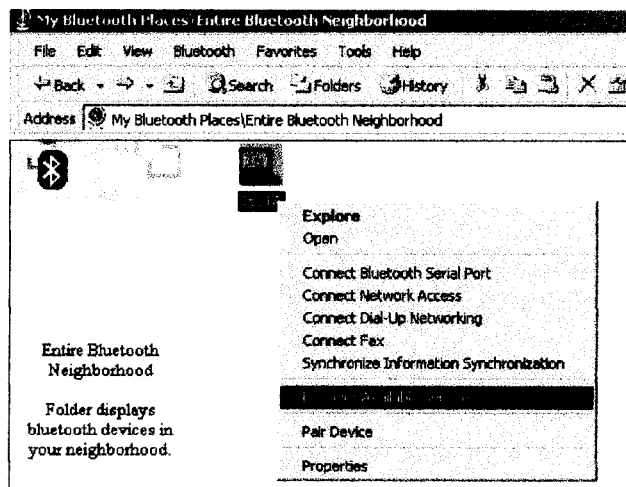

- In the right pane of My Bluetooth Places, double-click Bluetooth Serial Port. A dialog box appears that contains the communications port number assigned to this connection by the client. The application that will use this connection must be configured to send data to this port.

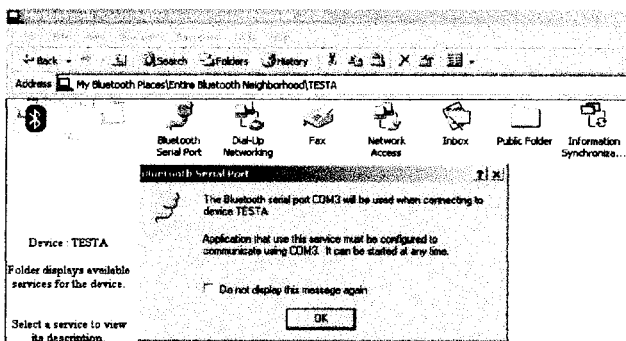

Depending on the security configuration, the dialog box that provides communications port information may not appear until after Authentication and Authorization have been accomplished.




BlueTooth Dongle User's Guide

Determine the communications port being used by the server


The application on the server must be configured to use the correct communications port.

To determine the communications port being used by the service:

- On the server, in the Folders pane of My Bluetooth Places, right-click My Device and select Properties from the pop-up menu

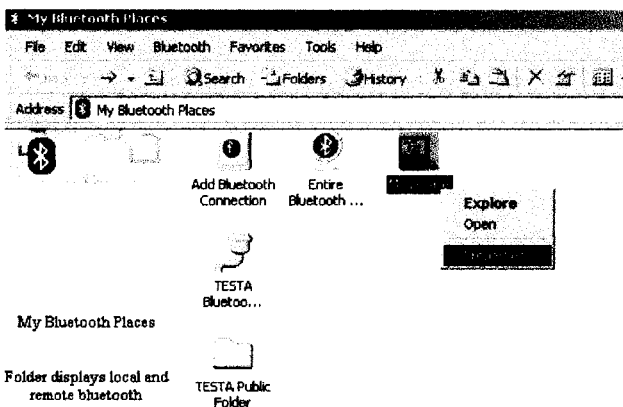


- In the Bluetooth Configuration Panel, select the Local Services tab.
- Double-click the Bluetooth Serial Port service to display its Service Properties dialog box. The Service Properties dialog box shows the communications port that the connection is using.

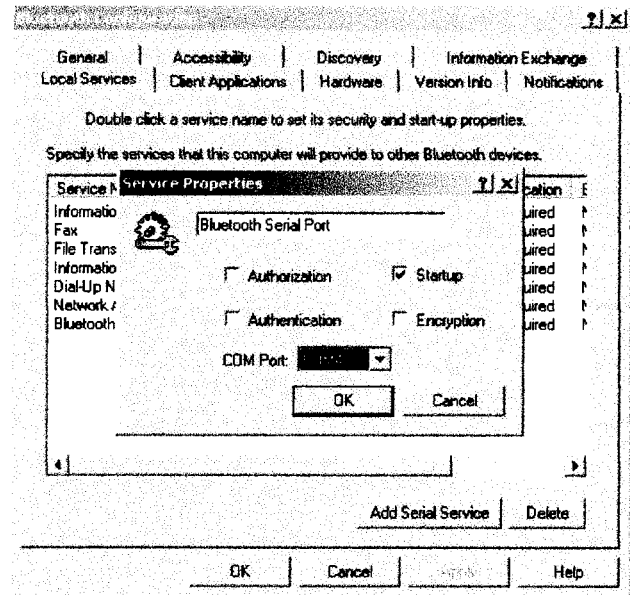

Close a Bluetooth serial port connection

Connections are normally closed from the client:


- On the client, in the Folders pane of My Bluetooth Places, select (highlight) the device that is providing the Bluetooth Serial Port service.
- In the right pane of My Bluetooth Places, right-click Bluetooth Serial Port and then select Disconnect Bluetooth Serial Port from the pop-up menu.

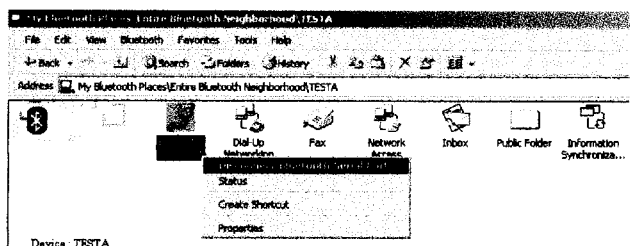

BlueTooth Dongle User's Guide

Though not recommended, connections can also be closed from the server:

- On the server, in the Folders pane of My Bluetooth Places, select (highlight) My Device.
- In the right pane of My Bluetooth Places, right-click Bluetooth Serial Port and then select Stop to close the service. The service must be re-started before it will be available to remote devices (right-click Bluetooth Serial Port and select Start from the pop-up menu).

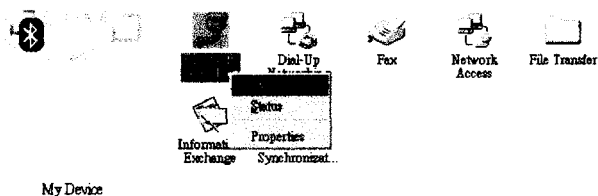

Dial-up Networking

The Dial-up Networking service permits a Bluetooth client to use a modem that is physically connected to a different Bluetooth device (the server).

After the Bluetooth wireless connection is established the client can use the server modem as if it were a local device on the client.


Establish a Dial-up Networking session

Connections are initiated from the client:


- On the client, in the Folders pane of My Bluetooth Places, select Entire Bluetooth

Neighborhood.

- In the right pane of Entire Bluetooth Neighborhood, right-click anywhere *except on a device name* and select Refresh from the pop-up menu.

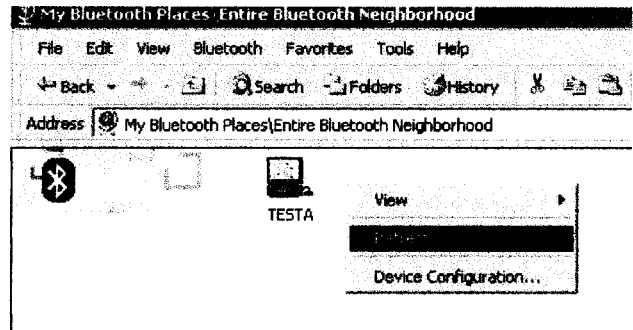

- In the Folders pane of My Bluetooth Places, right-click the server that will provide the Dial-up Networking Service and select Discover Available Services from the pop-up menu to update the available services list. The available services will be displayed in the right pane of My Bluetooth Places.

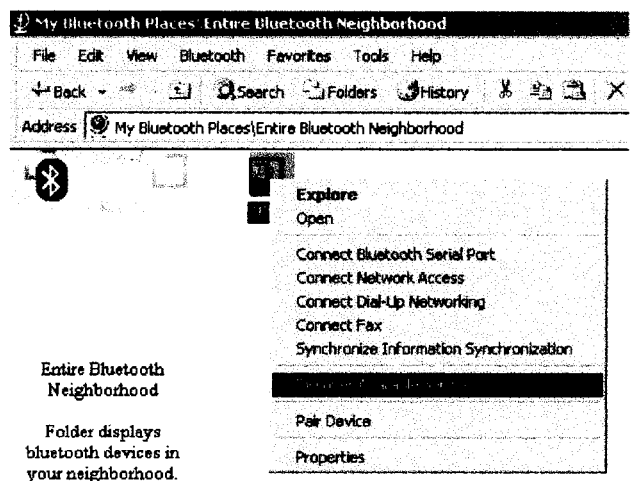


- In the right pane of My Bluetooth Places,




BlueTooth Dongle User's Guide

double-click Dial-up Networking.

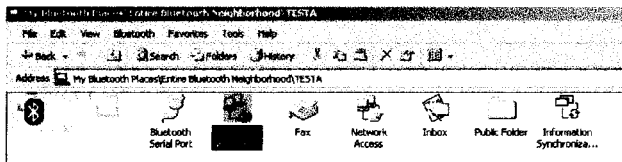

- In the Connect to dialog box, fill in your user name, password, and the phone number to be dialed, and then click the Dial button. Select the Save password check box and the dialog box will not appear for subsequent connections to the same phone number.

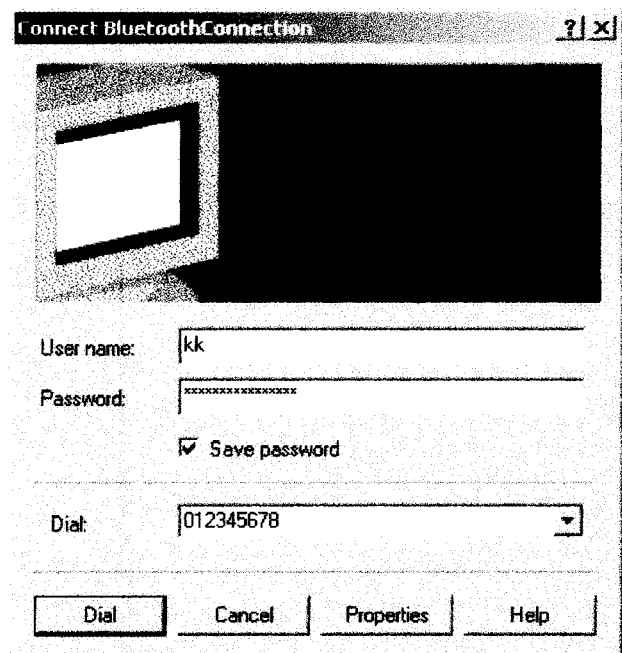


You can now open a web browser and connect to the Internet.

Close a Dial-up Networking connection

- On the client, in the Folders pane of My Bluetooth Places, select (highlight) the device that is providing the Dial-up

Networking service.

- In the right pane of My Bluetooth Places, right-click Dial-up networks and then selects Disconnect Dial-up Networking from the pop-up menu.

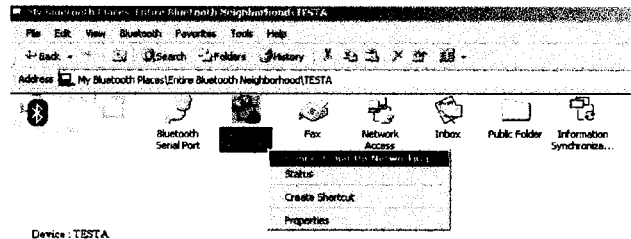


Fax

The Fax service allows a Bluetooth client to wirelessly send a fax using a device that is physically attached to a Bluetooth server.


Send a Fax

Connections are initiated from the client:


- On the client, in the Folders pane of My Bluetooth Places, select Entire Bluetooth Neighborhood.
- In the right pane of Entire Bluetooth Neighborhood, right-click anywhere *except on a device name* and select Refresh from the pop-up menu.

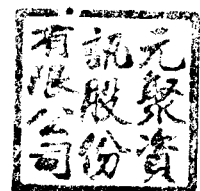


Bluetooth Dongle User's Guide

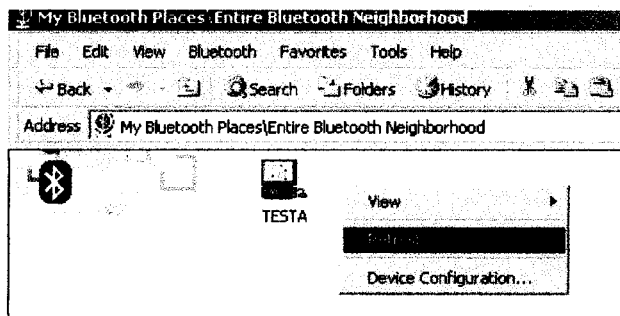

- In the Folders pane of My Bluetooth Places, right-click the server that will provide the Fax service and select Discover Available Services from the pop-up menu to update the available services list. The available services will be displayed in the right pane of My Bluetooth Places.

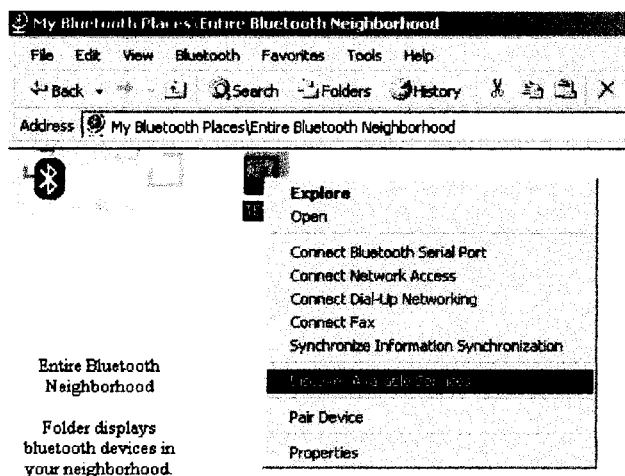

- In the right pane of My Bluetooth Places, double-click Fax.

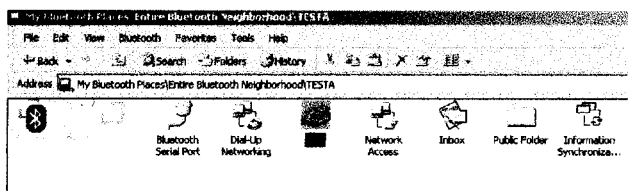

After the Fax connection is established,

open or create the document to be faxed and use the print or end to Fax Recipient option available in most applications.

The Fax connection closes automatically when the transmission is complete.


File Transfer

The File Transfer service allows one Bluetooth device to perform file operations on the default File Transfer directory (and the folders and files it contains) of another Bluetooth device.

Perform an operation on a folder or file

On the machine from which the File Transfer service will be used:

- In the Folders pane of My Bluetooth Places, select Entire Bluetooth Neighborhood.
- In the right pane of Entire Bluetooth Neighborhood, right-click anywhere *except on a device name* and select Refresh from the pop-up menu.
- In the Folders pane of My Bluetooth Places, right-click the device you want to Transfer Files with and select Discover Available Services from the pop-up menu to update the available services list. The available services will be displayed in the right pane of My Bluetooth Places.

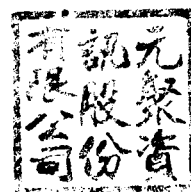

BlueTooth Dongle User's Guide

- Still in the Folders pane of My Bluetooth Places, click the plus (+) sign in front of Public Folder to expand that folder. If there are additional folders inside the expanded folder then those additional folders may have to be expanded. Folder contents are displayed in the right pane of My Bluetooth Places.

Types of File Transfer operations

In the right pane of My Bluetooth Places, right-click a folder item and select an option from the pop-up menu. A dialog box (the title varies, depending on the operation being carried out) appears and the status line (bottom of the dialog box) indicates the operational step that is being carried out.

The types of operations that can be accomplished are:

- Open:

Files re opened in the application associated with them.

- Folders re expanded to show their contents.
- Print ends the selected server file to the client default printer.
- Send to:
 - 3.5 Floppy Drive copies the selected item(s) from the server to the client 3.5

floppy drive.

- My Shared Folder copies the selected item(s) from the server to the default File Transfer folder on the client.
- Cut copies a folder and its contents, or individually selected files in a folder, to the Windows clipboard. When the clipboard contents are pasted to a new location, the originally selected file(s) on the server are deleted.
- Copy copies a folder and its contents, or individually selected files in a folder, to the Windows clipboard.
- Delete deletes selected file(s) and/or folder(s) on the server.
- Rename allows you to change an empty folder name.
- Properties displays the file or folder properties dialog box.

Other options that may appear

(Depending on the context that the menu appears in)

- Update updates the contents of a folder
- New Folder creates a new folder on the server
- Abort FTP Operation aborts an in-process File Transfer operation.



Bluetooth Dongle User's Guide

Information

Exchange

The Information Exchange service provides a way to send and receive Microsoft Outlook items to and from another Bluetooth device.

Supported Outlook items are

- Business cards (*.vcf and *.vcd)
- Calendar entries (*.vcs)
- Notes
- Messages

There are three types of operation

Send sends an object to another device.

- Receive requests an object from another device.
- Exchange sends a client object and receives a server object.

The default location of your business card and the location where received items are placed can be configured in the Bluetooth Configuration Panel.

Send, receive or exchange an object

On the client, in the Folders pane of My Bluetooth Places, right-click the Inbox icon

of the remote device and select an option from the pop-up menu.

Business cards are sent, received or exchanged without further intervention.

To send Calendar Items, Notes, and Messages, navigate to the folder that contains the item you want to send, select the item, and then click Open.

Services

Services are provided by the server and used by the client.

The services supported by Bluetooth for Windows are:

- **Bluetooth Serial Port** establishes a Bluetooth wireless connection between two devices. The connection may be used by applications as though a physical serial cable connected the devices.
- **Dial-up Networking** allows a Bluetooth client to use a modem that is physically attached to the Bluetooth server.
- **Fax** allows a Bluetooth client to wirelessly send a fax using a device that is physically attached to the Bluetooth server.
- **File Transfer** establishes a Bluetooth wireless connection that allows your computer to perform file system



Bluetooth Dongle User's Guide

operations on another Bluetooth-enabled device browse, drag/drop, open, print, cut/copy, paste, delete, rename, etc.

- **Information Exchange** establishes a Bluetooth wireless connection between two devices so that they can exchange personal information manager data such as business cards, calendar items, email messages, and notes.
- **Information Synchronization** establishes a Bluetooth wireless connection between two devices and uses the connection to synchronize Personal Information Manager Data between the two devices.
- **Network Access** establishes a Bluetooth wireless connection between the client and a server that is physically connected to the Local Area Network. If the client has permission (user name and password for the LAN), the wireless connection can be used as if the client were hardwired to the LAN.


All Bluetooth servers do not necessarily provide all of these services. For example, network gateways such as those in Blue Gate series only provide access to the Local Area Network (the Network Access service).

Determine the services provided by a Bluetooth device

- On the client, in the Folders pane of My Bluetooth Places, select Entire Bluetooth

Neighborhood.

- In the right pane of Entire Bluetooth Neighborhood, right-click anywhere *except on a device name* and select Refresh from the pop-up menu.
- In the Folders pane of My Bluetooth Places, right-click a device and select Discover Available Services from the pop-up menu to update the available services list. The available services will be displayed in the right pane of My Bluetooth Places.

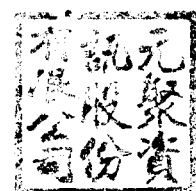

Chapter Five

Local Services

Local Services are those services that a Bluetooth server is capable of providing.

The services provided by Bluetooth for Windows are

- Bluetooth Serial Port
- Dial-Up Networking
- Fax
- File Transfer
- Information Exchange
- Information Synchronization
- Network Access

The names of all the services are displayed even though the server may not be capable of supporting all services. For example, when a server provides a service that is hardware-dependant, that server must be capable of local action, i.e., a Dial-up Networking server must have a working modem, a Fax server must have a functional fax modem, and a Network

Access server must be physically connected to the Local Area Network.

All services start automatically by default when Bluetooth for Windows is initialized.

Automatic start-up can be turned off for individual services (Bluetooth Configuration Panel, Local Services tab, double-click the service name). If a service is not configured to start automatically it can still be started manually (right-click the service and select Start from the pop-up menu).

Stop a local service

Right-click the service and select Stop from the pop-up menu. Stopped services are not available for use by clients.

With Local Device selected, the Details view of Explorer provides basic information about each local service:

- Service the name of the service
- Startup automatic or Manual
- Status:
 - Started (COM#) the service is running and ready to use COM#.
 - Not Started the service is not running (not available to clients).



BlueTooth Dongle User's Guide

- Connected (COM#) the service is in use,
the local port is COM#.
- Device name if connected:
 - Empty field the service is not connected
 - A device name and/or Bluetooth
Device Address identify the device that
is using the service.

Interrupt a connection

from the server side

- Right-click the local service and select
Stop from the pop-up menu.
- Right-click the local service and select
Start from the pop-up menu to re-start
the service.




Chapter Six

Configuration Panel

The Bluetooth Configuration Panel provides access to settings for Bluetooth services, hardware and security and for event notification.

Access the Bluetooth Configuration Panel

- From the Windows Control Panel, select Bluetooth Configuration or
- In the Windows System Tray, right-click the Bluetooth icon, select Setup and then Configuration from the fly-out menu.

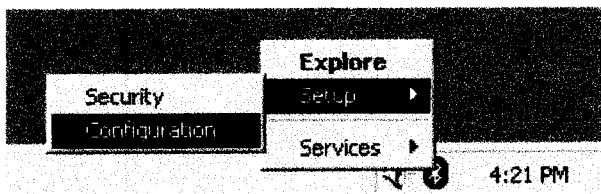


Accessibility Tab

Accessibility

Configuration Settings

The Accessibility tab of the Bluetooth Configuration Panel lets you specify which remote devices may access this computer.

Security settings configured in the General, Local Services, and Client Applications tabs may also affect which devices have access to this computer.

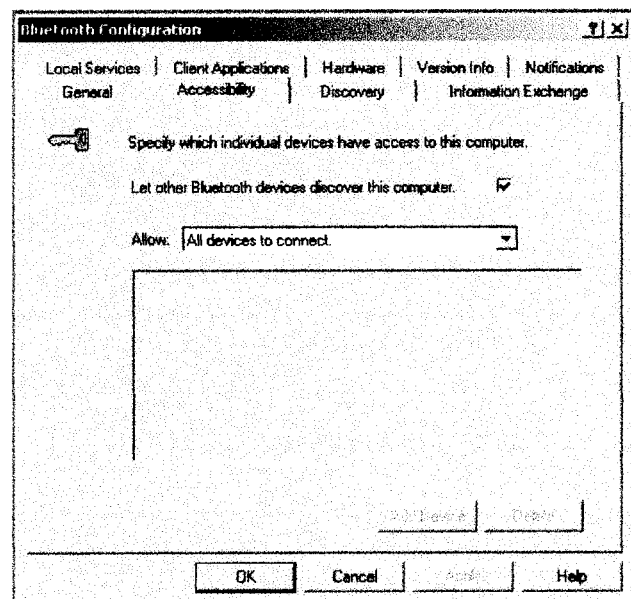


Allow other devices to discover this computer

Select "Let other Bluetooth devices discover this computer" to permit remote Bluetooth devices to find and report this computer in their My Bluetooth Places. If "Allow No devices to connect" (below) is selected, this option is not available.



BlueTooth Dongle User's Guide

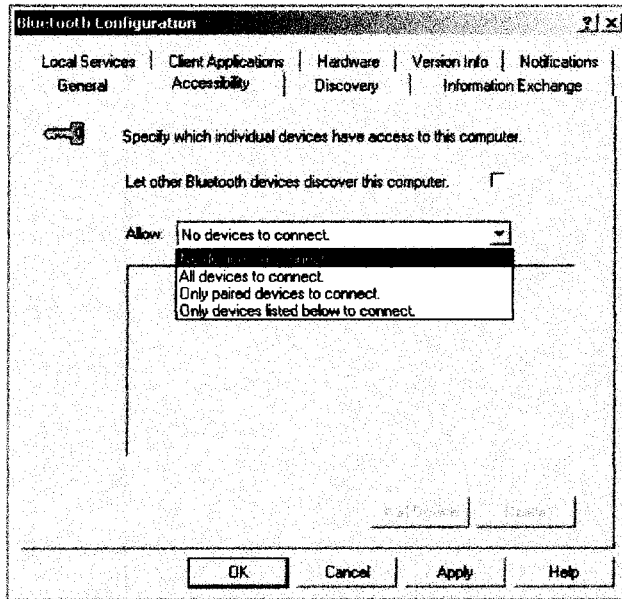

devices).

Accessibility, Adding and Deleting Devices


Limit access to your computer to specific remote devices

From the Bluetooth Configuration Panel, Accessibility tab, in the Allow drop-down list box, select "Only devices listed below".

Control the types of devices that are allowed to connect to this computer

From the Allow drop-down-menu, select:

- All devices to connect well remote devices are permitted to connect to this computer.
- No devices to connect to remote devices are permitted to initiate a connection with this computer. However, this computer can still initiate connections (as a client) with remote Bluetooth devices.
- Only paired devices to connect only devices that have been paired with this computer are allowed to connect to it.
- Only devices listed below to connect only the listed devices are allowed to connect to this computer (see Accessibility, adding and deleting

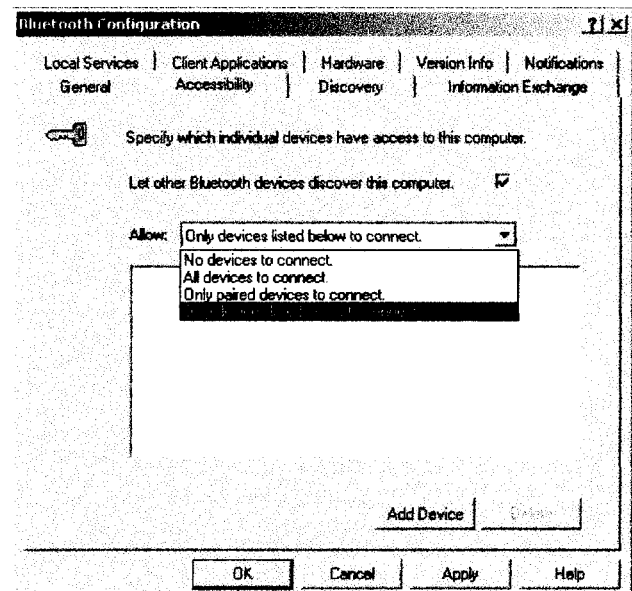


Add a device to the list of devices allowed to connect

- From the Bluetooth Configuration Panel, Accessibility tab, click the Add Device button.




BlueTooth Dongle User's Guide

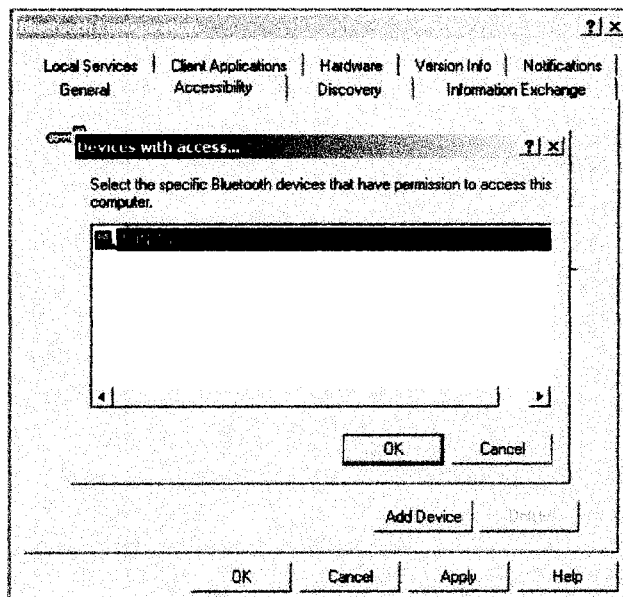

- In the Devices with access... dialog box select the device(s) and click OK. Multiple devices can be selected at the same time using SHIFT + click and/or CTRL + click.

Delete a device from the list of devices allowed to connect

- From the Bluetooth Configuration Panel, Accessibility tab

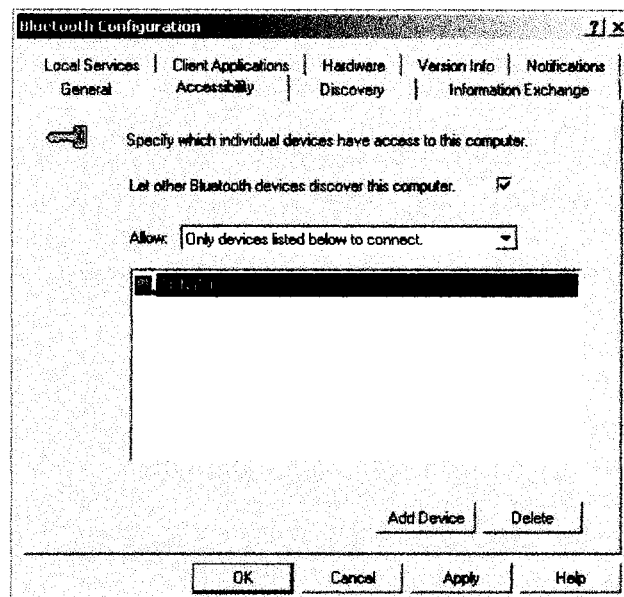

- In the list of devices allowed to connect, click the name of the device to be removed and then click the Delete button.

Discovery Tab


Discovery Configuration

Settings

The settings on Discovery tab of the Bluetooth Configuration Panel determine whether your computer looks for other Bluetooth devices automatically, how often it looks and what type of devices it looks for.

Periodic Search for Devices

When "Look for other Bluetooth devices" is selected, Bluetooth for Windows automatically searches for devices every X minutes. X is an integer from 1 to 60. To

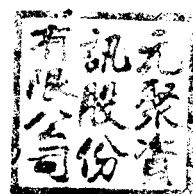

Bluetooth Dongle User's Guide

change the time between auto inquiries, highlight the existing time and enter the new time.

When My Bluetooth Places is first opened it performs an initial automatic search for devices even if "Look for other Bluetooth devices" is not enabled.

Determine the devices that will be reported

Bluetooth for Windows can screen out devices that you do not need access to.

The options are:

- Report all Bluetooth devices
- Report only selected Bluetooth devices (see Discovery, Adding Specific Devices and Discovery, Deleting Specific Devices).

Select the desired option from the drop-down list.

Discovery, Adding Specific Devices

Limit the type of remote devices reported


Bluetooth for Windows can report only specific devices, specific classes of device(s), or specific type(s) of device(s) within a class. Discovered devices can be

mixed-and-matched; you can discover one or more specific devices, classes of devices and types of devices within a class at the same time.

When Bluetooth for Windows is configured to report only specific devices, it reports ONLY those devices.

Report only specific devices


- From the Bluetooth Configuration Panel, on the Discovery tab, select "Report only selected Bluetooth devices" from the drop-down list and then click the Add Device button.

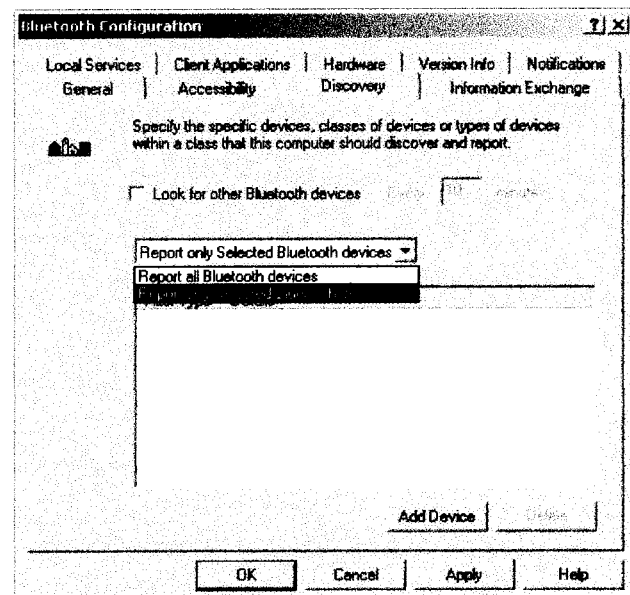

- In the Discoverable devices... dialog box, highlight the device to be discovered and click the OK button. Multiple devices can be selected at the same time using SHIFT + click and/or CTRL + Click.



Bluetooth Dongle User's Guide

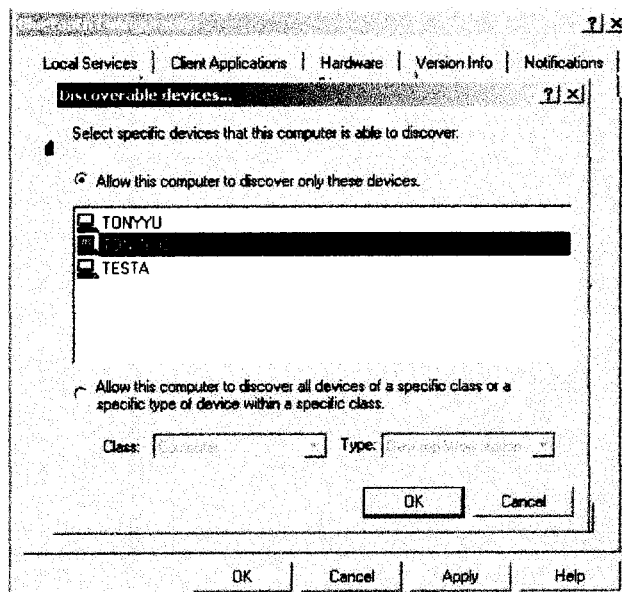

To add a device to the list of devices to be discovered, that device must be within range of the Bluetooth radio; devices that are not within radio range will not appear in the list of devices in the Discoverable devices... dialog box.

Report only a specific class of device

- From the Bluetooth Configuration Panel, on the Discovery tab, select "Report only selected Bluetooth devices" from the drop-down list and then click the Add Device button.
- In the Discoverable devices... dialog box, select "Allow this computer to discover specific devices or types of devices within a class."
- From the Class drop-down list, select a class of devices to be discovered.

- Click the OK button.

Report only a specific a type of device within a class

- Configure Bluetooth for Windows to report the class of device that the type of device belongs to (follow the steps in "Report only a specific class of device," above, but do NOT click the OK button).
- In the Discoverable devices... dialog box, from the Type drop-down menu select the specific type of device to be reported.

- Click the OK button.

Discovery, Deleting Specific Devices


Remove a device from the list of devices to be discovered

In the Bluetooth Configuration Panel, from the Discovery tab, select the device to be removed and click the Delete button.

If "Report only selected Bluetooth devices" is not selected the Delete button will not be available.

Temporarily override the discovery of specific devices

In the Bluetooth Configuration Panel, from the Discovery tab, select "Report all Bluetooth devices." The specifically selected devices will be discovered along

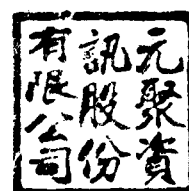

BlueTooth Dongle User's Guide

with all other devices.

To re-enable specific device discovery re-select "Report only selected Bluetooth devices."

When all devices are deleted an error message will appear if report all Bluetooth devices is not selected.


General Configuration Settings

The settings on the General tab of the Bluetooth Configuration Panel determine device properties and basic system security settings.

- **Identity section**
 - **Computer Name**-enter a unique names to identify this computer to other Bluetooth devices in the vicinity; this field cannot be left blank.
 - **Computer type**-select either Desktop or Laptop from the drop-down menu to help identify this computer to other Bluetooth devices in the vicinity.
- **Bluetooth Security Section**
 - **High**-requires Bluetooth devices to authenticate (enter a Personal

Identification Number (PIN)) before allowing a connection to be established. Your computer and the connected Bluetooth device will exchange data using encrypted links.

- **Medium**-the default setting security is configured at the service-level. Service level security means that each individual service must have its security settings (Authentication, Authorization and Encryption) set independently.

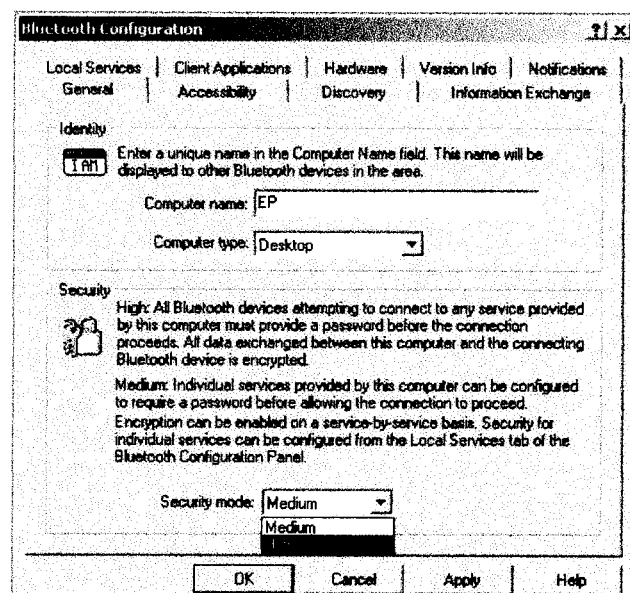

If the security mode is medium and service-level security is not configured, any Bluetooth device will be able to discover your computer and use its services.

Hardware Configuration



BlueTooth Dongle User's Guide

The Hardware tab of the Bluetooth Configuration Panel provides basic information about the Bluetooth hardware installed on this computer and access to the Advanced Settings dialog box, if required:

- **Devices:**

- **Name:** the name of the device, e.g., *Bluetooth Device*
- **Type:** the type of device, e.g., USB.

- **Device Properties:**

- **Manufacturer:** the name of the company that manufactured the device selected in the Devices section of this dialog box.

- **Firmware Revision:** the manufacturer's firmware version number.

- **Device status:** indicates that the device is operating properly or that there is a problem/conflict.

- **Device Address:** the Bluetooth Device Address (BDA or BD Address) programmed into this device when it was manufactured.


- **HCI Version:** the version number of the Bluetooth Specification that the Host Controller Interface complies with.

- **HCI Revision:** the revision number of the Bluetooth Specification that the Host Controller Interface complies with.

- **LMP Version:** the version number of the Bluetooth Specification that the Link Manager Protocol complies with.

- **LMP Sub Version:** the sub-version number of the Bluetooth Specification that the Link Manager Protocol complies with.





- **The Advanced button:** displays the Advanced Settings dialog box, which allows you to select the country code and transmission power settings. *This option is not available on all systems.*

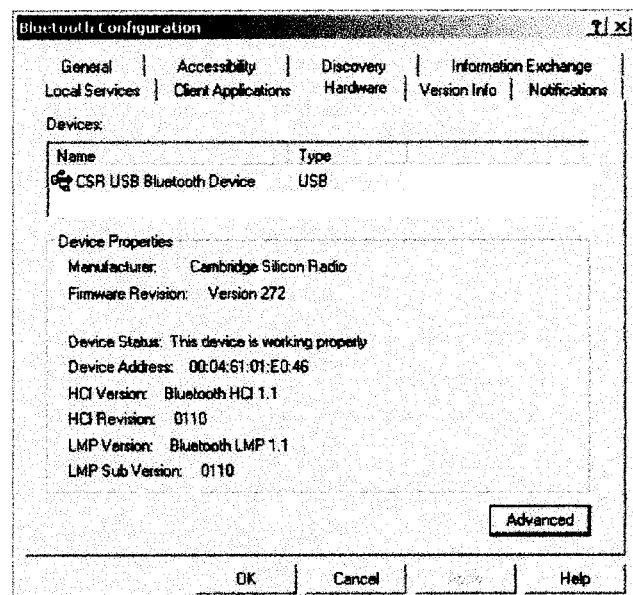


Plug in Dongle



BlueTooth Dongle User's Guide

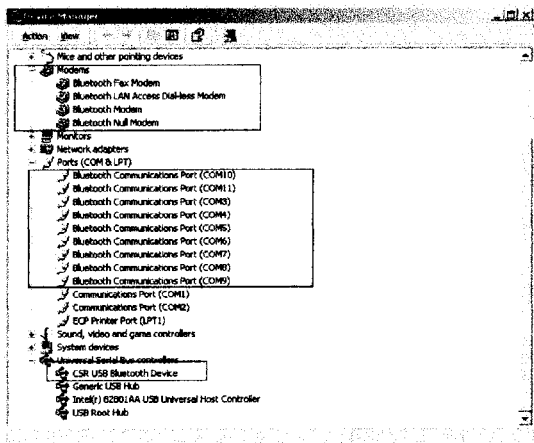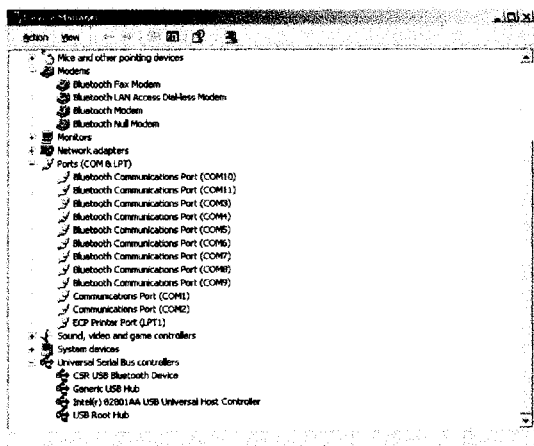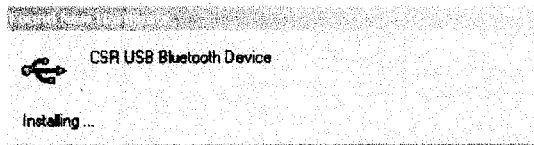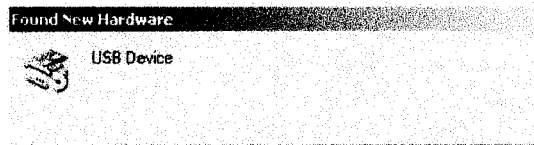

from the Hardware tab of the Bluetooth Configuration Panel.

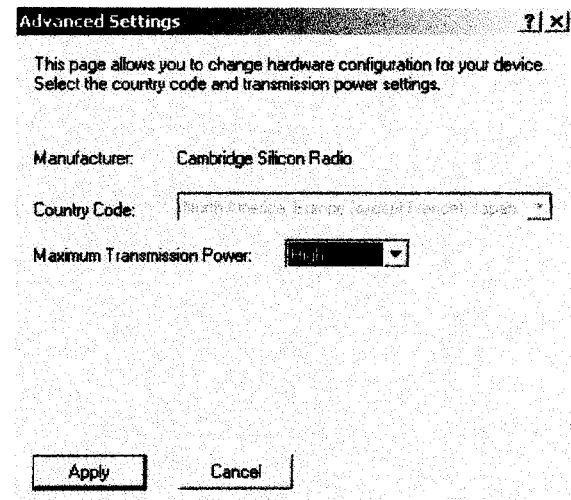

Depending on the country in which the hardware is sold and/or in which it will be used, the advanced button may not be present.

From this dialog box you can set the:


- Country Code:
 - North America, Europe (except France), and Japan
 - France and China
- Maximum Transmission Power:
 - High
 - Medium
 - Low

Hardware Advanced

Settings Dialog Box

When available, this dialog box is reached

Click the Apply button to implement the changes. A dialog box appears with

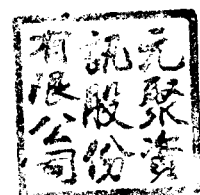

Bluetooth Dongle User's Guide

notification that the Bluetooth device attached to this computer must be reset before the change(s) will take effect.

- Click the Yes button to reset the Bluetooth device now all open Bluetooth connections will be closed.
- Click the No button to save the changes the changes will be applied the next time the Bluetooth device is reset or restarted.

Information Exchange Configuration Settings


The settings on the Information Exchange tab of the Bluetooth Configuration Panel configure:

- The highest-level directory on this computer that a remote device has permission to access
- The path to your electronic business card
- The path to the directory that will be used to save incoming:
 - Business cards
 - Notes


- Messages
- Calendar items

File Transfer

My Shared Directory: the directory configured in this section is the highest-level directory to which a remote Bluetooth computer has access. This directory and its sub directories are displayed in the remote device's My Bluetooth Places.

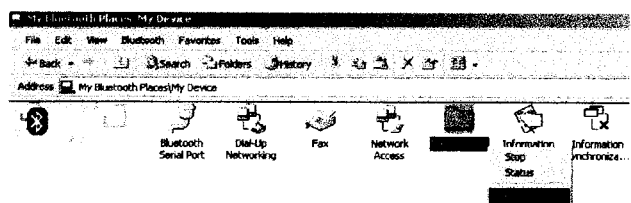


Click the Browse button and navigate to the directory that will be used as My Shared Directory.

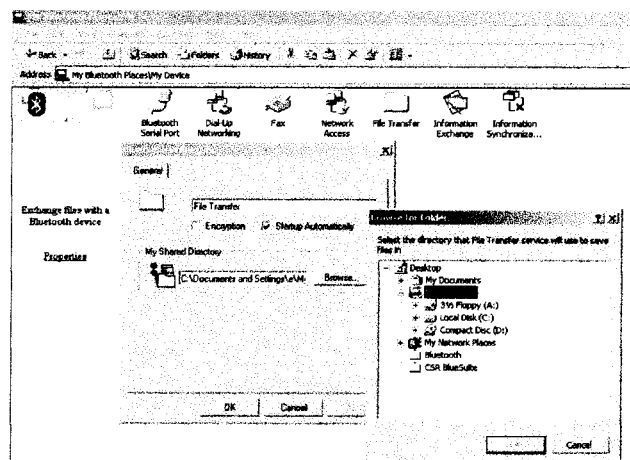

Send Business Card

My Business Card: the path to the

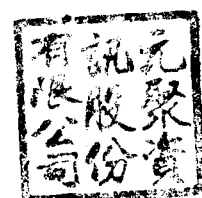

BlueTooth Dongle User's Guide

directory on this computer that contains your electronic business card.

Select the "Send Business Card on Request" option to allow remote devices to obtain your business card.

Click the Browse button and navigate to the directory that contains your business card.

Receive Business Card

My Inbox Directory: the path to the directory on this computer where inbound Personal Information Manager Items such as Business cards, Notes, Calendar entries and messages will be saved.

Select the types of items you wish to accept by placing a checkmark in the appropriate boxes, then click the Browse button and navigate to the directory where they should be saved.

Select the "Save Object in Personal Information Manager" option to save incoming objects directly in the PIM. *When this option is selected, the path specified in your Inbox Directory is not used.*

The settings on the Local Services tab of the Bluetooth Configuration Panel determine the configuration of the services provided by your computer to remote devices. Each service can be configured individually for security, name, and other settings.

The Local Services tab also includes options to add and delete user-defined serial services.


Bluetooth for Windows Local Service Names

- Bluetooth Serial Port
- Dial-Up Networking
- Fax
- File Transfer
- Information Exchange
- Information Synchronization
- Network Access


Local Services Tab

Local Services

Configuration Settings

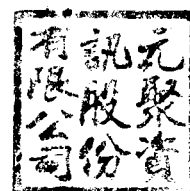

BlueTooth Dongle User's Guide

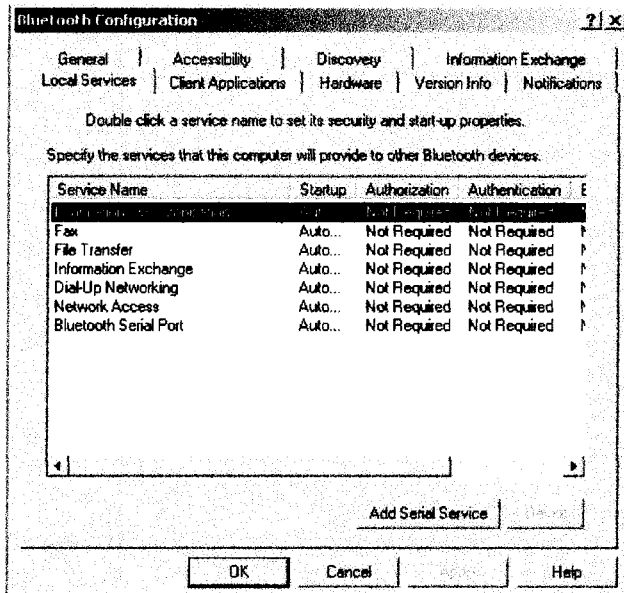

Property settings which are common to all of the local services

Although each of these settings can be set individually for each service, all local services have the have setting for:

- Authentication
- Authorization
- Encryption
- Startup
- Service Name

Some local services have additional property settings

Some services have an additional setting that is specific to that service.

- Network Access has an additional setting

for the maximum number of connections allowed at any time.

- Dial-Up Networking has an additional setting for selecting the modem that will be used by the service.
- Fax has an additional setting for selecting the modem that will be used by the service.
- Bluetooth Serial Port has an additional setting for selecting the communications that will be used by the service.

Notifications Tab

Notifications

Configuration Settings

The Notifications tab of the Bluetooth Configuration Panel lets you associate a sound (Windows *.wav file) with specific Bluetooth events.

Sounds can be associated on an individual basis with several events, including:

- When a PIN code is required
- When a remote device attempts to access:
 - Files on this computer
 - A Bluetooth port




BlueTooth Dongle User's Guide

- The Dial-up network service
- The LAN Access service
- The Fax service
- When a remote device attempts to send:
 - Information items
 - Synchronization information

• Click the OK button to close the Bluetooth Configuration Panel.


The sound *will not play*, even though it has been assigned, unless the Notify check box is selected.

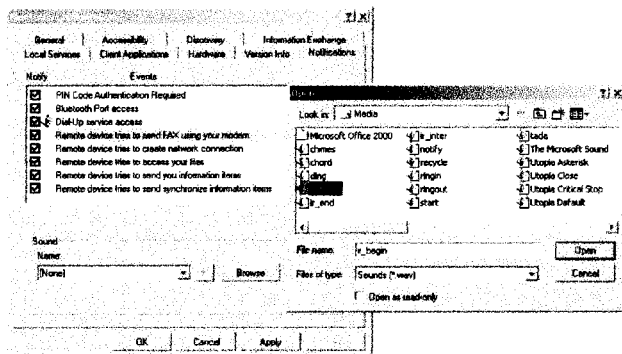

Associate a sound with a Bluetooth event

From the Bluetooth Configuration Panel, Notifications tab:

- In the Notify column of the Events list, select the check box associated with the event.
- In the Sound area of the Notifications tab, click the Browse button and navigate to the sound file (*.wav) to be used for notification. To preview the sound file, click the play button.

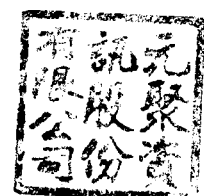

Chapter Seven

Security

Security Introduction

Each service that the server provides can be configured to require:

- **Authorization** the server operator must acknowledge all connection attempts before a connection is established.
- **Authentication** the server requires a Personal Identification Number (PIN) code or a Link Key before a connection is established.
- **Encryption** all data sent between the Bluetooth client and Bluetooth server is encrypted. The encryption key is based on the Authentication Link Key; Encryption requires that Authentication be enabled.

The default security setting for Authorization, Authentication and Encryption is disabled.

Devices can also be paired, a process that eliminates the need to enter a PIN code every time access is attempted

Authentication

Authentication is used to verify identity; it

requires a passkey or Link Key from the remote device. When a remote device attempts access a visual and/or audio warning notifies the local operator.

The local operator can open a dialog box that provides:

- The user-friendly name of the device attempting access
- The name of the local service that the remote device is attempting to access
- A place for the local operator to enter a passkey

The operator of the remote system must enter the identical passkey or access is denied.

If the notification is ignored, access is denied after a preset timeout.

When devices are aired, those devices automatically exchange a Link Key and Authentication is carried out without operator intervention.

Authorization

Authorization is Yes or No, go-no-go security.

A visual and/or audio warning alerts the server operator that a remote device is attempting to connect.



Bluetooth Dongle User's Guide

The server operator responds by clicking the Bluetooth icon in the Windows system tray to open a dialog box that displays:

- The user-friendly name of the device attempting to connect
- The local service to which the remote device is attempting to connect.

The server operator may grant or deny access to the service by clicking an on-screen button.

If the server operator ignores the Authorization notification access will be denied after a preset timeout.

Encryption

Encrypting translates data into an unreadable format using a secret key or password. Decrypting the data requires the same key or password that was used to encrypt it.

Encryption in Bluetooth for Windows is based on the same passkey or Link Key that is used for Authentication. If Authentication is not enabled the key is not available and encryption will not take place.

To use Encryption, Authentication must be enabled.

Enable Encryption for a service

- Right-click a service name and select Properties from the pop-up menu to display the Bluetooth Properties dialog box.
- Select the Encryption option. If Authentication is not enabled it will be automatically turned on when Encryption is selected.
- Click the OK button to close the dialog box and apply the change.

Levels of Security

Security for local services may be configured on an individual basis.

The configuration options are

- Startup-Automatic or Manual
- Authorization
- Authentication
- Encryption

To access the security settings for a local service, in the Bluetooth Configuration Panel, from the Local Services tab, double-click the service name.

Bluetooth-enabled devices from different vendors may handle security in a slightly different manner. Refer to the user's guide for your Bluetooth device for additional



BlueTooth Dongle User's Guide

information.

Link Key

A Link Key is a unique, internally generated, access code. Link Keys are generated automatically when devices are Paired or when Authentication is enabled.

Link Keys are created by combining

- The Passkey
- The Bluetooth Device Address
- An internally generated random number

Pairing Devices

Pairing allows you to avoid entering access information each time a connection is attempted. Paired devices share a unique Link Key, which they exchange when connecting.

The mate of a pair will always appear in My Bluetooth Places, even if the mate is not turned on or is out of connection range.

Paired devices remain paired even when

- One of the devices is not powered up
- A service connection is interrupted or the service stopped
- One or both devices are rebooted.

When Authentication is enabled devices are paired the first time they attempt to connect, after a successful passkey exchange.


To pair devices *before attempting a connection*

- In the Windows System Tray, right-click the Bluetooth icon, then Setup and select Security from the fly-out menu.
- The Bluetooth Security dialog box appears and Bluetooth for Windows performs a device inquiry to update the list of devices in the area. After the inquiry is complete:
 - In the Found Devices Pane of the dialog box, click the name of the device to be paired
 - Click the Execute Pairing button.
- In the Bluetooth Passkey Request dialog box, enter the Bluetooth Passkey
- Click the OK button.

The check box on the main screen, when selected, permits all services to connect without Authorization.

Remove Pairing

When devices are paired, the configuration information is saved on both devices.

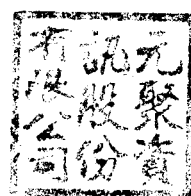

BlueTooth Dongle User's Guide

Devices remain paired until the relationship is broken on both devices.

To break a paired device relationship

- In the Windows System Tray, right-click the Bluetooth icon, then Setup and select Security from the fly-out menu.
- From the Bluetooth Security dialog box, in the Paired Devices list, select a device, click the Delete button and then click the done button.

Pairing must be broken on both devices.

Passkey

A Passkey is an alphanumeric string up to 16 characters in length. Passkeys are also called PIN codes, or Personal Identification Numbers.

In Bluetooth for Windows, passkeys are used in the Authentication and Encryption process.

Security Request

Dialog Box

A Bluetooth Authorization or Bluetooth Passkey Request dialog box may appear (depending on security settings) when a connection is attempted if either Authorization or Authentication is enabled. The method of notification depends on the

version of Windows:


- Windows 2000, Windows Me and Windows XP bubble message is displayed over the Bluetooth icon in the Windows System Tray
- Windows 98SE the Bluetooth for Windows icon in the Windows System Tray blinks.

Regardless of the version of Windows, click the Bluetooth icon in the Windows System Tray and then follow the on-screen instructions. The instructions vary, depending on the security configuration of the system.

If the security notification is ignored the connection request will fail after a preset timeout.

The dialog box provides

- Device Name: the user-friendly name of the device attempting to connect.
- Request to access: the service the remote device is attempting to access.
- Buttons for responding
 - OK-allow the connection
 - Cancel-deny the connection
 - Advanced (click the See Also button, below, for more information).

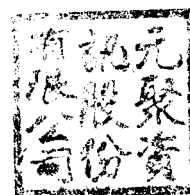

BlueTooth Dongle User's Guide

- A check box that, when enabled, grants (authorizes) the connecting device access to all of the services on this computer (click the See Also button, below, for more information).



Chapter Eight

Troubleshooting

Cannot Connect to a Paired Device

Paired devices are always displayed in My Bluetooth Places, even if the remote device is out of range or not powered up.

Verify that the remote member of the pair is within radio range and powered up and then attempt the connection again

Cannot discover services on an un-paired remote device

The remote device may not be powered up or may be out of range.

- Verify that the remote device is powered up.
- Verify that the remote device is in Connectable mode (Bluetooth Configuration Panel > Accessibility tab).
- Perform a Search for Devices to verify that the device is within range.

Dial-up networking service does not start

The Dial-up Networking service will not start unless a properly configured modem

is attached to the server.

- Verify that the modem is usable as a local device from the server.
- In the Bluetooth Configuration Panel, Local Services tab, double-click the Dial-up Networking service:
 - Click the down arrow in the Modem field and select the modem that will be used to dial out
 - Click the OK button
 - Click the OK button to close the Bluetooth Configuration Panel.


Determine the BDA of installed hardware

In the Bluetooth Configuration Panel, on the Hardware tab, in the Devices section, select the device you want to determine the address of. In the Device Properties section of the dialog box, the fourth entry, Device Address, is the BDA of the selected Bluetooth device

Determine the HCI version number

In the Bluetooth Configuration Panel, on the Hardware tab, in the Device Properties section, the fifth entry provides Bluetooth Specification compliance information for the Host Controller Interface.

The sixth entry contains the Specification Revision information for the Host

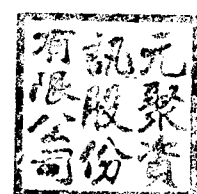

BlueTooth Dongle User's Guide

Controller Interface, if appropriate.

Determine the LMP version number

In the Bluetooth Configuration Panel, on the Hardware tab, in the Device Properties section, the seventh entry provides Link Manager Protocol version number information.

The eighth entry contains the Link Manager Protocol sub-version number information, if appropriate

Test a Network Access connection

If the client is hardwired to the LAN, unplug the hardwired connection to ensure that the test checks the wireless connection rather than the hardwired connection.

If the server has access to the Internet, open a browser on the client and connect to the World Wide Web.

You may also Ping the server from the DOS prompt.

Unknown Port error

The unknown Port error message usually means an attempt was made to connect a port that was in use.

Additional Bluetooth Serial Ports can be added if they are required.

