

Gulfstream V

OPERATING MANUAL

RADIO TUNING

2B-08-10: OVERVIEW

The radio function in the Planeview was developed, using the Multifunction Control Display Unit (MCDU) for the EPIC radio tuning function. The system is designed to have a radio tuning function that matched, as closely as possible, the behavior of the Honeywell Radio Management Unit (RMU) and the Rockwell Collins Radio Tuning Unit (RTU). The resulting design is described below.

Throughout this document the screen images presented make minimal use of color on the display. This document describes a generic color set in which **green** is used to indicate active values versus **white** for normal text, while **amber** and **red** are used to draw the crew's attention or to provide warnings.

It is assumed that the reader is familiar with the general characteristics of the MCDU and basic radio operations (e.g., active/preset frequency tuning, frequency spacing and formats, DME HOLD, and the unique characteristics and controls of the various types of communications and navigation radios).

Gulfstream V

OPERATING MANUAL

1. MCDU Controls

The radio tuning function is operated using a subset of the controls available on the MCDU, shown in Figure 27.

- **NEXT and PREV Function Keys** - NEXT and PREV function keys move to adjacent pages where more than one page of the same title is used
- **RADIO Function Key** - The RADIO function key activates the radio tuning function and displays the RADIO 1/2 page,
- **Tuning Knob** - The tuning knob is used to dial in frequencies or other numeric values.

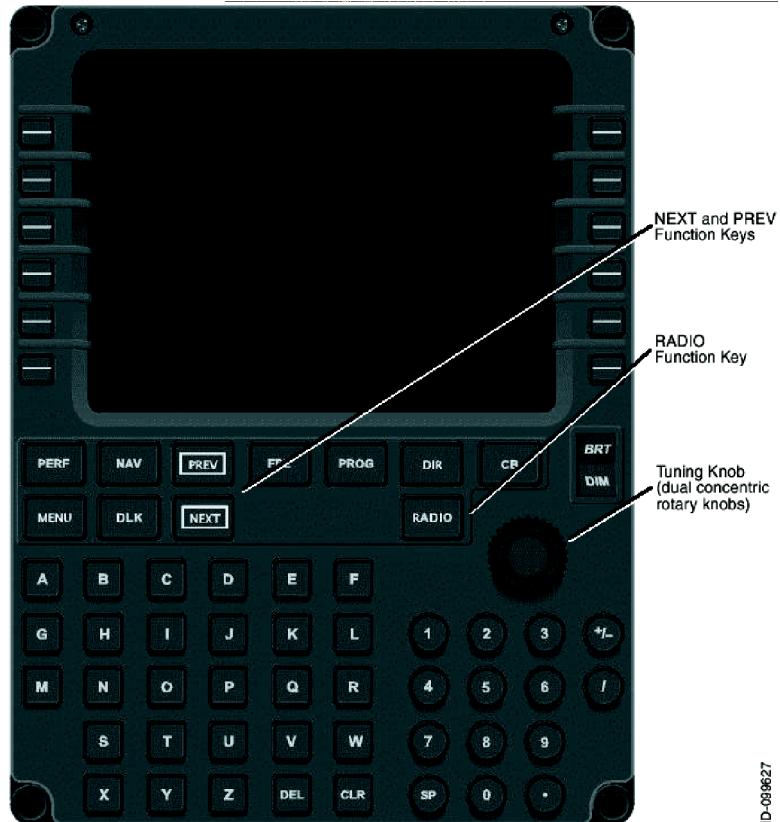


Figure 27

Gulfstream V

OPERATING MANUAL

2. Page Organization

The radio tuning function is accessed via the RADIO function key on the MCDU, which displays the RADIO 1/2 page. All other pages are accessed from RADIO 1/2 using the line select keys or the NEXT and PREV function keys, shown in Figure 28.

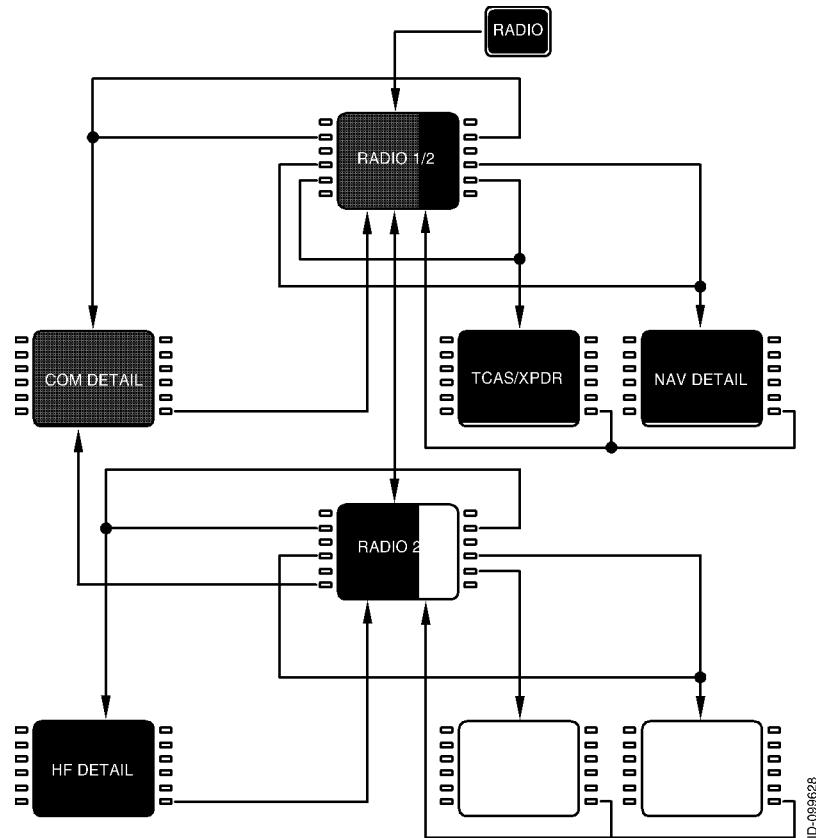


Figure 28

Movement between the RADIO 1/2 and RADIO 2/2 pages is done with the NEXT and PREV function keys, while access to the COM DETAIL, TCAS/XPDR, and NAV DETAIL pages is via line select keys from RADIO 1/2 and access to the HF DETAIL, MLS DETAIL, and ADF DETAIL pages are via line select keys from RADIO 2/2.

Gulfstream V

OPERATING MANUAL

3. MCDU Tuning Description

All of the pages that correspond to a particular radio type (e.g., VHF communications or ADF) are arranged as shown in Figures 29, 30, and 31, and typically consist of a details page along with two memory pages. The details pages allow the specific features of each radio to be configured and provide access to the memory pages associated with each radio type.

Figure 30 shows the pages associated with the VHF communications radios.

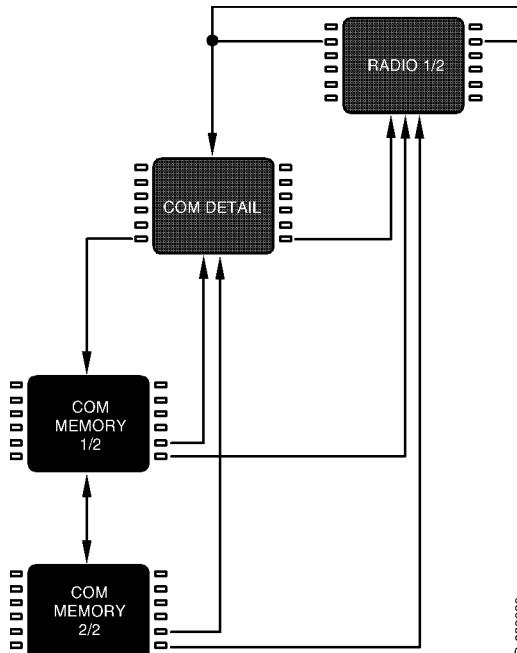


Figure 29

Gulfstream V
OPERATING MANUAL

Figure 30 shows the pages associated with the VHF navigation radios.

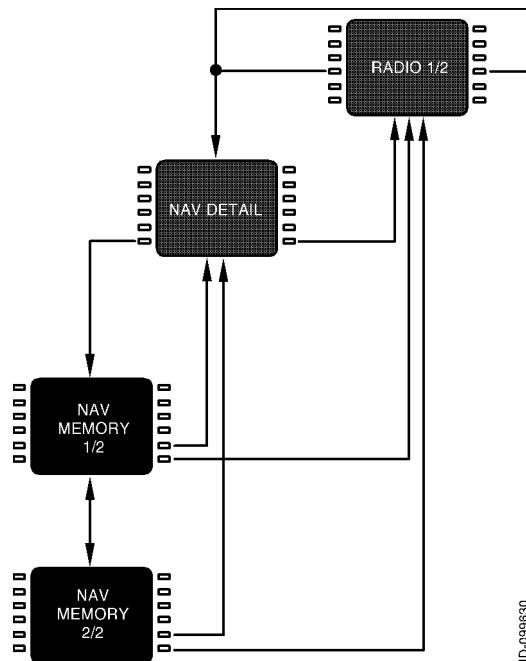


Figure 30

Figure 31 shows the pages associated with the TCAS/transponder subsystem

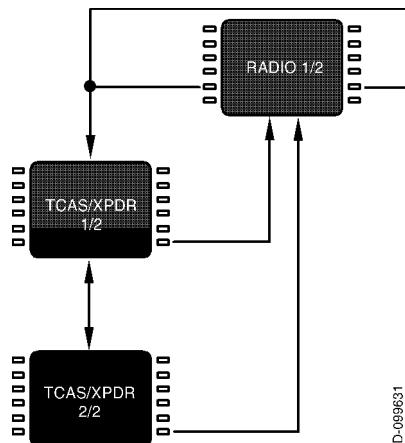


Figure 31


DIGITAL AUTOMATIC FLIGHT CONTROL SYSTEMS

2B-08-00

Page 5
Oct 1/97

Gulfstream V OPERATING MANUAL

Figure 32 shows the arrangement of pages associated with the high-frequency (HF) communications radios.

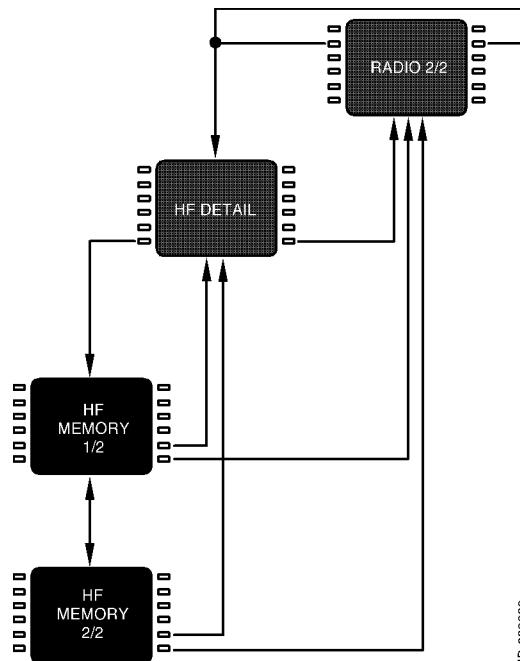

ID:099632

Figure 32


2B-08-00

Page 6
Oct 1/97

DIGITAL AUTOMATIC FLIGHT CONTROL SYSTEMS

Gulfstream V
OPERATING MANUAL

Figure 33 shows the page associated with the automatic direction finder (ADF).

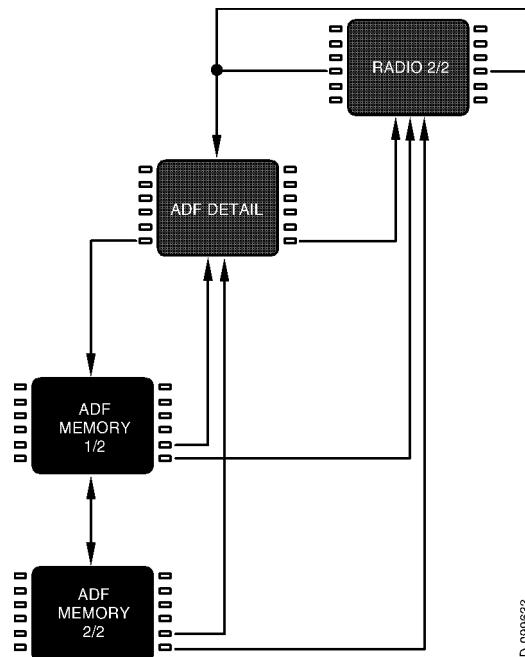


ID-698633

Figure 33

Gulfstream V OPERATING MANUAL

Figure 34 shows the pages associated with the Microwave Landing System (MLS) receiver.

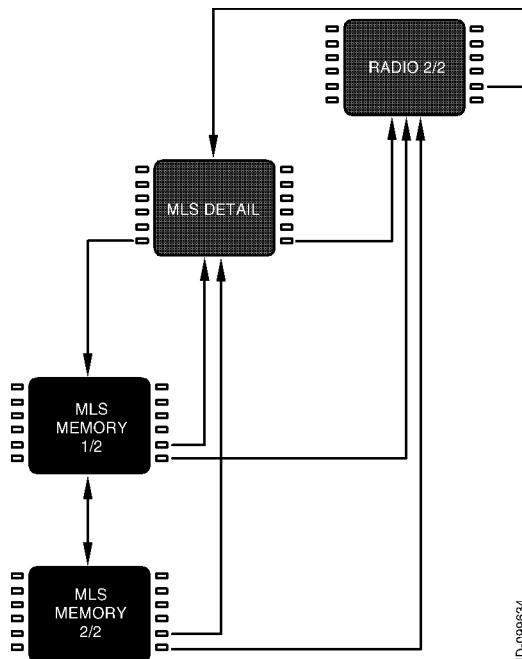

ID-098634

Figure 34

The RADIO MENU is used for manually tuning the radios. Pushing the RADIO key on the MCDU displays the RADIO MENU page 1/2.

Gulfstream V

OPERATING MANUAL

2B-08-20: BASIC OPERATION

In keeping with the titling and numbering conventions used by MCDU functions, each MCDU page is arranged with a centered title at the top and a page number in the upper-right corner. Page numbers are formatted as the current page number (among those with the same page title), a slash "/", and the number of pages with the same title. For example, there are two pages entitled "RADIO," the first is labeled RADIO 1/2, as shown in Figure 35, and the second RADIO 2/2.

The bottom line on each page displays the characters entered on the MCDU keypad and is called the scratchpad. The scratchpad is shared across all MCDU client functions, and is not under the control of the radio tuning function.

The text area adjacent to each line select key (LSK) on the MCDU is referred to as a field, and identified by the LSK it is associated with. For example, the active frequency for VHF COM radio 1 (shown as COM1, 123.200) is in field 1L.



Figure 35

Gulfstream V

OPERATING MANUAL

Pushing the NEXT or PREV key when this page is displayed displays the RADIO MENU page 2/2, shown in Figure 36.



Figure 36

When the scratchpad is empty, pressing a line select key will either move the format cursor to the adjacent field, or perform the function indicated by the icon that appears near the key. The icons and their functions are described below.



0998685

"Swap" frequencies. This symbol indicates that exchanges between the active and preset frequencies for the associated radio can be made. This has the effect of saving the currently active frequency in the preset memory, and tuning the radio to the frequency previously stored as the preset



0998685

Page indicator. When this icon is displayed, pushing the adjacent LSK changes the display to another page. The page to be displayed is either labeled explicitly or it is a detail page for the radio in the associated field.

Gulfstream V
OPERATING MANUAL



ID-099557

Exclusive selection. This icon is displayed next to a list of mutually exclusive options. Each time the adjacent LSK is pushed, the next options become selected, wrapping around to the first when the last option is reached. The selected value is displayed in the active color (green in this document) and large font, while the other selection are displayed as smaller, white characters.



ID-099558

Immediate function. This icon indicates that the function identified in the field will be carried out immediately when the adjacent LSK key is pushed.



ID-099559

Copy value. This icon is used on the memory pages to indicate that the frequency highlighted by the format cursor will be copied into the active frequency for the associated radio.



ID-099560

Format cursor. The cursor box highlights the value in the currently active field.



ID-099561

Tuning curl. This icon indicates that the data value highlighted by the format cursor can be changed by turning the MCDU tuning knob.

Gulfstream V OPERATING MANUAL

If LSK2R, the second on the right hand side, shown in Figure 37, is pushed, the format cursor and tuning curl move from the 2L field (COM1) to field 2R (COM2). Likewise, pushing LSK 3L moves the format cursor to the active frequency field for VHF NAV 1 radio. Once positioned on a field, turning the tuning knob changes the highlighted frequency.



Figure 37

When an icon shown above is displayed next to a line select key, the function denoted by the icon takes precedence over moving the format cursor. For example, pushing LSK 1L exchanges the active and preset frequencies for VHF COM1 radio, without moving the format cursor. Consequently, it is not possible to tune the active frequency for a radio using the tuning knob.

The exception to this rule is the case where a preset frequency is not shown for the associated radio. This can happen when a VHF navigation radio is in DME HOLD, which causes the preset frequency to be removed in order to show the separately tuned DME frequency (refer to fields 3L and 4L in Figure 37).

Gulfstream V

OPERATING MANUAL

When one or more characters are present in the scratchpad, the icons adjacent to fields that accept text entries are removed to indicate that pushing those LSKs will enter the scratchpad data into the field, as shown in Figure 38. Entering the contents of the scratchpad into a field, or manually clearing the scratchpad, will restore the icons and the normal functions of the line select keys.

Scratchpad entries can be made into any editable field at any time. Making a scratchpad entry into an active frequency field moves the previously active frequency into the preset field for that radio.



Figure 38

Gulfstream V

OPERATING MANUAL

2B-08-30: DETAILED PAGE DESCRIPTIONS

1. RADIO 1/2

RADIO 1/2, described below, displays the following radio data

- VHF COM1 and COM2 radios
- VHF NAV1 and NAV2 radios
- The currently selected TCAS/transponder mode,
- The aircraft ID (if available)
- The current transponder code.

Access to RADIO 2/2 is via the NEXT or PREV function keys.

Gulfstream V
OPERATING MANUAL

VHF COM 1 active frequency. Pushing LSK 1L exchanges the active and preset frequencies for VHF COM 1. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

This section is the VHF COM 2 active frequency. Pushing LSK 1R exchanges the active and preset frequencies for VHF COM 2. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.



VHF COM 1 preset frequency. This is the default field for the format cursor when the RADIO function key is pushed. Pushing LSK 2L when the format cursor is already in the field displays the COM 1 page.

This section is the VHF COM 2 preset frequency. Pushing LSK 2R when the format cursor is already in the field displays the COM 2 page.

VHF NAV 1 active frequency. When DME HOLD for NAV 1 is OFF, pushing LSK 3L exchanges the active and preset frequencies for VHF NAV 1. When DME HOLD for NAV 1 is ON, pushing LSK 3L moves the format cursor to field 3L or displays the NAV 1 page if the cursor is already in the field. A scratchpad entry into 3L replaces the preset frequency with the previous active frequency.

This section is the VHF NAV 2 active frequency. Pushing LSK 3R when DME HOLD for NAV 2 is OFF, exchanges the active and preset frequencies for VHF NAV 2. Pushing LSK 3R when DME HOLD for NAV 2 is ON moves the format cursor to field 3R or displays the NAV 2 page if the cursor was already in the field. A scratchpad entry into 3R replaces the preset frequency with the previous active frequency.

Gulfstream V OPERATING MANUAL

When DME HOLD for NAV 1 is OFF, this section displays the VHF NAV 1 preset frequency. When DME HOLD is ON, this section displays the active DME frequency for NAV 1. The format cursor can be used in field 4L in either case. If the LSK 4L is pushed when the format cursor is in the field, the NAV 1 page is displayed. The DME H waypoint-name line is displayed in **amber** to draw the crew's attention to the separate tuning of the DME receiver.

When DME HOLD for NAV 2 is OFF, the VHF NAV 2 preset frequency is displayed. When DME HOLD is ON, the active DME frequency for NAV 2 is displayed. The format cursor is allowed in field 4R in either case. Pushing LSK 4R when the format cursor is in the field displays the NAV 2 page.



This section displays TCAS/XPDR 2/2

This section is the Active TCAS/XPDR mode. Pushing LSK 6L toggles between standby (STBY) and the active TCAS/XPDR mode selected on TCAS/XPDR 2/2.

This section displays the Active transponder code and reply indicator. The header for field 5R shows the flight ID, if it is available or was entered by the crew. The reply indicator (the **green** dot) lights when the transponder is replying to a RADAR or TCAS interrogation. Pushing LSK 5R moves the format cursor to the field or displays TCAS/XPDR 1/2 if the cursor is already in the field.

Commands the transponder to transmit ident.

Gulfstream V
OPERATING MANUAL

2. RADIO 2/2

RADIO 2/2, described below, displays the following radio data:

- HF1 and HF2 radios
- ADF1 and ADF2 radios
- Optionally installed:
 - COM Radio
 - NAV Radio
 - NAV/COM Radio
 - MLS.

Access to RADIO 1/2 is via the NEXT or PREV function keys.

Gulfstream V

OPERATING MANUAL

This section is the HF COM 1 active frequency. Pushing LSK 1L exchanges the active and preset frequencies for HF COM 1. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

This section is the HF COM 2 active frequency. Pushing LSK 1R exchanges the active and preset frequencies for HF COM 2. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.



ID-097329

This section is the HF COM 1 preset frequency. It is the default field for the format cursor when the RADIO 2/2 page is displayed. Pushing LSK 2L when the format cursor is already in the field displays the HF 1 page.

This section is the ADF 1 active frequency. Pushing LSK 3L exchanges the active and preset frequencies for the ADF. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.


This is the HF COM 2 preset frequency. Pushing LSK 2R when the format cursor is already in the field displays the HF 2 page.

This is the ADF 2 active frequency. Pushing LSK 3R exchanges the active and preset frequencies for the ADF. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

Gulfstream V
OPERATING MANUAL

This section is the ADF 1 preset frequency. Pushing LSK 4L when the format cursor is already in the field displays the ADF 1 page.

This is the ADF 2 preset frequency. Pushing LSK 4R when the format cursor is already in the field displays the ADF 2 page.

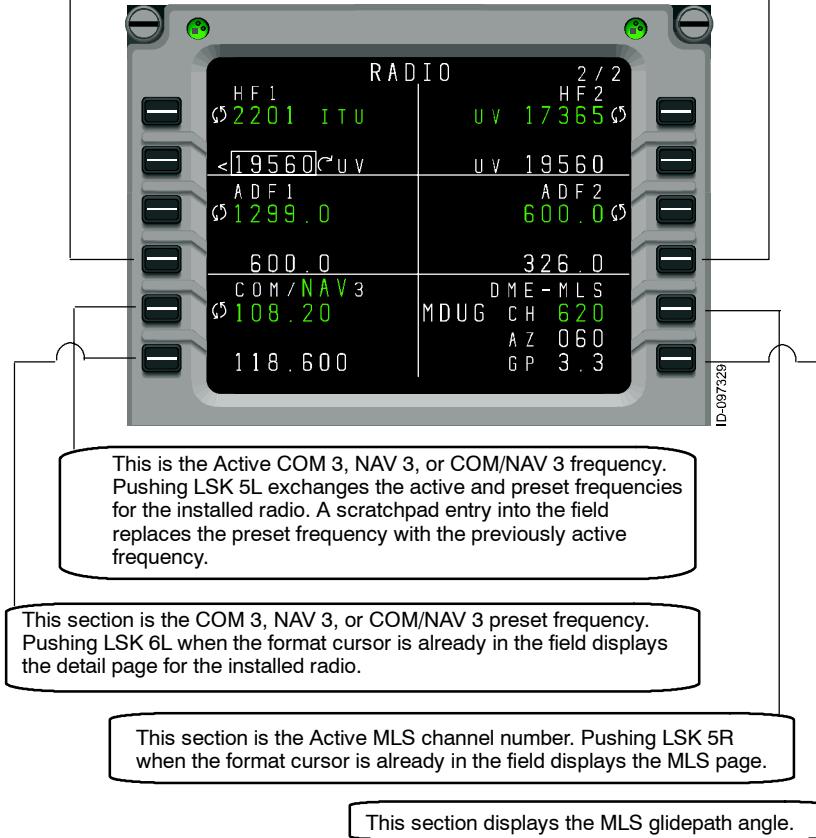

This is the Active COM 3, NAV 3, or COM/NAV 3 frequency. Pushing LSK 5L exchanges the active and preset frequencies for the installed radio. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

This section is the COM 3, NAV 3, or COM/NAV 3 preset frequency. Pushing LSK 6L when the format cursor is already in the field displays the detail page for the installed radio.

This section is the Active MLS channel number. Pushing LSK 5R when the format cursor is already in the field displays the MLS page.

This section displays the MLS glidepath angle.

Gulfstream V

OPERATING MANUAL

3. COM1 Page

The COM1 page, described below, is used to access to the controls specific to VHF communications radios, including squelch, operating mode, and frequency spacing. It is also used as a quick method for retrieving frequencies from memory. The format cursor defaults to the memory tuning field (3L), providing quick access to stored frequencies. The page also provides access to the COM memory pages.

Gulfstream V

OPERATING MANUAL

Active VHF COM frequency on the selected radio (the page title reflects which COM radio was selected). Pushing LSK 1L exchanges the active and preset frequencies (when the format cursor is on field 2L), or copies a frequency stored in memory (when the format cursor is on field 3L) for the selected COM radio. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

This LSK toggles the squelch feature for the selected VHF COM radio.



This section displays the VHF COM preset frequency.

This section is the COM memory display. This is the default field for the format cursor when the COM 1 or COM 2 pages are displayed. This section can be used in a fashion similar to the RMU's memory tune feature. Turning the tuning knob while field 3L is selected cycles through the frequencies stored in memory, by location, showing the associated label and the stored frequency below.

This LSK toggles between voice and data mode for the selected VHF COM radio.

Toggles the frequency spacing selection for the selected VHF COM radio between 8.33 KHz and 25 KHz.

Pushing this LSK displays the RADIO 1/2 page.

Displays the COM MEMORY 1/2 page.


Gulfstream V

OPERATING MANUAL

4. COM Memory 1/2 Page

The radio tuning function supports 12 memories per radio type (i.e., COM, NAV, HF COM, etc.) displayed on two pages each. In addition to entering or dialing-in frequencies for each memory, a text label of up to eight characters can be entered for each stored frequency (except for the HF COM memory page, which does not support labels due to display area limitations). The default label for each memory is "MEMORY," a dash, and the memory number, with the memory number always on the outboard edge of the display.

Active VHF COM frequency on the selected radio (the field title reflects which COM radio was selected). Pushing LSK 1L copies the field containing the format cursor into the active frequency and moves the previously active frequency into the preset field (not shown on this page). A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

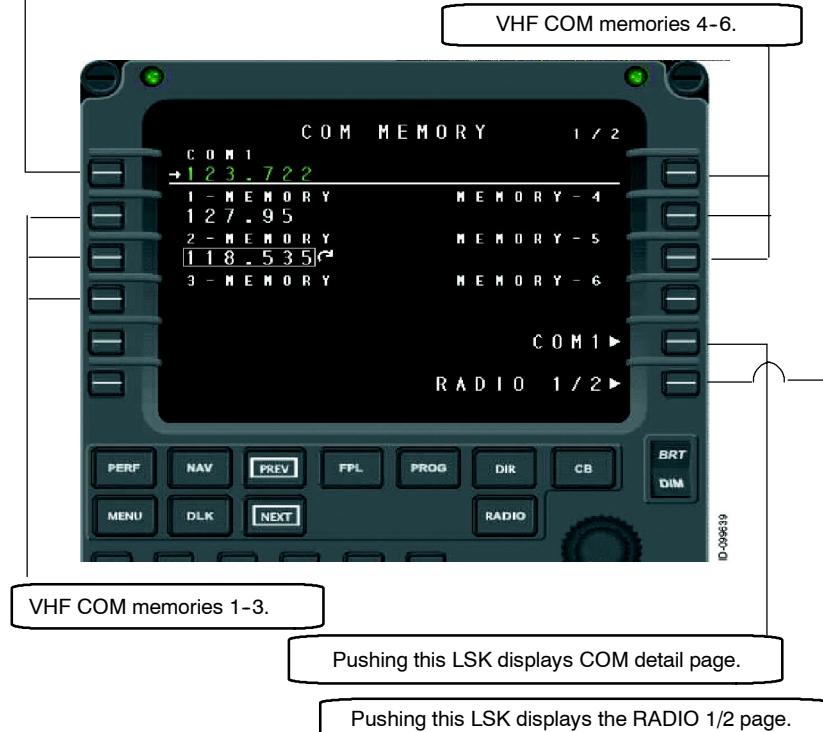

Labels are entered by typing into the scratchpad and pushing the line select key adjacent to the desired frequency. If the radio tuning function determines that the entry is a valid frequency for the radio, the entry is accepted into the frequency field. If not, the entry is considered a label and is entered into the label field above the frequency. A label can be replaced by making another scratchpad entry into a memory field, or by pushing the DEL key. Pushing the DEL key places the text "DELETE" in the scratchpad and, when entered on a

2B-08-00

DIGITAL AUTOMATIC FLIGHT CONTROL SYSTEMS


Gulfstream V

OPERATING MANUAL

memory field, deletes the associated text label, returning it to the default. If the DEL key is used on a memory where there is no user-entered label, and the frequency is deleted from memory.

Access to COM MEMORY 2/2, described below, is via the NEXT and PREV function keys.

Active VHF COM frequency on the selected radio (the field title reflects which COM radio was selected). Pushing LSK 1L copies the field containing the format cursor into the active frequency and moves the previously active frequency into the preset field (not shown on this page). A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

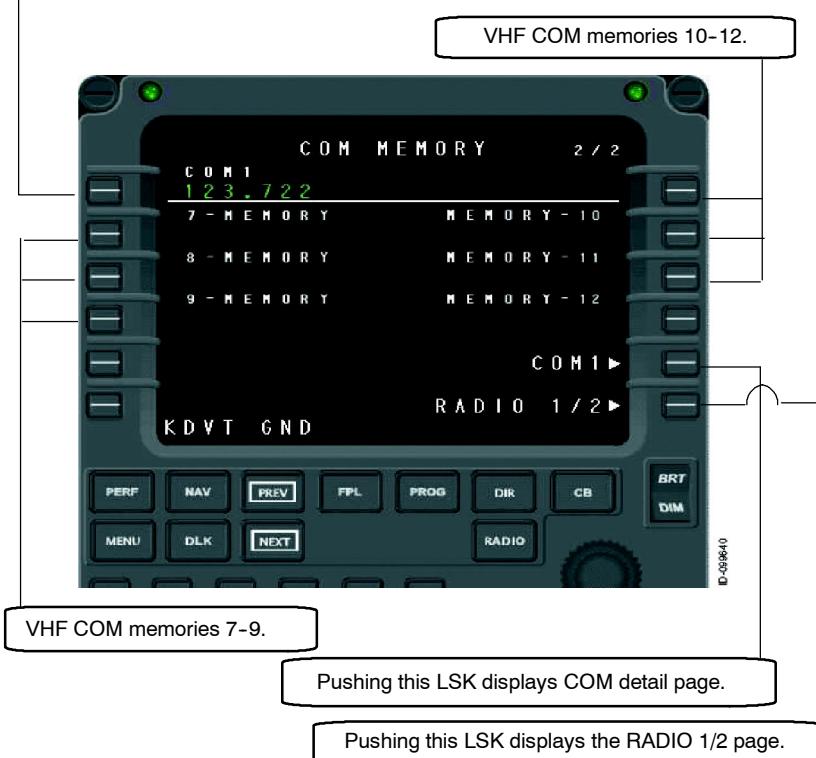

Gulfstream V OPERATING MANUAL

5. NAV1 Page


The NAV1 page, described below, is used to access and control VHF navigation radios, FMS automatic tuning, and DME hold mode. The format cursor defaults to the memory tuning field (4L), providing quick access to stored frequencies. The page can also access to the NAV memory pages.

Gulfstream V

OPERATING MANUAL

Active VHF NAV frequency on the selected radio (the page title reflects which NAV radio was selected). Pushing LSK 1L exchanges the active and preset frequencies (when the format cursor is on field 2L) or copies a frequency stored in memory (when the format cursor is on field 4L) for the selected NAV radio. A scratchpad entry into the field replaces the preset frequency with the previously active frequency.


Pushing this LSK toggles the FMS autotune feature ON and OFF for the selected VHF NAV radio.

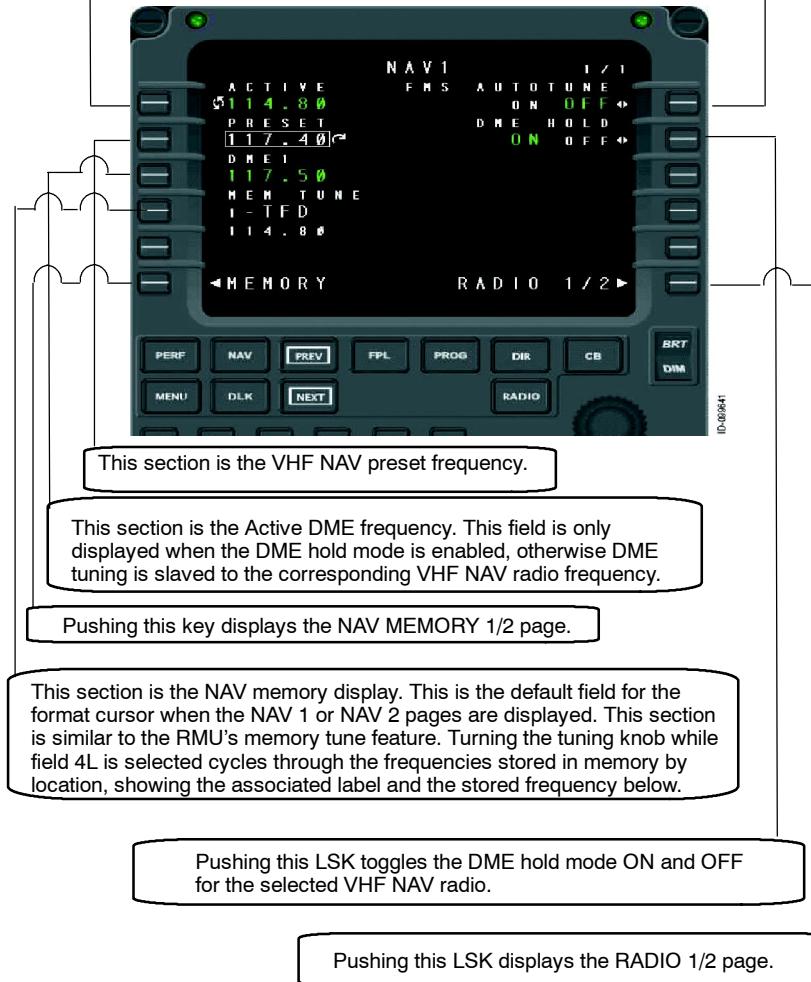

Gulfstream V OPERATING MANUAL

As with the other radio types, the radio tuning function supports 12 navigation radio memories displayed on two pages. In addition to entering or dialing-in frequencies for each memory, a text label of up to eight characters may be entered for each stored frequency. The default label for each memory is "MEMORY," a dash, and the memory number, with the memory number always on the outboard edge of the display, as described below.

Active NAV COM frequency on the selected radio (the field title reflects which NAV radio was selected). Pushing LSK 1L copies the field containing the format cursor into the active frequency and moves the previously active frequency into the preset field (not shown on this page). A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

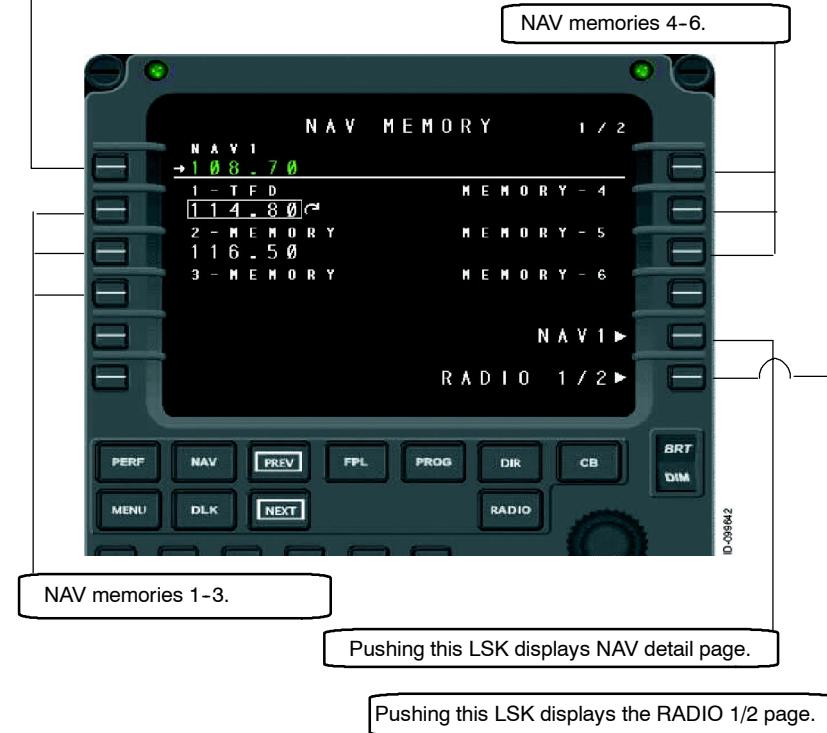

Labels are entered by typing into the scratchpad and pressing the line select key adjacent to the desired frequency. If the radio tuning function determines that the entry is a valid frequency for the radio, the entry is accepted into the frequency field. If not, the entry is considered a label and is entered into the label field above the frequency. A label may be replaced by making another scratchpad entry into a memory field, or by pressing the DEL key. Pressing the DEL key places the text "DELETE" in the scratchpad and, when entered on a memory field, deletes the associated text label, returning it to the default. If the DEL key is used on a memory where there is no user-entered label, the frequency is deleted from memory.

2B-08-00


DIGITAL AUTOMATIC FLIGHT CONTROL SYSTEMS

Gulfstream V

OPERATING MANUAL

Access to the NAV MEMORY 2/2, described below, is via the NEXT and PREV function keys.

Active VHF NAV frequency on the selected radio (the field title reflects which NAV radio was selected). Pushing LSK 1L copies the field containing the format cursor into the active frequency and moves the previously active frequency into the preset field (not shown on this page). A scratchpad entry into the field replaces the preset frequency with the previously active frequency.

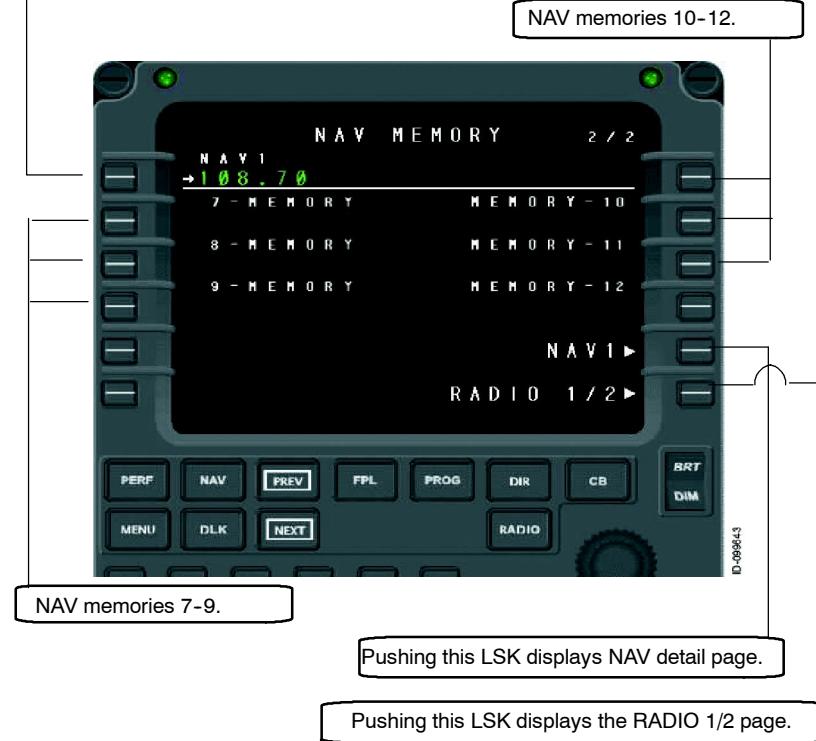

Gulfstream V OPERATING MANUAL

2B-08-40: TCAS/XPDR 1/2

The TCAS/XPDR 1/2 detail page, described below, accesses the controls and data specific to the transponder and TCAS systems, including transponder code, source selections, and operating mode. It also provides a display of the pressure altitude being transmitted and the flight ID. The format cursor defaults to the transponder code preset (4L), which defaults to 1200 (VFR).

TCAS/XPDR 2/2 can be accessed via the NEXT or PREV function keys.

Gulfstream V

OPERATING MANUAL

This section displays the active transponder code and reply indicator. Pushing LSK 1L exchanges the active and preset codes. A scratchpad entry into the field replaces the preset frequency with the previous active frequency.

This section displays the current flight ID. This can be entered by the crew or it is received from the FMS.

This section displays the currently reported pressure altitude.



This section displays the preset transponder code.

This LSK is used to manually select the air data source used for altitude reporting. This line shows an example of an aircraft equipped with 3 air data sources, although this varies by installation.

This LSK is used to select the active transponder, if more than one is installed. This varies by installation.

Pushing this LSK displays the RADIO 1/2 page.

Gulfstream V

OPERATING MANUAL

1. TCAS/XPDR 2/2

The TCAS/XPDR 2/2 page, described below, is used to control the TCAS/transponder operating mode, the altitude range used for display of TCAS targets, and ADS-B (if installed). The format cursor is not displayed on this page.

This section displays the Active TCAS/transponder mode. TA/RA is the typical setting, while the TA setting inhibits resolution advisories and the ALT-ON and ALT-OFF settings turn off TCAS alerts altogether.

ALT-ON selects transponder mode C operation, while ALT-OFF selects mode A only. The selection for standby is on the RADIO 1/2 page.

Pushing this LSK displays the RADIO 1/2 page.



ID 099645

This LSK selects the altitude range for TCAS target display. Normal includes the typical TCAS detection range, while above and below extend the range in the selected direction. EXTD extends the range in both directions.

This LSK selects absolute or relative altitude display for TCAS targets.

This LSK turns ADS-B on or off.

Gulfstream V

OPERATING MANUAL

2B-08-50: HF COM 1/1

The HF communications detail page, described below, is used to control HF tuning (manually and from memory), HF tuning mode selection, transmit power selection, squelch, and to select the operating mode. The tuning functions work just like the VHF COM selections, but each of the tuning modes that HF radios provide: simplex, split (duplex), emergency, and ITU (channel numbers) is also selectable on this page.

The preset field (2L) is not used when the tuning mode is set to split (duplex), because that field is used to display and tune the active receive frequency, while 1L displays the desired transmit frequency.

When tuning from the memory field (3L), the active tuning mode is set to match the stored frequency when it is selected. For example, in Figure NO TAG, the active tuning mode is ITU, but the selected memory location displayed in 3L is a simplex frequency. Pushing LSK 3L to move the format cursor to the memory field, then pushing LSK 1L to make the memory value active, changes the selected tuning mode from ITU to simplex (with frequency 20950 selected).

This section displays and controls the Active frequency or ITU channel number and operating mode. Pushing LSK 1L exchanges the active and preset frequencies (when the format cursor is on field 2L) or copies a frequency stored in memory (when the format cursor is on field 3L) for the selected HF radio. A scratchpad entry into the field replaces the preset frequency with the previous active frequency.

This section displays and controls the squelch level selection.

This section displays and controls the transmit power selection.



Gulfstream V OPERATING MANUAL

This section displays and controls the HF memory display. This is the default field for the format cursor when the HF 1 or HF 2 pages are displayed. Turning the tuning knob while field 3L is selected cycles through the frequencies stored in memory, by location.

This section displays and controls HF COM preset frequency (when in simplex, emergency, or ITU tuning modes) or HF COM receive frequency (when in split tuning mode). The preset feature is not available when in split mode.



This section displays the HF MEMORY 1/2 page.

This section contains Active frequency mode. The LSK can be used to select simplex, split (duplex), emergency, and ITU tuning modes.

The receive frequency is stored for the selected memory location when the memory contains a split frequency.

Pushing this LSK displays the RADIO 1/2 page.

This LSK is used to select the operating mode: upper sideband voice (UV), lower sideband voice (LV), or amplitude modulated (AM).

Gulfstream V

OPERATING MANUAL

1. HF MEMORY 1/2

The HF MEMORY 1/2 and 2/2 pages, described below (HF MEMORY 1/2 only), work like the VHF COM and VHF NAV memory pages, but have a slightly different appearance due to the need to support two line frequency displays (for split mode tuning). As a result, space limitations do not allow assigning labels to HF memory locations. This should not be a problem since HF is generally used while trans-oceanic and in remote areas where the frequencies to be used are different for each flight.

The HF memory pages each contain the active HF frequency, six stored frequencies, and controls for changing the tuning and operating modes for each memory.

Access to HF MEMORY 2/2 is via the NEXT or PREV function keys.

Gulfstream V OPERATING MANUAL

These areas display and control stored HF COM memories 1-3 (7-9 on HF MEMORY 2/2). When a memory field contains a split frequency pair, the first push of the associated line select key moves the format cursor to the first frequency, the second push moves it to the second frequency field 3L as shown.

This LSK displays and controls the Active HF COM frequency on the selected radio (the field title reflects which radio was selected). Pushing LSK 1L copies the field containing the format cursor into the active frequency and moves the previously active frequency into the preset field (not shown on this page). A scratchpad entry into the field replaces the preset frequency with the previous active frequency.



This section is used to select Operating mode for the frequency highlighted by the format cursor.

This section contains and controls the tuning mode selection for the frequency highlighted by the format cursor.

Tuning mode selection for the frequency highlighted by the format cursor.

Pushing this LSK displays the RADIO 2/2 page.

Gulfstream V
OPERATING MANUAL

2B-08-60: ADF 1 PAGE

The ADF page, described below, displays the active, preset, and selected memory frequencies for the automatic direction finders, along with controls for the active mode (antenna or ADF) and the BFO setting (ON or OFF). It is also used to the ADF memory pages.

Gulfstream V

OPERATING MANUAL

This section displays the ADF preset frequency.

This section displays and controls the Active ADF frequency on the selected radio (the page title reflects which ADF was selected). Pushing LSK 1L exchanges the active and preset frequencies (when the format cursor is on field 2L) or copies a frequency stored in memory (when the format cursor is on field 3L) for the selected ADF radio. A scratchpad entry into the field replaces the preset frequency with the previous active frequency.

Pushing this LSK toggles the ADF operating mode for the selected ADF.



Pushing this LSK displays the ADF MEMORY 1/2 page.

This section displays and controls the ADF memory display. This is the default field for the format cursor when the ADF X page is displayed. Turning the tuning knob while field 3L is selected, cycles through the frequencies stored in memory by location, showing the associated label and the stored frequency below.

Pushing this LSK displays the RADIO 2/2 page.

Pushing this LSK toggles the BFO setting for the selected ADF.

Gulfstream V

OPERATING MANUAL

1. ADF Memory

As with the other radio types, the radio tuning function supports 12 ADF memories displayed on two pages. In addition to entering or dialing-in frequencies for each memory, a text label of up to 8 characters may be entered for each stored frequency. The default label for each memory is "MEMORY", a dash, and the memory number, with the memory number always on the outboard edge of the display. The ADF Memory page is described below.

Labels are entered by typing into the scratchpad and pushing the LSK adjacent to the desired frequency. If the radio tuning function determines that the entry is a valid frequency for the radio, the entry is accepted into the frequency field. If not, the entry is considered a label and is entered into the label field above the frequency. A label can be replaced by making another scratchpad entry into a memory field, or by pushing the DEL key. Pushing the DEL key places the text "DELETE" in the scratchpad and, when entered on a memory field, deletes the associated text label, returning it to the default. If the DEL key is used on a memory where there is no user-entered label, the frequency is deleted from memory.

Access to the ADF MEMORY 2/2 page is via the NEXT and PREV function keys.

Gulfstream V

OPERATING MANUAL

These sections display the ADF memories 1-3 (7-9 on ADF MEMORY 2/2).

This section displays and controls the Active ADF frequency on the selected radio (the field title will reflect which radio was selected). Pushing LSK 1L copies the field containing the format cursor into the active frequency and moves the previously active frequency into the preset field (not shown on this page). A scratchpad entry into the field replaces the preset frequency with the previous active frequency.

These sections display the ADF memories 4-6 (10-12 on ADF MEMORY 2/2).



Pushing this LSK displays the RADIO 2/2 page.

Pushing this LSK displays ADF detail page.

Gulfstream V

OPERATING MANUAL

2B-08-70: MLS1 PAGE

The MLS page, shown in Figure 39, shows the currently tuned procedure and a preset, azimuth and back-azimuth, and glidepath angle, and allows setting of the operating mode (automatic/manual) and azimuth selection (azimuth or back-azimuth). It also provides access to the MLS memory pages.



Figure 39

Unlike the detail pages for the other radios, the MLS page does not support the fast memory tuning operation in field 3L.

Gulfstream V
OPERATING MANUAL

1. MLS Memory Pages

The MLS memory pages, **FINISH THIS SECTION**

Figure 40

2B-08-00

Page 40
Oct 1/97

DIGITAL AUTOMATIC FLIGHT CONTROL SYSTEMS

Gulfstream V

OPERATING MANUAL

2B-08-80: RADIO INTERACTIONS

The MCDU radio tuning function communicates with the radio units using a bi-directional protocol. The radio tuning function expects to receive an acknowledgement when the radio is successful in completing each tuning command.

A typical interaction begins with the user entering or dialing in a new frequency for a radio. The MCDU sends the appropriate tuning command to the specified radio and awaits confirmation. If no confirmation is received within the timeout period, the frequency display on the page is changed to **amber** and a scratchpad message is issued as shown in Figure 41).



Figure 41

The pilot can attempt to tune the radio again, in the event that the fault was transient or has been cleared by crew action. This is also important in the event that the radio is receiving the command and is, in fact, tuning the radio, but is unable to respond to the MCDU.

Gulfstream V OPERATING MANUAL

2B-08-90: ANNUNCIATION MESSAGES

1. RADIO 1/2 Annunciations

A variety of annunciations appear on the radio tuning pages, many of which are shown in Figure 42.



Figure 42

Gulfstream V
OPERATING MANUAL

Table 33 describes the annunciators on RADIO 1/2.

Annunciator	Description
25K	Indicates that the associated VHF COM radio is set to 25KHz frequency spacing. When not present, the radio is tuning with 8.33KHz frequency spacing.
DME H xxx	This alert Indicates that the VHF navigation radio is tuning the corresponding DME receiver independently of the primary navigation frequency.
IHBT	This annunciator Indicates that tuning of the radio is inhibited, usually from a remote source (such as an emergency tuning function).
MICSTK	Indicates that the microphone button on the radio has been down long enough that the radio has identified it as "stuck" in the transmit position.
SQ	This annunciator Indicates that the squelch feature for the radio is active.
TX	This annunciator Indicates that the radio is currently transmitting.

RADIO 1/2 Annunciator Descriptions
Table 33

Gulfstream V OPERATING MANUAL

2. RADIO 2/2 Annunciations

A variety of annunciations appear on the radio tuning pages, many of which are shown in Figure 42.



Figure 43

Gulfstream V
OPERATING MANUAL

Table 34 describes the annunciators on RADIO 2/2.

Annunciator	Description
ANT	The ADF radio is in antenna mode.
ARM	An MLS procedure is armed.
BFO	The ADF radio is operating in BFO mode.
CW	This annunciator Indicates that the radio is currently transmitting.
IHBT	Indicates that tuning of the radio is inhibited, usually from a remote source (such as an emergency tuning function). In the case of two HF radios sharing a single antenna, transmitting and/or receiving may be inhibited periodically when the other HF radio has recently performed a transmit operation.
ITU	This annunciator Indicates that the radio is currently transmitting.
LO	The radio is set to low squelch.
M	An MLS parameter has been set manually.
MED	The radio is set to medium squelch.
RX	Indicates that the radio is currently receiving.
SQ	This annunciator Indicates that the squelch feature for the radio is active.
TX	This annunciator Indicates that the radio is currently transmitting.
TX LO	The radio is transmitting with low power.
TX MED	The radio is transmitting with medium power.
VOICE	The ADF radio is in voice mode.
WARN	There is a problem with the azimuth, back-azimuth, or glidepath data for the MLS procedure.

RADIO 2/2 Annunciator Descriptions
Table 34

Gulfstream V

OPERATING MANUAL

3. Scratchpad Messages

The scratchpad messages described in table , may be generated by the radio tuning function. In the process of implementing this function, other required messages may come to light.

Table 34 describes the annunciators on RADIO 2/2.

Annunciator	Description
DELETE	This annunciator Indicates that the value in the scratchpad is deleted.
INVALID ENTRY	This annunciator Indicates that the entry in the scratchpad is invalid.
SQNO RESPONSE FROM RADIO	This annunciator Indicates that the squelch noise is coming from the radio.
STUCK MICROPHONE	This annunciator Indicates that the microphone key is stuck.

RADIO 2/2 Annunciator Descriptions
Table 35