



ASKEY MOBILE COMPUTER

RC40 User Guide

Powered by Android™ 14

Copyright © 2025, Askey Computer Corp. All rights reserved.

ABOUT

The RC40 rugged mobile computer is designed and manufactured by Askey Computer Corporation. Featuring the Qualcomm® QCM 4490 processor to offer the latest in processing power and excellent performance, along with integrated bar code scanning data capture from Honeywell with the N5703SR standard range, or optional advanced long range N6803LR bar code imagers for outstanding automatic data capture capabilities.

RC40 equips wireless 5G NR to offer the best possible voice and data performance inside and outside your operations, fast Wi-Fi connectivity with IEEE 802.11a/b/g/n/ac/d/r/k/h/i/w/v/ax include 2.4GHz/5GHz/6GHz; CBRS (Citizens Broadband Radio Service) with LTE and 5G private network (CBRS), to improve coverage, security, QoS; Bluetooth 5.2 with Bluetooth low energy; NFC (Near Field Communication); front 8MP AF and rear 16MP AF cameras; USB-C connector to support charge and communication; and support PTT (Push To Talk) feature.

RC40 supports warm swap field battery replacement to help to reduce the data loss risk when power runs out and eliminating the need to take the device out of use for charging.

Due to continuous product development, the SW and this guide will keep updating to give you a better user experience. Information in this document is subject to change without notice.

Copyright

Copyright © 2025, Askey Computer Corp. All rights reserved.

TradeMark

Google, Android, Google Play and other marks are trademarks of Google LLC.

All other trademarks are the property of their respective owners.



REVISION HISTORY

Issued Number	Issued Date	Author	Description
Draft	2024/7/9	M. Tsai	Draft version for template
V 0.0.1	2025/4/14	M. Tsai	To add more information and update wording.
V 0.0.2	2025/5/14	M. Tsai	Update more information
V 0.0.3	2025/5/15	M. Tsai	1. Update line for laser warning wording
V 0.0.4	2025/6/5	M. Tsai	1. Add FCC power value & freq. range



CONTENT LIST

About	1
Revision History	2
Content List	3
1. Important Notices and Precautions	8
1.1 Regulatory Guide	8
1.1.1 Federal Communication Commission Interference Statement	8
1.1.2 Industry Canada statement	9
1.2 Safety Guide	12
1.3 Customer Support	17
1.4 Product warranty	18
2. Getting started	19
2.1 Introduce	19
2.2 Prouction Detail	19
2.3 Package Content	24
2.4 Accessory (available for purchase)	24
2.5 Installation	24
2.5.1 Install/Remove Battery	24
2.5.2 Install/Remove SIM/SD Card	26
2.5.3 Charging Cradle	28
2.5.4 USB Charger	33
3. Basic operation	35
3.1 Power on/off the Device	35
3.2 Welcome	35
3.3 Battery	36
3.3.1 Main Battery	36
3.3.2 Backup Battery	36
3.3.3 Battery Status	36



3.3.4	Low Battery Alert	37
3.3.5	Main Battery SWAP	37
3.3.6	Battery OverHeat protection	39
3.3.7	Battery management	40
3.4	Memory	42
3.4.1	Storage Management	43
3.4.2	Data Transferring	44
3.5	Phone	45
3.5.1	Phone Application	45
3.5.2	Contact add	45
3.5.3	During calling	46
3.5.4	Incoming call	47
3.5.5	Recents	47
3.5.6	Call Settings	48
3.6	Display	48
3.6.1	Home	49
3.6.2	Touch Panel control	50
3.6.3	Lock and Unlock Screen	50
3.7	Data Capture	51
3.7.1	EZwedge	51
3.7.2	Barcode Scanning	67
3.8	Camera	68
3.8.1	Camera Function	68
3.8.2	Photos Taking Function	68
3.8.3	Video Recording Function	69
3.8.4	Settings	69
4.	Settings	72
4.1	Display	72
4.1.1	Brightness	72
4.1.2	Lock Display	72
4.1.3	Interaction	73



4.2	Notification	74
4.2.1	Manage	74
4.2.2	Conversation	75
4.2.3	Show Notification	75
4.2.4	General	75
4.3	Sound & Vibration	76
4.3.1	Audio Output	76
4.3.2	Volume	77
4.3.3	Vibration	78
4.4	Wallpaper	79
4.5	Accessibility	80
4.5.1	SCREEN READER	80
4.5.2	DISPLAY	80
4.5.3	INTERACTION CONTROLS	81
4.5.4	CAPTIONS	81
4.5.5	AUDIO	82
4.5.6	GENERAL	82
4.6	SECURITY	83
4.6.1	Security status	83
4.6.2	Device Security	84
4.7	Privacy	84
4.8	Location	86
4.8.1	Go to "Location" settings	86
4.8.2	Enable or disable location	86
4.8.3	App location permission management	87
4.8.4	4App location permission management	87
4.9	Safety & Emergency	87
4.10	Passwords & accunts	89
4.10.1	PASSWORD	89
4.10.2	AUTOFILL SERVICE	90
4.10.3	ACCOUNTS FOR OWNER	90



4.11	Digital wellbeing & parental control	92
4.12	GOOGLE	94
4.13	System	97
4.14	MAGIC KEYS	98
5.	Connection	102
5.1	Internet	102
5.2	Wi-Fi	104
5.3	BT	108
5.4	NFC	111
6.	Application deployment	113
6.1	EZClone Workstation User Guide	113
6.1.1	DownLoad	113
6.1.2	Install	113
6.1.3	Main Function	115
6.1.4	Settings Page	116
6.1.5	Provisioning Page	119
6.1.6	QR Codes Page	120
6.1.7	Export Page	122
6.1.8	Import Page	123
6.1.9	Theme Page	124
6.1.10	About Page	125
6.1.11	Device EZclone APP	125
6.1.12	Start firmware upgrade	126
6.1.13	Upgrade software version through system Settings	128
6.2	EZ PTT User Guide	131
6.2.1	About PTT	131
6.2.2	Main Function	131
6.2.3	Group Calls	132
6.2.4	Contacts Page	135
6.2.5	Private calls	136



6.2.6	Settings Page	136
7.	Accessories	138
7.1	Install Hand Strap (need to purchase add-on accessory)	138
7.2	Install Pistol (need to purchase add-on accessory)	138
8.	Maintain and Trouble shooting	141
8.1	Maintaince	141
Appendix		142



1. IMPORTANT NOTICES AND PRECAUTIONS

1.1 REGULATORY GUIDE

1.1.1 FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Application	Frequency Range	Power
NFC	13.56 MHz	30 dBuV/m at 30m



Bluetooth	2400-2485 MHz	-6 ~ 4 dBm
Wireless Lan (802.11 a/b/g/n/ac/ax)	2400-2485 MHz	< 30 dBm
	5150-5250 MHz	< 30 dBm
	5250-5350 MHz	< 24 dBm
	5470-5725 MHz	< 24 dBm
	5745-5825 MHz	< 30 dBm
	5925-7125 MHz	< 24 dBm
LTE	B2,B4,B5,B12,B13,B14,B17,B25,B26,B30, B38,B41,B42,B43,B48,B53,B66,B70,B71	< 23 dBm
5G NR	n2,n5,n7,n12,n13,n14,n25,n26,n30,n38, n48,n53,n66,n70,n71	< 23 dBm
	N41,n77,n78	< 26 dBm

1.1.1.1.1 FOR PORTABLE DEVICE USAGE

Radiation Exposure Statement:

The product complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

1.1.1.1.2 BODY-WORN OPERATION

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

1.1.1.1.3 FOR 6XD (INDOOR CLIENT)

Transmitters in the 5.925-7.125 GHz band are prohibited from operating to control or communicate with unmanned aircraft systems.

1.1.2 INDUSTRY CANADA STATEMENT



This device complies with ISSED's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d' ISSED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Caution:

(i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

(ii) where applicable, antenna type(s), antenna models(s), and worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in section 6.2.2.3 shall be clearly indicated.

Avertissement:

Le guide d'utilisation des dispositifs pour réseaux locaux doit inclure des instructions précises sur les restrictions susmentionnées, notamment :

(i) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

(ii) lorsqu'il y a lieu, les types d'antennes (s'il y en a plusieurs), les numéros de modèle de l'antenne et les pires angles d'inclinaison nécessaires pour rester conforme à l'exigence de la p.i.r.e. applicable au masque d'élévation, énoncée à la section 6.2.2.3, doivent être clairement indiqués

1.1.2.1 FOR PORTABLE DEVICE USAGE

Radiation Exposure Statement:

The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF



exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Déclaration d'exposition aux radiations:

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

1.1.2.2 BODY-WORN OPERATION

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

Cet appareil a été testé pour un fonctionnement porté sur le corps. Pour respecter les exigences d'exposition aux radiofréquences, une distance minimale de 5 mm doit être respectée entre le corps de l'utilisateur et le combiné, antenne comprise. Les clips de ceinture, étuis et accessoires similaires d'autres marques utilisés avec cet appareil ne doivent contenir aucun composant métallique. Les accessoires portés sur le corps qui ne répondent pas à ces exigences peuvent ne pas être conformes aux exigences d'exposition aux radiofréquences et doivent être évités.

1.1.2.3 FOR 6E STATEMENT IN MANUAL

RSS-248 Issue 3 General statement (all equipment class)

- Devices shall not be used for control of or communications with unmanned aircraft systems.

- Devices shall not be used on oil platforms.



- Devices shall not be used on aircraft, except for the low-power indoor access points, indoor subordinate devices, low-power client devices, and very low-power devices operating in the 5925-6425 MHz band, that may be used on large aircraft as defined in the Canadian Aviation Regulations, while flying above 3,048 metres (10,000 feet).

- Devices shall not be used on automobiles.

- Devices shall not be used on trains.

- Devices shall not be used on maritime vessels.

- Les dispositifs ne doivent pas être utilisés pour commander des systèmes d'aéronef sans pilote ni pour communiquer avec de tels systèmes;

- Les dispositifs ne doivent pas être utilisés sur les plateformes de forage pétrolier;

- Les dispositifs ne doivent pas être utilisés dans les aéronefs, à l'exception des points d'accès intérieurs de faible puissance, des dispositifs subordonnés intérieurs, des dispositifs clients de faible puissance et des dispositifs de très faible puissance fonctionnant dans la bande de 5 925 à 6 425 MHz, qui peuvent être utilisés dans les gros aéronefs tel qu'il est défini dans le Règlement de l'aviation canadien, et ce, lorsqu'ils volent à une altitude supérieure à 3 048 mètres (10 000 pieds).

- Les dispositifs ne doivent pas être utilisés dans les automobiles;

- Les dispositifs ne doivent pas être utilisés dans les trains;

- Les dispositifs ne doivent pas être utilisés sur les navires maritimes.

1.2 SAFETY GUIDE



Laser Devices

Class 2 laser scanners use a low power, visible light diode. As with any very bright light source such as the sun, the user should avoid staring directly into the light beam. Momentary exposure to a Class 2 laser is not known to be harmful.




CAUTION: Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous laser light exposure.

 LASER LIGHT- DO NOT STARE INTO BEAM. CLASS 2 LASER PRODUCT.

 RAYONNEMENT LASER- NE PAS REGARDER DANS LE FAISCEAU. PRODUITS LASER DE CLASS 2.



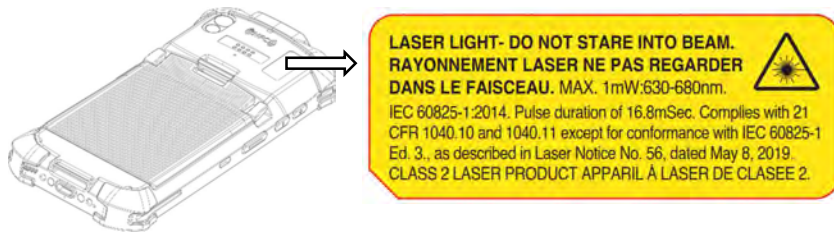

Complies with 21 CFR 1040.10 and 1040.11 except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019.

MAX. 1mW:630-680nm.

LASER RADIATION

DO NOT STARE INTO BEAM

CLASS 2 LASER PRODUCT

CONSUMER LASER PRODUCT

EN 50689:2021

ASKEY TECHNOLOGY (JIANGSU) LTD., No.1388, Jiao Tong Road, Wu Jiang Economic-Technological Development Area, Jiangsu Province 215200, P.R.C. provided on the housing (enclosure) of the product, outside of the package, container, user manuals or product's directions for user per 21CFR 1010.3(1) and Laser Notice No. 53.

LED Devices

Classified as 「EXEMPT RISK GROUP」 according to IEC 62471:2006 and EN 62471:2008.

Power Supply

Use ONLY a ASKEY approved Nationally Recognized Test Laboratory (NRTL) Certified ITE (LPS/SELV) power supply with electrical ratings:

Please contact the retailer to inquire about purchasing power supplies.

Battery

Rechargeable batteries contain scarce, valuable recyclable resources. We kindly ask for your cooperation in recycling to promote reuse of these resources.



The crossed-out wheeled bin is applicable for EU member status only.

Used rechargeable battery must not be disposed of as combustibles. Contact your nearest battery recycling centre or local sales office for information on disposal procedures.

Never disassemble or break down rechargeable batteries.



Use only ASKEY approved batteries. Accessories which have battery charging capability are approved for use with the following battery models:

For use with RC40 Rugged Mobile Computer

For use with rechargeable lithium-ion battery pack (mfr.: FUJI ELECTRONICS (SHENZHEN) CO LTD / model: RC40-BR-SBL500 / nominal voltage: 3.85 Vdc, nominal capacity: 5000 mAh, 19.25 Wh, rated capacity: 4900 mAh, 18.865 Wh)



CATUION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



ATTENTION : Remplacer la batterie par un type de batterie inadap   pr  sente un risque d'explosion.



Handling battery

Failure to follow all instructions listed below may cause electrical shock, overheating, smoking, fire, or an explosion.

- Never disassemble or modify the battery.
- Do not stick a needle into the battery, hammer at it, or tread on it.
- Avoid dropping or throwing the battery or letting it undergo any shock or impact.
- Do not use significantly damaged or deformed batteries. Do not use batteries when they are subject to the impact, for example, a drop impact.
- Never connect the positive and negative terminals of the battery with a wire or other metallic materials.
- Do not carry or store the battery together with ballpoint pens, necklaces, coins, hairpins, or anything else metallic.
- Never place the battery into or soak it in water or seawater.
- Never burn or heat up the battery.
- Do not use or leave the battery in places where there is excessively high temperature (60 °C or higher) such as near fire or heater.
- Do not use or store the battery in places exceeding the service or storage temperature.
- Never charge the battery near a fire or in strong sunlight. Raised battery temperature may result in leakage of battery fluid, blowout, or combustion.
- Never charge or use the battery where any inflammable gases may be emitted.
- Never apply solder directly to the battery.
- Do not use batteries other than the specified ones.
- If the battery fluid leaked from the battery gets into the eyes, wash thoroughly with clean water such as tap water without rubbing and obtain medical treatment immediately. Failure to do so will result in eye injuries.
- During use, charging, or storage of the battery, if odors come from the battery, the battery is overheated, discolored, deformed, or anything unusual is found, unload the battery. Do not use the battery.
- If the battery does not finish recharging within the specified time, stop recharging.



Handling the RC40

Incorrect handling of the RC40 could cause electric shock, impaired vision, skin problems, injury, burns and generation of heat and smoke from the RC40. Be sure to observe the following to use the device correctly.

- Never disassemble or modify the RC40.
- When the RC40 is subject to the strong impact, for example, a drop impact, check the case for any damage and the battery for damage and leakage.
Never use a damaged case.
Never use a damaged or leaked battery.



- Do not insert any foreign materials into the battery cartridge.
- Do not get the RC40 wet or put it in water or seawater.
- Never put the RC40 in a microwave oven or high-pressure container. Never put it on the induction cooktop.
- Never put the RC40 in places where there are excessively high temperatures, such as inside closed-up automobiles, or in places exposed to direct sunlight.
- Avoid using the RC40 in extremely humid or dusty areas, or where there are drastic temperature changes.
- If smoke, abnormal odor or noise comes from the RC40, immediately turn off the power and remove the battery cartridge from the scanner case.
- If the LCD screen is broken by mistake, care must be taken not to get the liquid crystal into your eyes or mouth or drop it on your skin.
- Be careful of broken glass if the LCD screen is accidentally cracked or broken. It may cause bodily injury.
- If the LCD screen is accidentally broken and liquid crystal gets into your eyes or mouth, wash it off immediately with clean water and then seek medical care.
- Never stare into the reading window.

Battery SAFETY INSTRUCTIONS

CAUTION: Read these instructions carefully to ensure safe operation.

Read and keep these instructions. Heed all warnings. Follow all instructions.

- 1) Do not use this apparatus near water.
- 2) Clean only with dry cloth.
- 3) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
- 4) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 5) Do not defeat the safety purpose of the polarized or grounding-type plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 6) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 7) Only use attachments/accessories specified by the manufacturer.
- 8) Unplug this apparatus during lightning storms or when unused for long periods of time.



- 9) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Safety precautions

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

- 1) WARNING---To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 2) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 3) The apparatus shall be operated in open space.
- 4) A warning that an apparatus with CLASS 1 construction shall be connected to a MAINS socket outlet with a protective earthing connection.
- 5) For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- 6) Power Supply Cord Selection: Suitable power supply cord for is 1.5-3.0 m long, rated minimum 250 V, minimum 3.5 A, Type NISPT-2 a, SPT-2, SV, SVT, SVE, SJ, SJT, SJE flexible cord. One end terminates in a parallel blade (NEMA 5-15P) grounding type attachment plug. Other end terminates in Appliance Inlet Coupler.

1.3 CUSTOMER SUPPORT



Technical Support

If you have any technical problem, please report to SupportUSA@askey.com, AIC will response it within 24 hrs.

Please provide the following information

- Serial number
- Date of purchase
- Model or product name (such as RC40)
- Software version if it is available
- Problem description

If we can identify that is a hardware problem, we will ship the replacement in advance to suit your need before receiving your faulty unit. Please ship out the faulty unit to Askey within 5 days after your report.

Customer Service

Askey International Corp have an official Webpage which you can submit enquiries or technical questions that we will feedback to you with 5 business days. Go to Askey.com and select Contact Askey > contact us > technical Support.

1.4 PRODUCT WARRANTY

Subject to the terms of Askey's hardware warranty statement, the RC40 is warranted against defects in workmanship and materials for a period of 1 year from the date of shipment. For the complete warranty statement, please visit:

<https://www.askey.com.tw/products-detail/RC40/>

Any inappropriate use of this product, such as incorrect charging, ransomware install, abuse, or other behavior not follow the user guide, are not covered under ASKEY warranty.



2. GETTING STARTED

2.1 INTRODUCE

Similar in styling and comfort to a smartphone. The RC40 is designed to keep your Enterprise business running a peak efficiency to outsmart your competition without having to outspend them. A pocket-friendly design conceals a rugged form factor and purpose-built features capable of meeting any size business challenge, the Askey RC40 offers an enterprise grade blend of performance and user-friendly design empowering teams to access applications, information and people to get the job done, wherever the job takes them.

The Askey RC40 handheld mobile computer features cutting-edge processing power, seamless connectivity, integrated data collection and built for your business to outlast the unconscious abuse in your enterprise, while maintaining a sleek smartphone form factor.


2.2 PRODUCTION DETAIL

OVERVIEW



RC40 Mobile Computer



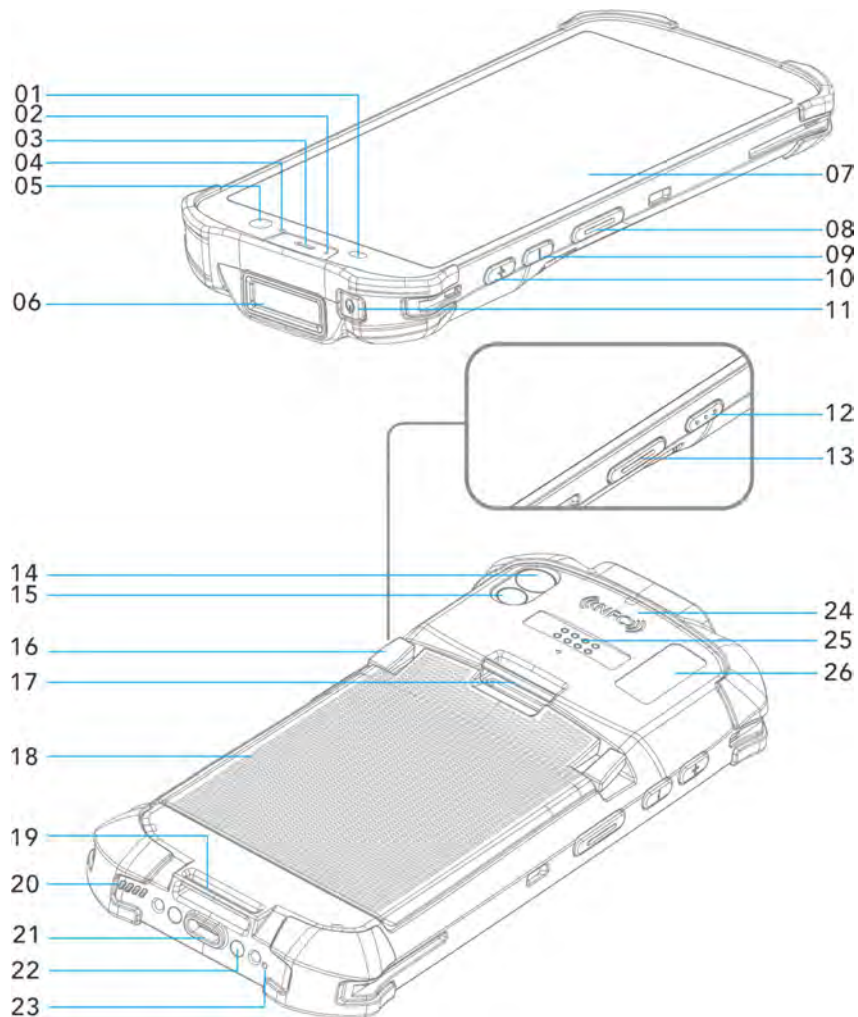

01. P-Sensor	14. Rear Camera
02. Microphone	15. Flash
03. Receiver	16. Battery release Latch
04. Notification LED	17. Hand Strap support
05. Front Camera	18. Battery
06. Scanner	19. Hand Strap Support
07. Touch Screen	20. Speaker
08. Scan key (Left)	21. USB-C port
09. Volume Down	22. Charging pins
10. Volume Up	23. Microphone
11. Power Button	24. NFC Detection Area
12. PTT Button (Programming Key)	25. I/O Connector



13. Scan key (Right)	26. Laser Safety Label
----------------------	------------------------

DATASHEET

HARDWARE

- DIMENSION: 169 X 78 X 14.7 (LXWXD, MM) (6.6 IN X 3.1 IN X 0.58 IN)
- WEIGHT: 280 G (10.23 OZ) W/ BATTERY
- DISPLAY SIZE: 6" FULL HD TFT-LCD, LED BACKLIT, 600 NITS
- TOUCH PANEL: CAPACITIVE CORNING GORILLA® GLASS WITH WET FINGER/GLOVE SUPPORT
- POWER: USER REMOVABLE LI-ION 5000 MAH BATTERY (18.5 WH), SUPPORT QC4.0 WITH FULLY CHARGE NEEDS LESS THAN 3 HOURS, WARM SWAP
- I/O PORTS:
 - TYPE C USB 3.1/USB QC4.0
 - 2 PIN CHARGING PAD
 - 8 PIN EXPANSION PORT
 - 1 NANO SIM, 1 ESIM
 - 1 USER ACCESSIBLE MICROSD CARD SLOT SUPPORTS UP TO 1 TB
- NOTIFICATIONS:
 - AUDIBLE TONE
 - MULTI-COLOR LEDS
 - VIBRATION
- AUDIO:
 - TWO MICROPHONES WITH NOISE CANCELLATION
 - BLUETOOTH WIRELESS HEADSET SUPPORT
 - HIGH QUALITY SPEAKER PHONE
 - PTT USB-C HEADSET SUPPORT
 - HD VOICE, INCLUDING SUPER-WIDEBAND (SWB), WIDEBAND (WB) AND FULLBAND (FB)
 - VOLTE AND VONR SUPPORT
- BUTTONS:
 - DUAL DEDICATED SCAN BUTTONS



PROGRAMMABLE BUTTON FOR PTT OR OTHER USE

VOLUME UP/DOWN

POWER

SYSTEM

- CPU: QUALCOMM® QCM4490 KRYO™ OCTA-CORE PROCESSOR @2.4GHZ
- OPERATING SYSTEM: UPGRADABLE THROUGH ANDROID® 18
- MEMORY: 8 GB DDR4X RAM/128 GB UFS FLASH

ENVIRONMENTAL

- OPERATING TEMPERATURE: -20°C ~ +50°C / -4°F ~ +122°F
- STORAGE TEMPERATURE: -40°C ~ +70°C / -40°F ~ +158°F
- HUMIDITY: 5% TO 95% (NON-CONDENSING)
- DROP: MULTIPLE 6 FT./1.8 M DROPS TO CONCRETE PER MIL-STD-810H
- SEALING: IP68 AND IP65, WITH BATTERY PER APPLICABLE IEC 60529
- TUMBLE: 1000 TUMBLES, 1.6 FT./0.5 M
- ELECTROSTATIC DISCHARGE: +/- 15KVDC (AIR) / +/- 8KV (CONTACT)

SENSORS

- AMBIENT LIGHT: DYNAMICALLY ADJUSTS DISPLAY BACKLIGHT BRIGHTNESS
- PROXIMITY: DETECT WHEN THE USER PLACES THE HANDSET AGAINST HEAD DURING A PHONE CALL TO DISABLE DISPLAY OUTPUT AND TOUCH INPUT
- MOTION: 3-AXIS ACCELEROMETER WITH MEMS GYRO
- MAGNETOMETER: E-COMPASS FOR DIRECTION AND ORIENTATION DETECTION
- BAROMETER: PRESSURE SENSOR FOR ALTITUDE LOCATING

DATA CAPTURE

- SCANNING: HONEYWELL N5703SR /N6803LR



- CAMERAS:
REAR CAMERA 16 MP
FRONT CAMERA 8 MP
- NFC:
ISO 14443 TYPE A AND B
SONY FELICA11
ISO 15693 CARD

CERTIFIED APPLICATION

- GMS/AER
- SCALEFUSION CERTIFIED ([HTTPS://SCALEFUSION.COM/](https://scalefusion.com/))
- STAYLINKED READY™ ([HTTPS://WWW.STAYLINKED.COM/](https://www.staylinked.com/))

WIRELESS CONNECTIVITY

- WAN:
CERTIFIED: GCF-PTCRB
5G SUB 6GHZ:
N1, N2, N3, N5, N7, N8, N12, N13, N14, N18, N20, N25, N26, N28, N29, N30, N38,
N40, N41, N48, N53, N66, N70, N71, N77, N78, N79
4G LTE:
BANDS 1, 2, 3, 4, 5, 7, 8, 12, 13, 14, 17, 18, 19, 20, 25, 26, 28, 29, 30, 32, 38, 39, 40,
41, 42, 43, 48, 53, 66, 70, 71
WCDMA:
BANDS 1,2,4,5,8,1
PRIVATE NETWORK: SUPPORTS PRIVATE NETWORKING (LTE/5G), CBRS
US (N48/B48)/JP(B42)/EU (N77/N78)
- GPS: SUPPORT, GPS, GLONASS, QZSS, BEIDOU AND GALILEO (A-GPS)
- WLAN:
IEEE 802.11 A/B/G/N/AC/D/H/I/R/K/V/W/MC/AX
2X2 MU-MIMO



WI-FI™ 6E CERTIFIED

IPV4, IPV6

- WLAN SECURITY:
ENCRYPTION: OPEN, ENHANCED OPEN, WEP (40/128), TKIP AND AES
WPA AUTHENTICATION: WPA AND WPA2 AND WPA3
USER AUTHENTICATION: PSK, EAP-TLS, AND PEAP
- WPAN/BLE: BLUETOOTH® 5.2, BLE 5, CLASS 2

2.3 PACKAGE CONTENT

- RC40 Mobile Computer
- Standard Battery (5000 mAh)
- Quick Start Guide

2.4 ACCESSORY (AVAILABLE FOR PURCHASE)


- Single Communication and Charge Cradle
- Scan Handle
- Hand Strap
- Wrist Strap
- 3rd party rugged mobile mounts; see RC40 Accessory Guide
(https://www.askey.com/download/0/RC40_Accessory_Guide/)

2.5 INSTALLATION


2.5.1 INSTALL/REMOVE BATTERY

CAUTION: Do not place any labels, asset tags, engravings, stickers, or other objects into the battery well. Doing so may affect the intended performance of the device or accessories. Performance levels such as water resistance, impact resistance, functionality or temperature resistance may be affected.



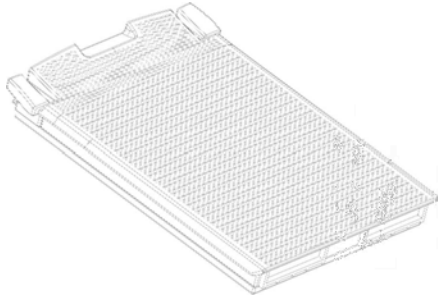


Install Battery: Put Battery pack at bottom to align and press the battery downward until the latches on both sides of the battery into place.

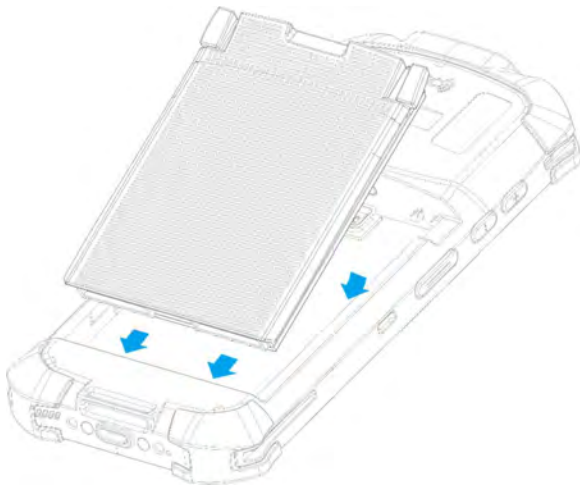

Remove battery: Push latch at both sides together and pull battery from the mobile computer



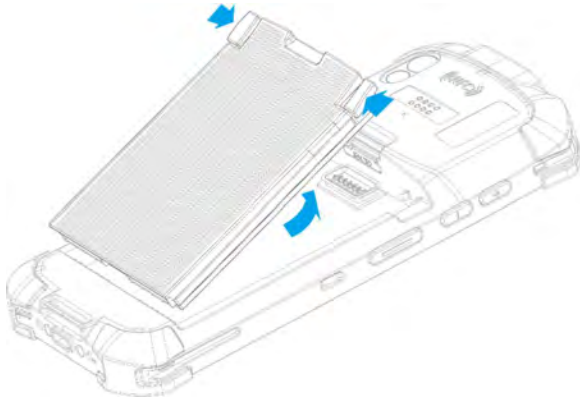

Important Notice: Any user modifications to the device, especially within the battery well—including labels, asset tags, engravings, or stickers—may negatively impact the device’s performance and the functionality of its accessories. Such modifications can affect critical performance factors, including sealing integrity (Ingress Protection [IP]), impact resistance (drop and tumble), overall functionality, and temperature tolerance. To ensure optimal performance and durability, **do not apply labels, asset tags, engravings, or stickers within the battery well.**


2.5.2 INSTALL/REMOVE SIM/SD CARD

Caution—ESD: Observe proper Electrostatic Discharge (ESD) precautions to avoid damage to the SIM/Micro SD card.


Proper ESD precautions include, but are not limited to, working on an ESD mat and ensuring the operator is properly grounded.

1. Remove the SIM/SD tray from the device.




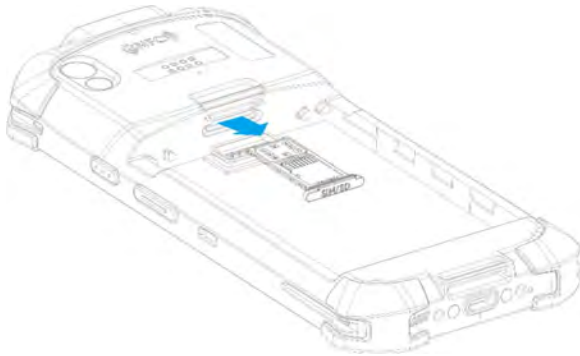

2. Put the SIM/micro SD card on the tray, and make sure the SIM/micro SD cards are firmly stuck on the tray.

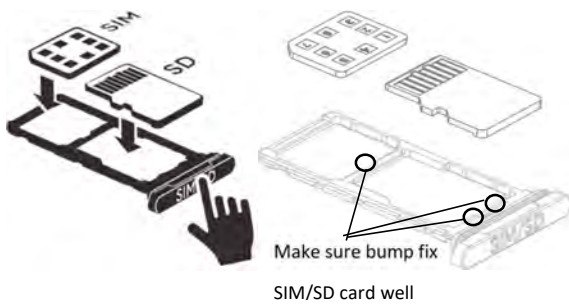


3. Install the SIM/SD tray into the device with the correct direction.
NOTE, when you insert the card tray into the device, the SIM/micro SD card pins should be on the upper side of the tray.

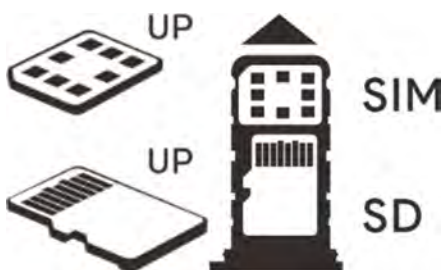

4. Push the tray back into device
Note: The SIM/SD tray needs to be pushed to the bottom and the SIM/SD cover cannot be in the middle to ensure waterproof function.



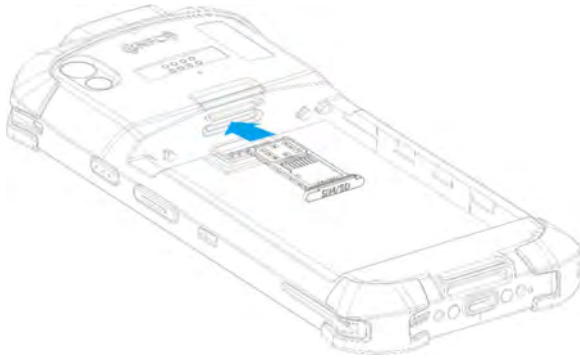

2.5.3 CHARGING CRADLE

To charge the mobile device battery, the battery and charger temperatures must be between +41°F and +104°F (5°C and +40°C).

- Need to use Askey power supply attach in the box
Using an incompatible power supply may damage cradle and mobile computer, and lead to a dangers of fire, explosion, or other risks.
If you have any questions about the compatibility of power supply, please contact Askey support, <https://www.askey.com/support/>
- Do not use incompatible batteries, cradle, and mobile computer.
Using an incompatible battery, cradle, or mobile computer may damage battery, cradle, or mobile computer, and lead a danger of fire, explosion, or other risks.
If you have any questions about the compatibility of power supply, please contact Askey support, <https://www.askey.com/support/>
- Warning: The USB IO at rear side on cradle is for data communication, please don't INSERT USB-C power supply to avoid the damage or explosion risk.

Instruction manual for switching power supply

1. Model/Rating:

- A. Product name: SWITCHING ADAPTER
- B. Rated input voltage: 100-240V



C. Voltage adjustment rate: +10%, -10%

D. Rated input current: 1.0A Max.

E. Rated input frequency: 50-60Hz

F. Altitude: 5000m Max

2. Safety precautions

A. Please read the following notes carefully.

B. The maximum ambient temperature used for this product is 40°C.

C. Please set this product according to the specification.

D. Output; Please refer to the label on the product

E. This product is used in information and communication technology equipment or audio/video equipment

F. This product is fixed for use in the house.

G. If there is any fault or part damage of this product, please do not repair it personally.

H. In order not to have the danger of electricity leakage, this product please do not contact with rain water

3. Important safety matters

A. Please read the notes carefully

B. Please keep this note well. Please pay attention to the dangerous matters

C. Please use this product according to the specification

D. Please be sure to use this product near water

E. Please clean with a dry cloth.

F. Do not use this product in radiators, stoves, or other places that contain heating devices.

G. Please unplug the power when it thunders or is not used for a long time.



- H. In case of failure, please contact the after-sale service personnel. When the plug is damaged, the product is immersed in water, when the product falls to the ground and is touched by rain, or when the product is in abnormal operation, please contact the after-sale service personnel.
- I. This product is a class I device.

◆ Mobile device connection:

Insert the L-shaped output end of the transformer into the charging dock.



When the power light on the left side of the charging dock turns green, insert the mobile device with the screen facing forward into the charging dock.




When the power light on the left side turns amber, the mobile device is successfully connected.

Mobile Device Removal:

Press down the charging dock with one hand and hold the mobile device with the other hand to pull it up. After pulling it up, the power light will turn from amber to green, indicating that the mobile device has been successfully removed.



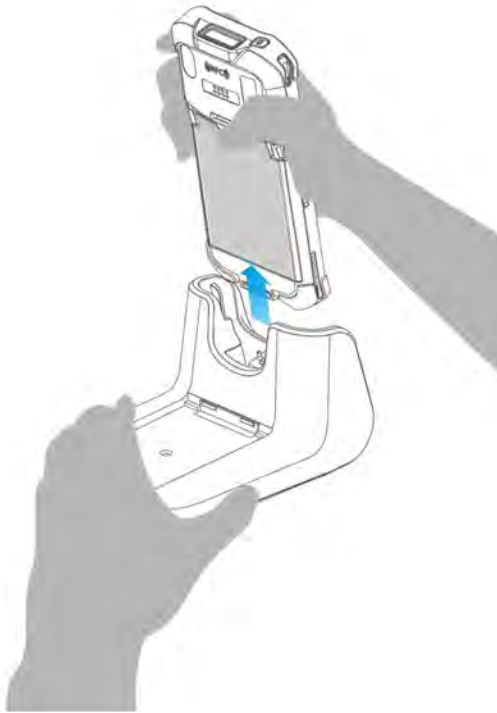

Battery Charging:

Align the bottom of the battery with the inside of the charging station, and then press the battery down to complete the placement.





At this time, the LED light on the right side of the charging station will light up. The light signal description is shown in the following table.

*When the battery is over 4.15V and the temperature is above 45°C, the red light will flash when it is placed in the charging station for charging. This is because the charger has activated the battery high temperature overvoltage protection mode, which is a normal phenomenon.

* When the battery is charged at an ambient temperature higher than 35°C, the amber light and red light may flash alternately. This is because the battery charger is regulating the temperature of the charged battery and activating the battery high temperature overvoltage protection mode. This is a normal phenomenon.


* If you need to fully charge the battery within three hours, please make sure the product is at room temperature of 25°C, placed in a well-ventilated location (battery temperatures above 45°C and below 10°C will extend the charging time)

* The temperature detection chip and components have tolerance about $\pm 3^{\circ}\text{C}$, so it is normal that the spare battery may not be charged during the operating temperature is $-3\sim 3^{\circ}\text{C}$ (the battery charging LED on the charging station flashes red).

Battery Removal:

Press the charging dock with one hand and press the latches on both sides of the battery with the other hand. Lift the battery to remove the battery.



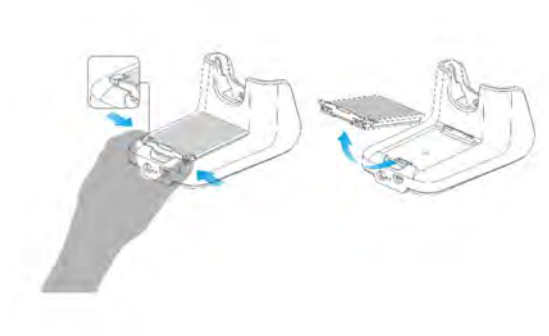

LED Indicator	Behavior	Status
Terminal & Power	Solid Amber	Terminal connected
	Solid Green	No terminal connected
	No Color	No power
Battery	Solid Amber	Charging, the capacity is less than 95%
	Solid Green	Charging, the capacity is higher than 95%
	Blink Red	Charge error
	No Color	No battery inserted

2.5.4 USB CHARGER


Connect the Type C charging cable to the charger and mobile device to charge

*Using a charger with lower output power may result in charging failure or prolonged charging time.

*If you need to fully charge the battery within three hours, please make sure the product is at room temperature of 25°C, not in operation and placed in a well-ventilated location (battery temperatures above 45°C and below 15°C will extend the charging time)

*If the battery temperature is above 45°C, the charging indicator may turn green even though the battery charge is less than 90%. This is a reasonable behavior of the system based on the battery charging temperature protection mode. Please do not worry.



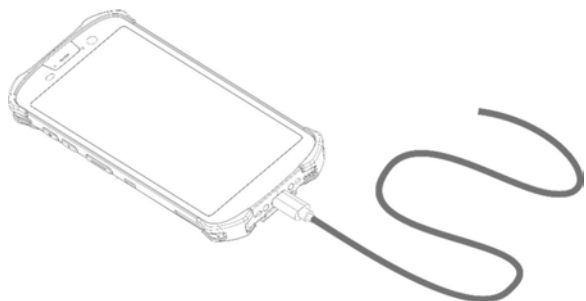

3. BASIC OPERATION


3.1 POWER ON/OFF THE DEVICE

Power on: Press power button on top of device for 3 seconds




Power off:

Step 1. Press power button on top of device for 3 seconds to show **power manual**

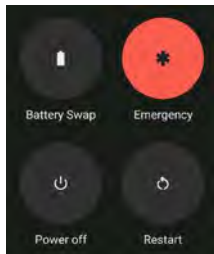

Step 2. Press shut down button and wait for the device shut down

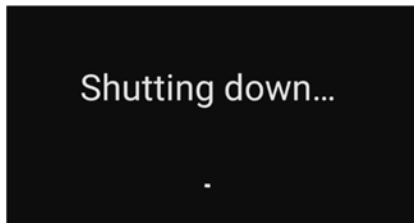

3.2 WELCOME

The LCD will show Askey animation below





3.3 BATTERY

3.3.1 MAIN BATTERY

The main battery uses a rechargeable and user removable 3.85V, 5000mAh (18.5 WH) lithium battery pack to power the mobile data terminal, and it takes about 3 hours to fully charge. The LED light above the screen will light up red while charging, and turn green when the power reaches 90% or more.

3.3.2 BACKUP BATTERY


The backup battery is a rechargeable lithium battery mounted on the motherboard and is used to maintain the mobile computer during battery replacement, ensuring data retention for 1 minute when the battery is fully charged and the wireless module is inactive.

The backup battery can be charged from the main battery and a full charge takes about 1 hour and 30 minutes.

3.3.3 BATTERY STATUS

The battery status can be checked by the battery icon on the upper left of the screen to check the capacity and whether it is charging.




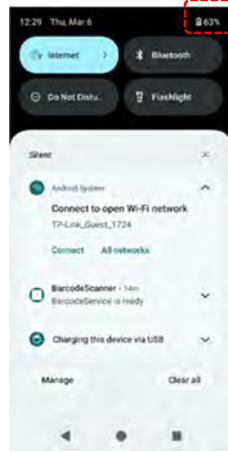

Battery Icon	Description
	Main battery is full charged.
	Main battery is partially drained.
	Main battery level is low (< 15%).
	External power source is connected and main battery is been charged.

3.3.4 LOW BATTERY ALERT

When the battery level is below 15% and 10%, a warning will be given and it will indicate whether to enter power saving mode.

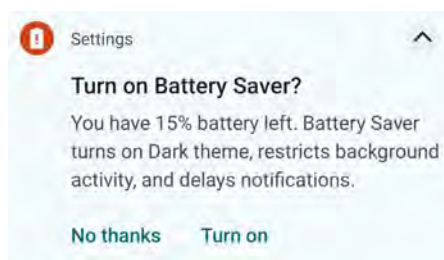


3.3.5 MAIN BATTERY SWAP


3.3.5.1 COLD SWAP

Step 1. Press power button on top of device for 3 seconds to show power manual



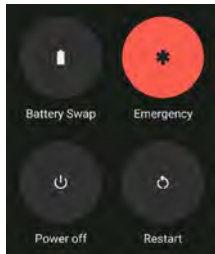

Step 2. Press shut down button and wait for the device shut down

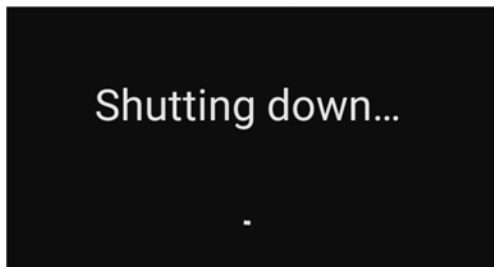


Step 3. Exchange Battery (Can find detail in sec 2.5.1)




3.3.5.2 WARM SWAP

Step 1. Press power button on top of device for 3 seconds to show power manual

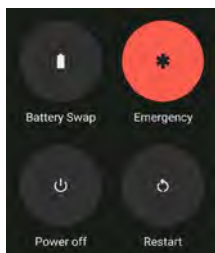

Step 2. Press Battery Swap button and wait for the device shut down



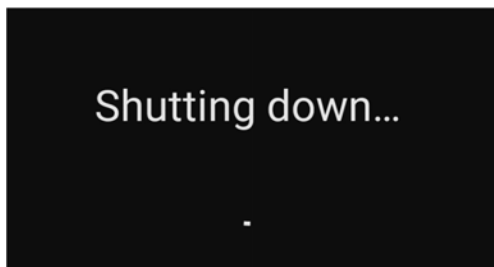

Step 3. Wait for the flashing red light to be off



Step 4. Exchange Battery (Can find detail in sec 2.5.1)



Step 5. After the replacement is completed, you can press the power button or connect the USB power supply to wake up the system.

 To avoid system damage, do not connect a charging device or USB device when the main battery is disconnected.


3.3.6 BATTERY OVERHEAT PROTECTION

When the battery temperature is too high or too low, the system will provide a warning, above 59°C or below -19°C






 If the temperature continues to rise or drop beyond the warning value, the machine will be shut down, above 62°C or below -22°C

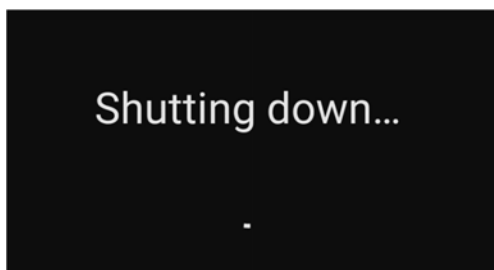


3.3.7 BATTERY MANAGEMENT


3.3.7.1 BATTERY USAGE

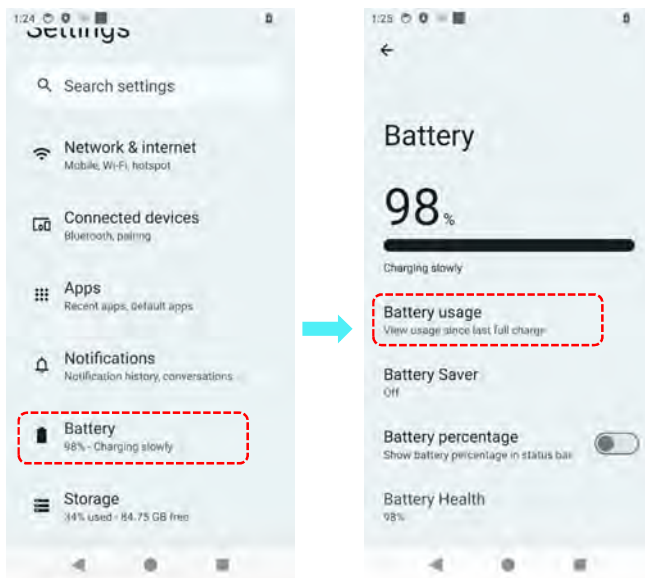

3.3.7.2 STAMINA MODE

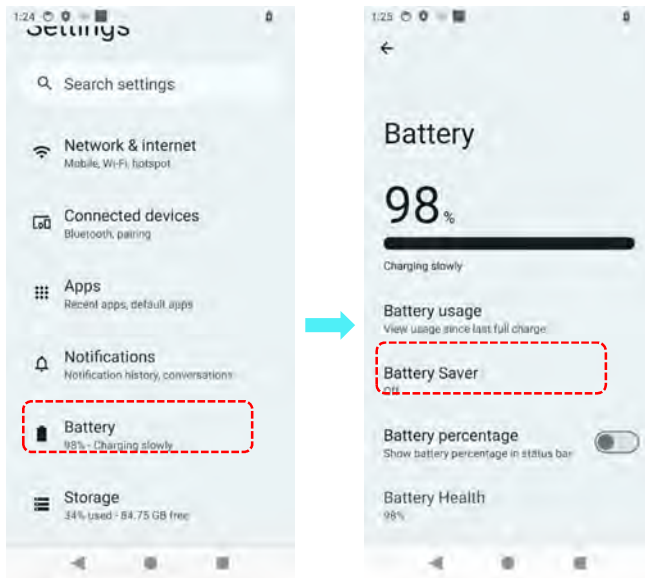


3.3.7.3 BATTERY CARE

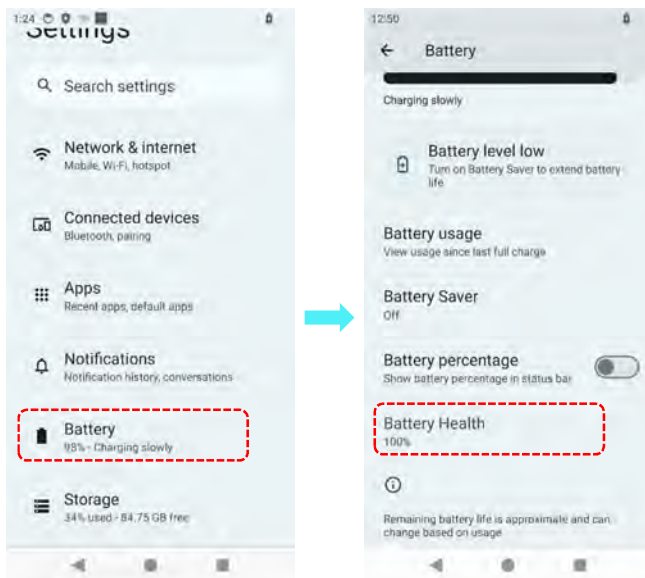

3.3.7.4 BATTERY PERCENTAGE



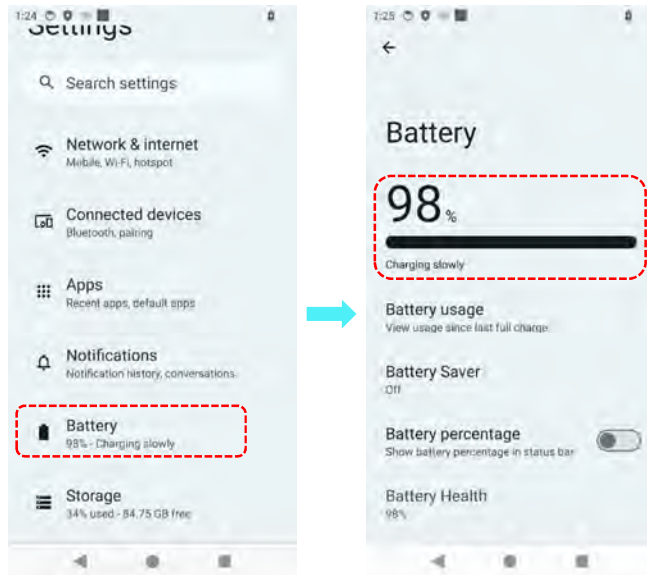

3.4 MEMORY

- Flash memory

The 128GB UFS flash memory can be stored not only Android 14 OS, but also the legitimate application in Google play and your own customized program

- RAM

The 8GB DDR4x SDRAM provide you higher clock rate and data rate with lower power consumption and higher reliability, when system operating

- Expansion Slot

RC40 offer you a single SD card slot, which is compatible with SD (up to 2GB), SDHC (up to 32GB)

Suggest to format SD card when you use a new SD card in RC40

DATA LOSS WARNING



Once main battery power is drained or main battery is removed (please refer to 3.2.5 MAIN BATTERY SWAP), the backup battery can preserve data for 1 minutes, when backup battery power is also drained, RC40 will shutdown, and all unsaved data will be lost.

Please pay attention to save your data all the time to avoid any urgent situation, such as power is drained, accident, etc.

3.4.1 STORAGE MANAGEMENT

Monitor Storage Usage: Get a clear overview of the device's internal storage, including the total capacity and how much is currently being used. This is displayed numerically (e.g., "44 GB used of 128 GB total") and visually with a bar graph.

Storage manager: An automated feature (toggleable) that likely suggests or performs actions to optimize storage.

Free up space: Directly launching the Files by Google app (or a similar file management app) to manually browse and delete files.

Trash: Shows the amount of storage currently occupied by deleted files in the system's trash or recycle bin. Tapping this usually allows viewing and permanently deleting these files.

System: Displays the storage space used by the Android operating system and pre-installed system applications. This is generally not user-manageable.

Documents & other: Shows the storage consumed by documents, downloaded files, and other uncategorized files. Tapping this allows browsing and managing these files.

Games: Indicates the storage space used by installed games. Tapping this would likely show a list of installed games with options to manage their storage or uninstall them.


Apps: Displays the storage used by all installed user applications (excluding system apps). Tapping this leads to a list of apps where you can view individual app storage, clear cache/data, or uninstall them.

Audio: Shows the storage occupied by music files, podcasts, and other audio content. Tapping this would likely open a media management app or allow browsing audio files.

Videos: Indicates the storage space used by video files stored on the device. Tapping this would likely open a video player or file manager showing videos.

Images: Displays the storage consumed by photos and other image files. Tapping this would typically open the Gallery or Photos app.



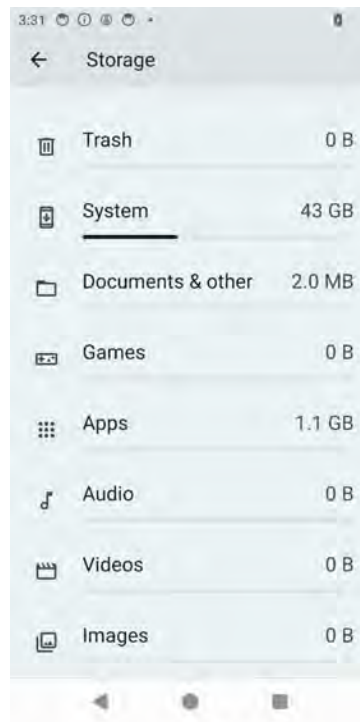

3.4.2 DATA TRANSFERRING

Android device memory data transfer include:

1. **USB Transfer:** Connecting the Android device to a computer via a USB cable allows users to directly access the device's file system (MTP - Media Transfer Protocol or PTP - Picture Transfer Protocol) and copy files back and forth
2. **Cloud Storage:** Services like Google Drive, Dropbox, OneDrive, and others enable users to upload files from their Android device to the cloud and then access or download them on other devices, and vice versa.
3. **SD Card:** Users can transfer files to and from the SD card using a computer or another device with an SD card reader. They can also move the SD card between Android devices.
4. **Bluetooth:** Suitable for transferring smaller files between nearby devices.
5. **Wi-Fi Direct:** Allows direct wireless connections between devices for faster file transfer without needing a Wi-Fi network.



6. NFC (Near Field Communication): Can be used to initiate Bluetooth or Wi-Fi Direct transfers with a simple tap between devices.
7. Google Backup: Android's built-in backup service can store app data, system settings, contacts, photos, and more in the cloud, allowing users to restore this data to a new or reset device

3.5 PHONE

3.5.1 PHONE APPLICATION

Phone applications are software designed specifically for voice calls, video calls, and other communication-related functions.

They include basic features for making and receiving calls, as well as advanced features like contact management, voicemail, call log inquiries, and call filtering.

1. Making and Receiving Calls: Provide basic calling functions, supporting both local and international calls.
2. Contact Management: Allow users to add, edit, and delete contacts, with options for grouping or tagging.
3. Call Logs: Store all call histories, including date, time, and call duration.
4. Voicemail: Record voice messages for missed calls, enabling users to respond conveniently.
5. Other Features:
 - Call filtering (blocking spam calls).
 - Support for group calls.
 - Data analytics, such as call time and cost analysis.
 - Integration with other applications, such as address books or calendars.

3.5.2 CONTACT ADD

Contact management is a feature that helps users organize and manage contact information effectively, commonly found in phone applications and mobile devices.

The following are the main features and characteristics of contact management:



1. Adding and Editing Contacts

- Add, edit, or delete contacts.
- Store basic contact information.

2. Grouping and Tagging

- Group contacts, such as family, friends, or work-related contacts.
- Use tags for quick identification.

3. Searching and Sorting

- Sort contacts alphabetically or by recent use.
- Support keyword searches to find specific contacts.

4. Syncing and Backup

- Sync the contact list to cloud services (e.g., Google or iCloud).

5. Speed Dial and Favorites

- Set up speed dial for frequently used contacts to save time.

3.5.3 DURING CALLING

Refers to the features that users can operate or manage while engaging in phone or video calls.

1. Mute Function: Temporarily turns off the microphone to avoid background noise disrupting the conversation.
2. Dial Pad Operation: Allows users to input numbers during a call, such as interacting with customer service.
3. Speaker Mode: Switches to speaker mode for hands-free operation.
4. Call Hold: Pauses the call and resumes it later, making it convenient to handle other tasks.
5. Group Call: Adds more participants to the call for multi-party conversations.
6. Video Toggle: Enables users to freely turn the camera on or off during video calls.



7. End Call: Disconnects the call.

3.5.4 INCOMING CALL

When a call is received, the device displays and manages features related to incoming calls.

Here are the characteristics of incoming call functions:

1. Caller Display
 - Shows the caller's name, phone number, or caller location.
 - If the contact is not saved, it may display "Unknown Caller" or provide call number information.
2. Notification Alerts
 - Alerts users to incoming calls via ringtone, vibration, or screen pop-up notifications.
3. Answering or Rejecting Calls
4. Call Filtering
 - Uses a blacklist function to prevent calls from specific numbers.
5. Voicemail
 - Provides a voicemail prompt for missed calls.
6. Group Calls

3.5.5 RECENTS

Refers to the call log feature on devices, displaying a list of calls that users have recently received, made, or missed.

1. Call Classification
 - Categorizes calls into received calls, outgoing calls, and missed calls, allowing users to quickly identify them.
2. Detailed Information
 - Includes the caller's name, phone number, call date and time, as well as call duration.



3. Quick Actions

- Users can directly redial, send messages, or add the number to contacts from the recent calls list.

4. Filtering and Sorting

- Allows sorting by time, with the most recent calls appearing at the top of the list.

3.5.6 CALL SETTINGS

Part of the user's customization and management of phone functionalities:

1. Notification and Ringtone Selection

- Customize ringtones for incoming calls.
- Set vibration or silent modes.

2. Voicemail Configuration

- Configure voicemail notifications and storage options.
- Customize voicemail greetings.

3. Call Filtering and Blocking

- Manage the blacklist.

4. Call Audio Adjustment

5. Speed Dial and Shortcuts

- Set speed dial keys for quickly contacting frequent callers.

6. Roaming and International Call Settings

- Enable or disable roaming services.

3.6 DISPLAY

Android 14 provides an intuitive display interface that allows users to easily operate and customize display settings such as screen brightness, font size, dark mode, etc. Users can adjust these options through "Settings > Display".



3.6.1 HOME

The Android home screen is a collection point for applications and widgets. Users can adjust the arrangement of icons by dragging them, or put frequently used applications into the "Favorites Toolbar" for quick access.

3.6.1.1 NOTIFICATION / STATUS BAR

The Notification Bar and Status Bar are located at the top of the screen, providing real-time notifications, system status (such as Wi-Fi, battery level, time, etc.) and quick settings. Swipe down to view notification details, and long press on a notification to open the app settings.

3.6.1.2 HOME SCREEN PANEL

The Home Screen Panel supports multiple pages, and users can switch between different Home Screen pages by swiping left and right. Application icons or widgets can be placed on different pages to make operation more convenient.

3.6.1.3 FAVORITES TRAY

The Favorites Tray is located at the bottom of the main screen. Users can drag the most frequently used applications to this area for quick access. This area is usually fixed and remains visible even when switching Home screen pages.

3.6.1.4 APPLICATION ICON

Application icons represent installed applications. Click them to open the applications. Long press on an icon to perform additional actions, such as removing the icon, viewing app information, or adding a widget.

3.6.1.5 GOOGLE SEARCH BAR

The Google Search Bar is located at the top of the Home screen and can be used to quickly search for content on the web, in apps, or on your device. Users can directly enter keywords or click the voice search button to perform voice input.

3.6.1.6 NAVIGATION ICON

Android provides three types of navigation icons:

Back button: Return to the previous screen or close the application.



Home button: Return to the home screen.

Recent Apps button: Opens a list of recently used apps for quick switching between apps.

The device supports gesture navigation, which replaces these buttons with swipe gestures.

3.6.1.7 FLOATING ACTION BUTTON

The Floating Action Button provides quick actions in some apps, such as:

Volume keys: Adjust the device volume.

Scan Key: Activates the scanning function (depending on the application).

Power Key: Long press to open the power menu, including options such as shutdown and restart.

The location and functionality of these buttons may vary between apps.

3.6.2 TOUCH PANEL CONTROL

Basic touch screen controls. Operations may vary depending on the program.

Single click: Touch the screen and then release it to select an item or button on the screen.

Slide: Place your finger on the screen and move it to scroll the screen.

Long press: Touch the screen and hold it to call a menu or execute a specific function

3.6.3 LOCK AND UNLOCK SCREEN

Android provides several ways to lock and unlock the screen:

Lock screen:

Press the Power button to quickly lock the screen.

You can set the auto-lock time. When the device is idle for a specified period of time, the screen will automatically lock. Can refer to section 4.1.3.2

Unlock screen:

Press the Power button or tap the screen (supported by some models) to wake up the device.

Unlock your device using Slide to unlock, Pattern unlock, PIN code or Fingerprint / Face recognition.



Users can choose the appropriate unlock method through "Settings > Security and Privacy > Screen Lock". section 4.1.3.1

3.7 DATA CAPTURE

ABOUT THE SCAN ENGINE

RC40 offers two Honeywell high-performance scan engine:

- Honeywell N5703 – Red laser aimer, white illumination, ideal for scanning bar codes in hand
- Honeywell N6803LR – Red laser aimer dot, white illumination, designed to read bar codes from a few inches to over 60 feet – depending upon bar code type, condition, lighting and scan angle

3.7.1 EZWEDGE

3.7.1.1 MAIN FUNCTION

When launch the EZWedge APK , the main ui present the scanned data and its detail information

There are :

Data: decoded data content

Length: decoded data length

AimId: It's defined by the Association for Automatic Identification and Mobility (AIM)

Codeld: It can be standardized or manufacturer-specific

CodeType: What barcode type be scanned

Intent result: The scanned data was carried on intent to broadcast out to the APK that registered the corresponding intent action






3.7.1.2 MENU FUNCTION

There are four options in the menu

1. Preview Mode: Present the preview streaming
2. Get Last Image: get the last image
3. Profiles: Profile store a specify configurations of APK
4. Settings: That contains Symbology, Decoder, Scanning and Application settings
5. About: Present the decoder engine detail information



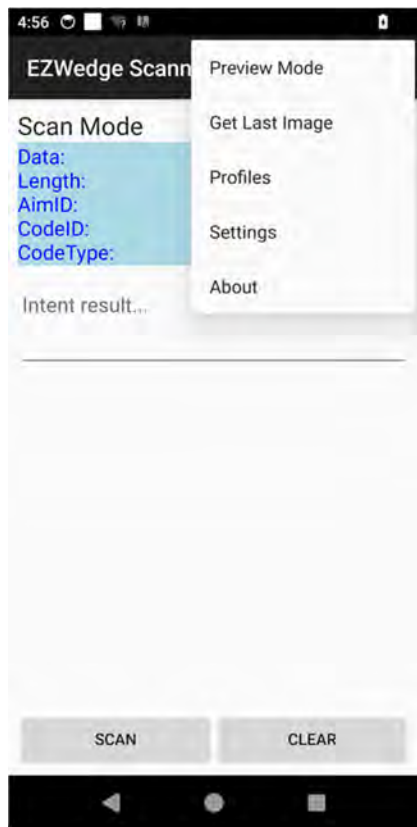

3.7.1.3 PREVIEW MODE FUNCTION

The Preview Mode present the preview streaming with near 10fps

The Preview mode mainly purpose use to check the scanner module report the frame feature.

Press HW scan key to trigger a scanning then show up the briefly decoded data on the UI





3.7.1.4 GET LAST IMAGE FUNCTION

When scan a barcode target successfully, click “Get Last Image” option to show up the image and click “SAVE IMAGE” button to save it onto storage/emulated/0/Pictures






3.7.1.5 NEW PROFILE FUNCTION

Apk can create a profile for their application , to click “+” to new a profile, this profile copy the default profile content as the base and require to name it like aa



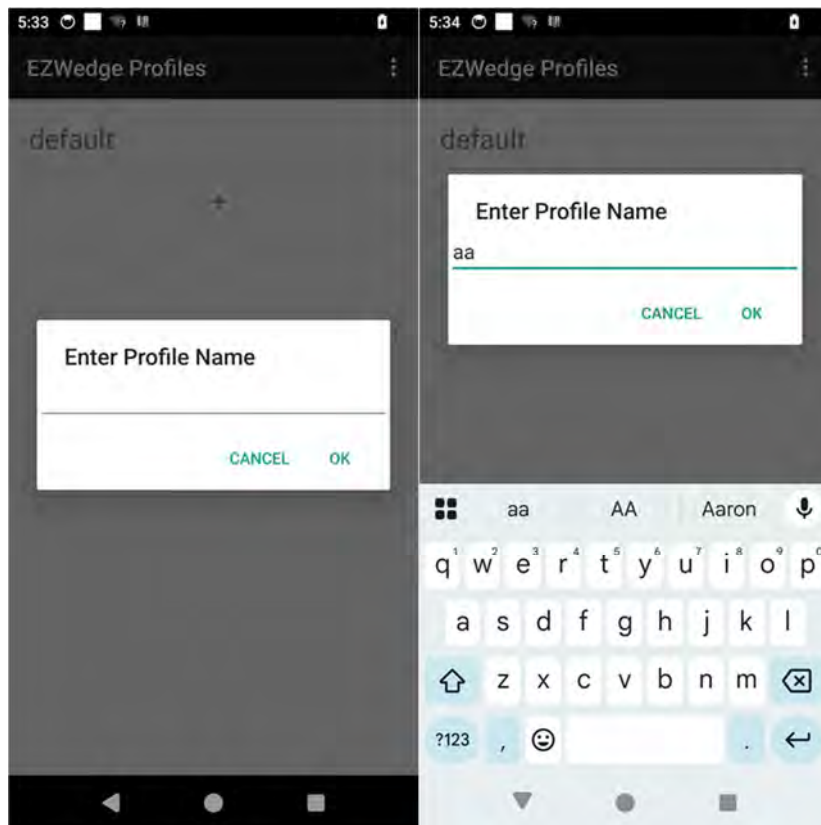


The new aa profile support Edit, Reset, Delete, Rename Profile and Enable, Disable All Symbology and Set Symbology by default

Click aa profile, there is a new item "Associated Apk" which allows the user to choose one of the installed apks bound to the EZWedge Service


When the selected apk become the foreground apk, trigger a scanning, EZWedge will apply aa profile for this apk automatically



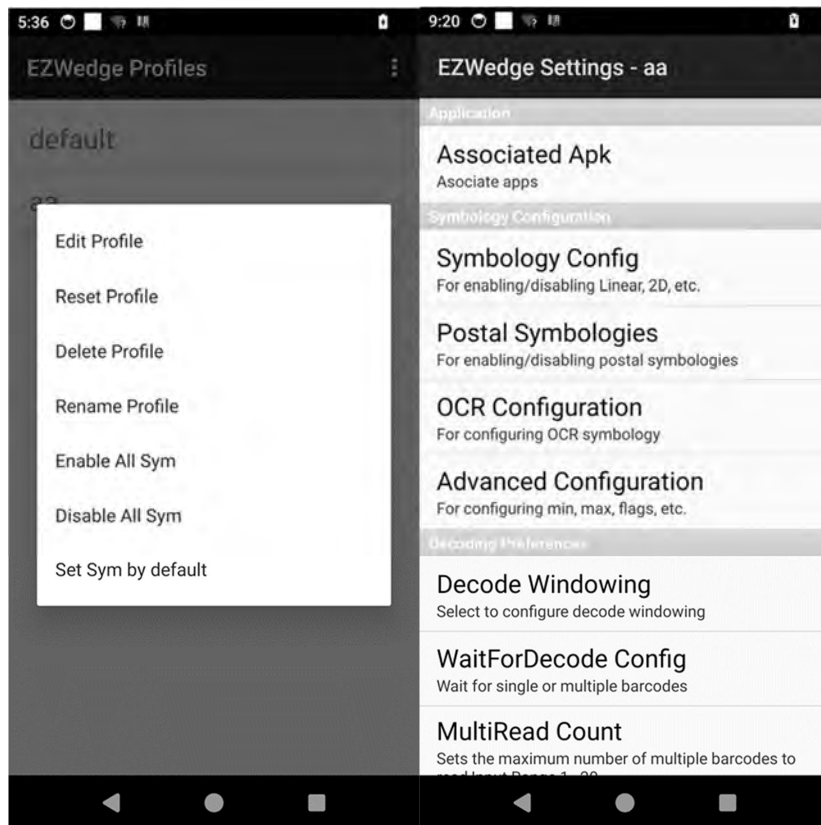

Click “+” to List all the system installed apks



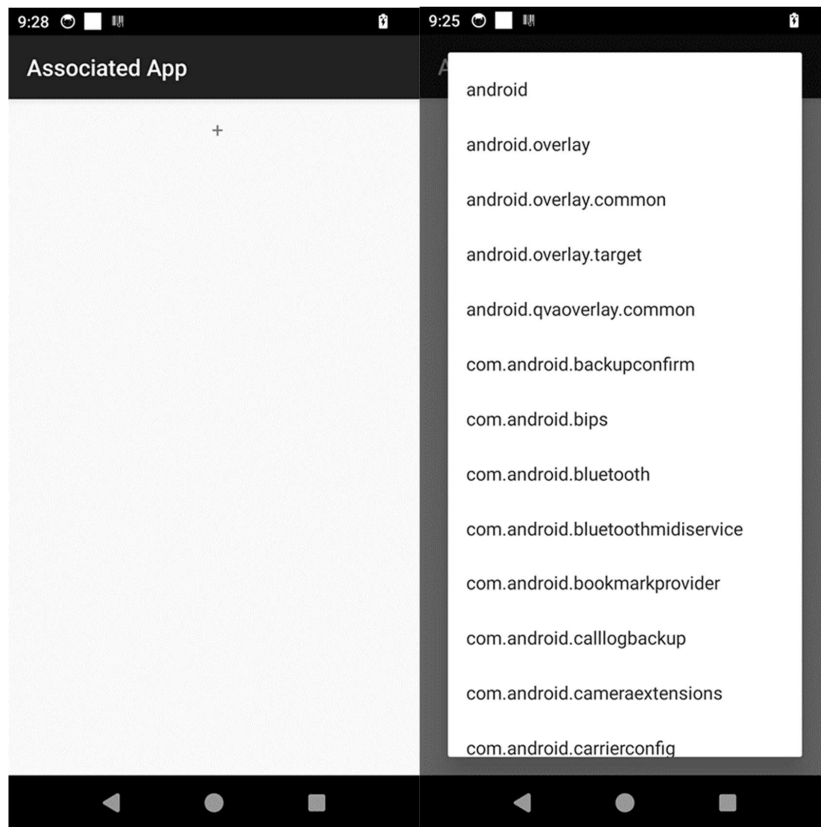

3.7.1.6 SETTINGS FUNCTION

The Settings page contains

1. Symbology Configuration
2. Decoding Preferences
3. Scanning Preferences
4. Application Preferences







3.7.1.7 SETTINGS/SYMBOLGY FUNCTION

The Symbology settings contains Symbology Config, Postal Symbology, OCR Configuration and Advanced Configuration

This list what the symbolizes were supported by default


For Advanced Configuration like EAN13, list its detail options can be choose

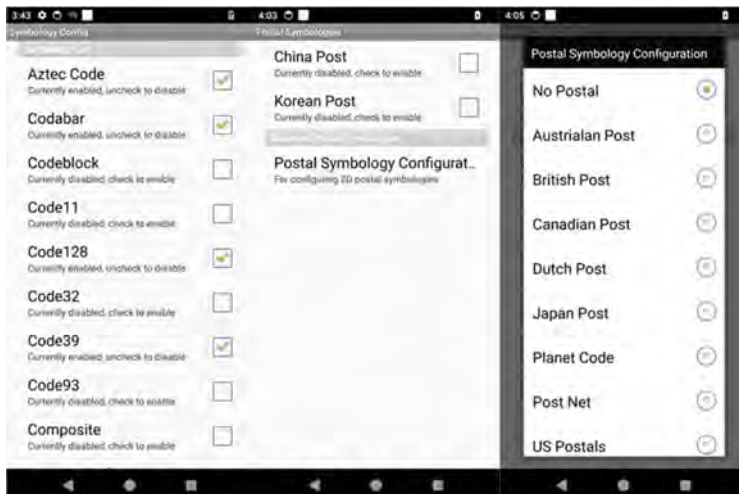

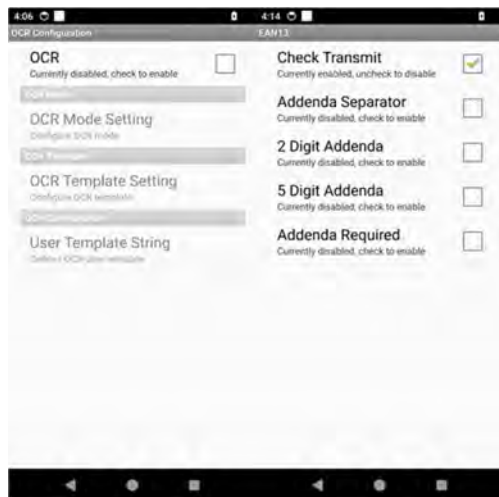

Postal Symbology list what postal type supported




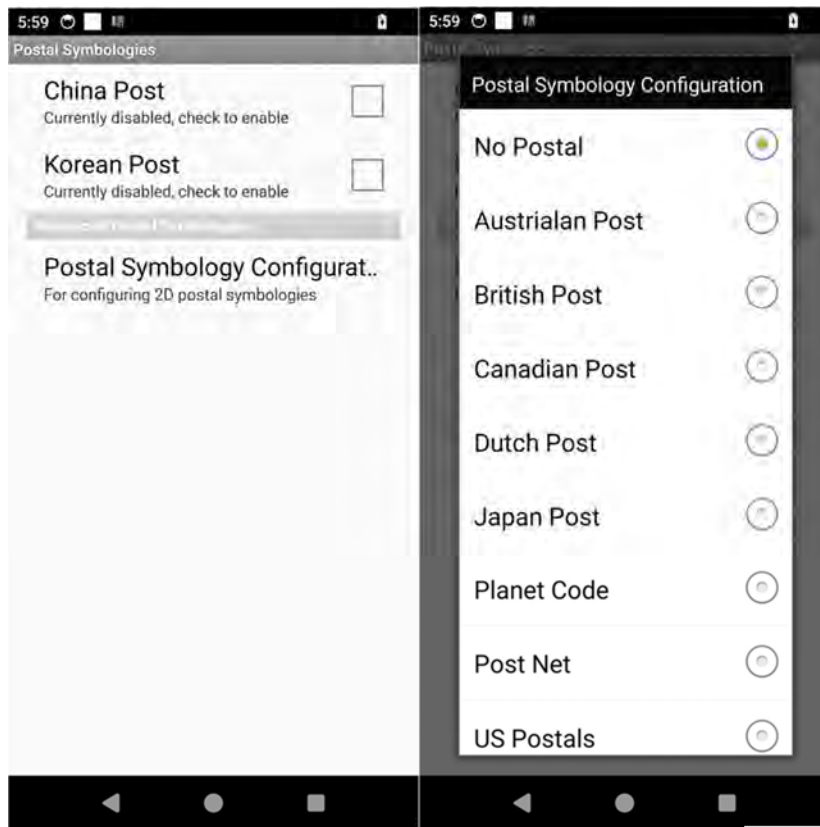

OCR Settings: The OCR supports

- User Defined template decode string
- Passport, ISBN(International Standard Book Number)
- Price Field
- MicrE-13B(A font specifically designed for Magnetic Ink Character Recognition (MICR))




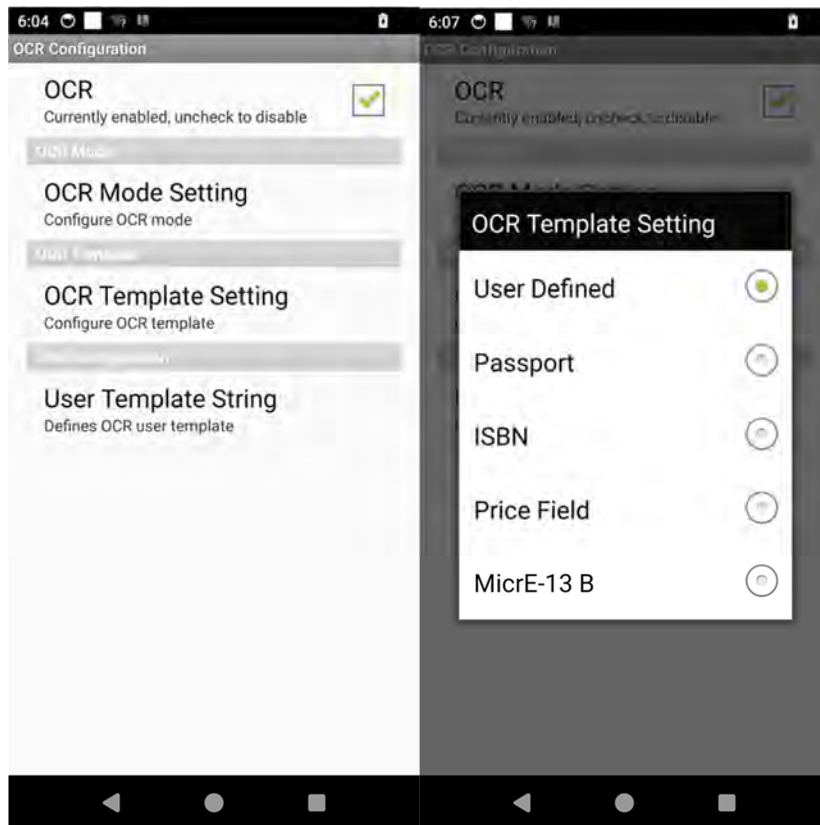

This allows the user to input what the OCR string format they would like to decode

Example: You need to read 8 numeric digits in either OCR-A or OCR-B:
12345678



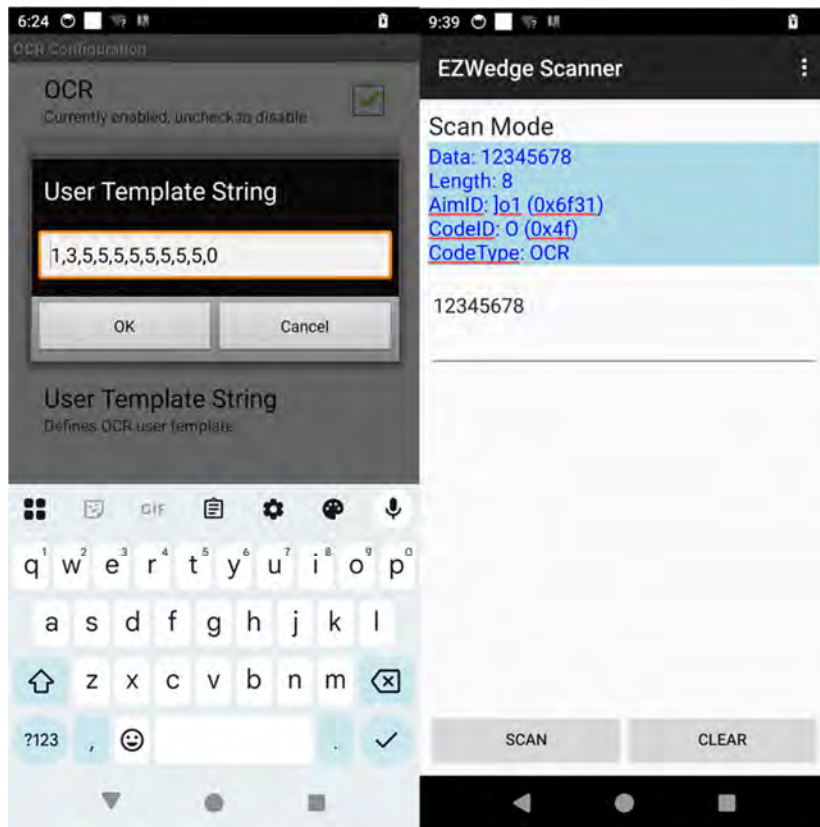


3.7.1.8 SETTINGS/DECODING FUNCTION

The Decoding Preference settings supports the Decode Windowing and MultiRead options


The Decode Windowing support the Off/Around Aimer/Exact Aimer Mode and Upper Left Window X/Y, Low Right Window X/Y allow to input a rectangle decode window of Around Aimer Mode.

The Exact Aimer Mode only decodes the barcode that crosses with the aimer



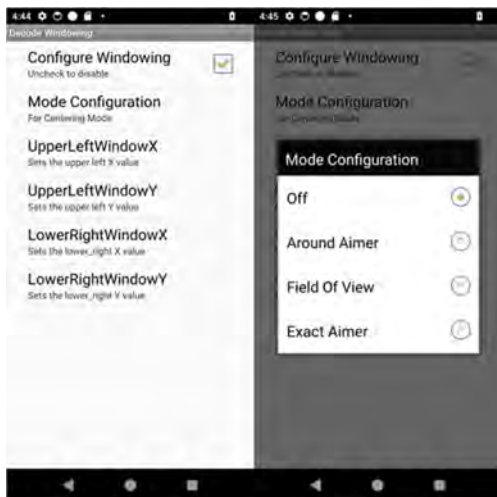

The MultiRead feature need to set "Wait For multiple" and set how many counts would like to get in one scan

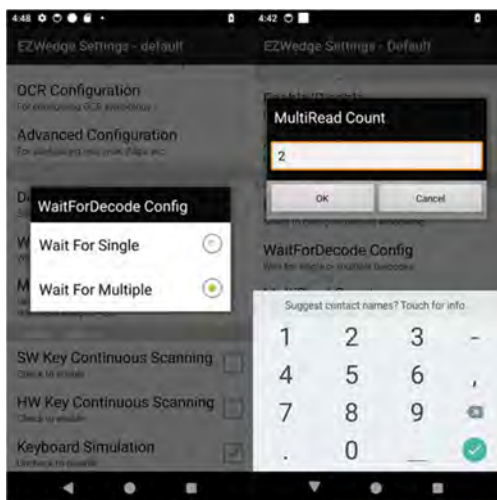

As this example, the all 12 barcode data be read in one scan trigger






3.7.1.9 SETTINGS/SCANNING FUNCTION

The Scanning settings supports:

1. SW Key Continuous Scanning : support SW key trigger a continuous scanning
2. HW Key Continuous Scanning: support HW key trigger a continuous scanning
3. Keyboard Simulation: support to send scanned data as keyboard wedge input
4. Automatic Scan Enter: support to perform the Enter key press/release at end of scanned data
5. Automatic Scan Tab: support to execute **KEYCODE_TAB at end of scanned data that use to switch to focus the next input field**
6. Lights Configuration: Support Aimer and illumination control
7. AimID OutPut: Support to add AimID as prefix of scanned data
8. Suffix OutPut String: Support to add a specified string append at end of scanned data



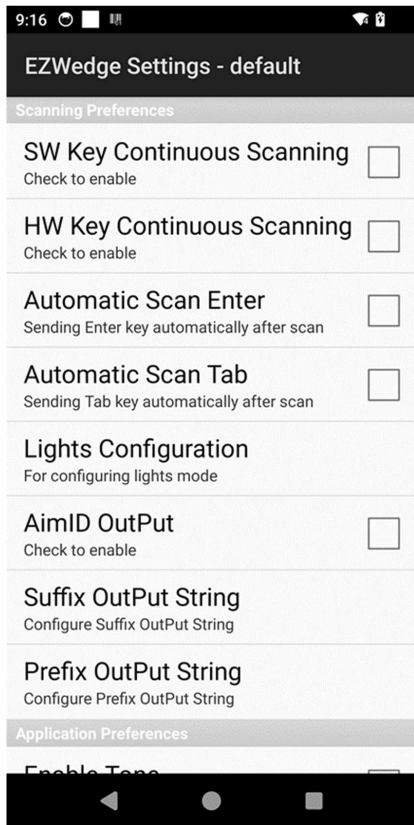


3.7.1.10 SETTINGS/APPLICATION FUNCTION

The Application settings supports:

1. Enable Tone: Enable/Disable Tone
2. Enable Vibrator: Enable/Disable Vibrator
3. Configure Output Intent: send the intent carry scanned data to APK
4. Output Intent Category Name: User can input the intent category name which the intent belongs to the category
5. Output Intent Action Name: User can input the intent action name which be registered in to listen the intent action sent from Barcode service with scanned data



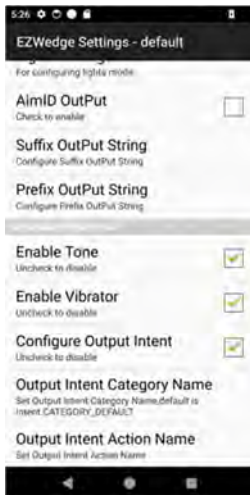

3.7.1.11 ABOUT FUNCTION

The about page shows up the engine information



3.7.2 BARCODE SCANNING

Label Scan

1. Activate EZWedge to scan demo
2. Push and hold either side scan key and center the aiming pattern on the bar code



3. You will hear "beep" and see the scanned content on the screen once scan successfully.



3.8 CAMERA

RC40 uses two cameras, one 16 mega pixel auto focus camera at rear side and one 8 mega pixel auto focus at front side

3.8.1 CAMERA FUNCTION

3.8.1.1 ZOOM

Press two fingers on the screen, pinch or spread your fingers, and the zoom in/out controls will appear on the screen.

3.8.1.2 CAMERA SWITCH

Touch the icon to switch



3.8.2 PHOTOS TAKING FUNCTION

3.8.2.1 SHOTTING SETTING

Step 1. On the home screen, tap the Camera app.

Step 2. Click the switch icon to switch between the front camera and the rear camera.

Step 3. Use the screen as a window, move and use your fingers to zoom in/out to the image you want to capture.

Step 4. The camera will automatically adjust the focus, and you can also click on the screen to correct the focus point

3.8.2.2 TAKE A PHOTO



Click the camera icon  or the volume down button to take a photo.

To view the photo after taking it, please click the preview icon at the bottom left of the screen.

3.8.3 VIDEO RECORDING FUNCTION

3.8.3.1 RESOLUTION

Resolution is FHD 1080P

3.8.3.2 LIGHT

Click the flash icon  at the top of the screen to increase the brightness

3.8.3.3 RECORDING SETTING

Step 1. On the home screen, tap the Camera app. 

Step 2. Click Video on the lower left corner of the screen to switch to recording mode.

Step 3. Click the switch icon  to switch between the front camera and the rear camera.

Step 4. Use the screen as a window, move and use your fingers to zoom in/out to the screen you want to record.

Step 5. The camera will automatically adjust the focus, and you can also click on the screen to correct the focus point

3.8.3.4 RECORD VIDEO

Click the record icon  to start recording, then click the stop icon  to stop recording.

To view the recorded video file, please click the preview icon on the lower left of the screen

3.8.4 SETTINGS

1. General – These settings apply to both photo and video recording.



- Store geographic location – Record geographic information when taking photos and recording videos.
 - Face Detection – Turn on (or off).
 - Storage – Photos and videos are stored in the phone.
 - Picture Format – Photos are saved in JPEG (default) or HEIC format.
2. Camera - These settings apply only to taking photos.
- Countdown Timer – Select Off (default), 2 seconds, 5 seconds, or 10 seconds.
 - Burst – Turn on (or off).
 - Grid Line - Turn on (or off).
 - Image Size – Set the desired image size to 16M pixels (default for rear camera), 8M pixels (default for front camera), 5M pixels, WVGA, VGA, or QVGA.
 - Picture quality – Select Low, Standard, or High (default).
 - Exposure – Choose between +2, +1, 0 (default), -1, or -2.
 - White Balance – Choose from Auto (default), Tungsten, Fluorescent, Daylight, or Cloudy.
 - Shutter Sound - Turn on (or off).
 - Selfie Mirror – Optionally enable saving photos as a mirror image (Front camera only).
 - Selfie Flash – Optionally enable flash selfie (Front camera only).
3. Video Camera - These settings apply to video recording only.
- Video Quality - Set the video quality you want to record to HD 1080p (default), or HD 720p
 - Video duration - no limit.
 - Exposure – Choose between +2, +1, 0 (default), -1, or -2.
 - Noise Reduction - Choose Off, Fast, or High Quality (default).
 - Video Encoder - You can choose H264(default), or H265.



- Audio Encoder - Select AMRNB, AAC (default), or OFF.
- Video Rotation – You can choose to set it to 0 (default), 90, 180, or 270.
- Time-lapse – Choose between off (default), or 0.5 seconds to 24 hours.
- Video Frame Rate – 30FPS.

4. System

- Restore defaults – Select to restore to factory settings.
- Version Info – Displays the version of the camera app.



4. SETTINGS

4.1 DISPLAY

4.1.1 BRIGHTNESS

4.1.1.1 BRIGHTNESS LEVEL

Users can adjust screen brightness in the following ways:

Quick settings panel:

Swipe down the notification bar and adjust the brightness slider to change the screen brightness.

Display settings:

Go to Settings > Display > Brightness level to adjust the brightness manually or enable Auto-brightness.

Automatic brightness adjustment:

Once enabled, the system will automatically adjust the screen brightness according to the ambient light to save battery consumption.

It is recommended to use the automatic brightness function to obtain the best visual experience and power efficiency.

4.1.1.2 ADAPTIVE BRIGHTNESS

Adaptive Brightness automatically adjusts the screen brightness based on user habits and ambient light.

How to enable: Go to Settings > Display > Adaptive Brightness and turn on this feature.

Learning mode: The system will gradually learn the optimal brightness setting based on the user's habit of manually adjusting brightness.

Using adaptive brightness can reduce the need for frequent adjustments and improve the user experience

4.1.2 LOCK DISPLAY



4.1.2.1 LOCK SCREEN

Locking the screen keeps your device secure and prevents unauthorized users from accessing it.

Locking method:

Press the Power button to instantly lock the screen.

You can set a password, pattern unlock, fingerprint or face recognition in "Settings > Security & Privacy > Screen lock".

The notification reads:

To display notification content on the lock screen, you can adjust it in "Settings > Display > Lock screen".

4.1.2.2 SCREEN TIMEOUT

The Screen Timeout feature automatically turns off the screen after a period of inactivity to save power.

How to set: Go to "Settings > Display > Sleep Timer" and select the time for the screen to automatically turn off (e.g. 15 seconds, 30 seconds, 1 minute, etc.).

Recommended settings:

Reducing the screen timeout can save battery life but may affect user convenience.

If you read or watch content for a long time, it is recommended to extend the timeout.

These settings can help users manage screen time more effectively and improve device battery life.

4.1.3 INTERACTION

4.1.3.1 AUTO-ROTATE SCREEN

Auto-rotate screen

Enable: When the device detects a change in orientation, the screen automatically rotates (for example, from portrait to landscape mode), making it suitable for watching videos, browsing the web, or using certain apps.



Disable: The screen will be fixed in its current orientation and will not change when the device is rotated.

4.1.3.2 SCREEN SAVER

Enable: Use screen saver to display a clock, photo, or other visual effect when the device is idle.

Disable: The screen saver will not be activated when the screen is idle, and the current screen will be maintained or the screen will enter sleep mode.


When to start: When "While charging" is set, the device will activate the screen saver only during charging.

4.1.3.3 GLOVE MODE

Turn on the glove mode to improve touch sensitivity, suitable for use when wearing gloves

Step 1. Swipe up from the home screen and tap Settings > Screen

Step 2. Click Glove Mode to turn it on or off

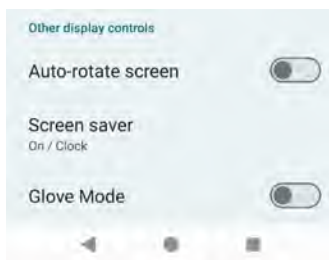

4.2 NOTIFICATION

4.2.1 MANAGE

4.2.1.1 APP NOTIFICATIONS

Tapping this allows configuring notification preferences for individual applications, such as whether to allow notifications, the notification style (sound, vibration, pop-up window), and the importance level of notifications. Customizable settings are available for different applications.

4.2.1.2 NOTIFICATION



When turned on, the device records recently received and snoozed notifications. This is very useful for viewing notifications that were accidentally swiped away earlier.

4.2.2 CONVERSATION

4.2.2.1 CONVERSATION

Displays conversations marked as priority. Currently shows "No priority conversations." Specific conversations in messaging applications can be set as priority to receive more prominent notifications.

4.2.2.2 BUBBLES

Configure whether to allow conversations to appear as floating icons (bubbles) on the screen, making it convenient to reply without leaving the current application. This feature is currently "On" and set to "Conversations can appear as floating icons."

4.2.3 SHOW NOTIFICATION

4.2.3.1 DEVICE & APP NOTIFICATIONS

Control which applications and devices can read notification content. This setting may be related to connected wearable devices or smart home devices.

4.2.3.2 NOTIFICATION ON LOCK SCREEN

Configure the notification content displayed on the lock screen. You can choose to show all content, hide sensitive content, or not show any notifications to protect personal privacy.

4.2.4 GENERAL

4.2.4.1 DO NOT DISTURB

Configure when to turn on Do Not Disturb mode, which exceptions are allowed (such as calls from specific contacts or scheduled alarms), and customize how notifications are silenced. This feature is currently "Off."

4.2.4.2 FLASH NOTIFICATIONS

Configure whether to use the device's camera flash or screen blinking to alert the user upon receiving a notification. This feature is currently "Off."



4.2.4.3 WIRELESS EMERGENCY ALERTS

Wireless Emergency Alerts (WEA) are emergency notifications sent by the government through mobile networks to warn the public of possible dangerous situations, such as natural disasters, missing children (America's Missing: Broadcasting Emergency Response, AMBER), national security threats, etc.

How to Manage Wireless Emergency Alerts

Open Settings → Safety & Emergency Assistance → Wireless Emergency Alert and select the feature you want to turn on or off.

4.2.4.4 HIDE SILENT NOTIFICATIONS IN STATUS BAR

When this option is turned on, notifications that are set to silent will not be displayed in the top status bar, helping to keep the status bar clean. This feature is currently turned off.

4.2.4.5 ALLOW NOTIFICATION SNOOZING

When this option is turned on, users can snooze certain notifications to be reminded later. This is useful for notifications that don't need immediate attention but should be addressed later. This feature is currently turned on.

4.2.4.6 NOTIFICATION DOT ON APP ICON

When this option is turned on, a small dot will appear in the upper right corner of an app icon when the app has unread notifications. This feature is currently turned on.

4.2.4.7 ENHANCED NOTIFICATIONS

When this option is turned on, the system may provide richer ways to interact with notifications, such as suggested actions and replies, based on the notification content. This feature is currently turned on.

4.3 SOUND & VIBRATION


4.3.1 AUDIO OUTPUT

Audio output covers a variety of ways, from built-in speakers, USB audio to Bluetooth devices, and can output audio through different paths, including:

- Built-in speaker (Speaker): Use the device's built-in speaker to play.



- USB Audio Out: Connect an external digital audio device (such as a USB Headset) via USB Type-C.
 - Bluetooth: Connect to Bluetooth wireless headphones, speakers or car audio systems via Bluetooth.
- Once connected, the audio will be output to the stored device. Connection method: Settings -> Connected devices -> Pair new device

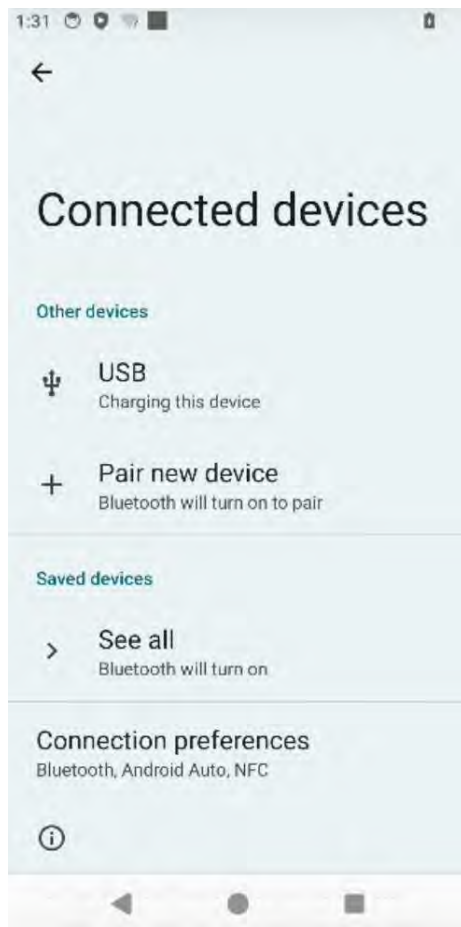

4.3.2 VOLUME

The volume is divided into different categories, and the volume of each category can be adjusted independently:

Media volume: Play music, movies, games, etc.



Call volume: Incoming call ringtone.


Ring volume: App notification sound.

Notification volume: Voice call volume.

Alarm volume: Alarm sound.

You can adjust the volume by adjusting the scroll bar. To adjust the volume:


Settings -> Sound and vibration

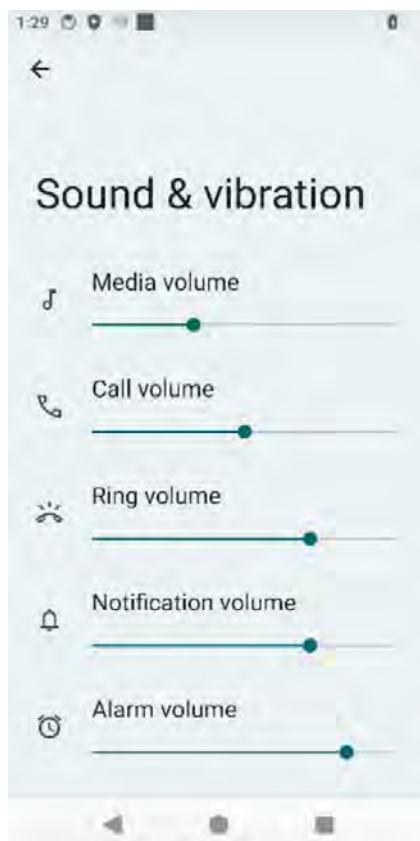


4.3.3 VIBRATION

Enable or disable vibration for device and touch.



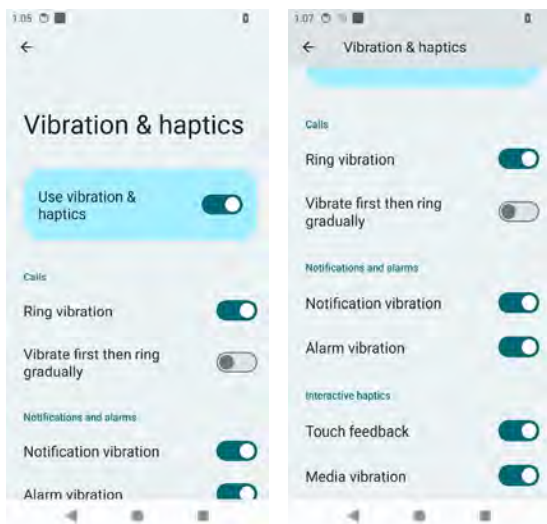

4.4 WALLPAPER

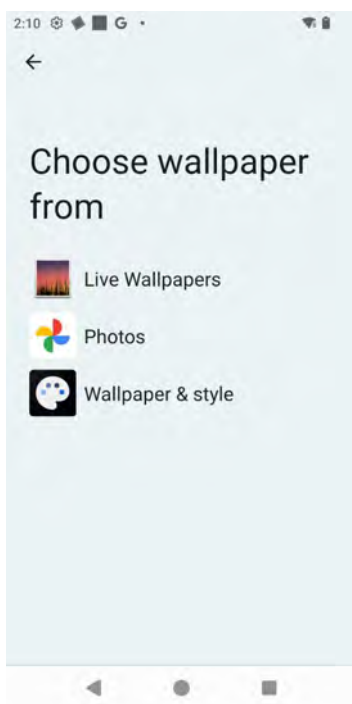

Live Wallpapers: Select animated wallpapers that bring movement to the screen.



Photos: Choose favorite pictures from the device's gallery to use as unique personal wallpaper.

Wallpaper & style: Browse and set from the device's built-in or provided selection of wallpapers. Options to Dark theme, Themed icons and App grid can be available here.

4.5 ACCESSIBILITY

4.5.1 SCREEN READER

TalkBack

This is a screen reader service that, when turned on, speaks the items on the screen, such as buttons, images, and text. This feature is currently "Off." Tapping it allows you to turn it on and configure related settings.

4.5.2 DISPLAY

Select to Speak

When turned on, this allows users to select specific text on the screen and have the device read it aloud. This feature is currently "Off." Tapping it allows you to turn it on and use it.

Display size and text

Adjust the size of text and display elements on the screen to improve readability. Users can adjust font size, display size, and bold text options.

Color and motion

Adjust the screen's color settings, such as color correction, invert colors, and grayscale mode, to accommodate different visual needs. You can also control animation effects, such as removing animations to reduce visual distractions.

Extra dim

When turned on, the screen brightness is further reduced below the phone's minimum brightness, providing a more comfortable reading experience in low-light environments. This feature is currently turned off; you can turn it on by sliding the switch.

Magnification



Provides screen magnification features to help visually impaired users see screen content more clearly. You can configure gestures or buttons to activate the magnification function. This feature is currently "Off." Tapping it allows you to configure it.

4.5.3 INTERACTION CONTROLS

Accessibility Menu

When turned on, a large on-screen menu appears, providing quick access to commonly used accessibility features and system controls, such as volume, brightness, screenshots, Google Assistant, etc. This feature is currently "Off." Tapping it allows turning it on and customizing the menu content.

Switch Access

Allows control of the device using one or more hardware switches or the front camera for actions like tapping the screen or scrolling. This is very useful for users with motor impairments. This feature is currently "Off." Tapping it allows configuration.

Timing controls

Adjust time-related settings for interactions, such as "Time to take action (Accessibility timeout)" and "Touch and hold delay," giving more time to interact with the device.

System controls

Provides additional system control options, which may include customizing the power button behavior, volume control, etc.

Vibration & haptics

Adjust the device's vibration intensity and haptic feedback settings, such as notification vibration and touch vibration. This feature is currently "On." Tapping it allows adjustment of detailed settings.

4.5.4 CAPTIONS

Live Caption

When turned on, the device automatically generates captions for media being played, including videos, podcasts, and voice messages.



Caption preferences

Adjust the display style of captions, such as text size, font, color, and background, to improve caption readability. This feature is currently "Off." Tapping it allows configuration.

4.5.5 AUDIO

Audio description

When turned on, supported movies and TV shows will play spoken descriptions of what's happening on the screen, helping visually impaired users understand the content. This feature is currently turned off; it can be turned on by sliding the switch.

Flash notifications

Configure whether the device's camera flash or screen blinks to alert about notifications. This feature is currently "Off."

Hearing devices

Manage connected hearing devices. If hearing aids or other compatible devices are paired with the phone, their settings can be adjusted here. Currently, "No hearing devices connected" is indicated.

Audio adjustment

Customize audio output for different hearing needs. Options to adjust sound balance between left and right ears or enable a mono audio setting might be available here.

4.5.6 GENERAL

Accessibility shortcuts

Configure shortcuts to quickly access accessibility features, such as using volume keys or gestures to turn on features like TalkBack or Magnification.

Text-to-speech output

Adjust settings for text-to-speech engines, including preferred engine, speech rate, and language. This affects how the device reads text aloud for features like TalkBack and Select to Speak.



4.6 SECURITY

4.6.1 SECURITY STATUS



Google play protect

Shows the scan status of Google Play Protect., it indicates "Apps scanned at 1:58 PM," meaning Google Play Protect regularly scans apps on the device to detect potentially harmful software.



Find My Device

Shows the status of the "Find My Device" feature, it indicates "On," meaning this feature is enabled and can be used to locate, lock, or erase the device if lost or stolen.

Security update

Shows the date of the last security update. It indicates "April 5, 2025." It is recommended to regularly check for and install the latest security updates to protect the device from the latest security vulnerabilities.

Google Play system update

Shows the date of the last Google Play system update. It indicates "August 1, 2024." This update is different from Android OS updates and primarily targets Google Play services and related modules.

4.6.2 DEVICE SECURITY

4.6.2.1 SCREEN LOCK

Screen lock

Shows the currently set screen lock type. It indicates "Swipe," meaning the screen is currently unlocked using a swipe gesture. Tapping this allows changing the screen lock method, such as setting a PIN, pattern, or password.

4.7 PRIVACY

Privacy dashboard

Tapping this displays which apps have recently used permissions, such as location, microphone, and camera. This helps understand app behavior and check for any inappropriate permission usage.

Permission manager

you can manage the permissions for each application in detail. You can view different categories of permissions (e.g., contacts, files and media, location, etc.) and configure whether to allow each app to access this data, and when (e.g., only while using the app).

Data sharing updates for location



This option provides updates on how applications share location data, helping users understand and manage their location privacy.

Show password

When this option is turned on, the characters entered are briefly displayed while typing passwords, making it easier for users to check if they have entered them correctly. This feature is currently turned on in the screenshot.

Notifications on lock screen

Configure the notification content displayed on the lock screen. You can choose to show all notification content, hide sensitive content, or not show notifications at all. The current setting is "Show all notification content."

Show media on lock screen

When this option is turned on, the media player remains open on the lock screen for quick resumption of playback, even when the screen is locked. This feature is currently turned on in the screenshot.

Android System Intelligence

This feature provides suggestions based on interaction with people, apps, and content, such as smart replies and contextual awareness. Tap to view or manage related settings.

App content

This option allows or prohibits applications from sending content to the Android system. Enabling this feature may allow for easier information sharing or more convenient features between applications. This feature is currently turned on.

Show Clipboard Access

When this option is turned on, a message notification will appear on the screen when an application accesses text, images, or other content that has been copied. This helps monitor how applications use the clipboard. This feature is currently turned on.

Health Connect



Tapping this takes to Health Connect, a platform for centrally managing health data from different applications. Here, control over which applications can access and share health data is available.

Autofill service from Google

Manage Google's Autofill service, including saved passwords, credit card information, and addresses. When enabled, this allows for quick filling of this information when needed, but it also involves the security of sensitive personal data, so set it up carefully.

Activity control

Tapping this takes to the Activity controls settings for the Google Account, where a choice of which activities and information to allow Google to save, such as Web & App Activity, Location History, YouTube History, etc., for personalized experiences is available.

Ads

Manage the ad personalization settings on the device. The option to turn personalized ads on or off, as well as reset the advertising ID and manage other related settings, is available.

Usage and Diagnostics

Configure whether to share data about how the device is used and diagnostic information with Google to help improve the Android system. The option to turn this feature on or off is available.

4.8 LOCATION

4.8.1 GO TO "LOCATION" SETTINGS

Step 1. Open the Settings app

- From the Home screen or in the application list, tap Settings.

Step 2. Find the "Location" option

- On the settings page, scroll down, find "Location" and tap to enter.

4.8.2 ENABLE OR DISABLE LOCATION

- On the Location settings page, tap the Toggle Switch to turn location services on or off:



- o On: Allow the app to access your location information.
- o Off: Prevent apps from accessing your location information.

4.8.3 APP LOCATION PERMISSION MANAGEMENT

On the Location page, scroll down to Recent Location Access.

Here you will see a list showing:

- The name of the application that accessed the most recent location.
- The time the app accessed the location (for example: "5 minutes ago").

4.8.4 APP LOCATION PERMISSION MANAGEMENT

1. Click App location permissions.
 2. Select the app you want to manage.
- "Allow all the time": The application can continue to access location information even when it is running in the background. It is suitable for applications that need to track location (such as driving navigation, health tracking, etc.).
 - "Allow only while using the app": The location can be accessed only when the app is open.
 - "Ask every time": Ask whether to allow access every time you use it.
 - "Never allow" (Deny): prohibit the app from accessing location information.

★ Tip: Some apps (such as Maps, Navigation) may need to enable background location access (Allow all the time) to provide full functionality.

4.9 SAFETY & EMERGENCY

Medical information

Name, Date of birth, blood type, allergies, and other medical information can be set up. This information can be helpful to first responders in an emergency, and it may be viewable even when the phone is locked. Currently, it shows "No information," so it is recommended to set this up.

Emergency contacts



Close friends or family members who can be quickly contacted in an emergency can be set up here. Currently, it shows "No information," so it is recommended to add contacts.

Emergency SOS

Configure quick actions, such as rapidly pressing the power button, to trigger an emergency request for help. This feature is currently "On." Tap to view or change the trigger method and contacts.

Crisis Alerts

After signing into the "Personal Safety" application, alerts for natural disasters or other crisis events may be received. Currently, it shows "Sign in to Personal Safety," indicating that the Personal Safety app needs to be signed into to use this feature.

Emergency Location Service

When making an emergency call, this sends the device's precise location to emergency services. This feature is currently "On."

Emergency Location Service

When making an emergency call, this sends the device's precise location to emergency services. This feature is currently "On."

Earthquake alerts

Receive nearby earthquake alerts to take protective measures early. This feature is currently "On."

Unknown tracker alerts

Receive alerts when an unknown Bluetooth tracker is detected nearby and may be following the user.

Wireless Emergency alerts

Upon receiving a Wireless Emergency Alert (WEA), the device will emit vibrations, play an alert sound, and display an emergency notification


Examples of such alerts include the following:



1. [Earthquake Alert] At approximately 07:38 on January 26, a significant and perceptible earthquake occurred in the southern region. Individuals are advised to be cautious of strong tremors and seek nearby shelter. – Central Weather Bureau

2. [Air Raid Drill – Northern Region] A civil defense exercise is being conducted. Motorists are instructed to reduce speed and pull over safely. The public is advised to follow official guidance and evacuate to the nearest designated shelter.

4.10 PASSWORDS & ACCOUNTS

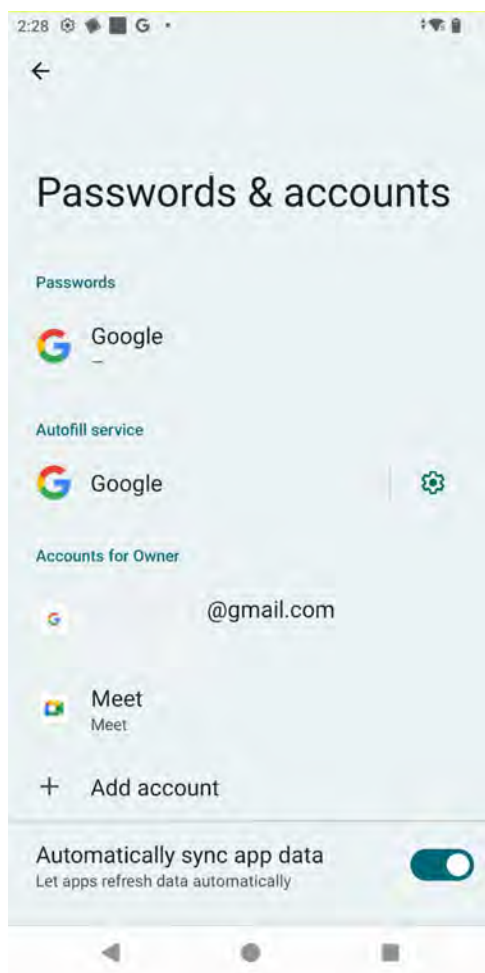

4.10.1 PASSWORD



Google

Tapping this allows viewing passwords saved and synced with the Google Account. It typically lists the accounts and passwords used on different websites and applications. You can view, edit, or delete these stored credentials.

4.10.2 AUTOFILL SERVICE

Google

Shows the currently set autofill service provider on the device. Autofill services can help automatically enter saved information, such as passwords, credit card details, and addresses, when logging into apps or filling out forms. Tapping the gear icon on the right allows access to detailed autofill settings.

4.10.3 ACCOUNTS FOR OWNER

Google

Shows the primary Google Account logged in on the device for the main user (owner). Tapping this allows managing the account's sync settings, personal information, security settings, etc.


Meet (Meet)

Shows the Meet account logged in on the device for the main user. Meet is Google's video conferencing application, and relevant account information can be viewed or managed here.

+ Add account

Tapping this allows adding other types of accounts to the device, such as email accounts, social media accounts, or other application accounts.



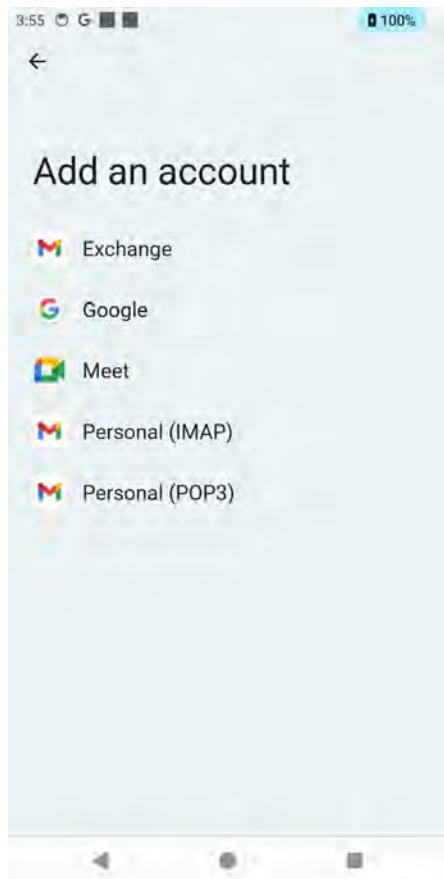

After tapping "Add account" in the "Passwords & accounts" settings, allowing a choice of the account type to add. Here's a brief explanation of each option:

Exchange

Tap this option to add an Exchange account, typically used for work or school email, calendar, and contact synchronization. The relevant server information, username, and password will need to be entered.

Google



Tap this option to add a Google Account. Adding a Google Account allows synchronization of data for Google services such as Gmail, Google Drive, Google Calendar, and Google Photos, and enables the use of the Google Play Store to download applications.

Meet

Tap this option to add a Google Meet account. Meet is Google's video conferencing application. Adding an account enables the use of Meet for video calls and meetings on the device.

Personal (IMAP)

Tap this option to add a personal email account using the IMAP protocol. IMAP allows access to the same emails on multiple devices, and emails are usually kept on the server. The email address, password, and IMAP server settings will need to be entered.

Personal (POP3)

Tap this option to add a personal email account using the POP3 protocol. POP3 typically downloads emails to the device and may delete them from the server. The email address, password, and POP3 server settings will need to be entered.

Tap the corresponding option based on the type of account to add, and then follow the on-screen instructions to enter the required account information and server settings (if necessary). After successfully adding the account, it will be visible in the "Passwords & accounts" settings, where its synchronization settings can be managed.

Automatically sync app data

This option controls whether applications automatically refresh data in the background. When turned on, applications will periodically update information.

4.11 DIGITAL WELLBEING & PARENTAL CONTROL

The "Digital Wellbeing & Parental Controls" page offers tools for monitoring device usage, managing screen time, reducing interruptions, and setting parental controls to ensure a healthy digital experience.





Dashboard

The dashboard displays a daily summary of screen time, highlighting the total minutes spent on the device for the current day.

A circular graph visualizes time spent on individual apps, such as Settings, Snapdragon C..., Play Store, and others.

Additional metrics include the number of device unlocks and notifications received throughout the day.

Key Features



- App Limits

Set daily time limits for specific apps to help manage screen time.

- Bedtime Mode

Set daily time limits for specific apps to help manage screen time.

- Focus Mode

Pause distracting apps temporarily to improve concentration.

- Manage Notifications

Customize notification settings to reduce interruptions.

- Do Not Disturb

Silence calls, alerts, and notifications during designated times.

- Heads Up

Enable reminders to take breaks from the screen.

- Show Icon in the App List

Toggle the visibility of the Digital Wellbeing icon in the app drawer.

Parental Controls

Parental controls can be set up to restrict content, manage privacy settings, and establish screen time rules for a child or teen's Google Account.

The setup process guides the user through selecting appropriate content ratings and configuring usage limits for the device.

Follow the on-screen instructions to choose content restrictions, privacy settings, and screen time rules suitable for the child's or teen's Google Account

4.12 GOOGLE

The "Google" settings page provides access to a variety of Google services, including backup, device security, account autofill, payments, sharing, family management, privacy, and connected



device options. Services are organized under "Recommended" and "All services" tabs for easier navigation.

Recommended Tab

- Backup

Displays current backup status, including storage usage and backup activity. Management options are available to review or modify backup settings.

- Find My Device

Provides access to the Find My Device app or web service for locating a lost or stolen device. Download links are provided for installation if necessary.

- Autofill

Enables autofill of forms using information saved to a Google Account. The setup process can be continued from this section.

- Google Wallet

Allows tap-to-pay in stores, boarding flights, and more, using the phone. Installation options for Google Wallet are presented if not already set up.

- Quick Share

Facilitates sharing with contacts and updating who can share with the device. Settings can be accessed for further customization.

- Family Group

Offers options to share Google services, storage, and subscriptions with family members. The setup process can be continued from this section.

- What's New

Presents updates and new features for Android devices, such as those released in March 2025.

All Services Tab



- Backup & Restore

Backup: Manage device data backup to Google Drive.

Set up nearby device: Configure new devices using existing Google account data.

- Kids & Family

Parental controls: Set restrictions and manage content for children's accounts.

- Personal & Device Safety

Find My Device: Locate, lock, or erase a device remotely.

- Device Policy

Set up work profile: Configure a separate profile for work-related apps and data.

- Other

Location Accuracy: Manage settings related to device location accuracy.

- Privacy & Security

Ads: Manage ad personalization preferences.

Personalize using shared data: Control how shared data is used for personalization.

Usage & diagnostics: Allow or restrict sharing of device usage and diagnostic data with Google.

- Autofill & Passwords

Autofill with Google: Manage autofill settings for forms and passwords.

Passkeys and devices: Configure passkeys for passwordless sign-in.

Phone number sharing: Manage sharing of phone numbers for account recovery and other services.

SMS verification codes: Enable or disable automatic SMS code retrieval for verification.

- Settings for Google Apps



Search, Assistant & Voice: Manage settings for Google Search, Assistant, and voice services.

- Connected Devices & Sharing

Cast options: Configure casting to supported devices.

Cross-device services: Manage features that work across multiple devices.

Devices: View and manage devices linked to the Google account.

Quick Share: Adjust sharing settings for sending and receiving files.

Thread networks: Manage connectivity for Thread-enabled smart home devices.

This guide summarizes the main functions and navigation structure of the "Google" settings page, supporting efficient management of Google services, privacy, security, and connected device features on Android.

4.13 SYSTEM

Language

Configure the device's system language, app language preferences, and languages for speech input. Languages can be added, removed, or ordered according to personal needs.

Keyboard

Adjust the settings for the on-screen keyboard, such as input methods, auto-correction, text prediction, etc. Installed keyboard applications and related tools can also be managed here.

Gestures

Set up and customize the device's navigation methods, such as using swipe gestures to go back, to the home screen, or to open recent applications and open Camera. Some advanced gesture features can also be configured here.

Date & Time

Set the device's date, time, and time zone. Automatic or manual setting options are available, as well as adjustments for the time display format.



Backup

Manage the device's data backup settings. You can view the last backup time, configure a backup account, and choose the types of data to back up to ensure data security.

Software Update

Check for and install the latest updates for the Android operating system. Keeping the system updated helps improve the device's security, stability, and performance. Currently displayed as "Updated to Android 14."

Multiple Users

Set up multiple user accounts on the device. Each user has independent applications, data, and settings, making it convenient for multiple people to share the same device. Currently displayed as "Signed in as Owner."

Reset Options

Provides various ways to reset the device, including resetting Wi-Fi, mobile network, and Bluetooth; resetting app preferences; and performing a factory data reset (erasing all data). Be sure to understand the implications before performing any reset operation.

ExLogger

Specific application related to system logging services, used for diagnosing or recording system behavior.

4.14 MAGIC KEYS

Please refer to 2.2 Product Details for the location of the buttons.


Scan key (left) / Scan key (right) / Push-to-talk key (Program key) supports Remap keys & shortcuts and Wakeup keys. (As shown in the picture)





1. Remap keys & shortcuts


On this page, click the desired remap key

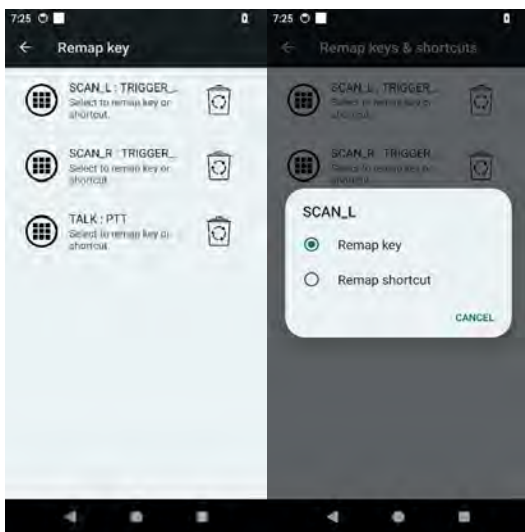

Step 1. Remap key


On this page, select which function to remap to.



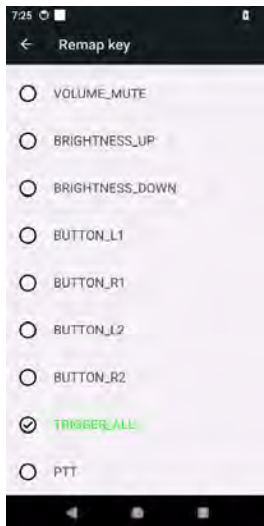

Step 2. Remap shortcut


On this page, select the shortcut to which you want to remap.

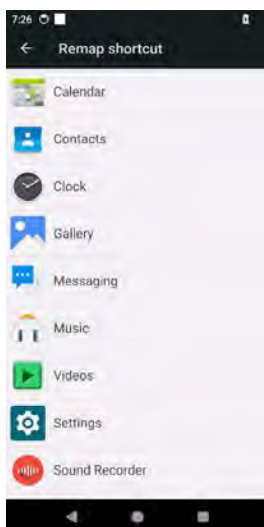

2. Wakeup keys

After checking this button, the user can wake up the device.



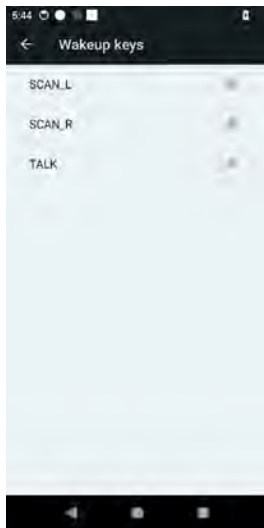

3. Auto-repeat

After checking, long press can send keycode repeatedly.



5. CONNECTION

5.1 INTERNET

How to Check if Your Phone is Using 4G or 5G

Method 1: Check the Status Bar

Look at the top of your screen, in the status bar (where the time, battery, and signal icons are). You should see a small icon near the signal bars, such as:

- 4G / LTE – means you're connected to a 4G network.
- 5G – means you're on a 5G network.

Method 2: Open the Settings app.

1. Go to "Network & Internet".
2. Tap on "Internet".
3. It will show you what your phone is currently connected to.

How to Turn on Airplane Mode

Method 1: Using Quick Settings

1. Swipe down from the top of the screen to open the notification shade.
2. Swipe down again (if needed) to fully expand the Quick Settings panel.
3. Look for the Airplane Mode icon.
4. Tap it to turn it on. Your mobile data, Wi-Fi, and Bluetooth will be turned off automatically.

Method 2: Using Settings

1. Open the Settings app.
2. Tap "Network & Internet".
3. Toggle "Airplane mode" on.

How to Turn on Data Saver



1. Open the Settings app.
2. Tap "Network & Internet".
3. Tap "Data Saver" (you might need to scroll down).
4. Toggle the switch on.

This feature restricts background data usage to help you save mobile data. Apps that are not in active use won't be allowed to use data in the background.

How to Add an eSIM

Method 1: Add eSIM Using a QR Code

1. Open the Settings app.
2. Tap "Network & Internet".
3. Tap "SIMs".
4. Tap "+ Add SIM".
5. Tap "Download eSIM".
6. Choose Scan QR code.
7. Use your phone to scan the QR code provided by your carrier.
8. Tap the check icon to download eSIM.

Method 2: Add eSIM Manually (if QR code isn't available)

1. Follow steps 1–5 above. Instead of scanning a QR code, choose Enter details manually.
2. Input the SM-DP+ address and activation code provided by your carrier.
3. Tap the check icon to download eSIM.

How to Make Emergency Calls Without a SIM Card

Even if your phone doesn't have a SIM card, you can still make emergency calls.

Method 1: From the Lock Screen



1. Press the Power button to turn on the screen.
2. On the lock screen, tap "Emergency".
3. You can now dial an emergency number like:
 - 112 (common in Europe and other countries)
 - 911 (USA, Canada)
 - Or your country's emergency number.
 - Press the Power button to turn on the screen.
4. Press the call button.

Method 2: From the Phone App

1. Open the Phone app.
2. Dial the emergency number (e.g., 112 or 911).
3. Press the call button.

5.2 WI-FI

Wireless Local Area Networks

A Wireless Local Area Network (WLAN) is a type of network that allows devices to connect and communicate wirelessly within a limited area, such as a home, office, or building. Unlike traditional wired networks that require physical cables, WLANs use radio waves to transmit data, enabling greater mobility and convenience for users.

WLANs are commonly used in environments where flexibility and easy access to the network are essential. They are powered by access points (APs), which act as the central hubs for wireless communication, connecting devices like laptops, smartphones, and tablets to the network. The Wi-Fi technology is the most widely used standard for WLANs, providing both convenience and speed for everyday internet and network usage.

To ensure secure communication, WLANs offer various security protocols like WPA2, and WPA3, which protect the network from unauthorized access and data breaches. Whether for home use or enterprise applications, WLANs have become an integral part of modern networking by



offering wireless convenience without sacrificing the speed and functionality of traditional wired networks.

To set up a **Wireless Local Area Network (WLAN)**, follow these key steps:

1. Refer to Infrastructure Documentation:

Consult the documentation provided with your network infrastructure components, such as access points (APs), switches, and Radius servers. This documentation will guide you through the process of setting up and configuring each device to ensure they work together to create a functional WLAN.

2. Configure WLAN Security:

Once the infrastructure (APs, switches, etc.) is set up, configure the network to enforce the chosen WLAN security scheme. This may include options like WPA2, WPA3, or OPEN, depending on the level of security required for your environment.

The infrastructure must be set up to match the selected security settings, and the security protocols should be applied consistently across the network to ensure protection from unauthorized access.

3. Device Configuration:

After securing the network infrastructure, use the **Network & internet** settings on your device to configure it to match the security settings of the network.

This may involve selecting the appropriate Wi-Fi network, entering a password or security credentials, and ensuring that your device uses the correct **security protocol** (such as WPA2 or WPA3) as set by the network infrastructure.

Following these steps will ensure that both the network infrastructure and your device are properly configured to work together securely and efficiently on the WLAN.

The supported Wi-Fi security types include:

1. **Open (No Authentication):** Connects to unsecured networks without requiring a password.



2. **WPA2 (Wi-Fi Protected Access 2) - PSK and Enterprise:** Provides stronger data protection and network access control. The Enterprise mode uses Extensible Authentication Protocol (EAP) methods such as EAP-TLS, EAP-TTLS, and PEAP for authentication.
3. **WPA3 (Wi-Fi Protected Access 3) - Personal and Enterprise:** The latest standard offering enhanced security features.
WPA3-Personal: Replaces the pre-shared key (PSK) method with Simultaneous Authentication of Equals (SAE), providing stronger protection against password guessing attacks.
WPA3-Enterprise: Offers enhanced authentication and encryption methods, including an optional 192-bit security mode for sensitive environments.
4. **Wi-Fi Enhanced Open (Opportunistic Wireless Encryption - OWE):** Provides encryption and privacy on open, non-password-protected networks, enhancing security in public Wi-Fi environments.

Connecting to a Wi-Fi Network

1. Open **Settings**.
2. Open **Network & Internet > Internet**.
3. Choose your Wi-Fi name.
4. If it asks, type the password.
5. When it says **Connected**, you're online!

Removing a Wi-Fi Network

1. Open **Settings**.
2. Open **Network & Internet > Internet**.
3. Scroll down and tap **Saved networks**.
4. Tap the network you want to remove.
5. Tap **Forget**.

WLAN Configuration

This section provides information on configuring a Wi-Fi Network.

1. Open **Settings**.
2. Tap **Network & Internet > Internet**.
3. Turn Wi-Fi ON.
4. Your device will search for available networks and show them.
5. Scroll and select the Wi-Fi network you want to connect to.
6. If the network is **open** (no password), it will connect automatically. For others, a pop-up will appear.



7. For **WPA/WPA2, WPA3** networks, enter the password and tap **Connect**.
8. For **WPA/WPA2/WPA3 Enterprise**, you may need to:
 - Choose an **EAP method** (like PEAP or TLS).
 - Enter any required details (certificate, domain, etc.).

Manually Adding a Wi-Fi Network

1. Open **Settings**.
2. Tap **Network & Internet > Internet**.
3. Turn Wi-Fi ON.
4. Scroll down and tap **Add network**.
5. Type the **Network name** (SSID).
6. Choose the **security type** (e.g., None, WPA2, WPA3, etc.).
7. If security is **None** or **Enhanced Open**, tap **Save**.
8. If security is **WPA/WPA2**, or **WPA3**, enter the **password** and tap **Save**.
 - ◆ For **WPA/WPA2/WPA3 Enterprise**:
 - Choose an **EAP method** (like PEAP or TLS).
 - Enter the necessary details (certificates, domain, etc.).
 - ◆ To connect to the saved network, touch and hold the network name and tap **Connect**.

Configuring for a Proxy Server

1. Open **Settings**.
2. Tap **Network & Internet > Internet**.
3. Turn Wi-Fi ON.
4. Select and tap your **Wi-Fi network**.
5. Tap **Advanced options**.
6. Tap **Proxy** and choose **Manual**.
7. Enter the **Proxy hostname** (server address).
8. Enter the **Proxy port** (port number).
9. In **Bypass proxy for**, add websites that shouldn't use the proxy (separate with commas).
10. Tap **Save** or **Connect**.

Configuring the Device to Use a Static IP Address

1. Open **Settings**.
2. Tap **Network & Internet > Internet**.
3. Turn Wi-Fi ON.
4. Select your **Wi-Fi network**.
5. Tap **Edit** (to modify network settings).



6. Tap **Advanced options**.
7. Tap **IP settings** and select **Static**.
8. Enter your **IP address**.
9. If needed, enter the **Gateway address**.
10. If needed, enter the **Network prefix length**.
11. If needed, enter **DNS 1** and **DNS 2** addresses.
12. Tap **Save** or **Connect**.

Wi-Fi Preferences

1. Open **Settings**.
2. Tap **Network & Internet > Internet**.
3. Scroll down and tap **Network preferences**.
4. From here, you can:
 - **Turn on Wi-Fi automatically**: Wi-Fi will reconnect when near saved networks.
 - **Notify for public networks**: Get notified when a good public Wi-Fi is nearby.
 - **Install Certificates**: Tap to install certificates.
 - **Wi-Fi Direct**: See a list of devices for direct Wi-Fi connection.

Wi-Fi Direct

1. Open **Settings**.
2. Tap **Network & Internet > Internet > Advanced > Wi-Fi Direct**. Your device will start searching for nearby Wi-Fi Direct devices.
3. Under **Peer devices**, tap the other device's name.
4. On the other device, select **Accept**.

Once connected, both devices will show each other in the Wi-Fi Direct list.


5.3 BT

1. On the Home screen, swipe down or tap the App Drawer icon to display all installed apps.
2. In the app drawer, find and tap the Settings icon  to enter the Settings menu.

Select Settings

3. Select the connected device




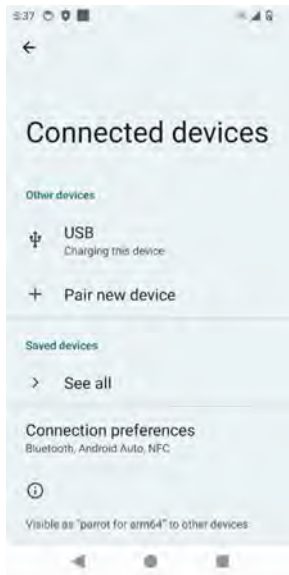

4. Select Connection Preferences

Note: If you choose to pair new device, please proceed to step 7

5. Choose Bluetooth

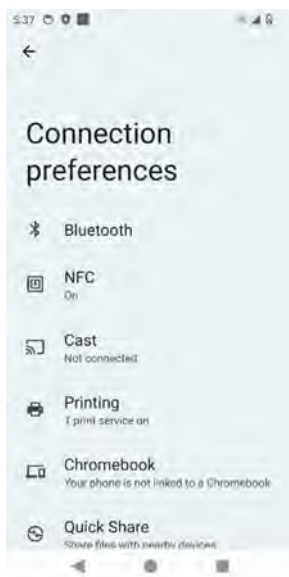


6. Enable Bluetooth and choose pair new device

Note. Default is disable




7. You can choose the device to be connected in available device list

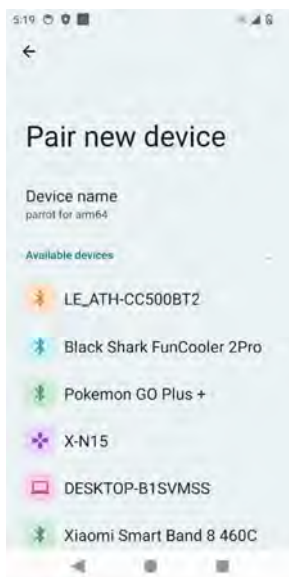

8. Pair the new device



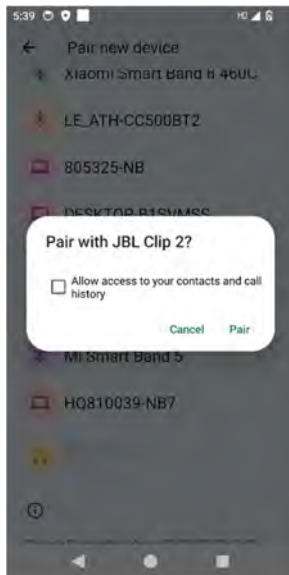

9. You can find the connected device list



5.4 NFC

NFC is a short-range wireless connection technology standard that enables secure transactions between card readers and contactless smart cards.



This technology is based on ISO/IEC 14443 type A and B, ISO/IEC 15693 and FeliCa standards.


This device supports the following operating modes:

- Card reader mode
- Card emulation mode.

Using NFC, the device can have the following applications:

- Read contactless cards such as contactless tickets, ID cards and e-passports.
- Read and write information to contactless cards (such as SmartPosters or tickets) and devices with NFC interface (such as vending machines).
- Read information from supported medical sensors.
- Pair with supported Bluetooth devices such as printers, ring scanners and headsets.
- Simulate contactless cards such as payment cards, tickets or SmartPoster.

The NFC of RC40 is located on the top of the device, as shown in the blue box in the figure below.

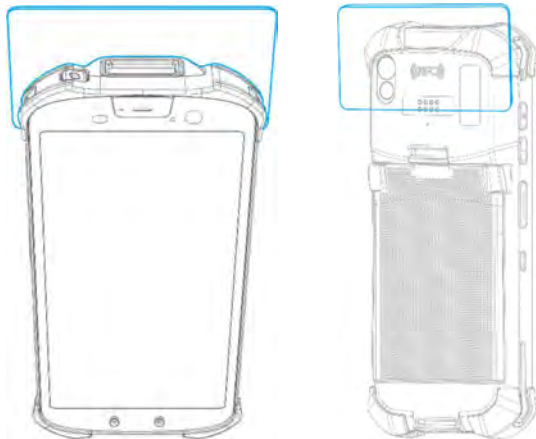

6. APPLICATION DEPLOYMENT

6.1 EZCLONE WORKSTATION USER GUIDE

6.1.1 DOWNLOAD



You can download the EZClone workstation by [link](#) here.

已註解 [MT(1): One hypelink here

Supported Platforms	Workstation Tool, Windows 7 and newer
Supported Devices	RC40; Android 14 and later
Software Capabilities	Connect your device to network, Configure device settings and security, Perform OS updates, Install and launch applications, Wipe and reset the device, manage mobile profiles, Managing device Wi-fi, Cellular, Hotspot, Bluetooth

6.1.2 INSTALL

Whenever a new version is released, the package includes two files for installation (see below). Double-click any file for the next stage.

EZClone Workstation.msi	2025/1/17 下午 04:01	Windows Installer 封裝	28,726 KB
setup.exe	2025/1/17 下午 04:01	應用程式	553 KB

The installation Wizard will guide you to the following steps



Step 1


Step 2



(Hovorka: English screens please)

Step 3


Step 4

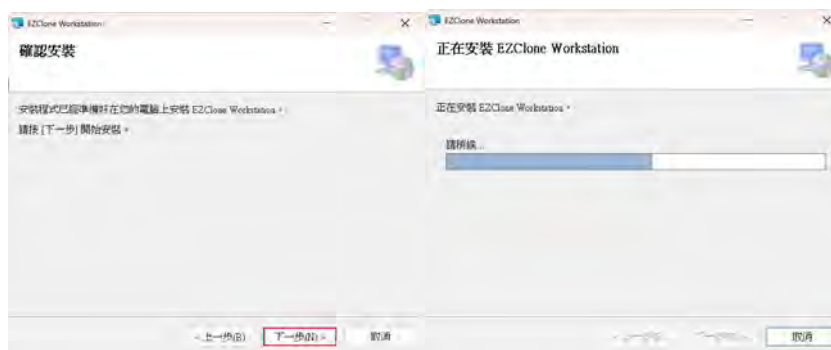

Step 5




You can find the main program and uninstaller in the program menu, shortcut in the Desktop.

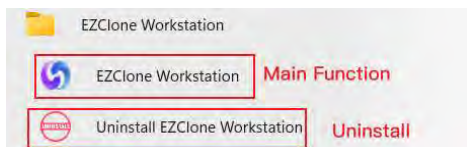


6.1.3 MAIN FUNCTION

Currently, the main function has 7 navigation pages for use.

- (1) Settings
- (2) Provisioning
- (3) QR Codes
- (4) Export
- (5) Import
- (6) Theme
- (7) About

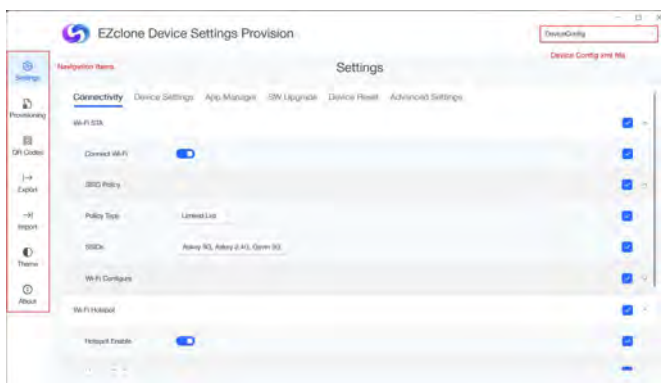

First, check the resources files in the <Your Installation Path>\Resources

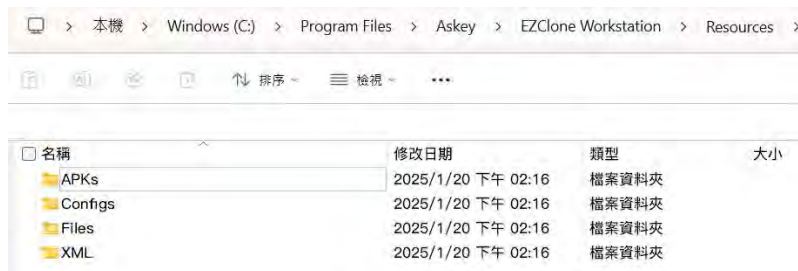

There are four folders for each type

- (1) APKs : Put all the apk files
- (2) Configs : Put config files / HTTP(s) server related files
- (3) Files : Put FOTA bin files
- (4) XML : Put device control function file organized with xml format

The rightmost field in the title bar is the device config file selection area.




6.1.4 SETTINGS PAGE

The content in the settings page comes from certain DeviceConfig xml file which you select.

- (A) Tab – Switch between categories
- (B) Function – Control values for each item
- (C) CheckBox – Function inclusion for QR code source
- (D) Expander – Expandable or not



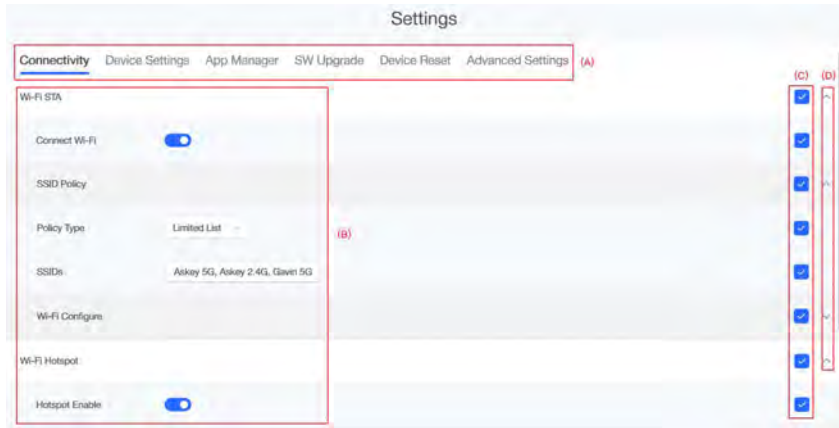

The mechanism to the checkbox:

Classify level 1 category ...(A)

Classify level 2 category / function ...(B)

Classify content function ...(C)



In the example, [Wi-Fi Hotspot] includes [Hotspot Enable] and [Hotspot Configure].

[Hotspot Configure] includes [SSID] [Security] [Band] and [Password].

Case 1: If [Wi-Fi Hotspot] is checked.

[Hotspot Enable] [Hotspot Configure] [SSID] [Security] [Band] [Password] are also checked.





Case 2: If **[Wi-Fi Hotspot]** is unchecked.

[Hotspot Enable] **[Hotspot Configure]** **[SSID]** **[Security]** **[Band]** **[Password]** are unchecked.



Case 3: If **[Hotspot Enable]** is checked and **[Hotspot Configure]** is unchecked.

[Wi-Fi Hotspot] Is partially checked.




Case 4: If [Hotspot Enable] is unchecked and [Hotspot Configure] is checked.

[Wi-Fi Hotspot] Is partially checked, [SSID] [Security] [Band] [Password] are checked.



6.1.5 PROVISIONING PAGE

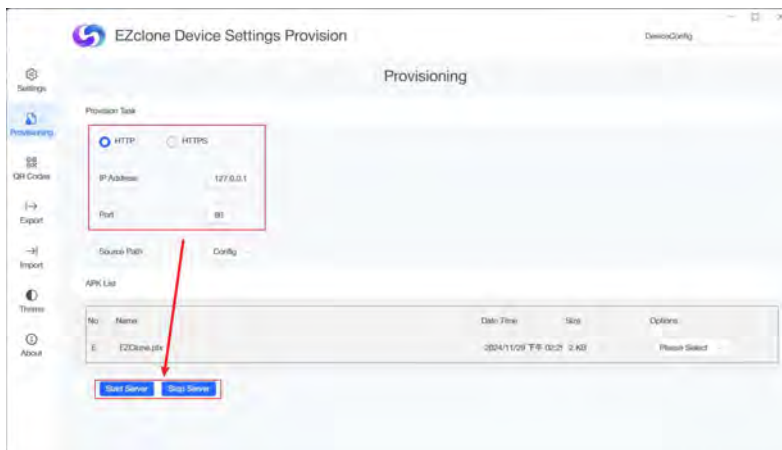

Select HTTP or HTTPS server to start for device to pull QR Code data.


The IP Address and Port can be changed to fit your needs

Source Path includes APKs, Files, XML and Config to choose from.

The content varies when a kind of Source Path is selected.




The Source Path is read from <Your Installation Path>\Resources\ which was mentioned previously.

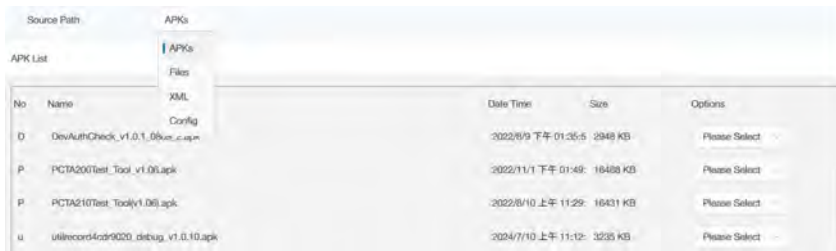

No	Name	Date Time	Size	Options
D	DevAuthCheck_v1.0.1.0@un_csqm	2022/5/9 下午 01:35:5	2948 KB	Please Select
P	PCTA200Test_Tool_v1.06.apk	2022/11/1 下午 01:48	16488 KB	Please Select
P	PCTA210Test_Tool_v1.06.apk	2022/8/10 上午 11:29	16431 KB	Please Select
u	utilrecord4cd99200_debug_v1.0.10.apk	2024/7/10 上午 11:12	3235 KB	Please Select


For APKs type, there are PREINSTALLED / FORCE_INSTALLED / uninstall apk to select in the option field.

This is the action to perform from EZClone Workstation server to your device.

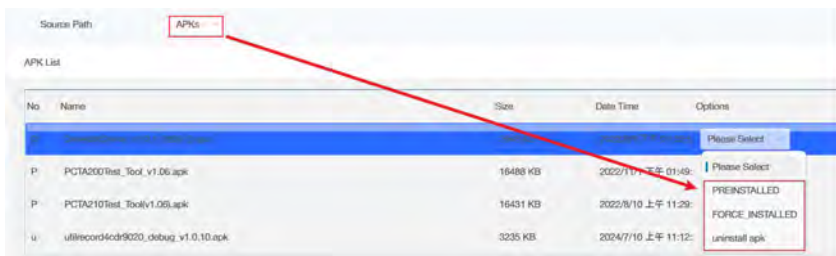


No	Name	Size	Date Time	Options
D	DevAuthCheck_v1.0.1.0@un_csqm	2948 KB	2022/5/9 下午 01:35:5	Please Select
P	PCTA200Test_Tool_v1.06.apk	16488 KB	2022/11/1 下午 01:48	PREINSTALLED FORCE_INSTALLED uninstall apk
P	PCTA210Test_Tool_v1.06.apk	16431 KB	2022/8/10 上午 11:29	
u	utilrecord4cd99200_debug_v1.0.10.apk	3235 KB	2024/7/10 上午 11:12	

6.1.6 QR CODES PAGE

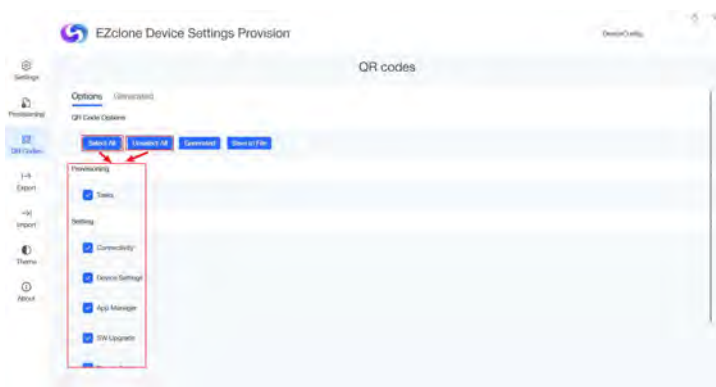


In the Options tab, the button [Select All] and [Unselect All] controls whether the Provisioning and Setting items exist in the current device config or not.

Partially click checkbox by manual is often used, the button [Generated] is used to generate barcode image based on the selection.

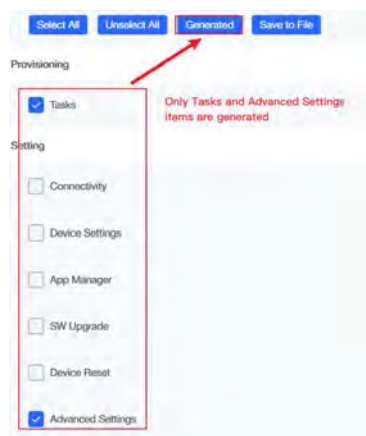

The button [Save to File] is used to save your config file under <Your Installation Path>\Resources\XML

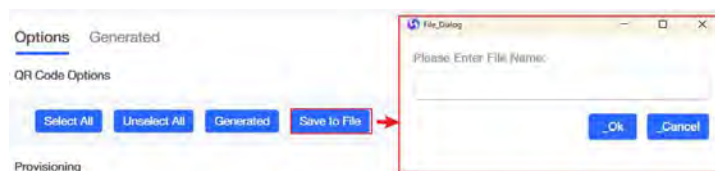


Generated tab is used to view the barcode(D).

Control the slider(C) to resize the barcode image, actual size is observed in text(B).

Currently there is only 1 barcode marked as number 1 in area(A).

If the data is too large, then 2nd picture will appear marked as number 2 next to the number 1.



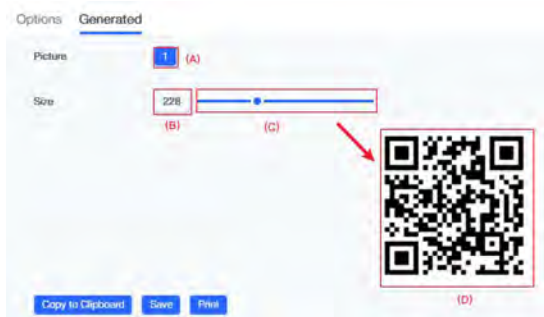

The button [Save] is used to store the barcode image, button [Print] is used to print and button [Copy to Clipboard] is used to copy the image for later use.




6.1.7 EXPORT PAGE

The button [Export] is to save the device config setting decided by your own.

The button [Select All] and [Unselect All] are used to include or exclude Setting categories.



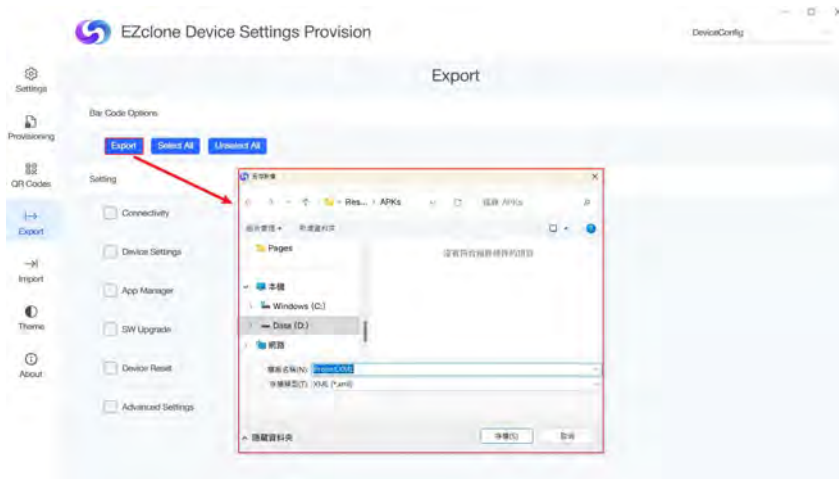

6.1.8 IMPORT PAGE

There are 3 kinds of data type to Import in this page.

One is APKs Files, second is XML Files and third is FOTA Files

Click the button [Choose File] will pop up a dialog to select the file.



After file is selected, the default status is [waiting import], click the button [Import File] will try to import the file in the list.

Observe the Status field to check the import action is OK with [Import Success] or NG with [Import Fail].



	File Type	File Size	File Date Time	Status
/main/Wpf.Ui.EZClone/bin/Debug/net8.0-windows10.0.22021.0/Resources/APKs/DevAuth	APKs File	2948 KB	2022/8/9 下午 01:35:54	waiting import

File Type: XML Files				
Choose File Import File Clear List				
	File Type	File Size	File Date Time	Status
/main/Wpf.Ui.EZClone/bin/Debug/net8.0-windows10.0.22021.0/Resources/APKs/DevAuth	APKs File	2948 KB	2022/8/9 下午 01:35:54	Import Fail
/main/Wpf.Ui.EZClone/bin/Debug/net8.0-windows10.0.22021.0/Resources/XML/DeviceCo	XML File	28 KB	2025/1/17 上午 11:55:54	Import Success

The button [Clear List] is used to clear the list.

Function:

File Type: XML File

Choose File

Import File

Clear List

No.	File Name	File Type	File Size	File Date Time	Status
-----	-----------	-----------	-----------	----------------	--------


6.1.9 THEME PAGE

The Current Palette shows the current color theme, 4 kinds of color theme are defined in Customized (Technology / Consumer / Askey / Mystery) to choose from.



Day mode / Night mode is provided as you like.



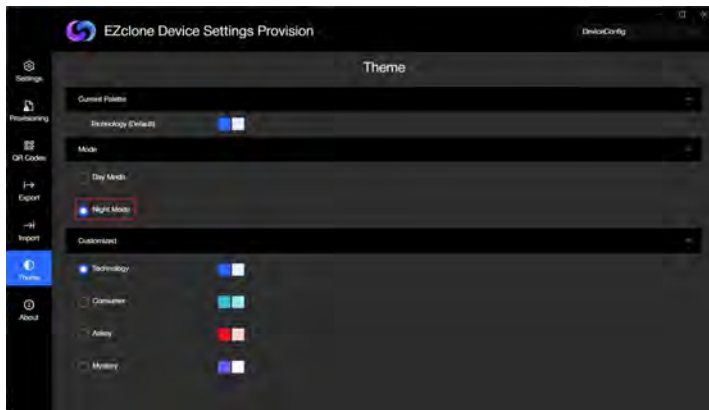


6.1.10 ABOUT PAGE

The software version and build information can be viewed in this page.

6.1.11 DEVICE EZCLONE APP


The Workstation set device result display

(A) Set up success

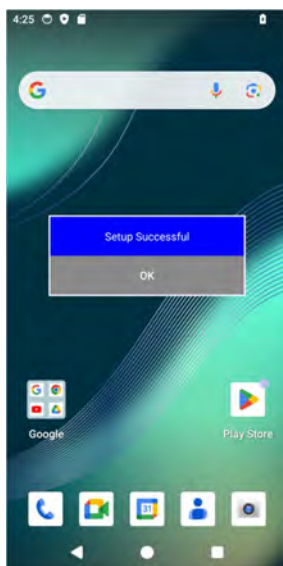

(B) Setting failed



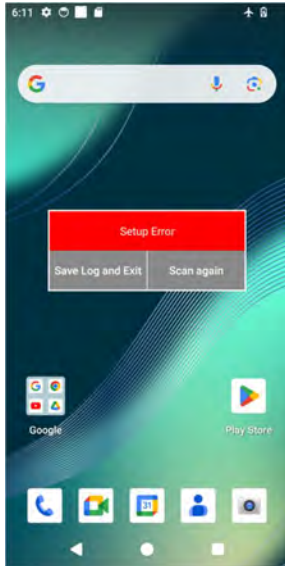

6.1.12 START FIRMWARE UPGRADE

Upgrade software version through workstation

Step 1

Import Upgrade Package to workstation

In the **Import** field, select **File Type** as **FOTA**, click **Choose File** to import the update package from your local device to the workstation, then click **Import File** to complete the process.





Step 2


Start server




Step 3

Generate the QR code:

- Under **Settings**, select **SW Upgrade**, reload the update file imported in **Step 2**, and enable **FOTA**.
- Under **QR Codes**, select **SW Upgrade**, then click **Generate QR Code**.

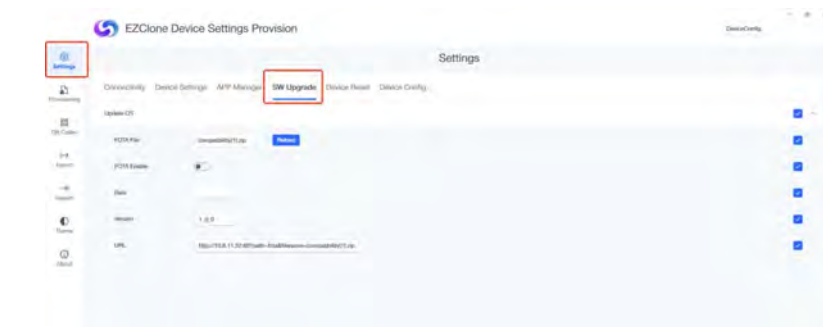

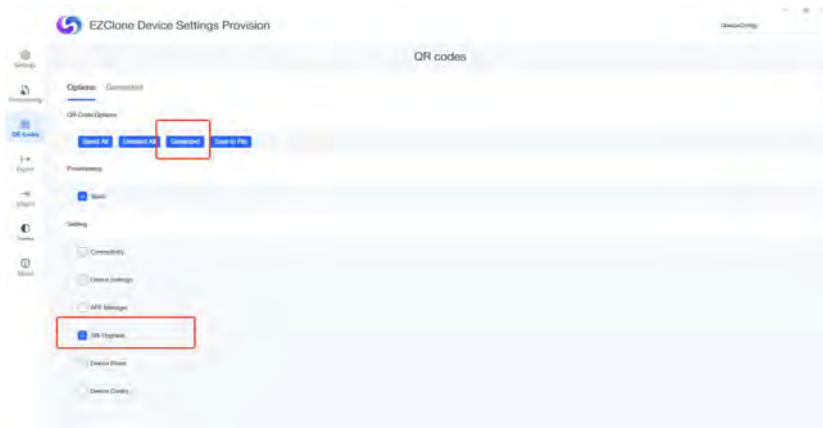

Step 4

Use the device to scan the QR code. The device will download the update package automatically, perform the upgrade, reboot upon completion, and display a "Successful Upgrade" message.



6.1.13 UPGRADE SOFTWARE VERSION THROUGH SYSTEM SETTINGS

In device Settings -> System -> System


1. Check for upgrade






2. Download the upgrade package from the FOTA server.



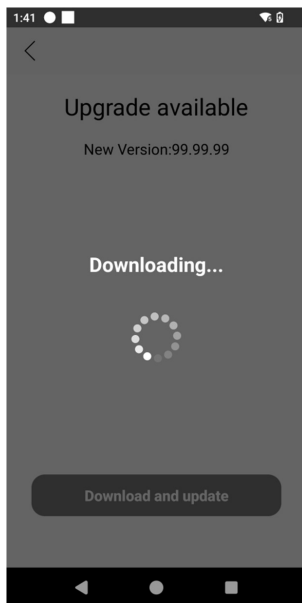


3. Installation completed and restarted

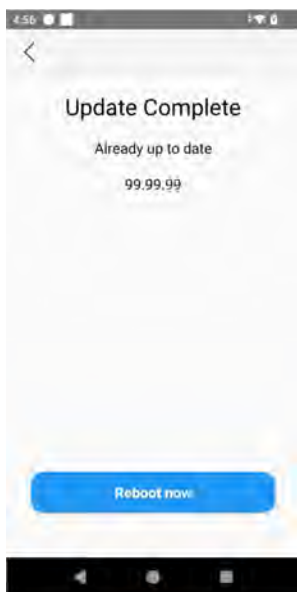

4. Complete the upgrade after restarting



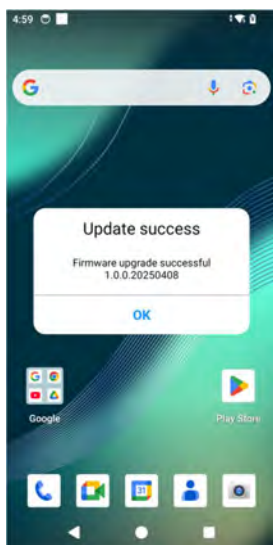

6.2 EZ PTT USER GUIDE

6.2.1 ABOUT PTT

EZPTT is a client to creates Push-To-Talk (PTT) communication for user, Leveraging existing Wireless Local Area Network (WLAN) infrastructure, this solution delivers simple PTT communication without the need of a voice communication server

6.2.2 MAIN FUNCTION




Currently, the main function has 3 navigation pages for use.

(8) Contacts

(9) Group Calls

(10) Settings

(11) Private Calls


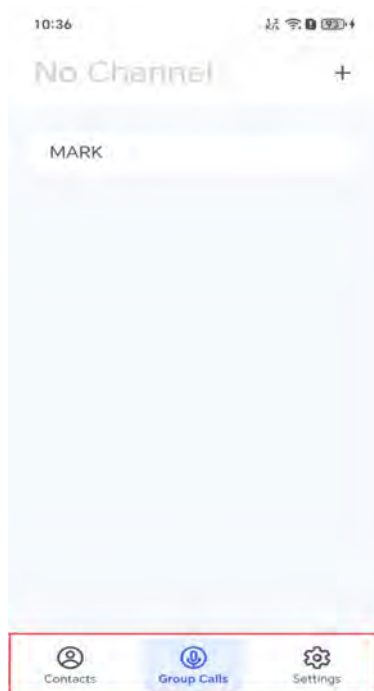


6.2.3 GROUP CALLS

Group Call - One to Many.


(A) Select a channel and join in



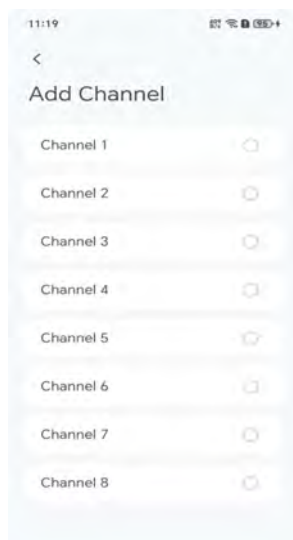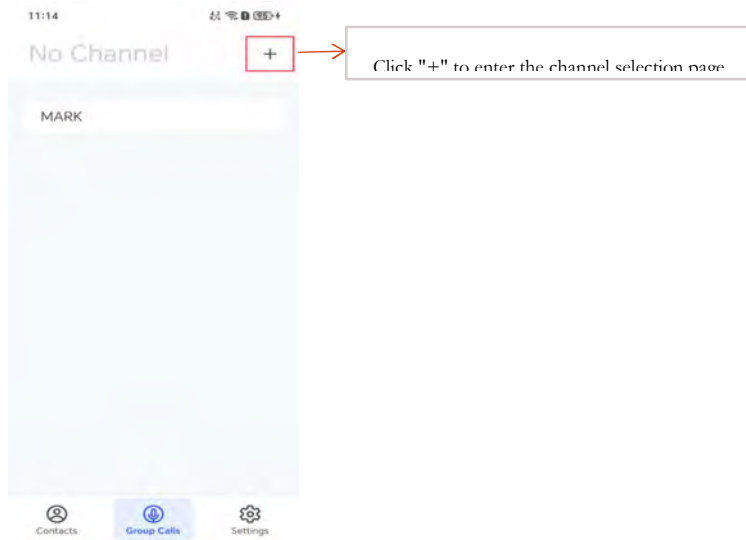


Group call chat interface



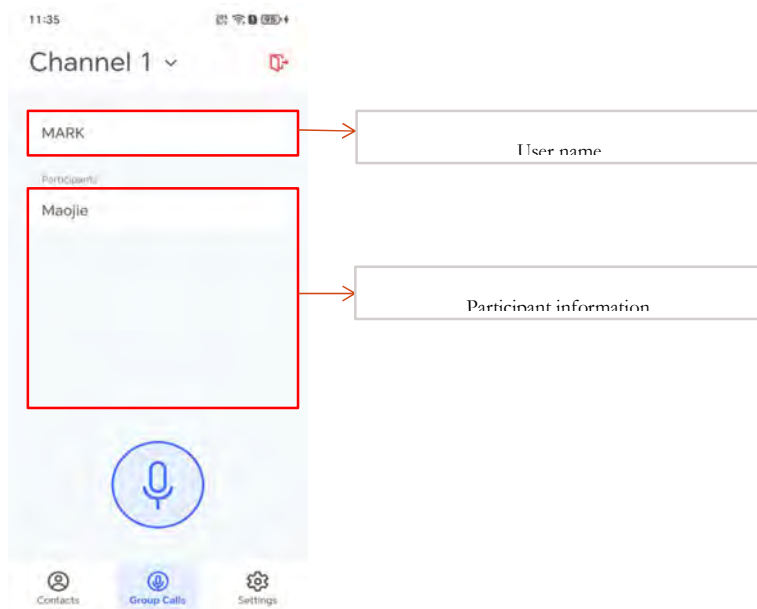

(B) Chat operation

Software button: Press and hold to speak, release to stop speaking

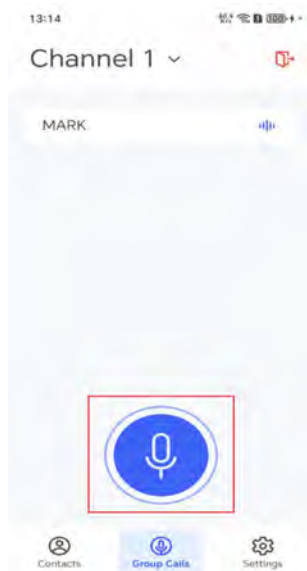


Hardware button: Press and hold to speak, release to stop speaking



6.2.4 CONTACTS PAGE

Display all users in Wireless Local Area Network (WLAN)

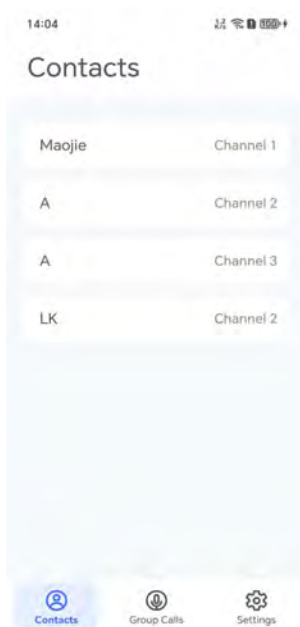


6.2.5 PRIVATE CALLS

Trigger private chat

- (A) In On the contact page, click on the contact's name and request a private chat
- (B) In Group Calls, click Participants name and request a private chat


Request private chat

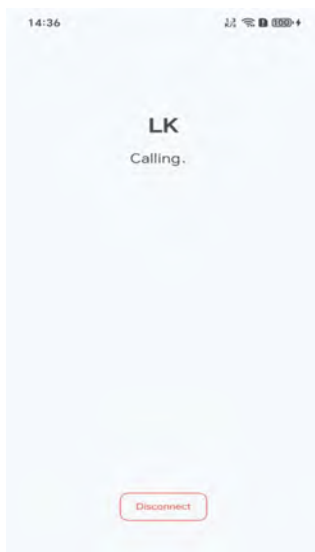

6.2.6 SETTINGS PAGE

Set your PTT application, include About, change Username, set application language




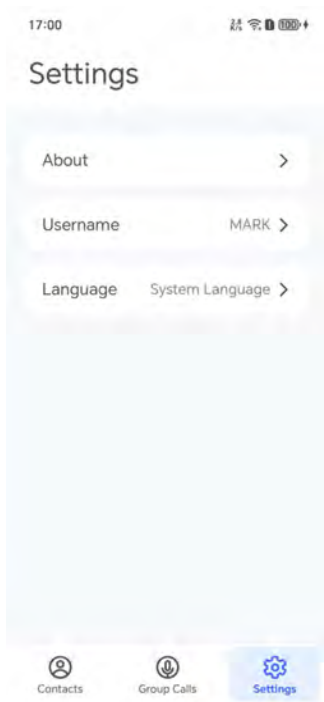

7. ACCESSORIES


7.1 INSTALL HAND STRAP (NEED TO PURCHASE ADD-ON ACCESSORY)

Insert velcro part through both holes and stick on another velcro part. Please adjust the length that you feel comfortable.

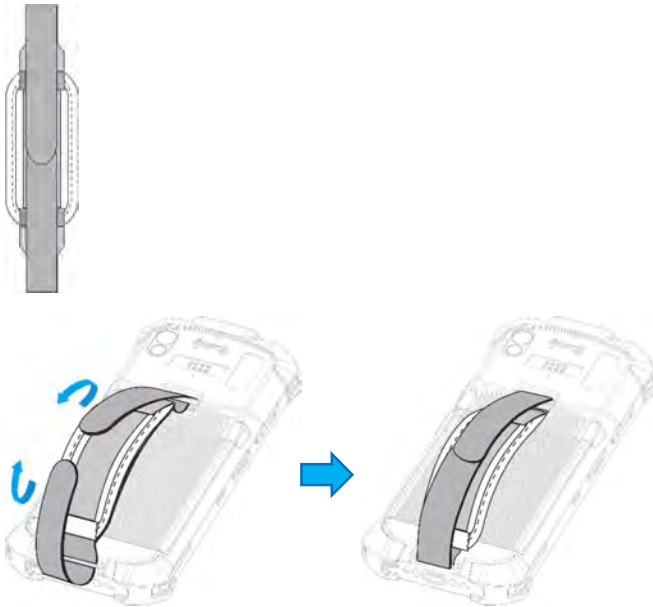

7.2 INSTALL PISTOL (NEED TO PURCHASE ADD-ON ACCESSORY)



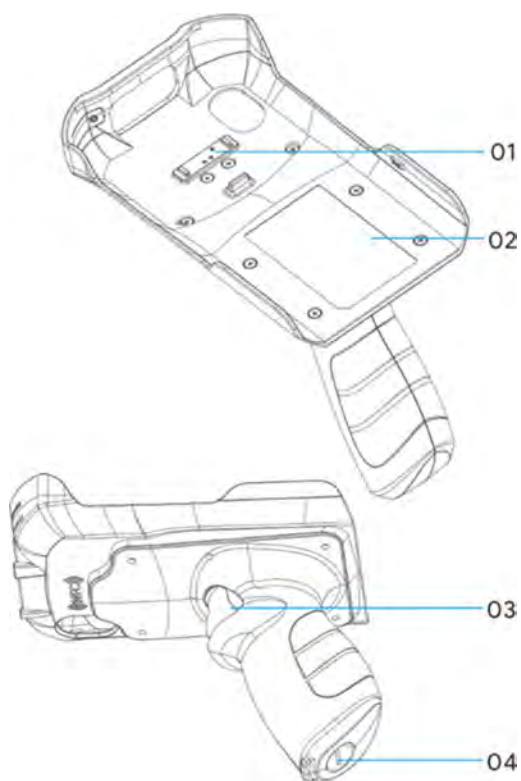

01. Connector	03. Trigger
02. Label	04. Wrist strap support

Install Scan Handle



Put the RC 40 mobile computer to prop the scan window of scan handle and push RC40 body down, you will hear click when they are assembly successfully



Put on desk



Install Wrist strap (need to purchase add-on accessory)

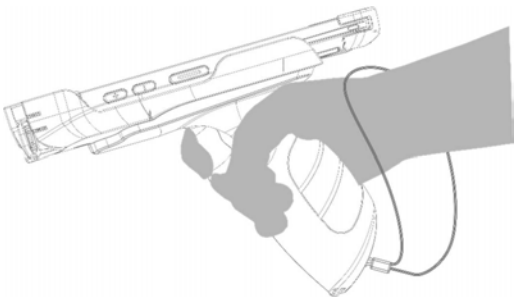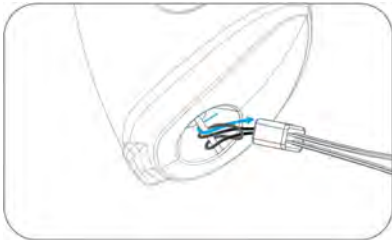

8. MAINTAIN AND TROUBLE SHOOTING

8.1 MAINTAINCE

- When the RC40 is dirty, please use a clean damp cloth to wipe the machine body. Do not use chemical solvents such as detergents, bleach, etc.
- When the screen is dirty, please use a cloth that will not rub the screen and cause scratches.
- Do not damage the screen surface with sharp objects.
- If there is water stain or dirt on the battery, please clean it with a dry cloth before installation.
- Placing the product in an environment with a temperature exceeding the specification will cause damage to the machine.
- If not in use for a long time, please unplug the battery and store the host and battery separately.



APPENDIX

Storage and Transportation



Hearing Aid Compatibility (HAC)

This phone is hearing aid compatible as determined by the ANSI C63.19-2019 standard.

The ANSI C63.19-2019 standard does not use the M/T rating system that older versions of the standard used. Instead, this standard uses the conversational gains for the phone's hearing aid compatible capabilities. For more information regarding FCC Hearing Aid Compatibility, please go to <https://www.fcc.gov/hearing-aid-compatibility-wireless-telephones/>.

The term "conversational gain" is defined as the acoustic output level of speech from a handset relative to the acoustic level that would be present in a face-to-face conversation with two people one meter apart.

The volume control capabilities of this phone have been evaluated according to ANSI C63.19-2019 and FCC limited waiver DA 23-914.

Conversational gain with hearing aids: 11.50 dB

Conversational gain without hearing aids: 18.01 dB

This phone has been tested and certified for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.



The table below shows the wireless technologies (including frequencies/bands by air interface and codec) that were tested or not tested according to FCC rules and limited waiver DA 23-914 for volume control capabilities:

Codec and air interface combinations that have passed frequency response, and distortion/noise tests.

Voice Service	Air Interface / Band	Codec
VoLTE	LTE: 2/4/5/12/13/14/17/25/26/30/ 38/41/42/43/48/66/70/71	EVS NB/WB 24.4 kbps

Codec and air interface combinations that have passed Conversational Gain tests.

Voice Service	Air Interface / Band	Codec
CMRS Voice	WCDMA: II/IV/V	AMR NB/WB
VoLTE	LTE: 2/4/5/12/13/14/17/25/26/30/ 38/41/42/43/48/66/70/71	AMR NB/WB
		EVS NB/WB

Codec and air interface combinations that have not been tested.

Voice Service	Air Interface / Band	Codec
VoLTE	LTE: 2/4/5/12/13/14/17/25/26/30/ 38/41/42/43/48/66/70/71	EVS SWB
Google Meet	LTE: 2/4/5/12/13/14/17/25/26/30/ 38/41/42/43/48/66/70/71	OPUS

