


User's Guide

AX/DX/EE/EX/PX Series

Default Login Details

LAN IP Address	https://192.168.1.1
Login	admin
Password	See the device label

Version 5.15-5.70 Ed 1, 06/2024

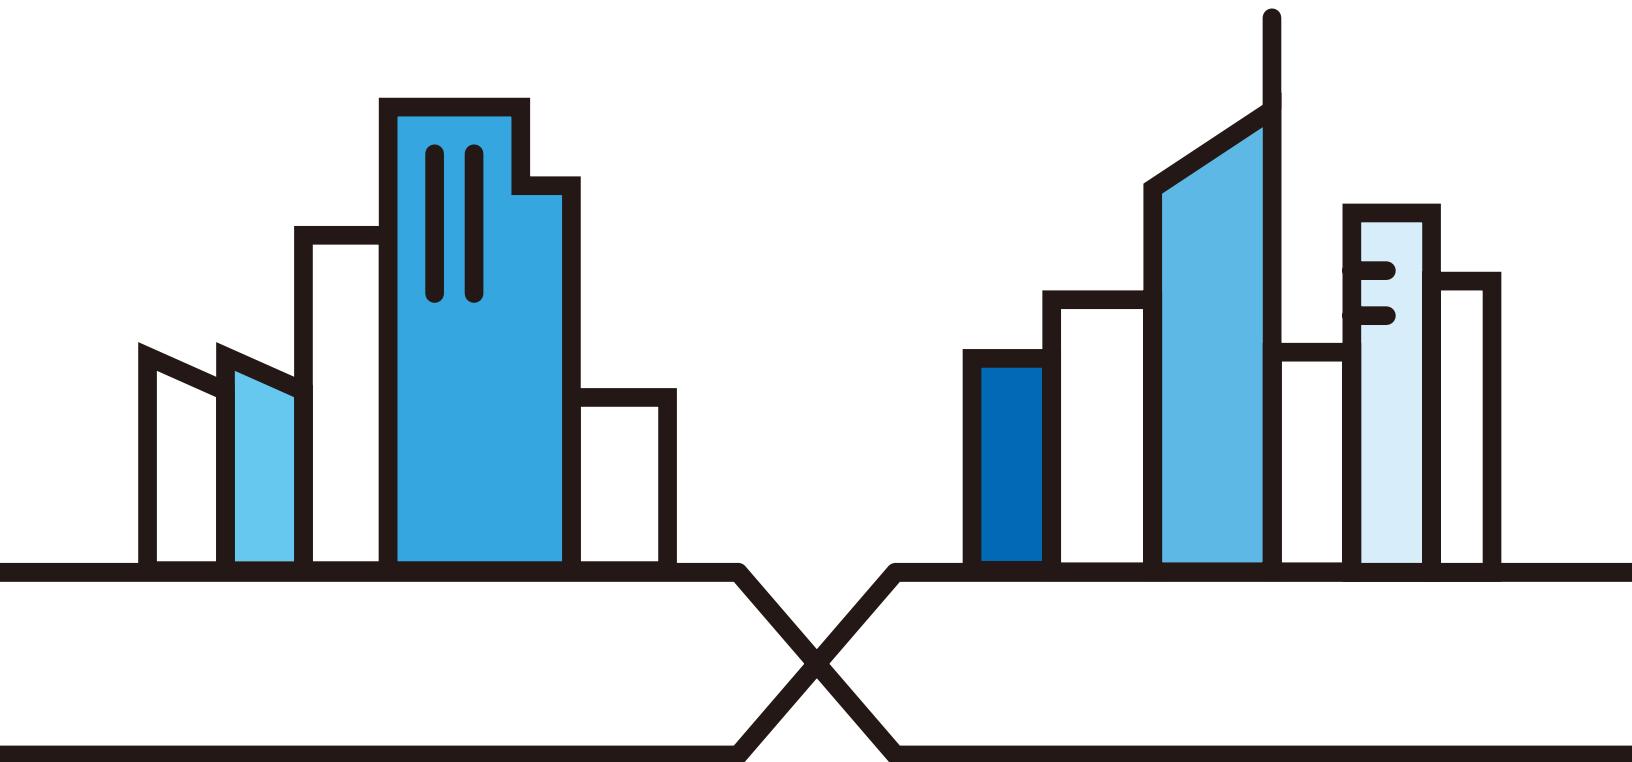

IMPORTANT!

READ CAREFULLY BEFORE USE.

KEEP THIS GUIDE FOR FUTURE REFERENCE.

This is a User's Guide for a series of products. Not all products support all firmware features. Screenshots and graphics in this book may differ slightly from your product due to differences in product features or Web Configurator brand style. Every effort has been made to ensure that the information in this manual is accurate.

Related Documentation

- Quick Start Guide

The Quick Start Guide shows how to connect the Zyxel Device.

- More Information

Go to <https://service-provider.zyxel.com/global/en/tech-support> to find other information on Zyxel Device.



Document Conventions

Warnings and Notes

These are how warnings and notes are shown in this guide.

Warnings tell you about things that could harm you or your Zyxel Device.

Note: Notes tell you other important information (for example, other things you may need to configure or helpful tips) or recommendations.

Syntax Conventions

- Product labels, screen names, field labels and field choices are all in **bold** font.
- A right angle bracket (>) within a screen name denotes a mouse click. For example, **Network Setting** > **Routing** > **DNS Route** means you first click **Network Setting** in the navigation panel, then the **Routing** submenu, and then finally the **DNS Route** tab to get to that screen.

Icons Used in Figures

Figures in this user guide may use the following generic icons. The Zyxel Device icon is not an exact representation of your Zyxel Device.

Zyxel Device 	Generic Router 	Switch
Server 	Firewall 	USB Storage Device
Printer 	4G LTE/5G NR Base Station 	

Contents Overview

User's Guide	19
Introducing the Zyxel Device	20
Hardware	33
Web Configurator	76
Quick Start	89
Web Interface Tutorials	93
App Tutorials	143
Technical Reference	199
Connection Status	200
Broadband	215
Wireless	254
Home Networking	284
Routing	312
Quality of Service (QoS)	323
Network Address Translation (NAT)	345
DNS	364
IGMP/MLD	369
VLAN Group	372
Interface Grouping	375
USB Service	382
Firewall	388
MAC Filter	399
Home Security	402
Parental Control	404
Scheduler Rule	408
Certificates	410
Voice	420
Log	452
Traffic Status	454
VoIP Status	458
ARP Table	461
Routing Table	463
Multicast Status	466
WLAN Station Status	468
Cellular Statistics	470
Optical Signal Status	472
System	474

User Account	475
Remote Management	479
Power Monitor	483
SNMP	484
Time Settings	487
Email Notification	490
Log Setting	493
Firmware Upgrade	497
Backup/Restore	500
Diagnostic	505
Troubleshooting and Appendices	512
Troubleshooting	513

Table of Contents

Document Conventions	3
Contents Overview	4
Table of Contents	6

Part I: User's Guide.....	19
---------------------------	----

Chapter 1

Introducing the Zyxel Device	20
------------------------------------	----

1.1 Overview	20
1.1.1 AX Series	20
1.1.2 DX Series	21
1.1.3 EX / EE Series	22
1.1.4 PX Series	23
1.2 Example Applications	24
1.2.1 WAN Priority	25
1.2.2 Dual-Band WiFi	25
1.2.3 Triple-Band WiFi	26
1.2.4 Multi-Gigabit Ethernet	29
1.2.5 VoIP Applications	30
1.2.6 Zyxel Device's USB Support	30
1.3 Ways to Manage the Zyxel Device	31
1.4 Good Habits for Managing the Zyxel Device	32

Chapter 2

Hardware	33
----------------	----

2.1 Hardware	33
2.2 LED Indicators Panel	33
2.2.1 AX7501	33
2.2.2 DX3300-T0, DX3301-T0, EX3300-T0 and EX3301-T0	36
2.2.3 DX3300-T1 and EX3300-T1	39
2.2.4 EX3500-T0 and EX3501-T0	42
2.2.5 EX3600-T0	44
2.2.6 DX5401-B0/1 and EX5401-B0/1	46
2.2.7 EX5600-T1, EX5601-T0 and EX5601-T1	48
2.2.8 EX7501-B0	51
2.2.9 EE6601-00	52

Table of Contents

2.2.10 PX3321-T1	54
2.2.11 PX5301-T0	55
2.2.12 PX5311-T0	57
2.3 Ports Panel	58
2.3.1 AX7501	58
2.3.2 DX3300-T0, DX3301-T0, DX5401-B0/B1, EX3300-T0, EX3301-T0 and EX5401-B0/B1	59
2.3.3 DX3300-T1 and EX3300-T1	63
2.3.4 EX3500-T0 and EX3501-T0	64
2.3.5 EX3600-T0	66
2.3.6 EX5600-T1, EX5601-T0 and EX5601-T1	67
2.3.7 EX7501-B0	69
2.3.8 EE6601-00	70
2.3.9 PX3321-T1	71
2.3.10 PX5301-T0	71
2.3.11 PX5311-T0	72
2.3.12 Transceiver Installation/Removal	73
2.3.13 WPS Button	74
2.3.14 RESET Button	75
Chapter 3 Web Configurator.....	76
3.1 Overview	76
3.1.1 Access the Web Configurator	76
3.2 Web Configurator Layout	79
3.2.1 Settings Icon	79
3.2.2 Widget Icon	86
Chapter 4 Quick Start.....	89
4.1 Quick Start Overview	89
4.2 Quick Start Setup	89
4.3 Quick Start Setup – Time Zone	89
4.4 Quick Start Setup – Internet Connection	90
4.4.1 Successful Internet Connection	90
4.4.2 Unsuccessful Internet Connection	91
4.5 Quick Start Setup – WiFi	91
4.6 Quick Start Setup – Finish	92
Chapter 5 Web Interface Tutorials.....	93
5.1 Web Interface Overview	93
5.2 Wired Network Setup	93
5.2.1 Setting Up a DSL Connection	93

5.2.2 Setting Up an Ethernet Connection	98
5.3 WiFi Network Setup	102
5.3.1 Changing Security on a WiFi Network	102
5.3.2 Connecting to the Zyxel Device's WiFi Network Using WPS	104
5.3.3 WPS Push Button Configuration (PBC).....	104
5.3.4 Setting Up a Guest Network	107
5.3.5 Setting Up Two Guest WiFi Networks on Different WiFi Bands	111
5.4 USB Applications	116
5.4.1 File Sharing	116
5.4.2 Media Server	120
5.4.3 Using FTP	125
5.5 Network Security	126
5.5.1 Configuring a Firewall Rule	126
5.5.2 Parental Control	128
5.5.3 Configuring a MAC Address Filter for Wired LAN Connections	133
5.6 Internet Calls	134
5.6.1 Configuring VoIP	134
5.6.2 Adding a SIP Service Provider	135
5.6.3 Adding a SIP Account	136
5.6.4 Configuring a Phone	138
5.6.5 Making a VoIP Call	139
5.7 Device Maintenance	139
5.7.1 Upgrading the Firmware	139
5.7.2 Backing up the Device Configuration	140
5.7.3 Restoring the Device Configuration	141

Chapter 6 App Tutorials.....	143
---	------------

6.1 App Tutorials Overview	143
6.2 What You Can Do	143
6.3 MPro Mesh Network	144
6.4 MPro Mesh Network Connection	146
6.4.1 Preparing your Zyxel Device	147
6.4.2 Setting up an MPro Mesh Router and MPro Mesh Extender with a WiFi or Wired Connection	148
6.4.3 Setting up a non-MPro Mesh Router and MPro Mesh Extenders with a Wired Connection	
156	
6.5 Finding the Best Location for the Extenders	164
6.6 Checking Your Network Topology	166
6.7 Changing the Default Home WiFi Network Name and Password	169
6.7.1 Letting WiFi Clients Connect to the WiFi Network	171
6.8 Blocking Internet Access at Specific Times	173
6.9 Seeing Currently Connected Client Devices	182

6.10 Changing the Client Device Names	184
6.11 Blocking Internet Access for Specific Clients Immediately	186
6.12 Setting Up the Guest WiFi Network	189
6.12.1 Letting WiFi Clients Only Connect to the Internet Through the Guest WiFi Network ..	194
6.13 Viewing More App Information and the Online Help	196
6.13.1 Logging Out of the Controller Device	197
Part II: Technical Reference.....	199
Chapter 7	
Connection Status.....	200
7.1 Connection Status Overview	200
7.1.1 Connectivity	200
7.1.2 Icon and Device Name	202
7.1.3 System Info	202
7.1.4 WiFi Settings	206
7.2 Guest WiFi Settings	208
7.2.1 LAN	209
7.3 The Parental Control Screen	211
7.3.1 Create a Parental Control Profile	212
Chapter 8	
Broadband.....	215
8.1 Broadband Overview	215
8.1.1 What You Can Do in this Chapter	215
8.1.2 What You Need to Know	216
8.1.3 Before You Begin	219
8.2 Broadband Settings for DSL Routers	219
8.2.1 Add or Edit Internet Connection	220
8.3 Broadband Settings for Ethernet, AON and PON Routers	228
8.3.1 Add or Edit Internet Connection	230
8.4 Cellular Backup	237
8.5 Broadband Advanced Screen	243
8.6 Backup WAN	247
8.7 Technical Reference	248
Chapter 9	
Wireless	254
9.1 Wireless Overview	254
9.1.1 What You Can Do in this Chapter	254
9.1.2 What You Need to Know	254

9.2 Wireless General Settings	255
9.2.1 No Security	259
9.2.2 More Secure (Recommended)	259
9.3 Guest/More AP Screen	261
9.3.1 The Edit Guest/More AP Screen	262
9.4 MAC Authentication	265
9.5 WPS	267
9.6 WMM	269
9.7 Others Screen	270
9.8 Channel Status	272
9.9 MESH	274
9.9.1 MPro Mesh	274
9.10 Technical Reference	274
9.10.1 WiFi Network Overview	275
9.10.2 Additional WiFi Terms	276
9.10.3 WiFi Security Overview	276
9.10.4 Signal Problems	278
9.10.5 BSS	278
9.10.6 MBSSID	279
9.10.7 Preamble Type	279
9.10.8 WiFi Protected Setup (WPS)	279
Chapter 10 Home Networking	284
10.1 Home Networking Overview	284
10.1.1 What You Can Do in this Chapter	284
10.1.2 What You Need To Know	284
10.1.3 Before You Begin	286
10.2 LAN Setup	286
10.3 Static DHCP	292
10.3.1 Before You Begin	292
10.4 UPnP	294
10.5 LAN Additional Subnet	295
10.6 STB Vendor ID	297
10.7 Wake on LAN	298
10.8 TFTP Server Name	298
10.8.1 Add APAS	300
10.9 Technical Reference	301
10.9.1 DHCP Setup	302
10.9.2 DNS Server Addresses	302
10.9.3 LAN TCP/IP	303
10.10 Turn on UPnP in Windows 10 Example	304
10.10.1 Auto-discover Your UPnP-enabled Network Device	306

10.11 Web Configurator Access with UPnP in Windows 10	309
Chapter 11	
Routing	312
11.1 Routing Overview	312
11.2 Configure Static Route	312
11.2.1 Add or Edit Static Route	313
11.3 DNS Route	317
11.3.1 Add or Edit DNS Route	318
11.4 Policy Route	319
11.4.1 Add or Edit Policy Route	320
11.5 RIP Overview	321
11.5.1 RIP	321
Chapter 12	
Quality of Service (QoS)	323
12.1 QoS Overview	323
12.1.1 What You Can Do in this Chapter	323
12.2 What You Need to Know	323
12.3 Quality of Service General Settings	325
12.4 Queue Setup	327
12.4.1 Add a QoS Queue	328
12.5 QoS Classification Setup	329
12.5.1 Add or Edit QoS Class	330
12.6 QoS Shaper Setup	334
12.6.1 Add or Edit a QoS Shaper	335
12.7 QoS Policer Setup	336
12.7.1 Add or Edit a QoS Policer	336
12.8 QoS Monitor	339
12.9 Technical Reference	340
Chapter 13	
Network Address Translation (NAT)	345
13.1 NAT Overview	345
13.1.1 What You Can Do in this Chapter	345
13.1.2 What You Need To Know	345
13.2 Port Forwarding	346
13.2.1 Port Forwarding	347
13.2.2 Add or Edit Port Forwarding	347
13.3 Port Triggering	349
13.3.1 Add or Edit Port Triggering Rule	351
13.4 DMZ	353
13.5 ALG	353

13.6 Address Mapping	355
13.6.1 Address Mapping Screen	355
13.6.2 Add New Rule Screen	356
13.7 Sessions	357
13.8 Port Control Protocol (PCP)	357
13.8.1 Add New Rule Screen	359
13.9 Technical Reference	360
13.9.1 NAT Definitions	360
13.9.2 What NAT Does	361
13.9.3 How NAT Works	361
13.9.4 NAT Application	362
Chapter 14	
DNS	364
14.1 DNS Overview	364
14.1.1 What You Can Do in this Chapter	364
14.1.2 What You Need To Know	364
14.2 DNS Entry	365
14.2.1 Add or Edit DNS Entry	365
14.3 Dynamic DNS	366
Chapter 15	
IGMP/MLD	369
15.1 IGMP/MLD Overview	369
15.1.1 What You Need To Know	369
15.2 The IGMP/MLD Screen	369
Chapter 16	
VLAN Group	372
16.1 VLAN Group Overview	372
16.1.1 What You Can Do in this Chapter	372
16.2 VLAN Group Settings	373
16.2.1 Add or Edit a VLAN Group	373
Chapter 17	
Interface Grouping	375
17.1 Interface Grouping Overview	375
17.1.1 What You Can Do in this Chapter	375
17.2 Interface Grouping	375
17.2.1 Interface Group Configuration	376
17.2.2 Interface Grouping Criteria	380
Chapter 18	
USB Service	382

18.1 USB Service Overview	382
18.1.1 What You Can Do in this Chapter	382
18.1.2 What You Need To Know	382
18.1.3 Before You Begin	383
18.2 USB Service	383
18.2.1 Add New Share	385
18.2.2 Add New User Screen	386
18.3 Media Server	386
Chapter 19	
Firewall	388
19.1 Firewall Overview	388
19.1.1 What You Need to Know About Firewall	388
19.2 Firewall	389
19.2.1 What You Can Do in this Chapter	389
19.3 Firewall General Settings	390
19.4 Protocol (Customized Services)	391
19.4.1 Add Customized Service	392
19.5 Access Control (Rules)	392
19.5.1 Add New ACL Rule	393
19.6 Dos	395
19.7 Firewall Technical Reference	396
19.7.1 Firewall Rules Overview	396
19.7.2 Guidelines For Security Enhancement With Your Firewall	397
19.7.3 Security Considerations	398
Chapter 20	
MAC Filter	399
20.1 MAC Filter Overview	399
20.2 MAC Filter	399
20.2.1 Add New Rule	400
Chapter 21	
Home Security	402
21.1 Home Security Overview	402
21.2 Home Security	402
Chapter 22	
Parental Control	404
22.1 Parental Control Overview	404
22.2 Parental Control Schedule	404
22.2.1 Add or Edit a Parental Control Profile	405
22.2.2 Define a Schedule	406

22.2.3 Parental Control Scheduled Profile	406
Chapter 23	
Scheduler Rule	408
23.1 Scheduler Rule Overview	408
23.2 Scheduler Rule Settings	408
23.2.1 Add or Edit a Schedule Rule	409
Chapter 24	
Certificates	410
24.1 Certificates Overview	410
24.1.1 What You Can Do in this Chapter	410
24.2 What You Need to Know	410
24.3 Local Certificates	410
24.3.1 Create Certificate Request	412
24.3.2 View Certificate Request	413
24.4 Trusted CA	414
24.5 Import Trusted CA Certificate	415
24.6 View Trusted CA Certificate	416
24.7 Certificates Technical Reference	417
24.7.1 Verify a Certificate	418
Chapter 25	
Voice	420
25.1 Voice Overview	420
25.1.1 What You Can Do in this Chapter	420
25.1.2 What You Need to Know About VoIP	420
25.2 Before You Begin	421
25.3 SIP Account	421
25.3.1 Add or Edit SIP Account	422
25.4 SIP Service Provider	427
25.4.1 Provider Entry Add/Edit	428
25.5 SIP TLS Common	432
25.6 Phone	433
25.6.1 Phone Device	433
25.6.2 Phone Device Edit	434
25.7 Phone Region	435
25.8 Call Rule	436
25.9 Call History	437
25.10 Technical Reference	438
25.10.1 Quality of Service (QoS)	446
25.10.2 Phone Services Overview	447

Chapter 26	
Log	452
26.1 What You Need To Know	452
26.2 System Log	452
26.3 Security Log	453
Chapter 27	
Traffic Status.....	454
27.1 Traffic Status Overview	454
27.1.1 What You Can Do in this Chapter	454
27.2 WAN Status	454
27.3 LAN Status	456
27.4 NAT Status	457
Chapter 28	
VoIP Status	458
28.1 VoIP Status Screen	458
Chapter 29	
ARP Table	461
29.1 ARP Table Overview	461
29.1.1 How ARP Works	461
29.2 ARP Table	461
Chapter 30	
Routing Table.....	463
30.1 Routing Table Overview	463
30.2 Routing Table	463
Chapter 31	
Multicast Status	466
31.1 Multicast Status Overview	466
31.2 The IGMP Status Screen	466
31.3 The MLD Status Screen	467
Chapter 32	
WLAN Station Status	468
32.1 WLAN Station Status Overview	468
Chapter 33	
Cellular Statistics.....	470
33.1 Cellular Statistics Overview	470
33.2 Cellular Statistics Settings	470

Chapter 34	
Optical Signal Status.....	472
34.1 Overview	472
34.2 The Optical Signal Status Screen	472
Chapter 35	
System.....	474
35.1 System Overview	474
35.2 System	474
Chapter 36	
User Account.....	475
36.1 User Account Overview	475
36.2 User Account	475
36.2.1 User Account Add or Edit	476
Chapter 37	
Remote Management.....	479
37.1 Remote Management Overview	479
37.1.1 What You Can Do in this Chapter	479
37.2 MGMT Services	479
37.3 Trust Domain	481
37.3.1 Add Trust Domain	481
Chapter 38	
Power Monitor.....	483
38.1 Power Monitor Overview	483
38.2 Power Monitoring	483
Chapter 39	
SNMP.....	484
39.1 SNMP Overview	484
39.2 SNMP Settings	485
Chapter 40	
Time Settings.....	487
40.1 Time Settings Overview	487
40.2 Time	487
Chapter 41	
Email Notification.....	490
41.1 Email Notification Overview	490
41.2 Email Notification	490

41.2.1 E-mail Notification Edit	491
Chapter 42	
Log Setting	493
42.1 Log Setting Overview	493
42.2 Log Setting	493
42.2.1 Example Email Log	496
Chapter 43	
Firmware Upgrade	497
43.1 Firmware Upgrade Overview	497
43.2 Firmware Upgrade	497
Chapter 44	
Backup/Restore	500
44.1 Backup/Restore Overview	500
44.2 Backup/Restore	500
44.3 Reboot	504
Chapter 45	
Diagnostic.....	505
45.1 Diagnostic Overview	505
45.1.1 What You Can Do in this Chapter	505
45.2 What You Need to Know	505
45.3 Diagnostic	506
45.4 802.1ag (CFM)	507
45.5 802.3ah (OAM)	508
45.6 OAM Ping	510
Part III: Troubleshooting and Appendices.....	512
Chapter 46	
Troubleshooting.....	513
46.1 Troubleshooting Overview	513
46.2 Power and Hardware Problems	513
46.3 Device Access Problems	514
46.4 Internet Problems	517
46.5 WiFi Problems	519
46.6 USB Problems	520
46.7 VoIP Problems	521
46.8 UPnP Problems	521

Table of Contents

46.9 Getting More Troubleshooting Help	522
Appendix A Customer Support	523
Appendix B Wireless LANs.....	528
Appendix C IPv6	541
Appendix D Services.....	547
Appendix E Legal Information	551
Index	559

PART I

User's Guide

CHAPTER 1

Introducing the Zyxel Device

1.1 Overview

The Zyxel Device refers to the models listed in the tables.

1.1.1 AX Series

The AX Series are AON (Active Optical Network) routers that connect to the Internet though a fiber cable.

The following table describes the feature differences of the AX Series by model.

Table 1 Zyxel Device Comparison Table for AX Series

	AX7501-B0	AX7501-B1
WiFi7 Wireless Standard	NO	NO
WiFi6 Wireless Standard	YES	YES
Supported Frequency Bands	2.4 GHz 5 GHz	2.4 GHz 5 GHz
Port Control Protocol	YES	YES
Advanced Broadband	NO	NO
Parental Control Schedule	YES	YES
Parental Control URL Filter	YES	YES
Home Security URL filter	NO	NO
Operation Mode	NO	NO
MPro Mesh Extender Support	YES	YES
Multi-Gig WAN/LAN	10 Gbe LAN	10 Gbe LAN
Backup WAN	NO	NO
Uplink Port	1G Ethernet (SFP) 10G AON (SFP) 10G Ethernet (SFP) 10G XGPON (SFP+)	1G Ethernet (SFP) 10G AON (SFP) 10G Ethernet (SFP) 10G XGPON (SFP+)
USB Port for Cellular Backup, File Sharing and Media Server	USB 3.0	USB 3.0

Table 1 Zyxel Device Comparison Table for AX Series (continued)

	AX7501-B0	AX7501-B1
Phone Port (VoIP)	YES	YES
Wall Mount	YES	YES

1.1.2 DX Series

The DX Series are DSL routers, which provide Internet access over telephone lines.

The following table describes the feature differences of the DX Series by model.

Table 2 Zyxel Device Comparison Table for DX Series

	DX3300-T0	DX3300-T1	DX3301-T0	DX5401-B0	DX5401-B1
WiFi7 Wireless Standard	NO	NO	NO	NO	NO
WiFi6 Wireless Standard	YES	YES	YES	YES	YES
Supported Frequency Bands	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz
Port Control Protocol	YES	YES	YES	YES	YES
Advanced Broadband	NO	NO	YES	NO	NO
Parental Control Schedule	YES	YES	YES	YES	YES
Parental Control URL Filter	NO	NO	NO	NO	NO
Home Security URL filter	NO	YES	NO	NO	NO
Operation Mode	NO	NO	NO	NO	NO
MPro Mesh Extender Support	YES	YES	YES	YES	YES
Multi-Gig WAN/LAN	NO	NO	NO	NO	NO
Backup WAN	NO	YES	NO	NO	NO
Uplink Port	DSL	DSL	DSL	DSL 1G Ethernet (SFP)	DSL 1G Ethernet (SFP)
USB Port for Cellular Backup, File Sharing and Media Server	USB 2.0	USB 2.0	USB 2.0	USB 3.0	USB 3.0
Phone Port (VoIP)	NO	NO	YES	YES	YES
Wall Mount	YES	NO	YES	YES	YES

Note: For DX3300/3301-T0, IGMP/MLD are enabled by default and are not configurable. The default IGMP version is 3. The default MLD version is 2.

1.1.3 EX / EE Series

The EX / EE Series are Ethernet gateways/routers that provide Internet access through the Ethernet WAN port or an SFP port.

The following table describes the feature differences of the EX / EE Series by model.

Table 3 Zyxel Device Comparison Table for EX Series (Part 1)

	EX3300-T0	EX3300-T1	EX3301-T0	EX3500-T0	EX3501-T0	EX3600-T0	EX5401-B0
WiFi7 Wireless Standard	NO						
WiFi6 Wireless Standard	YES						
Supported Frequency Bands	2.4 GHz 5 GHz						
Port Control Protocol	YES						
Advanced Broadband	NO						
Parental Control Schedule	YES						
Parental Control URL Filter	NO						
Home Security URL filter	NO	YES	NO	YES	YES	YES	NO
Operation Mode	NO	NO	NO	NO	NO	YES	NO
MPro Mesh Extender Support	YES						
Multi-Gig WAN/LAN	NO						
Backup WAN	NO	YES	NO	NO	NO	NO	NO
Uplink Port	Ethernet	Ethernet	Ethernet	Ethernet	Ethernet	Ethernet	Ethernet 1G PON (SFP)
USB Port for Cellular Backup, File Sharing and Media Server	USB 2.0	USB 3.0	USB 3.0				
Phone Port (VoIP)	NO	NO	YES	NO	YES	NO	YES
Wall Mount	YES	YES	YES	NO	NO	YES	YES

Table 4 Zyxel Device Comparison Table for EX / EE Series (Part 2)

	EX5401-B1	EX5600-T1	EX5601-T0	EX5601-T1	EX7501-B0	EE6601-00
WiFi7 Wireless Standard	NO	NO	NO	NO	NO	YES With MLO
WiFi6 Wireless Standard	YES	YES	YES	YES	YES	YES
Supported Frequency Bands	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz 6 GHz
Port Control Protocol	YES	YES	YES	YES	YES	YES
Advanced Broadband	NO	NO	NO	NO	NO	NO
Parental Control Schedule	YES	YES	YES	YES	YES	YES
Parental Control URL Filter	NO	NO	NO	NO	NO	NO
Home Security URL filter	NO	YES	YES	YES	YES	YES
Operation Mode	NO	NO	NO	NO	NO	NO
MPro Mesh Extender Support	YES	YES	YES	YES	YES	YES
Multi-Gig WAN/LAN	NO	2.5 Gbe WAN 2.5 Gbe LAN	2.5 Gbe WAN 2.5 Gbe LAN	2.5 Gbe WAN 2.5 Gbe LAN	10 Gbe WAN 10 Gbe LAN	10 Gbe WAN 10 Gbe LAN
Backup WAN	NO	NO	NO	NO	NO	NO
Uplink Port	Ethernet 1G PON (SFP)	Ethernet	Ethernet 1G Ethernet (SFP) 2.5G GPON (SFP)	Ethernet	Ethernet	Ethernet 1G Ethernet (SFP)
USB Port for Cellular Backup, File Sharing and Media Server	USB 3.0	USB 3.0	USB 3.0	USB 3.0	USB 3.0	USB 3.0
Phone Port (VoIP)	YES	NO	YES	YES	YES	YES
Wall Mount	YES	YES	YES	YES	YES	YES

Note: For EX3300/3301-T0, IGMP/MLD are enabled by default and are not configurable. The default IGMP version is 3. The default MLD version is 2.

1.1.4 PX Series

The PX Series are PON (Passive Optical Network) routers that connect to the Internet through a fiber cable.

The following table describes the feature differences of the PX Series by model.


Table 5 Zyxel Device Comparison Table for PX Series

	PX3321-T1	PX5301-T0	PX5311-T0
WiFi7 Wireless Standard	NO	NO	NO
WiFi6 Wireless Standard	YES	YES	YES
Supported Frequency Bands	2.4 GHz 5 GHz	2.4 GHz 5 GHz	2.4 GHz 5 GHz
Port Control Protocol	YES	YES	YES
Advanced Broadband	NO	NO	NO
Parental Control Schedule	YES	YES	YES
Parental Control URL Filter	NO	NO	NO
Home Security URL filter	NO	NO	NO
Operation Mode	NO	NO	NO
MPro Mesh Extender Support	YES	YES	YES
Multi-Gig WAN/LAN	NO	NO	NO
Backup WAN	NO	NO	NO
Uplink Port	2.5G PON (SC-APC)	2.5G PON (SC-APC)	2.5G PON (SC-APC)
USB Port for Cellular Backup, File Sharing and Media Server	USB 2.0	USB 2.0	USB 2.0
Phone Port (VoIP)	YES	YES	YES
LAN Ports	4 10/100/1000 Mbps	LAN1 – LAN3 10/100/1000 Mbps LAN4 2.5 Gbps	4 10/100/1000 Mbps
Wall Mount	YES	YES	YES


1.2 Example Applications

This section shows a few examples of using the Zyxel Device in various network environments. Note that the Zyxel Device in the figure is just an example Zyxel Device and not your actual Zyxel Device.

Connect the WAN port to a broadband modem or router for Internet connection. Connect computers to the Zyxel Device's LAN ports, or wirelessly, and access the Internet simultaneously.

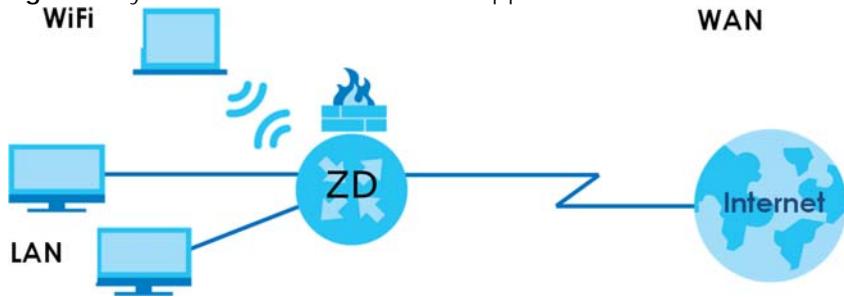Figure 1 Zyxel Device's Internet Access Application

You can also configure Firewall on the Zyxel Device for secure Internet access. When the Firewall is on, all incoming traffic from the Internet to your network is blocked by default unless it is initiated from your network. This means that probes from the outside to your network are not allowed, but you can safely browse the Internet and download files.

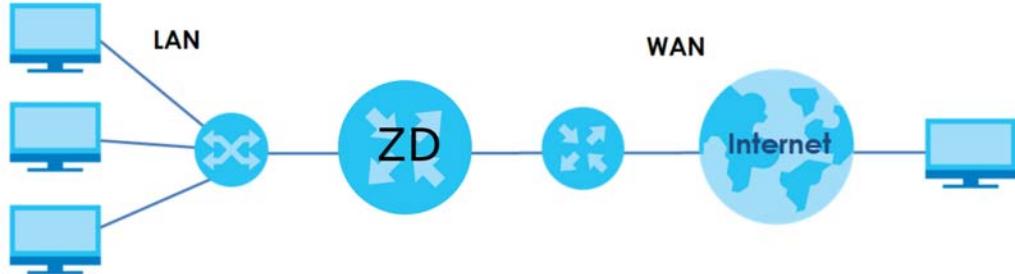Figure 2 Zyxel Device's Internet Access Application: Ethernet WAN

1.2.1 WAN Priority

The WAN connection priority is as follows:

- 1 SFP
- 2 Ethernet WAN
- 3 DSL
- 4 Cellular WAN (3G/4G)

See [Section 1.2.6 on page 30](#) for more information about Cellular backup.

1.2.2 Dual-Band WiFi


Note: Check [Section Table 1 on page 20](#) to see if your Zyxel Device supports dual-band WiFi.

When WiFi is enabled on the Zyxel Device, IEEE 802.11a/b/g/n/ac/ax compliant clients, such as notebooks, tablets, and smartphones can wirelessly connect to the Zyxel Device to access network resources.

With dual-band, the Zyxel Device is a gateway that can use both 2.4G and 5G WiFi networks at the same time. WiFi clients could use the 2.4 GHz band for regular Internet surfing and downloading while using the 5 GHz band for time sensitive traffic like high-definition video, music, and gaming.

The Zyxel Device supports WiFi6 that is most suitable in areas with a high concentration of users.

Figure 3 Dual-Band Application

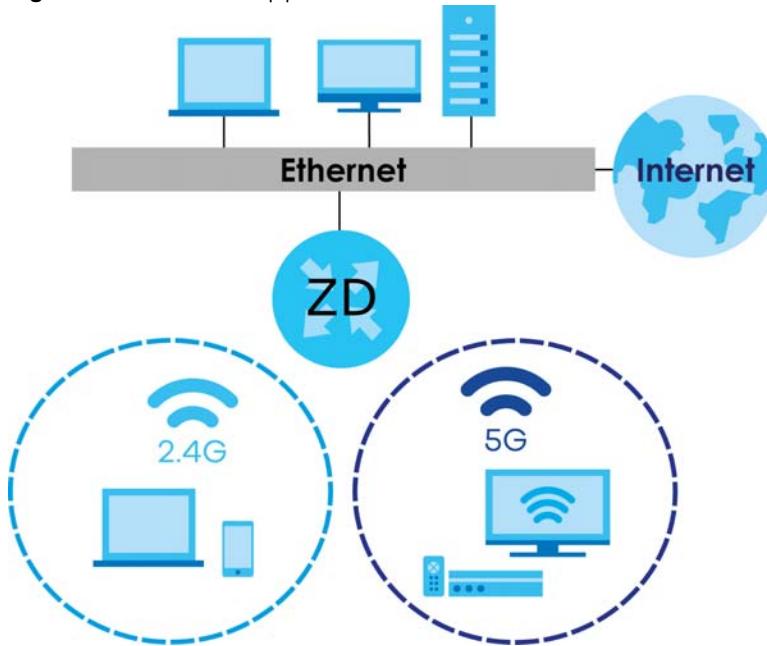

1.2.3 Triple-Band WiFi


Note: Check [Section Table 1 on page 20](#) to see if your Zyxel Device supports triple-band WiFi.

With triple-band, the Zyxel Device can use 2.4G/5G/6G bands to operate simultaneously.

The 6 GHz band provides less coverage but has the highest amount of channels among the three frequency bands. Use the 6 GHz band for the most congestion-free transmission if your client devices supports WiFi 6E.

Note: Due to each country's regulations on frequency band usage, the available bands (2.4 GHz, 5 GHz, and 6 GHz) may differ by countries or markets the Zyxel Device products are sold to.

WiFi clients could use the 2.4 GHz band for regular Internet surfing and downloading while using the 5 GHz or 6 GHz band for time sensitive traffic like high-definition video, music, and gaming.

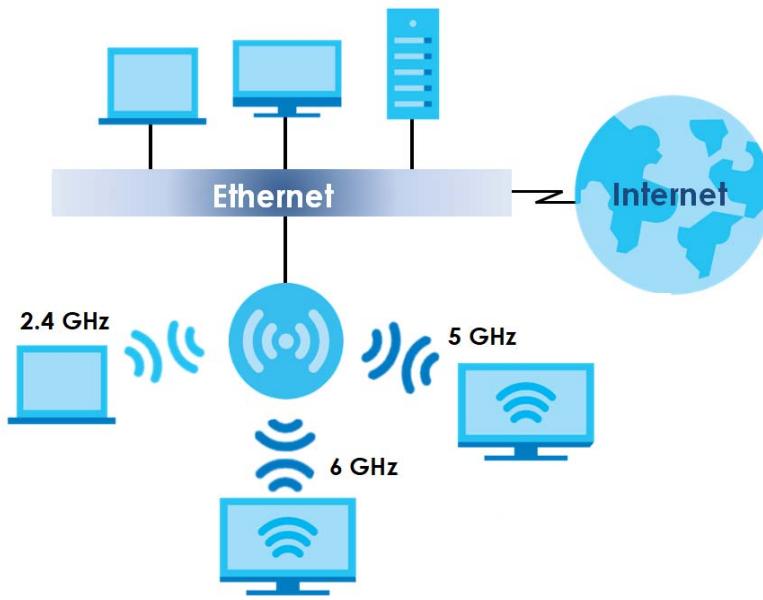Figure 4 Triple-Band Application

WiFi 7 (IEEE802.11be)

WiFi 7 (802.11be) is backward-compatible with WiFi 6 and WiFi 6E. WiFi 7 is a WiFi standard that supports 2.4 GHz, 5 GHz and 6 GHz frequency bands with the following improvements over WiFi 6 and WiFi 6E.

Table 6 WiFi 6, WiFi 6E and WiFi 7 Comparison

FEATURES		WiFi 6	WiFi 6E	WiFi 7
Theoretical Maximum Speed (Up-to)		The same (9.6 Gbps).		46 Gbps
Supported Frequency Bands		2.4 GHz/5 GHz		2.4 GHz/5 GHz/6 GHz
Supported Channel Bandwidth		20/40/80/160 MHz		20/40/80/160/320 MHz
Total Spectrum (Up-to)	2.4 GHz	80 MHz		80 MHz
	5 GHz	500 MHz		500 MHz
	6 GHz	Not supported.	1200 MHz	1200 MHz
Other Features (OFDMA/BSS Coloring/TWT/Two-Way MU-MIMO/ Beamforming/1024-QAM)		The same (WiFi 6E inherits all the features from WiFi 6).		WiFi 7 inherits all the features from WiFi 6 and WiFi 6E, with the addition of multi-link operation and preamble puncturing.

Faster Data Transmission


WiFi 7 allows faster data transmission using:

- 4096 QAM (Quadrature Amplitude Modulation) – enhances the amount of data transmitted over the available bandwidth.
- 320 MHz Channel Bandwidth – enlarges the supported channel bandwidth to 320 MHz, allowing higher data throughput.
- Multiple Resource Units (RUs) – allows an AP to allocate multiple RUs to a WiFi client.

Multi-Link Operation (MLO)

An AP can support multiple frequency bands (2.4 GHz, 5 GHz and 6 GHz), but a WiFi client can only connect to the AP using one of these frequency bands. The other frequency bands are unused. The client's data transmission speed depends on the frequency band they are connected to.

Figure 5 Without Multi-Link Operation

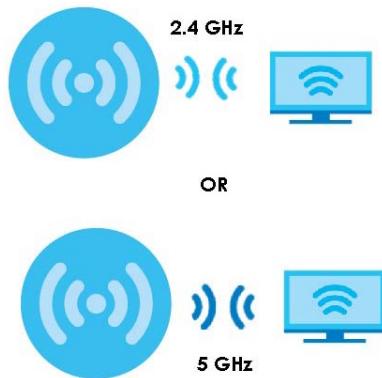

WiFi 7 MLO allows a WiFi client to connect to the AP using multiple frequency bands simultaneously. This increases speed and improves reliability of the WiFi connection. MLO makes WiFi 7 ideal for streaming 4K/8K videos, using augmented reality (AR), virtual reality (VR) applications and playing online games.

To use MLO, both the AP and the WiFi client have to support MLO.

Figure 6 Multi-Link Operation Example



Preamble Puncturing

In WiFi 6 and earlier, any interference would cause the entire WiFi channel to become unavailable. In the figure below, if part of the WiFi channel (B) experiences interference, the rest of the WiFi channel (C) becomes unavailable.

Figure 7 Without Preamble Puncturing



WiFi 7 preamble puncturing allows you to block the specific portion of the channel that is experiencing interference while continuing to use the rest of the WiFi channel. In the figure below, if part of the WiFi channel (B) experiences interference, the rest of the WiFi channel (C) is still available.

Figure 8 Preamble Puncturing Example



1.2.4 Multi-Gigabit Ethernet

For Zyxel Devices that support 10 Gbps / 2.5 Gbps Multi-Gigabit Ethernet (GbE) WAN/LAN ports, the port speeds are backward compatible with standard Gigabit speed. The Zyxel Devices with an SFP port can also provide Internet access through a Multi-Gigabit GPON WAN or Ethernet connection.


A 2.5 Gigabit Ethernet port supports speeds of 2.5 Gbps if the connected device supports 2.5 Gbps. While a 10 Gigabit Ethernet port supports speeds of 10 Gbps if the connected device supports 10 Gbps and a Cat 6a (up to 100 m) or Cat 6 cable (up to 50 m) is used.

Some network devices such as gaming computers, servers, network attached storage (NAS) devices, or access points may have network cards that are capable of 2.5 Gbps or 5 Gbps connectivity.

If these devices are connected to a 1 Gbps or 10 Gbps Ethernet port, they can only transmit or receive up to 1 Gbps as speeds of 2.5 Gbps / 10 Gbps cannot be attained. Moreover, if network devices with 2.5 Gbps / 10 Gbps network cards are connected to a 2.5 Gbps / 10 Gbps Ethernet port, you must use Cat 5e / Cat 6A or better Ethernet cables to achieve 2.5 Gbps / 10 Gbps speeds. Most buildings, at the time of writing, use Cat 5e or Cat 6 Ethernet cables.

Multi-Gigabit Ethernet ports automatically allow connections up to the speed of the connected network device (100 Mbps (not supported on EX5501-B0), 1 Gbps, 2.5 Gbps or 5 Gbps), and you just need to use a Cat 5, Cat 5e or Cat 6 Ethernet cable.

Figure 9 Multi-Gigabit Application

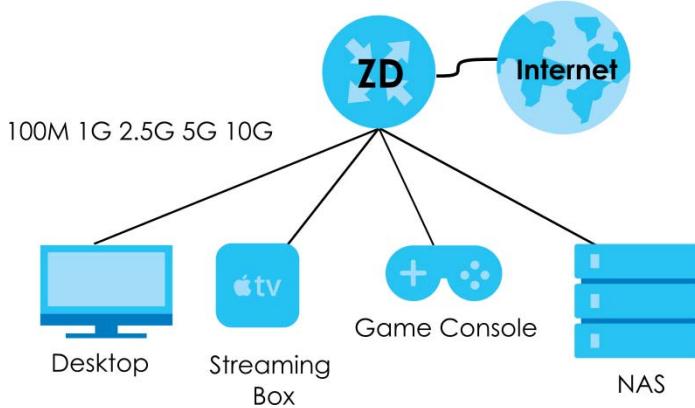

See the following table for the cables required and distance limitation to attain the corresponding speed.

Table 7 Ethernet Cable Types


CABLE	TRANSMISSION SPEED	MAXIMUM DISTANCE	BANDWIDTH CAPACITY
Category 5	100M	100 m	100 MHz
Category 5e or better	1G / 2.5G / 5G*	100 m	100 MHz
Category 6	5G / 10G	100m / 55 m	250 MHz
Category 6a	10G	100 m	500 MHz
Category 7	10G	100 m	600 MHz

* A high quality Category 5e cable can support 5 Gbps and up to 100m with no electromagnetic interference.

1.2.5 VoIP Applications

The Zyxel Device's VoIP function allows you to register up to two SIP (Session Initiation Protocol) accounts and use the Zyxel Device to make and receive VoIP telephone calls. The Zyxel Device sends your call to a VoIP service provider's SIP server which forwards the calls to either VoIP or PSTN phones.

Figure 10 VoIP Application

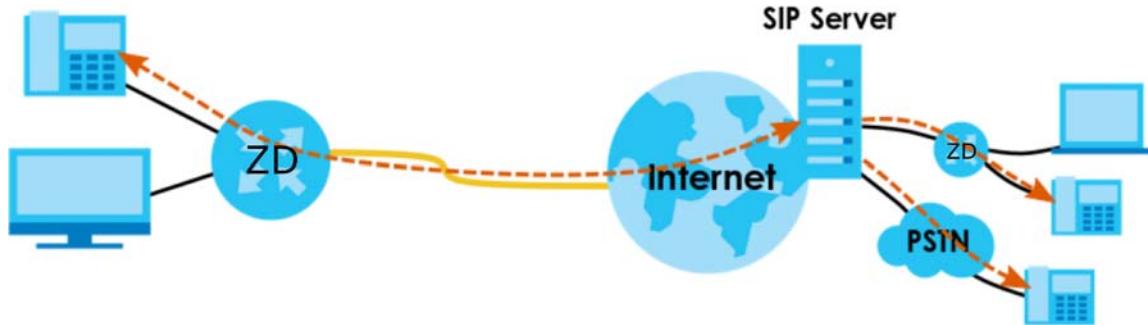

1.2.6 Zyxel Device's USB Support

The USB port of the Zyxel Device is used for cellular WAN backup, file-sharing, and media server.


Cellular WAN Backup

Connect a supported cellular USB dongle with an active SIM card to the USB port. This adds a second WAN interface and allows the Zyxel Device to wirelessly access the Internet via a cellular network. The cellular WAN connection is a backup in case the DSL/Ethernet/Fiber connection fails.

To set up a cellular connection, click **Network > Broadband > Cellular Backup**.


To update the supported cellular USB dongle list, download the latest WWAN package from the Zyxel website and upload it to the Zyxel Device using the **Maintenance > Firmware Upgrade** screen.

Figure 11 Internet Access Application: Cellular WAN

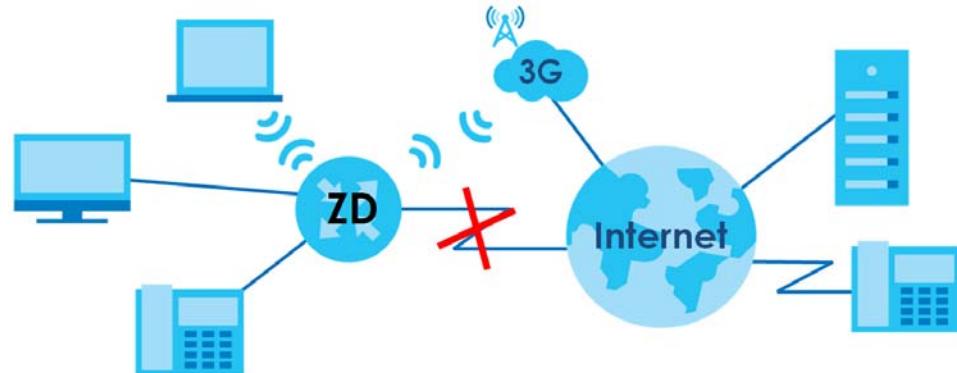


File Sharing

Use the built-in USB 3.0 port to share files on a USB memory stick or a USB hard drive (**A**). Use FTP to access the files on the USB device.

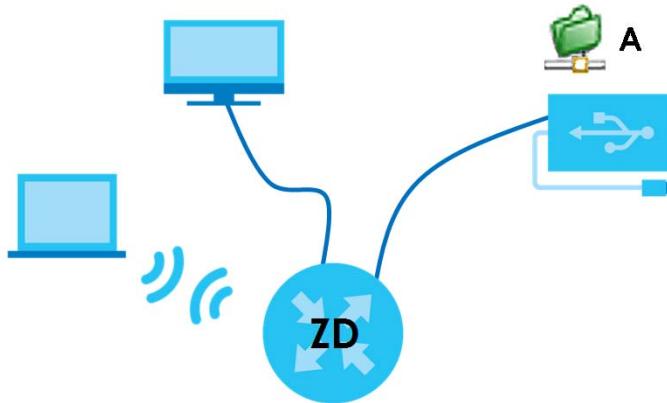Figure 12 USB File Sharing Application

Media Server

You can also use the Zyxel Device as a media server. This lets anyone on your network play video, music, and photos from a USB device (A) connected to the Zyxel Device's USB port (without having to copy them to another computer).

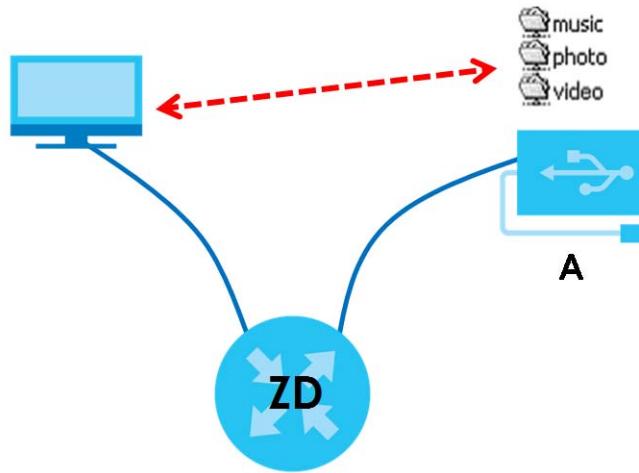Figure 13 USB Media Server Application

1.3 Ways to Manage the Zyxel Device

Use any of the following methods to manage the Zyxel Device.

- Web Configurator. This is recommended for management of the Zyxel Device using a (supported) web browser.
- Simple Network Management Protocol (SNMP). Use to monitor and/or manage the Zyxel Device by an SNMP manager.
- Secure Shell (SSH), Telnet. Use for troubleshooting the Zyxel Device by qualified personnel.
- FTP. Use FTP for firmware upgrades and configuration backup or restore.

1.4 Good Habits for Managing the Zyxel Device

Do the following things regularly to make the Zyxel Device more secure and to manage the Zyxel Device more effectively.

- Change the WiFi and Web Configurator passwords. Use a password that is not easy to guess and that consists of different types of characters, such as numbers and letters.
- Write down the passwords and put it in a safe place.
- Back up the configuration (and make sure you know how to restore it). Restoring an earlier working configuration may be useful if the device becomes unstable or even crashes. If you forget your password, you will have to reset the Zyxel Device to its factory default settings. If you backed up an earlier configuration file, you would not have to totally re-configure the Zyxel Device. You could simply restore your last configuration.

CHAPTER 2

Hardware

2.1 Hardware

This section describes the front and rear panels for each model. If your model is not shown here, refer to the Zyxel Device's Quick Start Guides to see the product drawings and how to make the hardware connections.

2.2 LED Indicators Panel

The following shows the Zyxel Device LED indicators panel and the LED behaviors.

None of the LEDs are on if the Zyxel Device is not receiving power.

2.2.1 AX7501

Figure 14 LED Indicators (AX7501-B0 / AX7501-B1)



Note: The 2.5G LAN and 2.5G WAN LEDs are only for the Ethernet router. 10G LAN is only for the AON and PON routers. See [Section 1.1 on page 20](#) for more information.

The following are the LED descriptions for your AX7501.

Table 8 LED Descriptions (AX7501)

LED	COLOR	STATUS	DESCRIPTION
POWER	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is self-testing.
	Red	On	The Zyxel Device detected an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
2.5G WAN	Blue	On	The Zyxel Device has a successful 2.5 Gbps Ethernet connection on the WAN.
		Green	The Zyxel Device has a successful 1 Gbps Ethernet connection on the WAN.
		Off	The Zyxel Device does not have an Ethernet connection with the WAN.
			The LED will cycle Green > Blue > Off > repeat, when the Zyxel Device has an unsupported 100 Mbps Ethernet connection on the WAN.

Table 8 LED Descriptions (AX7501) (continued)


LED	COLOR	STATUS	DESCRIPTION
FIBER	Green	On	The FIBER port is connected to the ISP's ONT and the Zyxel Device is receiving optical signals normally.
		Blinking	The Zyxel Device's FIBER port is trying to build a PON connection.
	Red	On	The optical power received (the strength of optical signals transmitted on the remote optical module) is too low.
		Off	The connection to the ISP's ONT is down.
INTERNET	Green	On	The Zyxel Device has an IP connection but no traffic. Your device has a WAN IP address (either static or assigned by a DHCP server), PPP negotiation was successfully completed (if used).
		Blinking	The Zyxel Device is sending or receiving IP traffic. Note: For AON and PON routers only; see Section 1.1 on page 20 for more information.
		Off	There is no Internet connection or the gateway is in Bridge mode.
	Red	On	The Zyxel Device attempted to make an IP connection but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
		Blinking	The Zyxel Device has an unsupported 100 Mbps Ethernet connection on the WAN. Note: For Ethernet routers only, see Section 1.1 on page 20 for more information.
10G LAN (for AX7501-B0/ AX7501-B1)	Green	On	The Zyxel Device has a successful 10/100/10000 Mbps Ethernet connection with a device on the Local Area Network (LAN) through the 10G LAN port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN at 10/100/ 10000 Mbps through the 10G LAN port.
		Off	The Zyxel Device does not have an Ethernet connection with the LAN through the 10G LAN port.
LAN1 – 4	Green	On	The Zyxel Device has a successful 10/100/1000 Mbps Ethernet connection with a device on the Local Area Network (LAN) through the LAN1 – 4 ports.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN at 10/100/ 1000 Mbps through the LAN1 – 4 ports. Note: For AON and PON routers only; see Section 1.1 on page 20 for more information.
		Off	The Zyxel Device does not have an Ethernet connection with the LAN through the LAN1 – 4 ports.
WiFi 2.4G	Green	On	The 2.4G WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 2.4G WiFi clients. Note: For AON and PON routers only; see Section 1.1 on page 20 for more information.
		Off	The 2.4G WiFi network is not activated.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 2.4G WiFi client.

Table 8 LED Descriptions (AX7501) (continued)

LED	COLOR	STATUS	DESCRIPTION
WiFi 5G	Green	On	The 5G WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5G WiFi clients. Note: For AON and PON routers only; see Section 1.1 on page 20 for more information.
	Off		The 5G WiFi network is not activated.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 5G WiFi client.
PHONE	Green	On	A SIP account is registered for the phone port.
		Blinking	The telephone connected to this phone port has an incoming call or is off the hook.
		Off	The phone port does not have a SIP account registered.
	Amber	On	A SIP account is registered for the phone port, and there is a voice message in the corresponding SIP account.
		Blinking	The telephone connected to this phone port has an incoming call or is off the hook. There is a voice message in the corresponding SIP account.
USB	Green	On	The Zyxel Device recognizes a USB connection through the USB port.
		Blinking	The Zyxel Device is sending or receiving data to/from the USB device connected to it. Note: For AON and PON routers only; see Section 1.1 on page 20 for more information.
	Off		The Zyxel Device does not detect a USB connection through the USB port.

2.2.2 DX3300-T0, DX3301-T0, EX3300-T0 and EX3301-T0

Figure 15 LED Indicators (DX3300-T0 / DX3301-T0 / EX3300-T0 / EX3301-T0)

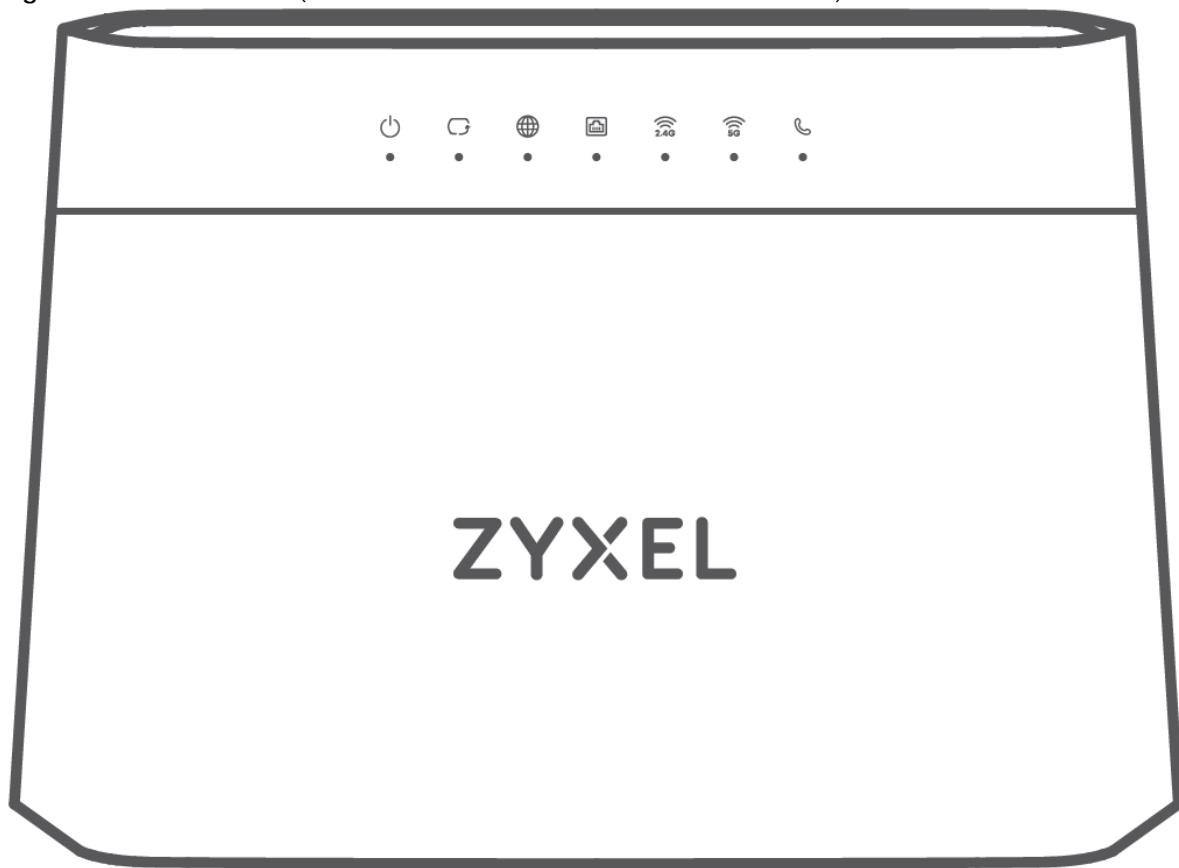

The following are the LED descriptions for your DX3300-T0 / EX3300-T0.

Table 9 LED Descriptions (DX3300-T0 / EX3300-T0)

LED	COLOR	STATUS	DESCRIPTION
Power	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is self-testing.
	Red	On	The Zyxel Device detected an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
		Off	The Zyxel Device is not receiving power.
DSL / Ethernet WAN	Green	On	The VDSL/ ADSL link is up.
		Slow Blinking	The Zyxel Device is looking for a VDSL or ADSL link.
		Fast Blinking	The Zyxel Device is initializing the VDSL or ADSL link.

Table 9 LED Descriptions (DX3300-T0 / EX3300-T0) (continued)

LED	COLOR	STATUS	DESCRIPTION
Internet	Green	On	The Zyxel Device has an IP connection but no traffic. Your device has a WAN IP address (either static or assigned by a DHCP server), PPP negotiation was successfully completed (if used) and the DSL connection is up.
		Blinking	The Zyxel Device is sending or receiving IP traffic.
		Off	There is no Internet connection or the gateway is in bridged mode.
LAN1 – 4	Red	On	The Zyxel Device attempted to make an IP connection but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
		On	The Zyxel Device has a successful 10/100/1000 Mbps Ethernet connection with a device on the Local Area Network (LAN).
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN at 10/ 100/1000 Mbps.
2.4G WLAN/WPS	Green	Off	The Zyxel Device does not have an Ethernet connection with the LAN.
		On	The 2.4 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
5G WLAN/WPS	Green	Off	The link is down or disabled.
		Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
		On	The 5 GHz WiFi network is activated.
	Amber	Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
	Amber	Off	The link is down or disabled.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 5 GHz WiFi client.

The following are the LED descriptions for your DX3301-T0 / EX3301-T0.

Table 10 LED Descriptions (DX3301-T0 / EX3301-T0)

LED	COLOR	STATUS	DESCRIPTION
Power	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is self-testing.
	Red	On	The Zyxel Device detected an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
DSL / Ethernet WAN	Green	On	The VDSL / ADSL link is up.
		Slow Blinking	The Zyxel Device is looking for a VDSL / ADSL link.
		Fast Blinking	The Zyxel Device is initializing the VDSL / ADSL link.

Table 10 LED Descriptions (DX3301-T0 / EX3301-T0) (continued)

LED	COLOR	STATUS	DESCRIPTION
Internet	Green	On	The Zyxel Device has an IP connection but no traffic. Your device has a WAN IP address (either static or assigned by a DHCP server), PPP negotiation was successfully completed (if used) and the DSL connection is up.
		Blinking	The Zyxel Device is sending or receiving IP traffic.
		Off	There is no Internet connection or the gateway is in bridged mode.
LAN1 – 4	Red	On	The Zyxel Device attempted to make an IP connection but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
		On	The Zyxel Device has a successful 10/100/1000 Mbps Ethernet connection with a device on the Local Area Network (LAN).
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN at 10/100/1000 Mbps.
		Off	The Zyxel Device does not have an Ethernet connection with the LAN.
2.4G WLAN/WPS	Green	On	The 2.4 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
		Off	The link is down or disabled.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
5G WLAN/WPS	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
		Off	The link is down or disabled.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 5 GHz WiFi client.
Phone1, Phone2	Green	On	A SIP account is registered for at least one phone port, and there is no voice message in the corresponding SIP account.
		Blinking	A telephone connected to one of the phone port has its receiver off the hook or there is an incoming call. There is no voice message in the corresponding SIP account.
	Amber	On	A SIP account is registered for the phone port and there is a voice message in the corresponding SIP account.
		Blinking	A telephone connected to the phone port has its receiver off the hook or there is an incoming call. There is voice message in the corresponding SIP account.
		Off	<ul style="list-style-type: none"> The Zyxel Device is turned off. The VoIP function is not activated. The SIP account is not enabled. The phone port does not have a SIP account registered.

2.2.3 DX3300-T1 and EX3300-T1

Figure 16 DX3300-T1

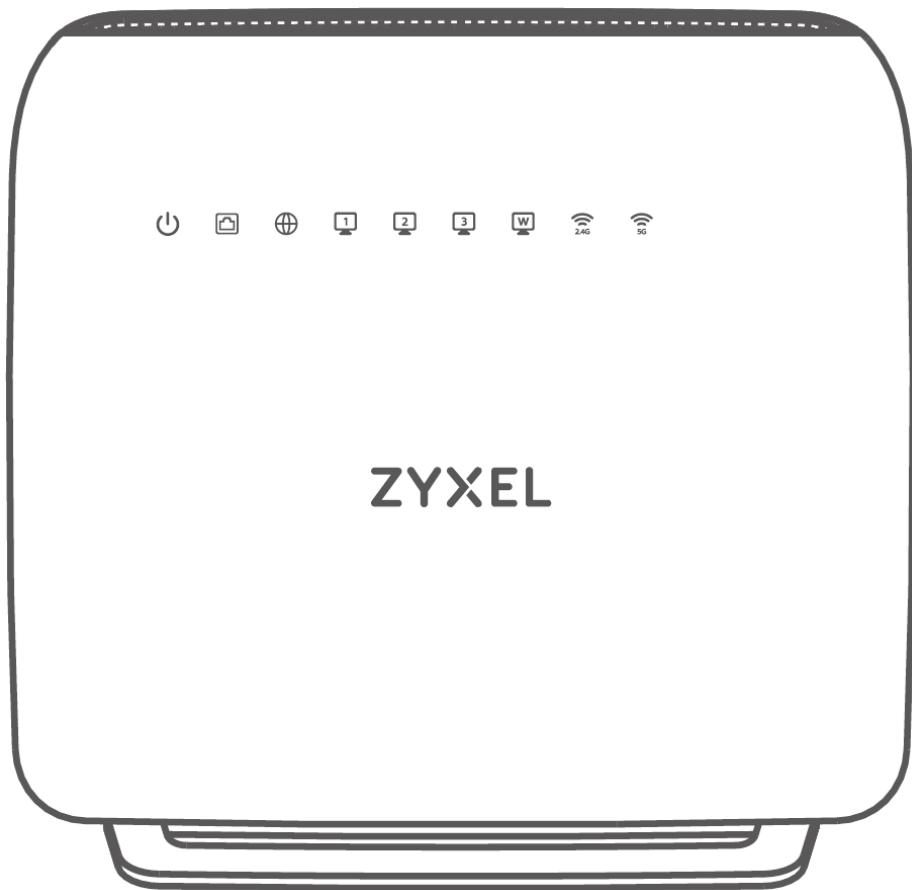
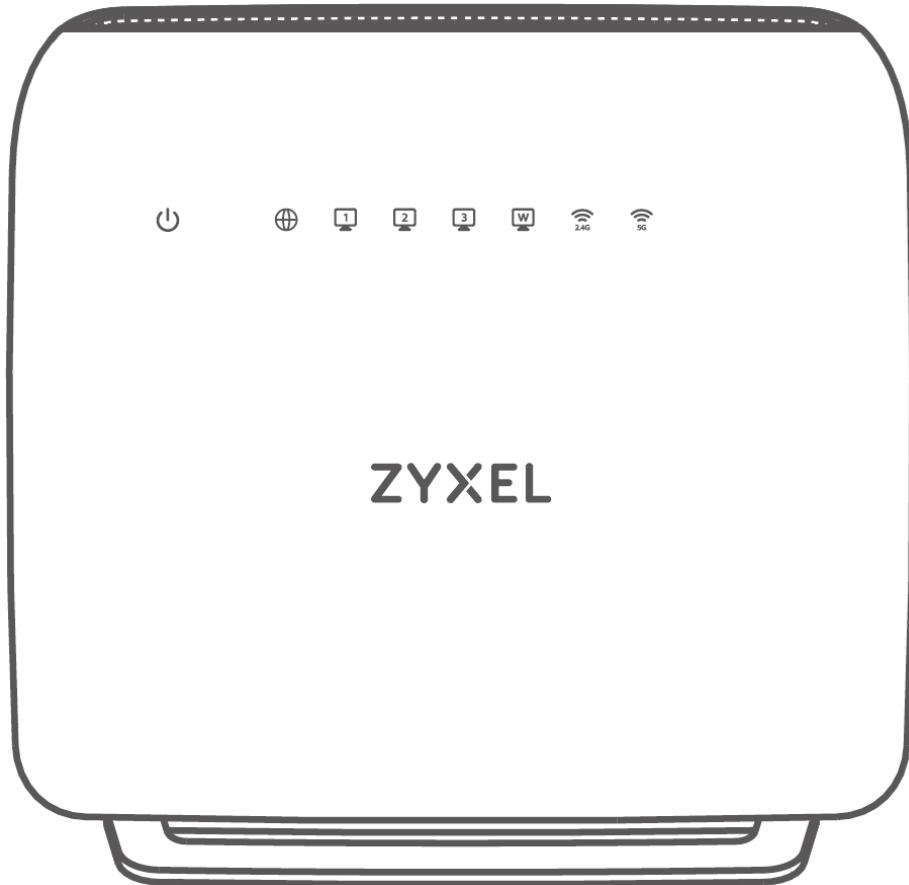


Figure 17 EX3300-T1

The following are the LED descriptions for your DX3300-T1 and EX3300-T1.

Table 11 LED Descriptions (DX3300-T1 / EX-3300-T1)


LED	COLOR	STATUS	DESCRIPTION
POWER 	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up.
	Red	On	The Zyxel Device detects an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
DSL WAN 	Green	On	For DX3300-T1: The ADSL/VDSL link on the WAN is up.
		Slow Blinking	For DX3300-T1: The ADSL/VDSL link is down, and the Zyxel Device is looking for an ADSL/VDSL link.
		Fast Blinking	For DX3300-T1: The Zyxel Device is initializing the ADSL/VDSL link.
		Off	For DX3300-T1: The ADSL/VDSL link is down.

Table 11 LED Descriptions (DX3300-T1 / EX-3300-T1) (continued)

LED	COLOR	STATUS	DESCRIPTION
 INTERNET	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving traffic.
	Red	On	The Zyxel Device attempted to obtain an WAN IP but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
		Off	There is no Internet connection or the gateway is in bridge mode.
 LAN1-3	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the Local Area Network (LAN) port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the LAN port.
 LAN4/WAN	Green	On	LAN mode: The Zyxel Device has a successful Ethernet connection with a device on the LAN4/WAN port. WAN mode: The Ethernet WAN connection is up on the LAN4/WAN port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN4/WAN port.
		Off	LAN mode: The Zyxel Device does not have an Ethernet connection with a device on the LAN4/WAN port. WAN mode: The Ethernet WAN connection on the LAN4/WAN port is down.
		Amber	The Zyxel Device is connecting to a 2.4 GHz WiFi client through WPS.
 2.4G	Green	On	The 2.4 GHz WiFi is activated.
		Blinking	The Zyxel Device is sending or receiving data to/from 2.4 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is connecting to a 2.4 GHz WiFi client through WPS.
		Off	The 2.4 GHz WiFi network is not activated.
 5G	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is sending or receiving data to/from 5 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is connecting to a 5 GHz WiFi client through WPS.
		Off	The 5 GHz WiFi network is not activated.

2.2.4 EX3500-T0 and EX3501-T0

Figure 18 LED Indicators (EX3500-T0 / EX3501-T0)

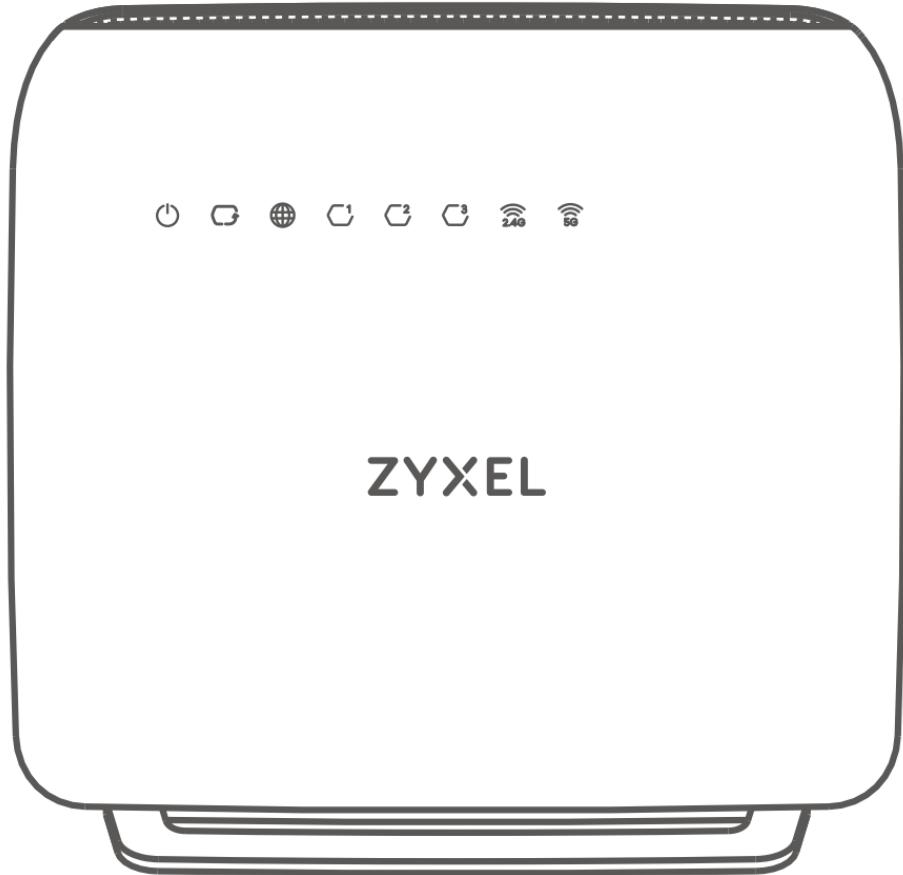


The following are the LED descriptions for your EX3500-T0 and EX3501-T0.

Table 12 LED Descriptions (EX3500-T0 / EX3501-T0)


LED	COLOR	STATUS	DESCRIPTION
POWER 	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up.
	Red	On	The Zyxel Device detects an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
WAN 	Green	On	The Ethernet link on the WAN is up.
		Off	The Ethernet link on the WAN is down.
INTERNET 	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving Internet data.
	Red	On	The Zyxel Device attempted to obtain an WAN IP but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
		Off	There is no Internet connection or the gateway is in bridge mode.

Table 12 LED Descriptions (EX3500-T0 / EX3501-T0) (continued)

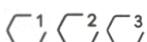LED	COLOR	STATUS	DESCRIPTION
 LAN1-3	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the Local Area Network (LAN) port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the LAN port.
 2.4G	Green	On	The 2.4 GHz WiFi is activated.
		Blinking	The Zyxel Device is sending or receiving data to/from 2.4 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is connecting to a 2.4 GHz WiFi client through WPS.
		Off	The 2.4 GHz WiFi network is not activated.
 5G	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is sending or receiving data to/from 5 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is connecting to a 5 GHz WiFi client through WPS.
		Off	The 5 GHz WiFi network is not activated.
 Phone1, Phone2	Green	On	A SIP account is registered for at least one phone port, and there is no voice message in the corresponding SIP account.
		Blinking	A telephone connected to one of the phone port has its receiver off the hook or there is an incoming call. There is no voice message in the corresponding SIP account.
	Amber	On	A SIP account is registered for the phone port and there is a voice message in the corresponding SIP account.
		Blinking	A telephone connected to the phone port has its receiver off the hook or there is an incoming call. There's voice message in the corresponding SIP account.
	Off		The phone port has a telephone connection, but it is not in use. VoIP is disabled, or there is no registered SIP account defined for the phone port.

2.2.5 EX3600-T0

Figure 19 LED Indicators

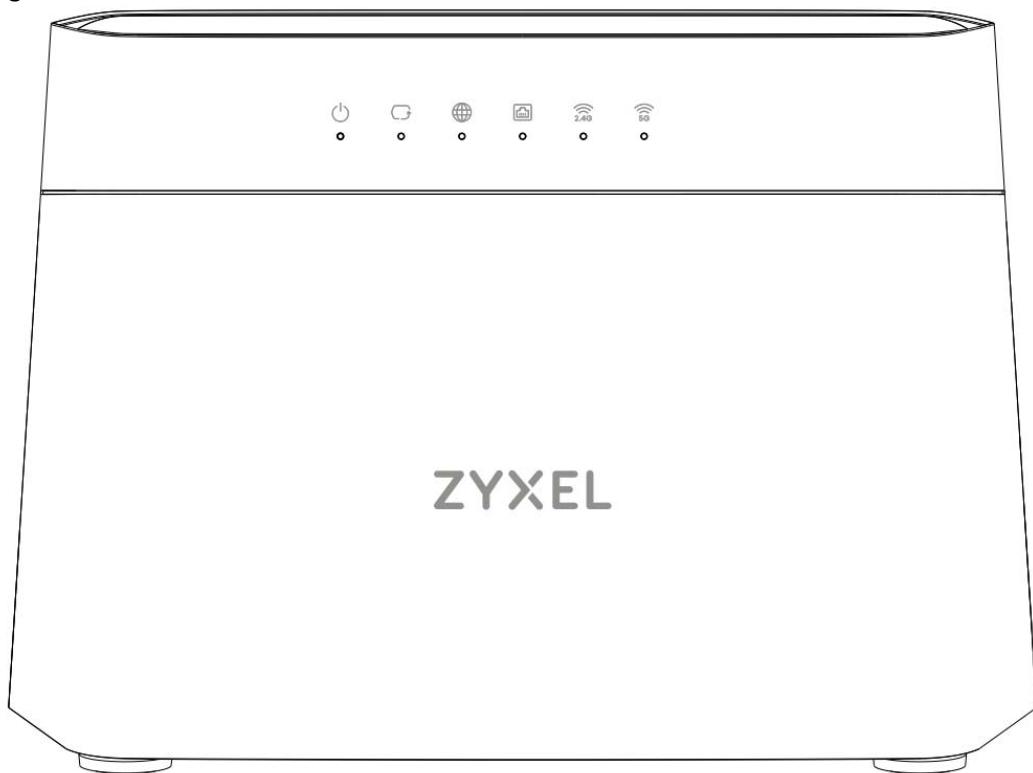

The following are the LED descriptions for your EX3600-T0.

Table 13 LED Descriptions


LED	COLOR	STATUS	DESCRIPTION
Power	Green	On	The Zyxel Device is receiving power and ready for use. The Zyxel Device is in Extender mode and the MPro Mesh pairing process is done.
		Blinking	The Zyxel Device is booting up. The Zyxel Device is in Extender mode and under the MPro Mesh pairing process.
	Red	On	The Zyxel Device detected an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
		Off	The Zyxel Device is not receiving power.
Ethernet WAN	Green	On	The Ethernet WAN port is connected successfully.
		Off	The Ethernet WAN port is not connected successfully.

Table 13 LED Descriptions (continued)

LED	COLOR	STATUS	DESCRIPTION
Internet	Green	On	The Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving IP traffic.
	Red	On	The Zyxel Device attempted to make an IP connection but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
		Off	The Zyxel Device is in Extender mode and the Internet connection to the gateway modem/controller is weak.
LAN1 – 4	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the Local Area Network (LAN).
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN.
		Off	The Zyxel Device does not have an Ethernet connection with the LAN.
2.4G WLAN/WPS	Green	On	The 2.4 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
		Off	The link is down or disabled.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
5G WLAN/WPS	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
	Amber	On	The Zyxel Device is in Extender mode and under the MPro Mesh pairing process.
		Blinking	The Zyxel Device is setting up a WPS connection with a 5 GHz WiFi client. The Zyxel Device is in Extender mode and the MPro Mesh pairing process has failed.
	Off		The link is down or disabled.

2.2.6 DX5401-B0/1 and EX5401-B0/1

Figure 20 LED Indicators (DX5401-B0 / DX5401-B1 / EX5401-B0 / EX5401-B1)

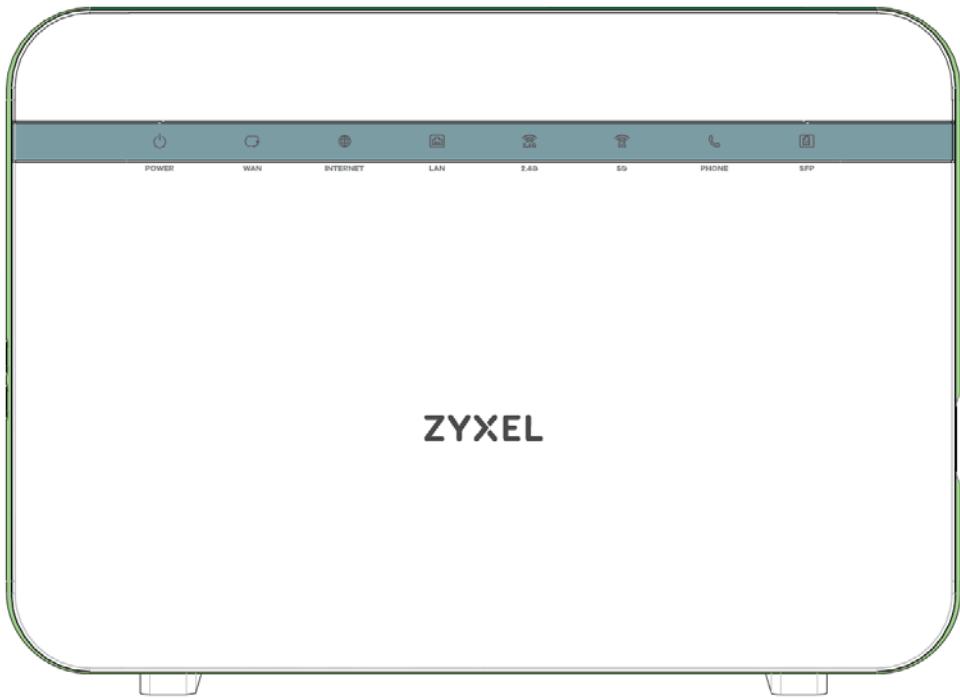

Note: The phone LED is for the Zyxel Device with phone ports only; see [Section 1.1 on page 20](#) for more information.

The following are the LED descriptions for your DX5401-B0/B1 and EX5401-B0/B1.

Table 14 LED Descriptions (DX5401-B0/B1 / EX5401-B0/B1)

LED	COLOR	STATUS	DESCRIPTION
Power 	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is self-testing.
	Red	On	The Zyxel Device detects an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
DSL / Ethernet WAN 	Green	On	The VDSL line or a successful 10/100/1000 Mbps Ethernet connection on the WAN is up.
		Slow Blinking	The Zyxel Device is looking for a VDSL line.
		Fast Blinking	The Zyxel Device is initializing the VDSL line.
		Off	There is no Ethernet connection on the WAN.
	Amber	On	The ADSL line on the WAN is up.
		Slow Blinking	The Zyxel Device is looking for an ADSL line
		Fast Blinking	The Zyxel Device is initializing the ADSL line.

Table 14 LED Descriptions (DX5401-B0/B1 / EX5401-B0/B1) (continued)

LED	COLOR	STATUS	DESCRIPTION
Internet 	Green	On	The Zyxel Device has an IP connection but no traffic. Your device has a WAN IP address (either static or assigned by a DHCP server), PPP negotiation was successfully completed (if used) and the DSL connection is up.
		Blinking	The Zyxel Device is sending or receiving IP traffic.
		Off	There is no Internet connection or the gateway is in bridged mode.
LAN1 – 4 	Green	On	The Zyxel Device has a successful 10/100/1000 Mbps Ethernet connection with a device on the Local Area Network (LAN).
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN at 10/100/1000 Mbps.
		Off	The Zyxel Device does not have an Ethernet connection with the LAN.
2.4G WLAN/ WPS 	Green	On	The 2.4 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
	Amber	On	The WPS process fails.
		Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
		Off	The 2.4 GHz WiFi network is not activated.
5G WLAN/ WPS 	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
	Amber	On	The WPS process fails.
		Blinking	The Zyxel Device is setting up a WPS connection with a 5 GHz WiFi client.
		Off	The 5 GHz WiFi network is not activated.
Phone1, Phone2 	Green	On	A SIP account is registered for at least one phone port, and there is no voice message in the corresponding SIP account.
		Blinking	A telephone connected to one of the phone port has its receiver off the hook or there is an incoming call. There is no voice message in the corresponding SIP account.
	Amber	On	A SIP account is registered for the phone port and there is a voice message in the corresponding SIP account.
		Blinking	A telephone connected to the phone port has its receiver off the hook or there is an incoming call. There is voice message in the corresponding SIP account.

2.2.7 EX5600-T1, EX5601-T0 and EX5601-T1

Figure 21 LED Indicators (EX5600-T1)

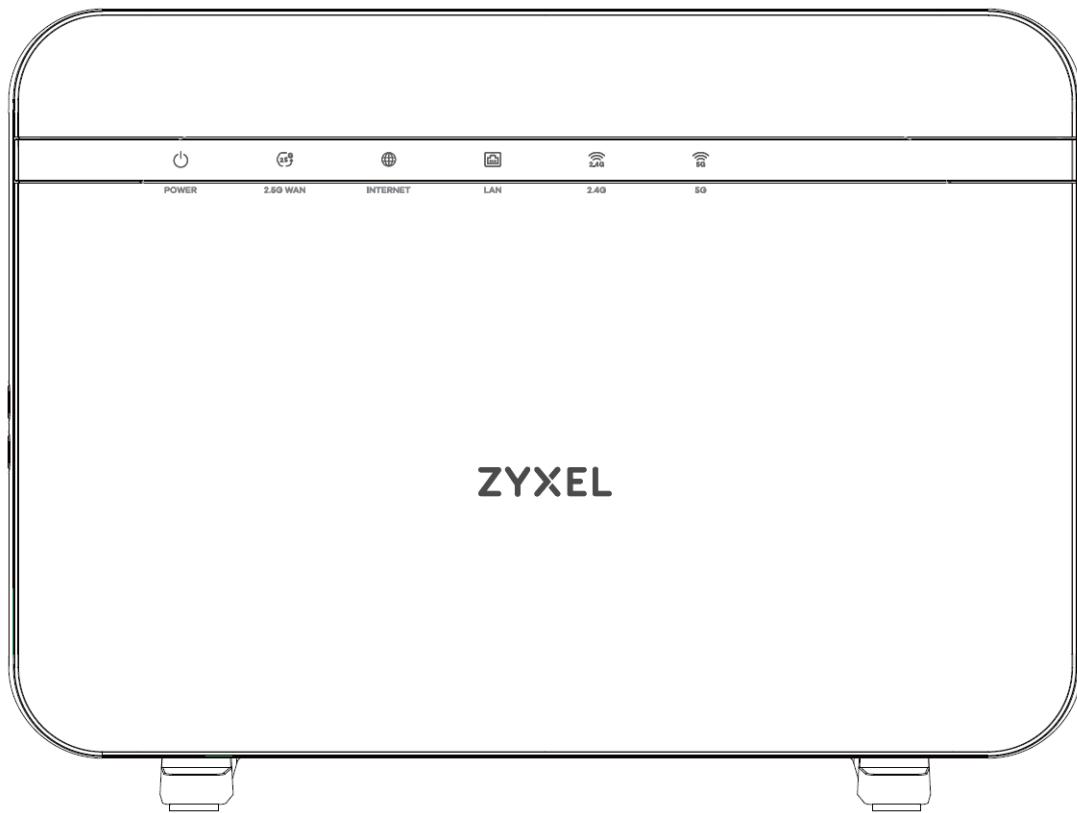


Figure 22 LED Indicators (EX5601-T0)


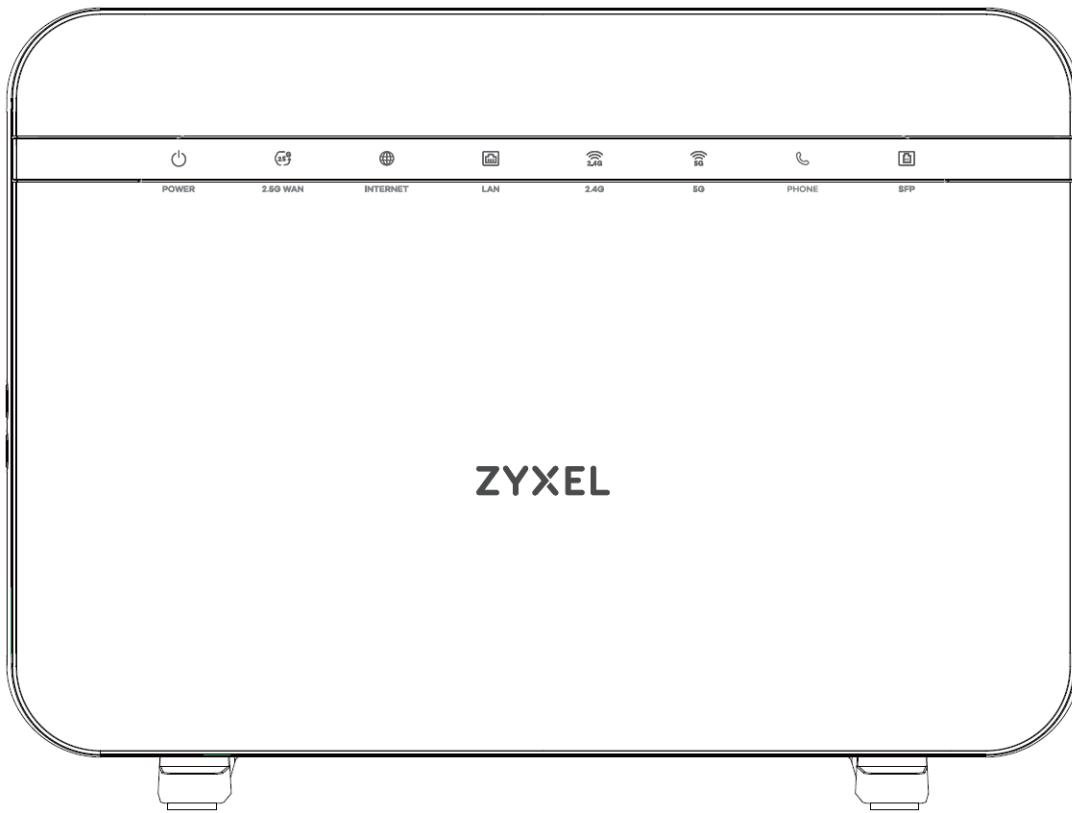


Figure 23 LED Indicators (EX5601-T1)

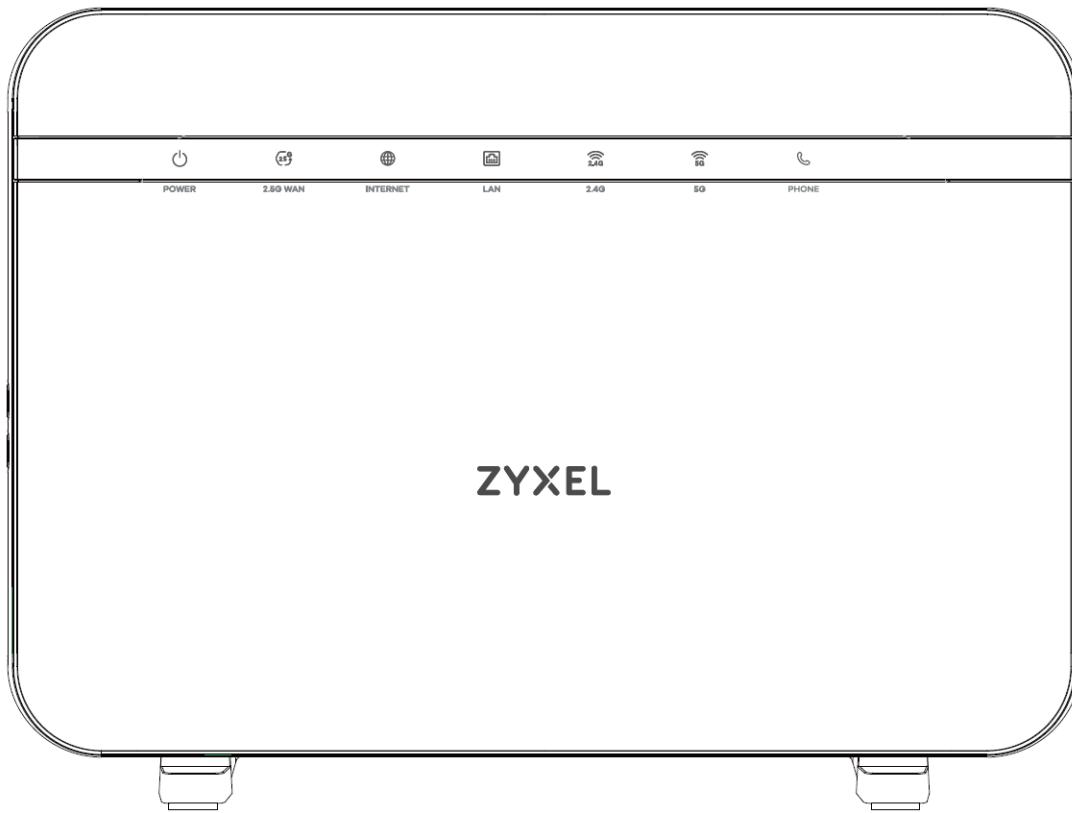

Note: The Phone LED is for the Zyxel Device with phone ports only; the SFP LED is for the Zyxel Device with an SFP port only; see [Section 1.1 on page 20](#) for more information.

The following are the LED descriptions for your EX5600-T1 / EX5601-T0 / EX5601-T1.

Table 15 LED Descriptions (EX5600-T1 / EX5601-T0 / EX5601-T1)

LED	Color	Status	Description
POWER 	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up.
	Red	On	The Zyxel Device detects an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
2.5G WAN 	Green	On	The Zyxel Device has a successful Ethernet connection on the 2.5G WAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the 2.5G WAN port.
INTERNET 	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving traffic.
		Off	There is no Internet connection or the gateway is in bridged mode.
	Red	On	The Zyxel Device attempted to obtain an WAN IP but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
LAN 	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the Local Area Network (LAN).
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN.
		Off	The Zyxel Device does not have an Ethernet connection on the LAN.
2.4G 	Green	On	The 2.4 GHz WiFi is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
		Off	The 2.4 GHz WiFi network is not activated.
5G 	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is connecting to 5 GHz WiFi clients through WPS.
		Off	The 5 GHz WiFi network is not activated.
Phone 	Green	On	All phone ports are on-hook. An SIP account is registered for at least one phone port, and there is no voice message in the corresponding SIP account.
		Blinking	A telephone connected to one of the phone port has its receiver off the hook or there is an incoming call. There is no voice message in the corresponding SIP account.
	Amber	On	A SIP account is registered for the phone port and there is a voice message in the corresponding SIP account.
		Blinking	A telephone connected to the phone port has its receiver off the hook or there is an incoming call. There is voice message in the corresponding SIP account.
		Off	All phone ports are on-hook. The VoIP function is disabled, or there is no registered SIP account defined for any of the phone ports.


Table 15 LED Descriptions (EX5600-T1 / EX5601-T0 / EX5601-T1) (continued)

LED	COLOR	STATUS	DESCRIPTION
SFP 	Green	On	The SFP port is connected to the ISP's ONT and the Zyxel Device is receiving optical signals normally, or the SFP port's Ethernet WAN connection is up.
		Off	The connection to the ISP's ONT or the Ethernet WAN connection is down.

Note: The phone LED is for the Zyxel Device with phone ports only; see [Section 1.1 on page 20](#) for more information.

2.2.8 EX7501-B0

Figure 24 LED Indicators

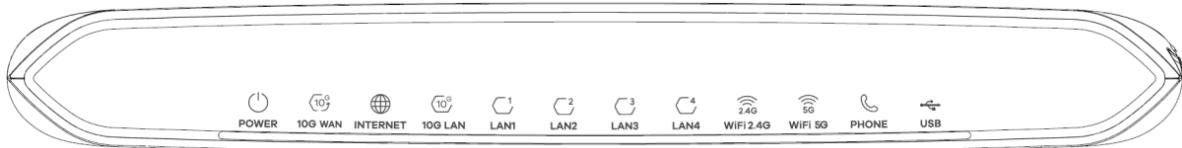

The following are the LED descriptions for your EX7501-B0.

Table 16 LED Descriptions (EX7501-B0)


LED	COLOR	STATUS	DESCRIPTION
POWER 	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up.
	Red	On	The Zyxel Device detects an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
10G WAN 	Green	On	The Zyxel Device has a successful Ethernet connection on the 10G WAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the 10G WAN port.
INTERNET 	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving traffic.
		Off	There is no Internet connection or the gateway is in bridged mode.
	Red	On	The Zyxel Device attempted to obtain an WAN IP but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
10G LAN 	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the 10G LAN (Local Area Network) port.
		Blinking	The Zyxel Device is sending or receiving data to/from the 10G LAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the 10G LAN port.
LAN1-4 	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the LAN (Local Area Network) port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the LAN port.

Table 16 LED Descriptions (EX7501-B0) (continued)

LED	COLOR	STATUS	DESCRIPTION
2.4G 2.4G	Green	On	The 2.4 GHz WiFi is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
		Off	The 2.4 GHz WiFi network is not activated.
5G 5G	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
	Amber	Blinking	The Zyxel Device is connecting to 5 GHz WiFi clients through WPS.
		Off	The 5 GHz WiFi network is not activated.
Phone 📞	Green	On	All phone ports are on-hook. An SIP account is registered for at least one phone port, and there is no voice message in the corresponding SIP account.
		Blinking	At least one telephone connected to one of the phone ports has its receiver off the hook or there is an incoming call. There is no voice message in the corresponding SIP account.
	Amber	On	All phone ports are on-hook. A SIP account is registered for the phone port and there is a voice message in the corresponding SIP account.
		Blinking	At least one telephone connected to the phone port has its receiver off the hook or there is an incoming call. There is voice message in the corresponding SIP account.
		Off	All phone ports are on-hook. The VoIP function is disabled, or there is no registered SIP account defined for any of the phone ports.
USB USB	Green	On	A device is connected to the USB port.
		Off	There is currently no device connected to the USB port.

2.2.9 EE6601-00

Figure 25 LED Indicators

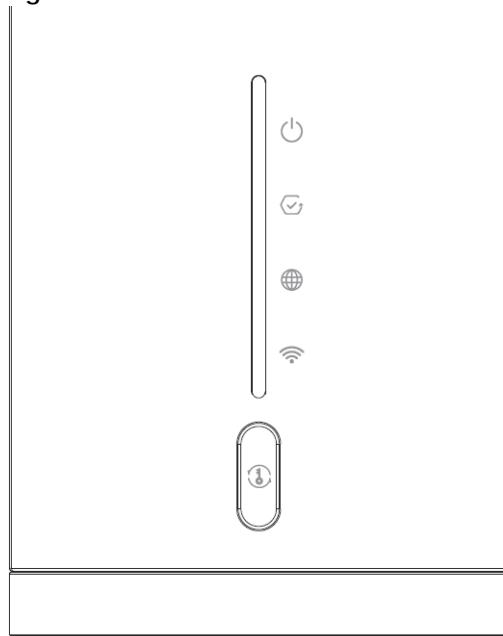


The following are the LED descriptions for your EE6601-00.

Table 17 LED Descriptions (EE6601-00)

LED	COLOR	STATUS	DESCRIPTION
POWER 	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up.
	Red	On	The Zyxel Device detects an error while self-testing, or there is a device malfunction.
		Blinking	The Zyxel Device is upgrading firmware.
	Off		The Zyxel Device is not receiving power.
Status 	Green	On	All phone ports are on-hook. An SIP account is registered for at least one phone port, and there is no voice message in the corresponding SIP account.
		Blinking	At least one telephone connected to one of the phone ports has its receiver off the hook or there is an incoming call. There is no voice message in the corresponding SIP account.
	Amber	On	All phone ports are on-hook. SIP account registration failed.
		Off	All phone ports are on-hook. The VoIP function is disabled, or there is no registered SIP account defined for any of the phone ports.
INTERNET 	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving traffic.
		Off	There is no Internet connection or the gateway is in bridged mode.
	Red	On	The Zyxel Device attempted to obtain an WAN IP but failed. Possible causes are no response from a DHCP server, no PPPoE response, PPPoE authentication failed.
WiFi 	Green	On	The WiFi is activated.
		Blinking	The Zyxel Device is communicating with WiFi clients.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a WiFi client.
		Off	The WiFi network is not activated.

2.2.10 PX3321-T1

Figure 26 LED Indicators (PX3321-T1)

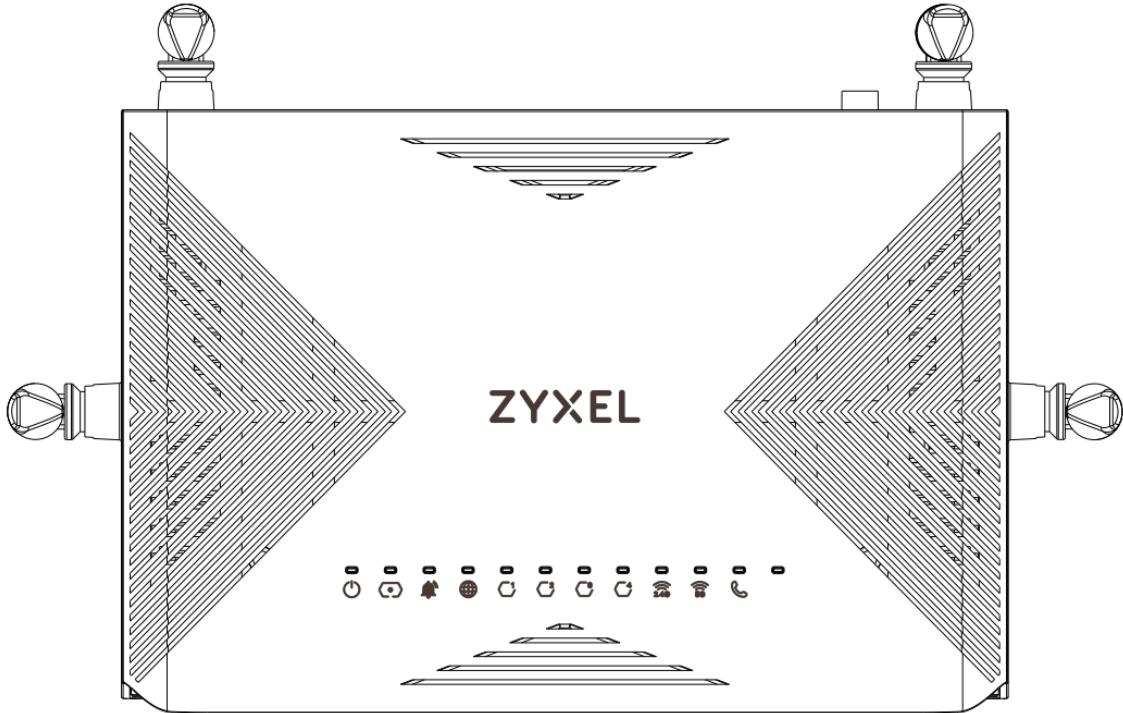

The following are the LED descriptions for your PX3321-T1.

Table 18 LED Descriptions (PX3321-T1)


LED	COLOR	STATUS	DESCRIPTION
POWER	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up or upgrading firmware.
		Off	The Zyxel Device is not receiving power.
PON	Green	On	The Zyxel Device is ready for PON connection.
		Blinking	The Zyxel Device is setting up a PON connection.
		Off	The Zyxel Device is not receiving an optical signal.
LOS	Red	On	The PON transceiver is not receiving an optical signal.
		Blinking	The optical signal the PON transceiver receiving is too weak or too strong.
		Off	The PON connection is ready.
INTERNET	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is trying to build an Internet connection.
		Off	The Zyxel Device's WAN connection is down or in Bridge mode. You can select modes on the Network Setting > Broadband > Modify screen.
LAN 1-4	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the LAN (Local Area Network) port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the LAN port.

Table 18 LED Descriptions (PX3321-T1) (continued)

LED	COLOR	STATUS	DESCRIPTION
2.4G	Green	On	The 2.4 GHz WiFi is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
		Off	The 2.4 GHz WiFi network is not activated.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
5G	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
		Off	The 5 GHz WiFi network is not activated.
	Amber	Blinking	The Zyxel Device is connecting to 5 GHz WiFi clients through WPS.
Phone	Green	On	The phone port has a telephone connection, but it is not in use. A SIP account is registered for the phone port.
		Blinking	The phone port has a telephone connection, and it is in use.
		Off	The phone port has a telephone connection, but it is not in use. VoIP is disabled, or there is no registered SIP account defined for the phone port.

2.2.11 PX5301-T0

Figure 27 LED Indicators (PX5301-T0)

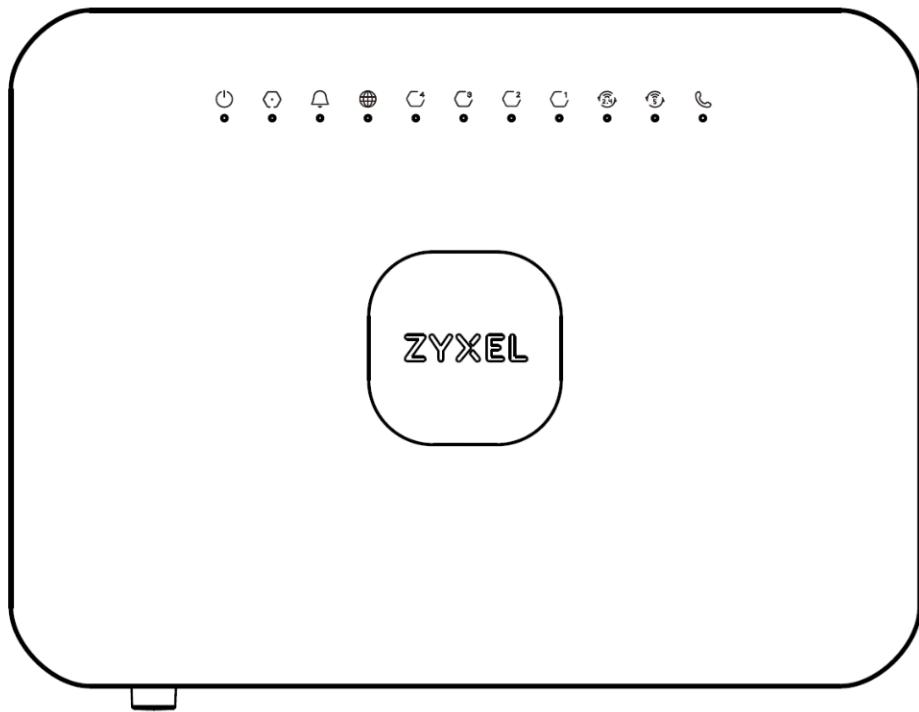

The following are the LED descriptions for your PX5301-T0.

Table 19 LED Descriptions (PX5301-T0)


LED	COLOR	STATUS	DESCRIPTION
POWER	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up or upgrading firmware.
		Off	The Zyxel Device is not receiving power.

Table 19 LED Descriptions (PX5301-T0) (continued)

LED	COLOR	STATUS	DESCRIPTION
GPON WAN	Green	On	The Zyxel Device is ready for GPON connection.
		Blinking	The Zyxel Device is setting up a GPON connection.
		Off	The Zyxel Device is not receiving an optical signal.
LOS	Red	On	The GPON transceiver is not receiving an optical signal.
		Blinking	The optical signal the GPON transceiver receiving is too weak.
		Off	The Zyxel Device is receiving stable optical power.
INTERNET	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving Internet data.
		Off	There is no Internet connection or the Zyxel Device is in Bridge mode.
LAN 1-4	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the LAN (Local Area Network) port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the LAN port.
2.4G/WPS	Green	On	The 2.4 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
		Off	The 2.4 GHz WiFi network is not activated.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 2.4 GHz WiFi client.
5G/WPS	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
		Off	The 5 GHz WiFi network is not activated.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 5 GHz WiFi client.
Phone	Green	On	The phone port has a telephone connection, but it is not in use. A SIP account is registered for the phone port.
		Blinking	The phone port has a telephone connection, and it is in use.
		Off	The phone port has a telephone connection, but it is not in use. VoIP is disabled, or there is no registered SIP account defined for the phone port.

2.2.12 PX5311-T0

Figure 28 LED Indicators (PX5311-T0)

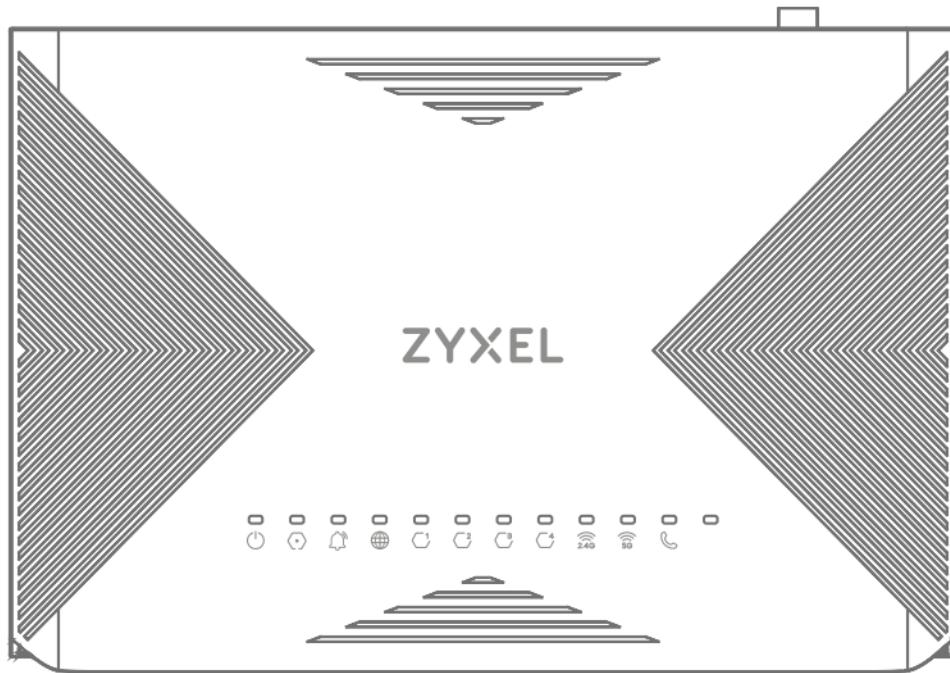

The following are the LED descriptions for your PX5311-T0.

Table 20 LED Descriptions (PX5311-T0)

LED	COLOR	STATUS	DESCRIPTION
POWER	Green	On	The Zyxel Device is receiving power and ready for use.
		Blinking	The Zyxel Device is booting up or upgrading firmware.
		Off	The Zyxel Device is not receiving power.
PON	Green	On	The Zyxel Device is ready for PON connection.
		Blinking	The Zyxel Device is setting up a PON connection.
		Off	The Zyxel Device is not receiving an optical signal.
LOS	Red	On	The PON transceiver is not receiving an optical signal.
		Blinking	The optical signal the PON transceiver receiving is too weak or too strong.
		Off	The PON connection is ready.
INTERNET	Green	On	The Zyxel Device has a WAN IP address (either static or assigned by a DHCP server) and the Internet connection is up.
		Blinking	The Zyxel Device is sending or receiving Internet data.
		Off	There is no Internet connection or the Zyxel Device is in Bridge mode.
LAN 1-4	Green	On	The Zyxel Device has a successful Ethernet connection with a device on the LAN (Local Area Network) port.
		Blinking	The Zyxel Device is sending or receiving data to/from the LAN port.
		Off	The Zyxel Device does not have an Ethernet connection on the LAN port.

Table 20 LED Descriptions (PX5311-T0) (continued)

LED	COLOR	STATUS	DESCRIPTION
2.4G/WPS	Green	On	The 2.4 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 2.4 GHz WiFi clients.
	Off		The 2.4 GHz WiFi network is not activated.
5G/WPS	Green	On	The 5 GHz WiFi network is activated.
		Blinking	The Zyxel Device is communicating with 5 GHz WiFi clients.
		Off	The 5 GHz WiFi network is not activated.
	Amber	Blinking	The Zyxel Device is setting up a WPS connection with a 5 GHz WiFi client.
Phone	Green	On	The phone port has a telephone connection, but it is not in use. A SIP account is registered for the phone port.
		Blinking	The phone port has a telephone connection, and it is in use.
		Off	The phone port has a telephone connection, but it is not in use. VoIP is disabled, or there is no registered SIP account defined for the phone port.

2.3 Ports Panel

The following shows the Zyxel Device ports panel and connection ports.

2.3.1 AX7501

Figure 29 AX7501-B0


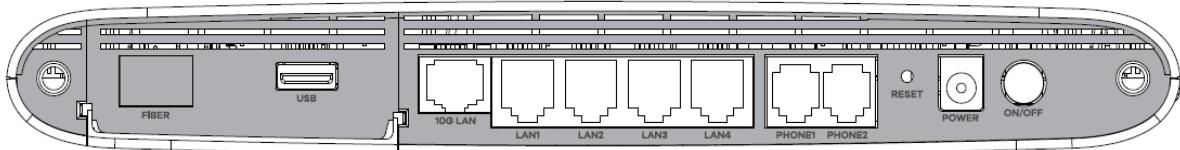


Figure 30 AX7501-B1

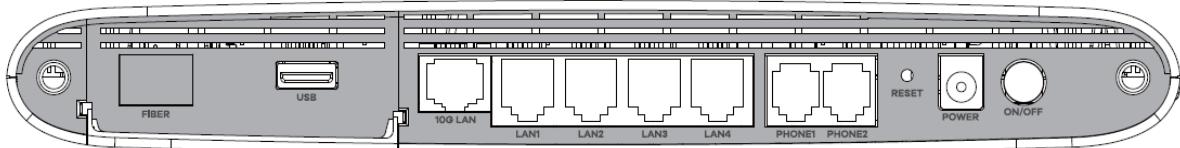

The following table describes the items on the ports panels of AX7501.

Table 21 Panel Ports and Buttons

LABEL	DESCRIPTION
FIBER	For AX7501-B0 / AX7501-B1 Insert a compatible SFP+ transceiver to the FIBER port and connect the fiber cable for Internet access.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.

Table 21 Panel Ports and Buttons (continued)

LABEL	DESCRIPTION
LAN1 – LAN4 2.5G LAN 10G LAN	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
PHONE1/2	Connect analog phones to the PHONE ports to make phone calls.
RESET	Press the button to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WPS	Press the WPS button for more than 5 seconds to quickly set up a secure WiFi connection between the device and a WPS-compatible client.
WLAN	Press the WLAN button for more than 2 seconds to enable the WiFi function.

2.3.2 DX3300-T0, DX3301-T0, DX5401-B0/B1, EX3300-T0, EX3301-T0 and EX5401-B0/B1

Figure 31 DX3300-T0



Figure 32 DX3301-T0



Figure 33 DX5401-B0 / DX5401-B1

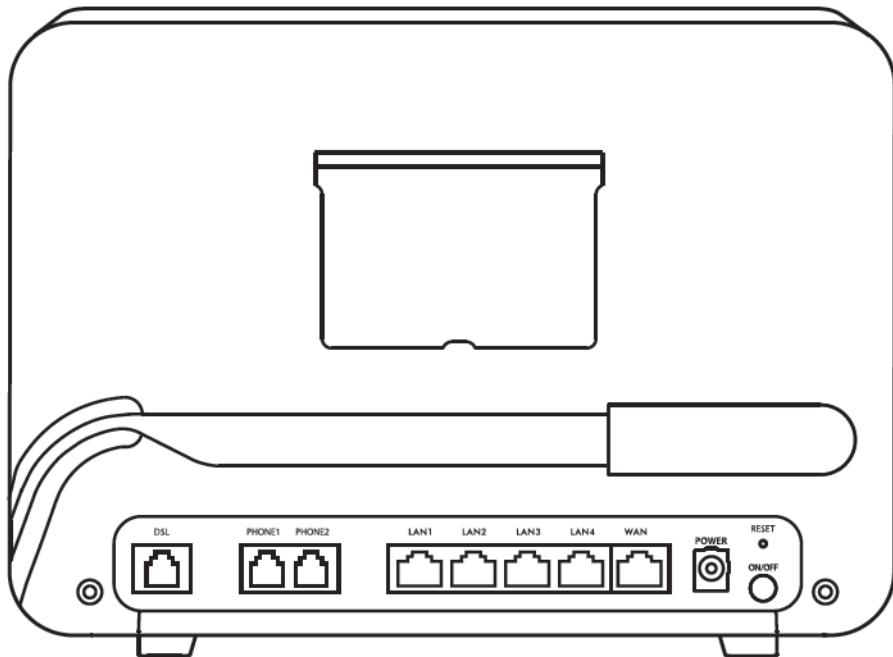



Figure 34 EX3300-T0



Figure 35 EX3301-T0



Figure 36 EX5401-B0 / EX5401-B1

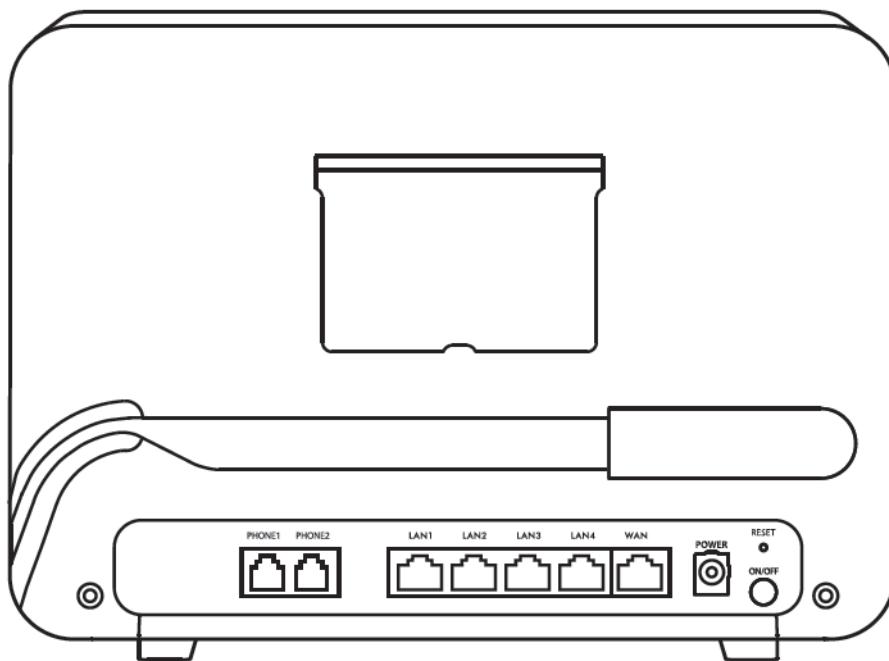

The following table describes the items on the ports panels of DX3300-T0, DX3301-T0, DX5401-B0/B1, EX3300-T0, , EX3301-T0 and EX5401-B0/B1.

Table 22 Panel Ports and Buttons

LABEL	DESCRIPTION
WAN	For EX3300-T0, , EX3301-T0 and EX5401-B0/B1, use an Ethernet cable to connect the WAN port to a gateway/modem for Internet connection.
LAN1 – LAN4	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
FIBER	For DX5401-B0 and EX5401-B0/B1, Insert a compatible SFP transceiver to the FIBER port and connect the fiber cable for Internet access.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
DSL	For DX3300-T0, DX3301-T0 and DX5401-B0/B1, connect a DSL cable to the DSL port for Internet connection.
PHONE1/2	For DX3301-T0, DX5401-B0/B1, EX3301-T0, and EX5401-B0/B1, connect analog phones to the PHONE ports to make phone calls.
RESET	Press the button to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WPS	Press the WPS button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client.
WiFi ON/OFF	Press the WiFi ON/OFF button for more than 2 seconds to enable the WiFi function.

2.3.3 DX3300-T1 and EX3300-T1

Figure 37 DX3300-T1


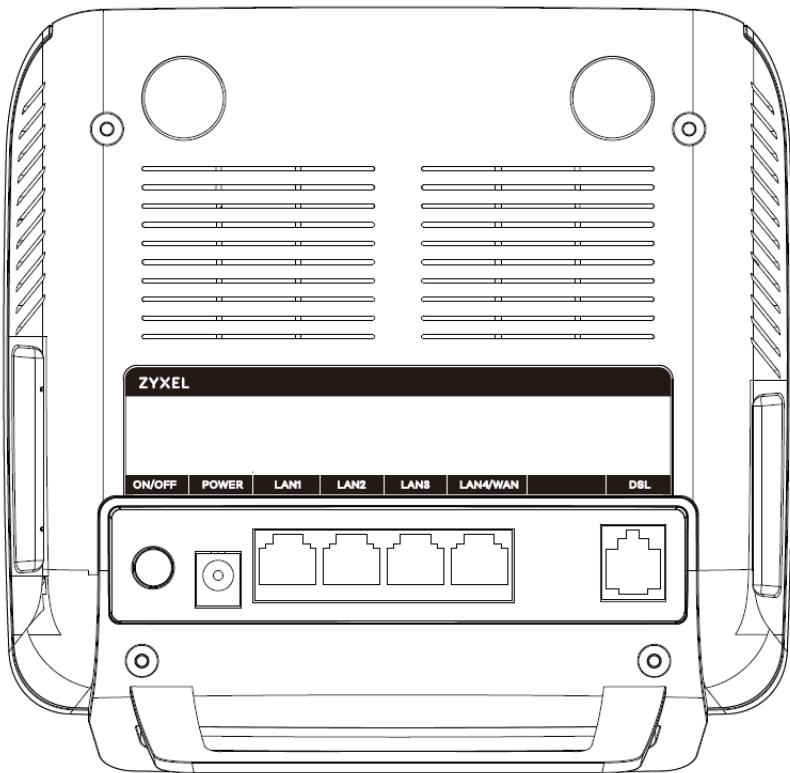


Figure 38 EX3300-T1

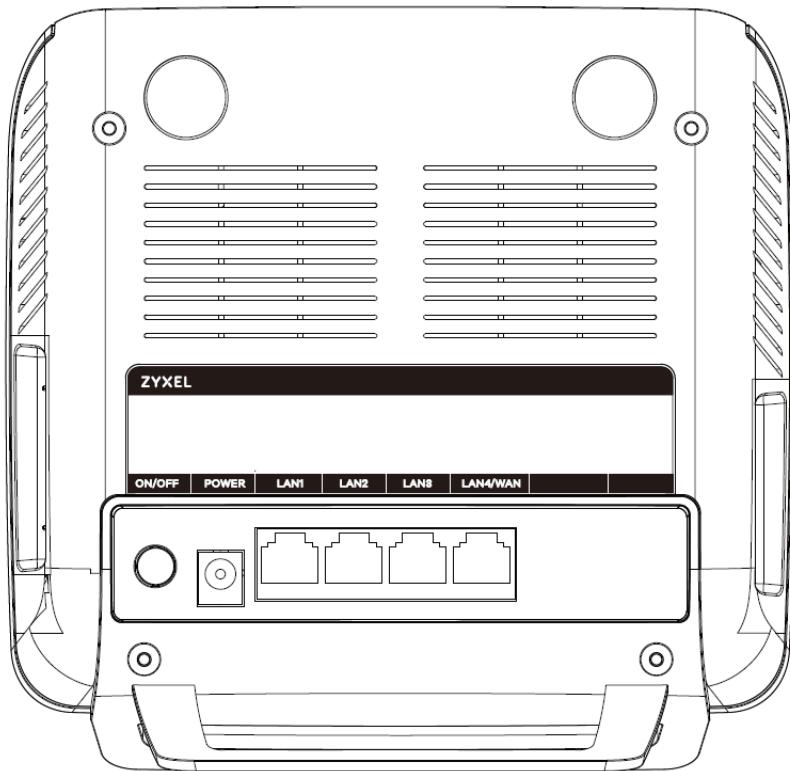

The following table describes the items on the ports panels of DX3300-T1 and EX3300-T1.

Table 23 Panel Ports and Buttons

LABEL	DESCRIPTION
DSL	For DX3300-T1, connect a DSL cable to the DSL port for Internet connection.
LAN1 – LAN3	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
LAN4/WAN	LAN mode: Connect computers or other Ethernet devices to the LAN4/WAN port for Internet access. WAN mode: Connect the LAN4/WAN port to a gateway/modem with an Ethernet cable for Internet connection.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
RESET	Press the button to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WLAN	Press the WLAN button for more than 1 second to enable the WiFi function.
WPS	Press the WPS button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client.

2.3.4 EX3500-T0 and EX3501-T0

Figure 39 EX3500-T0


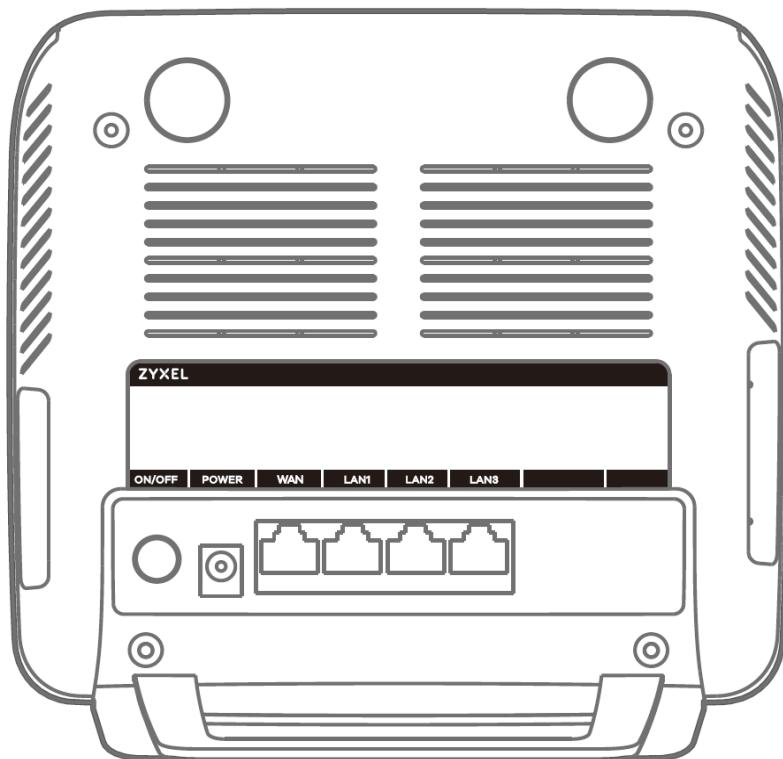


Figure 40 EX3501-T0

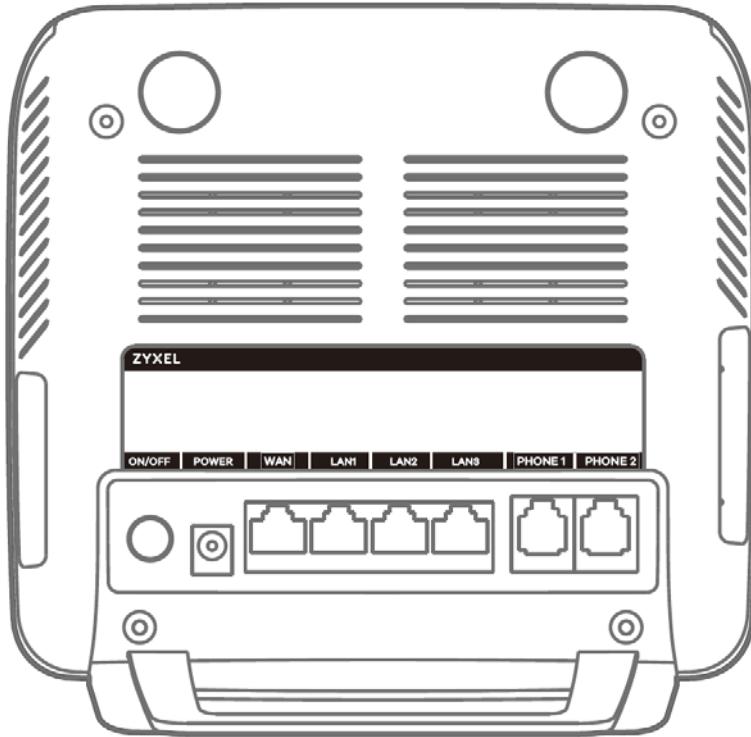


The following table describes the items on the ports panels of EX3500-T0 and EX3501-T0.

Table 24 Panel Ports and Buttons

LABEL	DESCRIPTION
WAN	Use an Ethernet cable to connect the WAN port to a gateway/modem for Internet connection.
LAN1 – LAN3	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
Phone1/2	Connect analog phones to the PHONE ports to make phone calls.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
RESET	Press the button to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WLAN	Press the WLAN button for more than 1 second to enable the WiFi function.
WPS	Press the WPS button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client.

2.3.5 EX3600-T0

Figure 41 EX3600-T0

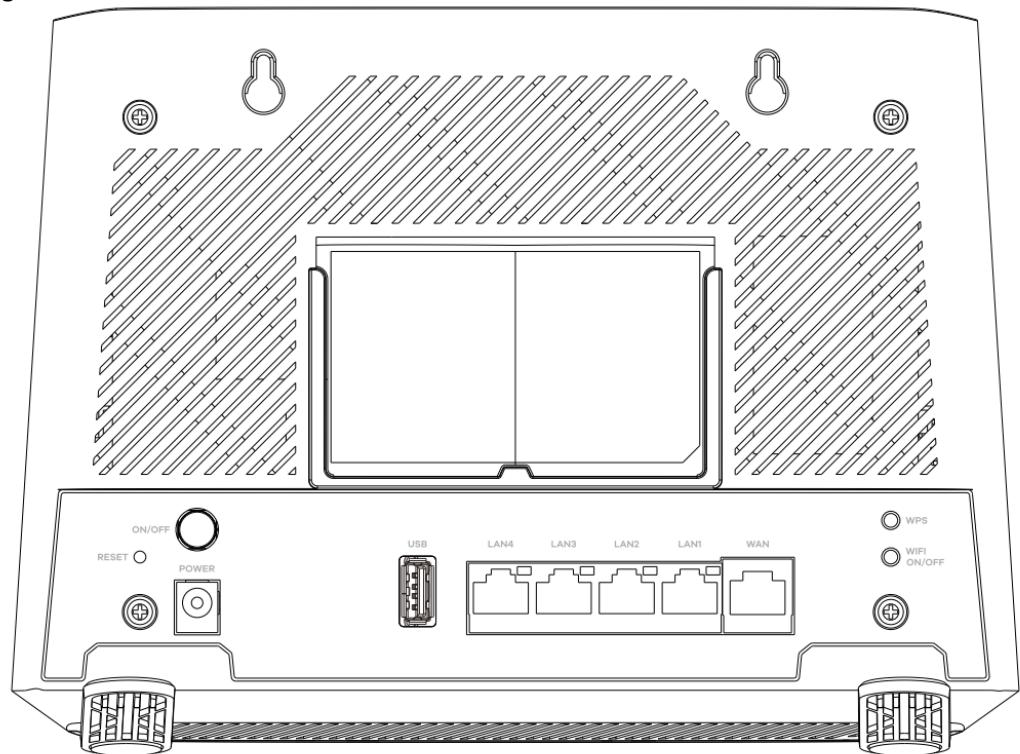

The following table describes the items on the ports panels of EX3600-T0.

Table 25 Panel Ports and Buttons

LABEL	DESCRIPTION
WAN	Use an Ethernet cable to connect the WAN port to a gateway/modem for Internet connection.
LAN1 – LAN4	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
RESET	Press the button for more than 5 seconds to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WiFi ON/OFF	Press the WiFi ON/OFF button for more than 2 seconds to enable the WiFi function.
WPS	Press the WPS button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client.

2.3.6 EX5600-T1, EX5601-T0 and EX5601-T1

Figure 42 EX5600-T1



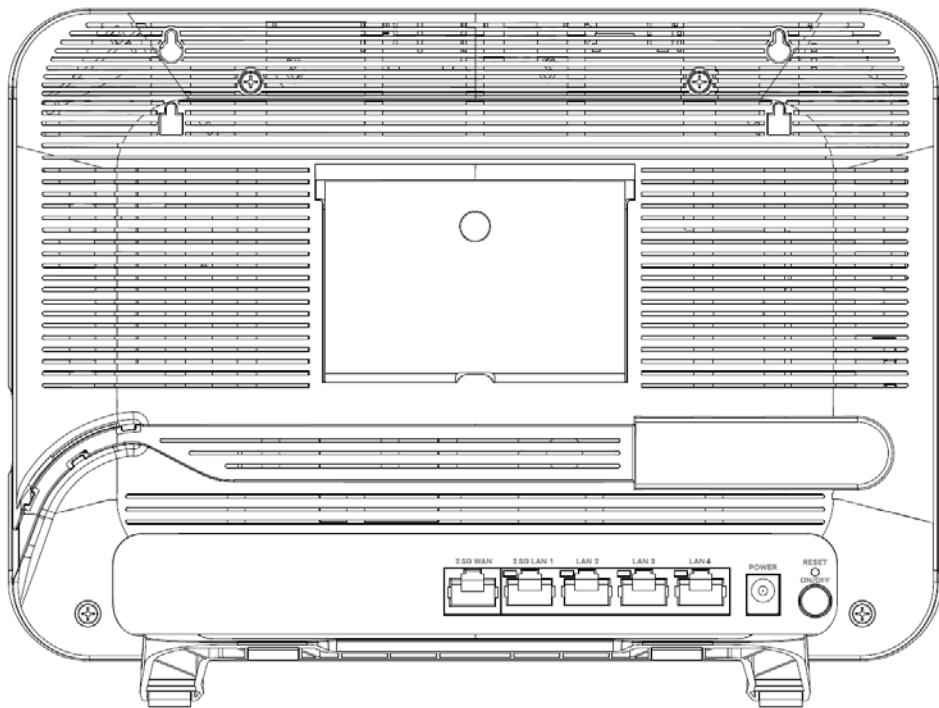


Figure 43 EX5601-T0 / EX5601-T1

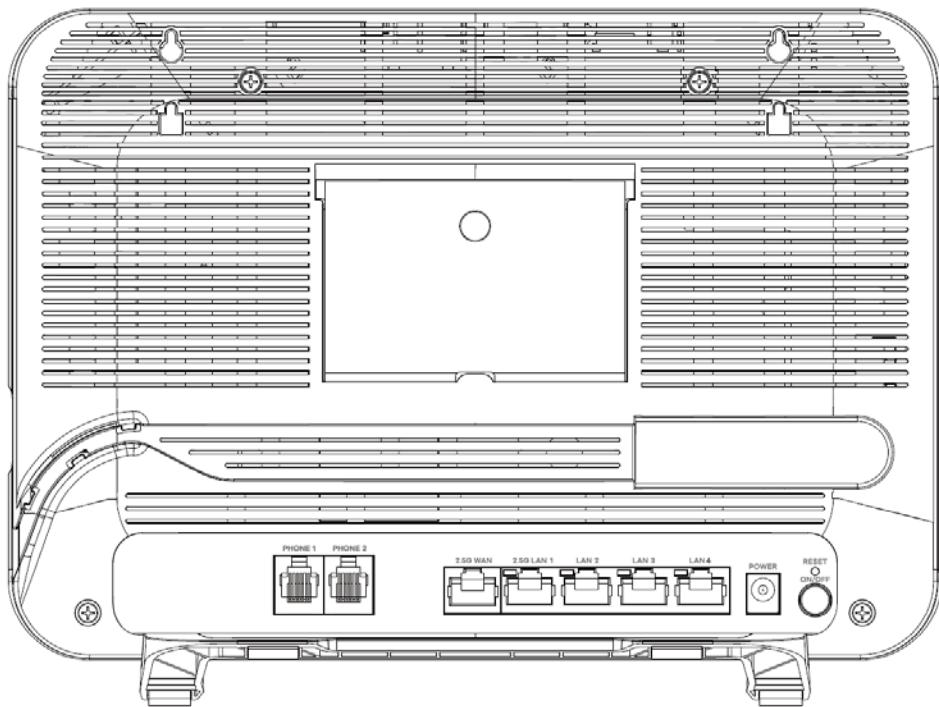

Note: See [Section 1.1 on page 20](#) to see if your Zyxel Device supports the SFP port.

Figure 44 EX5600-T1 / EX5601-T0 / EX5601-T1 Side Panels

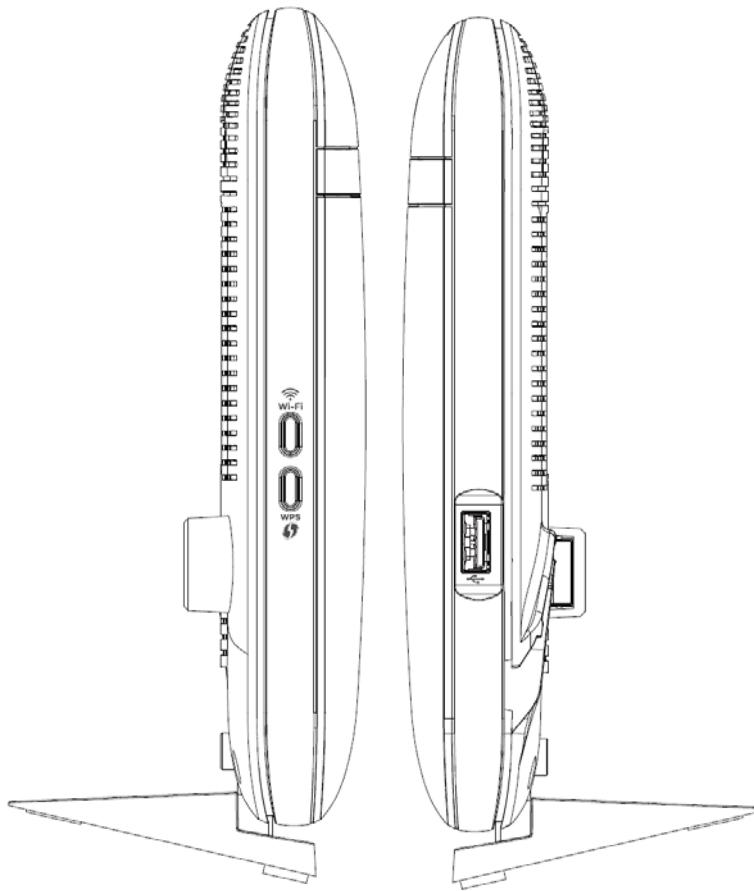

The following table describes the items on the ports panels of EX5600-T1, EX5601-T0 and EX5601-T1.

Table 26 Panel Ports and Buttons

LABEL	DESCRIPTION
2.5G WAN	For EX5600-T1 and EX5601-T1, use an Ethernet cable to connect the 2.5G WAN port to a gateway/modem for an (up to) 2.5 Gbps Internet connection. For EX5601-T0, use an Ethernet cable to connect the 2.5G WAN port to a gateway/modem, or connect a fiber optic/Ethernet cable to the SFP port through an SFP transceiver for an (up to) 2.5 Gbps Ethernet connection.
2.5G LAN1	Connect computers or other Ethernet devices to the 2.5G LAN port for Internet access with speed up to 2.5 Gbps.
LAN2-4	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
SFP	For EX5601-T0, insert a compatible SFP transceiver to the SFP port and connect a fiber optic or Ethernet cable for an (up to) 2.5 Gbps Internet connection.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
PHONE1/2	For EX5601-T0, and EX5601-T1, connect analog phones to the PHONE ports with RJ 11 cables for VoIP services.
RESET	Press the button for more than 5 seconds to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WPS	Press the WPS button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client.
WiFi	Press the WiFi button for more than 2 seconds to enable the WiFi function.

2.3.7 EX7501-B0

Figure 45 Bottom Panel


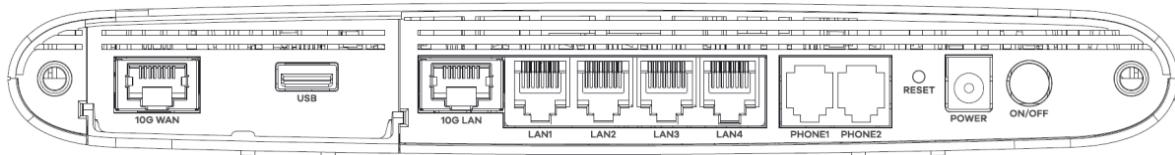


Figure 46 WPS/WLAN Buttons

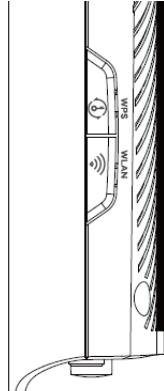

The following table describes the items on the ports panels of EX7501-B0.

Table 27 Panel Ports and Buttons

LABEL	DESCRIPTION
10G WAN	Connect an Ethernet cable to the 10G WAN port for an (up to) 10 Gbps Ethernet connection.
10G LAN	Connect computers or other Ethernet devices to the 10G LAN port for Internet access with speed up to 10 Gbps.
LAN1–4	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
PHONE1/2	Connect analog phones to the PHONE ports with RJ-11 cables for VoIP services.
RESET	Press the button for more than 5 seconds to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WPS	Press the WPS button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client.
WLAN	Press the WLAN button for more than 2 seconds to enable the WiFi function.

2.3.8 EE6601-00

Figure 47 Rear Panel


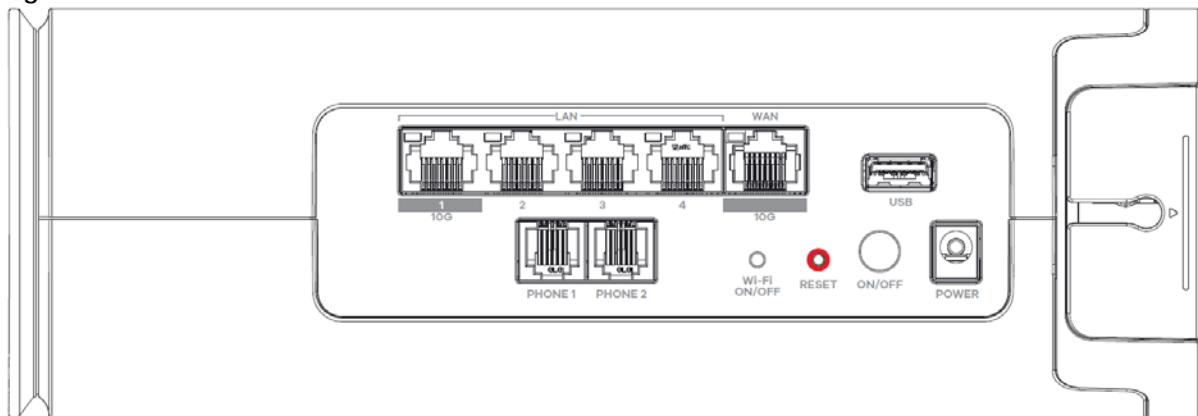


Figure 48 WPS/WLAN Buttons

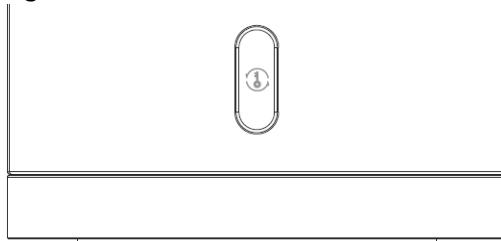


The following table describes the items on the ports panels of EE6601-00.

Table 28 Panel Ports and Buttons

LABEL	DESCRIPTION
10G WAN	Connect an Ethernet cable to the 10G WAN port for an (up to) 10 Gbps Ethernet connection.
10G LAN	Connect computers or other Ethernet devices to the 10G LAN port for Internet access with speed up to 10 Gbps.
LAN1-4	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
PHONE1/2	Connect analog phones to the PHONE ports with RJ-11 cables for VoIP services.
Wi-Fi ON/OFF	Press the Wi-Fi ON/OFF button for more than 2 seconds to enable the WiFi function.
RESET	Press the button for more than 5 seconds to return the Zyxel Device to the factory defaults.
POWER	Connect the power adapter and press the ON/OFF button to start the device.
WPS	Press the WPS button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client.

2.3.9 PX3321-T1

Figure 49 PX3321-T1

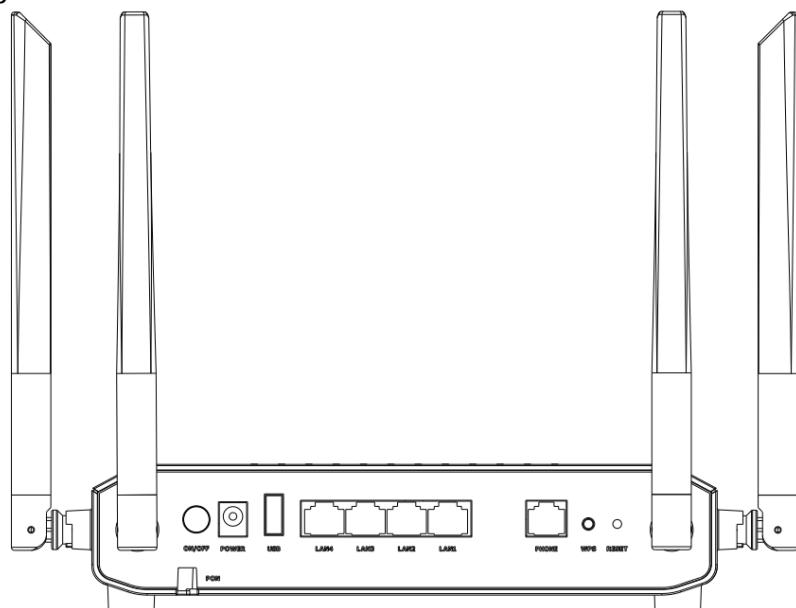

2.3.10 PX5301-T0

Figure 50 PX5301-T0 Rear Panel



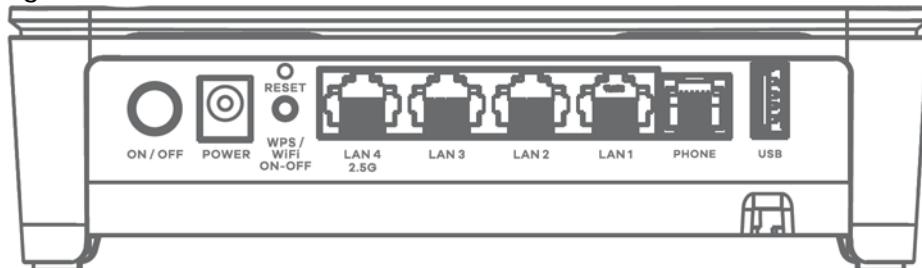


Figure 51 PX5301-T0 Bottom Panel (PON Port)

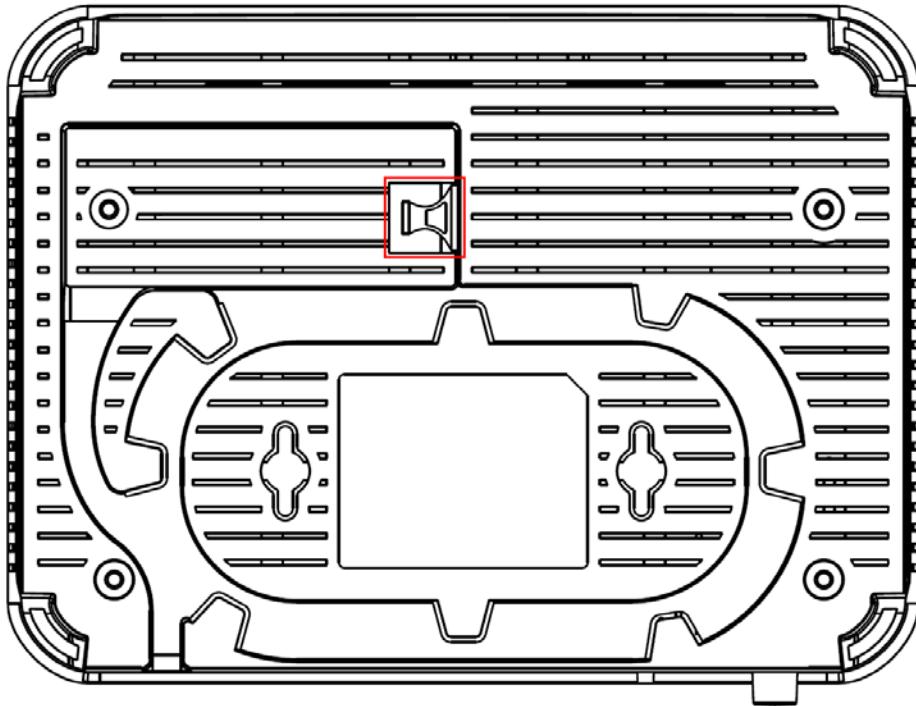

2.3.11 PX5311-T0

Figure 52 PX5311-T0

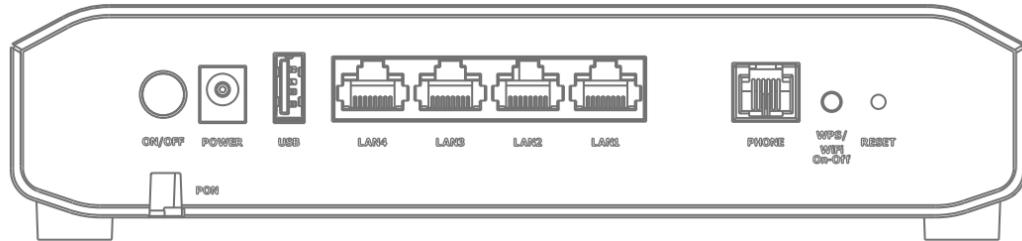

The following table describes the items on the ports panel of PX3321-T1, PX5301-T0 and PX5311-T0.

Table 29 Panel Ports and Buttons

LABEL	DESCRIPTION
POWER	Connect the power adapter and press the ON/OFF button to start the device.
USB	The USB port is used for cellular WAN backup, file-sharing, and media server.
LAN 1-4	Connect computers or other Ethernet devices to Ethernet ports for Internet access.
Phone	Connect analog phone to the PHONE port with RJ11 cable for VoIP services.
WPS/WiFi On-Off	Press the WPS/WiFi On-Off button once within 3 seconds to quickly setup a secure WiFi connection between the device and a WPS-compatible client. Press the WPS/WiFi On-Off button once more than 3 seconds to enable or disable the WiFi. The WiFi is enabled by default.
RESET	Press the button for more than 5 seconds to return the Zyxel Device to the factory defaults.
PON	Connect the fiber optic cable to the PON (Passive Optical Network) port for Internet access.

2.3.12 Transceiver Installation/Removal

Transceiver Installation

Use the following steps to install an SFP transceiver.

- 1 Attach an ESD preventive wrist strap to your wrist and to a bare metal surface.
- 2 Align the transceiver in front of the slot opening.
- 3 Make sure the latch is in the lock position (latch styles vary), then insert the transceiver into the slot with the exposed section of PCB board facing down.
- 4 Press the transceiver firmly until it clicks into place.
- 5 The Zyxel Device automatically detects the installed transceiver. Check the LEDs to verify that it is functioning properly.
- 6 Remove the dust plugs from the transceiver and cables (dust plug styles vary).
- 7 Identify the signal transmission direction of the fiber optic cables and the transceiver. Insert the fiber optic cable into the transceiver.

Figure 53 Latch in the Lock Position

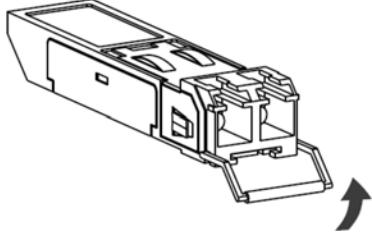


Figure 54 Transceiver Installation Example


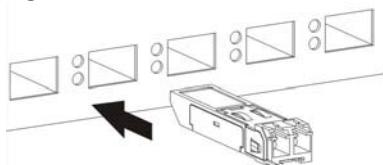


Figure 55 Connecting the Fiber Optic Cables

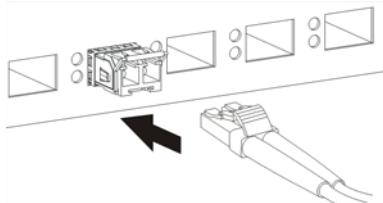

Transceiver Removal

Use the following steps to remove an SFP transceiver.

- 1 Attach an ESD preventive wrist strap to your wrist and to a bare metal surface on the chassis.
- 2 Remove the fiber optic cables from the transceiver.

- 3 Pull out the latch and down to unlock the transceiver (latch styles vary).

Note: Make sure the transceiver's latch is pushed all the way down, so the transceiver can be pulled out successfully.

- 4 Pull the latch, or use your thumb and index finger to grasp the tabs on both sides of the transceiver, and carefully slide it out of the slot.

Note: Do NOT pull the transceiver out by force. You could damage it. If the transceiver will not slide out, grasp the tabs on both sides of the transceiver with a slight up or down motion and carefully slide it out of the slot. If unsuccessful, contact Zyxel Support to prevent damage to your Zyxel Device and transceiver.

- 5 Insert the dust plug into the ports on the transceiver and the cables.

Figure 56 Removing the Fiber Optic Cables

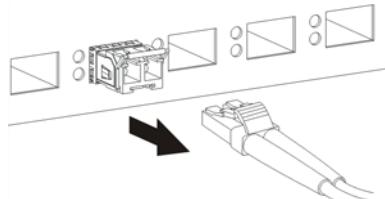


Figure 57 Opening the Transceiver's Latch Example


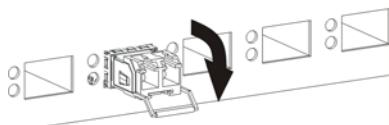


Figure 58 Transceiver Removal Example

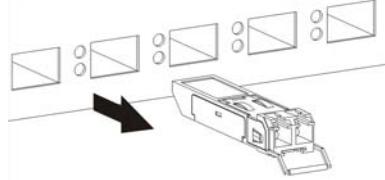

2.3.13 WPS Button

You can use the **WPS** button to quickly set up a secure WiFi connection between the Zyxel Device and a WPS-compatible client by adding one device at a time.

To Activate WPS

- 1 Make sure the **POWER** LED is on and not blinking.
- 2 Press the **WPS** button once within 3 seconds (see the ports panel table of each Zyxel Device model in [Section 2.3 on page 58](#) for more information) and release it.
- 3 Press the **WPS** button on another WPS-enabled device within range of the Zyxel Device (within 120 seconds). The **WPS** LED flashes green while the Zyxel Device sets up a WPS connection with the other wireless device.

- 4 Once the connection is successfully made, the **WPS** LED will light off.

2.3.14 RESET Button

If you forget your password or cannot access the Web Configurator, you will need to use the **RESET** button to reload the factory-default configuration file. This means that you will lose all configurations that you had previously. The password will be reset to the factory default (see the device label), and the LAN IP address will be “192.168.1.1”.

- 1 Make sure the **POWER** LED is on (not blinking).
- 2 To set the device back to the factory default settings, press the **RESET** button for more than 5 seconds or until the **POWER** LED begins to blink and then release it. When the **POWER** LED begins to blink, the defaults have been restored and the device restarts.

CHAPTER 3

Web Configurator

3.1 Overview


The Web Configurator is an HTML-based management interface that allows easy system setup and management through Internet browser. Use a browser that supports HTML5, such as Microsoft Edge, Mozilla Firefox, or Google Chrome. The recommended minimum screen resolution is 1024 by 768 pixels.

In order to use the Web Configurator you need to allow:

- Web browser pop-up windows from your computer.
- JavaScript (enabled by default).
- Java permissions (enabled by default).


3.1.1 Access the Web Configurator

- 1 Make sure your Zyxel Device hardware is properly connected (refer to the Quick Start Guide).
- 2 Make sure your computer has an IP address in the same subnet as the Zyxel Device.
- 3 Launch your web browser. Type <https://192.168.1.1> in your browser address bar.
- 4 If a “Your connection is not private” message appears, click **Advanced**, then click **Proceed to 192.168.1.1(unsafe)** to go to the login screen.

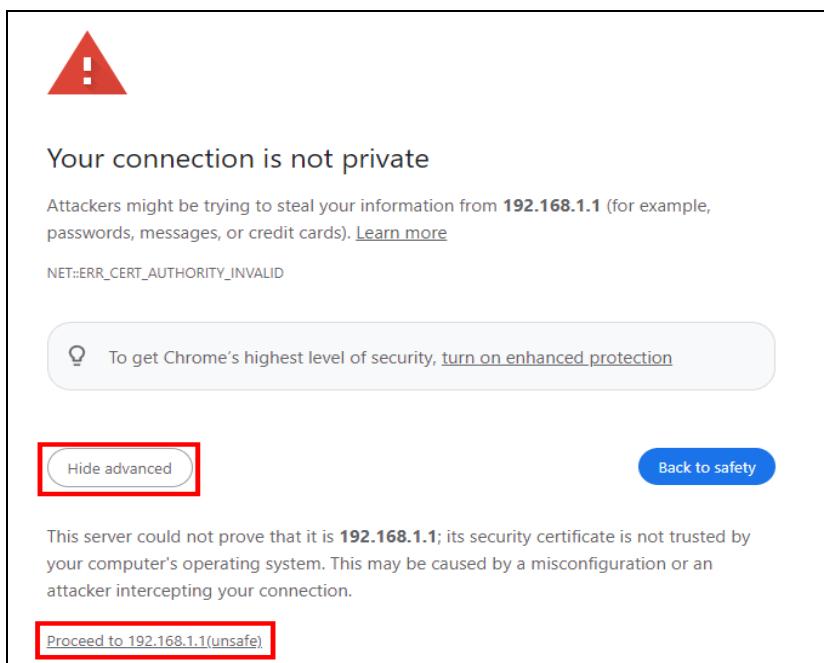


Note: If you see this warning page, it indicates that your browser has failed to verify the Secure Sockets Layer (SSL) certificate, which opens an encrypted connection. You can ignore this message and proceed to 192.168.1.1.

5 A login screen displays. Select the language you prefer (upper right).

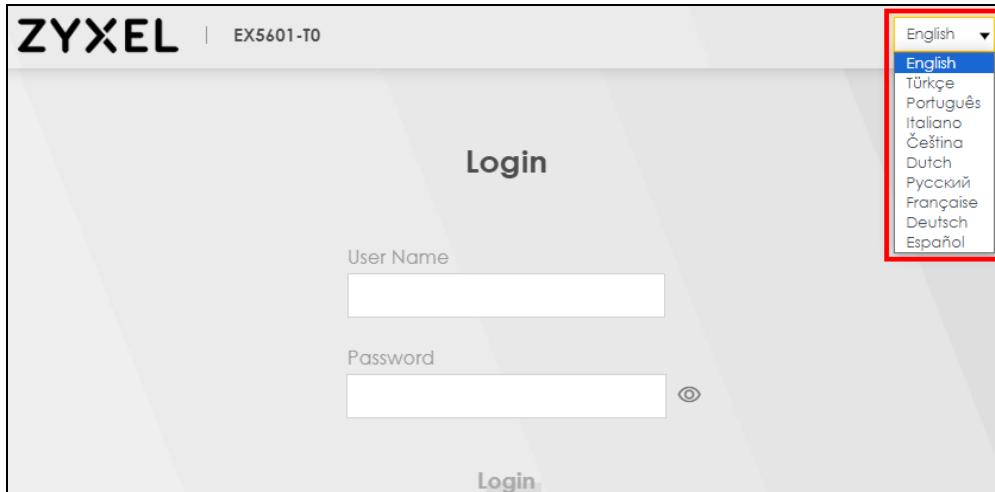

6 To access the administrative Web Configurator and manage the Zyxel Device, enter the default user name **admin** and the randomly assigned default password (see the Zyxel Device label) in the **Login** screen and click **Login**. If you have changed the password, enter your password and click **Login**.

Figure 59 Login Screen

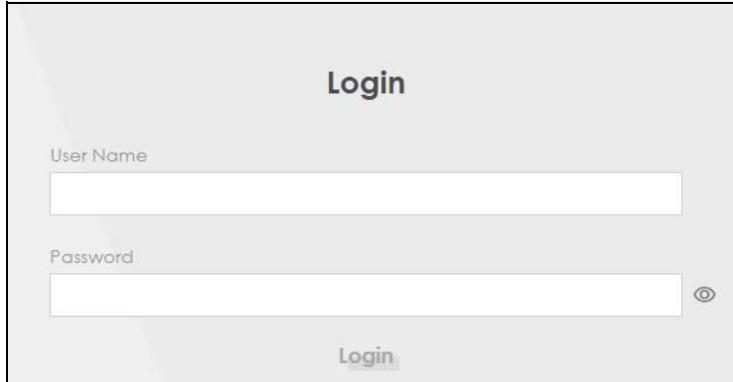

Note: The first time you enter the password, you will be asked to change it. Make sure the new password must be at least 8 characters, must contain at least one uppercase letter, one lowercase letter, one number, and one special character. For some models, the password must contain at least one English character and one number. Please see the password requirement displayed on the screen.

Figure 60 Change Password Screen

Password Reset

New Password

.....

Password

.....

The password must be at least 8 characters long, including 1 uppercase letter, 1 lowercase letter, 1 number and 1 special character.

Change password

7 The **Connection Status** screen appears. Use this screen to configure basic Internet access and WiFi settings.

Figure 61 Connection Status

Connectivity

System Info

Model Name: EX5501-B0
Firmware Version: V5.15(ABRY.0)b4
System Uptime: 0 days 5 hours 50 mins 18 secs
LAN MAC Address: B8:D5:26:C9:CE:20
Ethernet WAN: 1000/Full

WiFi Settings

2.4G WiFi Name: Zyxel_CE21
5G WiFi Name: Zyxel_CE21_5G

Guest WiFi Settings

2.4G WiFi Name: Zyxel_CE21_gues
5G WiFi Name: Zyxel_CE21_gues


LAN

IP Address: 192.168.1.1
Subnet Mask: 255.255.255.0
IP Address Range: 192.168.1.2 ~ 192.168.1.254
DHCP: On
Lease Time: 1 days 0 hours 0 mins

Parental Control

3.2 Web Configurator Layout

Figure 62 Screen Layout

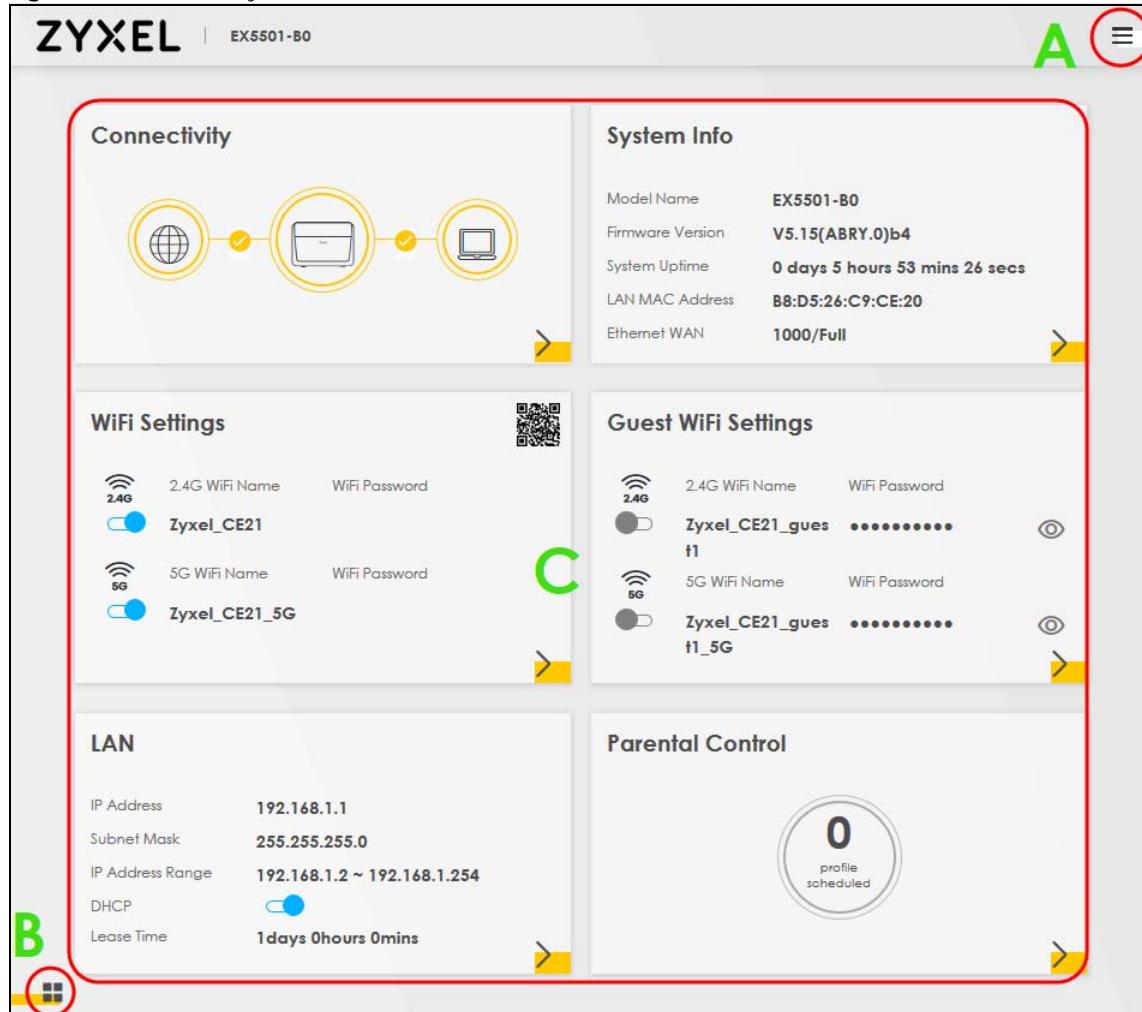

As illustrated above, the main screen is divided into these parts:

- A – Settings Icon (Navigation Panel and Side Bar)
- B – Layout Icon
- C – Main Window

3.2.1 Settings Icon

Click this icon (☰) to see the side bar and navigation panel.

3.2.1.1 Side Bar

The side bar provides some icons on the right hand side.

Figure 63 Side Bar

The icons provide the following functions.

Table 30 Web Configurator Icons in the Title Bar

ICON	DESCRIPTION
 LED	LED: Click this icon to turn off/on the Zyxel Device's panel LEDs.
 Wizard	Wizard: Click this icon to open screens where you can configure the Zyxel Device's time zone and WiFi settings.
 Theme	Theme: Click this icon to select a color that you prefer and apply it to the Web Configurator.

Table 30 Web Configurator Icons in the Title Bar (continued)

ICON	DESCRIPTION
 Language	Language: Select the language you prefer.
 Help	Help: Click this link to display web help pages. The help pages provide descriptions for all of the configuration screens.
 Restart	Restart: Click this icon to reboot the Zyxel Device without turning the power off.
 Logout	Logout: Click this icon to log out of the Web Configurator.

3.2.1.2 Navigation Panel

Click the menu icon (☰) to display the navigation panel that contains configuration menus and icons (quick links). Click X to close the navigation panel.

Use the menu items on the navigation panel to open screens to configure Zyxel Device features. The following tables describe each menu item.

Figure 64 Navigation Panel

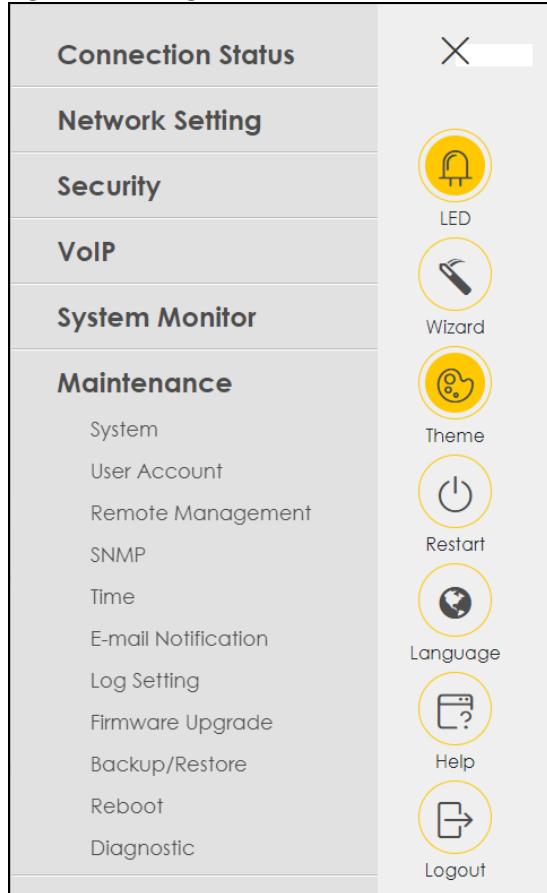


Table 31 Navigation Panel Summary

LINK	TAB	FUNCTION
Connection Status		Use this screen to configure basic Internet access, wireless settings, and parental control settings. This screen also shows the network status of the Zyxel Device and computers/devices connected to it.
Network Setting		
Broadband	Broadband	Use this screen to view and configure ISP parameters, WAN IP address assignment, and other advanced properties. You can also add new WAN connections.
	Cellular Backup	Use this screen to configure a cellular WAN connection as a backup to keep you online if the primary WAN connection fails.
Wireless	General	Use this screen to configure the WiFi settings and WiFi authentication or security settings.
	Guest/More AP	Use this screen to configure multiple BSSs on the Zyxel Device.
	MAC Authentication	Use this screen to block or allow wireless traffic from wireless devices of certain SSIDs and MAC addresses to the Zyxel Device.
	WPS	Use this screen to configure and view your WPS (WiFi Protected Setup) settings.
	WMM	Use this screen to enable or disable WiFi MultiMedia (WMM).
	Others	Use this screen to configure advanced WiFi settings.
	Channel Status	Use this screen to scan WiFi channel noises and view the results.
	MESH	Use this screen to enable or disable MPro Mesh.

Table 31 Navigation Panel Summary (continued)

LINK	TAB	FUNCTION
Home Networking	LAN Setup	Use this screen to configure LAN TCP/IP settings, and other advanced properties.
	Static DHCP	Use this screen to assign specific IP addresses to individual MAC addresses.
	UPnP	Use this screen to turn UPnP and UPnP NAT-T on or off.
	Additional Subnet	Use this screen to configure IP alias and public static IP.
	STB Vendor ID	Use this screen to configure the Vendor IDs of the connected Set Top Box (STB) devices, which have the Zyxel Device automatically create static DHCP entries for the STB devices when they request IP addresses.
	Wake on LAN	Use this screen to remotely turn on a device on the local network.
	TFTP Server Name	Use DHCP option 66 to identify a TFTP server name.
Routing	Static Route	Use this screen to view and set up static routes on the Zyxel Device.
	DNS Route	Use this screen to forward DNS queries for certain domain names through a specific WAN interface to its DNS servers.
	Policy Route	Use this screen to configure policy routing on the Zyxel Device.
	RIP	Use this screen to configure Routing Information Protocol to exchange routing information with other routers.
QoS	General	Use this screen to enable QoS and traffic prioritizing. You can also configure the QoS rules and actions.
	Queue Setup	Use this screen to configure QoS queues.
	Classification Setup	Use this screen to define a classifier.
	Shaper Setup	Use this screen to limit outgoing traffic rate on the selected interface.
	Policer Setup	Use this screen to configure QoS policers.
NAT	Port Forwarding	Use this screen to make your local servers visible to the outside world.
	Port Triggering	Use this screen to change your Zyxel Device's port triggering settings.
	DMZ	Use this screen to configure a default server which receives packets from ports that are not specified in the Port Forwarding screen.
	ALG	Use this screen to enable the ALGs (Application Layer Gateways) in the Zyxel Device to allow applications to operate through NAT.
	Address Mapping	Use this screen to change your Zyxel Device's IP address mapping settings.
	Sessions	Use this screen to configure the maximum number of NAT sessions each client host is allowed to have through the Zyxel Device.
	PCP	Use this screen to configure PCP (Port Control Protocol) to allow devices such as web or file sharing servers behind the Zyxel Device to receive incoming traffic.
DNS	DNS Entry	Use this screen to view and configure DNS routes.
	Dynamic DNS	Use this screen to allow a static hostname alias for a dynamic IP address.
IGMP/MLD	IGMP/MLD	Use this screen to configure multicast settings (IGMP for IPv4 and MLD for IPv6 multicast groups) on the WAN.
VLAN Group	VLAN Group	Use this screen to group and tag VLAN IDs to outgoing traffic from the specified interface.
Interface Grouping	Interface Grouping	Use this screen to map a port to create multiple networks on the Zyxel Device.
USB Service	File Sharing	Use this screen to enable file sharing through the Zyxel Device.

Table 31 Navigation Panel Summary (continued)

LINK	TAB	FUNCTION
	Media Server	Use this screen to use the Zyxel Device as a media server.
Security		
Firewall	General	Use this screen to configure the security level of your firewall.
	Protocol	Use this screen to add Internet services and configure firewall rules.
	Access Control	Use this screen to enable specific traffic directions for network services.
	DoS	Use this screen to activate protection against Denial of Service (DoS) attacks.
MAC Filter	MAC Filter	Use this screen to block or allow traffic from devices of certain MAC addresses to the Zyxel Device.
Home Security	Connected Home Security	Use this screen to set up a URL filter that blocks users on your network from accessing certain websites.
Parental Control	Parental Control	Use this screen to define time periods and days during which the Zyxel Device performs parental control and/or block web sites with the specific URL.
Scheduler Rule	Scheduler Rule	Use this screen to configure the days and times when a configured restriction (such as parental control) is enforced.
Certificates	Local Certificates	Use this screen to view a summary list of certificates and manage certificates and certification requests.
	Trusted CA	Use this screen to view and manage the list of the trusted CAs.
VoIP		
SIP	SIP Account	Use this screen to set up information about your SIP account and configure audio settings such as volume levels for the phones connected to the Zyxel Device.
	SIP Service Provider	Use this screen to configure the SIP server information, and other SIP settings, such as QoS for VoIP calls, outbound proxy, DTMF mode and SIP timers.
	SIP TLS Common	Use this screen to change the default TLS local port if you need to, and select a local certificate for the SIP server to verify the Zyxel Device.
Phone	Phone Device	Use this screen to control which SIP accounts each phone uses to handle outgoing and incoming calls.
	Region	Use this screen to select your location and call service mode.
Call Rule	Call Rule	Use this screen to configure speed dial for SIP phone numbers that you often call.
Call History	Call History	Use this screen to view detailed information for each outgoing call you made or each incoming call from someone calling you. You can also view a summary list of received, dialed and missed calls.
System Monitor		
Log	System Log	Use this screen to view the status of events that occurred to the Zyxel Device. You can export or email the logs.

Table 31 Navigation Panel Summary (continued)

LINK	TAB	FUNCTION
	Security Log	<p>Use this screen to view all security related events. You can select the level and category of the security events in their proper drop-down list window.</p> <p>Levels include:</p> <ul style="list-style-type: none"> • Emergency • Alert • Critical • Error • Warning • Notice • Informational • Debugging <p>Categories include:</p> <ul style="list-style-type: none"> • Account • Attack • Firewall • MAC Filter
Traffic Status	WAN	Use this screen to view the status of all network traffic going through the WAN port of the Zyxel Device.
	LAN	Use this screen to view the status of all network traffic going through the LAN ports of the Zyxel Device.
	NAT	Use this screen to view NAT statistics for connected hosts.
VoIP Status	VoIP Status	Use this screen to view VoIP registration, current call status and phone numbers for the phone ports.
ARP Table	ARP Table	Use this screen to view the ARP table. It displays the IP and MAC address of each DHCP connection.
Routing Table	Routing Table	Use this screen to view the routing table on the Zyxel Device.
Multicast Status	IGMP Status	Use this screen to view the status of all IGMP settings on the Zyxel Device.
	MLD Status	Use this screen to view the status of all MLD settings on the Zyxel Device.
WLAN Station Status	WLAN Station Status	Use this screen to view the wireless stations that are currently associated to the Zyxel Device's WiFi.
Cellular Statistics	Cellular Statistics	Use this screen to look at the cellular Internet connection status.
GPON Status	GPON Status	Use this screen to view the optical fiber transceiver's TX power and RX power level and its temperature.
Maintenance		
System	System	Use this screen to set the Zyxel Device name and Domain name.
User Account	User Account	Use this screen to change the user password on the Zyxel Device.
Remote Management	MGMT Services	Use this screen to enable specific traffic directions for network services.
	Trust Domain	Use this screen to view a list of public IP addresses which are allowed to access the Zyxel Device through the services configured in the Maintenance > Remote Management > MGMT Services screen.
Power Monitor	Power Monitor	Use this screen to view the current and past amount of power consumed by the Zyxel Device.
SNMP	SNMP	Use this screen to configure SNMP (Simple Network Management Protocol) settings.
Time	Time	Use this screen to change your Zyxel Device's time and date.


Table 31 Navigation Panel Summary (continued)

LINK	TAB	FUNCTION
E-mail Notification	E-mail Notification	Use this screen to configure up to two mail servers and sender addresses on the Zyxel Device.
Log Setting	Log Settings	Use this screen to change your Zyxel Device's log settings.
Firmware Upgrade	Firmware Upgrade	Use this screen to upload firmware to your Zyxel Device.
Backup/Restore	Backup/Restore	Use this screen to backup and restore your Zyxel Device's configuration (settings) or reset the factory default settings.
Reboot	Reboot	Use this screen to reboot the Zyxel Device / Zyxel Mesh system without turning the power off.
Diagnostic	Ping&Traceroute &Nslookup	Use this screen to identify problems with the Zyxel Device. You can use Ping, TraceRoute, or Nslookup to help you identify problems.
	802.1ag	Use this screen to configure CFM (Connectivity Fault Management) MD (maintenance domain) and MA (maintenance association), perform connectivity tests and view test reports.
	802.3ah	Use this screen to configure link OAM port parameters,

3.2.1.3 Dashboard

Use the menu items in the navigation panel on the right to open screens to configure the Zyxel Device's features.


Figure 65 Navigation Panel

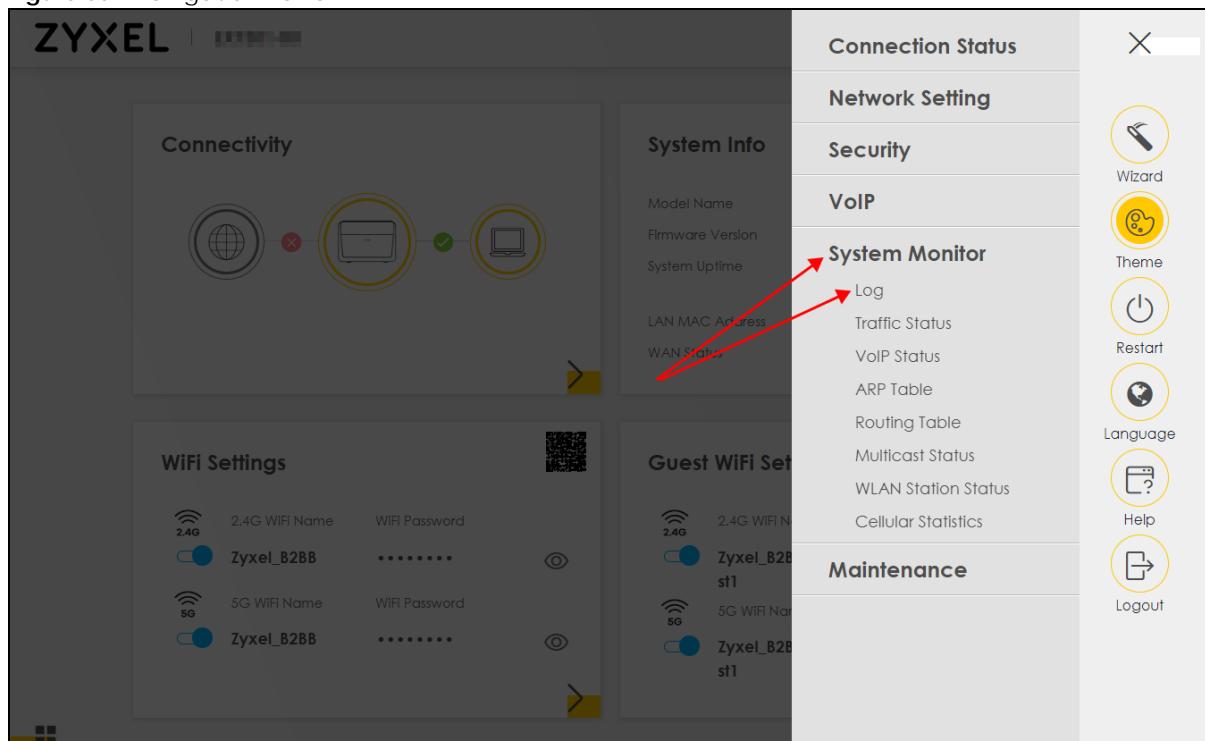

3.2.2 Widget Icon


Click the Widget icon (grid icon) in the lower left corner to arrange the screen order.

Figure 66 Dashboard Widget

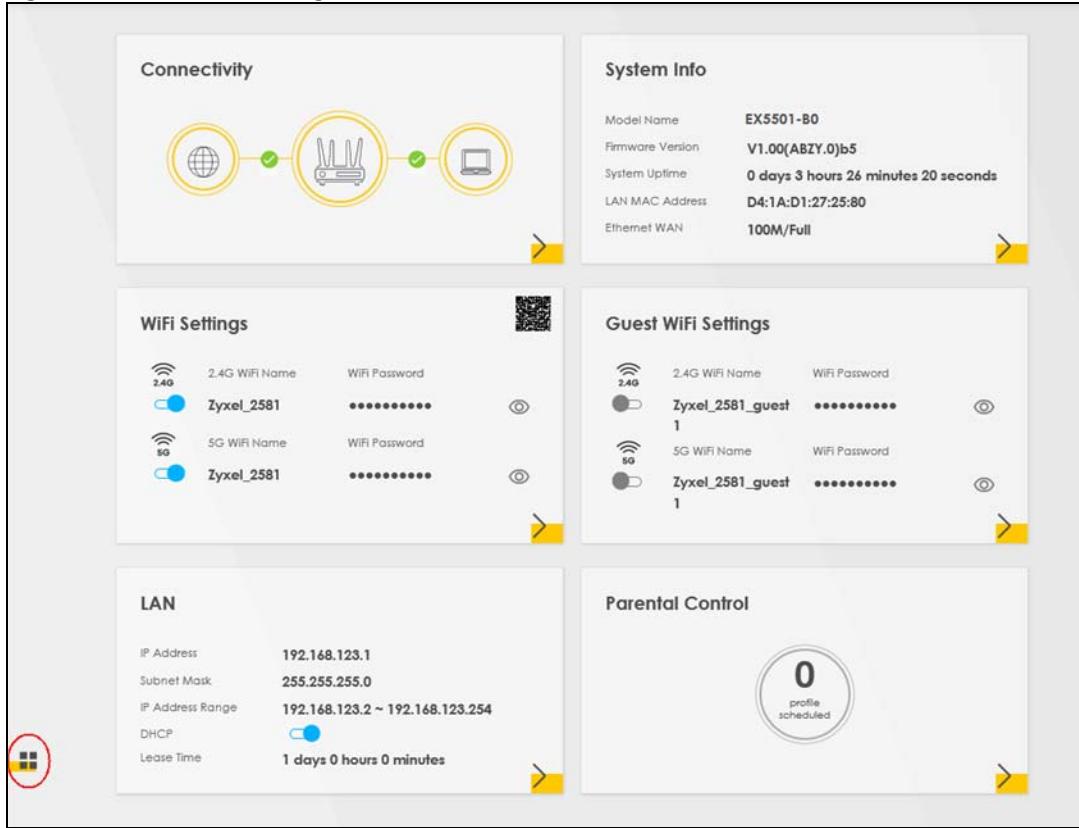

The following screen appears. Select a block and hold it to move around. Click the Check icon (✓) in the lower left corner to save the changes.

Figure 67 Check Icon

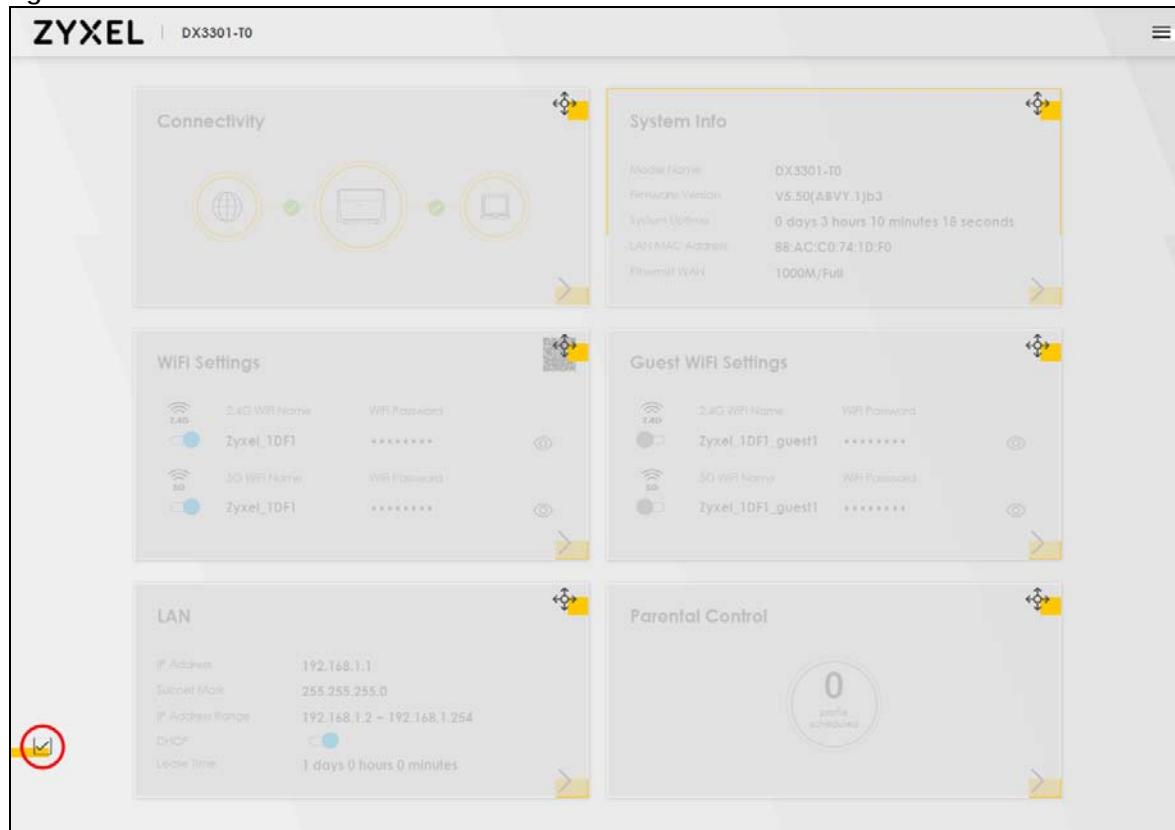

CHAPTER 4

Quick Start

4.1 Quick Start Overview


Use the **Wizard** screens to configure the Zyxel Device's time zone and WiFi settings.

Note: See the technical reference chapters for background information on the features in this chapter.

4.2 Quick Start Setup


You can click the **Wizard** icon in the side bar to open the **Wizard** screens. After you click the **Wizard** icon, the following screen appears. Click **Let's go** to proceed with settings on time zone and WiFi networks. It will take you a few minutes to complete the settings on the **Wizard** screens. You can click **Skip** to leave the **Wizard** screens.

Figure 68 Wizard – Home

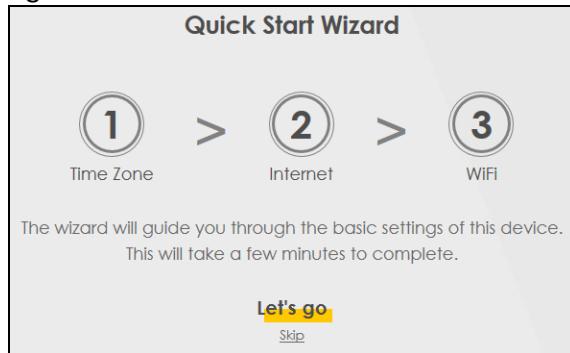


4.3 Quick Start Setup – Time Zone

Select the time zone of the Zyxel Device's location. Click **Next**.

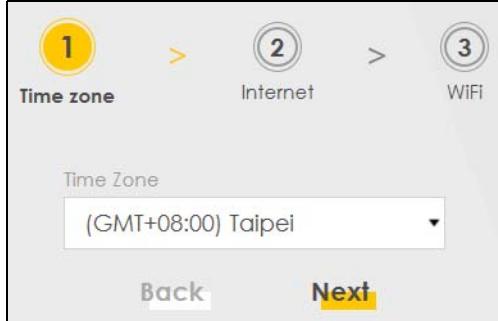Figure 69 Wizard – Time Zone


4.4 Quick Start Setup – Internet Connection

The Zyxel Device detects your Internet connection status. Click **Next** to continue.

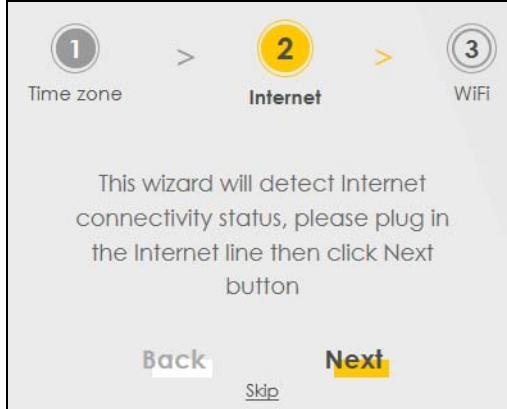Figure 70 Wizard – Internet

4.4.1 Successful Internet Connection

The Zyxel Device has Internet access.

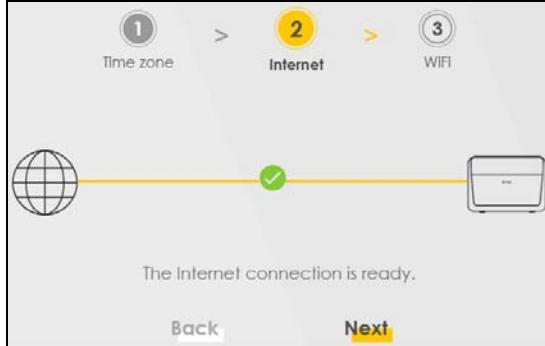Figure 71 Wizard – Successful Internet Connection

4.4.2 Unsuccessful Internet Connection

The Zyxel Device did not detect a WAN connection. See [Section 46.4 on page 517](#) for troubleshooting the Zyxel Device WAN connection.

Figure 72 Wizard – Internet Connection is Down




4.5 Quick Start Setup – WiFi

Turn WiFi on or off. If you keep it on, record the **WiFi Name** and **Password** in this screen so you can configure your WiFi clients to connect to the Zyxel Device. If you want to show or hide your WiFi password, click the Eye icon (👁).

Select **Keep 2.4G and 5G the same** to use the same SSID for 2.4G and 5G WiFi networks. Otherwise, clear the checkbox to have two different SSIDs for 2.4G and 5G WiFi networks. The screen and fields to enter may vary when you select or clear the checkbox.

You have to disable **MPro Mesh** in the **Network > Wireless > MESH** screen to clear the **Keep 2.4G and 5G the same** checkbox. Click **Done**.

Figure 73 Wizard – WiFi

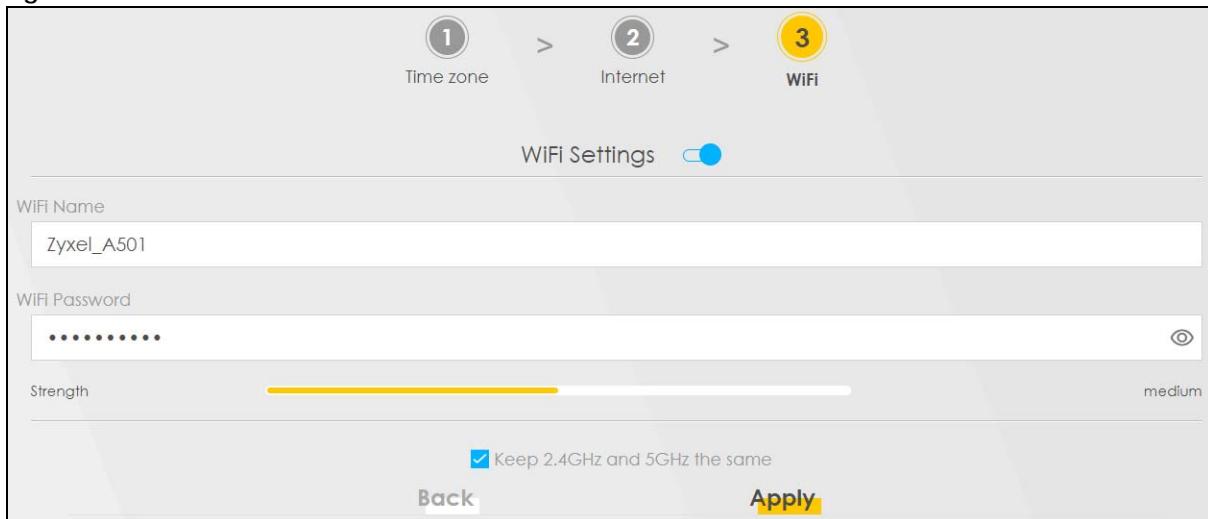

4.6 Quick Start Setup – Finish

Your Zyxel Device saves and applies your settings.