

5440D/5441D Instructions/Instructions/Instrucciones

For videos, instructions & FAQ's, visit:

Pour des vidéos, directives et FAQ, visitez :

Para videos, instrucciones y preguntas frecuentes, visite:

www.masterlock.com/masterlockvaultlocks/bluetooth-lockboxes

PRIMARY CODE
CODE PRIMAIRE
CÓDIGO PRINCIPAL

ACTIVATION CODE
CODE D'ACTIVATION
CÓDIGO DE ACTIVACIÓN

QUICK START – UNLOCK WITH MOBILE DEVICE

1. Remove lock box and instructions from package.
2. On your Android or iOS mobile device, visit the app store to download the FREE Master Lock Vault eLocks app. To check your device compatibility, visit: <http://www.masterlock.com/masterlockvaultlocks/app-download-device-compatibility>. (Note: There are two Master Lock Vault apps. Download the Master Lock Vault eLocks version.)



3. Launch the app and create an account, or sign into your existing Master Lock Vault account.
4. In the Master Lock Vault eLocks app, touch **Add a Lock(+)**.
5. Enter the **Activation Code**, from the blue box above, on your mobile device to register the lock box. Once your lock box is registered, it will display in the Lock List inside the app. Touch the name of the lock box to access the lock details and manage additional settings, view the access history, or share access with guests.
6. **By default, your lock is in Touch Unlock mode.** Touch any button on the lock box keypad to wake and unlock it. When the light turns green, open within 5 seconds or it will relock. The green light means the door can now be opened by pulling on it. (Note: You can change the phone-to-lock box communication range in the app settings, by using the Device Calibration feature.)


QUICK START – REMOVE SHACKLE

1. Once you have downloaded the Master Lock Vault eLocks app and registered your lock box, press any button on the lock box keypad to wake your lock box. Touch the Remove Shackle button on the Lock Details page, which is found under Manage Lock. Your lock box will again light green, and you can then remove the shackle within 5 seconds.
2. To remove the shackle using the lock box keypad:
 - i. Press the clear button and first digit of your primary code, from the black box above, simultaneously (See illustration i).
 - ii. Release the clear button and first digit, then enter the rest of the primary code.
 - iii. When the light turns green, remove the shackle within 5 seconds or it will relock.


(Note: Pressing the clear button erases all input and restarts the process.)

QUICK START – UNLOCK WITH LOCK BOX KEYPAD

1. Remove lock box and instructions from the package.
2. Enter the Primary Code, located in the black box above, into the lock box keypad. (Note: Do not pull on the door when entering the code and do not press the clear button. (see illustration 2). Entering the Primary Code will erase the Try Me code.)
3. When lock box light turns green, open within 5 seconds or it will relock.

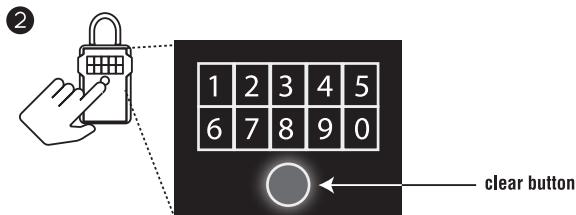


(Note: Pressing the clear button erases all input and restarts the process.)

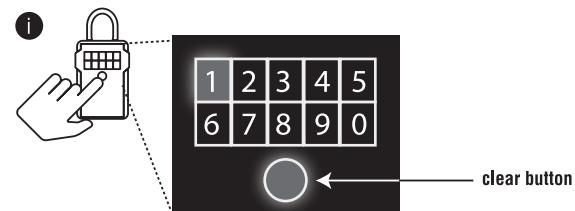

(Note: Pressing the clear button erases all input and restarts the process.)

BATTERY INSTRUCTIONS – HOW TO REPLACE BATTERY

1. Low battery will be indicated through an email notification, the app, or by a yellow light on the lock box.
2. Unlock and open the lock box door.
3. Using a Flat Head screw driver, open the battery compartment door and remove the battery.
4. Install a new CR123A battery, making sure to position the battery with positive and negative sides facing the proper direction as indicated on the door and battery compartment (See illustration 4).
5. Close the battery door and tighten the screw.

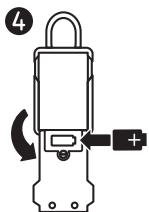

BATTERY INSTRUCTIONS – HOW TO UNLOCK WHEN THE BATTERY IS COMPLETELY DRAINED

1. If the battery drains while the lock box door is closed, you can jump it using an external 9-volt battery.
2. Locate the battery jump contacts on the bottom of the lock box (see illustration 2).
3. Hold a new 9-volt battery underneath the lock box with the positive (+) and negative (-) terminals pressed against the jump contacts (see illustration 3), in the orientation indicated on the bottom of the lock box (see illustration 2).
4. While holding the battery in place, and with an authorized mobile device within range of the lock box and in Touch Unlock mode, press any keypad button on the lock box. If the lock box does not unlock, or an authorized mobile device is not available, enter the Primary Code on the lock box keypad; while holding the 9-volt battery in place.
5. When lock box is opened, install a new CR123A battery.

Please note that after installing a new battery, the low battery icon will no longer display in the app after the lock box and app communicate with each other. However, it will take between 2 and 24 hours for the yellow LED to stop displaying on the lock itself.

