

39626 English I/B version 10148A-1


CHANNEL SELECTION (60 Channels)

A. AUTO CHANNEL SCAN

- When you place or receive a call and handset TALK button is pressed, the Excursion® 39625 auto-scans for a clear channel.
- Once it finds a clear channel, the channel number will appear on the Digital LED Display on the base unit.

B. MANUAL CHANNEL SCAN

- If the existing channel becomes noisy or starts having interference, press the SCAN button on the handset repeatedly until a clear channel is found.
- The channel number selected will appear on the Digital LED Display on the base unit.
- If the selection function fails due to interference, the handset and the base will sound an error tone and units will stay on the current channel.

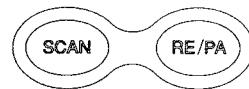

(Figure 22)

NOTE: Excessive static for more than 20 seconds can cause the handset to lose link with the base. Return the handset to the cradle to re-establish the security link.

OUT OF RANGE WARNING

- If you are far away from the base unit, the handset emits three beeps every 5 seconds to warn you that the background noise level is too high for proper communication between the handset and the base unit.
- When you hear this sound, you should move closer to the base unit to reduce the noise level. Otherwise, the call will automatically cut off.

LOW BATTERY WARNING

- When the handset battery voltage level is low, the handset will beep every 15 seconds and the handset IN USE / BATT LOW LED indicator will flash at standby mode.
- Return the handset on the base cradle to charge.

PAGING FUNCTION


- Press the INT button located on the base which simultaneously sends a signal to the handset. The handset will beep several times, alerting the handset user of an incoming call or to initiate an intercom conversation. Page is also useful to help locate a misplaced handset.

NOTE: When the handset is in the RING OFF mode, the base unit cannot page the handset.

INTERCOM FUNCTION

A. ACTIVATING THE INTERCOM USING THE BASE

- Press the INT button on the base. The base unit will beep and the INTCOM LED indicator will flash. The handset will sound a repeating series of beeps for 30 seconds to indicate that the Intercom function is activated.

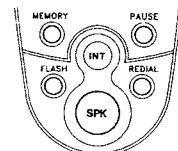


(Figure 23)

39626 English I/B version 10148A-1

2. The handset user can respond by pressing the INTCOM button. The base Digital LED Display will show "In" with one confirmation beep.
3. The base user can now talk to the person at the handset. The base unit user will hear the handset user through the base unit speaker.
4. To end the conversation, press the handset INTCOM button or base unit INT button once.

B. ACTIVATING THE INTERCOM USING THE HANDSET

1. Press the INTCOM button on the handset. The INTCOM LED indicator on the base unit will flash and the base unit will beep continuously to indicate that the Intercom function is activated.
2. The base user can respond by pressing the INT button on the base unit. The base Digital LED Display will show "In" with one confirmation beep.
3. The handset user can now talk to the person at the base unit.
4. To end the conversation, press the handset INTCOM button or base unit INT button once.

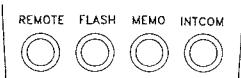

(Figure 24)

C. TRANSFERRING CALL FROM BASE UNIT TO HANDSET ON SPEAKERPHONE MODE (Handset Away from the Base Unit)

1. Press the INT button on the base unit. The base unit and handset will emit repeating series of beep and the speakerphone is automatically on hold.
2. Press the INTCOM button on the handset. The base unit Digital LED Display will show "In" with one confirmation tone.
3. Press the TALK button on the handset. The call is automatically transferred from base unit to handset.
4. Begin conversation.
5. To end the conversation, press the TALK button on the handset or place the handset on the base unit.

D. TRANSFERRING CALL FROM BASE UNIT TO HANDSET ON SPEAKERPHONE MODE (Handset on the Base Unit Cradle)

- During speakerphone use, just lift the handset and the call is automatically transferred from base unit to handset.

E. TRANSFERRING CALL FROM HANDSET TO BASE UNIT ON THE PHONE LINE

1. Press INTCOM button on the handset. The base unit and handset will emit repeating series of beeps four times and then automatically enter into intercom mode and the phone line is on hold. The base unit Digital LED Display will show "In".
2. Press SPK button on the base unit. The call is automatically transferred from handset to the base unit. The handset will return to standby mode.
3. Begin conversation.
4. To end conversation, press SPK button on the base unit.

F. IF YOU RECEIVE A CALL WHILE USING THE INTERCOM FUNCTION

- When a low ringing SOUND is being heard from the handset, press the handset TALK button or base SPK button to disengage the Intercom function and connect you with the incoming call.

ANSWERING MACHINE OPERATION

The Excursion® 39625 features a sophisticated Digital Answering System. Incoming Messages (ICMs), Outgoing Messages (OGMs) and Memo messages are stored electronically into digital memory. Messages are accessed instantly and arranged compactly in this memory. The Excursion® 39625 can store 10 minutes of messages (ICMs, OGMs and Memos combined).

VOICE MENU SYSTEM

A sophisticated Voice Menu System has been designed and pre-programmed into the Excursion® 39625. This system will verbally guide you through key operational procedures.

TIME / DAY STAMP

ICMs and Memo messages are automatically voice-stamped with the current time and day.

NOTE: If the system clock is not set, the unit will announce "Time is OFF" after each message playback. Please refer to the INITIAL SETUP or REMOTE OPERATION section on how to set the system time and day.

SETTING ANSWER ON / OFF

The unit defaults to Answer ON automatically after power up. The Excursion® 39625 will announce "Answering machine is ON. Please change the time and record your announcement." The Digital Display will indicate the total number of messages in Message Center (primary mailbox).

A. TO TURN ANSWER MODE OFF

1. Press the ANS. OFF button on the base unit.
2. The Excursion® 39625 will announce "Answering machine is OFF." The Digital Display will show " - -".

NOTE: The Excursion® 39625 will answer after the 10th ring if the Answering Mode is OFF. Refer to the "REMOTE ANSWER ON" section on how to turn the Answering Mode ON remotely.

B. TO TURN ANSWER MODE ON

1. Press the ANS. ON button until you hear "Answering machine is ON."
2. The Digital Display will show the total number of messages in the Message Center (primary mailboxes).



(Figure 25)

SETTING THE RINGS SWITCH (2 / 4 / TS)

The number of rings before the answering system answers a call can be selected by setting the RINGS switch on the base unit to:



- 2 - Two rings
- 4 - Four rings
- TS - Toll Saver

• Toll Saver lets you avoid unnecessary toll charges when calling long distance to remotely retrieve your messages. (Figure 26)

39626 English I/B version 10148A-1

The Excursion® 39625 can be set to answer the first call on the 4th ring, and all subsequent calls on the 2nd ring by setting the RINGS switch on the Toll Saver (TS) position.

If your Excursion® 39625 fails to answer on the 2nd ring, then you know that you do not have any messages. You can hang up before the unit answers and save the cost of the call.

SETTING THE ICM REC SWITCH

Setting the ICM REC switch to NORMAL position allows a caller to leave a message for up to two minutes.

ICM REC



NORMAL

Setting the ICM REC switch to ANNC ONLY position allows OGM playback only. ANNC ONLY setting will not record ICMs. (Figure 27) In this setting, the Digital LED Display will always display "Ao".

ANNC ONLY

NOTE: Up to 59 messages or a total recording time of 10 minutes for all messages (OGMs, ICMs, and Memos) can be recorded on the Excursion® 39625.

MAILBOXES

Messages can be recorded in three mailboxes (Mail 1, Mail 2 and Message Center). You can assign mailboxes to individual family members, business departments, etc. Your OGM tells the caller how to leave messages to specific mailboxes. If a caller does not select a mailbox prior leaving a message, the incoming message will be recorded automatically into Message Center (Primary mailbox).

OUTGOING MESSAGES (OGMs)

This is the announcement callers will hear when the Excursion® 39625 answers a call. A maximum of four OGMs (Answer Only, Mail 1, Mail 2 and Message Center) can be recorded up to 30 seconds each. The Excursion® 39625 also has a default OGM (factory preset) which is active when there are no OGMs present.

NOTE: Before using your answer system, it is suggested that you record an OGM.

A. NORMAL OGM

- This will be played after the Excursion® 39625 answers the call. It should include instructions for the caller on how to access the individual mailboxes. For example: "Hello, you have reached 555-1234. To leave a message for Peter, press STAR (*) and 1, now. To leave a message for Paul, press STAR (*) and 2, now. To leave a general message, please wait for the tone and then leave your message."

B. ANSWER ONLY (ANNC ONLY) OGM

- You may choose to have the Excursion® 39625 make an outgoing announcement without recording messages (the ICM REC switch is set to ANNC ONLY). Here is an example for an Answer Only OGM: "Hello. Thank you for calling Flora's flowers. Our hours are from 8:00 AM to 4:00 PM, Monday through Friday. Please call back during our normal business hours. Thank you"

C. MAIL 1 AND MAIL2 OGMS

- If the caller has selected a mailbox, they will hear the individual OGM specific to that mailbox. For example: "This is Mary. Please leave a message after the tone. Thanks!"

D. DEFAULT OGM

- The Excursion® 39626 has a built-in default OGM. If you do not record your own OGM(s), the unit will automatically answer incoming calls with the following message: *"Please record your message after the beep."*

NOTES: The default OGM cannot be changed. If the Excursion® 39625 experiences a power failure and the backup batteries are not installed or dead, all recorded OGM(s) will be erased and the unit will revert to the default OGM.

When recording your OGMs, speak slowly in a clear voice. Speak at a distance of 12 to 18 inches from the microphone located at the front side of the Excursion® 39625 base unit. The maximum OGM record time is 30 seconds.

RECORDING THE OGM

A. RECORDING THE NORMAL OGM

- Make sure the Answer Mode is ON. Press the ANS. ON button of base unit to turn Answer Mode ON. The unit will announce *"Answering Machine is ON."*
- Set the ICM REC switch (located on the right side of the Excursion® 39625 Base unit) to the NORMAL position.
- Press and hold the REC OGM button. The unit will announce *"Please record your announcement after the beep."*
- Continue to hold the REC OGM button and begin your outgoing announcement. The digital display will indicate the elapsed time of the recording.
- Release the REC OGM button when you have finished recording. The unit will announce *"End of recording."* and your OGM will play back once automatically for your review.



(Figure 28)

B. RECORDING THE ANSWER ONLY (ANNC ONLY) OGM

- Make sure the Answer Mode is ON.
- Set the ICM REC switch (located on the right side of the Excursion® 39625 base unit) to the ANNC ONLY position. The digital LED display will show *"Ao"*.
- Press and hold the REC OGM button. The unit will announce *"Please record your announcement after the beep."*
- Continue to hold the REC OGM button and begin your outgoing announcement. The Digital LED Display will indicate the elapsed time of the recording.
- Release the REC OGM button when you have finished recording. The unit will announce *"End of recording"* and your OGM will play back once automatically for your review.

NOTE: You must record an Answer Only OGM to use the Answer Only feature. If no OGM is recorded and ANNC ONLY is selected, the unit will answer all incoming calls with *"Memory Full"* only, then hang up.

C. RECORDING MAIL1 AND MAIL2 OGMS

- Make sure the Answer Mode is ON.
- Press and hold the MAIL button (1 or 2) the unit states *"Please record your announcement after the beep."*
- Continue to hold the MAIL button and begin your outgoing announcement. The digital display will indicate the elapsed time of the recording.



(Figure 29)

39626 English I/B version 10148A-1

4. Release the MAIL button when you have finished recording. The unit will announce "End of recording" and your OGM will play back once automatically for your review.
5. Repeat steps 2 through 4 for the next mailbox.

CHANGING THE OGMS

Changing your OGMS is accomplished by replacing the old OGM with a new OGM. Repeat the steps above to record new OGMS.

NOTE: OGMS can be recorded and changed from the Excursion® 39625 handset or by calling the Excursion® 39625 from any Tone dialing telephone. Please refer to the REMOTE OPERATION section on how to change your OGM remotely.

CHECKING THE OGMS

1. Set the ICM REC switch in the desired position.
2. Press the REC OGM button briefly to hear your previously recorded OGM. If you have not recorded your OGM, the unit will state "You have no announcements."

NOTE: You can stop OGM playback anytime during playback by pressing the STOP button on the base unit.

RECORDING A MEMO

A. RECORDING A MEMO INTO A SELECTED MAILBOX

1. Press the MEMO REC button once on the base unit. A beep will sound and the unit will announce "Enter mailbox number." MAIL 1 or MAIL2 LEDs will flash. (Figure 30)
2. Press and hold the desired mailbox (MAIL 1 or MAIL 2) button. The Digital LED Display will display "Ir" as an indication that memo recording has begun. The corresponding mailbox LED will turn ON. The Excursion® 39625 will announce "Please record your message after the beep."
3. While still holding down the MAILBOX button, begin your recording. You can record up to a maximum recording time of two minutes.
4. Release the mailbox button when you have finished recording your memo. The Excursion® 39625 will announce "End of recording."



NOTE: The unit returns to idle state if no mail button is pressed within 10 seconds.

B. RECORDING A MEMO INTO THE MESSAGE CENTER

1. Press and hold the MEMO REC button. The MESSAGE CENTER LED will turn on. The unit will announce "Please record your message after the beep." The Digital LED Display will show the elapsed time of the recording.
2. While still holding the MEMO REC button, begin your recording. You can record up to a maximum recording time of two minutes.
3. Release the MEMO REC button when you have finished recording your memo. The Excursion® 39625 will announce "End of Recording." The Digital Display will be advanced by one count for the Message Center.

PLAYING BACK OF MESSAGES / MEMOS

If any of the mailbox indicator LEDs are ON, it indicates that you have messages. The Digital LED Display normally shows only the number of messages in Message Center.

OWNER'S MANUAL#39626 VER. 10148A-1

PAGE: 26 English version

39626 English I/B version 10148A-1

Press MAIL 1 or MAIL 2 button to see how many messages have been recorded in each mailbox.

A. PLAYING MESSAGES

Press the desired mailbox button (MAIL 1, MAIL 2, or MESSAGE CENTER /PLAY). The Excursion® 39625 will announce "Mailbox (number). You have (number) messages." The Digital LED Display shows the total number of messages in the selected mailbox



(Figure 31)

momentarily, then displays the number of message being played.

The Excursion® 39625 begins playing the first message to the end. It will announce the message number before each message.

B. PREVIOUS MESSAGES

- Press the PREV button once during message playback to skip backward one message.



(Figure 32)

C. REPEATING MESSAGE


- Press the REPEAT button once during message playback

D. SKIPPING MESSAGES

- Press the SKIP button during message playback to skip to the next message.

E. STOP MESSAGE PLAYBACK

- Press the STOP button to stop message playback.

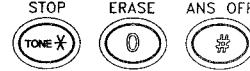

(Figure 33)

ERASING MESSAGES

A. SELECTIVE ERASING

- Press the ERASE button during message playback. The digital LED display will show "ER."
- The Excursion® 39625 will announce "Message (number) erased." and then start the next message.

NOTE: Erased messages cannot be retrieved. There is a momentary delay after erasing messages to allow the Excursion® 39625 to reorganize and optimize its memory space.

B. ERASING ALL MESSAGES IN THE MESSAGE CENTER

- Press and hold the ERASE button until a beep is heard. The Digital Display goes blank (00), and the Message Center (primary mailbox) LED indicator will turn off.
- The Excursion® 39625 will announce "Messages Erased. You have no messages." All messages are now erased in the message center.

NOTE: The Excursion® 39625 will announce "You have no messages." if there are no more messages.

C. ERASING ALL MESSAGES IN MAILBOX 1 OR MAILBOX 2

- Press the ERASE button.
- The Excursion® 39625 will beep and prompt "Enter Mailbox number." The unit will beep and mail 1 and mail 2 LED indicator will flash.
- Press and hold the selected mailbox button until a beep tone is heard. The Excursion® 39625 will announce "Messages Erased. You have no messages". All messages are now erased in the selected mailbox.

MEMORY FULL DETECTION

The memory full condition occurs:

- If 10 minutes of recording time is reached, or
- If 59 messages (i.e. memo, OGM, ICM) have been recorded as indicated by the digital LED display shown as "FU". Erasing messages will eliminate this condition.


NOTE: If there is an incoming call, the unit will answer and announce "Memory FULL". You can erase any or all the messages remotely after listening to them. Refer to the REMOTE OPERATION section for more details.

CALL SCREENING / AUTO DISCONNECT

You can listen to the caller leave their ICM and decide if you want to answer the call.

A. FROM THE HANDSET (Away From the Base Unit)

1. When the Excursion® 39625 rings, press the REMOTE button on the handset. The Excursion® 39625 will immediately answer the call. You will hear your OGM followed by the caller's message through the handset receiver.
2. If you decide to take the call, simply press the TALK button and begin speaking.

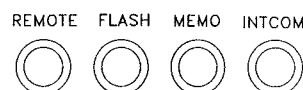

(Figure 34)

B. FROM THE HANDSET (In the Base Unit Cradle)

1. When the Excursion® 39625 answers a call, you will hear your OGM followed by the caller's message through the speaker.
2. If you decide to take the call, simply pick up the handset and press the TALK button. Begin speaking and the ICM Recording is stopped. The recorded message is stored in memory and the message count is incremented by one.

C. FROM THE EXTENSION PHONE

1. When the Excursion® 39625 answers a call, you will hear your OGM followed by the caller's message through the speaker.
2. If you decide to take the call, just lift the handset of the extension phone on the same line as the Excursion® 39625 and the ICM recording is stopped. The recorded message is stored in memory and the message count is incremented by one.

TWO - WAY RECORDING

Two - Way Recording allows you to record your conversation with another caller. Two - Way recording can be enabled during TALK mode while you are using the handset.

A. RECORD IN THE MESSAGE CENTER

1. While in TALK mode, press and hold the MEMO REC button of the base unit. The MESSAGE CENTER LED indicator will turn on. The Digital LED Display will show "2r" to indicate it is in the two-way recording mode.
2. Release the MEMO REC button to end your conversation recording.



(Figure 35)

B. RECORD IN MAILBOX1 OR MAILBOX2

1. Press the MEMO REC button of the base unit. MAIL1 and MAIL2 LEDs will flash.
2. Press and hold the desired mailbox button (MAIL1 or MAIL2). The corresponding mailbox LED will turn ON. The Digital LED Display will show "2r" to indicate it is in the Two - Way Recording setting.
3. Release the mailbox button to end your conversation recording.

39626 English I/B version 10148A-1

NOTE: Recording two-way conversations may be subjected to local state and federal laws and regulations.

VOX (VOICE ACTIVATED) DETECTION

During OGM, ICM or MEMO recording, the Excursion® 39625 uses VOX (voice activation) to conserve message storage space. The conditions for the Excursion® 39625 terminating a recording are:

- Continuous silence for seven seconds.
- Seven seconds after the caller hangs up.

REMOTE OPERATION

Allows you to access most of the Excursion® 39625 functions away from the base unit using only the handset or any touch tone phone when you call the Excursion® 39625. You can play, review, repeat, skip, erase, and stop messages in all three mailboxes, record a memo or an OGM, set the Answer Mode ON or OFF, change your password, set the time and day, activate the Room Monitor function and the Voice Menu.


USING THE REMOTE OPERATION FUNCTION

There are two ways of using Remote Operation:

1. Handset (or Remote Unit), or
2. Calling the Excursion® 39625 from a Tone Dialing Phone

A. USING THE HANDSET

1. Press the REMOTE button to activate the remote function.
2. The handset and base IN USE / BATT LOW indicator will blink on the base while the Digital LED Display shows "rc" to indicate that the Remote Operation is activated.

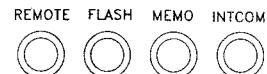

(Figure 36)

B. CALLING THE EXCURSION® 39625 FROM A TONE PHONE

NOTE :The factory preset password for remote operation is "#58".

1. Call the Excursion® 39625 from a tone dialing phone.
2. While the OGM is playing or during ICM recording, enter your two-digit password.
3. After a successful password entry, the Remote Operation function is activated. Once you have activated the Remote Operation function either by handset or through a tone dialing phone to call the Excursion® 39625:
 1. The Excursion® 39625 will announce the total number of messages in Message Center (primary mailbox), and three short beeps will sound as a prompt for the next remote command.
 2. The unit will prompt "For help, press 9." and allow 7 seconds for you to enter a command.
 3. Pressing 9 will start the Voice Help Menu.
 4. At the completion of any function, a beep will sound and the unit will prompt "Please enter next command." for the next command.
 5. If invalid command is entered, the unit will sound three short beeps to prompt.

NOTE: The Excursion® 39625 will announce "End of Remote" if no command is entered within seven seconds after the prompt. The unit will then return to standby mode.

39626 English I/B version 10148A-1

REMOTE COMMANDS

A. VOICE HELP MENU

Press 9 for Voice Help Menu. All remote commands can be entered during playback of the menu. The following table shows the Voice Help Menu:

Key	Function
1	Change Password
2	Change Time and Day
3	Room Monitoring
4 + Mailbox no.	Record MEMO
5 + Mailbox no.	Record Announcement (OGM)
6	Set Answer Mode to ON
7 + Mailbox no.	Playback Message (MEMO, ICM)
8 + Mail box no	Playback Announcement (OGM)
9	Voice Help Menu
*	Stop Function
#	Set Answer Mode to OFF
During playback, you can press the following keys:	
7	Playback Previous Message
8	Repeat a Message
9	Skip Forward to the Next Message
0	Erase a Message
*	Stop Function

B. STOP FUNCTION

- Press * to abort the current function.

C. CHANGING THE PASSWORD

- Press the 1 key within seven seconds after the voice prompt "For help, press 9." or "Please enter next command." The unit will prompt "Your password is (current code). Please enter new password."
- After a long beep, enter your new 2-digit password, and the unit will announce "Your password is (new code). Please enter next command."

D. SETTING THE DAY AND TIME

- Press the 2 key within seven seconds after the voice prompt "For help, press 9." or "Please enter next command." The unit will announce the current day and time. The unit will prompt "Please enter new day."
- After a long beep, enter the new day (Monday = 1, Tuesday = 2, Wednesday = 3, etc.). The unit will then prompt "Please enter new time."
- After a long beep, enter the new hour(01-12).
- After two beeps, enter the new minute (00-59).
- After two beeps, press * for AM, or press # for PM.
The unit will announce the new day and time, followed by a beep.
The unit will prompt, "Please enter next command."

E. SETTING ANSWER MODE TO ON

- Press 6 within seven seconds after the voice prompt, "For help, press 9." Or "Please enter next command."

39626 English I/B version 10148A-1

The unit will announce, "Answering machine is ON." and then it will prompt, "Please enter next command."

F. SETTING ANSWER MODE TO OFF

- Press the keypad **#** within seven seconds after the voice prompt "For help, press 9." or "Please enter the next command."

The unit will announce "Answering machine is OFF." and then it prompt, "Please enter next command."

G. OGM RECORDING

- Press **5** and the unit will prompt, "Please enter mailbox number."
- Press one of the following keys:

Key	OGM
0	Normal OGM(Message Center)
1	Mail box 1 OGM
2	Mailbox 2 OGM
3	Answer only OGM

- The unit will prompt "Please record your announcement after the beep. To stop recording, press STOP."
- Record your announcement.
- To stop recording, press the STOP Button. Once STOP BUTTON is pressed, the unit will announce "End of recording." The unit will play back the announcement.
- After playback, the unit will then prompt "Please enter next command."

H. OGM PLAYBACK

- Press **8** and the unit will prompt "Enter mailbox number."
- Press one of the following keys:

Key	OGM
0	Normal OGM(Message Center)
1	Mailbox 1 OGM
2	Mailbox 2 OGM
3	Answer only OGM

The Excursion® 39625 will play back the selected OGM.

After playback, the unit will then prompt, "Please enter next command."

NOTE: If no user OGM is recorded, the unit will say "You have no announcement."

I. RECORDING A MEMO

- Press **4** and the unit will prompt "Please enter mailbox number."
- Press one of the following keys:

Key	MEMO
0	Message Center MEMO
1	Mailbox 1 MEMO
2	Mailbox 2 MEMO

NOTE: An error beep is heard if wrong key is pressed.

- The Excursion® 39625 will prompt, "Please record your message after the beep. To stop recording, press STOP."
- Wait for a beep. Speak towards the microphone and record your MEMO message.
- To stop recording, press * or hang up the phone. Once * is pressed, the unit will then announce, "End of recording. Please enter next command."

39626 English I/B version 10148A-1

J. PLAY MESSAGES / MEMOS

1. Press **7** button and the unit will prompted "Please enter mailbox number."
2. Press one of the follow key :

Key	MEMO / ICM
0	Message Center MEMO / ICM
1	Mailbox 1 MEMO / ICM
2	Mailbox 2 MEMO / ICM

NOTE: An error beep is heard if wrong key is pressed.

The Excursion® 39625 will prompt "Mailbox (number). You have (number) message(s)." and playback the message. After the playback, the unit will prompt: "End of message. Please enter the next command."

K. PLAYBACK OPTIONS

Review Previous Message : Press **7**, to go to the previous message.

Repeat Messages: Press **8**, to restart the same message from the beginning.

Skip Message : Press **9**, to skip forward to the next message .

Erase a Message : Press **0**, to erase a particular message.

Stop Message Playback : Press ***** , to terminate message playback.

NOTE: The Excursion® 39625 will announce "End of Message" when all messages have been played.

L. ROOM MONITORING

1. Press **3** within seven seconds after the voice prompt "For help, press 9." or "Please enter next command." This allows you to listen to the sounds in the room where the Excursion® 39625 is located.
2. Two beeps will sound when 20 seconds has elapsed and the unit will announce: "Please enter next command."
3. If you wish to resume monitoring, simply press **3** after a beep is heard. Key entry must be within 7 seconds after a beep is heard.

IMPROVING CORDLESS RECEPTION

Follow these guidelines to improve cordless sound quality:

- Select an area to install the Excursion® 39625 where it is closest to the center of your home or office. This will improve the operating range of the unit.
- Keep the Excursion® 39625 base unit away from electrical equipment. Radio Frequency Interference (RFI) is sometimes generated by these appliances, which can cause a degradation in cordless reception.
- Set the base unit antenna to its vertical position.
- Keep the handset batteries charged as much as possible. Weak handset batteries can limit the range of cordless operation.

MAXIMIZING BATTERY LIFE

Repeated use or recharge of Ni-Cd batteries without periodic full discharge results in reduced useable charge time. When you notice the usable charge duration decreasing, fully discharge the Ni-Cd battery and recharge as described:

DISCHARGING

1. Unplug the telephone line cord from the Excursion® 39625.
2. Make sure that the AC Adapter is connected.
3. Press the TALK button of the handset (IN USE indicator should light).
4. Place the handset out of the base cradle and start discharging.

Once the IN USE LED indicator starts flashing, it means that the battery level is low. Let it fully discharge for 12 hour. Once the Ni-Cd battery is fully discharged, you may now charge the battery to its full capacity.

CHARGING

1. Make sure the AC adapter and telephone line cord is connected to the Excursion® 39626.
2. Place the handset on the base cradle. The CHARGE indicator of the base unit will light steadily.
3. Leave the handset charging on the base for 12 hours continuously to get a maximum charge.
4. The Excursion® 39626 is now ready for regular use. Discharge and charge the Ni-Cd battery again once you notice a decrease in the useable charge time.

MAINTENANCE

1. Your phone should be situated away from heat sources such as radiators, heaters, stoves or any other appliance that produces heat.
2. Use a slightly damp cloth to clean the plastic cabinet. A mild soap will help to remove grease or oil. Never use polish, solvents, abrasives or strong detergents since these can damage the finish.

TROUBLESHOOTING

SYMPTOMS	POSSIBLE SOLUTION / CAUSE
No dial tone	<ul style="list-style-type: none">Check for the telephone line cord connectors at both ends that they are pushed in firmly until they click.If you had a power failure or had unplugged the base unit, replace the handset on the base unit for two to five seconds to reset the system.
Does not ring	<ul style="list-style-type: none">Check the RING ON / OFF switch on the handset. Switch to the RING ON position to enable the handset ringer.Check for the telephone line cord connectors at both ends. that they are pushed in firmly until they click.You may have exceeded the Ringer Equivalence Number (REN) limit of how many phones can be connected to the same line. The REN total of all devices (printed on the bottom label of each unit) should not exceed five (5). Disconnect the appropriate units to lower the REN total.
No power on the handset unit	<ul style="list-style-type: none">Check for the Ni-Cd battery pack for proper connection inside the battery compartment on the handset.The handset rechargeable Ni-Cd battery pack may need charging.
Does not charge	<ul style="list-style-type: none">Check for the Ni-Cd battery pack for proper connection inside the battery compartment on the handset.The charging contacts and terminals may need cleaning with an alcohol-dampened swab.
Range is limited	<ul style="list-style-type: none">Raise or reposition the antenna on the base.Move the base unit so that it is centrally located in your residence or office and make sure that the base unit is not located near appliances.The handset Ni-Cd battery may be weak. Recharge the Ni-Cd battery.Refer to the section "Improving Cordless Reception".
Interference on reception	<ul style="list-style-type: none">Choose an alternate channel using the SCAN button on the handset.Refer to the section "Improving Cordless Reception".
Cannot access Remote Operation	<ul style="list-style-type: none">The password you have entered may be incorrect. Enter the correct password during OGM playback or within 7. seconds after the OGM has finished playing.
Excessive static	<ul style="list-style-type: none">Ensure that the antenna is not touching another metal object.Refer to the section "Improving Cordless Reception".
Incoming calls/ Memo messages are cut off	<ul style="list-style-type: none">The Excursion® 39626 will stop recording after 7 seconds of continuous silence or 7 seconds after the caller hangs up (VOX feature).Each incoming message recording is limited to two minutes to conserve message storage space.

39626 English I/B version 10148A-1

Callers cannot leave messages in a specific mailbox	<ul style="list-style-type: none">• Make sure that the ICM REC switch is in the NORMAL position.
Announces "Memory Full"	<ul style="list-style-type: none">• If there is no OGM recorded for the ANNC ONLY setting, "Memory full" is the default OGM for the ANNC ONLY setting.• The 10-minute recording limit may have been reached. Erase old messages to make room for new messages.

TECHNICAL INFORMATION

This cordless phone uses radio frequencies to allow mobility. There are certain difficulties in using radio frequencies with a cordless telephone. While these are normal, the following could affect the operation of your system.

NOISE: Electric pulse noise is present in most homes at one time or another. This noise is most intense during electrical storms. Certain kinds of electric equipment such as light dimmers, fluorescent bulbs, motors, and fans also generate noise pulses. Because radio frequencies are susceptible to these noise pulses, you may occasionally hear them in your handset. Generally they are a minor annoyance and should not be interpreted as a defect in your system.

RANGE: Because radio frequencies are used, location of the base unit can affect operating range. Try several locations in your home or business and pick the one that gives you the clearest signal.

INTERFERENCE: Some electronic devices operate in and/or generate interference near the operating frequencies of your cordless telephone. While several protection circuits are used to prevent unwanted signals, there may be periods when these unwanted signals cause interference. If interference occurs frequently, it can be minimized or eliminated by lowering the height of your base antenna or by relocating the base unit. You can check for interference before selecting the final base unit location by plugging in the phone.

AUTOMATIC DIGITAL SECURITY: This system helps protect the privacy of your telephone conversation from other cordless phones nearby. Whenever the handset is returned to the base, a new security code between the handset and base is randomly generated (up to 65,536 combinations).

NOTE: If a power failure occurred on the handset or the base or if the handset is out of range from the base for more than 20 seconds, the security code is lost, along with the link between the handset and base. In order to reestablish the security code, return the handset to the base until the IN-USE/CHARGE LED indicator lights and a beep is heard.

39626 English I/B version 10148A-1

GLOSSARY

65,536 COMBINATION SECURITY CODING - A digital code (up to 65,536 random combinations) that is automatically generated to prevent use of your telephone line by other cordless phones nearby.

AUTO-SCAN - Upon picking up the handset and pressing the TALK button, the Excursion automatically scans for the best channel. There are 60 channels available.

AUTO-STANDBY - The handset automatically goes into standby mode (on-hook) when the handset is returned to the base unit.

COMPANDER NOISE REDUCTION - Reduces background noise.

FLASH - If you subscribe to phone company special services like Call Waiting or Call Forwarding, pressing the FLASH button will momentarily hang up the phone to access these services.

HEARING AID COMPATIBLE - Allows hearing aid devices to function properly while using the handset.

LAST NUMBER REDIAL - The Excursion® 39625 always "remembers" the last phone number dialed up to 32 digits.

MIXED MODE DIALING (Temporary Pulse to Tone Dialing) - The Excursion® 39625 can provide tone dialing while using a pulse dial service to access automated banking services or any other service requiring tone dialing.

PAUSE - A 4-second delay between dialed numbers for use in PABX systems or long distance services.

RINGER EQUIVALENCE NUMBER (REN) - This is a number located underneath the base of your phone(s) or phone-related device. The REN is used to determine how many phones can be connected to the same telephone line while still having all those devices ring when you receive a call. In most areas, but not all areas, the REN total of all devices should not exceed five (5). Call your local phone company to determine the maximum REN for your calling area.



AC ADAPTER:

Use only with Class 2 Transformer 9VAC output 500 mA.

39626 English I/B version 10148A-1

NOTE

39626 English I/B version 10148A-1



**Distributed Exclusively Worldwide by Unical
Enterprises, Inc., Industry, California USA**

39625K/10148A-1

W W W . nwbphones . com

OWNER'S MANUAL#39626VER. 10148A-1

PAGE: 39 English version