




# MobileMapper® 20

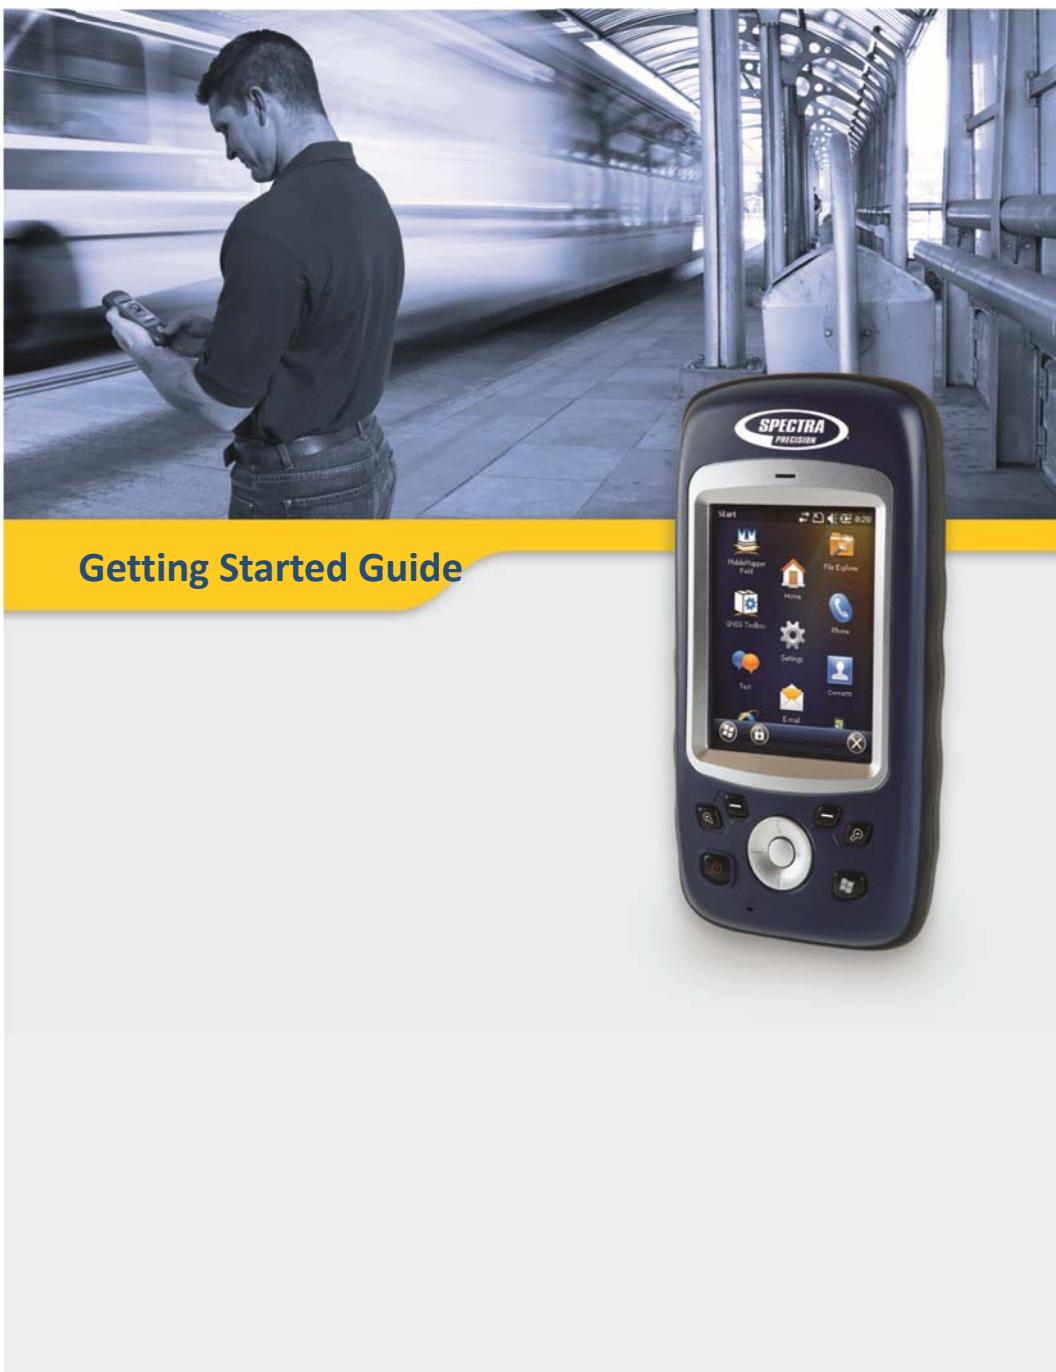

Getting Started Guide

Copyright Notice

Copyright 2013 Trimble Navigation Limited. All rights reserved.

Trademarks

All product and brand names mentioned in this publication are trademarks of their respective holders.

**SPECTRA PRECISION LIMITED WARRANTY TERMS AND CONDITIONS**

**PRODUCT LIMITED WARRANTY** - Subject to the following terms and conditions, Spectra Precision warrants that for a period of one (1) year from date of purchase this Spectra Precision product (the "Product") will substantially conform to Spectra Precision's publicly available specifications for the Product and that the hardware and any storage media components of the Product will be substantially free from defects in materials and workmanship.

**PRODUCT SOFTWARE** - Product software, whether built into hardware circuitry as firmware, provided as a standalone computer software product, embedded in flash memory, or stored on magnetic or other media, is licensed solely for use with or as an integral part of the Product and is not sold. If accompanied by a separate end user license agreement ("EULA"), use of any such software will be subject to the terms of such end user license agreement (including any differing limited warranty terms, exclusions, and limitations), which shall control over the terms and conditions set forth in this limited warranty.

**SOFTWARE FIXES** - During the limited warranty period you will be entitled to receive such Fixes to the Product software that Spectra Precision releases and makes commercially available and for which it does not charge separately, subject to the procedures for delivery to purchasers of Spectra Precision products generally. If you have purchased the Product from a Spectra Precision Authorized Distribution Partner rather than from Spectra Precision directly, Spectra Precision may, at its option, forward the software Fix to the Spectra Precision Authorized Distribution Partner for final distribution to you. Minor Updates, Major Upgrades, new products, or substantially new software releases, as identified by Spectra Precision, are expressly excluded from this update process and limited warranty. Receipt of software Fixes or other enhancements shall not serve to extend the limited warranty period.

For purposes of this warranty the following definitions shall apply: (1) "Fix(es)" means an error correction or other update created to fix a previous software version that does not substantially conform to its Spectra Precision specifications; (2) "Minor Update" occurs when enhancements are made to current features in a software program; and (3) "Major Upgrade" occurs when significant new features are added to software, or when a new product containing new features replaces the further development of a current product line. Spectra Precision reserves the right to determine, in its sole discretion, what constitutes a Fix, Minor Update, or Major Upgrade.

**WARRANTY REMEDIES** - If the Spectra Precision Product fails during the warranty period for reasons covered by this limited warranty and you notify Spectra Precision of such failure during the warranty period, Spectra Precision

will repair OR replace the nonconforming Product with new, equivalent to new, or reconditioned parts or Product, OR refund the Product purchase price paid by you, at Spectra Precision's option, upon your return of the Product in accordance with Spectra Precision's product return procedures then in effect.

**HOW TO OBTAIN WARRANTY SERVICE** - To obtain warranty service for the Product, please contact your local Spectra Precision Authorized Distribution Partner. Alternatively, you may contact Spectra Precision to request warranty service at +1-303-323-4100 (24 hours a day) or e-mail your request to [support@spectraprecision.com](mailto:support@spectraprecision.com). Please be prepared to provide:

- your name, address, and telephone numbers
- proof of purchase
- a copy of this Spectra Precision warranty
- a description of the nonconforming Product including the model number
- an explanation of the problem

The customer service representative may need additional information from you depending on the nature of the problem.

**WARRANTY EXCLUSIONS AND DISCLAIMER** -

This Product limited warranty shall only apply in the event and to the extent that (a) the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Spectra Precision's applicable operator's manual and specifications, and; (b) the Product is not modified or misused. This Product limited warranty shall not apply to, and Spectra Precision shall not be responsible for, defects or performance problems resulting from (i) the combination or utilization of the Product with hardware or software products, information, data, systems, interfaces, or devices not made, supplied, or specified by Spectra Precision; (ii) the operation of the Product under any specification other than, or in addition to, Spectra Precision standard specifications for its products; (iii) the unauthorized installation, modification, or use of the Product; (iv) damage caused by: accident, lightning or other electrical discharge, fresh or salt water immersion or spray (outside of Product specifications); or exposure to environmental conditions for which the Product is not intended; (v) normal wear and tear on consumable parts (e.g., batteries); or (vi) cosmetic damage. Spectra Precision does not warrant or guarantee the results obtained through the use of the Product, or that software components will operate error free.

**NOTICE REGARDING PRODUCTS EQUIPPED WITH TECHNOLOGY CAPABLE OF TRACKING SATELLITE SIGNALS FROM SATELLITE BASED AUGMENTATION SYSTEMS (SBAS) (WAAS/EGNOS, AND MSAS), OMNISTAR, GPS, MODERNIZED GPS OR GLONASS SATELLITES, OR FROM IALA BEACON**

**SOURCES: SPECTRA PRECISION IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF ANY SATELLITE BASED POSITIONING SYSTEM OR THE AVAILABILITY OF ANY SATELLITE BASED POSITIONING SIGNALS.**

**THE FOREGOING LIMITED WARRANTY TERMS**

STATE SPECTRA PRECISION'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO THE SPECTRA PRECISION PRODUCT, EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCT AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND, BY EITHER SPECTRA PRECISION OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF SPECTRA PRECISION ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCT, BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, THE ABOVE LIMITATION MAY NOT APPLY OR FULLY APPLY TO YOU.

LIMITATION OF LIABILITY - SPECTRA PRECISION'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL SPECTRA PRECISION OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGE WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANYWAY TO THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF DATA, OR ANY OTHER PECUNIARY LOSS), REGARDLESS OF WHETHER SPECTRA PRECISION HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND SPECTRA PRECISION. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY OR FULLY APPLY TO YOU.

PLEASE NOTE: THE ABOVE SPECTRA PRECISION WARRANTY PROVISIONS WILL NOT APPLY TO PRODUCTS PURCHASED IN THOSE JURISDICTIONS (E.G., MEMBER STATES OF THE EUROPEAN ECONOMIC AREA) IN WHICH PRODUCT WARRANTIES ARE THE RESPONSIBILITY OF THE LOCAL SPECTRA PRECISION AUTHORIZED DISTRIBUTION PARTNER FROM WHOM THE PRODUCTS ARE ACQUIRED. IN SUCH A CASE, PLEASE CONTACT

YOUR LOCAL SPECTRA PRECISION AUTHORIZED DISTRIBUTION PARTNER FOR APPLICABLE WARRANTY INFORMATION.

OFFICIAL LANGUAGE - THE OFFICIAL LANGUAGE OF THESE TERMS AND CONDITIONS IS ENGLISH. IN THE EVENT OF A CONFLICT BETWEEN ENGLISH AND OTHER LANGUAGE VERSIONS, THE ENGLISH LANGUAGE SHALL CONTROL.

REGISTRATION - To receive information regarding updates and new products, please contact your local Spectra Precision Authorized Distribution Partner or visit the Spectra Precision website at [www.spectraprecision.com/register](http://www.spectraprecision.com/register). Upon registration you may select the newsletter, upgrade, or new product information you desire.

#### PRODUCT SAFETY WARNINGS

Use responsibly. Read all instructions and safety information before use to avoid injury.

The maximum operating ambient temperature of the equipment declared by the manufacturer is 60°C. Battery safety

Charge battery only at ambient temperatures ranging from 0°C to 60°C.

(1)CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type of battery recommended by the manufacturer. Dispose of used batteries according to battery manufacturer's instructions.

(2)CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

(2)CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

#### Wi-Fi Safety

Turn Wi-Fi off in areas where Wi-Fi use is prohibited or when it may cause interference or danger, such as in airplanes while flying.

#### Care & Maintenance

Excessive sound pressure from earphones and headphones can cause hearing loss.

#### USB data cables

CAUTION: Use of USB data cables is restricted to standard USB version 2.0 or higher. Powered USB is prohibited.

#### Hand Strap

Use the hand strap responsibly. It is primarily designed to ease handheld use of the product (limb worn). The hand strap should not be used to attach the product next to the body.

## Table of Contents

First-Time Use.....	1
Unpacking.....	1
Inserting the Battery Into the Receiver.....	1
Turning the Receiver On.....	2
Using the AC Adapter to Charge the Battery .....	3
Using the Quick Toolbar.....	4
Switching the Receiver Manually to Suspend Mode.....	4
Adjusting Backlight Level and Idle Time .....	4
Power Management.....	5
Setting Time & Date .....	5
Regional Settings .....	6
Locking the Screen and the Keypad.....	6
How to Hold the Receiver.....	7
Turning the Receiver Off .....	7
Receiver Description.....	8
Front View .....	8
Rear View .....	9
Bottom View.....	10
GNSS Toolbox.....	11
GNSS Settings .....	11
GNSS Status.....	11
Reset .....	12
About.....	12
Advanced Features.....	13
Power Modes.....	13
Internal Battery.....	13
USB Connection.....	15
Wireless Communication .....	16
Motion Sensor.....	17
Using the Camera.....	18
Making a Video.....	20
E-Compass Calibration.....	23
Platform Specifications.....	24
GNSS Characteristics.....	24
Accuracy Specifications .....	24
Processor.....	24
Operating System .....	24
Communication.....	24
Physical Characteristics.....	25

User Interface .....	25
Memory .....	25
Environmental Characteristics.....	25
Power Requirements.....	25
Multimedia & Sensors.....	25
Software Options.....	25
Standard Accessories.....	26




**Unpacking** Open the receiver box and unpack the following items:

- Receiver
- Battery
- Universal AC adapter
- USB cable
- Hand strap
- Lanyard
- Stylus

### Inserting the Battery Into the Receiver

Follow the instructions below:

- Turn over the receiver.
- Using the top end of the stylus (or a coin), rotate the two screws to open the trap door: turn the left-hand one clockwise by a quarter turn, and the right-hand one anticlockwise, also by a quarter turn.

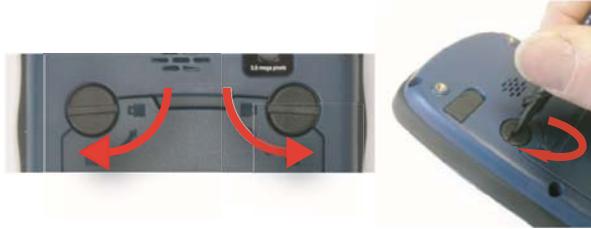

- Pull the trap door open.
- Insert the battery as shown. Orientate the battery so that its electric contacts can come into contact with those at the bottom of the battery compartment. Insert the upper part of the battery first, as shown, then push the battery in.



- Put the trap door back into place by first inserting the two lugs located at the bottom of the trap door.

- Then push the door against the receiver case and rotate the two screws back in their initial positions to seal the battery compartment.

## Turning the Receiver On

- Press the Power key [1] for a couple of seconds until you feel a vibration in your hand, then release the key.



Let the receiver run its boot sequence. Wait until the screen displays the Windows Embedded Hand Held

Home screen. At this stage, you may be asked to initialize the receiver (screen alignment, etc.). Just follow the instructions on the screen to complete this step.

The operating system used in the receiver is Microsoft Windows Embedded Hand Held. For more information on how to use the different applications, you can visit the Microsoft web site at:

<http://www.microsoft.com/windowsembedded/en-us/windowsembedded-handheld-6-5.aspx>

Depending on how long your product was stored in its package before being shipped to you, the remaining power in the battery may be too low to allow the receiver to operate for your entire working session. For this reason, the first thing to do is to check the battery charge status:

- Tap on the title bar at the top of the screen. The Quick Toolbar appears just underneath.
- Tap on the Battery icon. This opens the **Power** window and simultaneously closes the Quick Toolbar.

The **Power** window shows the status of the battery (see also Internal Battery on page 13) . If the remaining power is greater than 50%, then you can use the receiver without having to charge the battery first (with 50% of remaining charge, you can use the receiver for several hours). Skip the

next section and go directly to *Adjusting Backlight Level and Idle Time on page 4*.

English

- If it less, Spectra Precision recommends you first charge the battery as explained in *Using the AC Adapter to Charge the Battery on page 3*.

## Using the AC Adapter to Charge the Battery

Follow the instructions below.


- Prepare the AC adapter:
  - Remove the protective cover [1] by pushing the button

then sliding the cover forward.



- Choose the plug that fits your country's AC outlet standard (see [2]) and slide it into the AC adapter [3].  
( A "click" must be heard when fully inserted. )

- Take the USB cable provided [4]. Connect the end fitted with a standard USB connector to the AC adapter. Connect the other end (fitted with a mini-USB connector) to the bottom side of the receiver (open the flap [5] first).

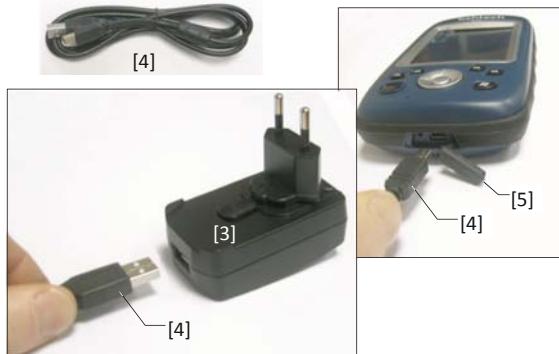


- Connect the AC adapter to an electric outlet. After about 4 seconds, the receiver screen lights up. An icon shows up indicating that the battery is being charged. The screen is then turned back off after about 10 seconds. After this time, battery charging will continue at the same rate until the battery is fully charged (charging time: 4 hours max.).
- To read the battery charging status using the Quick Toolbar, refer to the instructions in *Turning the Receiver On on page 2* (see also *Using the Quick Toolbar on page 4*).

### Using the Quick Toolbar

Windows offers a quick toolbar allowing you to quickly access frequently used functions (zoom, Bluetooth, WiFi, phone, sound volume, battery power and clock).

- Tap on the title bar at the top of the screen. The quick toolbar appears just underneath.

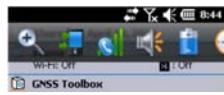

simultaneously closes the quick toolbar.

The zoom function enlarges the screen content, which means only part of the screen is shown at a time, and so you should drag the stylus over the screen to scroll through the whole display.

To return to 1:1 zoom, tap on the title bar again to re-open the quick toolbar, then tap on the zoom function again.

## Switching the Receiver Manually to Suspend Mode

Switching the receiver to Suspend mode is the right thing to do when you need to make a short pause in your work and you want to save the operating time of your battery. You should not however switch the receiver to Suspend mode when it is collecting raw data.

In Suspend mode, the receiver is idle, using the minimum of energy required to save the use context.

To switch to Suspend mode, just press briefly on the Power button [1]. The receiver screen is turned off instantly.

To wake up the receiver, just press briefly the same button again. This will instantly switch the screen back on and restore the use context in which the receiver was before entering the Suspend mode.

**Backlight Level:** The screen backlight may be adjusted to match the ambient light for optimized visibility. You don't need the same level of screen backlight in dark areas than in

## Adjusting Backlight Level and Idle Time

- Run the desired function by just tapping on the corresponding

icon. This runs the requested function and hot sun.

**Backlight Idle Time:** One way of saving the battery is to avoid those periods of time during which the screen backlight is unnecessarily on. As the receiver automatically counts the time during which neither the keypad nor the touch screen is active, you can set the receiver to turn off the backlight automatically after a certain idle time.

Follow the instructions below to set these two parameters:

- Press the Windows key and tap successively on **Settings**, **System** and **Backlight**.
- Tap on the **Battery Power** tab.
- Drag the cursor to the right or left to set the screen backlight to the desired level (between **Dark** and **Bright**). The resulting brightness is obtained when you release the cursor.
- Tick the **Turn off backlight if device...** check box and then choose the idle time before the backlight is turned off

(10 seconds, 30 seconds or 1 to 5 minutes)

Note that the backlight level and idle time can be set to different values for when the receiver is operated from an external power source instead of its internal battery. You can make these settings after tapping on the **External Power** tab.

- Tap **OK** to save all your changes and return to the previous screen.

Another way of saving the battery is to allow the receiver to switch automatically to Suspend mode after a certain period of inactivity.

### Setting Time & Date

- Press the Windows key and tap successively on **Settings**, **System** and **Power**.
- Tap on the **Advanced** tab. This tab allows you to ask for the receiver to switch automatically to Suspend mode if it stays idle for the period of time you choose. You may choose a different setting depending on whether the receiver is powered from the internal battery or from an external power source.
- Tap **OK** to save the settings and return to the previous screen.

Remember that the receiver should NOT be allowed to switch automatically to Suspend mode if it is expected to collect data for

a long period of time and you know the keyboard will be left idle during this time.

- Press the Windows key and tap successively on **Settings**, and **Clock & Alarms**.
- On the **Time** tab, select your time zone and then enter the local date and time.
- Tap **OK** to save your settings.

## Regional Settings



It's a good idea to customize your receiver so that it complies with a number of local preferences, such as country's currency, decimal point representation, time and date formats, etc.

- Press the Windows key and tap successively on **Settings**, **System** and **Regional Settings**.
- On the **Region** tab, select your country.
- Use the other tabs to set your local settings:
  - Number format
  - Currency choice
  - Time and date formats
- Tap **OK** to save the settings and return to the Today screen.

## Locking the Screen and the Keypad

At some stage in your work, you may need to lock the receiver to make sure no user intervention from the screen or keypad can affect the work in progress.

- Press the Windows key.
- In the task bar at the bottom of the screen, tap on the padlock icon (see screen below). As a result, the touch screen and keypad are made inactive.
- To unlock the touch screen and keypad, just drag the onscreen slide button either to the left or right. This will take you back to the Home screen.



## How to Hold the Receiver



Tracking satellites with your receiver requires that you use the receiver outdoor and hold it in an appropriate manner.

The receiver will have the best view of the sky when you hold it at an angle of around 45 degrees from horizontal and not too close to your body.

You can check that your receiver is tracking enough satellites by running the GNSS Toolbox, and more particularly the GNSS Status function (see *GNSS Status on page 11*). When enough satellites are tracked, you can start using your receiver and run your application software.

## Turning the Receiver Off

After you have finished your work, turn off your receiver by holding the Power button [1] pressed until a Warning

message is displayed on the screen asking you to confirm the power-off request. Tap **Yes**. The receiver will shut down in the next couple of seconds after a duo-tone sound has been heard.

## Front View Power Key

Use the Power key [1] to turn on or off the receiver.

To turn on the receiver, press the Power key [1] until you can feel a vibration in your hand, meaning the receiver has started a power-on procedure. You can then release the key.

To turn off the receiver press the Power key [1] until a sound is heard and a warning message pops up on the screen asking you to confirm the power shutdown request. Tap **Yes** on the screen. A two-tone sound can then be heard just before the receiver shuts down.

## Windows key

The Windows key [2] is used to give immediate and unconditional access to the Windows Start menu.

## Display Screen

The display screen [3] is a 3.5-inch, VGA, 256-color (18-bit RGB) touch screen (240 x 320 pixels).

## Scroll / Enter keys

The Enter button [4] is used to accept highlighted input and initiate various functions.

The Scroll button [5] is the ring around the Enter button. It is used to move the cursor on the screen, from one data field to the next on a parameter screen, from one option to another in a menu, from one geographical location to another on a map screen.

## Function keys

The receiver is fitted with four function keys [6]. The specific function of each of them is given in the table below.



Button	Function
	The keypad includes two of these buttons, one on the right, the other on the left.

	Each of them is a convenient alternative to tapping on the functions appearing just above in the task bar at the bottom of the screen (e.g. Notifications, Contacts, Menu, Log, etc.).
	In Spectra Precision applications with a map screen displayed, use this button to zoom in. In Windows Embedded, displays the Start menu.
	In Spectra Precision applications with a map screen displayed, use this button to zoom out. In Windows Embedded, displays the Phone screen.

### **Microphone**

A microphone is used by the voice recorder. Keep the small aperture [7] clear when recording a vocal comment.

### **Built-in GPS Antenna**

The receiver incorporates a built-in GPS antenna [8]. The receiver should be held properly to optimize satellite reception.

### **Earpiece**

As a multi-media device, the receiver includes an earpiece [9], which can be used by any voice-based software application.

### **Rear View**



### **External GPS Antenna Input**

Use this input [10] to connect an external GPS antenna to the receiver. When an external antenna is connected, the built-in GPS antenna is automatically disconnected from the receiver input.

The antenna input connector is protected by a rubber flap. Spectra Precision recommends you keep the flap close when no external antenna is used.

### **Loudspeaker**

The back of the receiver incorporates a high-quality loudspeaker [11].


### **Camera Lens**

Keep the camera lens [12] clear when taking pictures or recording videos.

## Hand strap



battery directions of  
The battery and a micro SD card [19].

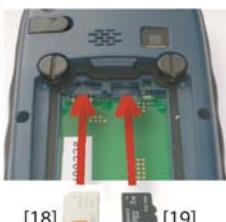

The hand strap provided may be attached to the back of the receiver through two threaded holes [13] and [14] and the two recesses located at the bottom of the receiver (see Bottom View below).

The hand strap may also accommodate the stylus, which can also be attached to the leather strip of the hand strap using the lanyard provided.

## Battery Compartment

The receiver makes use of a rechargeable Li-Ion battery pack. Loosen the quarter-turn screws [15] [16] using the stylus (or a coin) to access the compartment [17]. The two screws use opposite rotation for opening and closing the trap door.

compartment can also accommodate a SIM card [18]

When putting back the trap door, insert the bottom first, push the trap door against the back of the receiver and seal the battery compartment by fully rotating the two screws in the opposite direction.

Information on battery charging: see *Internal Battery on page 13*.

## Bottom View



The bottom view provides access to a standard mini-USB connector [20]. You first need to open the protective rubber flap [21], using a finger nail or a sharp and rigid tip to pull the flap from its left-hand side.

The mini-USB port is used to connect the receiver to the AC adapter, for a fast battery charging cycle, or to a computer for file transfer through Microsoft ActiveSync. In both cases, you need to use the USB cable provided.

Information on battery charging: see *Internal Battery on page 13*.

The bottom part of the receiver also accommodates a Reset button [22], which is accessible after you have opened the rubber flap [21]. Should the receiver get stuck, you can press that button using a sharp tool to restart the receiver.

Warning! Never use the Reset button while the receiver is operating normally or you would definitely lose all the data you are collecting.

The bottom view also shows the two recesses [23] in which the hand strap [24] can be anchored.

## GNSS Toolbox



**GNSS Toolbox** is used to control and monitor important functions in your receiver. These are listed and detailed below.

- **GNSS Settings**: Constellations and frequencies used in the receiver.
- **GNSS Status**: Views GNSS reception monitoring screens.
- **Reset**: Resets the receiver.
- **About**: Provides the software version of GNSS Toolbox.

### GNSS Settings



- Open the **GNSS Toolbox** and tap on **GNSS Settings**. This opens a new window where you can make the following settings:
  - **Tracking mode**: Only the “GPS L1” option is available, which means the receiver can only operate from the L1 signal of the GPS constellation.
  - **Use SBAS** check box: Check this box to enable SBAS reception, clear it otherwise.
- Tap **OK** to confirm your choices and return to the GNSS Toolbox window.

### GNSS Status

- Open the **GNSS Toolbox** and tap on **GNSS Status**.



The default **Position** tab shows the latitude, longitude and altitude of the current position, as computed by the receiver, as well the number of satellites used and the current PDOP value.

If SBAS is used, the screen also shows the position status (SDGPS).

The unit used to express the current altitude (meters or feet) depends on the region (language and country) you selected in **Start, Settings, System, Regional Settings**.

- The **Satellites** tab displays a polar diagram showing the locations in the sky of the tracked satellites. Different colors are used to display the numbers of the visible satellites:

- Yellow characters: GPS satellites used
- Grey characters: Visible SBAS satellites. Also rejected GPS satellites, because unhealthy or under the elevation mask.

- The **Signal** tab shows the signal level for each of the tracked satellites:

- Dark blue bars for all GPS satellites used
- Red bars for all SBAS satellites used
- Grey bars for all tracked, but not used, GPS satellites

GPS satellites are numbered from 1 to 32 and SBAS satellites from 120 to 138.

**Reset** • Open the **GNSS Toolbox** and tap on **Reset**. A message then

asks you if you want to reset the receiver now. Use this option only if you think the receiver is not working properly.

Using this function results in a *cold reset* of the receiver. Through a cold reset, all the GNSS settings, including almanac data, are cleared making it necessary for you to restore each of them manually. A few minutes are needed after a cold reset before the receiver is back to work.

Using the Reset function is recommended when only the GNSS Toolbox (and not other field software) is running on the platform.

**About** This function provides the software version of GNSS Toolbox, followed by the Spectra Precision legal line.

**Power Modes**

The receiver has three power modes:

- *Shutdown*: The receiver is off.
- *On*: The receiver is fully powered
- *Suspend*: In this mode, the screen content and backlight are turned off to save power and the use context is saved. When quitting the Suspend mode, the use context is restored instantly. Typically this mode is used in the field to allow a quick restart after a pause.

The receiver can also enter the Suspend mode automatically in case of a very low battery after dismissing successively the two “low battery” alerts, or after an idle time that you can set through a press on the Windows key, and selecting **Settings, Power (Advanced tab)** (See also *Power Management on page 5*).


**Suspend Mode**

The receiver can be switched to Suspend mode. This is a power saving mode typically used in the field to allow a quick restart after a pause. In this mode, only some parts of the receiver are powered for the sole purpose of restoring the context of use in which the receiver was when it was switched to Suspend mode. The receiver should NOT however be used in that mode while collecting raw data.

The receiver can also enter the Suspend mode automatically in case of a very low battery after dismissing successively the two “low battery” alerts, or after an idle time that you can set through a press on the Windows key, then **Settings, System and Power (Advanced tab)** (See also *Power Management on page 5*). When collecting raw data, please clear this option so that the receiver can never enter this mode.

**Internal Battery****Monitoring the Battery Discharging Status**

The receiver will continuously inform you of the current status of the battery through an icon located in the Windows Embedded title bar (on the right). The different shapes of this icon indicate the current discharging status, as listed below:

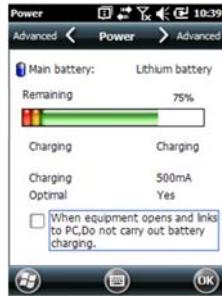

Icon	Meaning
	Battery high: Remaining power ranges between approximately 75 and 100% of full charge.
	Approx. 50-75% remaining
	Approx 25-50% remaining
	Approx. 10-25% remaining
	Battery low: Remaining power is less than 5%.
	Receiver powered from external source (AC adapter, computer via USB line)

English

At any time you can read more in detail the battery status by pressing the Windows key and then selecting **Settings, System, Power** (see screen example).

When the remaining power drops below 10% of full charge (orange area), you will see the message "Main Battery Low" prompting you to replace or recharge the battery. Tap **Dismiss** in the task bar. You should consider replacing the battery for a fresh one but you may still continue to use the receiver for a while.

With only about 5% of remaining power (red area), a new message will pop up: "Main Battery Very Low". Tap **Dismiss** in the task bar to continue using the receiver. Spectra Precision however recommends that you turn off the receiver and replace the battery.

With only about 1% of remaining power, the receiver will switch off, meaning the battery is no longer charged enough to ensure proper operation of the receiver. Spectra Precision recommends you do not go that far in the use of the internal battery as there is a risk of losing part of your field data.

In case of regularly, batteries.



long-time storage, remember Li-Ion batteries must always be recharged about every six months. This is to prevent irreversible damage of the

### Battery Charging Scenarios

The battery can be charged in two different ways:

- From the power line, through the AC adapter and USB cable provided. This configuration offers fast battery charging, with around 700 mA of DC charging current.
- From an office computer connected to the receiver through a USB line, using the same USB cable provided. According to the USB 2.0 specification, the DC current delivered will be limited to 500 mA, which means it will take longer to charge the battery from a computer's USB port than from the AC adapter.

You can ask the receiver not to allow the charging of the battery through the USB port when this port is connected to a computer. To do this:

- Press the Windows key
- Select **Settings, System, Power**
- Clear the option: **When equipment opens and links to PC, do not carry out battery charging**
- Tap **OK**.

### Extracting the Battery from the Compartment

Lever the battery out of its compartment using the stylus or a flat screwdriver. (The flat end of the stylus is inserted in the groove located on the bottom side of the battery, as shown below.)



Likewise, extracting the SIM card or micro SD card from the battery compartment requires the use of a spiky-tipped tool to pull the card out of its slot.

### USB Connection

By default, the mini-USB connector is set to allow a connection to a computer using Active Sync. You just need to connect the USB cable provided between the receiver's miniUSB connector and any computer fitted with a standard USB connector. Provided Microsoft ActiveSync has been installed on the computer, a serial connection will be initiated automatically when you plug the cable. You can then use this connection to exchange files, explore the receiver's file system, install new applications directly from the computer, etc.

If you want to make a different use of the receiver's USB output, press the Windows key, go to **Settings>Connections> USB to PC** and change the settings accordingly.

## Wireless Communication



The receiver incorporates three wireless communication devices:

- Bluetooth
- WiFi
- GSM/GPRS Modem

The three devices can be controlled from the Wireless Manager icon (press the Windows button and go to **Settings>Connections>Wireless Manager**).

### Bluetooth

Follow the procedure below to turn on Bluetooth and make a connection with another system, which is supposed to have its Bluetooth been turned on and made visible to others.

- Press the Windows key and tap successively on **Settings** and **Bluetooth**.
- Tap on the **Mode** tab.
- Activate **Turn on Bluetooth**.
- Tap on the **Devices** tab.
- Tap on **Add new device**. Wait until the external system is found
- Tap on the name of this system, tap **Next**, enter a passcode (optional) and then choose the Bluetooth service available on this system that you would like to use now.
- Complete the connection setup as instructed.

Being only a Bluetooth client, the receiver will not offer any Bluetooth services to external systems.

### WiFi

The integrated Wi-Fi device allows you to access the Internet through a wireless connection.

- Press the Windows key and tap successively on **Settings**, **Connections** and **Wi-Fi**.
- Tap on the **Wireless** tab.

- Tap on **Search for Networks** to turn on Wi-Fi and start searching for the networks that are available from your location.
- Choose one, then follow the instructions until you are given access to the Internet.

### **GSM/GPRS Module**

Provided the appropriate SIM card has previously been inserted in the battery compartment, the GSM/GPRS modem allows you to:

- Make a phone call (modem used in GSM mode)
- Establish an Internet connection (modem used in GPRS mode).

#### **Motion Sensor**

#### **Enabling Automatic Screen Rotation**

By default, the receiver screen is used in portrait format. Rotating the receiver by 90° will not cause the screen format to switch to landscape format.

Operating the receiver this way is usually what you expect from your receiver because you need to keep it always in portrait position, with an angle of 45° for best satellite reception.

You can however ask the receiver to rotate the display automatically, depending on the position you give to the receiver.

- Press the Windows key and tap successively on **Settings**, **System** and **Motion Sensor**.
- Tap on the **switch** tab
- Enable the **Screen rotation** function. Using the **Sensitivity** cursor, you can also adjust the sensitivity with which the receiver will react to motion.
- Tap **OK** to validate all your settings.

#### **Disabling Automatic Screen Rotation**

Just before disabling the **Screen rotation** function (see above), make sure the current screen format (portrait or landscape) is the one you wish to use. If it's not, first rotate the receiver accordingly so you get this screen format, and then you can disable the **Screen rotation** function.

#### **Scrolling through Your Picture Gallery**

By setting the motion sensor as a switch, you can easily go through all your pictures or audio files, just using the hand that holds the receiver, leaving your other hand free.

After you have opened the MyPictures folder for example and tapped on the first picture to view it, you just need to shake the receiver briefly to view the next one, and so forth until all the pictures in the folder have been viewed.

To set the motion sensor as a switch:


- Press the Windows key and tap successively on **Settings**, **System** and **Motion Sensor**.
- Tap on the **switch** tab
- Enable the **Switch songs or pictures** function and tap **OK**.

### Fall Alarm

You may set the receiver to produce a sound alarm when it falls down:

- Press the Windows key and tap successively on **Settings**, **System** and **Motion Sensor**.
- Tap on the **Fall Alarm** tab
- Enable the **Fall Alarm** function and tap **OK**.

## Using the Camera Taking a Picture

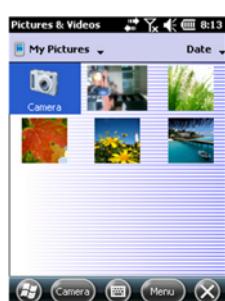

- Press the Windows key and tap **Pictures & Videos**. This opens the “My Pictures” folder in which you can see the list of existing images and videos. The first item in the list is the Camera, the tool you will now be using to take pictures. The light-blue background means the camera is currently selected.
- Tap **Camera**, or press the Enter button, to turn on the camera. Wait a couple of seconds until the center of the window displays the viewfinder of the camera.
- Now use the receiver as a camera. Look at the viewfinder to frame the picture you want to take.
- When you are ready, stay as still as possible and press the Enter button to take the picture. When you hear the click of the camera, stay still for another two seconds until the screen displays the picture you have just taken.
- Tap **OK** to come back to the viewfinder, then tap anywhere on the screen to re-activate the task bar at the bottom of the screen.
- Tap **OK** to turn off the camera and close the window. The picture you have taken is now visible in the “My Pictures” folder.



### Renaming a Picture

- With the “My Pictures” folder open, tap on the desired picture. This opens a new window showing the picture.
- Tap **Menu** and **Properties**.
- Rename the file and tap **OK**.

### Rotating a Picture

- With the “My Pictures” folder open, tap on the desired picture (or tap on **View** in the task bar). This opens a new window showing the picture.
- Tap **Menu** and **Edit**.
- Tap **Rotate** in the task bar. This rotates the image 90° clockwise. Repeat the operation until the image has the right orientation.
- Tap **OK** to save the image.

### Cropping a Picture

- With the “My Pictures” folder open, tap on the desired picture (or tap on **View** in the task bar). This opens a new window showing the picture.
- Tap **Menu** and **Edit**.
- Tap **Menu** again and select **Crop**.
- As instructed, drag a rectangle on the picture representing what the final image should be like, then tap inside the rectangle to complete the crop operation. If you’re not happy with the result, you can always come back to the initial image by selecting **Menu** and **Revert to Saved**.
- Tap **OK** to save the picture.

### Auto-correcting a Picture

- With the “My Pictures” folder open, tap on the desired picture (or tap on **View** in the task bar). This opens a new window showing the picture.
- Tap **Menu** and **Edit**.
- Tap **Menu** again and select **Auto Correct**. This refines the picture’s brightness, contrast and colors.
- Tap **OK** to save the picture.

### Deleting a Picture

- With the “My Pictures” folder open, tap and hold the desired picture.

- Select **Delete** in the context-sensitive menu.
- Tap **Yes** to confirm file deletion.

### Changing Picture Settings

- Press the Windows key and tap **Pictures & Videos**. This opens the “My Pictures” folder.
- Tap **Camera** to turn on the camera. Wait a couple of seconds until the center of the window displays the viewfinder of the camera.
- Tap on the screen to re-activate the task bar, tap **Menu**, then **Resolution**. Choose one of the dimensions available (expressed in pixels). The resolution setting impacts the quality and size of the picture you take.
- Tap **Menu**, then **Mode**. Choose between **Normal** (one picture taken), **Burst** (five pictures taken at a one-second interval once you have pressed Enter) and **Timer** (picture taken 5 seconds after pressing Enter).

### Making a Video Setting the Duration of a Video Film



- Press the Windows key and tap **Pictures & Videos**. This opens the “My Pictures” folder in which you can see the list of existing images and videos.
- Tap **Menu, Tools** and then **Options**.
- Tap on the **Video** tab.
- The audio track may, or may not be included in your video files. Clear or check the **Include Audio..** option as needed.
- Tap within the **Time limit for videos**. field and select one of the options below:
  - **No limit**: Choose this option to be able to film a video over an unlimited period of time.
  - **15 seconds**: Choose this option to limit the duration of every video you'll film to 15 seconds.
  - **30 seconds**: Choose this option to limit the duration of every video you'll film to 30 seconds.
- Tap **OK** to accept the changes and close the Options window.

### Starting a Video

- Tap **Camera** to turn on the camera. Wait a couple of seconds until the center of the window displays the viewfinder of the camera.
- Tap anywhere on the screen to make the task bar visible at the bottom of the screen

- When you are ready to film, tap **Menu** and then **Video**.

- Press the Enter button to start filming.

### Ending a Video

- Depending on the video settings, the video camera will stop filming as explained below:
  - With a preset time limit (15 or 30 seconds), the video camera will stop filming automatically and close the video file after this time has elapsed. A down counter under the viewfinder will keep you informed of the remaining time as you film.
  - With no time limit, the video camera will film indefinitely. A counter under the viewfinder will tell you the current duration of the video. To stop filming and close the video file, press the Enter button again.
- At the end of the video shooting, the viewfinder freezes while the end of the video is being processed.
- Again, tap anywhere on the screen to make the task bar visible at the bottom of the screen and then tap **OK** to turn off the camera and close the window. The video file you have created is now listed in the “My Pictures” folder.

### Playing Back a Video

- With the “My Pictures” folder open, tap on the desired video file. This will automatically launch the Windows Media player.
- Tap  to close Windows Media player and return to the “My Pictures” folder.

### Renaming a Video

- With the “My Pictures” folder open, select the desired video file using the Scroll button.
- Tap **Menu**, **Tools** and then **Properties**.
- Rename the file and tap **OK**.

### Deleting a Video

- With the “My Pictures” folder open, tap and hold the desired video file.
- Select **Delete** in the context-sensitive menu.
- Tap **Yes** to confirm file deletion.

- Press on the Windows key.
- Scroll down until you see the **Compass** icon.
- Tap on the **Compass** icon to open the Compass utility.
- Tap on the **Calibration** tab.
- Put the receiver down on a table to give it a horizontal position (see picture [1] below).
- Tap on the **Start** button located in the task bar to start the calibration process.

First horizontal calibration is ready to go.

- Slowly rotate the receiver by a couple of turns while keeping it horizontal (see picture [1] below).

Wait until the receiver indicates that horizontal calibration is complete and prompts you to start vertical calibration ("Ready" displayed underneath the Vertical calibration button).

- Take the receiver in your hands (see picture [2] below), put it in vertical position then slowly rotate it by a couple of turns, in the vertical plane. Then gently put it back down on the table.
- Wait until calibration is complete before proceeding.



[1]

[2]

## Platform Specifications

<b>GNSS</b>	20 channels
<b>Characteristics</b>	<ul style="list-style-type: none"> <li>GPS L1 C/A</li> <li>SBAS: WAAS/EGNOS/MSAS</li> <li>External antenna connector</li> <li>NMEA Output</li> </ul>
<b>Accuracy</b>	All specified values are horizontal RMS, handheld accuracy
<b>Specifications</b>	performance achieved in good conditions (open sky) with PDOP < 3 and more than seven satellites in view. <ul style="list-style-type: none"> <li>Real-time SBAS: &lt; 2 m typical</li> <li>Post-processed: &lt; 50 cm typical</li> </ul>
<b>Processor</b>	<ul style="list-style-type: none"> <li>ARM9™</li> <li>Clock frequency: 600 MHz</li> </ul>
<b>Operating System</b>	<ul style="list-style-type: none"> <li>Microsoft Windows Embedded Hand Held.</li> <li>Installed language at delivery: English, French, Spanish, German, Portuguese, Italian, Simplified &amp; Traditional Chinese, Greek, Japanese or Korean. Installed OS language cannot be changed once the product has been shipped in a given language.</li> <li>Software package includes: <ul style="list-style-type: none"> <li>Internet Explorer®</li> <li>Microsoft Office Mobile</li> <li>ActiveSync®</li> <li>Transcriber (handwriting recognition)</li> </ul> </li> </ul>
<b>Communication</b>	<p>Cellular:</p> <ul style="list-style-type: none"> <li>Built-in cell modem</li> <li>Bands: Depending on MobileMapper 20 P/N and detected network: <ul style="list-style-type: none"> <li>- P/N 802168-00 (EU): 3G WCDMA: 900 and 2100 MHz 2G GSM: 850, 900 and 1800 MHz</li> <li>- P/N 802168-10 (US): 3G WCDMA: 850 and 900 MHz 2G GSM: 850, 900, 1800 and 1900 MHz</li> </ul> </li> </ul>
	Bluetooth: 2.1 with EDR
	WiFi: Integrated
	Interface: USB

<b>Physical Characteristics</b>	<ul style="list-style-type: none"> <li>• Receiver size: 169 x 88 x 25 mm</li> <li>• Receiver weight, alone: 310 g</li> <li>• Receiver weight (batteries included): 380 g</li> </ul>
<b>User Interface</b>	<p>Keyboard:</p> <ul style="list-style-type: none"> <li>• Alphanumeric virtual keyboard</li> <li>• Four-direction Scroll and Enter button, Zoom In/Out keys + context-sensitive keys</li> <li>• Illuminated keyboard with touch screen</li> <li>• Virtual keyboard</li> </ul> <p>Display:</p> <ul style="list-style-type: none"> <li>• Color TFT, VGA, high-resolution display, sunlight readable, with touch screen, LED backlight</li> <li>• Size: 3.5"</li> <li>• Colors: 262 k</li> </ul>
<b>Memory</b>	<ul style="list-style-type: none"> <li>• 256-MB SDRAM</li> <li>• 512-MB NAND Flash (non-volatile)</li> <li>• Micro SDHC™ memory card (up to 32 GB)</li> </ul>
<b>Environmental Characteristics</b>	<ul style="list-style-type: none"> <li>• Operating temperature: -10° to +60°C (14 to 140°F)</li> <li>• Storage temperature: -30° to +70°C (-13 to 158°F)</li> <li>• Humidity: 95% non condensing</li> <li>• Waterproofness: IP54</li> <li>• Free drop: 1.2 m to concrete</li> </ul>
<b>Power Requirements</b>	<ul style="list-style-type: none"> <li>• Battery life: &gt; 20 hours @ 20 °C, with GPS on, Bluetooth and WiFi disabled, screen backlight used at minimum level 20% of the time.</li> <li>• Charging time: 4 hours</li> <li>• Removable battery</li> </ul>
<b>Multimedia &amp; Sensors</b>	<ul style="list-style-type: none"> <li>• 3- Megapixel camera</li> <li>• E-Compass</li> <li>• G-Sensor</li> <li>• Speaker</li> <li>• Microphone</li> </ul>
<b>Software Options</b>	<ul style="list-style-type: none"> <li>• Spectra Precision MobileMapper Field and Office software</li> </ul>

- Post-processing
- ESRI ArcPad software bundle (USA only)

**Standard**

- Stylus

**Accessories**

- Hand strap
- Universal AC adapter
- USB cable.

# Index

## A

Accessories 26  
Adjusting backlight 5, 6, 16, 17, 18  
Alignment 2

## B

Battery compartment 10  
Battery life 25  
Battery status icon 13  
Bluetooth 24  
Burst 20

## C

Calibration (screen) 2  
Camera 18  
Camera lens 9  
Camera settings 20

## D

Delete picture 20  
Delete video file 22  
Display screen 25

## E

Earpiece 9  
Environmental characteristics 25  
External antenna 9  
External antenna input 9

## G

GNSS reception characteristics 24  
GNSS settings 11 GNSS  
status 11  
GNSS Toolbox 11  
GPS antenna (built-in) 9

## H

Holding the receiver properly 7  
I

Inserting battery 1

## K

Keyboard 25

## L

Lock keypad 6  
Long time battery storage 14

## M

Main Battery Low 14  
Main Battery Very Low 14  
Memory 25  
Microphone 9  
Mini-USB 10  
Modem (internal) 24

## O

Opening battery door 1  
Operating system 2, 24  
OPP (Object Push Profile) 24

## P

PDOP 11  
Play back video 21  
POGO cable 14  
Power modes 14  
Processor 24

## R

Rename picture 19  
Rename video file 21  
Reset 12 Resolution  
20

## S

SBAS 11 Screen alignment 2  
Sensors 25  
Standby 21  
Start shooting video 21 Stop  
shooting video 21  
Suspend mode 4, 13

## T

Time limit (video) 20  
Timer 20 Tracking  
mode 11

## U

Universal AC adapter 1  
USB 10  
VVideo (duration setting) 20  
VGA 8

English

## Getting Started Guide

### FCC Regulations

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - This device may not cause harmful interference
  - This device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - -Reorient or relocate the receiving antenna.
  - -Increase the separation between the equipment and receiver.
  - -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - -Consult the dealer or an experienced radio/TV technician for help.
  - -Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC RF Exposure Information and Statement:

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: MobileMapper 20 (FCC ID: NZI802168) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.285W/kg and on the body is 0.689W/kg.

### IC Notice

- This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
  - this device may not cause interference, and
  - this device must accept any interference, including interference that may cause undesired operation of the device.

### Contact Information:

#### AMERICAS

**Spectra Precision Division**  
103 68 Westmoor Drive, Suite  
Westminster, CO 80021,  
USA

[www.spectraprecision.com](http://www.spectraprecision.com)

#### EUROPE, MIDDLE EAST & AFRICA

**Spectra Precision Division**  
Rue Thomas Edison  
ZAC de la Fleuraye, BP 60433  
44474 Carquefou Cedex, FRANCE

#### ASIA-PACIFIC

**Spectra Precision Division**  
80 Marine Parade Road  
#22-06, Parkway Parade  
Singapore 449269, Singapore



©2013 Trimble Navigation Limited. All rights reserved. Spectra Precision is a Division of Trimble Navigation Limited. Spectra Precision and the Spectra Precision logo are trademarks of Trimble Navigation Limited or its subsidiaries. P/N 6316 75-01A.