

Digianswer A/S



SOFTWARE SUITE

User's Manual

About this manual

This User's Manual will provide you with the information needed to make the most of the Bluetooth Software Suite.

If you need basic information on the Bluetooth technology, please refer to the Beginner's Guide accompanying the Bluetooth Software Suite. Both the Beginner's Guide and this User's Manual are included on the Bluetooth Software Suite CD-ROM. Also, when you have installed the Bluetooth Software Suite, the two documents are available from the Windows Start menu.

The Bluetooth Software Suite and Microsoft Windows are highly integrated. However, it is beyond the scope of this manual to explain the basics of using Windows. Therefore, if you need information on that topic, please refer to the Windows online help.

The information in this document is furnished for informational use only, is subject to change without notice, may contain errors or inaccuracies, and represents no commitment whatsoever.

Rev. TR 1.0 00-09-15

CAUTION

FCC Radio-Frequency Exposure Statement

This equipment generates and radiates radio-frequency energy. In order to comply with FCC radio-frequency radiation exposure guidelines for an uncontrolled environment, this equipment has to be installed and operated while maintaining a minimum body to antenna distance of 20 cm.

Users are not permitted to make changes or modify the system in any way.

Contents

About this manual 2

CAUTION 2

Getting started 5

Bluetooth Neighborhood 5

Introduction 5

Opening Bluetooth Neighborhood 6

Bluetooth Neighborhood window 7

Profiles and services 8

List view 9

Basic functions 11

Naming your local device 11

Device discovery 12

Service discovery 13

Link establishment 14

Disconnecting 15

Status information 15

View details 16

Device folders 18

Online help 19

Local services 20

Object transfer 20

Making default business card available 20

Business card transfer 24

Sending objects directly from MS Outlook 25

Receiving objects 25

Creating objects in the Object Editor 26

File transfer 28

Audio 30

Bluetooth COM ports 32

General information 32

Bluetooth COM port settings 33

Bluetooth COM port link establishment 36

LAN 36

DUN 37

FAX 38

Network 39

Setting up networks 39

Network link establishment 40

Local device settings 40

Local profile properties 40

General information 40

Enabling/disabling profile 41

Object Push Settings 42

Object Push - Security 43

File Transfer Settings 44

Audio settings 45

Bluetooth Speaker Phone Setup Wizard 46

LAN Access settings 48

Dial-up Networking settings 49

Bluetooth Neighborhood properties 50

General 50

Settings 51

Device discovery 52

Trust 53

Security 55

Bonding 57

Bluetooth unit settings 59

Enabling/disabling Bluetooth unit 59

Indication of Bluetooth unit state 59

Index 71**Remote device settings 60****Remote device properties 60**

General 60

Trust 61

Hardware 63**LED operation 63****PC card technical specifications 63****USB adapter technical specifications 63****Diagnostics 64****Appendices 66****Appendix A: Profiles 66****Appendix B: List view icons 67****Appendix C: Regulatory statements 69**

Getting started

Bluetooth Neighborhood

Introduction

With the Bluetooth™ Software Suite, you can establish wireless links between your computer and other Bluetooth enabled devices. Without using an inch of cable, you can for example:

- Transfer sound, objects and files;
- Access the Internet by means of dial-up networking;
- Connect to local area networks;
- Send fax messages, using the fax software of your computer;
- Establish Bluetooth ad hoc networks consisting of two or more Bluetooth devices;
- Connect to serial devices (legacy applications).

Most operations are carried out from an application called the Bluetooth Neighborhood.

The basic functions of the Bluetooth Neighborhood include three steps:

1. Carrying out device discovery, i.e. finding out which remote Bluetooth devices are available within your range;
2. Carrying out service discovery, i.e. finding out which services (applications) a remote device facilitates;
3. Establishing links to remote devices.

The Bluetooth Neighborhood should be seen as an equivalent to the Network Neighborhood. The latter is an ordinary network, the Bluetooth Neighborhood is a wireless network of the Bluetooth devices within range.

Opening Bluetooth Neighborhood


The Bluetooth Neighborhood and Windows Explorer are highly integrated. Therefore, Windows Explorer is the natural place to open the Bluetooth Neighborhood: Open Windows Explorer, and select the Bluetooth Neighborhood among the folders in Windows.

Alternatively, you can open the Bluetooth Neighborhood from the shortcut placed on your desktop during the installation:



Bluetooth Neighborhood window

When you open the Bluetooth Neighborhood, the following window appears*:

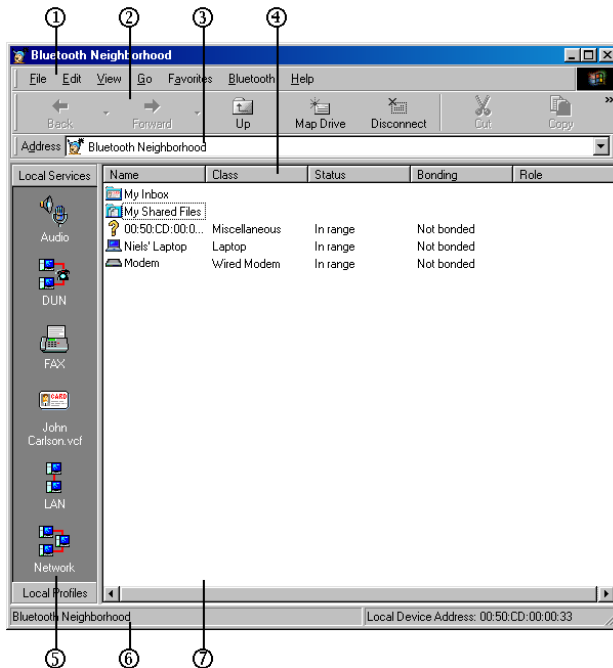

The figures 1-7 refer to the following explanations:

* The first time you open the Bluetooth Neighborhood, you will not see any remote Bluetooth devices. To discover the remote devices within range, press **F5**. For information on the contents of the list view, see the section "List view". Note also that as the setup of the window depends on your Windows Explorer setup, the components in the above example may not be exactly the ones shown on your screen.

- Menu bar:** Contains standard Windows pull-down menus and a Bluetooth menu. We will deal with the Bluetooth menu in later sections. Furthermore, from the menu bar, you can access the Bluetooth Software Suite online help.
- Tool bar:** Contains standard Windows tools like Back, Forward, View, etc. In addition, the bar contains such Bluetooth tools as Device Discovery and Disconnect.
- Address bar:** Shows which item is currently selected. Also, from this bar you can browse in Windows Explorer.
- View details:** Appears when on the View menu you have selected the item View Details. You will see various information on the items in the list view. For more information, see the section "View details".
- Local Profiles/Local Services bar:** Shows the local profiles or the local services that your Bluetooth device supports. For more information, see the section "Profiles and services".
- Status bar:** Provides information on the item currently selected in the Bluetooth Neighborhood.
- List view:** Shows you the contents of the folder, remote device, etc. currently selected. See the section "List view".

The setup of the Bluetooth Neighborhood window depends on your Windows Explorer setup. Thus, the above example does not show all the standard Windows components that may be added to the window.

Profiles and services

Interoperability depends on profiles


Any Bluetooth device has at least one profile, i.e. an application that you can use the device for. When two devices are to interoperate, i.e. communicate with each other, they must have a shared profile. If, for instance, you want to transfer a file from one Bluetooth enabled computer to another, both computers must support the profile OBEX File Transfer.

The Bluetooth Software Suite supports a number of profiles, called your Local Profiles. You will find these on the Local Profiles bar.

Services are used for link establishment

While the function of the Local Profiles bar is to display the profiles your device supports, the Local Services bar is what you will actually be *using* when operating the Bluetooth Neighborhood. Facilitated by a profile, each of the services represents a specific operation that your device can carry out. An example of a service is audio, i.e. sound transfer, which is facilitated by the profile Generic Audio. Sound transfer can take place between your computer and other Bluetooth devices supporting the Generic Audio profile. In later sections, we will show you how to make use of each of the services that your device features.

For the Local Profiles bar, click **Local Profiles**.
For the Local Services bar, click **Local Services**.

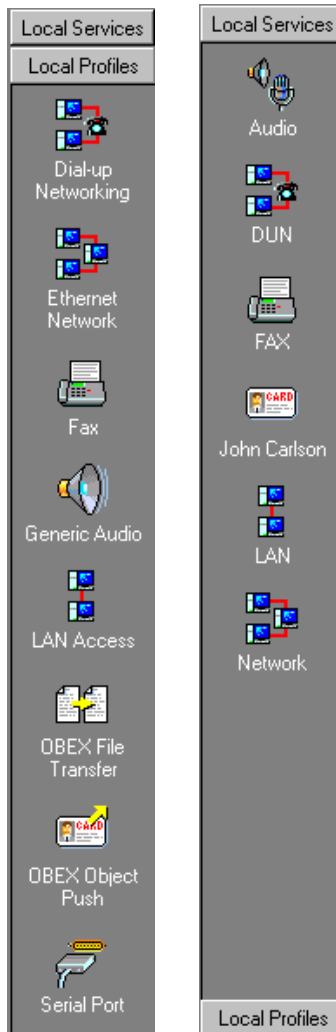

For a complete list of the profiles that your Bluetooth device supports, including which services each profile facilitates, see “Appendix A: Profiles”.

List view

The list view in the main window contains three elements: My Inbox, My Shared Files, and a list of discovered remote devices. When an item is selected in the Bluetooth Neighborhood, for instance My Inbox or a remote device, the list view will display the contents of that item. (In this connection, the contents of a remote device are the services it supports).

My Inbox:

This is where your device receives objects like electronic business cards, messages, notes, and calendar objects. My Inbox is a folder of files like any other Windows folder, and its contents can be copied, renamed, dragged and dropped etc. (For more information, see the section “Receiving objects”).



My Shared Files:

In this folder, you can make files available to remote users. When a remote user has carried out service discovery on your device, he will be able to open your folder My Shared Files and the files you have placed in it. Also, remote users can place files in your folder My Shared Files and – if allowed – delete files (see “File Transfer Settings” for information on the security aspects of receiving files). Finally, if a remote device sends a file to your device, it is received in My Shared Files. Like My Inbox, you can manipulate My Shared Files like any Windows folder. For more information, see the section “File transfer”.



Remote devices or services:

The devices shown in the main window list view are the remote Bluetooth devices that your device has discovered during *device discovery*. The icons show what kind of device each remote device is (device class), like the desktop and laptop computer icons in the following example:



A question mark is used to show that the device class is unknown:



Furthermore, it is indicated by the icons whether or not a device is within range as follows:



Within range



Out of range

Note: The list view does not show your local device, only remote ones.

When service discovery has been carried out on a remote device, the list view will change to showing the services facilitated by the remote device in question. Each service is represented by an icon, for instance DUN (dial-up networking) and FAX:



Appendix B contains a complete list of the various remote device and service icons.

Finally, the icons will indicate “linked” and “bonded” as follows:



Linked



Bonded



Linked and bonded


The list view settings can be changed like other Windows list view settings; you can for instance change the size of the icons or have the elements displayed as a list. For information on settings specifically relevant in connection with the Bluetooth Software Suite, see the section “View details”.

Basic functions


Naming your local device

Before you start communicating with remote users, you should select the name that you want your device to present itself with when discovered by remote devices. To do so:


1. On the Bluetooth menu, click **Bluetooth Neighborhood Properties**:

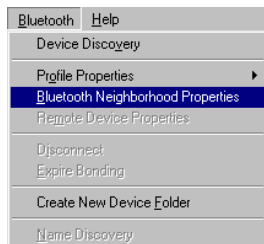

The following dialog box opens:

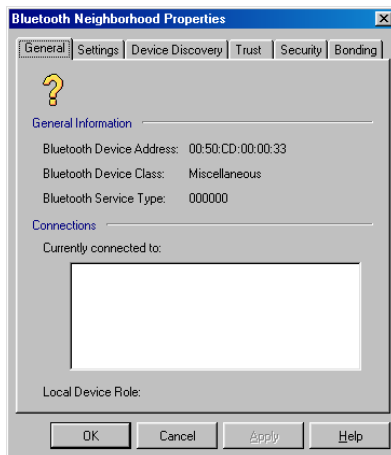

2. At the top of the dialog box, click the tab **Settings**.

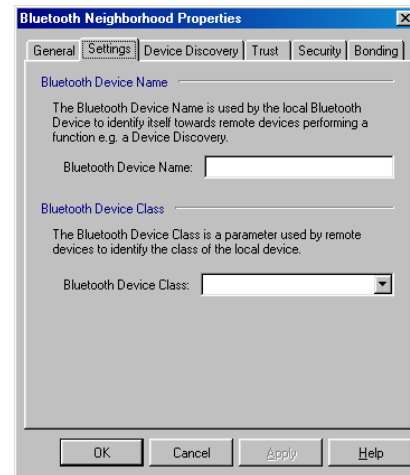

3. In the item **Bluetooth Device Name**, type the name you want your device to present itself with when discovered by devices, for instance "Adam":



4. Click **OK**.


Other Bluetooth devices discovering your device will now see it as "Adam".

For information on the item **Bluetooth Device Class** in the dialog box shown above, see the section “Bluetooth Neighborhood properties” – “Settings”.


Device discovery

Before your local device can get to communicate with a remote Bluetooth device, it needs to discover the remote devices that are available within range. This activity is called device discovery.


To carry out device discovery: On the Bluetooth menu, click **Device Discovery**.

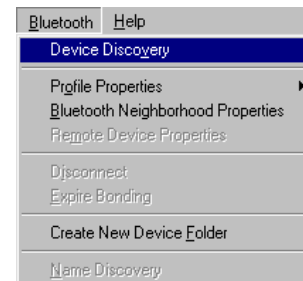

While your device is looking for remote devices, the following dialog box will show the progress of the device discovery:

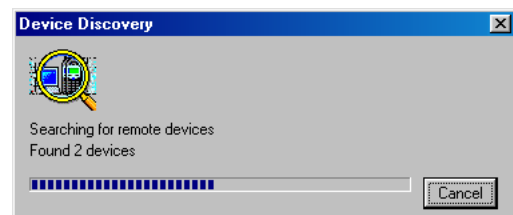

When the device discovery has been carried out, the list view will show which remote devices within range are currently available. Also, you can see the previously discovered devices that are no longer available (cf. the section "List view"):

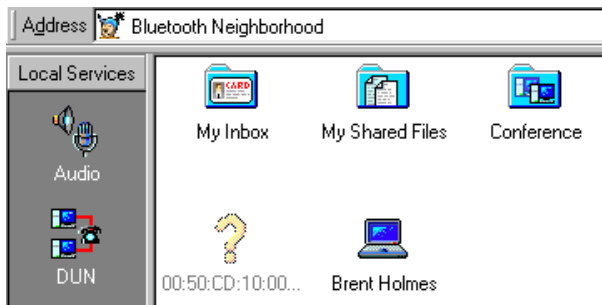

Note: The main window list view does not show your local device, only the discovered remote ones.

Alternative ways of carrying out device discovery:

- When the main window list view (with discovered devices) is displayed, press **F5**. This will update the list view.
- On the tool bar, click the tool button **Device Discovery**.

Service discovery


Before trying to establish a link to a remote device, it may be useful to know which services the device facilitates. To find out, you can carry out service discovery.

Double-click the remote device in the main window list view, for instance the one named "Bluetooth Client Device":



Bluetooth Client Device


When the service discovery has been carried out, the list view will show the services that the remote device supports:

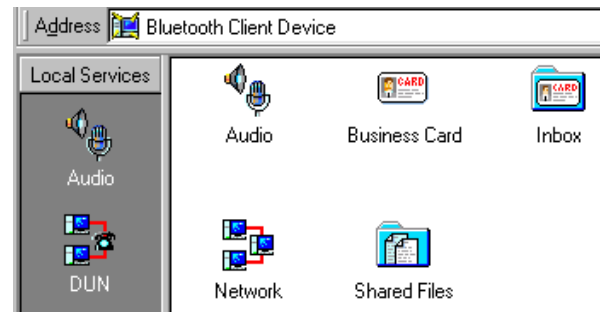

In some cases, it may not be possible to carry out service discovery. There could be a number of reasons for this: The remote user may have set up his device to reject link establishment attempts (cf. "Trust"), the distance between the two devices may be too far, etc. If service discovery (or any other activity) is not carried out successfully, a message box will let you know what went wrong.


Link establishment

When you have carried out service discovery, you can establish a link to the remote device. You can make use of any service that both your device and the remote device support. Drag the local service to the corresponding remote service:

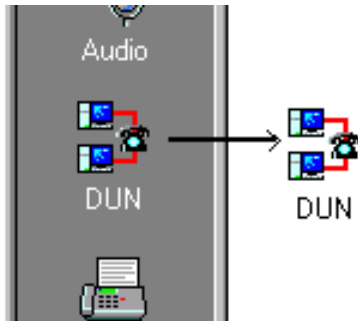

In the above example, a DUN (dial-up networking) link is being established by dragging the local DUN service to the remote DUN service. (The remote device could be a computer with access to a modem, which would allow you to access the Internet.)

Alternatively, if you know in advance that a remote device supports a particular service, you can skip service discovery. Just drag the local service to the remote device:

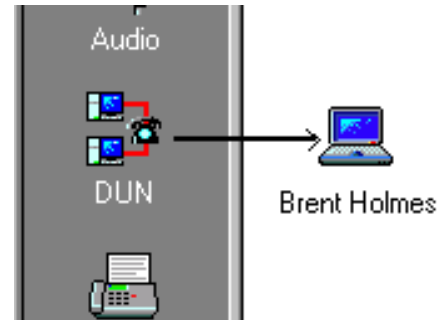

In this example, a DUN link is being established by dragging the local DUN service to the remote device.


For information on how to make use of each of the local services when a link has been established, refer to the section about the local service in question.

If link establishment is not carried out successfully: The remote user may have set up his device to reject link establishment attempts (cf. "Trust"), the distance between the two devices may be too far, etc. A message box will let you know what went wrong.

Disconnecting

To disconnect a link established to a remote device:

1. Select (click) the remote device or service that you want your device to disconnect from.
2. On the Bluetooth menu, click the item **Disconnect**:

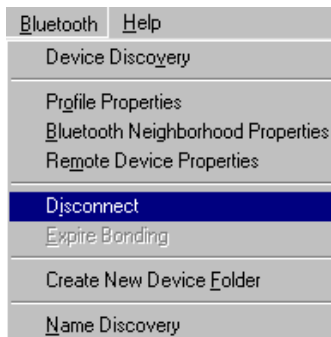


Alternatively, double-click the remote service that your local device is connected to.

The link will now be disconnected.

Status information


The Bluetooth Neighborhood status bar provides you with information on the item currently selected in the Bluetooth Neighborhood, like the name of a remote device ("Eddie's Notepad") or My Inbox. Also, message boxes keep you informed of the progress of any activity, and let you know if anything goes wrong. The following example is a message box showing that the local device is being disconnected from a remote one:

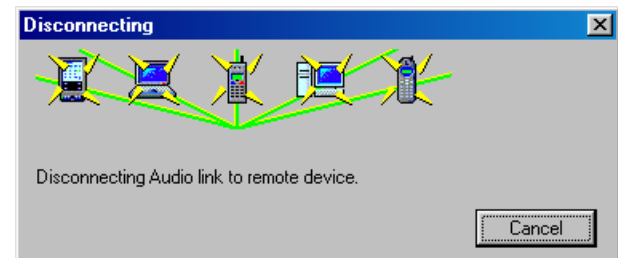

View details

One of the Windows-like features of the Bluetooth Software Suite is the possibility of changing the settings of the list view. What is of special interest, however, is the **Details** information of the list view:

1. On the menu bar, click **View**.
2. Click **Details**.

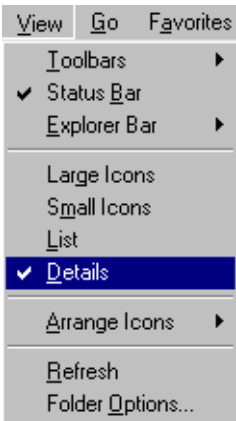

Alternatively, on the tool bar, click the **View** icon the appropriate number of times until the details are displayed:



The type of details displayed depends on the contents of the list view: remote devices, remote services, or the contents of My Inbox or My Shared Files.

Details concerning remote devices

In the main window, the list view can display information on each of the remote devices discovered:

Name	Class	Status	Bonding	Role
My Inbox				
My Shared Files				
New Folder	Device Folder			
00:50:CD:10:0...	Miscellaneous	In range	Not bonded	
Bluetooth Clie...	Desktop Workst...	Connected	Not bonded	Slave
GN Netcom VL...	Smart Phone	Last seen: 15-08...	Not bonded	
Niels' Laptop	Laptop	In range	Not bonded	

- **Name:** The name the remote user has chosen for his device to present itself with when discovered by other devices.
- **Class:** The type of the remote device (device class), for instance a desktop computer, a laptop, or a mobile phone.
- **Status:** Whether the remote device is within range or not.
- **Bonding:** Whether or not your local device and the remote one have *bonded*. See the section “Bonding”.
- **Role:** Shows if the remote device is the master or a slave in the piconet.

Details concerning remote services

When you have carried out service discovery on a remote device, the list view can display the following information on the services that the remote device supports:

Name	Description	Status
 Audio	Generic Audio	Connected
 Business Card	OBEX Object Pu...	
 Inbox	OBEX Object Pu...	
 Network	Ethernet Network	Not connected
 Shared Files	OBEX File Trans...	

- **Name:** The name of the remote service.
- **Description:** The name of the profile that supports the remote service. If your device features the same profile, interoperability between the two devices is possible.
- **Status:** Whether or not the remote service is connected to your device.

Details concerning My Inbox and My Shared Files

If you have opened My Inbox or My Shared Files, you can get the same information on each of the received objects or files that you can get in standard Windows folders:

Name	Size	Type	Modified
 Hello mate .msg	10KB	Outlook Item	26-05-2000 09:15

- **Name:** The name given to the object or file when it was saved.
- **Size:** The size of the object or folder.
- **Type:** The type of the object or folder, for instance "vCard File" like the business card in the above example.
- **Modified:** The date when the object or file was last saved.

Device folders

What is a device folder?

In the Bluetooth Neighborhood main list view, you can create device folders: folders containing a number of remote devices. You can communicate with a device folder as with any single remote device. When doing so, you will be communicating with all the devices in the folder at the same time. This feature makes it easy to distribute objects and files to more than one device at a time, establish multiple audio links to be used for conferencing, etc.

How to create a device folder:

1. Open the Bluetooth Neighborhood main window.
2. On the Bluetooth menu, click **Create New Device Folder**.


A new folder will appear in the list view:



The default name of the folder is New Folder. However, you can rename the folder like any Windows folder by selecting it, clicking **F2**, and typing the name you want.


3. Drag the remote devices you want to the device folder. This is a standard Windows drag-and-drop operation; to move a number of remote devices at the same time, hold down the CTRL key, click each remote device, and then drag the selected remote devices to the folder.

In the following example, two remote devices have been selected and are being dragged to a device folder named “Conference”.

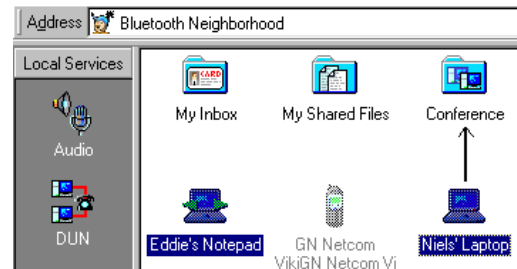

You can create as many device folders as you like, and you can include as many devices in each folder as you like.

Communicating with a device folder is done in exactly the same way as with a single remote device. In the following example, a business card is being dragged to the device folder named “Conference”:

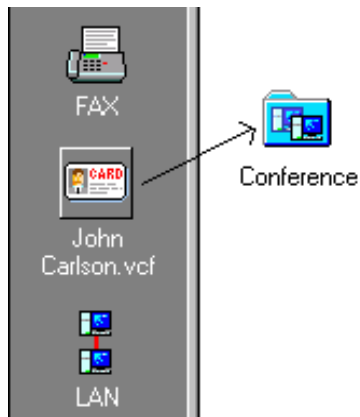


Each of the remote devices included in the device folder “Conference” will now receive the business card.

Online help

You can open the Bluetooth Software Suite online help by clicking the menu bar item **Help** or pressing the key **F1**.

Help provides you with links to the online version of this User's Manual. The design of the Help function is similar to the Windows Help:

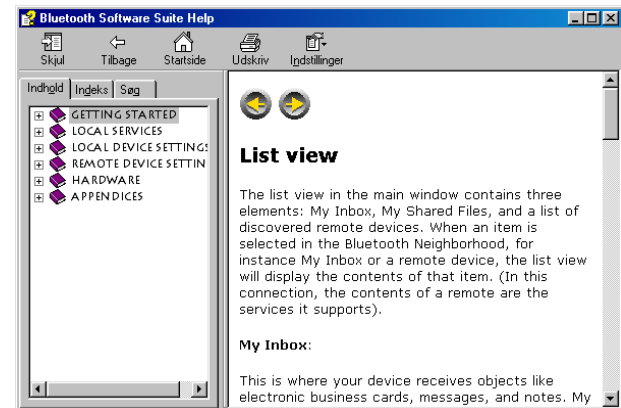

Each tab helps you locate information in a different way. To locate topics, use the **Contents** tab; to look up keywords, use the **Index** tab; and to search for text, use the **Search** tab.

Local services

Object transfer

With the Bluetooth Neighborhood, you can transfer such objects as business cards, e-mail messages, calendar objects, and notes. If Microsoft Outlook is installed on your computer, that is where you create and send objects. If Microsoft Outlook is not installed on your computer, you can use the Object Editor included in the Bluetooth Software Suite.


Making default business card available

Before your business card can be transferred to a remote device, it needs to be included as a service on your Local Services bar. This will allow remote users to *pull* your business card, i.e. transfer it to their devices. Also, you can *push* the business card yourself, i.e. transfer it to remote devices. Finally, *pulling* and *pushing* can take place in one and the same operation: *exchanging* business cards. This can be done by both you and a remote user.


If Microsoft Outlook is installed on your computer, you can create a business card in Contacts, and then drag it into the Bluetooth Neighborhood. If Microsoft Outlook is not installed, you can use the Object Editor. Both ways of making your default business card available on the Local Services bar will be explained in the following.

From Microsoft Outlook

1. Open both the Bluetooth Neighborhood and Microsoft Outlook.
2. Arrange the Bluetooth Neighborhood and Microsoft Outlook, Contacts windows so that both are visible on the screen:

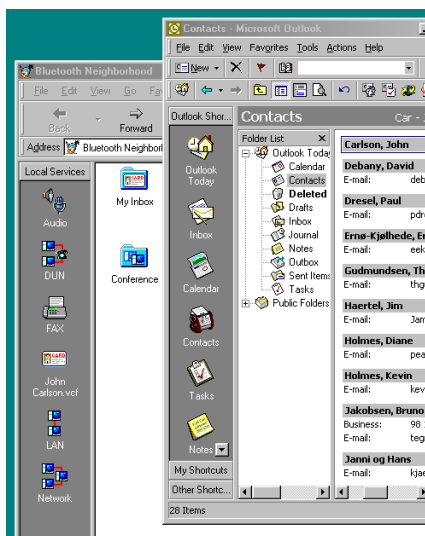

3. Drag the item containing your own contact information into the Local Services bar:

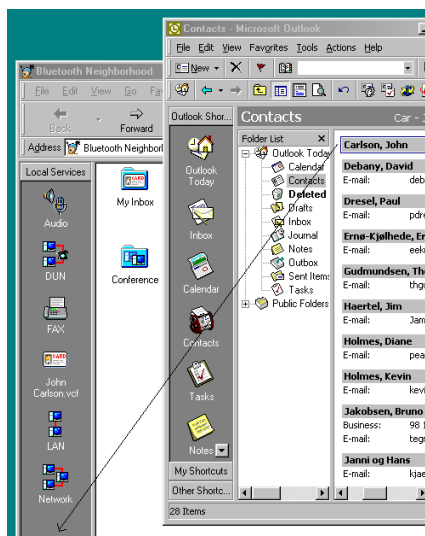

A new icon on the Local Services bar shows that your default business card is now available for transfer to remote devices:




From the Object Editor

An alternative way of registering your default business card is by means of the Object Editor. To open the Object Editor:


1. On the Bluetooth menu, point to **Profile Properties**, and click **OBEX Object Push**.




The OBEX Object Push Properties dialog box opens:

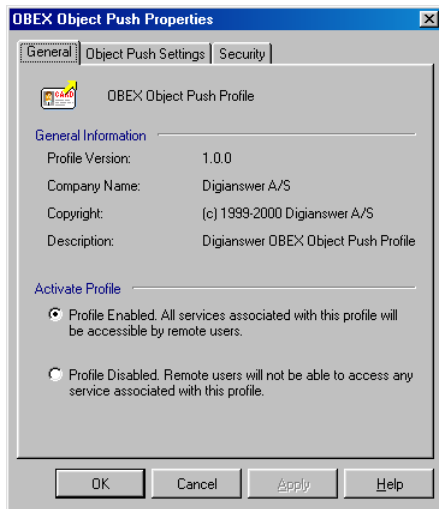

- At the top of the dialog box, click the tab **Object Push Settings**.

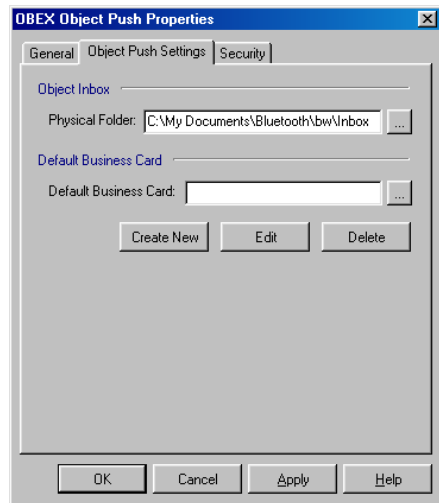

- In the item **Default Business Card**, click the button **Create New**. The Object Editor opens:

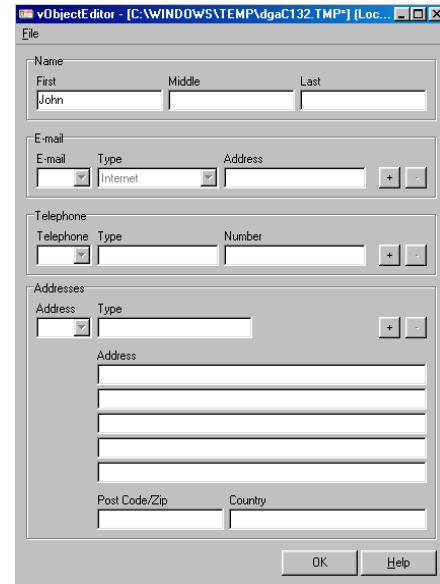

- In the Object Editor, type the information you want to include in your default business card. You can include information about your name and one or more e-mail addresses, telephone numbers, and addresses.
- To save the business card: On the Object Editor **File** menu, click **Save**.



6. To quit the Object Editor: Click the **OK** button. You will now return to the dialog box OBEX Object Push Properties – Object Push Settings. Here you will see the name of your default business card, which is the same as the name typed in the Object Editor.



If you want to view or edit the default location of the business card, click the “...” button.

7. To complete the creation of the new default business card: Click the **OK** button.

A new icon on the Local Services bar shows that your default business card is now available for transfer to remote devices:




Editing an existing business card in the Object Editor:

As appears from the information above, the Object Editor can be used to create a new default business card. Furthermore, you can use the Object Editor to edit an existing business card. The procedure is almost the same as that described above; however, in step 3, click **Edit** (instead of **Create New**).

Business card transfer

Before your default business card can be transferred to remote devices, you must make it available among your local services as described in the section "Making default business card available".

To send your business card to a remote device, drag the card icon to the remote Inbox folder or remote device (or device folder). In the following example, the business card is being dragged to a remote device named "Bluetooth Client Device":

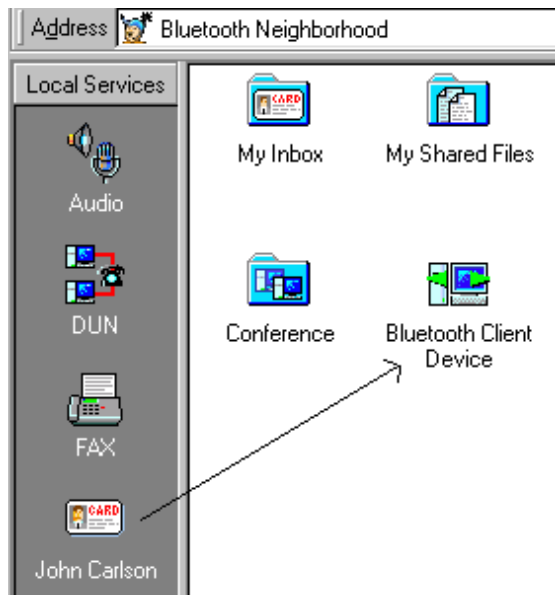

If the link is established successfully, the remote device will now receive your business card in its Bluetooth Neighborhood Inbox.

For the choice of sending, receiving, or exchanging business cards with another user, right-click the remote device, and point to **Business Card**:




You can now choose:

- To transfer your business card (included on the Local Services bar) to the remote device: Click **Push business card**.
- To transfer the remote user's business card to your device: Click **Pull business card**.
- To exchange business cards with the remote user: click **Exchange business cards**.

Sending objects directly from MS Outlook

Microsoft Outlook users can send objects (like messages or notes) directly from Microsoft Outlook: Drag the object either to the remote Inbox folder or to the remote device (or device folder):

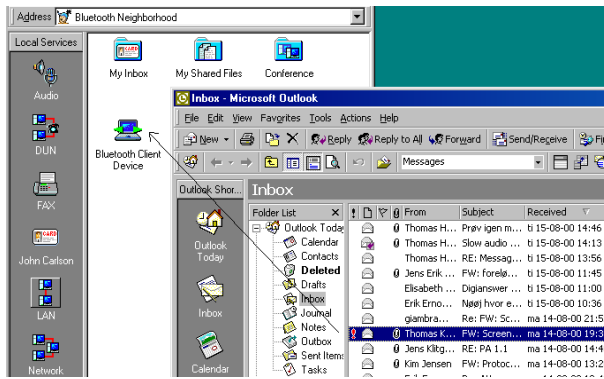

In the above example, an e-mail message is being forwarded from the Microsoft Outlook inbox to the remote Bluetooth device.

Receiving objects

When your local Bluetooth device receives an object (a default business card, message, note, or calendar object) from a remote device, the object is placed in My Inbox:



If you have Microsoft Outlook: When you double-click a received object, it will open in Microsoft Outlook.

If you do not have Microsoft Outlook: When you double-click a received object, it will open in the Object Editor.


You can open a received object directly from My Inbox, or you can drag the object to wherever you want to store it. In the following example, an object is being dragged from My Inbox to the Desktop:




Creating objects in the Object Editor

If Microsoft Outlook is not installed on your computer, you may use the Object Editor to create objects – messages, notes, and cards. Note that objects created in the Object Editor are not saved as objects but as **files**. You can then transfer these files as you would any file in the Bluetooth Neighborhood (cf. “File transfer”).


1. To open the Object Editor: Click **Start**, point to **Programs**, point to **Bluetooth Software Suite ...**, and click **Object Editor**:

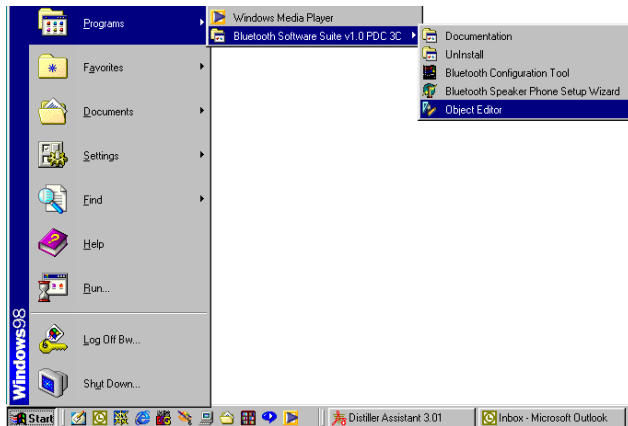


The Object Editor opens:

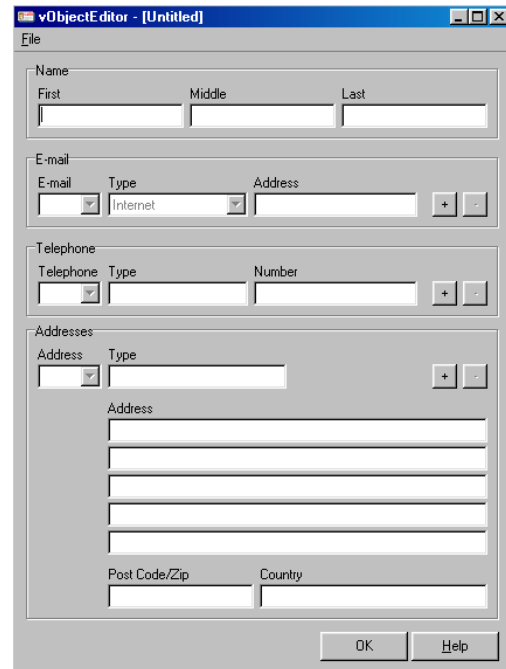

2. To create an object in the Object Editor: Click **File**, point to **New**, and click the kind of object you want to create, for instance a **VMessage**:

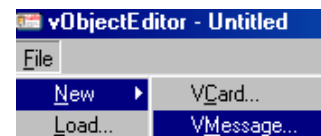


Cards are created in the Object Editor itself (by typing the information you want to include); messages and notes are created in a new window. The following example shows the window that pops up on clicking **VMessage** as shown above:

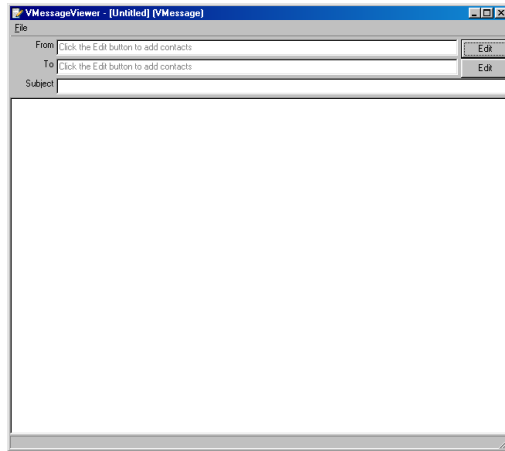

3. Type the information you want to be included in the object.
4. To save the object:
 - a. If it is a **message** or a **note**, in the window where you typed the contents, click **File** and **Save As**.
 - b. If it is a **card**, in the Object Editor, click **File** and **Save**.

A new dialog box pops up. In the following example, a **message** is about to be saved:

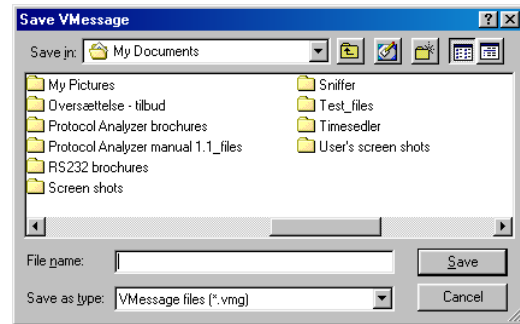

5. Select the location and name of the new file.
6. Click **Save**.

When you have saved the file, you can transfer it like any file using the Bluetooth Neighborhood. For more information, see "File transfer".

File transfer

File transfer is a way of sharing files with others. In the Bluetooth Neighborhood, you can make a file available to a remote user by placing it in the folder My Shared Files:




When a remote user has carried out service discovery on your device, he can open your folder My Shared Files and the files in it. Furthermore, he can add and delete files if he is allowed to do so (for information on the security aspects of My Shared Files, see the section “File Transfer Settings”).

Finally, if a remote device sends a file to your local device, it is received in My Shared Files.

Making a file available in My Shared Files

Placing a file in My Shared Files is easily done by dragging the file from where it is stored to the folder My Shared Files. Or you can open My Shared Files first, and then drag the file to the list view displaying the contents of My Shared Files.

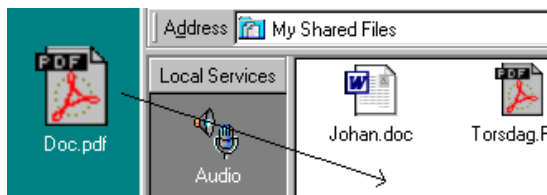


In the above example, a file is being dragged from the desktop to the list view displaying the contents of My Shared Files.

When a remote user opens your folder My Shared Files, he will have access to the file you placed in it.

Sending a file to a remote device


If you want to transfer a file to the Shared Files folder of a remote device, you can do so in a number of ways:

- Drag the file from where it is stored to the remote device (or device folder):

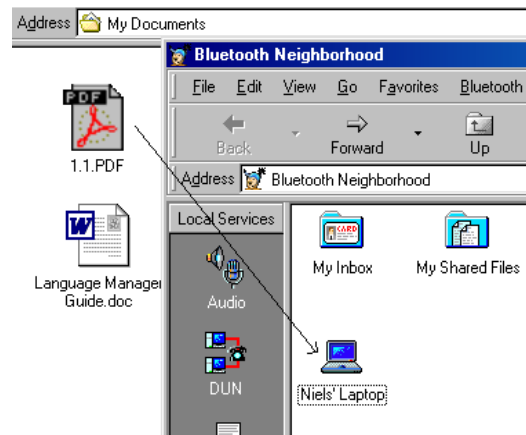


In the above example, a file is being dragged from My Documents to the remote device.

- First carry out service discovery on the remote device. Then drag the file from where it is stored into the remote Shared Files folder:

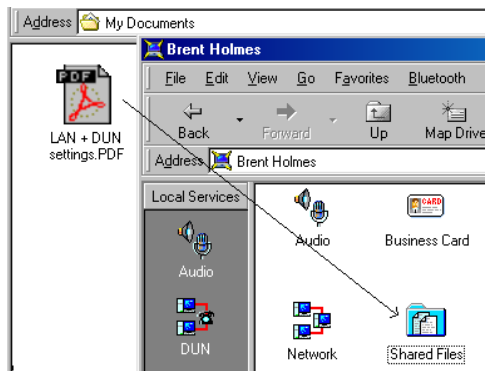

In the above example, a file is being dragged from My Documents to the Shared Files folder of the remote device.

- First carry out service discovery on the remote device; then open the remote Shared Files folder; finally drag the file from where it is stored to the list view displaying the contents of the remote Shared Files folder.

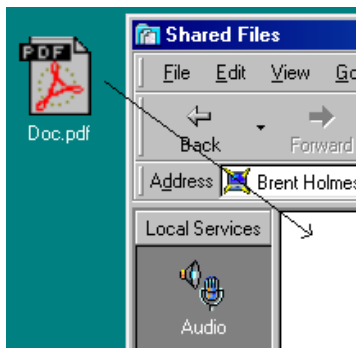


In the above example, a file is being dragged from the Desktop into the contents of the remote Shared Files folder.

No matter which way you choose to transfer a file to a remote device, the user of that device will receive the file in his Shared Files folder.

Receiving files

When your local Bluetooth device receives a file sent from a remote device, the file is placed in My Shared Files.

You can then open the received file directly from My Shared Files, or you can drag the file to wherever you want to store it. In the following example, a file is being dragged from My Shared Files to My Documents:

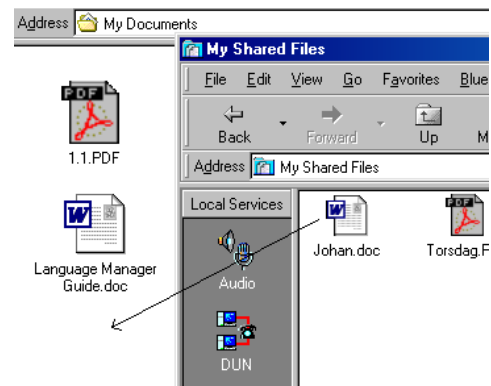


Audio

An audio link makes it possible to transfer sound from one Bluetooth device to another. There are basically two ways of using an audio link:


- Using your computer as a **Bluetooth Audio Device**: Connect a headset to it, establish an audio link to one or more remote devices, and then use the computer like a walkie-talkie. The sound coming from the headset over the Bluetooth link will be seen by the operating system as coming from a sound card. This also makes it possible to use the headset as input/output device in a NetMeeting™ Internet conference or for dictation software based on voice recognition.
- Using your computer as a **Bluetooth Speaker Phone**: Connect to a Bluetooth enabled modem and make telephone calls, using the built-in microphone and speaker of the computer (laptop) for the conversation.

Link establishment

There are two ways of establishing an audio link: Either drag the local service Audio to a remote device (or device folder):

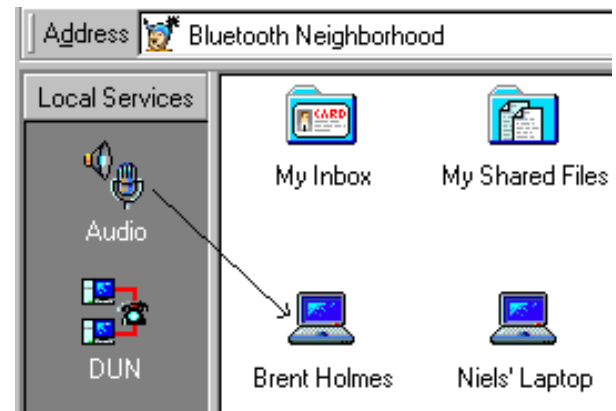

Or carry out service discovery first, then drag the local service Audio to the remote service Audio:

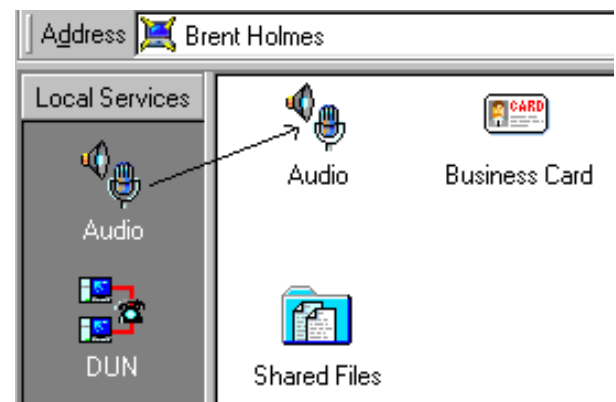


When the link establishment has been carried out successfully, you can make use of either the audio device or speaker phone feature as described above.

PC speaker

The Bluetooth speaker phone feature involves using the PC speaker. This can be enabled/disabled from the Local Services bar:

1. Right-click the local/remote Audio service:
2. Click enable/disable.

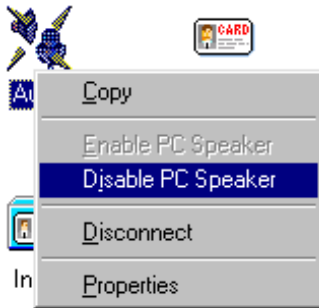

When the speaker has been enabled, you can make use of the Bluetooth speaker phone feature.

For more information on audio settings, see the section "Audio settings". For information on how to optimize the sound performance of the Bluetooth speaker phone, see the section "Bluetooth Speaker Phone Setup Wizard".

Bluetooth COM ports

General information

What is a Bluetooth COM port?

Physical communications (COM) ports are used when two serial devices are connected by means of a cable. A Bluetooth COM port, however, is a virtual COM port providing a wireless alternative to a physical one. Bluetooth COM ports make it possible to connect to almost any Bluetooth enabled serial application (legacy application) that would otherwise have been connected using a cable and a physical COM port.

Some profiles require a Bluetooth COM port

As Bluetooth links are wireless, you need no physical COM port to connect to a remote device. However, in connection with some of your local profiles, you need a Bluetooth COM port. This provides an address, so to speak, needed by your legacy application to establish a link to a remote device.

Note: Most users need not worry about Bluetooth COM ports at all; the default settings ensure that you can use all your Local Services without having to make any Bluetooth COM port settings.

The following services are supported by profiles that are associated with a Bluetooth COM port:

- DUN (Dial-up Networking Profile)
- FAX (Fax Profile)

- LAN (LAN Access Profile)
- Default business card (OBEX Object Push)
- File transfer (OBEX File Transfer)

Furthermore, the **Serial Port Profile** is used in connection with Bluetooth COM ports.

Except for the Serial Port Profile, the above-mentioned profiles are associated with the **Bluetooth COM ports 7, 8, and 9** by default. You can change these settings, if you like. For more information, see the section “Bluetooth COM port settings”.

New Bluetooth COM ports and interoperability

Some users may want to add one or more additional Bluetooth COM ports to the computer. This is necessary if you want to make use of the Serial Port Profile, for instance to use a serial application like HyperTerminal to transfer data between two Bluetooth enabled computers.

The same profile must be associated with the local Bluetooth COM port and the remote one you want to connect to. Therefore, before you can establish a serial Bluetooth COM port link to a remote device, you must associate the Serial Port Profile with a Bluetooth COM port, and then add the Bluetooth COM port to your computer. For link establishment to be possible, the remote device must have a Bluetooth COM port with the Serial Port associated with it, too.

In "Bluetooth COM port settings" we will look into how you can add and remove Bluetooth COM ports, and change the settings concerning which profiles are associated with which Bluetooth COM ports.


Bluetooth COM port settings

Before you can make use of a Bluetooth COM port link, you must associate one or more appropriate profiles with a Bluetooth COM port and then add the COM port to your Local Services bar (cf. "Bluetooth COM ports" – "General information"). These settings are made by means of the Bluetooth Configuration Tool.

Opening the Bluetooth Configuration Tool:

1. Open the Microsoft Control Panel.
2. Double-click **Bluetooth Configuration Tool**.


The Bluetooth Configuration Tool dialog box opens:

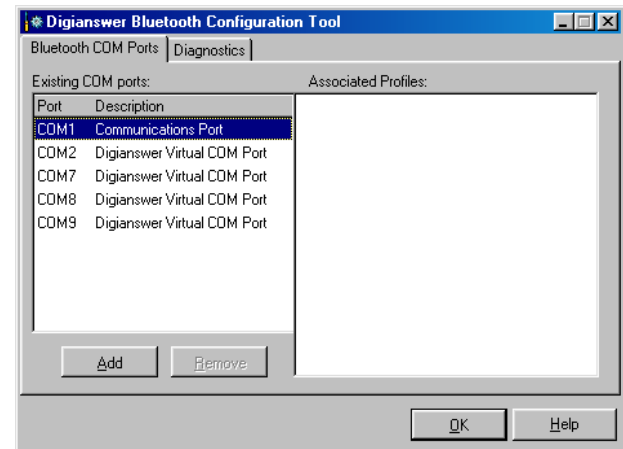

Adding Bluetooth COM ports

To add a Bluetooth COM port:

1. In the Bluetooth Configuration Tool window, click **Add**. The following dialog box opens:

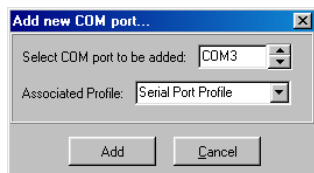

2. Use the arrows to go to the Bluetooth COM port you want to add and the profile you want to associate with it. In the above example, the Serial Port Profile is being associated with Bluetooth COM port 3.

Note: Some programs (like HyperTerminal) cannot detect COM ports higher than 4.

You will only be allowed to add Bluetooth COM ports that are not already in use. Only available Bluetooth COM ports will appear on the list in the above dialog box.

3. To confirm the settings, click **Add**.

The new Bluetooth COM port will now be included on the Bluetooth Neighborhood Local Services bar:




Note: Before you can use the new Bluetooth COM port, you have to **restart** your computer.

Note: Windows NT users will not see the new Bluetooth COM port icon on the local services bar until the computer has been restarted.


Deleting Bluetooth COM ports

If you want to delete a Bluetooth COM that you no longer need:

1. In the Bluetooth Configuration Tool window, highlight the Bluetooth COM port you want to delete, for instance COM2:

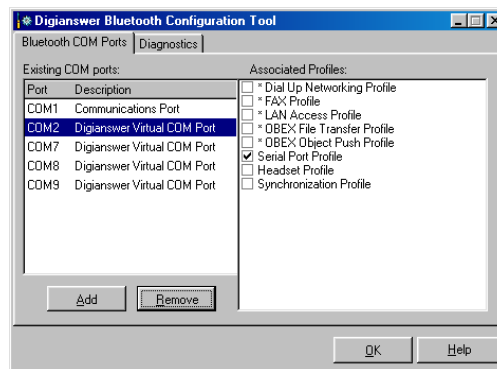

2. Click **Remove**. The following dialog box opens:

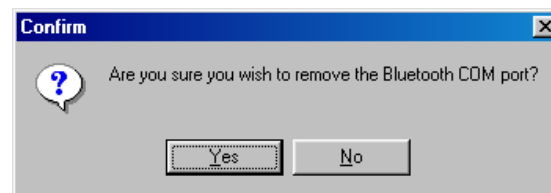

3. To confirm that you want to delete the Bluetooth COM port, click **Yes**.


The Bluetooth COM port will now be removed from the Local Services bar.

Note: Windows NT users have to restart the computer for the changes to take effect.

Associating and removing profiles from existing Bluetooth COM ports

In the Bluetooth Configuration Tool, you can see which profiles are associated with which Bluetooth COM ports. You change these settings so as to associate the profiles you need with an existing Bluetooth COM port. Also, you can remove a profile from a Bluetooth COM port.

In the following example, it appears that the Serial Port Profile is associated with Bluetooth COM port 2:

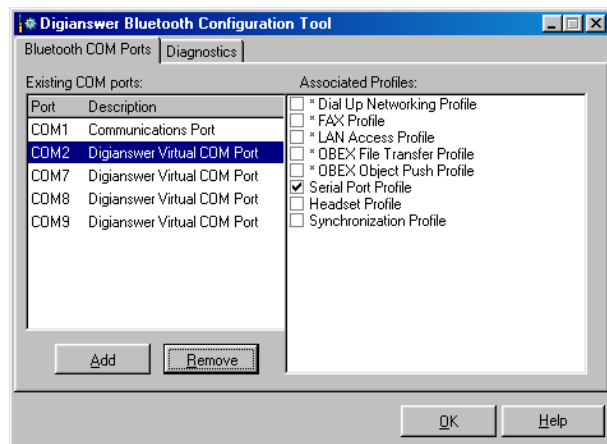

To change the settings:


1. In **Existing COM ports**, click the Bluetooth COM port in question.
2. In **Associated Profiles**, check the profiles you want to associate with the Bluetooth COM port, or remove the ones you no longer want to be associated with it.
3. Click **OK**.

Note: Windows NT users have to restart the computer for the changes to take effect.


Bluetooth COM port link establishment

When you have added a Bluetooth COM port to the Local Services bar (as described in the section “Bluetooth COM port settings”), you can establish a link to a remote device.

Drag the Bluetooth COM port icon to the remote device (or device folder):

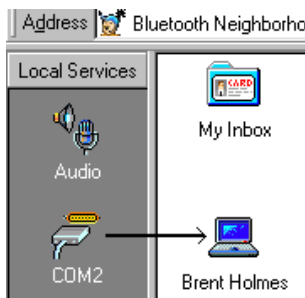

Alternatively, carry out service discovery, then drag the local Bluetooth COM port icon to a remote Bluetooth COM port icon:

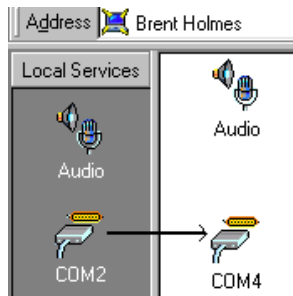

The link established between your local device and the remote one can now be used exactly as if it were a wired link.

LAN


The LAN service is used for accessing a Local Area Network through a dial-up networking gateway. You can use this service to establish a link to a remote Bluetooth enabled computer which has access to a LAN.

The LAN service provides a Bluetooth COM port prepared for Bluetooth dial-up networking. You can use the LAN COM port with Microsoft dial-up networking in order to establish a LAN connection. Please refer to the Windows online help for instructions in how to use Microsoft dial-up networking.

Links can be established by dragging and dropping in the Bluetooth Neighborhood: Drag the LAN icon from the Local Services bar to one of the following in the list view:

- The remote device (or device folder), *or*
- The remote LAN service.

In the following example, a link is being established by dragging the local LAN service to a remote LAN service:

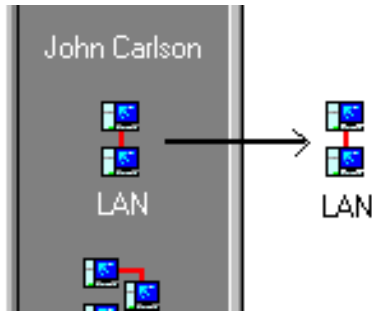

For information on how to set up the program to dial up automatically when a LAN link is established, see “LAN Access settings”.

Note: The LAN Access Profile requires a Bluetooth COM port. By default, the profile is associated with Bluetooth COM port 7. For more information, see “Bluetooth COM ports”.

DUN


The DUN service, i.e. dial-up networking, is used for accessing the Internet through a DUN gateway. You can use this service to establish a link to a Bluetooth enabled modem or computer which has access to a modem.

The DUN service provides a Bluetooth COM port prepared for Bluetooth dial-up networking. You can use the DUN COM port with Microsoft DUN in order to establish a DUN connection. Please refer to the Windows online help for instructions in how to use Microsoft DUN.

Links can be established by dragging and dropping in the Bluetooth Neighborhood: Drag the DUN icon from the Local Services bar to one of the following in the list view:

- The remote device (or device folder), *or*
- The remote DUN service.

In the following example, a link is being established by dragging the local DUN service to a remote DUN service:

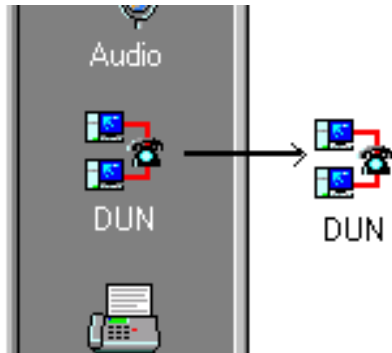

For information on how to set up the program to dial up automatically when a DUN link is established, see “DUN Access settings”.

Note: The Dial-up Networking Profile requires a Bluetooth COM port. By default, the profile is associated with Bluetooth COM port 7. For more information, see “Bluetooth COM ports”.

FAX


The FAX service is used for sending fax messages, using the fax software on your computer. You can use this service to establish a link to a remote Bluetooth enabled fax machine or computer which has access to a fax machine.

The FAX service provides a Bluetooth COM port prepared for Bluetooth faxing. You can use the fax COM port in connection with the Microsoft fax software or a third party application such as Symantec WinFax Pro in order to establish a fax connection. Please refer to the relevant documentation, like the Windows online help (if you use the Microsoft fax software).

Links can be established by dragging and dropping in the Bluetooth Neighborhood: Drag the FAX icon from the Local Services bar to one of the following in the list view:

- The remote device (or device folder), *or*
- The remote FAX service.

In the following example, a link is being established by dragging the local FAX service to a remote FAX service:

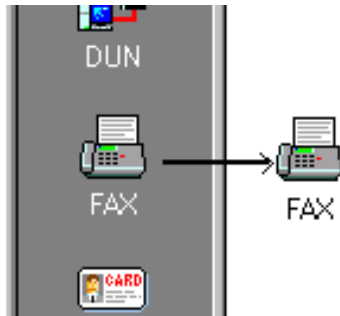

Note: The FAX Profile requires a Bluetooth COM port. By default, the profile is associated with Bluetooth COM port 7. For more information, see "Bluetooth COM ports".

Network

In this section, we will focus on setting up and establishing Bluetooth networks. **We will assume that you have some previous experience in ordinary, i.e. wired networks using Microsoft networking. If that is not the case, please refer to the Microsoft Windows online help for information on Microsoft networking.**

Setting up networks


During the installation of the Bluetooth Software Suite, the installation program assigned a static IP address to the TCP/IP protocol bound to the Bluetooth Ethernet adapter.

The settings made during the installation will be used when you establish a network link as described in the section "Network link establishment". You can, of course, change these settings as you like.

The Bluetooth network works in the same way as if the computers were connected through a hub using a wired Ethernet. The settings made in Windows are used, exactly as if using Microsoft networking.

Network link establishment

Establishing a Bluetooth ad hoc network link is done in the same way as you establish other Bluetooth links: In the Bluetooth Neighborhood main window, drag the local service Network to the remote device, device folder, or service:

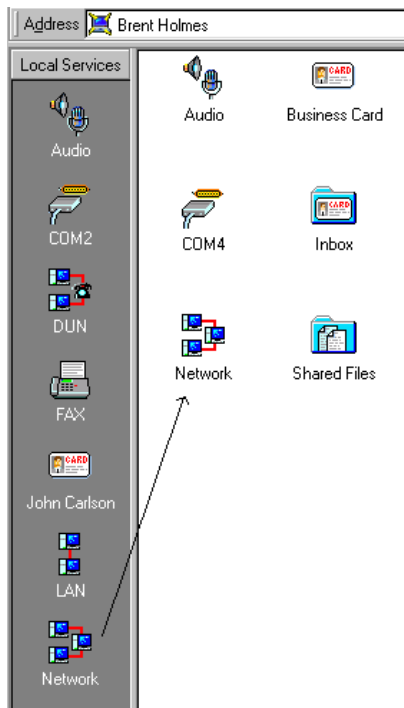

When a network link has been established between a master and its slaves, this network is similar to connecting the same computers through a hub using a wired Ethernet. The settings made in Windows are used, exactly as if using Microsoft networking.

Local device settings


Local profile properties

General information


The Bluetooth Software Suite provides you with general information on the profiles that your device supports. For each profile, you can see:

- Which version of the profile your device features;
- A description, i.e. the name of the profile;
- The company name;
- The copyright holder.

This information is included in the Profile Properties dialog box. To open this: On the Bluetooth menu, point to **Profile Properties**, and click the profile in question, for instance Serial Port:

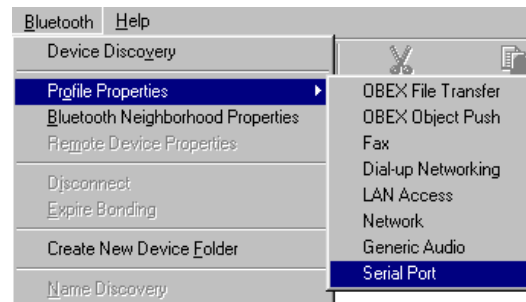


The mentioned information appears from the item **General Information**:

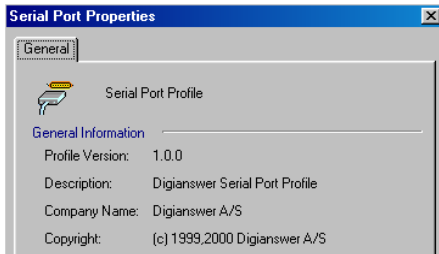

Enabling/disabling profile

You can enable or disable each of the profiles that your device supports. If you enable a profile, remote users will be allowed to access the services associated with the profile. If you disable a profile, remote users will not be allowed to access the services associated with the profile.

Enabling/disabling a profile is done from the Profile Properties dialog box. To open this: On the Bluetooth menu, point to **Profile Properties**, and click the profile in question, for instance OBEX File Transfer:

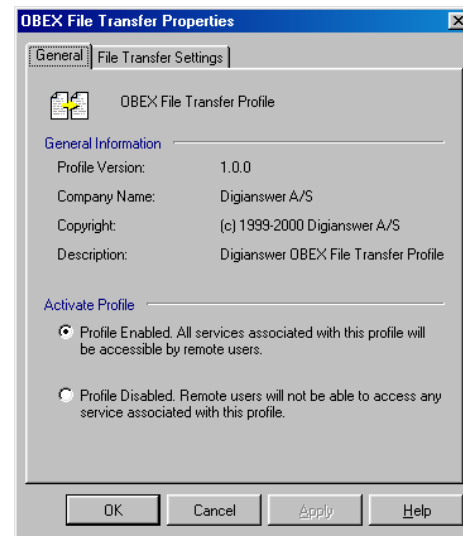

In the item **Activate Profile**, you can now enable or disable the profile.


Note: You can only disable a profile when your computer is not connected to any remote device.

Object Push Settings

The profile OBEX Object Push is used for transferring objects: messages, notes, cards (including the default business card), and calendar objects. In the Object Push Settings dialog box, you can view or edit the location of the physical Inbox folder and the default business card.

To open the Object Push Settings dialog box:

1. On the Bluetooth menu, point to **Profile Properties**, and click **OBEX Object Push**.
2. At the top of the OBEX Object Push Properties dialog box, click the tab **Object Push Settings**.

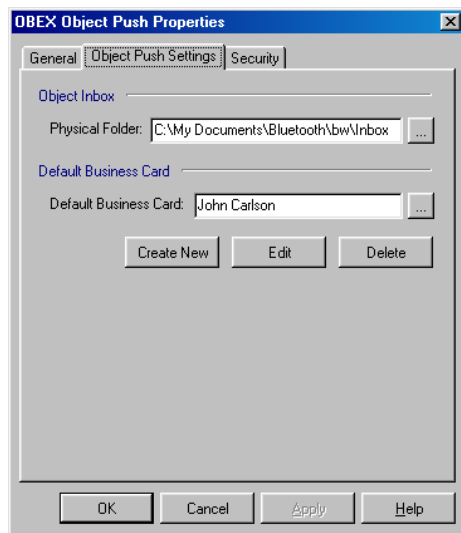

- **Object Inbox:** By default, the physical Inbox folder is placed in My Documents in a folder named Bluetooth. However, you can move the Inbox to any location you want. To browse for a different location, click the "..." button.
- **Default Business Card:** The physical default business card is placed in My Documents in a folder named Bluetooth. However, like the Inbox, you can browse using the "..." button, and place the business card where you want.


If you have not already created a business card, clicking **Create New** will open the Object Editor, where you can register your default business card. Click **Edit** if you want to edit an existing business card. For more information, see "Making default business card available".

Object Push - Security

The profile OBEX Object Push is used for transferring objects: messages, notes, cards, and calendar objects. In the Security dialog box, you can make decisions concerning the security aspects of receiving and sending objects.

To open the Security dialog box:

1. On the Bluetooth menu, point to **Profile Properties**, and click **OBEX Object Push**.
2. At the top of the OBEX Object Push Properties dialog box, click the tab **Security**.

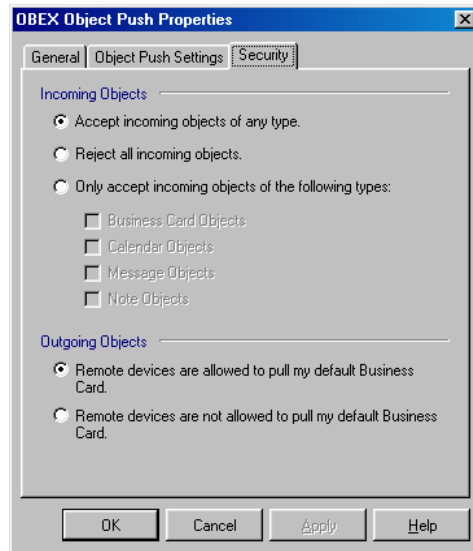

- **Incoming Objects:** Here you can decide if your device should:
 - Accept incoming objects of any type; or
 - Reject all incoming objects; or
 - Only accept incoming objects of certain types: Business cards, calendar objects, messages, and/or notes.
- **Outgoing Objects:** Here you can select for remote devices to be allowed/not allowed to pull your default business card.

By default, your device will automatically accept incoming objects, and it will allow remote users to pull your default business card.

File Transfer Settings

The profile OBEX File Transfer is used for transferring files. In the File Transfer Settings dialog box, you can view or edit the location of the physical My Shared Files folder. Furthermore, you can make decisions concerning the security aspects of remote users' access to the files in "My Shared Files".

To open the File Transfer Settings dialog box:

1. On the Bluetooth menu, point to **Profile Properties**, and click **OBEX File Transfer**.
2. At the top of the OBEX File Transfer Properties dialog box, click the tab **File Transfer Settings**.



- **Shared Files Folder:** By default, this folder is placed in My Documents in a folder named Bluetooth. However, you can move it to any location you want. To browse for a different location, click the "..." button.
- **Security:** From this item you can make settings regarding which kind of access remote users will have to your local My Shared Files folder, i.e. whether they will be allowed to read, edit, and delete the contents of the folder. You can choose among:
 - Read only access; or
 - Read and write access; or
 - Read, write, and delete access.

Furthermore, if you select "Remote users are required to be authenticated ...", remote users will have to enter a password before they can access your shared files. In the field at the bottom of the dialog box, you can type the password you require remote users to enter.

The default settings are as shown in the above illustration.

Audio settings

In this section we will focus on various settings in connection with the Generic Audio profile.

As already mentioned in the section “Audio”, there are basically two ways of using an audio link:

- The **Bluetooth audio device** feature, using a headset, the Bluetooth link serving as a sound card.
- The **Bluetooth speaker phone** feature, using the computer speaker and microphone like a phone, the audio coming from an ordinary sound card.


Note: For optimal sound performance, you should run the Bluetooth Speaker Phone Setup Wizard. See the following section.

For information on how to establish and use audio links, see “Audio”.

Default audio path:

By default, your computer is set up as a **Bluetooth speaker phone**. If you want to change this default setting:

1. On the Bluetooth menu, point to **Profile Properties**, and click **Generic Audio**.
2. At the top of the Audio Properties dialog box, click **Audio Settings**. The following dialog box appears:

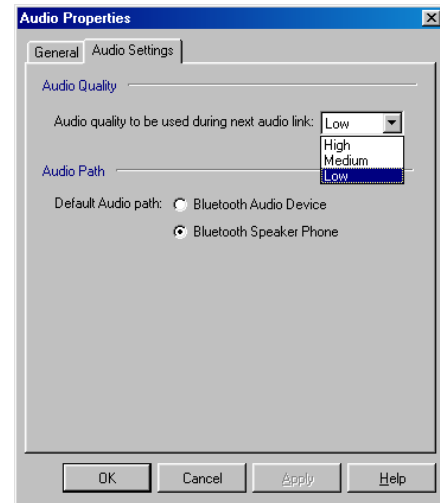

3. In the item **Audio Path**, select either **Bluetooth Audio Device** or **Bluetooth Speaker Phone** as the default setting.

Audio quality:

As appears from the example above, the Audio Settings dialog box also contains the item **Audio Quality**. Here you can set the sound quality to be used during the next audio link.


Generally speaking, the higher the sound quality the better. However, the higher the quality, the more of the capacity of the Bluetooth unit is needed for the link. If you want to be able to transfer data at the same time as sound, you should select medium or low audio quality.

The default setting is **Low**.

Bluetooth Speaker Phone Setup Wizard

During the installation of the Bluetooth Software Suite, some default settings were made automatically for the sound of the Bluetooth speaker phone feature. In many cases, however, these default settings will not secure your system the best sound quality possible. Therefore, **we recommend that you run the application the Bluetooth Speaker Phone Setup Wizard to configure your system for optimal sound performance.**

To open the Bluetooth Speaker Phone Setup Wizard: Click **Start**, point to **Programs**, point to **Bluetooth Software Suite ...**, and click **Bluetooth Speaker Phone Setup Wizard**:

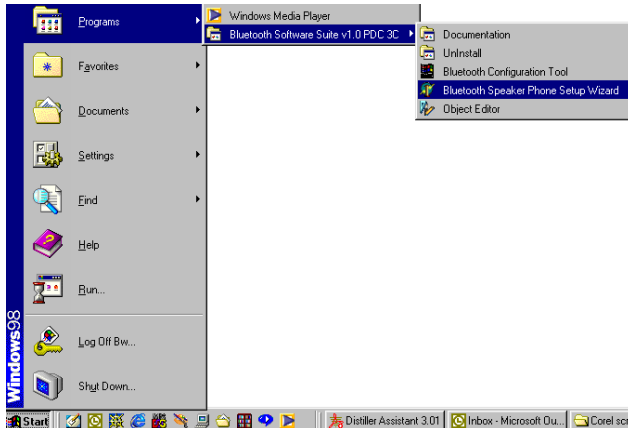

The Bluetooth Speaker Phone Setup Wizard opens:



As appears, you can have the Bluetooth Speaker Phone Setup Wizard configure your system in one of three ways:

- Automatically, which is recommendable. Click:



- Manually, which should be done only by advanced users. Click:



- Using the default settings (the same as those made during the installation of the Bluetooth Software Suite). This way is recommended if both of the above fail. Click:



Follow the onscreen instructions to complete the configuration of your system for optimal sound performance of the Bluetooth speaker phone feature.

LAN Access settings

In connection with LAN link establishment, the Bluetooth Software Suite can establish a dial-up connection automatically. Setting up the program for this is done from the LAN Access Properties dialog box.

1. On the Bluetooth menu, point to **Profile Properties**, and click **LAN Access**.
2. At the top of the LAN Access Properties dialog box, click the tab **LAN Access Settings**. The following dialog box appears:



3. Select the option **Automatically establish Dial-up connection when Bluetooth link has been established**.
4. Follow the on-screen instructions to select which recipient should be dialed. You can add new recipients to the list by clicking **Create New** or edit the selected recipient by clicking **Edit Selected**.


When you establish a LAN link as described in the section "LAN", the Bluetooth Software Suite will now automatically establish a dial-up connection.

For more information on LANs, please refer to the Windows online help.

Dial-up Networking settings

In connection with DUN link establishment, the Bluetooth Software Suite can establish a dial-up connection automatically. Setting up the program to do so is done from the Dial-up Networking Properties dialog box.

1. On the Bluetooth menu, point to **Profile Properties**, and click **Dial-up Networking**.
2. At the top of the Dial-up Networking Properties dialog box, click the tab **Dial-up Networking Settings**. The following dialog box appears:

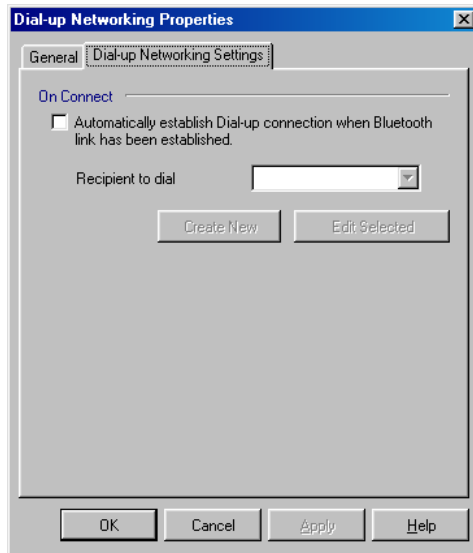

3. Select the option **Automatically establish Dial-up connection when Bluetooth link has been established**.
4. Follow the on-screen instructions to select which recipient should be dialed. You can add new recipients to the list by clicking **Create New** or edit the selected recipient by clicking **Edit Selected**.


When you establish a DUN link as described in the section "DUN", the Bluetooth Software Suite will now automatically establish a dial-up connection to the selected recipient.

For more information on dial-up networking, please refer to the Windows online help.


Bluetooth Neighborhood properties

General

The Bluetooth Software Suite provides information on the properties of the Bluetooth Neighborhood. This information is accessed from the Bluetooth Neighborhood Properties dialog box. To open this: On the Bluetooth menu, click **Bluetooth Neighborhood Properties**.

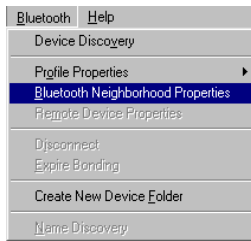

The Bluetooth Neighborhood Properties – General dialog box opens:

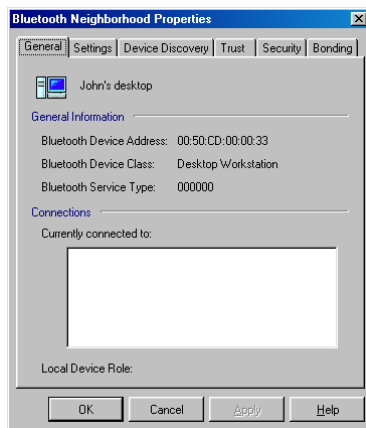

At the top of the dialog box you can see the name of your local device, in this case "John's desktop". (For information on how to name your local device, see "Naming your local device".)

Furthermore, the dialog box contains the items **General Information** and **Connections**:


- **General Information** shows the identity information that, in addition to the name of your device, will be sent to remote devices carrying out device or service discovery on your device. The device address and service class are determined by the Bluetooth hardware, the device class you can set yourself (see "Settings").
- **Connections** shows which remote devices your device is currently connected to, if any. Also, you can see which role your local device plays in the piconet: master or slave.

As appears, from this dialog box you can access a number of other dialog boxes: Settings, Device Discovery, Trust, Security, and Bonding. We will deal with each of these in the following.

Settings


In the Bluetooth Neighborhood Properties – Settings dialog box, you can set such identity information as the name and class of your local device. To open the dialog box:

1. On the Bluetooth menu, click **Bluetooth Neighborhood Properties**.
2. Click the tab **Settings**.

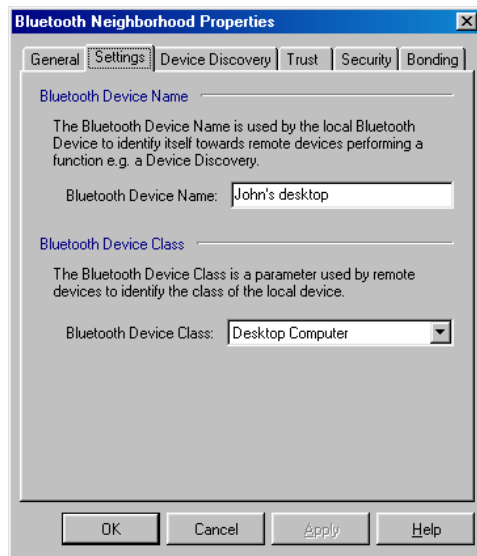

- **Bluetooth Device Name:** Here you can select a name for your device (cf. “Naming your local device”).

- **Bluetooth Device Class:** Here you can provide the Bluetooth Software Suite with information on which class of device your computer belongs to: is it a desktop, laptop or server-class computer?

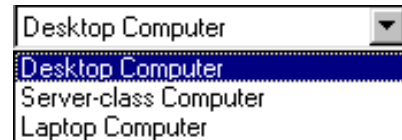

This information will be given to remote devices having carried out device discovery on your local device.

Device discovery

In connection with device discovery, you can make a number of settings in the Bluetooth Neighborhood Properties – Device Discovery dialog box. To open this dialog box:

1. On the Bluetooth menu, click **Bluetooth Neighborhood Properties**.
2. Click the tab **Device Discovery**.

The Bluetooth Neighborhood Properties – Device Discovery dialog box opens:




- In **Device Discovery** you can choose for device discovery to take place only when you activate the function manually (which is the default setting), or for device discovery to be initiated automatically at certain intervals. If you select the latter option so that device discovery will take place automatically, you can set the duration of the interval between device discovery sessions in the item **Device Discovery Period**.
- In **Device Discovery Length** you can set the number of seconds that you want device discovery to last. The default settings is 10 seconds, which should be enough in most cases. However, if for some reason it is difficult for two devices to discover each other, you can increase the duration.
- In **Device Discovery Period** you can set the number of minutes that you want the intervals between automatic device discovery sessions to last. This function is active when in the item **Device Discovery** you have set automatic device discovery to take place periodically.
- In **Previously Discovered Devices** you can have the Bluetooth Neighborhood list view display remote devices discovered during previous device discovery sessions. (This item is selected by default). If this item is not selected, the list view will only display the remote devices discovered during the latest session.

- In **Expire Discovered Devices** you can decide to have discovered remote devices removed automatically from the Bluetooth Neighborhood list view when they have not been seen for a specified period of time. Note that if the dialog box item **Previously Discovered Devices** is not selected, the list view will only display the remote devices discovered during the latest device discovery.

Trust

The Bluetooth Neighborhood Properties – Trust dialog box concerns the trust relationship you want your local device to apply to newly discovered remote devices: How do you want your local device to react if a newly discovered remote device tries to establish a link to it? To open this dialog box:

1. On the Bluetooth menu, click **Bluetooth Neighborhood Properties**.
2. Click the tab **Trust**.

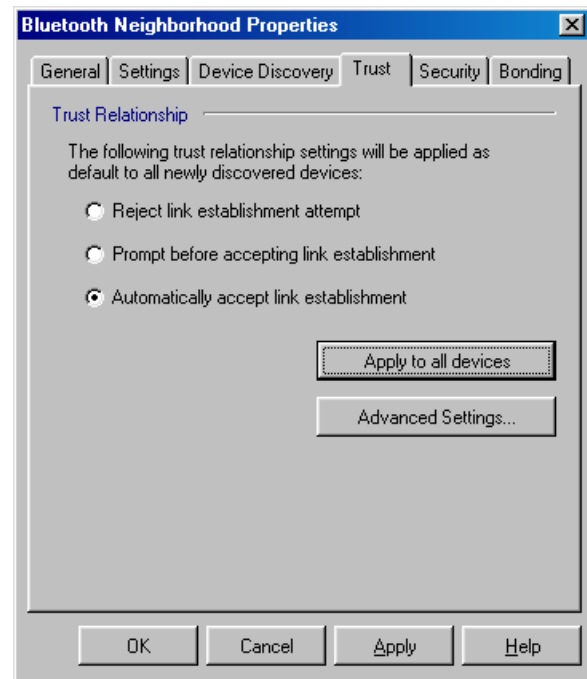

You can decide whether your device should:


- Reject a link establishment attempt; or
- Prompt you before accepting link establishment; or
- Accept link establishment automatically. (This is the default setting).

To have the default trust relationship settings applied to all *existing* discovered devices as well as the newly discovered ones, click **Apply to all devices**.

Note: If you want to make trust relationship settings for a particular remote device – rather than for *all* remote devices – you can do so from the Remote Device Properties – Trust dialog box. For information on how to open this, see "Remote device properties" – "Trust".

Advanced link policy

To view or change the trust relationship settings for one or more discovered remote devices, click **Advanced Settings**:

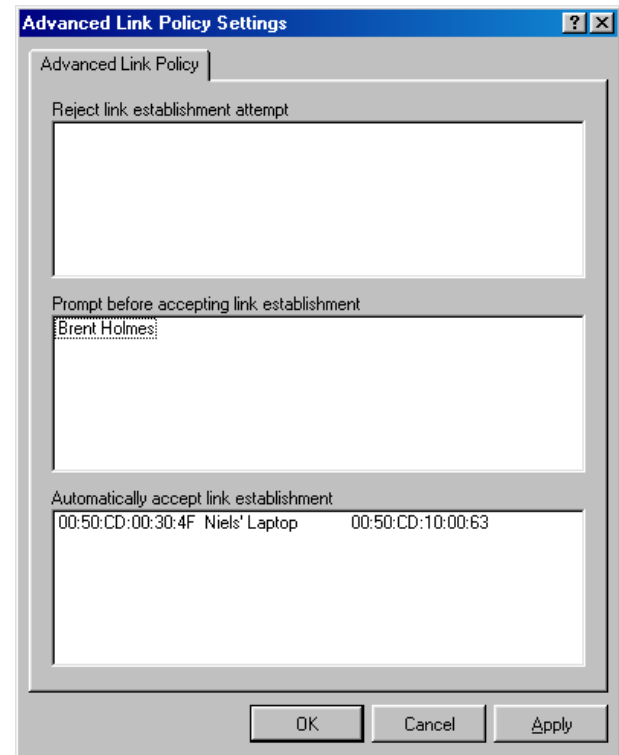

In this dialog box, each discovered remote device is located in one of three boxes: **Reject link establishment attempt**, **Prompt before accepting link establishment**, or **Automatically accept link establishment**. The location of each remote device (i.e. the box it is placed in)

indicates which default trust relationship settings have been selected for it.


To change the trust relationship setting for a device in the Advanced Link Policy dialog box:

Drag the device from its present position into the box representing the trust relationship you want for the device. The new settings will now be applied to the remote device next time it attempts to connect to your local device.

Security

In the Bluetooth Neighborhood Properties – Security dialog box, you can make a number of decisions concerning the security of your local device. To open this dialog box:

1. On the Bluetooth menu, click **Bluetooth Neighborhood Properties**.
2. Click the tab **Security**.

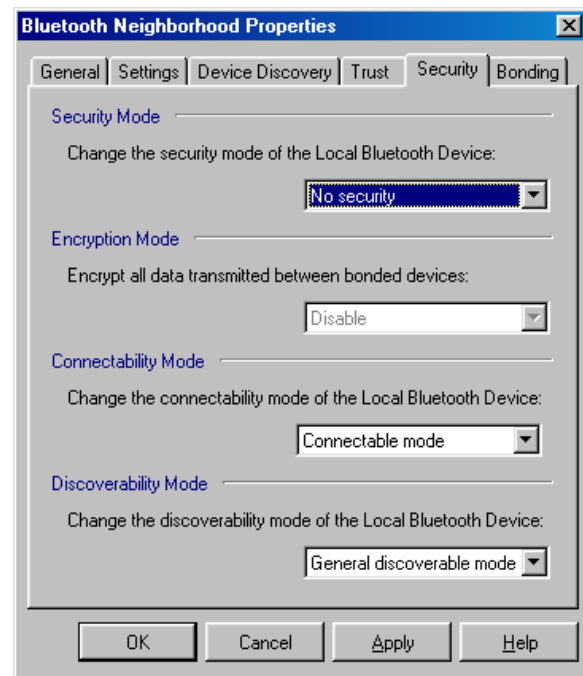

- **Security Mode** can be set to either **No Security** or **Link level security**.




If a device has selected link level security, no remote device can connect to it without bonding (see “Bonding”.) Furthermore, only when you have selected link level security can you use encryption (see below).

- **Encryption Mode** can be enabled or disabled. Based on the use of a link key, this feature can only be enabled when link level security has been selected (see above).




If encryption is enabled: When your device is communicating, only the linked devices will be able to understand the data sent between them.

- **Connectability Mode** refers to whether or not remote devices having discovered your device will be allowed to establish a link to it. In other words, selecting non-connectable mode is a way of ensuring that no remote device can connect to your device.



- **Discoverability Mode** refers to whether or not other devices will be allowed to discover your device. In other words, selecting non-discoverable mode is a way of preventing remote devices from discovering your device.



The default settings are as shown in the examples (the illustrations) above.

Bonding


Bonding refers to the creation of a link key – a bond – between two devices. Bonding is used when a device requires *link level security* (see “Security” for information on how to do so). When a remote device attempts to connect to the device requiring link level security, the users of both devices will be prompted for a password. They must then enter the same password.

The purpose of bonding is for two devices to be able to identify each other so that no remote device can connect without knowing the right password. This may be convenient if for instance you do not want any other device than your own Bluetooth enabled phone to be able to connect to your computer. Other devices trying to connect will be prompted for the password, which prevents them from interfering in the connection.


The duration of the bonding can be set to last beyond the current link; if so, the two devices will only be prompted for the password the first time they connect, i.e. when creating the bond. Both when creating the bond and when making use of an existing one, both devices must be in bondable mode. Below you will find information on how to set both bonding mode and duration.

Settings concerning bonding are done in the Bluetooth Neighborhood Properties – Bonding dialog box. To open this:

1. On the Bluetooth menu, click **Bluetooth Neighborhood Properties**.
2. Click the tab **Bonding**.

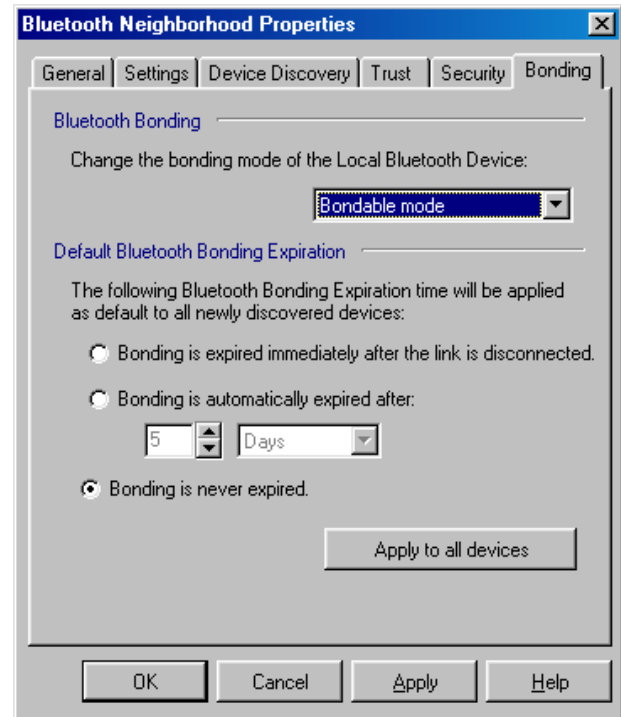

- In **Bluetooth Bonding**, you can decide whether or not your device should be able to bond to other devices.



The default setting is bondable mode. Both to be able to establish a new bond and to make use of an existing one, your device has to be in bondable mode.

- In **Default Bluetooth Bonding Expiration**, you can set bonding to expire when the link is disconnected; after a specified period of time; or never. (The default setting is: Never).

Note: The settings you make in the Bluetooth Neighborhood Properties – Bonding dialog box are default settings that will be applied to all remote devices. For information on how to make settings for the duration of a bond between your device and a particular remote device, see the section "Remote Device Properties" – "Trust".


Bluetooth unit settings

The settings of the Bluetooth unit are controlled from the Bluetooth Control Center. From this application, which is located in the lower right corner of the screen, you can enable/disable the Bluetooth unit. Also, the Bluetooth Control Center icon indicates the state of the Bluetooth unit.

Enabling/disabling Bluetooth unit

From the Bluetooth Control Center, you can enable or disable the Bluetooth unit.

1. Right-click the Bluetooth Control Center icon in the lower right corner of the screen.
2. Click **Enable ...** or **Disable ...**:



Indication of Bluetooth unit state

Located in the lower right corner of the screen, the Bluetooth Control Center displays one of three icons to show the state of the Bluetooth unit:

- Disabled: 

In this state, your Bluetooth device cannot communicate with other devices.

- Enabled but not transmitting: 

Your device is ready to communicate with other devices.

- Enabled and transmitting: 

Your device is communicating with one or more remote devices, or an attempt is being made to establish a link.


Remote device settings

Remote device properties


General

For information on the properties of a remote device:

1. Right-click the remote device.
2. Click **Properties**.

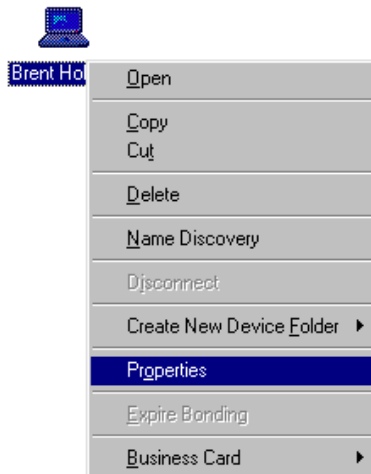

The Remote Device Properties – General dialog box opens.

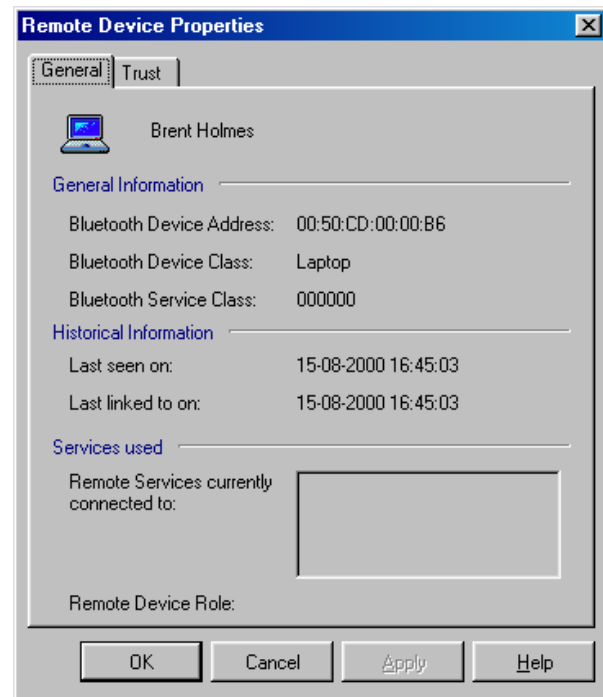

At the top of this dialog box, you will see the name of the remote device.

In addition, the box contains the items **General Information**, **Historical Information**, and **Services used**.

- **General Information** provides such identity information on the remote device as its address, device class, and service class.
- **Historical Information** tells you when the device was last seen by your device, and when it was last linked to it.
- **Services used** shows which services of the remote device are currently connected to your local device, if any. Also, you can see which role the remote device plays in the piconet, i.e. master or slave.

Trust


In the Remote Device Properties – Trust dialog box, you can make settings for the individual remote device concerning:

- **Trust relationship**, i.e. the way your local device will react if the remote device attempts to establish a link to it.
- **Bonding expiration**, i.e. if your local device and the remote one bond, how long should the bonding last? (cf. "Bonding").

You can make similar settings in the dialog boxes Bluetooth Neighborhood Properties – Trust (cf. "Trust") and Bluetooth Neighborhood Properties – Bonding (cf. "Bonding"). However, while the settings made in those dialog boxes concern *all* remote devices discovered, the settings in the Remote Device Properties – Trust dialog box concern a *particular* remote device.

To open this dialog box:

1. Right-click the remote device in question.
2. Click **Properties**.
3. In the General dialog box, click the tab **Trust**.

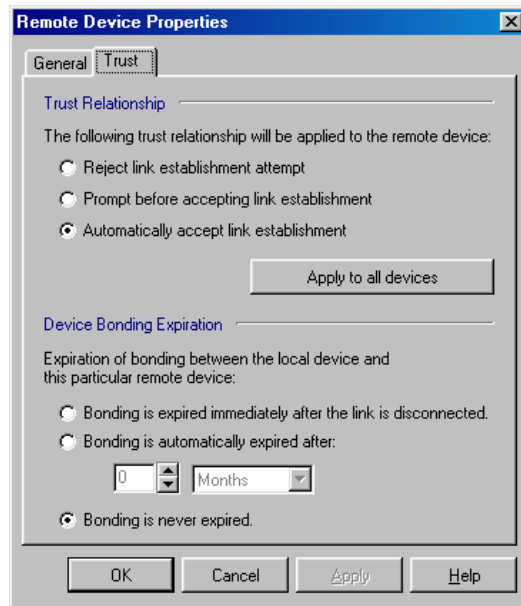

- **Trust Relationship** allows you to define the trust relationship to be applied when the remote device wants to establish a link to your device:
 - Reject link establishment, or
 - Prompt before accepting link establishment, or
 - Automatically accept link establishment. (This is the default setting).

If you like, you can apply the selected trust relationship to all remote devices (as in the Bluetooth Neighborhood Properties –Trust and Bonding dialog boxes). To do so, click **Apply to all devices**.

- **Device Bonding Expiration** allows you to make settings concerning the duration of bonding between your device and the remote one. You can set the bonding to expire when the link is disconnected, after a specified period of time, or never. (The default settings is: Never).

For more information on bonding, see "Bonding".

Hardware

LED operation

The green LED indicator on the PC card/USB Adapter is lit for 10 seconds after power up, and is flashing when the Bluetooth unit is communicating with a remote Bluetooth unit.

PC card technical specifications

- Type II PC card
- Compliant with PC Card Standard Release 7
- 0dBm or +20dBm Bluetooth radio designed in accordance with Specification of the Bluetooth System v1.0 B
- Power consumption:
Standby less than 40mA
Active less than 250mA (0dBm Bluetooth radio) or 330mA (+20dBm Bluetooth radio)
- Working temperature range:
Recommended: -5° to +55° C
- Condensation: Extreme temperature changes may cause condensation on the surface of the PC card. If so, the PC card may not work properly until completely dry again.


USB adapter technical specifications

- Compliant with USB specification version 1.1
- Power consumption:
Standby less than 2.5mA,
Active less than 310mA
- +20dBm Bluetooth radio designed in accordance with Specification of the Bluetooth System v1.0 B
- Working temperature range:
Recommended: -5° to +55° C
- Condensation: Extreme temperature changes may cause condensation on the surface of the USB adapter. If so, the USB adapter may not work properly until completely dry again.


Diagnostics

After the installation, it is recommendable to check that the hardware for the Bluetooth Software Suite (i.e. either a PC card or a USB adapter) has been installed properly. This is done by performing a *loopback test*. The test is carried out from the Bluetooth Configuration Tool:

1. Open the Microsoft Control panel.
2. Double-click **Bluetooth Configuration Tool**. The Bluetooth Configuration Tool dialog box opens:

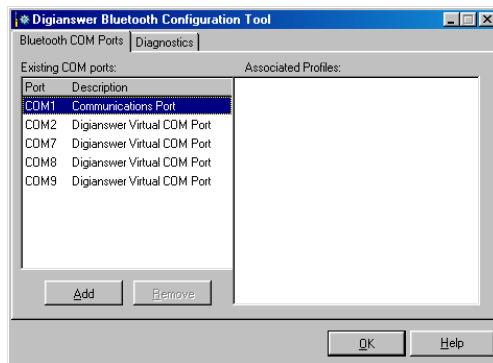

3. Click the tab **Diagnostics**. The following window opens:

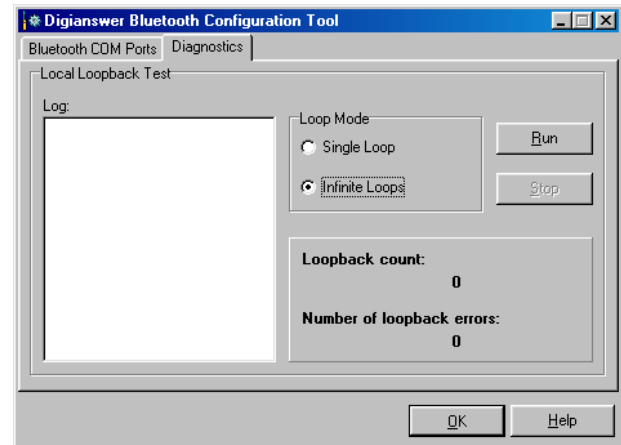

You can now perform a loopback test to check that the hardware is working properly:

4. In **Loop Mode**, select either **Single Loop** (to test a single loop) or **Infinite Loops** (to test a number of loops). We recommend that you choose the latter (which is also the default setting).
5. To start the test, click **Run**. When in the loop mode Infinite Loops, the test will run until you click **Stop**.
6. In **Loop Count** you can see the number of loops tested. The number of **Errors** should always be: 0. If the test shows one or more errors, your hardware has probably not been installed correctly. We recommend that you:

- Ensure that the hardware is installed correctly, whether a matter of inserting a PC card or connecting a USB adapter (cf. the Installation Manual).
- Restart your computer.

Appendices

Appendix A: Profiles

The following table shows which profiles the Bluetooth Software Suite currently supports and which role each profile plays:

The profile:	Supports the following:
Ethernet Network	Network service
Generic Audio	Audio service
OBEX File Transfer	File transfer
OBEX Object Push	Object transfer
Serial Port	Bluetooth COM port service
Generic Access	All other profiles
Service Discovery Application	Service discovery
Dial-up Networking	DUN service (as data terminal)
Fax	FAX service (as data terminal)
LAN Access	LAN service (as data terminal)
Generic Object Exchange	OBEX File Transfer and OBEX Object Push profiles

Appendix B: List view icons

In the Bluetooth Neighborhood list view, the following icons are used to represent remote devices and remote services respectively:

Remote devices:



Desktop computer



Laptop computer



Server-class computer



Handheld PC/PDA



Palm sized PC/PDA



Cellular phone



Cordless phone



Smart phone



Unclassified phone



LAN access point



LAN access point, 33-50% utilized



Audio – headset



Unclassified audio



Modem



Peripheral



Unclassified

Remote services:

Audio



Bluetooth COM port



LAN



DUN



FAX



Business card



Network



Inbox



Shared Files



Device folder

Appendix C: Regulatory statements

General

This product complies with any mandatory product specification in any country where the product is sold. In addition, the product complies with the following.

European Union (EU) and EFTA

This equipment complies with the R&TTE directive 1999/5/EC and has been provided with the CE mark accordingly.

Note that the radio frequency band used by this equipment has not been harmonized in all of the EU.

United States of America and Canada

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE. See FCC 47CFR part 15.19(b)(2).

This device complies with part 15 of the FCC rules and with RSS-210 / RSS-139 of the Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note that any changes or modifications to this equipment not expressly approved by the manufacturer may void the FCC authorization to operate this equipment.

Canada

IC Notice

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment that is installed outdoors is subject to licensing.

<In French>

Pour empêcher un brouillage radioélectrique au service faisant l'objet d'une licence, cet appareil doit être utilisé à l'intérieur et loin des fenêtres afin de fournir un écran de blindage maximal. Au cas où une installation en plein air, le matériel doit faire l'objet d'une licence.

Japan

この機器の使用周波数帯では、電子レンジ等の産業・科学・医療用機器のほか工場の製造ライン等で使用されている移動体識別用の構内無線局（免許を要する無線局）及び特定小電力無線局（免許を要しない無線局）が運用されています。

1 この機器を使用する前に、近くで移動体識別用の構内無線局及び特定小電力無線局が運用されていないことを確認して下さい。

2 万一、この機器から移動体識別用の構内無線局に対して電波干渉の事例が発生した場合には、速やかに使用周波数を変更するか又は電波の発射を停止した上、下記連絡先にご連絡頂き、混信回避のための処置等（例えば、パーティションの設置など）についてご相談して下さい。

3 その他、この機器から移動体識別用の特定小電力無線局に対して電波干渉の事例が発生した場合など何かお困りのことが起きたときは、次の連絡先へお問い合わせ下さい。

連絡先： _____

Japan office:

Address: BIA Inc.

No. 202 Gobancho House

4-22 Gobancho

Chiyoda-Ku, Tokyo 102-0076

Phone 03 5276 5984

Fax: 03 5276 0625

E-mail: biasib@gol.com

Index

- About this manual, 2
- Advanced link policy, 54, 55
- Audio, 30
- Audio link establishment, 30
- Audio path, 45
- Audio quality, 45
- Audio settings, 45
- Basic functions, Bluetooth Neighborhood, 11
- Bluetooth audio device, 30
- Bluetooth bonding, 57
- Bluetooth COM port link establishment, 36
- Bluetooth COM port settings, 33
- Bluetooth COM port, what is, 32
- Bluetooth COM ports, general information, 32
- Bluetooth COM ports, how to add, 34
- Bluetooth COM ports, how to associate and remove profiles, 35
- Bluetooth COM ports, how to delete, 34
- Bluetooth COM ports, interoperability, 32
- Bluetooth COM ports, profiles, 32
- Bluetooth Configuration Tool – Bluetooth COM Ports dialog box, 33
- Bluetooth Configuration Tool – Diagnostics dialog box, 64
- Bluetooth Configuration Tool, how to open, 33
- Bluetooth device class, 51
- Bluetooth Neighborhood, 5
- Bluetooth Neighborhood properties, 50
- Bluetooth Neighborhood properties – General dialog box, 50
- Bluetooth Neighborhood properties – Settings dialog box, 51
- Bluetooth Neighborhood window, 7
- Bluetooth Neighborhood, how to open, 6
- Bluetooth speaker phone, 30
- Bluetooth speaker phone settings, 46
- Bluetooth Speaker Phone Setup Wizard, 46
- Bluetooth unit settings, 59
- Bluetooth unit state indication, 59
- Bluetooth unit, how to enable/disable, 59
- Bonding, 57
- Bonding expiration, 58, 61
- Bonding expiration, remote device settings, 62
- Business card transfer, 24
- Business card, location, 42
- Business card, making default available, 20
- Canada, 69
- Caution, 2
- Class of local device, 51
- COM port link establishment, 36
- COM port settings, 33
- COM port, what is, 32
- COM ports, general information, 32
- COM ports, how to add, 34
- COM ports, how to associate and remove profiles, 35
- COM ports, how to delete, 34
- COM ports, interoperability, 32
- COM ports, profiles, 32
- Connectability mode, 56
- Default Bluetooth bonding expiration, 58
- Default business card, location, 42
- Default business card, making available, 20
- Device class, 51
- Device discovery, 12
- Device discovery length, 52
- Device discovery period, 52
- Device discovery, manually or automatically, 52
- Device discovery, settings, 52
- Device name, 11

- Devices, icons, 67
- Devices, remote, in list view, 10
- Diagnostics, 64
- Dial-up networking settings, 49
- Disabling Bluetooth unit, 59
- Disabling profile, 41
- Disconnecting, 15
- Discoverability mode, 56
- DUN, 37
- EFTA, 69
- Enabling Bluetooth unit, 59
- Enabling profile, 41
- Encryption mode, 56
- European Union (EU) and EFTA, 69
- Expire discovered devices, 53
- FAX, 38
- File transfer, 28
- File transfer settings, 44
- Files, receiving, 29
- Files, receiving, security, 44
- Getting started, 5
- Hardware, 63
- Help, 19
- Historical information, remote device, 61
- IC Notice, Canada, 69
- Icons, list, 67
- Inbox, 9
- Interoperability, Bluetooth COM ports, 32
- Interoperability, profiles, 8
- Introduction, 5
- Japan, 70
- LAN, 36
- LAN Access settings, 48
- LED operation, 63
- Link establishment, 14
- Link establishment, audio, 30
- Link level security, 56
- Link policy settings, advanced, 54
- List view, 9
- List view icons, 67
- Local device name, 11
- Local device settings, 40
- Local loopback test, 64
- Local profile properties, 40
- Local profiles and services, 8
- Local profiles, interoperability, 8
- Local profiles, list, 66
- Local services, 20
- Microsoft Outlook, making default business card available, 20
- Microsoft Outlook, sending objects directly from, 25
- My Inbox, 9
- My Inbox, location, 42
- My Shared Files, 9, 28
- My Shared Files, location, 44
- Name of local device, 11
- Naming local device, 11
- Network, 39
- Network link establishment, 40
- Networks, setting up, 39
- OBEX file transfer settings, 44
- OBEX Object Push - Security, 43
- OBEX Object Push settings, 42
- Object Editor, creating objects, 26
- Object Editor, editing business card, 23
- Object Editor, making default business card available, 21
- Object Inbox, location, 42
- Object Push - Security, 43
- Object Push settings, 42
- Object transfer, 20
- Objects, creating in the Object Editor, 26
- Objects, receiving, 25
- Objects, sending directly from Microsoft Outlook, 25

- Online help, 19
- PC card, 63
- PC speaker, 31
- Previously discovered devices, 52
- Profile properties, 40
- Profile, enabling/disabling, 41
- Profiles and services, 8
- Profiles, interoperability, 8
- Profiles, list, 66
- Receiving files, 29
- Receiving objects, 25
- Regulatory statements, 69
- Remote device properties, 60
- Remote device properties – General dialog box, 60
- Remote device properties, general information, 61
- Remote device settings, 60
- Remote device settings, bonding expiration, 62
- Remote device settings, trust, 61
- Remote device settings, trust relationship, 62
- Remote device, historical information, 61
- Remote device, services used, 61
- Remote devices, icons, 67
- Remote devices, in list view, 10
- Remote devices, view details, 16
- Remote services, icons, 68
- Remote services, in list view, 10
- Security mode, 56
- Security, link level, 56
- Security, OBEX Object Push, 43
- Security, receiving files, 44
- Security, settings, 55
- Service discovery, 13
- Services and profiles, 8
- Services, icons, 68
- Services, local, 20
- Services, remote, in list view, 10
- Settings, Bluetooth Neighborhood properties, 51
- Shared Files, 9
- Shared Files folder, location, 44
- Speaker, 31
- Speaker phone, 30
- Speaker phone settings, 46
- Status information, 15
- Technical specifications, USB adapter, 63
- Trust relationship, 61
- Trust relationship, remote device settings, 62
- Trust, remote device settings, 61
- Trust, settings, 53
- United States of America and Canada, 69
- USB adapter, 63