

## About i-data

Founded in 1981 and based in a suburb of Copenhagen, Denmark, the i-data international group is comprised of two divisions. i-data Printing Systems is the market and technology leader in the printing connectivity market, and LASAT Networks is one of Europe's leading vendors of Internet connectivity products for small to medium-sized enterprises. The combined company has an installed base of several million units. The i-data international group has approximately half the Fortune 500 as customers, as well as thousands of small to medium-sized enterprises worldwide. The company's products are available in more than 40 countries through an extensive network of distributors and sales offices.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

### CAUTION:

Changes or modifications not expressly approved by i-data could void the user's authority to operate this equipment according to part 15 of the FCC rules.

### CE conformance

This product has been developed and produced in accordance with the EMC directive and the Low Voltage directive and therefore carries the CE mark.

Company and product names mentioned in this guide are trademarks or registered trademarks of their respective owners.




## ENGLISH

This Quick Guide explains how to install your PrintServer.

## Installation

1. Make sure no power cord is connected to the PrintServer.
2. Connect network cable to the **10/100BASE-TX** port on the rear panel of the PrintServer.
3. The PrintServer is equipped with two Centronics parallel ports: **PAR1** and **PAR2**, and an RS232 serial port: COM1. Connect the printer to any of these.
4. Power on the printer.
5. Connect power supply, turning on the PrintServer. The green LEDs on the PrintServer front will blink during the power on and self-test cycle. Only use the power supply provided with the product. The output is rated 12Vdc, 800 mA.
6. The complete Installation Guide will be printed on the printer connected to **PAR1**.

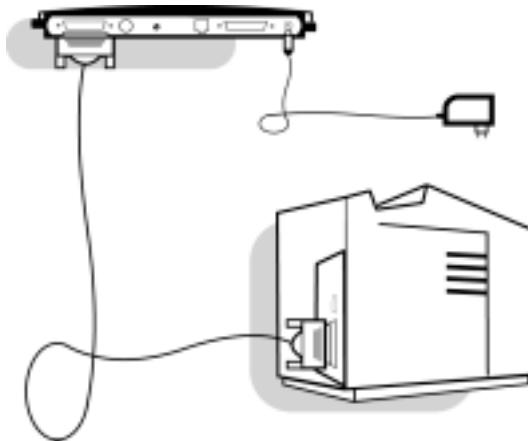

## Generate Settings Printout

1. Make sure both PrintServer and printer is powered on.
2. Generate a settings printout by pressing the **TEST** key once on the PrintServer's rear panel. The test page(s) shows the internal settings of the PrintServer. The page(s) are printed on the printer connected to **PAR1**.

## ESPAÑOL

Explica la manera de instalar el servidor de impresión.

## Instalación

1. Asegúrese de que el cable de alimentación no esté conectado al servidor de impresión.
2. Conecte el cable de la red al puerto **10/100BASE-TX** situado en el panel posterior del servidor de impresión.
3. El PrintServer está equipado con dos puertos paralelos Centronics: **PAR1** y **PAR2**, y un puerto serie RS232: COM1. Conecte la impresora a cualquiera de estos puertos.
4. Encienda la impresora.
5. Conecte la alimentación eléctrica encendiendo el servidor de impresión. Los LEDs verdes situados en la parte delantera del servidor de impresión parpadearán durante el ciclo de encendido y autocomprobación.
6. La Guía de instalación completa se imprimirá en la impresora conectada al puerto **PAR1**.

## Generar el impresión de los ajustes

1. Asegúrese de que tanto el servidor de impresión como la impresora estén encendidos.
2. Genere un impresión de los ajustes pulsando una vez el botón **TEST** situado en el panel posterior del servidor de impresión. La página o páginas de prueba mostrarán los ajustes internos del servidor de impresión. Estas páginas se imprimirán en la impresora conectada al puerto **PAR1**.