
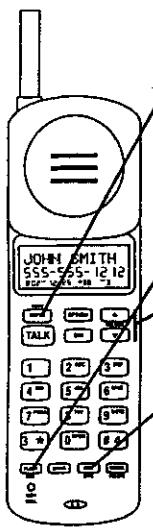
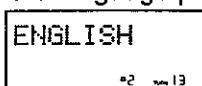


Changing the Language

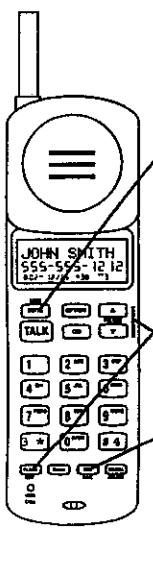

1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **2 ABC** to go to the language programming option.

ENGLISH
#2 13
3. Press **FLASH/EDIT** to change the setting. "ENGLISH" will begin flashing.
4. Use the **▲ ▼** keys to toggle between ENGLISH, ESPANOL, and FRANCAIS.
5. When the setting you desire is displayed, press **MENU/SAVE** to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **MUTE/MENU** to return to the idle screen.


Turning the First Ring On or Off




1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **3 DEF** to go to the first ring programming option.


FIRST RING
On
#3 13
3. Press **FLASH/EDIT** to change the setting. "On" will begin flashing.
4. Use the **▲ ▼** keys to toggle between On and Off.
5. When the setting you desire is displayed, press **MENU/SAVE** to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **MUTE/MENU** to return to the idle screen.

Setting the Time and Date

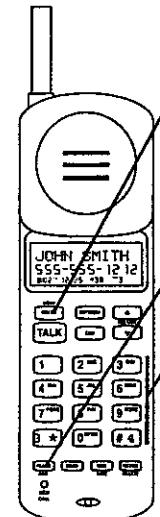

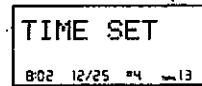
1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **4 GHI** to go to the time set programming option.

TIME SET
8:02 12/25 #4 13
3. Press **FLASH/EDIT** to change the setting. The month will begin flashing.
4. Use the dial pad to enter the month in two-digit format. The date will begin flashing.
5. Use the dial pad to enter the date in two-digit format. The hour will begin flashing.
6. Use the dial pad to enter the hour in two-digit format. The minutes will begin flashing.
7. Use the dial pad to enter the minutes in two-digit format. AM and PM begin flashing.
8. Use the dial pad to choose between AM and PM, where **1** is AM and **2** is PM.
9. When the final setting is programmed, the time and date are automatically saved. A double beep will sound and you are returned to the options menu.
10. Continue with programming or press **MUTE/MENU** to return to the idle screen.

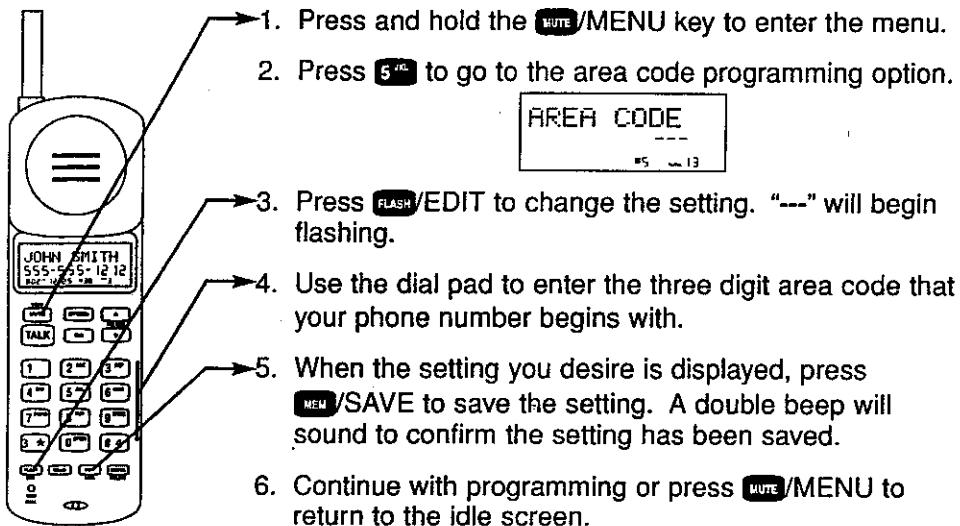Setting the Area Code




Tip: Do not use the AREA CODE programming if you are required to dial 10 digits (XXX-XXX-XXXX) to dial a local number.

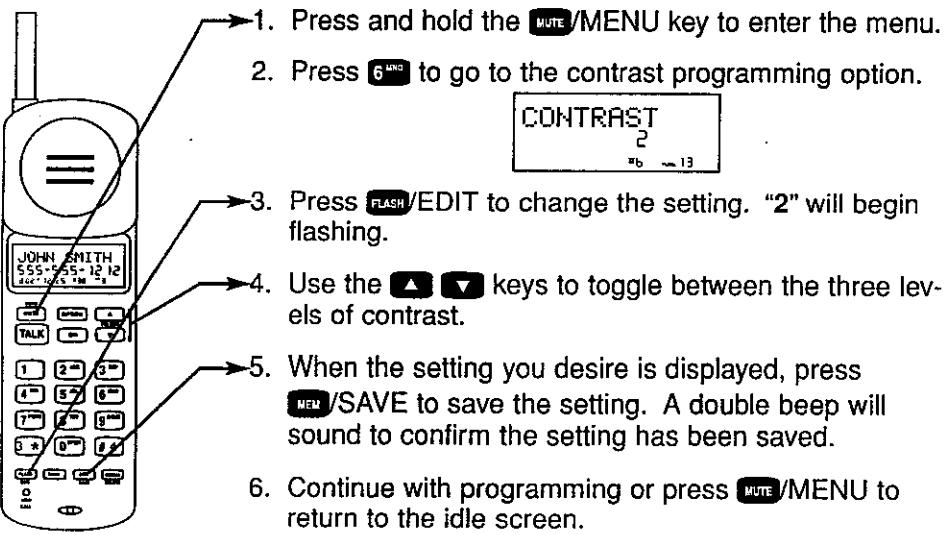Adjusting the Contrast




Setting the PBX Number

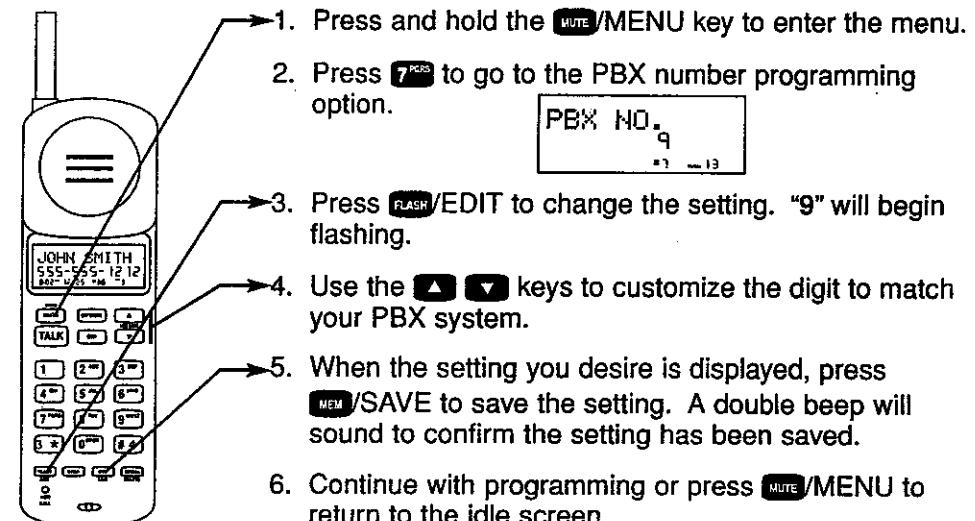


Note: The number programmed here is not active unless PBX mode is On.

Turning PBX Mode On or Off

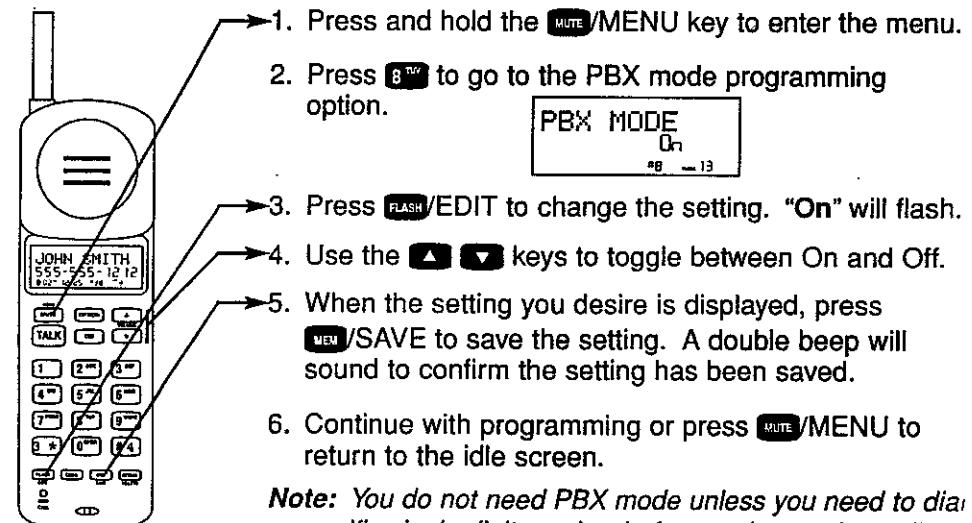

Note: You do not need PBX mode unless you need to dial a specific single digit number before each outgoing call.


Changing the Pause Time

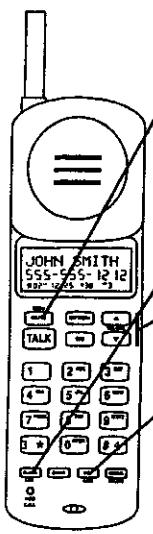

1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **9** to go to the pause time programming option.
3. Press **FLASH/EDIT** to change the setting. "2" will begin flashing.
4. Use the **▲** **▼** keys to select the desired dialing delay.
5. When the setting you desire is displayed, press **MEM/SAVE** to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **MUTE/MENU** to return to the idle screen.

PAUSE TIME
2
#9 → 13

Deleting Message Waiting Indication

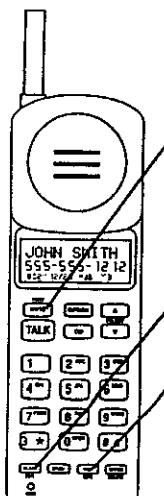


Clears any current message waiting indication. See page 40 for more information about message waiting.

1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **0** to go to the message waiting programming option.
3. Press **FLASH/EDIT** to reset the message waiting indication. "DELETE" will begin flashing.
4. Press **MEM/SAVE** to delete the indication. A double beep will sound to confirm.
5. Continue with programming or press **MUTE/MENU** to return to the idle screen.

MSG WAITING
DELETE
#10 → 13

Turning Auto Answer On or Off

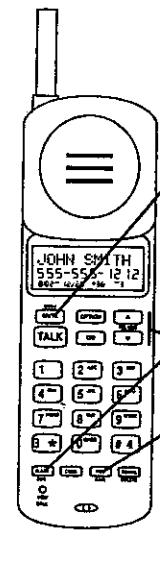


Turn on and off the auto answer feature. When on, the phone will automatically answer an incoming call if the handset is in the base.

1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **4*** to go to the auto answer programming option.
3. Press **FLASH/EDIT** to change the setting. "On" will flash.
4. Use the **▲** **▼** keys to toggle between On and Off.
5. When the setting you desire is displayed, press **MEM/SAVE** to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **MUTE/MENU** to return to the idle screen.

AUTO ANSWER
On
#11 → 13

Disabling the Ring for Private Calls

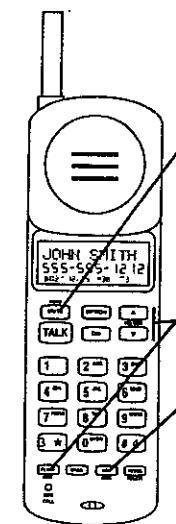

Turns on and off the ring for all calls where the caller has blocked their caller ID.

1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **▼** twice to go to the private ring programming option.
3. Press **FLASH/EDIT** to change the setting. "On" will flash.
4. Use the **▲** **▼** keys to toggle between On and Off.
5. When the setting you desire is displayed, press **MEM/SAVE** to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **MUTE/MENU** to return to the idle screen.


PRIVATE RNG
On
#12 → 13

Note: The phone will ring once when set to "Off" unless First Ring is also set to "Off".


SETTINGS

Disabling the Ring for Unavailable Calls

Turns on and off the ring for all calls where caller ID information is unavailable.

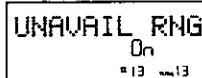1. Press and hold the **MUTE/MENU** key to enter the menu.
2. Press **▼** to go to the unavailable ring programming option.

UNAVAIL RNG
On
■ 13 ■ 13
3. Press **FLASH/EDIT** to change the setting. "On" will begin flashing.
4. Use the **▲ ▼** keys to toggle between On and Off.
5. When the setting you desire is displayed, press **MEN/SAVE** to save the setting. A double beep will sound to confirm the setting has been saved.
6. Continue with programming or press **MUTE/MENU** to return to the idle screen.

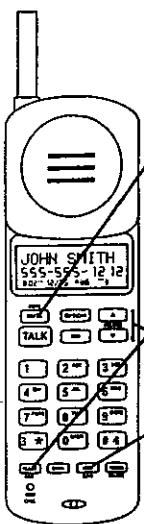Note: The phone will ring once when set to "Off" unless First Ring is also set to "Off."





SPEED DIALING

The IBM-3455 will store up to 20 speed dial numbers in the order that they are programmed. No duplicate numbers can be stored.

Storing Phone Numbers

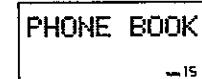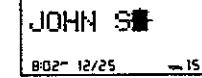

1. With the handset in the idle state, press **MEN**.

PHONE BOOK
— 15
JOHN SMITH
802-12/25 — 15
2. Press **FLASH/EDIT** to create a new phone book entry.

JOHN SMITH
802-12/25 — 15
3. Enter the name you wish to store using the dial pad to enter the letters (up to 15 letters). See the following letter table for how to program the letters using the number pad. To move the cursor to the right, such as to add a space between words, push **#**.

5	666	44	66	1	7777	6	444	8	44
J	O	H	N	space	S	M	I	T	H
4. Press **■**, and dial the number you wish to store (up to 16 digits). Press **REDIAL** to insert a dialing pause into the number.

JOHN SMITH
18885*
802-12/25 — 15
5. Press **MEN/SAVE** when finished to store the number to memory.

Note: If there are no memory locations left in the speed dial directory the IBM-3455 will display "MEMORY FULL." To continue with memory programming, you must delete or edit existing speed dial numbers.

*Note: If you mis-type entering the phone number, you can move through the number and edit it by pressing and holding the **◀ ▶ # ▶**. To delete a flashing character, press the **REDIAL/DELETE** key; to delete a flashing number, press and hold the **REDIAL/DELETE** key.*

Letter Table

Key	1st Press	2nd Press	3rd Press	4th Press	5th Press	6th Press	7th Press	8th Press
1	Space	&	'	()	*	.	1
2	A	B	C	2	A	B	C	2
3	D	E	F	3	D	E	F	3
4	G	H	I	4	G	H	I	4
5	J	K	L	5	J	K	L	5
6	M	N	O	6	M	N	O	6
7	P	Q	R	7	P	Q	R	7
8	T	U	V	8	T	U	V	8
9	W	X	Y	Z	(P)	W	X	Y
0	0	0	0	0	0	0	0	0


Viewing the Phone Book

1. Press **MEM** to enter the phone book.

2. Press **▲** **▼** to locate the number you wish to view.

3. If the name or number is more than 11 characters, press the **#** **▼** and ***** button to view the rest of the display (as indicated by the arrows in the top line of the display).

4. Press **MEM** to exit the phone book, or let the phone book time out.

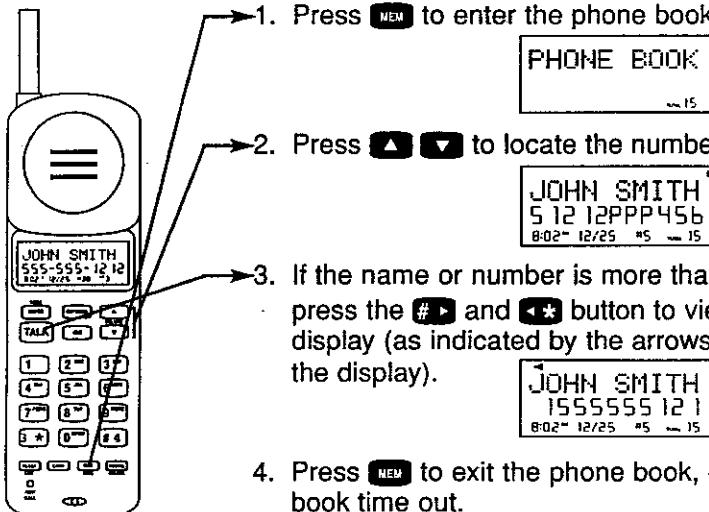


Making Calls From the Phone Book

1. To make a call from the phone book, press **MEM**.

2. Locate the number you wish to dial using **▲** **▼**.

3. Push **TALK**. The display will show the directory name, and begin dialing the number.

4. When you are finished with your call, press **TALK**, or place the handset back on the base.

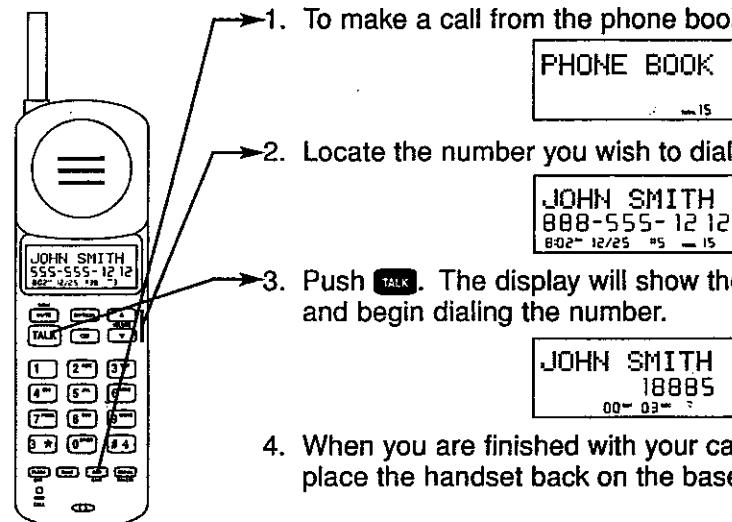

Note: Be sure to check that the line is not in use by another extension.

Deleting a Stored Number


1. Press **MEM**.

2. Locate the number you wish to delete using **▲** **▼**.


3. Press **REDIAL/DELETE**. The display will show "ERASE ITEM?"

4. Press **REDIAL/DELETE** to delete the phone book memory. The display will briefly show "ERASED" and return to the previous phone book entry.

5. When you are finished press **MEM**.

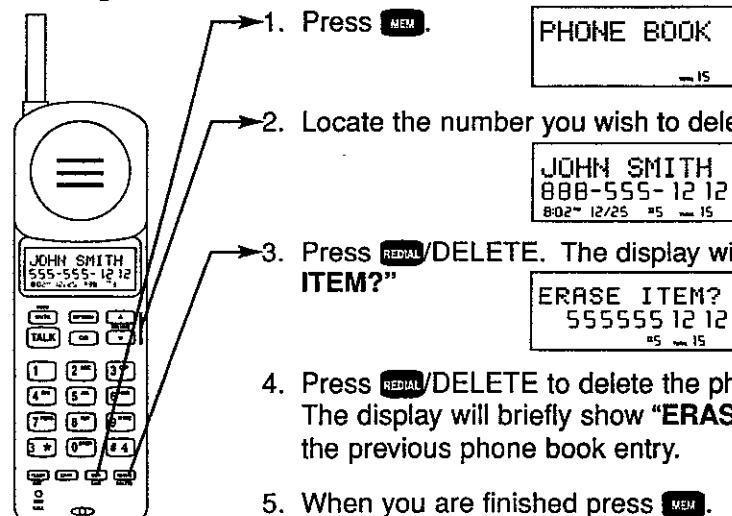

Editing a Stored Number

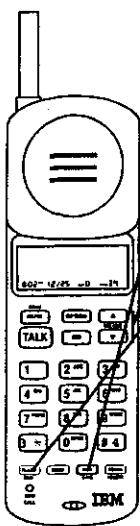

1. Press **MEM**.
2. Locate the number you wish to edit using **▲** **▼**.
3. Press **FLASH/EDIT**. The entry will display with a flashing prompt over the first character.
4. Move the cursor to the section you wish to edit using the **▲**, **▼**, **◀**, and **▶** keys. When moving through the number field, it will be necessary to press and hold the **◀** and **▶** keys for more than one second until the cursor moves, since just pressing them enters a * or # into the dialing sequence. Any dial pad key pressed will be inserted in front of the cursor.
5. To delete a character, press the **REDIAL/DELETE** key. To delete a number, press and hold the **REDIAL/DELETE** key for more than one second until the number is deleted, since if the **REDIAL** key is just pressed, it inserts a pause in the dialing sequence.
6. When the number is edited as you desire press **MEM/SAVE** to store the edited entry.

PHONE BOOK
~15

JOHN SMITH
888-555-1212
8:02- 12/25 *5 ~15

Preferred (VIP) Calls

You can assign stored numbers as preferred calls. When an incoming call is matched to a stored number designated as "VIP," the phone will generate a special ringer sound after the first ring (caller ID information must be received first).

To mark a phone book entry as preferred:

1. Press **MEM**.
2. Press **▲** or **▼** to go the desired entry.
3. Press the **MUTE/MENU** button once. The LCD will show the "VIP" icon.
4. Press **MEM** to exit the phone book.




Blocked (REJ) Calls

If you do not want to have the phone ring when a specific number calls, you can store that number in the phone book and assigned it as blocked. When an incoming call is matched to a stored number designated as "REJ," the phone will not ring after the first ring (caller ID information must be received first).

To mark a phone book entry as blocked:

1. Press **MEM**.
2. Press **▲** or **▼** to go the entry to be blocked.
3. Press the **MUTE/MENU** button twice. The LCD will show the "REJ" icon.
4. Press **MEM** to exit the phone book.

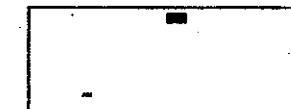

Caller ID allows the caller's name and phone number to be shown on the display before you answer the call. In order to use this feature you must first subscribe to Caller ID service with your telephone company.


When You Receive a Call

1. When the telephone rings, the caller's name and phone number appears on the display.
2. The new Caller ID record includes the name and number of the caller and the time and date the record is received. The New Call light will flash to indicate that you have a new Caller ID call stored in memory.

Note: When the Caller ID information is received, it is stored in memory so that this information can be recalled for later use. Up to 40 Caller ID calls can be stored.

Viewing the Caller ID List


This phone automatically stores the last 40 calls received. If a call is received from the same number more than once since the records were last viewed, no new entry is made, but the repeat call icon ("RPT") and the number of repeat calls is displayed.

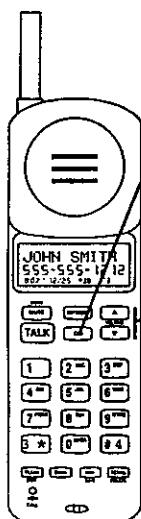


1. With the handset idle press **CD**.
2. Any unviewed (new) calls will be displayed first. The most recent call will be displayed. The information on the call will be displayed with the name, number, date, and time that the call was received.
3. To scroll to the next call, press **▲** or **▼**. The **▲** will go through the calls from the last call received to the first. The **▼** will allow you to view the calls from the first call received to the last.
4. Press **CD** to finish.




Caller ID Displays

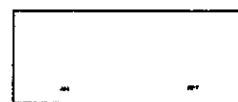


Display shows name and number, time and date of the call

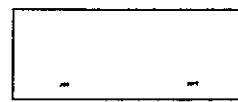

Display shows number-only service.

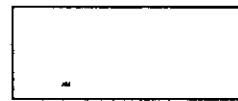

"UNAVAILABLE" will be displayed when Caller ID information is not available. This call was made from a telephone company that does not offer Caller ID services (including international calls).

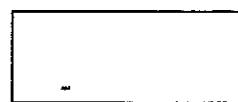


"PRIVATE" will be shown when a call is received from a blocked number. For privacy reasons, some states allow callers the option to prevent their telephone data from being displayed on the other party's Caller ID display.




Display shows when the Caller ID information was received incorrectly or only part of the data was received.



Note: When an error is received, none of the data from this call is saved in memory.

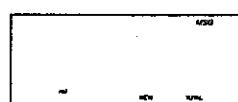

Display shows when a voice mail message has been received and is stored by message waiting service provided by the phone company.

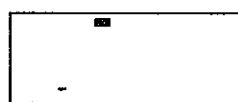

Display shows when the incoming call is a priority call.




This is displayed when **CD** is pressed and there is no Caller ID data stored.

Caller ID with Call Waiting Service


In order to use the "Call Waiting Caller ID" service you must subscribe to a telephone company that offers Caller ID service combined with "call waiting" service.

When a new call comes in while you are talking, you will hear a notification beep from the handset and the volume is momentarily muted. The new caller's name and phone number, if available, appears on the display. Once flash has been pressed, an "L2" in the lower right hand corner indicates the call waiting caller ID caller so you can keep track of who you are talking to.

- When you receive a "call waiting" call and you want to connect the call, press **FLASH**. The active call will be placed on hold and the new call will be active.
- Press **FLASH** to alternate between calls.
- Press **TALK** to end the call or place the handset back on the base.

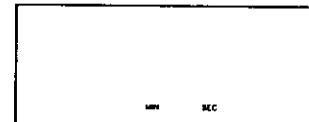

Storing Caller ID Records

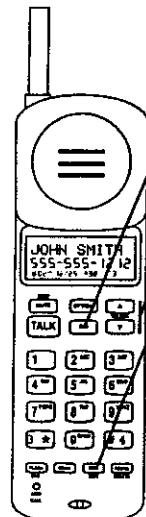

1. Press **CID**.
2. Use **▲** **▼** to scroll to the call record you wish to store into the phone book.
3. Press **MEM/SAVE**.
4. The display will show "SAVED."
5. If you wish to edit the newly stored number, edit it in the phone book (page 33, "Editing a Stored Number").
6. Press **CID** to exit the Caller ID log.

JOHN SMITH
555-555-1212
8:02- 12/25 *38 -3

Note: When numbers are stored into the phone book, a "1" is inserted in front of the number. If you must dial a 10-digit number for local calls, you must edit the number to exclude that digit to dial out correctly.

Deleting Caller ID Records

When viewing the Caller ID information you can delete a single call record or all the call records.



To Delete a Single Record

1. Press **CID**.
2. Use **▲** **▼** to scroll to the call record you wish to delete.
3. Press **REDIAL/DELETE**. The display will show "ERASE ITEM?"
4. To delete the record press **REDIAL/DELETE**.
5. Press **CID** to exit the Caller ID log.

JOHN SMITH
555-555-1212
8:02- 12/25 *38 -3



To Delete All Records

1. Press **CID**.
2. Press and hold **REDIAL/DELETE**. The display will show "ERASE ALL?"
3. To delete all the Caller ID records press **REDIAL/DELETE**. The display will show "ERASE ALL" and then return to the idle display.


JOHN SMITH
555-555-1212
8:02- 12/25 *38 -3



CALLER ID

Returning Caller ID Calls

You can return calls by using the Caller ID callback feature.

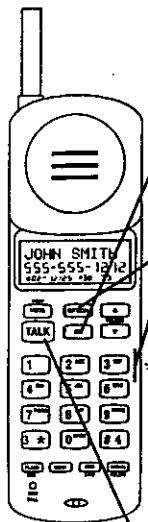

1. Press **CID**.

JOHN SMITH
555-555-1212
8:02 AM 12/25 0:38 -3

2. Use the **▲** **▼** to scroll to the call record you wish to call back.

3. If the number displayed is not correct (needing 7, 10, 11 digits), use the **OPTION** key to toggle the number to display the correct number of digits to be dialed.

JOHN SMITH
555-555-1212
8:02 AM 12/25 0:38 -3

Press **OPTION**

JOHN SMITH
555-1212
8:02 AM 12/25 0:38 -3

Press **OPTION**

JOHN SMITH
15555551212
8:02 AM 12/25 0:38 -3

5. Press **TALK** to dial out the displayed number.

6. Press **CID** to cancel dialing.

7. To end the call, press **TALK**, or place the handset back in the base.

MESSAGE WAITING

If you subscribe to voice mail from the telephone company and if there are voice messages that have been left in your voice mailbox, the display will show "MSG WAITING" (see note below).

MSG WAITING
8:02 AM 12/25 0:38 -3


Note: This function requires voice mail subscription from the local telephone company. Furthermore, the local phone company must provide a type of voice mail signaling called "FSK" (Frequency Shift Key). Not all telephone companies have the visual message waiting feature available. Please contact your local telephone company to check if this is available in your area.

Tip: If you wish to delete the "Message Waiting" message, delete it as described in the handset settings section "Deleting the Message Waiting Indication" (see page 27).

New Call Light

When you receive a Caller ID message, voice mail message, or when the phone is ringing, the New Call light will flash accordingly.

- For Caller ID, the New Call light will flash to indicate that you have a new Caller ID call stored in memory.
- When you have a voice message waiting the New Call light will flash at a slower rate.

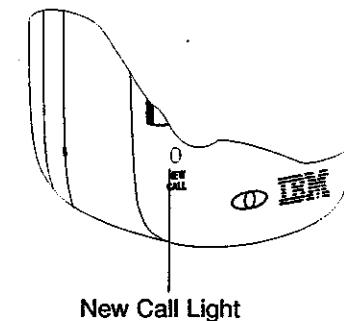

New Call Light

Using the Handset Finder (PAGE)

- Press **PAGE** on the base. If the handset is within range, the handset will beep for 20 seconds.
- Place the handset back into the base or press the **TALK** key on the handset to stop the page/find feature.

Out-of-Range Warning

If you venture too far from the base, the handset will beep and the display will show "OUT RANGE." Reverse your direction to re-establish connection with the base or the call will be dropped. When the base detects that the handset has been out of range for 20 continuous seconds it will release the engaged line. If you try to access the line when the handset is out of range of the base, the display will show "TRY AGAIN."

Channel Changing

If you are experiencing interference during a telephone call, press the **CHAN** key. The IBM-3455 will scan up to 50 channels and select the clearest one to provide the best possible reception.

Your IBM-3455 telephone has been designed to give years of trouble-free service. It is a sensitive electronic instrument. To assure its longevity, please read the following maintenance instructions.

1. Keep the IBM-3455 away from heat as high temperatures can shorten the life of the electrical components and distort or melt its plastic parts.
2. The IBM-3455 should be kept free of dust and moisture. If it gets wet, wipe it dry immediately. Liquids can contain minerals that can corrode electronic circuits.
3. Handle your IBM-3455 gently and carefully. Dropping it can cause serious damage to circuitry, or the plastic case, which may result in malfunction.
4. Do not use any type of chemical or any abrasive powder to clean the cabinet. Use only mild detergents on a soft, damp cloth to clean the IBM-3455 telephone.
5. The IBM-3455 has built-in surge protection circuits that meet or exceed FCC requirements. However, an incident such as a lightning strike at or near the telephone lines, could cause serious damage.
6. If the IBM-3455 is installed in an area with frequent or severe electrical storms, it is suggested that the telephone be disconnected during these storms or that additional surge suppression equipment be added to the installation.
7. In the case of trouble with the telephone, do not attempt to repair the telephone yourself. It is the responsibility of users requiring service to report the need for service to our Service Department. They will make the necessary arrangements for repair or replacement.
8. If you should have any questions about the operation of your IBM-3455 telephone, please call our Service Department at 1-800-955-1009, between the hours of 9:00 A.M. and 9:00 P.M. Eastern time Monday - Friday. Or you may contact TT Systems LLC for technical assistance via our Internet Web site: www.ttsystems.com or e-mail: tech@ttsystems.com.
9. Please register your product online at www.ttsystems.com/CustomerSupport/RegOnline.asp

No dial tone/phone will not dial out.

- Check that the AC power adapter is plugged into a working AC power outlet.
- Check all telephone cord connections or try another wall jack.
- Do a basic reset of the phone: Disconnect the phone from the wall and remove the battery. Leave for 30 minutes and then re-install as instructed by the manual.

Can't hear the ring signal.

- Check the ringer volume controls; at the lowest level the ring may not be heard.

While on a call, you hear another call on the line or experience radio frequency interference.

- Switch channels to a clear channel.
- Check the wiring for bad connections.
- Do not use this phone within 20 feet of a working microwave. The microwave produces frequencies in this range which may cause interference. This interference is normal for all 2.4GHz phones and should not be considered a product defect.

The caller's name and/or phone number does not appear on the display.

- Make sure you have subscribed to Caller ID service (from local telephone company).
- Caller ID service may not work when the phone is connected to a Private Branch Exchange (PBX).
- The caller has requested that their phone number be suppressed from Caller ID service, or caller ID service is not available in their area. "Private" or "Unavailable" will appear on the display.
- You answered the call before Caller ID data was displayed, which usually occurs after the first ring.

New Call/Message Waiting Indicator doesn't work properly.

- Make sure you have subscribed to voice mail compatible with "FSK" type signaling (check with your local phone company). Verify that both the "On" and "Off" signals are activated. If your voice mail product from the local phone company does not support "FSK" signaling, you may use this feature as a New Call Indicator only.

Can't receive or make phone calls.

- Check to be sure the phone is set to the correct type of service, either Tone or Pulse.

Useful Features and Terms

Calendar/Clock — Visual display of date and time.

Caller ID — Enables users to view name and number of callers. Contact your local telephone company to subscribe to Caller ID Service.

Caller ID Log — Stores up to 40 Caller ID entries.

Call Timer — Allows timing of phone conversations.

Data/FAX Port — Allows connection of a PC or FAX machine directly into the phone versus a wall outlet.

Dial from Display — One-button dialing from the Caller ID log.

Display — The Liquid Crystal Display (LCD) shows clock and calendar, number dialed, low battery indicator, Caller ID information and call timer.

Flash — A signal sent by the phone to the local telephone company supporting services such as a call waiting.

Message Waiting Indicator — A visual indicator that there are new messages in your voice mail box. Requires FSK signaling by phone company. Contact your local telephone company to subscribe to Voice Mail Service.

Mute — Prevents the party on the other end of the line from hearing local conversation while still allowing that party to be heard.

New Calls Indicator — A visual indicator that new calls have been received.

Redial — Performs single button dialing of last number dialed.

Ringer Level Control — Permits adjustment of the ringer volume level.

Speed Dialing — Allows programming of frequently dialed numbers so that they can be dialed with the two touch speed dial button. (20 entries)

Tone/Pulse Option — Enables you to switch from pulse (rotary) to tone dialing.

Volume Level Control — Permits volume adjustment of the handset and headset during a conversation.

FSK type Signaling — A signal used to turn on and off the message waiting indicator, can be sent by the telephone company with a ringing signal or without.

Statement of limited warranty: TT Systems LLC warrants that for a period of one year from the date of purchase that this product 1) is free from defects in materials and workmanship and 2) conforms to its specifications. If this product does not function as warranted during the warranty period, TT Systems LLC, at its option, will either replace this product with one that is functionally equivalent or will refund your purchase price. These are your exclusive remedies under this warranty. Please call 1-800-955-1009 for warranty service.

This product is distributed and sold by TT Systems LLC, 7 Odell Plaza, Yonkers, New York 10701, the official licensee for this product. IBM, the IBM logo trademarks and the IBM trade dress are owned by International Business Machines Corporation and are used under a license from IBM. IBM does not manufacture this product and provides no warranty or support for this product. Please contact TT Systems LLC at 1-800-955-1009 for all questions/comments and service or support related to this product.

TT Systems LLC warrants that the IBM-3455 sold by TT Systems LLC within the continental limits of the United States, Hawaii and Alaska, are free from defects in materials and workmanship under normal use and service for 1 year. This warranty is applicable only to the original purchaser of the IBM-3455, when accompanied by a sales receipt stating the date of purchase and name of the company from which purchased. This warranty is in lieu of and excludes all other warranties, expressed or implied, including any implied warranty of merchantability or fitness, and of any other obligation on the part of TT Systems LLC.

If the IBM-3455 shall prove to be defective, then TT Systems LLC shall either replace, repair or refund the purchase price of the IBM-3455 at its discretion as follows: at no cost to the original purchaser except shipping charges, within 90 days of the date of purchase.

From 91 days to 365 days, you may return the IBM-3455 to TT Systems LLC at the following address: **TT Systems LLC, 4 Executive Plaza, Yonkers, New York 10701.** Shipping charges are at the customer's expense. Please include a copy of your sales receipt and a check or money order made out to TT Systems LLC for the amount of \$14.50 to cover shipping and handling.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusions or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. There is no informal dispute settlement mechanism available. This warranty will be voided by misuse, improper physical environment, accident, or improper maintenance by you.

THIS WARRANTY REPLACES ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF EXPRESS OR IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN THAT EVENT, SUCH WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.

Circumstances may arise where, because of a default on TT Systems LLC's part or other liability, you are entitled to recover damages from TT Systems LLC. In each such instance, regardless of the basis on which you are entitled to claim damages from TT Systems LLC (including fundamental breach, negligence, misrepresentation, or other contract or tort claim), TT Systems LLC is only liable for: 1. Damages for bodily injury (including death) and damage to real property and tangible personal property; and 2. The amount of any other actual direct damages or loss, up to the greater of \$500 or the price paid for this product.

UNDER NO CIRCUMSTANCES IS TT SYSTEMS LLC OR IBM LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINST YOU FOR LOSSES OR DAMAGES (OTHER THAN THOSE UNDER THE FIRST ITEM LISTED ABOVE); (2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR (3) SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF TT SYSTEMS LLC OR IBM ARE INFORMED OF THEIR POSSIBILITY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

TT Systems LLC reserves the right to make changes in the design of the IBM-3455 and to make additions or improvements to the IBM-3455 without incurring any obligation to modify any IBM-3455 previously sold.

(This is your mailing label)

**TT SYSTEMS LLC
7 Odell Plaza
Yonkers, NY 10701**

From:

To:

To order a replacement battery pack for the IBM-3455 cordless telephone, please mail this order form to the IBM licensee for this product.

**TT SYSTEMS LLC
7 Odell Plaza
Yonkers, NY 10701**

Ni-Cd Battery Packs are \$15.95 each

Please enclose a check or money order made out to **TT SYSTEMS LLC** for the respective amount. Shipping and handling is included in the price.
Please ship order to:

Name: _____
Company: _____
Address: _____

City: _____ State: _____ Zip: _____
355H