

VERTU

GETTING STARTED 1
REGISTER YOUR VERTU PHONE 1
VERTU PACKAGE CONTENTS 1
CD-ROM 1
NETWORKS 1
CONVENTIONS USED IN THIS GUIDE 1
GLOSSARY 1
YOUR VERTU PHONE - FRONT VIEW 2
YOUR VERTU PHONE - BACK VIEW 2
YOUR VERTU PHONE - SIDE VIEW 1 3
YOUR VERTU PHONE - SIDE VIEW 2 3
INSERTING THE BATTERY 4
DISPLAY ICONS AND INDICATORS 5
THE GLOWING EARPIECE 5
USING YOUR VERTU PHONE 5
PROTECTING YOUR VERTU PHONE 7
THE MAIN MENU 7
PERSONALISING YOUR VERTU PHONE 9
CD-ROM 11
CARE AND MAINTENANCE 11
SPECIFICATIONS 12
SECURITY 13
PIN CODE 13
PIN2 CODE 13
SECURITY CODE 13
SECURITY LEVEL 14
SECURITY MODULE 14
CALL BARRING 14
BARRING PASSWORD 14
FIXED DIALLING 14
CLOSED USER GROUP 15
AUTHORITY CERTIFICATES & USER CERTIFICATES . 15
MESSAGES 16
TEXT MESSAGES 18
MULTIMEDIA MESSAGES 20
AUDIO MESSAGES 23
E-MAIL 23
WIRELESS VILLAGE CHAT 24
VOICE MESSAGES 24
INFO MESSAGES 24
SERVICE MESSAGES 24
BLUETOOTH MESSAGES 25
SERVICE COMMANDS 25
CONTACTS 26
CONTACTS MEMORY 26
ADDING CONTACTS 27
ACCESSING CONTACTS 27
DELETING CONTACTS 27
CONTACT NUMBER AND TEXT TYPES 28
CONTACTS MENU 29
GROUPS 30
EDITING CONTACT NUMBERS 31
EDITING CONTACT NAMES 32

CALL HISTORY 33
THE CALL HISTORY 33
VIEWING THE CALL HISTORY 33
VIEWING MISSED CALLS 33
VIEWING RECEIVED CALLS 33
VIEWING DIALLED NUMBERS 33
VIEWING MESSAGE RECIPIENTS 33
CLEARING LOG LISTS 33
VIEWING CALL DURATION 33
VIEWING THE PACKET DATA COUNTER 34
VIEWING THE DATA TIMER 34
VIEWING THE MESSAGE LOG 34
VIEWING THE SYNC LOG 34
SETTINGS 35
DATE AND TIME 35
PROFILES 35
TONES 36
DISPLAY 36
MY SHORTCUTS 37
CONNECTIVITY 37
CALL SETTINGS 39
PHONE SETTINGS 40
CONFIGURATION 41
SECURITY 42
WORKSHOP RESET 42
SYNC AND BACKUP 42
DIGITAL RIGHTS MANAGEMENT 42
SIM SERVICES 43
ADDITIONS 44
GALLERY 44
GAMES AND APPLICATIONS 45
CALCULATOR 45
MUSIC PLAYER 45
VOICE RECORDER 46
NOTES 47
CALENDAR 48
CALENDAR 48
CALENDAR NOTES 48
TO-DO LIST 49
ALARM CLOCK 50
SETTING THE ALARM 50
WEB 51
AUTOMATICALLY SETTING UP WEB BROWSING . . . 51
MANUALLY SETTING UP WEB BROWSING 51
VERTU MOBILE 51
GO TO ADDRESS 51
BROWSE PAGES 51
SETTINGS 52
CLEAR THE CACHE 52
VERTU SERVICES 54
VERTU SELECT 54
VERTU FORTRESS 54
TRAVEL 54

SET UP MANUAL ROAMING 55

VERTU CONCIERGE 55

ACCESSORIES 56

WALL CHARGER 56

BATTERY 57

DATA CABLE 58

VEHICLE CHARGER 58

APPENDIX 60

SAFETY 60

SAR NOTICE – RM-466V 62

EU RECYCLING NOTICE 62

WARRANTIES 63

VERTU CONCIERGE TERMS AND CONDITIONS 66

1 GETTING STARTED

Register your Vertu phone

Vertu aims to provide you with the very best service possible.

To enable us to do this, please register your Vertu phone by visiting www.verturegistration.com or by calling Vertu Concierge using the dedicated key on the side of your phone.

Vertu package contents

- 1 Vertu Signature phone RM-466V
- 1 Signature Guide
- 1 Certificate of authenticity
- 1 Warranty and safety information
- 1 CD-ROM
- 2 Battery
- 1 Wall charger (comprising wall charger plug & data cable)
- 1 Car charger
- 1 Data cable
- 1 Microfibre polishing cloth

The package contents may vary slightly in accordance with regional regulations.

CD-ROM

- The CD-ROM provided with your Vertu phone contains the following items:
- > *Vertu PC Suite (for PC only)*
 - > *iSync Plug-in (for Macintosh only)*
 - > *An electronic version of the Reference Manual*
 - > *Link to set up your Vertu phone for MMS, browsing and e-mail*
 - > *A link to register your Vertu phone.*

For more information please see "CD-ROM" on page 11.

Networks

To use the phone you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Your service provider can give you instructions and explain what charges will apply.

The wireless device described in this guide is approved for use on the GSM 850/900/1800/1900 networks. Contact your service provider for more information about networks.

Conventions used in this guide

- Menu** Represents text that appears on your Vertu phone's display, for example, "From the stand-by display, press **Menu**".
- SEND** Represents a Vertu phone key, for example, "Press the **SEND** key to make the call".



Important information relating to safety.



Represents useful information or a quick way to access or operate a feature.




Represents points to be aware of when using your Vertu phone.

Glossary


NAVIGATION key	Move the cursor up, down, left and right by pressing on the key edges.
CENTRE SELECT key	Press this key to select an item.
Stand-by screen	The screen that displays when you repeatedly press the END key.
NUMBER keys	The keys that are used to enter text or numbers.
Default	Initial product setting as supplied by Vertu when the phone leaves our workshop.
SIM card	Subscriber Identity Module. This is a small card supplied by your service provider to insert into your Vertu phone for a network connection.
Service provider	The provider of your SIM card and all associated network services.
Network service	A feature which is made available at the discretion of your service provider.
Stand-by display	The display that appears when your Vertu phone is switched on, with Menu displayed at the bottom.
PIN number	A Personal Identification Number that allows only authorised access to your Vertu phone and SIM card. We strongly recommend that you set these up when you receive your new Vertu phone and SIM card.

VERTU

Your Vertu phone - front view

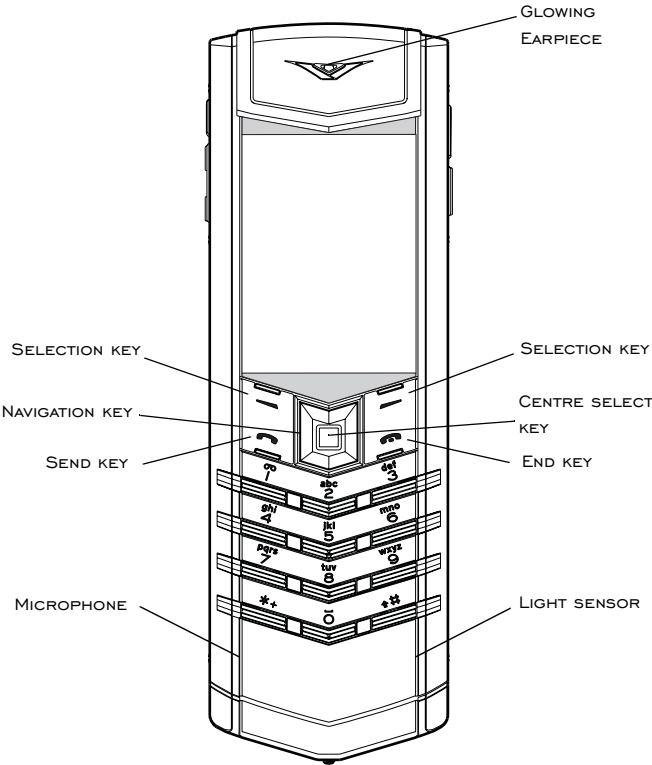


Your Vertu phone - back view

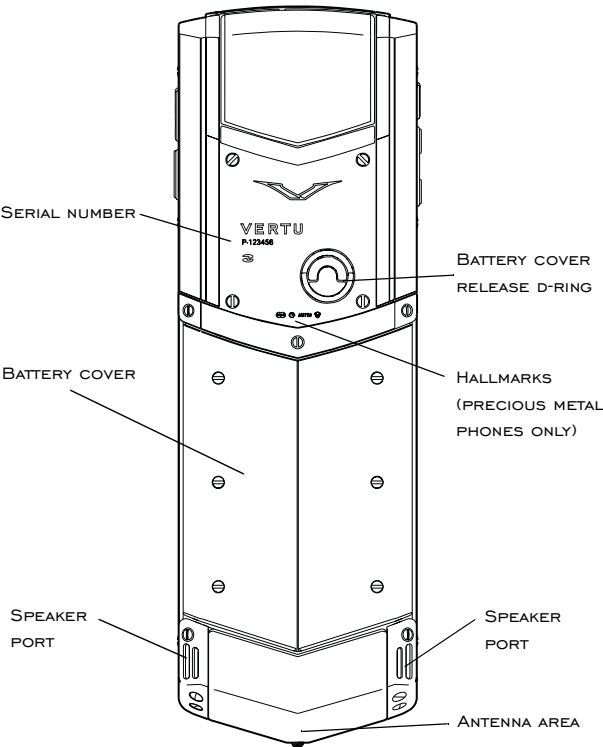


VERTU

Your Vertu phone - side view 1

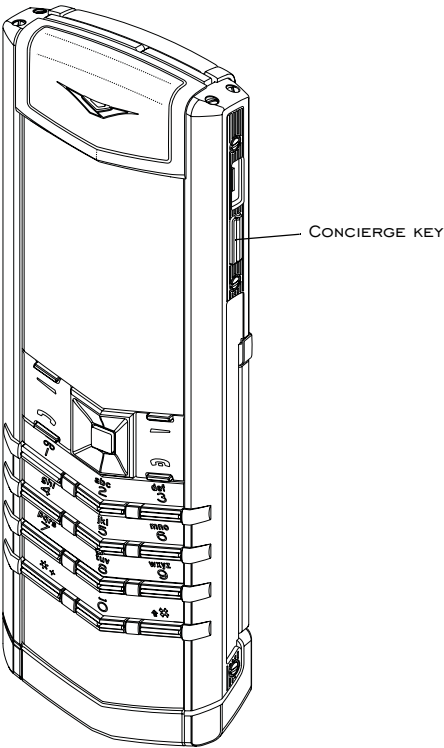

Your Vertu phone - side view 2

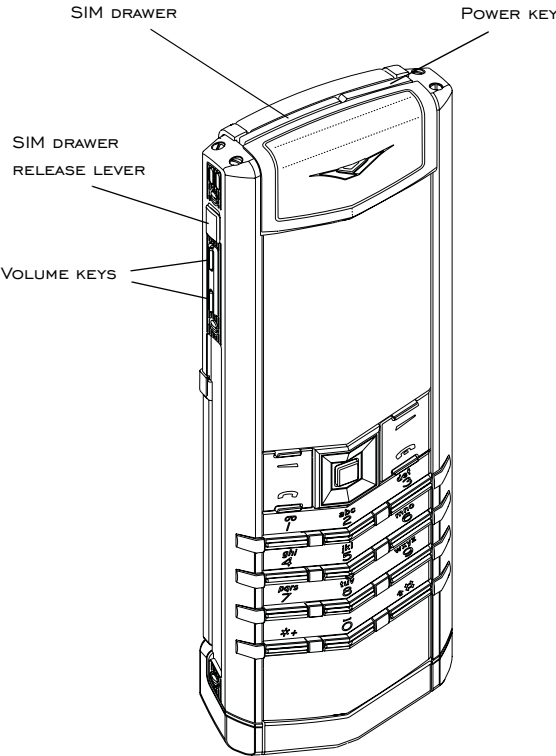


VERTU

Inserting the battery




Always switch the phone off and disconnect the charger before touching the battery.

Remove the battery cover

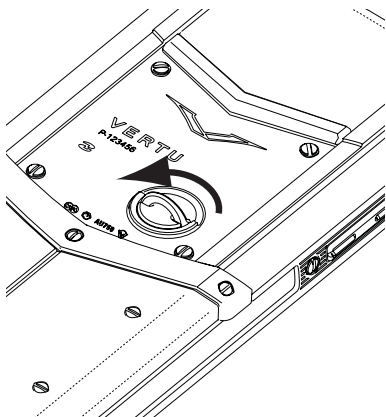


With the back of the Vertu phone facing you, lift the top half of the battery cover release D-ring with your finger nail.

Hold it between your thumb and forefinger and turn anticlockwise until the back cover pops open.

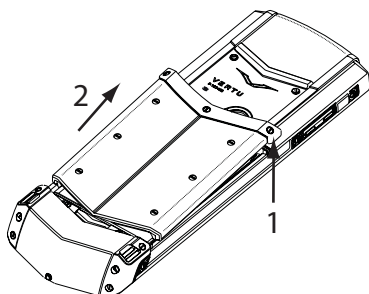

Raise the battery cover slightly (1) and then move the cover gently towards the top of the phone (2).


Insert the battery

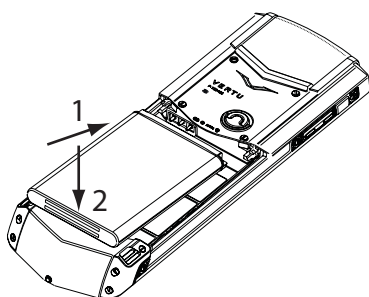


Insert the battery at an angle (1) so that the battery contacts align with the contacts in the battery compartment.

Lower the battery into the battery compartment (2) and ensure that the battery is seated correctly before replacing the battery cover.

Replace the battery cover

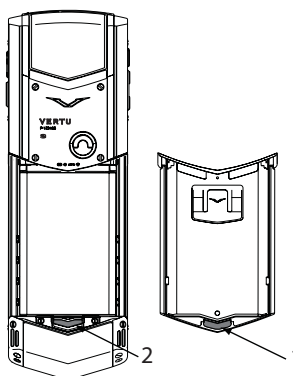

To replace the battery cover, carefully insert the internal clip (1) on the inside of the battery cover into the slot below the battery (2).

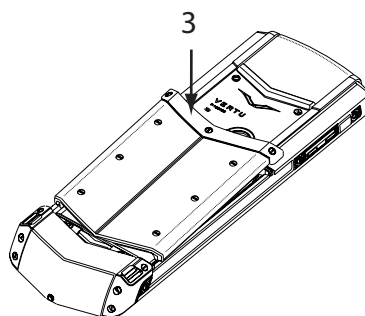

Lower the battery cover into position (3) until it clicks into place. The cover should close tightly using only light pressure.

Insert the SIM card




Always switch the phone off before inserting or removing the USIM/SIM card.

Keep SIM cards out of the reach of small children.

The SIM card and its contacts are easily damaged.

Be careful when handling, inserting or removing the SIM card.

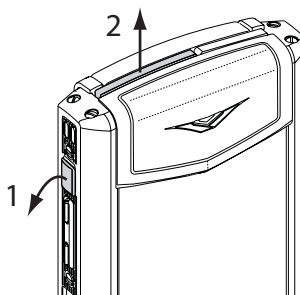


To open the SIM drawer, insert a finger nail under the SIM drawer release lever (1). Fully extend the lever until the SIM drawer (2) is half way out of the phone. Fully remove the SIM drawer from the phone.



Place the SIM in the SIM drawer, aligning the slanted corners and ensuring the SIM is seated properly in the drawer.

VERTU

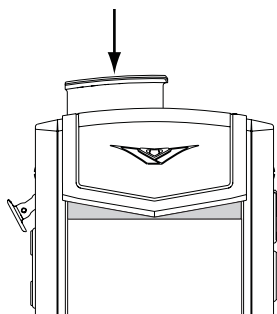

Hold the SIM and SIM drawer between your thumb and forefinger to ensure the SIM does not get damaged. Insert the SIM drawer containing the SIM into the top of the phone. Push it gently all the way in, making sure it clicks into position and the SIM lever is set fully in on the side of the phone.

Display icons and indicators

The display shows the current status of your Vertu phone.



The GSM signal strength indicator appears at the top left of the display.



This illustration shows a strong signal.



This illustration shows that the signal strength is weak. To obtain a stronger signal move to an area clear of obstructions that may block the signal.



The battery charge indicator appears at the top right of the display.



This illustration shows a fully charged battery.



This illustration shows that the battery charge level is low and you need to recharge your Vertu phone soon.

Status icons are displayed below the battery charge and signal strength indicators. The most commonly displayed icons are:



You have received one or more text messages.



You have missed a call.



You have a voice message waiting (may not be shown on all networks).



The **Flight** profile is selected. Alternative icons are displayed for other profiles.



Audible alerts are disabled. There is no ringing tone when you receive a call.



The keypad is locked.



An alarm is set.



Bluetooth is switched on.



A GPRS connection is active.

The glowing earpiece

The light in the glowing earpiece flashes at different rates to indicate the status of your Vertu phone.

- > *In stand-by mode the light flashes slowly.*
- > *If you have missed a call or received a message the light flashes quickly.*
- > *When you are charging your Vertu phone from the mains or through your computer the light will be on permanently.*

Using your Vertu phone

To help you start using your Vertu phone as quickly as possible, please read the following information carefully.

Switching your Vertu phone on and off




Press and hold the **POWER** key to switch your Vertu phone on or off.

The battery may not be fully charged when you first receive your Vertu phone. If a **Battery low** message is displayed when you first switch on your Vertu phone please see "Charging the battery" on page 56 for more information.

VERTU


Navigation key and centre select key

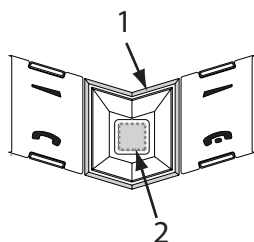

The **NAVIGATION** key (1) enables you to move the cursor up, down, left and right around the display.

The **CENTRE SELECT** key (2) enables you to select a highlighted option or select the middle option at the bottom of the screen.

Selection keys

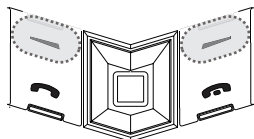

The **SELECTION** keys enable you to select the options displayed at the bottom of the display, directly above the keys.

Setting the time and date

When you first switch on your Vertu phone you will be prompted to enter your time and date settings if they are not already set up.


Use the **NAVIGATION** key and the **NUMBER** keys to enter the time. Press **OK** to confirm the time. Enter the date using the **NAVIGATION** key and **NUMBER** keys. Press **OK** to confirm the date.

If the battery is removed from your Vertu phone for longer than an hour, you may need to reset the time and date.

Making a call



Check that you have a good signal and the battery is charged.

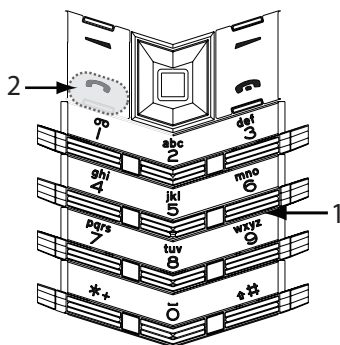


Use the **NUMBER** keys (1) to enter the telephone number you want to call.

Press the **SEND** key (2) to begin your call.

When calling international numbers, press the *+ key twice to display a + sign.


Answering a call

When you receive an incoming call, a ringing tone is played and a call message is displayed. Your Vertu phone will also vibrate if you have set a vibrating alert.

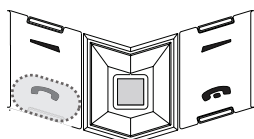

Press the **SEND** key to answer an incoming call or press the **CENTRE SELECT** key when you see **Answer** on the screen.

Adjusting listening volume

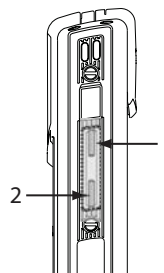

To change the earpiece volume while you are in a call, press the side volume keys.


To increase the volume press key (1).

To decrease the volume press key (2).



While in a call, you can use the speaker phone for a hands-free call. Use the **SELECTION** keys to press **Loudsp.** to switch to speaker phone.

Ending or rejecting calls

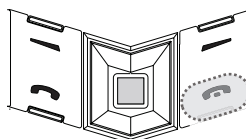

Press the **END** key to end a call or reject an incoming call.

Sending a text message

> Using the **NAVIGATION** key and the **CENTRE SELECT** key go to:

Menu » Messages » Create message

> Enter the recipient's number.

> Scroll to the message field.

> Enter the message.

> Press the **CENTRE SELECT** key to send the message.



While composing a message:

Press the * key to show symbols

Press and hold the # key to change language

Press the # key to toggle between upper and lower case.

Making an emergency call



Your Vertu phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications, for example medical emergencies.

> If the phone is not on, switch it on. Some networks require that a valid SIM card is properly inserted in the phone.

> Press the **END** key as many times as necessary to return to the stand-by display.

> Enter the emergency number, for example 000, 08, 110, 112, 118, 119, 911, *911, 999, *999 or other official emergency number.

> Press the **SEND** key.

VERTU



Emergency numbers vary by location and those listed above may not be supported by your current network.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. For more information consult your local service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible.

Remember that your phone may be the only means of communication at the scene of an accident – do not end the call until given permission to do so.

Protecting your Vertu phone



Enter ***#06#** from the stand-by display to find the IMEI serial number. Make a note of your IMEI serial number and keep it in a safe place.

Locking the keypad

You can lock the keypad on your Vertu phone to prevent accidentally dialling any numbers.

From the stand-by display, press **Menu** followed by the **SPECIAL FUNCTION * * key** (at the bottom left of the keypad) within two seconds. A confirmation message is displayed.

When the keypad is locked, a key icon appears below the signal strength indicator.



You can still make calls to the emergency numbers when the keypad is locked.

When you receive an incoming call the keypad lock is automatically suspended. When the call is ended, the keypad returns to the locked state.

Unlocking the keypad

Press **Unlock** followed by the **SPECIAL FUNCTION * * key** within two seconds. A confirmation message is displayed.

Setting a PIN code

We recommend that you use a PIN code to prevent unauthorised use of your Vertu phone and SIM card.


> Using the **NAVIGATION** key and the **CENTRE SELECT** key go to:

Menu » Settings » Security » PIN code request

> Select **On**



If you have set a PIN code, the next time you switch on your Vertu phone you will see this screen asking you to enter your PIN code.

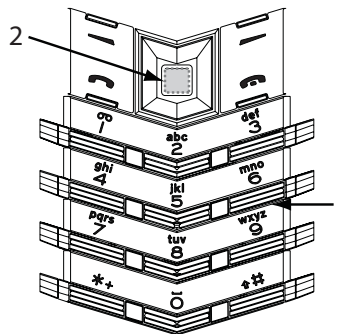

Use the **NUMBER** keys to enter your PIN code (1).

Press **OK** (2).

The main menu

The main menu displays all the top level menu categories, from which you can access all the functions of your Vertu phone.



The **NAVIGATION** key is pre-programmed with some popular menu options. When your Vertu phone leaves our workshop the options are:

Up - Lock keypad

Down - Names

Left - Create message

Right - Bluetooth on/off

To change these to your favourite menu options go to **Menu » Settings » My shortcuts**

Opening the menu

From the stand-by display, press the **CENTRE SELECT** key to open the **Menu** and display the main categories. Use the **NAVIGATION** key to move through the menus.

Navigating through the menus

When navigating through the menus, press **Back** to return to the previous menu without saving changes. Press **Exit** to return to the stand-by display from the top-level menu.

Press the **END** key to return to the stand-by display from any menu without saving changes.

You can also use also voice commands to activate menu functions on your Vertu phone. Please see "Voice dialling" on page 10 for more information.

Changing how the menu is displayed

> Go to:

Menu » Options » Main menu view

> Select one of the following options:

> **List** to display the main menu icons one at a time.

> **Grid** to display all the main menu icons on one screen. You can move the icons around the grid to have the options you use the most in your favourite positions.

> **Tab** to display the main menu icons along the top of the screen and the menu options below.

VERTU

Messages

The **Messages** menu enables you to write, send, receive and read messages.

Your Vertu phone supports:

- > text messages
- > multimedia messages
- > flash messages
- > voice messages
- > e-mail messages
- > instant messages.

An interesting feature in this menu is **Delivery reports** that let you know if messages have been delivered.



- > **Create message**
- > **Inbox**
- > **E-mail**
- > **Drafts**
- > **Outbox**
- > **Sent items**
- > **Saved items**
- > **Delivery reports**
- > **Voice messages**
- > **Info messages**
- > **WV chat**
- > **Serv. commands**
- > **Delete messages**
- > **Message settings**

Contacts

The **Contacts** menu enables you to add and delete contact numbers, select whether to store them on the phone or SIM memory, and set up speed dialling.



- > **Names**
- > **Add new contact**
- > **Settings**
- > **Groups**
- > **Speed dials**
- > **Del. all contacts**
- > **Move contacts**
- > **Copy contacts**

Call history

The **Call history** menu enables you to view information about voice and data calls that you have made, received and missed.

You can also view information about messages received and sent, and the amount of data received and sent while web browsing.



- > **All calls**
- > **Missed calls**
- > **Received calls**
- > **Dialled numbers**
- > **Msg. recipients**
- > **Clear log lists**
- > **Call duration**
- > **Data counter**
- > **Data timer**
- > **Message log**
- > **Sync log**

Settings

The **Settings** menu enables you to change the way your Vertu phone is configured.

This covers a wide range of features from setting the clock, to ringing tones and configuring shortcut settings.

We recommend that you protect your Vertu phone and SIM card from unauthorised use by protecting them with passwords using the **Security** option.



- > **Date and time**
- > **Profiles**
- > **Themes**
- > **Tones**
- > **Display**
- > **My shortcuts**
- > **Connectivity**
- > **Call**
- > **Phone**
- > **Enhancements**
- > **Configuration**
- > **Security**
- > **Workshop reset**
- > **Sync and backup**

Additions

The **Additions** menu contains preloaded games, calculator and the voice recorder. Music and graphics files can also be stored here.



- > **Gallery**
- > **Applications**
- > **Calculator**
- > **Music player**
- > **Voice recorder**
- > **Notes**

VERTU

Calendar

The **Calendar** menu enables you to view your calendar, make notes, set reminders for forthcoming events or dates, and create a to-do list.



Alarm clock

The **Alarm clock** menu gives you quick access to setting an alarm. Press the **Options** key to access **Snooze** and **Repeat** information.



Web

The **Web** menu enables you to access the internet and set a personal home page.

Web configuration settings can be found in the **Settings » Configuration** menu.



- > **Vertu mobile**
- > **Home**
- > **Bookmarks**
- > **Go to address**
- > **Last web addr.**
- > **Web settings**
- > **Clear the cache**

Vertu services

Vertu Services contains software and services available only to Vertu owners:

Vertu Select gives you access to additional mobile content, games and applications specially selected for Vertu owners.

Vertu Fortress provides a secure back-up for your data.

Vertu Concierge provides an alternative way of calling the Vertu Concierge service.

Travel contains real-time information on flight, weather and exchange rates.



- > **Vertu Select**
- > **Vertu Fortress**
- > **Vertu Concierge**
- > **Travel**

Personalising your Vertu phone

Using Go to shortcuts

You can set up the **Go to** menu so that it automatically customises itself to your needs.

There are two ways to use the **Go to** shortcuts in your Vertu phone.

- > **Auto sorting on** *dynamically displays the menu presenting the five most frequently used and the two last used functions*
- > **Auto sorting off** *allows you to pick and choose which menu options you want to see on the **Go to** list.*

To turn on automatic sorting press **Go to » Options » Auto sorting on**

To turn on manual sorting press **Go to » Options » Auto sorting off**

Creating manual Go to shortcuts

To customise the options available on the **Go to** list, display the list as above and select **Options » Select options**. Pick the options that you want to display on the **Go to** list.

You can also set up the **NAVIGATION** key to access shortcuts. On the stand-by display press and hold one of the **SCROLL** keys and select an option to associate with the key.

Using the Go to menu

To use the **Go to** shortcuts, from the stand-by display press the **Go to SELECTION** key.

Use the **NAVIGATION** key and the **CENTRE SELECT** key to select the desired shortcut.

Some of the most useful **Go to** shortcuts are:

- > *Toggle Bluetooth on and off*
- > *Operator select (to select a network operator with a GPRS roaming agreement with your home network operator).*

Changing backgrounds

Your Vertu phone comes with a number of images to use as display backgrounds.

Changing the background

- > Select **Menu » Settings » Themes** or use the **Go to** shortcut.
- > Select a background from those available.
- > Select **Apply** to change the background.

VERTU

Changing profiles

Your Vertu phone has several different profiles that enable you to change the ringing tone, ringing volume and vibrating alert all at once. Profiles can be timed, for example you can set the **Silent** profile while you attend a meeting and, if you have set it, the **General** profile will resume after the meeting.

Flight mode

Flight mode allows you to deactivate all radio frequency functions but still have access to offline games, the calendar and phone numbers.

- > Select **Menu » Settings » Profiles » Flight**

Use flight mode in radio sensitive environments, for example on board aircraft or in hospitals.



*To make an emergency call in flight mode, make the call as normal and answer **Yes** when asked **Exit flight profile?***

To deactivate flight mode, select any other profile.



*To change profiles quickly, briefly press the **POWER** key.
Press and hold the **#** key to toggle between **Silent** and **General** profiles.*

Changing ringing tones

Your Vertu phone comes with various special ringing tones. You can also download ringing tones in AAC, MP3 and MIDI formats.

Changing the ringing tone

- > Select **Menu » Settings » Tones** or use the **Go to** shortcut.
- > Scroll slowly through the ringing tones list. When you hear a ringing tone that you would like to use, press **Select**.

Setting an alarm

Your Vertu phone has a useful alarm clock function.

- > Select **Menu » Alarm clock** or use the **Go to** shortcut.

Enter the time on the screen, and press the **Options** **SELECTION** key to set snooze and repeat features.

When there is an alarm set, the alarm clock icon is displayed on the stand-by display.

If the clock is displayed in **Analogue** mode, a red alarm hand is displayed on the face of the clock in stand-by mode. The alarm hand shows at the time that the alarm is set for.

To turn the alarm clock off, press **Menu » Alarm clock » Options » Alarm: » Off**.



If the phone is switched off, it will switch itself on at the alarm time. Please remember this if you are in a restricted area.

Using Bluetooth

Bluetooth technology enables you to easily share images and video clips, and take advantage of wireless connectivity by using a compatible Bluetooth headset. You first need to pair with the other device which should be within 10m of your Vertu phone.

The full Bluetooth menu is located in **Menu » Settings » Connectivity**.

Using the options on these menus you can turn Bluetooth on, make your phone discoverable, search for active devices and pair your phone with other Bluetooth devices, for example your Bluetooth headset.



Switch off Bluetooth if it's not being used, to maximise battery performance.

Use the **Go to** menu to toggle Bluetooth on and off.

Adding a new contact

To quickly add a new contact, enter the number on the stand-by display and then press the **CENTRE SELECT** key. Enter the contact name and **Save** the contact.

Voice dialling

Your Vertu phone can access menu options and dial contacts using voice commands.

- > Press and hold the right **SELECTION** key on the stand-by display or press and hold the down volume key.
- > Say clearly the name of the contact or menu option you want to access.
- > Select the option you require from the displayed list. If you don't make a selection within 5 seconds, the option at the top of the list will be automatically selected.

Browsing the Web



Only download and use files from sources that offer adequate security and protection against harmful software.

You can access mobile Internet services with the Web browser on your Vertu phone. You can view pages that use wireless markup language (WML) or extensible hypertext markup language (XHTML).

Depending on which service provider you use, your Vertu phone might already have Internet settings installed so you might be able to browse the Internet straight away. If you cannot connect to the Internet, please contact Vertu Concierge or visit www.vertu.com and download your settings.

To open the Web browser select **Menu » Web** or press and hold the 0 key.

VERTU

Using the music player

Your Vertu phone includes a music player for listening to music tracks, recordings or other MP3, MP4, AAC, eAAC+ or Windows Media Player sound files that you have transferred to your Vertu phone. Music files can be received via Bluetooth, MMS or using the File Manager in Vertu PC Suite.

To open the music player scroll to **Menu » Additions » Music player**.

Music files that you transfer to your Vertu phone are automatically added to the list of songs in the music player.



Press and hold the END key to stop the music player.

CD-ROM

The Vertu CD-ROM works on a compatible computer with a CD-ROM drive, with Microsoft® Windows® 2000, Microsoft® Windows® XP or Microsoft® Vista® installed. You need at least 250 MB of free disk space and administrator rights to the PC.

Connecting to a computer

To connect your Vertu phone to a computer you need either a Vertu USB data cable or Bluetooth wireless technology equipment and software.

Vertu PC Suite

Vertu PC Suite includes the following applications to extend the functionality of your Vertu phone:

- > Backup
- > Synchronise
- > Connect to the Internet
- > Install applications
- > File manager
- > Contacts
- > Messages
- > Image store
- > Multimedia player

Installing Vertu PC Suite

- > Insert your Vertu CD-ROM into the PC's CD-ROM drive.
- > Click on the install now button.
- > Follow the on-screen instructions to complete the installation.

Viewing the electronic Reference Manual

- > Start the CD-ROM as described above.
- > Click on the Launch PDF button.

Setting up MMS, browsing and e-mail

- > Start the CD-ROM as described above.
- > Click on the order settings button.
- > Your computer must be connected to the Internet to set up MMS, browsing and e-mail.

Registering your Vertu phone

- > Start the CD-ROM as described above.
- > Click on the register phone button.

- > Your computer must be connected to the Internet to register your Vertu phone.

Care and maintenance

Your Vertu products have been crafted from some of the finest materials and care should be taken to keep them in good condition.



Damage caused to your Vertu phone by failing to observe these care instructions is not covered by the warranty.

Ceramics and sapphire

Ceramics and sapphire are very hard materials but are also brittle and can be scratched by harder materials or objects. They can also be damaged if dropped.

Avoid the following:

- > *Contact with other hard materials such as diamond jewellery, nail files, abrasives, and mineral crystals.*
- > *Dropping or knocking the product on hard surfaces.*
- > *Repeated rubbing against hard surfaces.*

Leather

All Vertu leather products are made by expert craftsmen. Each leather hide is unique and has natural markings which should be considered part of the individuality of fine leather. All leather can be damaged and should be treated with care.

Avoid the following:

- > *Exposure to water and high humidity.*
- > *Dropping, rubbing or knocking on hard surfaces.*
- > *Exposure to extreme temperatures.*
- > *Contact with oily substances, make-up and solvents.*

Metal

Vertu metals are finished to a high standard and care needs to be taken to maintain their appearance.

Avoid the following:


- > *Contact with chemicals such as solvents, alkaline and acid solutions, cola-based drinks and exposure to salt water. Wipe with a clean, soft cloth as soon as possible if contact occurs.*
- > *Contact with sharp objects.*
- > *Dropping or knocking against hard surfaces.*
- > *Metal polishes.*

Hallmarks

If you have a gold or platinum Vertu phone, hallmarks are stamped as shown below to authenticate the precious metals used. Each precious metal is tested to ensure that the purity of the alloy conforms to the exacting standards of the European Convention Mark under the jurisdiction of the Swiss Assay Office.

The hallmark is made up of several stamps, which each have an individual meaning. It is located on the backplate underneath the serial number.

VERTU

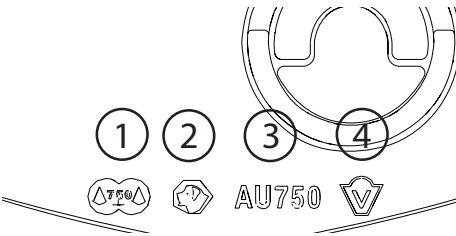

1. Common control mark denoting the European Convention Mark – 750 (18 carat gold) or 950 (platinum) in scales.



2. St. Bernard dog's head – Swiss Assay Office mark.

AU750

3. The fineness (purity) mark – AU 750 (18 carat gold) or PT950 (platinum).



4. Sponsor's mark denoting the Vertu brand.

Specifications

Volume	65 cc	
Weight	Stainless steel	166 g
	Gold	218 g
	Platinum	238 g
Length	130.3 mm	
Width	42 mm	
Thickness	13.1 mm	

BL-5CV Li-ion battery

Talk time	Up to 5.5 hours
Stand-by time	Up to 300 hours

Diamonds

Diamonds are extremely hard and durable, but can be damaged if handled inappropriately. For example, they can be broken by a sharp impact on a hard surface and the settings could be damaged by dropping the phone onto a hard surface, causing the diamond to become loose or fall out.

Care should also be taken with contact with other jewellery such as diamond rings and diamond earrings as they can cause abrasion and chipping of the stone or the setting. Reasonable care should be taken not to catch the setting with threads, particularly synthetic threads which may bend the setting and loosen the stones.

We recommend that your Vertu phone is kept in the Vertu leather case when not being used, particularly when placed in hand bags and other luggage.

If the diamonds appear to become dull from use, the product can be lightly polished using the Vertu microfibre polishing cloth.

2 SECURITY

Your Vertu phone has a number of security features that help to prevent:

- > *Unauthorised use of your Vertu phone when your SIM card is inserted*
- > *Unauthorised use of your Vertu phone if a different SIM card is inserted*
- > *Unauthorised use of your SIM card in another phone.*

PIN code

The (4 to 8 digit) PIN (Personal Identification Number) code helps protect your SIM card against unauthorised use. When the PIN code function is active, you need to key in the PIN code each time you switch on your Vertu phone. If you used your SIM card in another phone previously, the code will be the same.

The default setting for the PIN code function is defined by your service provider. Some service providers do not allow you to disable the PIN code request.



The SIM card becomes blocked if you key in an incorrect PIN code three times in succession. You will need to contact your service provider for the PUK (PIN Unblocking) code.

Key in the PUK code if you have blocked your SIM card.

PUK codes cannot be changed. If you key in an incorrect PUK code 10 times in succession your SIM card becomes permanently blocked.

To turn the PIN code on and off:

1. From the stand-by display, press **Menu » Settings » Security » PIN code request**.
2. Press **Select** to change the setting.
3. Scroll to **On** to enable the PIN code request or **Off** to disable it and then press **Select**.
4. Key in your PIN code and then press **OK**.
A confirmation message is displayed.

To change your PIN code:

1. From the stand-by display, press **Menu » Settings » Security » Access codes » Change PIN code**.
2. When prompted, enter your current PIN code and then press **OK**.
3. When prompted, enter your new PIN code and then press **OK**.
4. Enter your new PIN code again to verify and then press **OK**.
A confirmation message is displayed.

PIN2 code

The PIN2 code is used to protect the advanced user functions of your SIM card for example fixed dialling lists. Your PIN2 code must not be the same as your PIN code.

To change your PIN2 code:

1. From the stand-by display, press **Menu » Settings » Security » Access codes » Change PIN2 code**.
2. When prompted, enter your current PIN2 code and then press **OK**.
3. When prompted, enter your new PIN2 code and then press **OK**.
4. Enter your new PIN2 code again to verify and then press **OK**.
A confirmation message is displayed.

The PIN2 protected features of your SIM card will become blocked if you incorrectly enter your PIN2 code a number of times, normally after three consecutive attempts. You will need to contact your service provider to obtain a PIN2 Unblock (PUK2) code to unblock your PIN2 and restore your SIM card's full functionality.

Security code

The security code helps protect your Vertu phone from unauthorised use. The first time you access this feature you will need to choose a code (between 5 - 10 digits long). You will need to key in this security code before you can do the following:

- > *Switch on the phone when a new SIM card is inserted (if you have set up security)*
- > *Erase all entries in your contacts list*
- > *Restore the default settings*
- > *Change the security level.*



If you key in an incorrect security code five times in succession, your Vertu phone will not accept the correct security code for the next five minutes. Within that five minutes, your Vertu phone will show an error when you attempt to key in the security code, even if it is correct.

To change the security code:

1. From the stand-by display, press **Menu » Settings » Security » Access codes » Change security code**.
2. When prompted, enter your current security code and then press **OK**.
3. When prompted, enter your new security code and then press **OK**.
4. Enter your new security code again to verify and then press **OK**.
A confirmation message is displayed.

Make a careful note of your new security code, ensure you keep it secret and in a safe place.

VERTU

Security level

The security level function allows you to specify when you are required to key in the security code. The security code helps protect your Vertu phone against unauthorised use.

To change the security level:

1. From the stand-by display, press **Menu » Settings » Security » Security level**.
2. Scroll to one of the following three options and then press **Select**:
 Press **None** to disable the security code and allow any SIM to be used in the phone
 Press **Memory** to allow any SIM to be used in the phone but you need to enter the security code when you try to access your Vertu phone's directory after a different SIM card has been inserted
 Press **Phone** to require that the security code is entered when you switch on the phone after another SIM card has been inserted
3. When prompted, enter your security code and then press **OK**.
 If you change the security level, the numbers in your recent calls list are erased.

Security module

When available on your SIM, the security module improves security services for applications requiring a browser connection, and allows you to use a digital signature. The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider. The security module is not supplied by Vertu.

To view or change the security module settings:

From the stand-by display, press **Menu » Settings » Security » Security module sett.**

Call barring

Call barring is a network service that allows you to restrict the incoming and outgoing calls that you make and receive. Contact your service provider for more information about using this function.

When outgoing calls are barred, calls may be possible to the emergency number programmed into your Vertu phone.

You need to key in the barring password to set up the call barring service. To obtain the barring password, contact your service provider.

To enable or disable call barring:

1. From the stand-by display, press **Menu » Settings » Security » Call barring service**.
2. Scroll to one of the following five options and then press **Select**:
 Press **Outgoing calls** to bar all outgoing calls
 Press **International calls** to bar all international calls
 Press **Intl. except to home** to bar all international calls with the exception of calls made to your home country (defined by your service provider) if abroad
 Press **Incoming calls** to bar all incoming calls
 Press **Incoming if abroad** to bar all incoming calls when you are abroad
3. Scroll to **Activate** to enable the bar, **Cancel** to disable it, or **Check status** to view the status of the current bar and then press **Select**.
4. If you are enabling or disabling a bar, you must enter your barring password when prompted and then press **OK**.
 A confirmation message is displayed.

To cancel all call barrings:

1. From the **Call barring service** menu, press **Cancel all barrings** to cancel all call bars.
2. Enter your barring password when prompted and then press **OK**.

Barring password

The call barring password is used to limit access to the call barring service. To obtain the barring password, contact your service provider.

To change your barring password:

1. From the stand-by display, press **Menu » Settings » Security » Access codes » Change barring pass.**
2. When prompted, enter your current barring password and then press **OK**.
3. When prompted, enter your new barring password and then press **OK**.
4. Enter your new barring password again to verify and then press **OK**.
 A confirmation message is displayed.

Fixed dialling

Fixed dialling is a network service that allows you to restrict outgoing calls to only the numbers you specify in a fixed dialling list. Contact your service provider for more information about using this function.

When fixed dialling is enabled, it may still be possible to call the emergency number programmed into your Vertu phone, for example 000, 08, 110, 112, 118, 119, 911, *911, 999, *999 or other official emergency number.



You will need to key in the PIN2 code to save and edit numbers in the fixed dialling list or to call numbers not in the list. The PIN2 code is supplied with some SIM cards. For more information contact your service provider.

VERTU

To enable or disable fixed dialling:

1. From the stand-by display, press **Menu » Settings » Security » Fixed dialling**.
2. Scroll to **On** to restrict calls to the fixed dialling list, **Off** to disable fixed dialling, or **Number list** to view the numbers in your fixed dialling list and then press **Select**.

If you are using fixed dialling for the first time, it is recommended that you select **Number list** to add numbers to your list before enabling fixed dialling. You will receive two warning messages.
3. When prompted, enter your PIN2 code and then press **OK**.
4. Either enter your number manually and then press **OK**, or press **Search** to select a name from your contacts list and then press **Select**.
5. If you entered a number manually, enter a name for the number and then press **OK**.
6. A confirmation message is displayed and you are returned to the fixed dialling list. Add additional numbers to your list in the same way. Press **Back** when you have completed your list.
7. Scroll to **On** to enable fixed dialling.



When fixed dialling is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message centre number must be included in the fixed dialling list. You cannot access SIM memory manually (view or copy numbers on the SIM card) while fixed dialling is active.

To modify your fixed dialling list:

1. From the stand-by display, press **Menu » Settings » Security » Fixed dialling » Number list**.
2. When prompted, enter your PIN2 code and then press **OK**.
3. Scroll to one of the following options and then press **Select**:

Press **View number** to view the number for an entry
Press **Add** to add a number to your fixed dialling list
Press **Edit** to edit the selected entry
Press **Delete** to delete the selected entry
Press **Delete all** to delete entries in the list.

Closed user group

The closed user group is a network service that allows you to specify a group of people you can call and who can call you. Contact your service provider for more information about using this function.

When outgoing calls are limited to closed user groups, calls may be possible to the emergency number programmed into your Vertu phone, for example 000, 08, 110, 112, 118, 119, 911, *911, 999, *999 or other official emergency number.

To enable or disable a closed user group:

1. From the stand-by display, press **Menu » Settings » Security » Closed user group**.
2. Scroll to **On** to enable the closed user group, **Off** to disable it, or **Default** to specify that the people included in the group, which you have agreed with the service provider, can call you and you can call them and then press **Select**.
3. If you are enabling a closed user group, enter the group number when prompted and then press **OK**. A confirmation message is displayed.

Authority certificates & user certificates

For information about **Authority certificates** and **User certificates** downloaded onto your Vertu phone. See "WEB" on page 51.

VERTU

3 MESSAGES

Your Vertu phone provides extensive messaging functionality to allow you to send and receive messages of many types, where supported by your service provider.



Because delivery of messages can fail, you should not rely upon them for essential communications.

Text messages

Text messages (also known as SMS) are basic messages containing only text, of up to 160 characters. Your Vertu phone supports the sending of text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. This is the most common form of messaging, is compatible with the widest range of phones and is available in most countries.

Multimedia messages

Multimedia messages allow pictures, videos and audio files to be sent in addition to text in the body of the message. MMS is supported by most modern phones however the recipient must have a correctly configured phone to be able to receive the message.

Flash Messages

Flash messages are text messages that are instantly displayed upon receipt. Flash messages are not automatically saved.

Audio messages

You can use the Multimedia message service to create and send an audio message. Multimedia messaging service must be activated before you can use audio messages.

E-mail messages

E-mail messages can be sent to and received from other devices, for example PCs. E-mail messages can be received by some mobile phones, provided the recipient has a correctly configured phone.

WV chat

With Wireless Village chat messaging (WV chat) you can send short, simple text messages to online users. You have to subscribe to a service and register with the IM service you want to use. You should check the availability of these services, pricing, and instructions with your service provider.

Voice messages

Voice messages are stored by your network operator. If your network operator provides a voice message service, people calling you may have the option to record a message for you if your Vertu phone is turned off, or if you do not answer your phone.

Info messages

You can receive messages on various topics from your service provider (network service). For more information, contact your service provider.

Text entry

You can enter text using traditional or predictive text input. When using traditional text input, press the **NUMBER** keys repeatedly until the desired character appears. In predictive text input you can enter a letter with a single keypress.

When you enter text, the  icon will appear at the top of the display if predictive text input is turned on (see "Predictive text input" on page 16). If traditional text input is enabled the  icon will be displayed.

One of the following icons will appear next to the text input icon to signify which character case is enabled:



Indicates upper case is used in editing



Indicates mixed case is used in editing



Indicates lower case is used in editing

To scroll through the character case options, press the **#** key repeatedly.

To change between letter mode and number mode, press and hold the **#** key and select the appropriate mode.

Traditional text input

Press a **NUMBER** key, 1 to 9, repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters available depend on the selected writing language. See "Language settings" on page 40.

If the next letter you want is located on the same key as the present one, wait until the cursor appears, or briefly press any of the navigation keys and enter the letter.

The most common punctuation marks and special characters are available under the 1 key. For more characters, press *****.

Predictive text input

To turn predictive text on or to revert to traditional text input:

1. With the cursor in the **Text:** field, press **Options**.
2. Select **Prediction options** » **Prediction**.
3. Select **On** for predictive text or select **Off** to turn predictive text off.



*To quickly set predictive text input to On or Off when writing text, press and hold **Options** or press and hold **#** and select **Prediction on** or **Prediction off**.*

VERTU

Using predictive text input

Predictive text input allows you to write text quickly using the phone **NUMBER** keys and a built-in dictionary.

Start writing a word using the **NUMBER** keys. Although the key has a number of letters associated with it, press each key only once for one letter. The phone displays * or the letter if it separately has a meaning as a word. The entered letters are displayed underlined.

To insert a special character or smiley, press and hold *, or press **Options » Insert symbol » Character** or **Smiley**. Scroll to a character or smiley, and press **Use**.

To accept the suggested word, press the zero **NUMBER** key to add a space.

If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, press **Spell**. Complete the word (traditional text input is used), and press **Save**.

To write a compound word, enter the first part of the word, and scroll forward to confirm it. Write the next part of the word, and confirm the word.

Numeric input

Numeric input is the standard method used whenever number entry is required, for example, when dialling a phone number. Press the key with the corresponding number to enter it.

When using a text input feature, for example sending a text message, you can switch to numeric input (for entering telephone numbers for instance) using a single key press:

1. With the cursor in the **Text:** field, press and hold the # key until the menu is displayed.
2. With **Number mode** highlighted, press **Select**.
3. Use the **NUMBER** keys to enter the numbers you require.
4. Press and hold the # key again to return to the previous text entry mode.



*If you only need to enter a single number, press and hold that **NUMBER** key and the single number will be entered into your message.*

Special character input

Most common special characters, for example, punctuation marks, can be inserted by pressing the 1 **NUMBER** key. Other special characters can be inserted in your text at any time using the special characters input mode:

1. With the cursor in the **Text:** field, press the * key (or press and hold if predictive text input is On) until the special character menu is displayed.
2. Scroll to the required special character and press **Use**.

Special characters take up more space than basic characters and if there are special characters in your message, the indicator may not show the message length correctly. Before the message is sent, the device tells you if the message exceeds the maximum length allowed for one message. You can cancel sending by selecting **Cancel** or you can save the message in the inbox.

Font size

Your Vertu phone supports different font sizes for viewing your messages. Your font size setting affects both messages being composed and messages received, but does not affect how the recipient views the message.

To change the font size for your messages:

1. From the stand-by display, press **Menu » Messages » Message settings » General settings » Font size**.
2. Scroll to either **Small font**, **Normal font** or **Large font** and then press **Select**.

Groups

If you frequently send messages to a fixed group of recipients, you can define a group to simplify the process.

When you send a message to a group the phone automatically sends the message separately to each recipient in the list. Sending a message using a group will incur charges for each recipient in the list. See "Groups" on page 30.

Undelivered messages

If you send a message and it fails to be delivered, your Vertu phone behaves in different ways depending on the type of message sent.



Some service providers do not allow international sending or receiving of text messages. For more information contact your service provider.

Single recipient messages

If a message you have sent to a single number fails, your screen will display **Message sending failed. Check details**.

1. Press **OK**.
2. The unsent message will appear in your **Outbox**.
3. With the message highlighted, either press **Open** to read the message or press **Options**, scroll to one of the options and then press **Select**:

Retry sending resends the message to the original recipient

Delete removes the message from the Outbox

Send copy sends the message to an alternative number

Edit enables you to modify the message or the recipient's number

Move moves the message into an alternative folder

Use detail makes use of any numbers, e-mail addresses or Web addresses from the current message when creating new messages or contacts

Copy as template saves the message as a template for use when composing future messages

Message details displays message data for example the time and date when sent

New message opens a new message

Mark marks the message for future deletion

Mark all marks all messages for future deletion if the Outbox contains more than one message.

VERTU

Group messages

If a message cannot be sent to one or more of the recipients in a group, a new group will be added to the list with the name **Undelivered**.

To view the undelivered message(s) options:

1. From the stand-by display, press **Menu » Contacts » Groups » Undelivered » Options**.
2. Scroll to one of the options and then press **Select**:
 - Resend to list** resends the message to the recipients on the undelivered list
 - View list** displays the list of recipients to whom the message sending failed
 - Delete list** removes the undelivered list from your Vertu phone
 - View message** displays the failed message.

Message folders

All text and Multimedia messages stored in your Vertu phone are organised in folders. In addition to the default folders, you can create new folders to organise your messages.

To browse your message folders:

1. From the stand-by display, press **Menu » Messages**.
2. Scroll to one of the following folders and then press **Select**:
 - Inbox** - Messages are automatically stored in this folder when they arrive and, by default, after they have been read
 - Drafts** - Contains messages created by you and saved for sending at a later date
 - Outbox** - Messages that you have queued for sending but are yet to be sent are saved in this folder
 - Sent items** - Messages that you have sent are automatically stored in this folder
 - Saved items** - Default location for messages that have been read and saved. This is also where the Templates folder can be found (see below)

To create a new personal folder in **Saved items**:

1. Select **Menu » Messages » Saved items » Options » Add folder**.
2. Use the **NUMBER** keys to enter a name for the new folder.
3. Press **OK**.



Messages can be moved to this and other personal folders on your Vertu phone (see "Reading and replying to text messages" on page 20).

To rename or delete a personal folder:

1. Select **Menu » Messages » Saved items**.
2. Scroll to the personal folder you want to rename or delete.
3. Press **Options**.
4. To rename the folder, scroll to **Rename folder** and then press **Select**.
5. Use the **NUMBER** keys to rename the folder and then press **OK**.
6. To delete the folder press **Delete folder » Yes** to confirm the action.

Erasing multiple text and multimedia messages

You can erase all of the text and Multimedia messages from any of the standard or personal folders, or from all of the folders at once.

To delete multiple messages:

1. From the stand-by display, press **Menu » Messages » Delete messages**.
2. Scroll to one of the options and then press **Select**:
 - By message** enables you to navigate into folders and delete individual messages
 - By folder** enables you to delete all messages in a selected folder
 - All messages** deletes all messages currently stored on the phone. You will be given the opportunity to save unread messages before deleting.
3. Confirm the deletion when prompted. You cannot recover deleted messages.

Text messages

Standard text messages can be up to 160 basic characters in length. Linked messages can be used to create larger messages.

Linked messages

Your Vertu phone can send and receive long text messages (up to 1000 basic characters). Long text messages are automatically split into multiple messages and sent as a series. The series of messages is then linked by a compatible phone when received and displayed as a single SMS message. For this feature to work properly, the receiving phone must also support linked messages.

While you write a message, the number of available characters and the current part number of linked message (for example, 904/1) is shown in the top right corner of the display.

While receiving linked messages, you can start reading the first part before the phone has received the entire message. While viewing the message, you may see *** some text missing *** on the display. This is normal, and the message content will be updated as soon as the missing sequence arrives

Message settings

When you write or reply to a text message, your Vertu phone uses a sending profile that defines how the phone will handle the message sending interaction with your service provider. For most service providers you will not need to modify these settings as the necessary information will be obtained from your SIM card automatically. Depending on your SIM card, you may be able to store more than one set of message profiles.

To edit the message settings:

1. From the stand-by display, press **Menu » Messages » Message settings » Text messages**.

2. Scroll to one of the options and then press **Select**:

Delivery reports requests that the network sends you delivery reports for your messages. These are stored in **Messages » Delivery reports**

Message centres enables you to examine, modify and add the details of the message centre(s), used for sending text messages. You should obtain this number from your service provider

Msg. centre in use enables you to select which message centre should be used by your Vertu phone to send text messages

Message validity enables you to define how long the network attempts to send your messages before it gives up

Messages sent via enables you to select the message type as **Text**, **Paging** or **Fax**. Your service provider may have limited support for different message types

Use packet data determines whether or not GPRS is the preferred SMS bearer (see "Packet data settings" on page 38)

Character support and then select **Full** ensures all characters are sent as viewed or select **Reduced** where characters with marks for example accents may be converted to other characters

Rep. via same centre allows the recipient of your message to send you a reply using your message centre (network service).

Message overwrite

When the message memory is full, your Vertu phone cannot send or receive any new messages. To avoid this, you can set your phone to automatically replace the oldest messages in the Sent items folder when new ones arrive or are sent.

To enable automatic overwrite in Sent items:

1. From the stand-by display, press **Menu » Messages » Message settings » General settings » Save sent messages » Yes**.
2. From the **General settings** menu, press **Overwrite sent items » Allowed**.

Writing and sending text messages



A flashing  icon on the stand-by display indicates that the message memory is full. Before you can receive or send any more text messages you must erase some of your existing text messages or move them to a personal folder.

The **Create message** option allows you to write and send text messages.

To write a new message:

1. From the stand-by display, press **Menu » Messages » Create message**.
2. Use the **NUMBER** keys to enter the recipient's phone number in the **To:** field.
3. Alternatively, to retrieve a phone number from Contacts select **Add** followed by:

Press **<Favourite>** to define easily available message recipients or groups when sending messages

Press **Recently used** to send a message to a recently used number

Press **Call register** to access contacts from the Call log

Press **Contacts** to send a message to number in your Contacts list

Press **Contact groups** to send a message to multiple recipients saved as a group in your Contacts list. See "Groups" on page 30.



This operation can be repeated to add a number of recipients for the text message.

4. Scroll down and use the **NUMBER** keys to write the message in the **Text:** field.
5. While composing your message press **Options** to display the following options:

Send sends the message immediately

Insert to add multimedia content

Add recipient to add another contact to the **To**, **Cc** or **Bcc** fields

Add subject to add **Subject:** line to the message

Clear field deletes the text that has been entered into the message field

Insert contact detail selects a name from your Contacts list and insert it into the message body

Insert symbol displays all the available symbols you can use in the message

Writing language selects one of the alternative languages stored on your Vertu phone to compose your message

Prediction options configures predictive text entry see "Predictive text input" on page 16 for more information about Predictive text

Change msg. type enables you to change the type of message being created to **Message**, **E-mail message**, **Flash message** or **Audio message**

Change to multim. to change text message to multimedia message

Save message saves the message in your Saved messages folder

VERTU

Sending options enables various settings when sending the message:

Message priority can be set to **Normal**, **High** or **Low**

Delivery report enables you to request a delivery report for this and all other text messages

Save sent message enables you to save a copy of the message in the Sent items folder

Message validity enables you to select the length of time that the network attempts to deliver your message

Message sent via enables you to send the message via **Text**, **Paging** or **Fax**

Exit editor leaves the text entry environment (you will be asked if you want to save any incomplete messages).

- To add a file to the text message, scroll down and choose a file type from the icon list at the bottom of the screen. Choose from the following file types:

- > *Text field* > *Template*
- > *Sound clip* > *Gallery file*
- > *Calendar note* > *Business card*
- > *Image*

- Select **Insert** to browse to the required file.
- Select **Insert** to add the file to the message.
- Once the message is complete, press **Send**.

Reading and replying to text messages

When you receive a message, you will receive an information note, and an envelope icon  will appear on the status line. By default there is also an audible message alert.



If your Vertu phone memory is full, you may have to delete messages from your Inbox or Outbox before you can send or receive further messages.

To read a new message as soon as it is received:

- Press **Show**.
- To ignore the message and view it later, press **Exit**.



If you have unread messages in your Inbox, the  icon will remain on the stand-by display.

To read a stored message:

- From the stand-by display, press **Menu » Messages » Inbox**.
- The most recently received message will be highlighted. Scroll to the message you want to read and press **Open**.

To view the list of available options while reading a message:

- Press **Options**.
- Scroll to the required option and then press **Select**:

Reply to reply to the message

Reply as to reply and change the type of message to be sent

Delete removes the message you are viewing from your Vertu phone

Call sender to call the sender of the message

Use detail makes use of any numbers, e-mail addresses or Web addresses from the current message

Forward sends the message to another recipient of your choosing

Edit enables you to edit the message before sending or saving

Move enables you to move the message to another selected folder

Copy to Calendar creates a reminder note in the calendar

Copy as template saves the message as a template for use when composing future messages

Message details displays the sender's name and phone number, the message centre used, and the date and time sent.

To reply to a message being read:

- With the message open, press **Reply**.
- Scroll to the type of message you want to send and then press **Select**.
- The **To:** field displays the sender's number.

Refer to the Text message, Multimedia message, Flash message and Audio message sections of this guide to complete and send your reply.

Multimedia messages

A Multimedia message (MMS) can contain text, sound, video and pictures. Your Vertu phone supports Multimedia messages that are up to 296 KB. If the maximum size is exceeded, the phone may not be able to receive the message. Depending upon your network, you may receive a message that includes an Internet address where you can go to view the Multimedia message. Pictures are scaled to fit the display area of the phone. Your Vertu phone has a Multimedia message viewer for playing messages and an Inbox for storing all saved messages.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.



Multimedia messaging functions can only be used if supported by your service provider. For availability and a subscription to the Multimedia messaging service, contact your service provider. Only compatible devices can receive and display Multimedia messages.

Multimedia messaging supports a wide range of standards for each of the following formats:

- > *Picture: JPEG, GIF, animated GIF, WBMP, BMP, and PNG*
- > *Sound: SP-MIDI, AMR audio, MP3 and AAC*
- > *Video: clips in H.263 format with SubQCIF image size and AMR audio*

If a received message contains unsupported attachments, these may be replaced with a message.

VERTU

You cannot receive Multimedia messages if you have a call in progress, a Java application running, or an active browsing session. If you are sent a Multimedia message while you are on a call of any type, receipt will be delayed until your Vertu phone becomes free.

MMS settings

Depending on which service provider you use, your Vertu phone might already have MMS settings installed. If you encounter any difficulties, please contact Vertu Concierge or visit www.vertu.com and download your settings.

MMS configuration settings

To update your configuration settings:

1. From the stand-by display, press **Menu » Messages » Message settings » Multimedia messages » Configuration sett. » Configuration.**
2. Select one of the available options.

Message settings

In addition to your connection settings, there are several other settings that control your Multimedia messaging functions. To modify these settings:

1. From the stand-by display, press **Menu » Messages » Message settings » Multimedia messages.**
2. Scroll to one of the options and then press **Select**:

Delivery reports will inform you of message delivery

MMS creation mode If you select Guided, the device informs you if you try to send a message that may not be supported by the recipient. If you select Restricted, the device prevents you from sending messages that may not be supported. To include content in your messages without notifications, select Free.

Image size in MMS enables you to define the maximum size of an image used in an MMS. Your Vertu phone automatically resizes the image if necessary

Default slide timing will enable you to set the default time in mm:ss format that each slide (equivalent of a page) in an MMS is displayed on the screen

Allow MMS receiptn. enables you to allow or disallow reception of Multimedia messages, or allow only messages in your home network.

Incoming MMS msgs. enables you to determine whether incoming Multimedia messages are retrieved or rejected automatically or if you retrieve them manually

Allow adverts enables or disables the automatic reception of Multimedia advertisements

Configuration sett. will enable you to define the MMS connection parameters. See "MMS configuration settings" on page 21.

Writing and sending multimedia messages

You can create Multimedia messages with one or more attachments up to the maximum 296kb message size. When creating your Multimedia message, the current remaining space is shown on the top line just under the status line.

Unlike text messages, Multimedia messages can be formed of multiple pages, known as slides. You can control how long each slide is displayed. Each slide can contain up to 1000 basic text characters (less for complex languages) one image, and one sound clip.

To write and send a Multimedia message:

1. From the stand-by display, press **Menu » Messages » Create message.**
2. Press **Options » Change to multim..**
3. Scroll to one of the multimedia options at the bottom of the message screen and then press **Select**:

Text field creates another slide for you to add text in your message

Text template opens the template folder. Choose from a list of pre-set messages.

Image, Sound clip or **Video clip** enables you to browse your Multimedia files and insert a file into your message

Business card enables you to browse your Contacts list and insert contact details into your message

Calendar note enables you to browse your calendar and attach a previously created note from your calendar into your message

Theme, Streaming link and **Gallery file** inserts stored files into your message.

4. Press **Options** while creating a Multimedia message to display the following options:

Send enables you to send the completed message (see above)

Preview displays the message to examine how it will appear to the recipient. Press **Play** to run the attached files

Insert enables you to insert a file as an attachment

Add recipient to add another person to the recipient list

Add subject to add a subject field to the message

Remove removes files and slides from your message

Slide options

Slide timing enables you to set the time interval between the slides. Use the **NUMBER** keys to enter the time interval and then press **OK**

Place text last makes sure that the text in your message appears after your Multimedia attachments

Change msg. type enables you to change the type of message being created

Save message saves the message in your Saved messages folder

VERTU

Sending options enables various settings when sending the message:

Message priority can be set to **Normal**, **High** or **Low**

Delivery report enables you to request a delivery report for this and all other text messages

Save sent message enables you to save a copy of the message in the Sent items folder

Message validity enables you to select the length of time that the network attempts to deliver your message

Message sent via enables you to send the message via **Text**, **Paging** or **Fax**

Exit editor leaves the text entry environment (you will be asked if you want to save any incomplete message)

5. Use the **NUMBER** keys to enter the recipient's phone number in the **To:** field.
6. Alternatively, to retrieve a phone number from Contacts press **Add** followed by:

Press **<Favourite>** to define easily available message recipients or groups when sending messages

Recently used to send a message to a recently used number

Call register to access contacts from the call log

Contacts to send a message to a number in your Contacts list

Contact groups to send a message to multiple recipients saved as a group in your Contacts list.



This operation can be repeated to add a number of recipients for the Multimedia message.

7. Press the **Send** key.

The message is sent.

It takes the network longer to send a Multimedia message than to send a text message. While the Multimedia message is being sent, an animated indicator is displayed on the status line, but you can carry on using your Vertu phone as normal. If there is an interruption while the message is being sent, the network tries to resend it a few times. If this fails, the message remains in the **Outbox** folder and you can try to resend it later. Check your **Outbox** folder for unsent messages.



After sending a message, your Vertu phone displays a confirmation message. This is an indication that the message has been sent by your Vertu phone to the message centre. This is not an indication that the message has been received at the intended destination.

For more information about Multimedia messaging, contact your service provider.

Reading and replying to multimedia messages

When you receive a Multimedia message, you will receive an information note and an envelope icon will appear on the status line. By default there is also an audible alert.

To read a new Multimedia message as soon as it is received press **Show**.

To ignore the message and view it later, press **Exit**.



If you have unread messages in your Inbox, the envelope icon will remain on the stand-by display.

To read a stored message:

1. From the stand-by display, press **Menu » Messages » Inbox**.
2. The most recently received message will be highlighted. Scroll to the message you want to read and then press **Select**.
3. To view the whole message, including any attachments, press **Play**.
4. To view just the files in the presentation or the attachments, press **Options** and select one of the following:

Objects enables you to examine files attached to the message

Reply sends a reply to the message sender

Reply to all sends a reply to all recipients of the original message

Delete removes the message you are viewing from your Vertu phone

Use detail enables you to use any numbers, e-mail addresses or Web addresses from the current message when you create a new message or contact

Forward sends the message to another recipient of your choosing

Edit enables you to edit the message before sending or saving

Move moves the message to another folder

Copy as template enables you to save the message as a template for future messages

Message details displays the sender's name and phone number, the message centre used, and the date and time sent.

5. Scroll to **Objects** and then press **Select**.
6. Scroll to the relevant object type and then press **Select**.

To reply to a Multimedia message:

1. With the message open, press **Options**.
2. Scroll to **Reply** to reply to the sender or **Reply to all** to send a reply to all recipients of the original message and then press **Select**.
3. To send the message, press **Send**. See "Writing and sending text messages" on page 19 and "Writing and sending multimedia messages" on page 21 for more information.

Audio messages

You can use the Multimedia message service to create and send an audio message. Multimedia messaging service must be activated before you can use audio messages. See "MMS settings" on page 21.

Creating and sending audio messages

1. From the stand-by display, press **Menu » Messages » Create message**.
2. Press **Options » Change msg. type.** » Audio message.
3. The recorder opens (see "Voice recorder" on page 46 for more information). Press **Select** to start recording the Audio message.
4. Press **Select** again to stop the recording.
5. Press **Options** while creating an audio message to select from the following features:

Send sends the completed message

Preview enables you to listen to how the message will sound to the recipient

Change msg. type enables you to change the type of message being created

Sending options enables you to select from the following options when sending the message:

Message priority determines the priority level. Choose from **High**, **Normal** or **Low**

Delivery report determines whether the network sends you delivery reports for your messages

Save sent message determines whether or not the phone saves the message in the Sent items folder once it is sent

Save message saves the message in your Saved messages folder

Add subject enables you to include a subject for your message

Exit editor closes the text entry environment (you will be asked if you want to save any incomplete message).

6. Use the **NUMBER** keys to enter the recipient's phone number in the **To:** field.
7. Alternatively, to retrieve a phone number from Contacts select **Add** followed by one of the following:
 - Press **<Favourite>** to define easily available message recipients or groups when sending messages
 - Recently used** sends a message to a recently used number
 - Press **Call register** to access contacts from the Call log
 - Contacts** enables you to send a message to a number in your Contacts list
 - Contact groups** enables you to send a message to multiple recipients saved as a group in your Contacts list.
8. Scroll to the **Message:** field and press **Play** to preview the message.
9. Press **Send**.

Receiving and listening to audio messages

When you receive an audio message, you will receive an information note, and the  icon will appear on the status line. By default there is also an audible message alert.

To listen to a new audio message as soon as it is received press **Play**.

To ignore the message and view it later, press **Exit**.



If you have unread messages in your Inbox, the envelope icon will remain on the stand-by display.

To listen to a stored audio message:

From the stand-by display, press **Menu » Messages » Inbox » Play**.

E-mail

You can write, send, and read e-mails with your Vertu phone. Your phone supports POP3 and IMAP4 e-mail servers.

Depending on which service provider you use, your Vertu phone might already have e-mail settings installed. If you encounter any difficulties, please contact Vertu Concierge or visit www.vertu.com and download your settings.

E-mail settings

To manually enter your connection settings or to modify your current settings:

1. From the stand-by display, press **Menu » Messages » Message settings » E-mail messages » Edit mailboxes » Add**.
2. Scroll to each of the options and modify the parameters with the information supplied by your service provider and/or e-mail provider.



Due to the complexity of entering all of the settings manually, it is strongly recommended that you use the order settings link from your CD-ROM to take you directly to the appropriate page on the Vertu website to obtain the settings for your Vertu phone.

VERTU

Writing and sending e-mail messages

You can create e-mail messages and also attach images and video clips. You can write your e-mail message before connecting to the e-mail service; or connect to the service first, then write and send your e-mail.

To write and send an e-mail message:

1. From the stand-by display, press **Menu » Messages » Create message**.
2. Press **Options » Change msg. type.** » E-mail message.
3. Enter the recipient's e-mail address, write the subject, and enter the message. To attach a file from Gallery, business card, note, etc, select **Insert**.
4. To send the e-mail message, select **Send**.
5. If more than one e-mail account is defined, select the account from which you want to send the e-mail.
6. To edit or continue writing your e-mail later, select **Exit » Yes**. The e-mail is saved in **Drafts**.



After sending a message, your Vertu phone may display Message Sent. This is an indication that the message has been sent by your Vertu phone. This is not an indication that the message has been received at the intended destination.

Downloading and reading e-mail

To download your e-mail messages:

1. From the stand-by display, press **Menu » Messages » E-mail**.
2. If more than one e-mail account is defined, select the account from which you want to download the e-mail.
3. The e-mail application connects, synchronises and displays e-mails.
4. To open an e-mail, highlight a header and press **Open**.

Replying to e-mail



Exercise caution when opening messages. E-mail messages may contain malicious software or otherwise be harmful to your Vertu phone or your computer.

To reply to e-mail:

1. To reply to an e-mail, open it as above, and then select **Options » Reply**.
2. Write the reply and then press **Send**.

Deleting e-mail messages

You can delete e-mails one-by-one or mark a group for deletion all at once.

To delete one e-mail message:

1. From the stand-by display, press **Menu » Messages » E-mail**. The e-mail application is started.
2. Highlight an e-mail and press **Options » Delete**.
3. Select from **From phone** to delete e-mails from your Vertu phone only. Deleting an e-mail from your phone does not delete it from the e-mail server.
4. Select **Also from server** to delete e-mails from your Vertu phone and also from the e-mail server.

To delete more than one e-mail message:

1. From the stand-by display, press **Menu » Messages » E-mail**. The e-mail application is started.
2. Press **Options » Mark** or **Mark all**.

3. Mark the e-mail or e-mails for deletion.

Press **Options » Delete marked**. The marked messages will be deleted from your Vertu phone.

Wireless Village Chat

With Wireless Village Chat (instant messaging) you can send short, simple text messages to online users. You have to subscribe to a service and register with the IM service you want to use. For more information contact your service provider.



Wireless Village Chat supports DRM2.

To log in to Wireless Village Chat:

1. From the stand-by display, press **Menu » Messages » WV chat**.
2. Select from the following options:
Login - to log in to the Wireless Village Chat feature
Saved conversations to access your stored message conversations.

Voice messages

The voice mailbox is a network service and you may need to subscribe to it. For more information and for your voice mailbox number, contact your service provider.

To call your voice mailbox:

From the stand-by display, press **Menu » Messages » Voice messages » Listen to voice msgs**. Or, press and hold the 1 key on the number keypad.



The first time you access your voice mailbox, you may be required to enter a voice mailbox number, depending on your operator.

To enter, search for or edit your voice mailbox number:

From the stand-by display, press **Menu » Messages » Voice messages » Voice mailbox no.**

Info messages

With the Info messages network service, you can receive messages on various topics from your service provider.

To check availability, topics, and the relevant topic numbers, contact your service provider.

Service messages

Your Vertu phone is able to receive service messages (pushed messages) sent by your service provider. Service messages are notifications (for example, news headlines), and they may contain a text message or an address of a service.

When you receive a service message:

1. Press **Show** to display the message.
2. Or, press **Exit** to save the message to your inbox.

Service message settings

To update service message settings:

1. From the stand-by display, press **Menu » Messages » Message settings » Service messages**.
2. Scroll to one of the following options and then press **Select**:
 - Service messages » On** or **Off** to set whether you want to receive service messages
 - Message filter » On** to set the phone to receive service messages only from content authors approved by the service provider
 - Autom. connection » On** to set the phone to automatically activate the browser from the stand-by mode when the phone has received a service message. If you select **Off**, the phone activates the browser only after you select **Retrieve** when the phone has received a service message.

Bluetooth messages

Messages sent via Bluetooth are available via the Messages inbox.

Service commands

Use the service commands editor to enter and send service requests (also known as USSD commands) to your service provider. Contact your service provider for information about service commands.

To send a service command:

1. From the stand-by display, press **Menu » Messages » Serv. commands**.
2. Use the **NUMBER** keys to enter a service request, for example an activation command for a specific network service and press **Send**.

4 CONTACTS

Your Vertu phone Contacts list has capacity for up to 10,000 entries.

Contacts memory

Contact names and numbers can be stored in the phone memory or on the SIM card, or both.

Phone memory

Each contact can contain up to five numbers and five text items, for example a postal address, an e-mail address, an image and a specific ring tone.

If you use the phone memory you can store more data and access more functions, for example voice tags, than if you use the SIM card memory.

SIM card memory

Contacts stored on your SIM card have one associated number. The number of contacts and the length of names and numbers that you can store on your SIM card is determined by your service provider.

Selecting the memory type

Certain features, for example business cards and multiple numbers associated with a contact, are only available when using the phone memory. If you plan to make frequent use of these features, we recommend that you set your Vertu phone to use the phone memory. If you plan to transfer your SIM card from your Vertu phone to other phones, we recommend that you set your Vertu phone to use the SIM card memory.

To select a memory type:

1. From the stand-by display, press **Menu » Contacts » Settings » Memory in use**.
2. Scroll to one of the following options and then press **Select**:
Phone and SIM to save new contacts to the phone and display contacts from the phone and SIM
Phone to save and display phone contacts
SIM card to save and display SIM card contacts.

A message confirms which memory you have selected.



If you change the SIM card in your Vertu phone, the memory type is automatically reset to phone.

Copying between memories

The copying feature allows you to copy names and numbers between the phone memory and the SIM card memory.

1. From the stand-by display, press **Menu » Contacts » Copy contacts**.
2. Scroll to one of the following options and then press **Select**:
From SIM to phone to copy all information from the SIM card memory to your Vertu phone memory
From phone to SIM card to copy the name and the number from your Vertu phone memory to the SIM card memory.
3. Press **Yes** to confirm your action, or press **No** to cancel.



If you are copying from phone memory to SIM card memory and your Vertu phone memory contains more entries than your SIM card can store, some of the entries will not be copied.

Move between memories

The move feature enables you to move contact names and numbers from the phone to the SIM card memory and vice versa.

1. From the stand-by display, press **Menu » Contacts » Move contacts**.
2. Scroll to one of the following options and then press **Select**:
From SIM to phone to move all information from the SIM card memory to your Vertu phone memory. The information is no longer held on your SIM card
From phone to SIM card to move the name and the number from your Vertu phone memory to the SIM card memory. The information is no longer held in your Vertu phone memory.
3. Press **Yes** to confirm your action, or press **No** to cancel.

Copying individual numbers

You can also copy individual directory numbers between the phone memory and SIM card memory directly from the contacts list.

To copy individual numbers:

1. From the stand-by display, press **Menu » Contacts » Names**.
2. If the contact name is not visible, press the first letter of the contact name. The first name starting with that letter is highlighted. Scroll to the desired name and press **Details**.
3. Press **Options » Copy number**.
4. Select **Keep original** and then press **Select** to keep the contacts in both memories.
5. Or select **Move original** and then press **Select** to delete the original information.

A message confirms that the number has been copied.

Check memory status

You can check your Vertu phone's memory to see how much information is stored and how much free space is available.

To check the memory status:

1. From the stand-by display, press **Menu » Contacts » Settings » Memory status**.
2. Scroll to either **Phone** or **SIM card** and then press **Select**.
If **Phone** is selected the phone's contact free memory and used memory is displayed as a percentage of the available memory
If **SIM card** is selected the absolute number of free contacts and contacts in use for the SIM card is displayed.
3. Press **Back** to exit the screen.



SIM card memory capacity is defined by your SIM card, not by your Vertu phone. For more information contact your service provider.

Adding contacts

To add a contact:

1. From the stand-by display, press **Menu » Contacts » Add new contact**.
2. Press **Select** and then use the **NUMBER** keys to enter the contact's first name. Scroll down to the next field.
3. Use the **NUMBER** keys to enter the contact's last name. Scroll down to the next field.
4. Use the **NUMBER** keys to enter the mobile phone number. Scroll down to the next field.
5. Use the **NUMBER** keys to enter the home phone number. Scroll down to the next field.
6. Use the **NUMBER** keys to enter the email address. Scroll down to the next field.
7. Scroll right or left to open the image gallery and select an image to associate with this contact.
8. Select **Save** to confirm your entry, or press **Cancel**.

A message confirms which memory you have saved the contact details to.

Accessing contacts

There are several ways to access a contact, giving you flexibility to use your Vertu phone in the way that suits you best.

A: Follow menupath

1. From the stand-by display, press **Menu » Contacts » Names**.
2. Key in the first letter of the contact name.
3. The first name starting with that letter is highlighted.
4. Scroll to the desired name.

B: Go to command

If your contacts is one of the most used functions on your phone, **Names** is displayed in the **Go to** shortcut menu (see "My shortcuts" on page 37). You can use the left **SELECTION** key to open the shortcut menu and display your contacts list:

1. From the stand-by display, press **Go to » Names**.
2. Key in the first letter of the contact name.
3. The first name starting with that letter is highlighted.
4. Scroll to the desired name.

C: Selection key

If your right **SELECTION** key has been configured as **Names** (see "My shortcuts" on page 37) you can use the following method to display your contacts list:

1. From the stand-by display, press the right **SELECTION** key.
2. Key in the first letter of the contact name.
3. The first name starting with that letter is highlighted.
4. Scroll to the desired name.



*The following instructions use Method A to access your contact name list however, the other methods can be used if your **SELECTION** keys have been configured correctly.*

Deleting contacts

To delete a contact:

1. Select your contact name as in "Accessing contacts".
2. Press **Options** and select **Delete contact**.
3. Press **Yes** to confirm deletion.

A message confirms which contact you have deleted.

VERTU

Contact number and text types

The first number added to a contact is automatically set as the default number. When you select a contact to call or send a message to, this default number is always used.

You can store different numbers for each contact from the following types:

- > *General*
- > *Office*
- > *Mobile*
- > *Fax*
- > *Home*

You can also store different text items from the following types:

- > *E-mail address*
- > *Nickname*
- > *Web address*
- > *Postal address*
- > *Company*
- > *User ID*
- > *Job title*
- > *Birthday*
- > *Formal name*
- > *Note*
- > *Image*



A contact can have duplicate number and text types, for example two mobile numbers or two e-mail addresses.

Adding information to a contact

You can add phone numbers or text items to a contact.

To add a number to a contact:

1. Select your contact name as in "Accessing contacts".
2. With the contact name highlighted, press **Details**.
3. Press **Options**.
4. Scroll to **Add detail** and press **Select**.
5. Scroll to **Number** and press **Select**.
6. Scroll to the type of number you want to add and then press **Select**.
7. Key in the phone number.
8. Press **Next** until the **Save** option appears. Press **Save** to confirm the number, or press **Options** and scroll to **Save**. Press **Select** to confirm.

A message confirms that the details have been saved to the phone memory.

Alternatively,

1. Enter the telephone number from the stand-by screen and press **Save**.
2. Press **Options**.
3. Press **Add to contact**.
4. Scroll to the required contact and press **Add**.
5. Scroll to the type of number you want to add and then press **Select**.

A message confirms that the details have been saved to the phone memory.

To add a text item to a contact:

1. Select your contact name as in "Accessing contacts".
2. With the contact name highlighted, press **Details**.
3. Press **Options**.
4. Scroll to **Add detail** and then press **Select**.
5. Scroll to the type of text you want to add, for example, Web address or Nickname, and then press **Select**.
6. Key in the text and press **Next** until the **Save** option appears. Press **Save** to confirm the number, or press **Options** and scroll to **Save**. Press **Select** to confirm.

A message confirms that the details have been saved to the phone memory.

Changing the default number

The first number you add to a contact is automatically set as the default number. If more than one number is added to an entry, for example if the contact has a mobile phone number and an office number, you can change the default number.

To change the default number:

1. Select your contact name as in "Accessing contacts".
2. Press **Details**.
3. Scroll to the number to set as the default and press **Options**.
4. Scroll to **Set as default** and then press **Select**.

A message confirms that the default number has been set.

Setting the contacts view

Your Vertu phone can display your contacts in different ways:

Normal name list displays five contacts at a time

Name and number displays one contact with the default number

Name and image displays one contact with an associated image.

To set the type of view:

1. From the stand-by display, press **Menu » Contacts » Settings » Contacts view**.
2. Scroll to the required view and then press **Select**.

A message confirms that the contacts view has been selected.

Setting the name display

To select whether the contact's first or last name is displayed first:

1. From the stand-by display, press **Menu » Contacts » Settings » Name display**.
2. Scroll to the required view and then press **Select**.

A message confirms that the contacts view has been updated.

Setting the font size

To set the font size for the list of contacts:

1. From the stand-by display, press **Menu » Contacts » Settings » Font size**.
2. Scroll to the required view and then press **Select**.

A message confirms that the contacts view has been updated.

VERTU

Viewing the memory status

To view the free and unused memory capacity:

1. From the stand-by display, press **Menu » Contacts » Settings » Memory status**.
2. Scroll to the required view and then press **Select**.

Contacts menu

You can use the options in the contacts menu to make a call, send a text message and send a business card to anyone whose contact information you have saved. Your phone automatically adds voice tags to your contacts, and you can also assign numbers to the speed dial list.

Searching and calling

To search for an entry and call the default number:

1. Select your contact name as in “Accessing contacts”.
2. Scroll to the required name and press the **SEND** key.

To search for an entry and call a number other than the default number (using the phone memory only):

1. Select your contact name as in “Accessing contacts” and press **Details**.
2. Scroll to the required number.
3. Press the **SEND** key or press **Call** to make the call.

Text messages

When you have a contact open, you can send them a text message without returning to the main menu.

Sending text messages

To send a text message:

1. Select your contact name as in “Accessing contacts” and press **Details**.
2. Scroll to the required number and press **Options**.
3. Scroll to **Send message** and then press **Select**.
4. With Message highlighted, press **Select**.
5. Key in the message and press **Send**.

Business cards

The business card function allows you to send and receive contact information, via text message, multimedia or Bluetooth. This function can be used with both the phone memory and the SIM card memory, although the SIM card memory only allows you to send the default number.

Sending business cards

To send a business card:

1. Select your contact name as in “Accessing contacts” and press **Details**.
2. Press **Options » Send business card**.
3. Select the transmission method you want to use:

To send by multimedia message:

1. Scroll to **Via multimedia** and then press **Select**.

2. Refer to “Writing and sending multimedia messages” on page 21 to complete and send your multimedia message.

To send by text message:

1. Scroll to **Via text message** and then press **Select**.
2. Refer to “Writing and sending text messages” on page 19 to complete and send your text message.

To send by Bluetooth:

1. Scroll to **Via Bluetooth** and then press **Select**.
2. Scroll to the recipient's device on the list and then press **Select**. A message confirms that the business card has been sent.



The phone memory can store additional contact information for example a person's work and mobile phone numbers and an e-mail address.

Receiving business cards

When you receive a business card a message appears on the display. An audible alert sounds if your Vertu phone is set up for audible alerts.

To display a received business card:

Press **Show** to display the business card.

To save a business card to your directory:

Press **Save**. A message confirms that you have saved the business card.

To discard a business card without saving it:

Press **Exit** then press **Yes** to confirm. A message confirms that you have discarded the business card.

Speed dialling

The Contacts menu enables you to compile a speed dial list very quickly. You can have up to eight numbers saved in your speed dial list. To dial a number, simply press and hold one of the **NUMBER** keys.



Speed dialling key number 1 is reserved for the voice mailbox.

VERTU

Adding numbers to the speed dial list

To add a number to the speed dial list from within a contact:

1. Select your contact name as in “Accessing contacts” and press **Details**.
2. Scroll to the required number and press **Options**.
3. Scroll to **Speed dial** and then press **Select**.
4. Scroll to an empty speed dial key, or one that you want to overwrite (see below).
5. With the desired key highlighted, press **Assign**.

A message confirms which speed dial number key has been assigned.

To add a number to the speed dial list using the speed dial menu:



This method can add contact details and assign a speed dial number key at the same time.

1. From the stand-by display, press **Menu » Contacts » Speed dials**.
2. Scroll to the desired speed dial key and press **Assign**.
3. Key in the **Phone number**: or press **Search** to select it from the Contacts list and then press **OK**.
4. Enter the **First name**: if creating a new contact.
5. Enter the **Last name**: of the contact.
6. Scroll to **Save** and press **Select**.

A message confirms which memory the contact has been saved to, followed by a message that confirms which speed dial number key has been assigned.

Changing speed dial numbers

To change speed dial numbers from within a contact:

1. Select your contact name as in “Accessing contacts” and press **Details**.
2. Scroll to the required number and press **Options**.
3. Scroll to **Speed dial** and then press **Select**.
4. A message confirms that a speed dial already exists for the contact.
5. Scroll to the desired speed dial key and press **Assign**.

A message confirms which speed dial number key has been assigned.

To change speed dial numbers using the speed dial menu:

1. From the stand-by display, press **Menu » Contacts » Speed dials**.
2. Scroll to the desired speed dial and press **Options**.
3. Scroll to **Change** and then press **Select**.
4. Enter the new **Phone number**: by keying it in or by pressing **Search** and then selecting an existing number.
5. Enter the **First name**: if creating a new contact and then press **Next**.
6. Enter the contact **Last name**: then press **Next**.
7. Scroll to **Save** and press **Select**.

A message confirms which memory the contact has been saved to, and which speed dial number key has been assigned.

Deleting speed dial numbers

To delete speed dial numbers using the speed dial menu:

1. From the stand-by display, press **Menu » Contacts » Speed dials**.
2. Scroll to the desired speed dial and press **Options**.
3. Scroll to **Delete** and then press **Select**.
4. Press **Yes** to confirm.

A message confirms which speed dial number key has been deleted.

Voice tags

Your Vertu phone can make a call to a contact using a voice tag. Voice tags are automatically added to all contacts. Your Vertu phone can store up to 1,500 voice tags.



Very short names do not work well for voice tags. Use longer unique names, for example “Vertu Concierge Service.”

Using voice tags

To make a voice tag call:

1. Press and hold the down the right **SELECTION** key.
2. Speak the voice tag clearly into the microphone.
3. A list of possible matches is displayed briefly giving you a chance to scroll to the correct one or **Quit** if it is not on the list.
4. After about 2 seconds your phone will automatically dial the number.

Playing voice tags

To play a voice tag from within a contact:

1. Select your contact name as in “Accessing contacts” and press **Details**.
2. Scroll to the contact name within the details and press **Options**.
3. Scroll to **Play voice tag** and then press **Select**.

The voice tag is played.

Groups

Use groups to associate a contact name to a group. The group name appears on the display when a member of a group calls you. You can assign a different ringing tone to each group for easy recognition of incoming calls.

Viewing groups

To view groups:

From the stand-by display, press **Menu » Contacts » Groups**.

The Groups are displayed.

Creating a group

To create a contact group:

1. From the stand-by display, press **Menu » Contacts » Groups**.
2. Press **Add**. If you have existing groups listed, press **Options** and then **Add new group**.
3. Add a Group name.
4. Add a Group image and tone (if required).
5. Press **Save**.

A message confirms that the group has been added.

Adding contacts to a group

To open a group and link contacts to it:

- 1. From the stand-by display, press **Menu » Contacts » Groups**.
- 2. Scroll to the desired group and press **View**.
- 3. Press **Add** to display your contacts list.
- 4. Scroll to the desired name and then press **Select**. Repeat for each contact to be added to the group.

A message confirms that the contact has been added to the group.

Editing group names

To edit group names:

- 1. From the stand-by display, press **Menu » Contacts » Groups**.
- 2. With the group name to be edited highlighted, press **Options**.
- 3. With **Group details** highlighted, press **Select**.
- 4. With **Group name** highlighted, press **Select**.
- 5. Key in the new name for the group and then press **OK**.

A message confirms that the group has been renamed.

Deleting contacts from a group

To delete contacts from a group:

- 1. From the stand-by display, press **Menu » Contacts » Groups**.
- 2. Scroll to the desired group and press **View**.
- 3. Scroll through the group members to the desired contact and press **Options**.
- 4. With **Remove member** highlighted, press **Select**.
- 5. Press **Yes** to confirm.

A message confirms that the contact has been removed from the group.

Adding group details to a contact

To open a contact and add group details:

- 1. Select your contact name as in “Accessing contacts” and press **Details**.
 - 2. Press **Options**.
 - 3. Scroll to **Add to group** and then press **Select**.
 - 4. Scroll to the desired group and then press **Select**.
- A message confirms that the contact has been added to the group.

Deleting group details from a contact

To delete group details from a contact:

- 1. Select your contact name as in “Accessing contacts” and press **Details**.
- 2. Scroll to the group name and press **Options**.
- 3. Scroll to **Remove from group** and then press **Select**.
- 4. Press **Yes** to confirm.

A message confirms that the contact has been removed from the group.

Setting group ringing tones

All groups initially have a default ringing tone. To set a distinctive ringing tone for each group:

- 1. From the stand-by display, press **Menu » Contacts » Groups**.
- 2. Scroll to the desired group and press **Options » Group details**.
- 3. Scroll to **Group tone**.
- 4. Press **Options » Change tone** and select your ringing tone from **Default / Open Gallery / Tone downloads**.
- 5. Press **Save**.

A message confirms that the group ringing tone has been selected.



The default ringing tone for the caller groups is the ringing tone set up in the profiles menu.

Editing contact numbers

To edit contact number details:

- 1. Select your contact name as in “Accessing contacts” and press **Details**.
- 2. Press **Options**.
- 3. Select from the following functions:

Add detail

Scroll to one of the following and then press **Select** to add more detail to a contact record:

Number	Nickname
E-mail address	Postal address
Internet telephone	User ID
Web address	Birthday
Company	Note
Job title	Image
Formal name	

Voice call

Press **Select** to call the contact.

Send message

Select a type of message and then press **Select**. See the chapter “MESSAGES” on page 16 for further instructions on sending messages.

Add image

Press **Select** to open the Gallery and select an image. See “Adding contacts” on page 27.

Edit

- 1. Scroll to **Edit number** and then press **Select**.
- 2. Press **Clear** as many times as necessary to delete the number to the left of the cursor.
- 3. Key in the new number.
- 4. Press **OK** to save the new number.

Delete

- 1. Scroll to **Delete** and then press **Select**.

VERTU

2. Scroll to either **Delete number** to remove the number but retain the other contact details or **Delete contact** to remove all of the contact details and then press **Select**.
3. Press **Yes** to confirm the deletion.

View

Press **Select** to view the contact number.

Set as default

Press **Set as default**. A message confirms that number has been set as default.

Change type

Allows you to redefine the number type as **General**, **Mobile**, **Home**, **Office** or **Fax**. Press **Select** and a message will be displayed to confirm the change.

Copy number

1. Select **Keep original** or **Move original**.
2. Press **Select**.
3. A message confirms that the number has been copied.

Send business card

Select a transmission method and then press **Select**. See “Business cards” on page 29 for further instructions on sending business cards.

Add to group

Press **Select** to add the contact to a group. “Adding contacts to a group” on page 31.

Use number

This makes a copy of the selected number allowing you to save it under a new contact record.

Press **Save** and then use the **NUMBER** keys to enter a name for the new contact.

Speed dial

Select a speed dial key and press **Assign**. A message confirms which speed dial key has been assigned.

Editing contact names

To edit contact name details:

1. Select your contact name as in “Accessing contacts” and press **Details**.
2. Scroll to the contact name and press **Options**.
3. Select from the following functions:

Add detail

Press **Select** to add more detail to a contact record. For more details, see “Adding information to a contact” on page 28.

Voice call

Press **Select** to call the contact.

Add image

Press **Select** to open the Gallery and select an image. See “Adding contacts” on page 27.

Edit

1. Press **Clear** as many times as necessary to delete the current name.
2. Use the **NUMBER** keys to enter the new name.
3. Press **OK** to save the new name.

Delete contact

To remove the complete contact record press **Yes** to confirm the deletion.

Play voice tag

This will play the voice tag associated with the contact record.

Send business card

Select a transmission method and then press **Select**. See “Business cards” on page 29 for further instructions on sending business cards.

Add to group

Select the required group from those displayed and then press **Select**. A message will be displayed to confirm that the contact has been added to the group.

5 CALL HISTORY

The Call history feature allows you to view information about calls that you have missed, received and made. You can also view information (volume of data / session duration) for packet data transfer and number of messages sent and received (both SMS and Multimedia).

The call history

The call history stores information about your most recent missed, received, and dialled calls. When the list is full, the most recent call replaces the oldest.

To ensure that the call history is able to store your received and missed call information, your service provider must support caller ID, and it must be enabled. If the caller's number is not available, for example if the caller withheld their number or the network did not transmit the number, **No number** appears in the calls list.

The call history can only store information about calls that are actually received by your Vertu phone. If you do not have a signal or if your calls are blocked, any incoming calls will not be stored.

Viewing the call history

To view recent call information:

1. From the stand-by display, press **Menu » Call history » All calls**.
2. The calls will be listed in chronological order.

Viewing missed calls

To view details of calls that have been missed:

From the stand-by display, press **Menu » Call history » Missed calls**.

Viewing received calls

To view details of calls that have been successfully received by your Vertu phone:

From the stand-by display, press **Menu » Call history » Received calls**.

Viewing dialled numbers

To view details of numbers that have been dialled from your Vertu phone:

From the stand-by display, press **Menu » Call history » Dialled numbers**.

Viewing message recipients

To view details of contacts to whom messages have been sent:

From the stand-by display, press **Menu » Call history » Msg. recipients**.

Clearing log lists

To clear information from your Vertu phone's Log:

1. From the stand-by display, press **Menu » Call history » Clear log lists**.
2. Scroll to one of the options and then press **Select**:



This operation will take immediate effect without requiring confirmation. Once log lists have been cleared the information cannot be recovered.

All call lists removes all information from your Vertu phone log

Missed calls removes details from the Missed calls log

Received calls removes details from the Received calls log

Dialled numbers removes details from the Dialled numbers log

Message recipients removes details from the Message recipients log.

Viewing call duration

To view information about the duration of calls made and received by your Vertu phone:

1. From the stand-by display, press **Menu » Call history » Call duration**.
2. The following information will be available for examination:
 - Last call** shows the length of the last call regardless of type
 - Received calls** shows the total combined duration of all received calls
 - Dialled calls** shows the total combined duration of all dialled calls
 - All calls** shows the total combined duration of all calls to and from your Vertu phone
3. **Clear timers** it will be necessary to enter your security code to complete this operation. See "SECURITY" on page 13.

Viewing the packet data counter

General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an Internet protocol (IP)-based network. See "Packet data settings" on page 38 for more information.

To view approximate information about the volume of data sent and received via GPRS:

1. From the stand-by display, press **Menu » Call history » Data counter**.
2. The following information will be available for examination:
 - Sent in last session** is the amount of data in bytes, sent in the last transmission
 - Received in last sess.** is the amount of data in bytes, received in the last transmission
 - All sent data** is the total amount of data in bytes, sent in all transmissions
 - All received data** is the total amount of data in bytes, received in all transmissions
3. **Clear counters** resets all of the counters. It will be necessary to enter your security code to complete this operation. See "SECURITY" on page 13.

Viewing the data timer

To view approximate information about the duration of sessions over GPRS:

1. From the stand-by display, press **Menu » Call history » Data timer**.
2. The following information will be available:
 - Duration of last sess.** shows the length of time spent on the last session
 - Duration of all sess.** shows the combined length of time spent on all sessions
3. **Clear timers** resets all of the timers. It will be necessary to enter your security code to complete this operation. See "SECURITY" on page 13.

Viewing the message log

To view details of messages that have been sent and received by your Vertu phone:

1. From the stand-by display, press **Menu » Call history » Message log**.
2. The following information will be available:
 - Sent text messages** shows number of text messages and parts sent
 - Sent MMS msgs.** shows number of multimedia messages sent
 - Sent e-mails** shows number of email messages sent
 - Received text msgs.** shows number of text messages and parts received
 - Received MMS msgs.** shows number of multimedia messages received
 - Downloaded e-mails** shows number of downloaded messages to My mailbox.
3. **Clear all counters** it will be necessary to enter your security code to complete this operation. See "SECURITY" on page 13.

Viewing the sync log

Sync log shows statistics on data you have transferred while synchronising your Vertu phone.

To view the sync log, from the stand-by display, press **Menu » Call history » Sync log**.

6 SETTINGS

The Settings menu enables you to control the core functionality of your Vertu phone. Using this feature you can define personalised themes, configure the display, adjust the time and date settings, set up personal shortcuts, configure various connectivity preferences, modify call and phone settings, set up security features and restore your factory default settings.

Refer to "SECURITY" on page 13 for more information about the security settings.

Date and time

Allows you to change the date and time settings and to set the phone to show or hide the date and time in stand-by mode.

To adjust the date and time settings:

1. From the stand-by display, press **Menu » Settings » Date and time » Date & time settings**
2. Scroll to one of the following options and then press **Select** to customise the time settings:
 - Date:** enables you to use the **NUMBER** keys to set the date on the phone
 - Time:** enables you to use the **NUMBER** keys to set the time on the clock
 - Time zone:** enables you to set the valid offset from GMT
 - Daylight saving:** enables you to select between Wintertime or Summertime (+1 or +2 hours) daylight saving periods.
3. Scroll down and select **Save** to confirm your settings.

Change date format

To adjust the date format:

1. From the stand-by display, press **Menu » Settings » Date and time » Date and time format » Date.**
2. Scroll to one of the following options and then press **Select** to customise the time settings:
 - Date on standby scr.** enables you to show or hide the date on the stand-by screen
 - Date format** sets how the date will be displayed
 - Date separator** sets whether spaces, dots or slashes are used.

Change clock format

To adjust the time and clock format:

1. From the stand-by display, press **Menu » Settings » Date and time » Date and time format » Time.**
2. Scroll to one of the following options and then press **Select** to customise the time settings:

Clock enables you to choose from **Digital**, **Analogue** or **Hide clock**

Time format sets the time in 24-hour or 12-hour format

Automatic update of time

This is a network service. You can set your Vertu phone to update the time from the network when you make a GPRS connection, for example, when you browse the web. If the clock is 30 seconds or more off the network time, the time will be updated automatically to reflect the network time.

Automatic update of the time does not change the time you have set for the alarm clock, calendar, or alarm notes. These are in local time. Updating may cause some alarms that you have set to expire.

To use automatic time update:

1. From the stand-by display, press **Menu » Settings » Date and time » Auto-update of date & time.**
2. Scroll to one of the options and then press **Select**:
 - Off** if you do not want the date and time automatically updated by your network provider
 - Confirm first** requests confirmation before updating the time. You can accept or decline the update

Profiles

Profiles are an easy way to control the most common groups of settings, for example audible and vibrating alerts. Activating an alternative profile changes all the associated settings.

Profiles define how your Vertu phone reacts when you receive a call or a message, how your **NUMBER** keys sound when you press a key, and more.

Activating a profile

You can change your profile at any time to ensure that your Vertu phone's alerts are appropriate to your surroundings.

Timed profiles can be used to prevent missed calls. For example, you attend an event that requires your Vertu phone be set to **Silent** before the event starts, but you forget to return it to **General** until long after the event. During this time, you might miss several calls because the ringing tone is silent. The **Flight** profile cannot be timed.

With the timed profile feature, you can set a profile to expire after any length of time up to 24 hours. When the timed profile expires, your Vertu phone automatically returns to the original profile.

VERTU

To change your current profile from the stand-by display:

1. Press the power key once briefly.
2. Scroll to the desired profile and then press **Select**.

To change your current profile using the menus:

1. From the stand-by display, press **Menu » Settings » Profiles**.
2. Scroll to the desired profile and then press **Select**.
3. With **Activate** highlighted, press **Select**.

To set a time limit for the selected profile:

1. From the stand-by display, press **Menu » Settings » Profiles**.
2. Scroll to the desired profile and then press **Select**.
3. Scroll to **Timed** and then press **Select**.
4. Use the **NUMBER** keys or scroll to enter the time you want your new profile selection to end and then press **OK**.

Personalising a profile

You can customise the default profiles to adjust your Vertu phone's characteristics so they best suit your own preferences and situation. For the silent profile, you can only change the vibrate setting.

To personalise a standard profile:

1. From the stand-by display, press **Menu » Settings » Profiles**.
2. Scroll to the profile that you want to customise and then press **Select**.
3. Scroll to **Personalise** and then press **Select**.
4. Scroll to one of the following options and then press **Select** to customise the profile:

Incoming call alert: selects how the phone notifies you of an incoming call, the available options are:

Ring plays the ringing tone

Ascending makes the volume of the ringing tone increase the longer the call is unanswered

Ring once plays only one cycle of the ringing tone

Beep once plays a single beep

Off causes no ringing tone for an incoming call

Ringing tone: enables you to select the ringing tone for incoming calls

Ringing volume: sets the volume of your ringing tone (use + and -)

Incoming call video: selects the video shown for received calls

Vibrating alert: turns the vibrating alert **On** or **Off**

Message alert tone: selects the tone for received messages

E-mail alert tone: selects the tone for received e-mails

IM alert tone: selects the tone for received instant messages

Keypad tones: sets the volume of your keypad tones (use + and -)

End of list tone: turns the tone to indicate end of list **On** or **Off**

Other tones: sets other tones, for example, connecting accessories.

Application tones: turns the tones for applications **On** or **Off**

Alert for: to define which caller groups you want your Vertu phone to alert you for when you receive a call from someone belonging to a specified group

If you receive a call from someone who is not included in a specified caller group, an information note appears on the display, but your

Vertu phone remains silent. See "Groups" on page 30 for more information.

Profile name: enables you to rename the selected profile (all of the preset profiles can be renamed except for **General**). Use the **NUMBER** keys to enter the new name.

Press **Save** when you have made your changes.

Themes

A theme defines the image that is used as a background on all of your Vertu phone menus.

To select a theme:

1. From the stand-by display, press **Menu » Settings » Themes**.
2. Scroll to the desired theme and press **Apply**.
3. Press **Options** at any time while scrolling through the themes to display the following options:

Details displays name, file size and creation date information

Type of view displays how the folders and files appear on the screen

Sort enables you to select the order in which files and folders are displayed (by name, date, format or size).

Tones

The tones settings menu allows you to personalise the tone settings of the selected active profile on your Vertu phone.

To personalise the tone settings:

1. From the stand-by display, press **Menu » Settings » Tones**.
2. Scroll to the tone type that you want to customise and then press **Change**.
3. Select a ringing tone from the list.

Display

This allows you to receive cell information (network service) and to set display options.

To personalise your Vertu phone's display view:

1. From the stand-by display, press **Menu » Settings » Display**.
2. Scroll to one of the following options and then press **Select**:

Glowing earpiece controls whether the breathing light in the phone pillow is activated (**On**) when the phone is in standby mode:

When the phone is in stand-by mode, the glowing earpiece flashes slowly

When the phone is in stand-by mode with a missed call or text message, the glowing earpiece flashes quickly

When the phone is in stand-by mode and charging the glowing earpiece light remains on constantly

Wallpaper enables you to add a background image when your phone is in standby mode

Standby font colour lets you change the font colour of the date and time in the stand-by mode. This is displayed only if the **Hide clock** is selected. See "**Change clock format**" on page 35

Font size lets you select the font size used in Messaging, Contacts and Web

Cell info display displays the local area code on the stand-by display

VERTU

Notification details lets you select to show or hide details, such as contact information in both missed call and message received notifications.

My shortcuts

With personal shortcuts you get quick access from the stand-by display to frequently used functions of your Vertu phone.

If the left **SELECTION** key is **Go to**, select **Go to » Options** and select from the following options to personalise your **Go to** menu:

- Select options** - to add or to remove a function
- Organise** - to rearrange the functions on your personal shortcut list.
- Auto sorting on** - dynamically displays the menu options you use most often at the top of the list

The auto sorting feature must be disabled for you to use the **Select options** and **Organise** functions.

Left selection key

To select a function for the left **SELECTION** key:

1. From the stand-by display, press **Menu » Settings » My shortcuts » Left selection key**.
2. Scroll to the desired function and then press **Select**.

Right selection key

To select a function for the right **SELECTION** key:

1. From the stand-by display, press **Menu » Settings » My shortcuts » Right selection key**.
2. Scroll to the desired function and then press **Select**.

Navigation key

To select a function for the different directions on the **NAVIGATION** key:

1. From the stand-by display, press **Menu » Settings » My shortcuts » Navigation key**.
2. Select the Up, Down, Left or Right functionality to be changed.
3. Press **Change**.
4. Scroll to the required shortcut from the list and press **Select**.

Connectivity

You can connect your Vertu phone to a compatible device using Bluetooth wireless technology or a USB data cable (CA-101V) connection. You can also define the settings for GPRS dial-up connections.

Bluetooth wireless technology

Your Vertu phone is compliant with Bluetooth Specification 2.0. You can use Bluetooth car kits, perform data transfer and use your Vertu phone as a modem.



Bluetooth driver compatibility information is available in the Vertu PC Suite help.

To ensure interoperability between other devices supporting Bluetooth technology, use Vertu approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Features using Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduce the battery life.

Bluetooth technology allows you to connect the phone to a compatible Bluetooth device within 10 meters (32 feet). Since devices using Bluetooth technology communicate using radio waves, your Vertu phone and the other devices do not need to be in direct line-of-sight, although the connection can be subject to interference from obstructions for example walls or from other electronic devices.

Bluetooth settings

To define how your Vertu phone is recognised by other Bluetooth devices:

1. From the stand-by display, press **Menu » Settings » Connectivity » Bluetooth**.
2. Scroll to one of the options and then press **Select**:
 - Bluetooth** enables you to switch your bluetooth connection on and off
 - Connect audio enhan.** enables you to connect your phone with an audio enhancement and the device that you want to connect
 - Paired devices** enables you to add a new Bluetooth device and view existing devices already paired with your phone
 - Active devices** checks which Bluetooth connection is currently active
 - My phone's visibility** enables you to operate the phone in hidden mode to avoid malicious software
 - My phone's name** enables you to define the name that you want your Vertu phone to be recognised by on the network.



Do not accept Bluetooth connectivity from sources you do not trust. Alternatively, switch off the Bluetooth function. This will not affect other functions of your Vertu phone.

Bluetooth wireless connection

To make a Bluetooth wireless connection:

1. From the stand-by display, press **Menu » Settings » Connectivity » Bluetooth**.
2. Scroll to **Paired devices** and press **Select**.
3. Select a device from the list of available devices or scroll to **Add new device** and press **Select**.
 - Your Vertu phone will automatically turn Bluetooth on if necessary and search for available devices.
4. Scroll to the device to connect to and press **Add**.
5. Enter a passcode if necessary and press **OK**.

A message is displayed when the device is connected successfully and the paired device is added to the **Paired devices** list.

To check which Bluetooth connection is currently active, scroll to **Active devices** and then press **Select**.

Select **Options** to access available options depending on the status of the device and the Bluetooth connection.

Micro-USB data cable

You can use the micro-USB data cable to transfer data between the phone and a compatible computer or a printer supporting

VERTU

PictBridge. You can also use the micro-USB data cable with Vertu PC suite.

To change the USB mode, select **Menu » Settings » Connectivity » USB data cable**.

To connect your phone using the micro-USB data cable:

1. Connect the data cable. A message appears on the display **Select USB mode**:
2. Select from the following options:
 - PC Suite** - to use the phone to interact with applications on a computer that has Vertu PC suite installed.
 - Printing & media** - to use the phone with a PictBridge compatible printer, or to connect the phone to a PC to synchronise it with Windows Media Player.
 - Data storage** - to connect to a computer that does not have Vertu software and use the phone as data storage.

Packet data

Your Vertu phone can use general packet radio service (GPRS) for high-speed data connections. With GPRS, you can stay connected to the mobile Internet and perform faster downloads without completing a dial-up connection. GPRS connectivity can be used to enhance MMS messaging, Web browsing sessions, e-mail, and PC dial-up. GPRS is typically billed as an "always-on" function and you are only charged for the data you transfer.

Enhanced GPRS (EGPRS), also known as EDGE (enhanced data rates for GSM evolution) is similar to GPRS but the connection is much faster. Contact your service provider for more information about supported data connections and tariffs.

When you have selected GPRS as a data bearer, the phone automatically uses EGPRS (EDGE) instead of GPRS if it is available in the network.

Packet data connection

To define when a GPRS connection is established:

1. From the stand-by display, press **Menu » Settings » Connectivity » Packet data » Packet data conn..**
2. Scroll to one of the following options and then press **Select**.
 - When needed** registers and establishes an (E)GPRS connection when an application using (E)GPRS needs it and closes the connection when the application finishes
 - Always online** sets your Vertu phone to automatically register to an (E)GPRS network when you switch on your Vertu phone. The  icon will appear to indicate that GPRS or EGPRS service is available

If you receive a call or a text message, or make a call during a GPRS or EGPRS connection, the  icon will appear to indicate that the GPRS or EGPRS connection is suspended.

Packet data settings

You can connect your Vertu phone to a compatible PC using Bluetooth wireless technology or a USB data cable connection. This allows you to use your Vertu phone as a modem to enable (E)GPRS connectivity from your PC.

To define the settings for (E)GPRS connections from your PC:

1. From the stand-by display, press **Menu » Settings » Connectivity » Packet data » Packet data settings » Active access point**.

2. Scroll to the required access point and press **Activate**.
3. Scroll to **Edit active access pt.** and then press **Select**.
4. With **Alias for access point** highlighted, press **Select**.
5. Use the **NUMBER** keys to enter an alias for the active access point and then press **OK**.



You can also set the (E)GPRS dial-up service settings (access point name) on your PC using the One Touch Access application in Vertu PC Suite.

Data transfer

Synchronise your calendar, contacts data, and notes with another compatible device, for example a compatible PC, or a remote Internet server (network service).

Your Vertu phone allows data transfer with a compatible PC or another compatible device when using the phone without a SIM card. Note that when you use the phone without a SIM card, some functions appear dimmed in the menus and cannot be used. Synchronising with a remote Internet server is not possible without a SIM card.

Partner list

To copy or synchronise data from your Vertu phone, the name of the device and the settings must be in the list of partners in transfer contacts. If you receive data from another device, the partner is automatically added to the list, using the contact data from the other device. **Server sync** and **PC synchronisation** are the original items in the list.

To add a new partner to the list (for example a new device):

1. From the stand-by display, press **Menu » Settings » Connectivity » Data transfer » Options » Add transfer contact » Phone copy » Data to be copied**.
2. Mark the required settings according to the transfer type.

To edit the copy and synchronise settings:

1. Scroll to the required entry in the partner list and press **Options » Edit**.
2. Modify the settings accordingly.

To delete a partner from the list:

1. Scroll to the required entry in the partner list and press **Options » Delete**.
2. Confirm the **Delete transfer contact? %U** message.



You cannot delete Server synchronisation or PC synchronisation.

Data transfer with a compatible device

Bluetooth wireless technology can be used for synchronisation. The other device should be in the stand-by mode.

To start data transfer:

1. From the stand-by display, press **Menu » Settings » Connectivity » Data transfer**.
2. Scroll to the required entry in the Partner list (other than **Server sync** or **PC synchronisation**) and then press **Select**.

According to the settings, the selected data is copied or synchronised. The other device also must be activated for receiving data.

VERTU

Synchronise from a compatible PC

Before you synchronise data from calendar, notes, and contacts with a PC, you must install the Vertu PC Suite software on a compatible PC. Use Bluetooth wireless technology, or a USB data cable for the synchronisation, and start the synchronisation from the PC.

Synchronise from a server

To use a remote Internet server, you must subscribe to a synchronisation service, e.g. Vertu Fortress (see “Vertu Fortress” on page 54). For more information and the settings required for this service, contact your service provider. You may receive the settings as a configuration message.

If you have saved data on the remote Internet server, to synchronise your Vertu phone, start the synchronisation from your phone:

1. From the stand-by display, press **Menu » Settings » Connectivity » Data transfer » Server sync.**
2. Depending on the settings, select **Initialising syn-chronisation** or **Initialising copy.**

Synchronising for the first time or after an interrupted synchronisation may take up to 30 minutes to complete, if the contacts or calendar are full.

Call settings

You can personalise the way your Vertu phone behaves during a call by using the call settings.

Call divert

The call divert feature redirects your incoming calls to another number, for example your voice mailbox number.

When a call is diverted your Vertu phone does not give any indication of an incoming call. The call divert feature is managed by your service operator and is not phone specific. The call divert feature may remain active even if your SIM card is not currently in a phone.

To manage your call divert settings:

1. From the stand-by display, press **Menu » Settings » Call » Call divert.**
2. Scroll to one of the divert options:
 - All voice calls** forwards all calls to the number you specify
 - If busy** forwards all calls when you are in a call
 - If not answered** forwards all calls to another number when you do not answer. You can also set a delay before forwarding takes place
 - If out of reach** forwards all calls when your Vertu phone is turned off or out of the coverage area
 - If not available** forwards all calls when you do not answer, your Vertu phone is busy or turned off, or out of the coverage area. You can also set a delay before forwarding takes place
 - All fax calls** redirects all fax calls to a fax number
 - All data calls** forwards all data calls to a data mailbox.
3. Press **Select**:
 - Activate** sets up the divert. Use the **NUMBER** keys to enter the divert number or select a contact and then press **OK**
 - Cancel** cancels the divert

Check status displays the current status of the divert. A progress indicator appears, followed by an information note indicating whether the divert is active and to which number.

No call divers cancels all call diversions.



Cancelling all call diversions may affect your ability to receive voice mail messages. Some service providers may not allow cancelling of all diversions. Contact your service provider for specific details.

Anykey answer

Anykey answer allows you to answer an incoming call by briefly pressing any key except the **POWER** key, **SELECTION** and **END** keys.

To change the anykey answer setting:

1. From the stand-by display, press **Menu » Settings » Call » Anykey answer.**
2. Scroll to **On** to enable Anykey answer, or **Off** to disable it and then press **Select.**

Automatic redial

Occasionally, your network may experience heavy traffic, or the called party is busy and you might not be able to make a call. With automatic redial activated, your Vertu phone redials the number up to 10 times, and notifies you once the network is available.

To change the automatic redial setting:

1. From the stand-by display, press **Menu » Settings » Call » Automatic redial.**
2. Scroll to **On** to enable automatic redial, or **Off** to disable it and then press **Select.**

Voice clarity

This feature enhances speech intelligibility especially in noisy environments.

To change the voice clarity setting:

1. From the stand-by display, press **Menu » Settings » Call » Voice clarity.**
2. Scroll to **Active** to enable voice clarity, or **Inactive** to disable it and then press **Select.**

Speed dialling

Single key speed dialling enables you to quickly dial a number by pressing and holding a single key.

To activate the speed dialling feature:

1. From the stand-by display, press **Menu » Settings » Call » Speed dialling.**
2. Scroll to **On** to enable speed dialling, or **Off** to disable it and then press **Select.**

To change the speed dial settings for your contacts, see “Speed dialling” on page 29.

Call waiting

Call waiting notifies you of an incoming call while you are in another call. You can accept, reject, or ignore the incoming call. Contact your service provider for more details.

To change the call waiting setting:

VERTU

1. From the stand-by display, press **Menu » Settings » Call » Call waiting**.
2. Scroll to one of the options and then press **Select**:
Activate enables call waiting
Cancel cancels call waiting
Check status displays whether the option is active and for which type of call.

To use the call waiting feature:

1. When you have a call in progress and you receive an incoming call, you will hear an audible alert and the display indicates that another call is waiting. Press the **SEND** key to answer the call. The person you were speaking to is put on hold. Call waiting may not work correctly if **If busy** is set.
2. Press the **SEND** key to swap between the calls. A confirmation message is displayed. The person on hold becomes the active call, and the other person is put on hold.
3. Press the **END** key to end the active call. A confirmation message is displayed and the other call becomes active.
4. Press **Options** then scroll to **End all calls** and then press **Select** to end all calls.

Summary after call

Your Vertu phone can display the time spent on a call.

To change the call summary setting:

1. From the stand-by display, press **Menu » Settings » Call » Summary after call**.
2. Scroll to **On** to enable summary after call, or **Off** to disable it and then press **Select**.

Send my caller ID

Shows your phone number to the person you are calling.

To change the caller ID setting:

1. From the stand-by display, press **Menu » Settings » Call » Send my caller ID**.
2. Scroll to **Yes** to enable caller ID, **No** to disable it, or **Set by network** to use the setting agreed with your service provider and then press **Select**.

Phone settings

You can personalise the following options on your Vertu phone using this menu.

Language settings

1. From the stand-by display, press **Menu » Settings » Phone » Language settings**.
2. Scroll to one of the options and then press **Select**.
Phone language enables you to set the display language of your Vertu phone. If you select **Automatic**, the phone selects the language according to the information on the SIM card
SIM language enables you to select the USIM card language
Recognition lang. enables you to set a language for the voice playback.

Memory status

1. From the stand-by display, press **Menu » Settings » Phone » Memory status**.

2. Scroll through the options to see how much of your Vertu phone's memory is being used to store media, messages and applications and how much free space is available.

Automatic keyguard

To set the keys of your Vertu phone to lock automatically after a preset time delay when the phone is in the stand-by mode and no function of the phone has been used:

1. From the stand-by display, press **Menu » Settings » Phone » Automatic keyguard**.
2. Select **On**, and use the **NUMBER** keys to enter the time delay.



When the keyguard is on, calls still may be possible to the official emergency number programmed into your device.

Security keyguard

To set your Vertu phone to ask for the security code when you unlock the keyguard:

1. From the stand-by display, press **Menu » Settings » Phone » Security keyguard**.
2. Enter your Security code (see "Security code" on page 13) and select **On**.

Voice recognition

Call contacts and carry out phone functions by speaking a voice command.

Voice commands are language-dependent. Select **Menu » Settings » Phone » Voice recognition » Recognition lang.** and your language before using voice commands.

From the stand-by display, press **Menu » Settings » Phone » Voice recognition » Voice recog. training** to train the voice recognition of your phone to your voice.

To activate a voice command for a function:

1. From the stand-by display, press **Menu » Settings » Phone » Voice recognition » Voice commands**.
2. Select a feature and a subsequent function.

To activate a deactivated voice tag, select **Add**.

To play the activated voice command, select **Play**.

To manage the voice commands, scroll to a function, and select **Options** and from the following:

Edit to rename the voice command

Remove to deactivate the voice command

Add all to activate all voice commands

Restore all to deactivate voice commands for all functions in the voice commands list

To use voice commands, see "Voice dialling" on page 10.

Flight query

You can deactivate all radio frequency functionality and still have access to offline games, calendar and phone numbers. Use Flight mode in areas sensitive to radio emission, on board aircraft and in hospitals.

Your Vertu phone will ask if you wish to switch to Flight mode when you switch the phone on. To activate or deactivate Flight mode query:

VERTU

1. From the stand-by display, press **Menu » Settings » Phone » Flight query**.
2. Scroll to **On** or **Off** and then press **Select**.

In Flight mode you can make an emergency call. Enter the emergency number, press the **CALL** key and select **Yes** when asked if you want to exit the Flight mode profile. The phone attempts to make the emergency call and then automatically reverts to General profile when the call has ended.

To manually activate or deactivate Flight mode profile:

1. From the stand-by display, press **Menu » Settings » Profiles » Flight » Activate** or **Personalise**.

To deactivate the Flight mode, select any other profile.

Phone updates

Enables you to update your phone's software if there is an update available.

1. From the stand-by display, press **Menu » Settings » Phone » Phone updates**.
2. Select one of the following options:
 - Current softw. details** displays current phone software details
 - Downl. phone softw.** enables new phone software to be downloaded
 - Install softw. update** enables newly downloaded software to be installed on your phone
 - Software update provider** displays your software update provider
 - Automatic SW update check** enables your phone to automatically check for updates **Every month**, **Every 3 months** or **Never**.

Operator selection

You can select your network operator manually or your Vertu phone will select one automatically. See "Set up manual roaming" on page 55.

To change your operator selection setting:

1. From the stand-by display, press **Menu » Settings » Phone » Operator selection**.
2. Scroll to one of the options and then press **Select**:
 - Manual** displays all the locally available networks. Select the one you want to use.
 - Automatic** selects the default network for the area you are in.

Start-up tone

To select whether or not your Vertu phone plays a tone when the phone is switched on:

1. From the stand-by display, press **Menu » Settings » Phone » Start-up tone**.
2. Scroll to **On** or **Off** and then press **Select**.

Enhancements

This menu is shown only if the phone is or has been connected to a compatible mobile accessory, such as a charger or headset.

1. From the stand-by display, press **Menu » Settings » Enhancements**.

2. Scroll to one of the options and then press **Select** (available options will depend upon the enhancement selected):

Default profile enables you to select the profile that you want to be automatically activated when you connect to the selected enhancement

Automatic answer sets the phone to answer an incoming call automatically after 5 seconds. If Incoming call alert is set to **Beep once** or **Off**, automatic answer is off

Lights sets the lights permanently **On** or select **Automatic** to set the lights on for 15 seconds after a key press.

Configuration

You can configure your Vertu phone with settings that are required for certain services to function correctly. These services include multimedia messaging, synchronisation, e-mail, streaming and browser. Use the Order Settings link from your CD-ROM to take you directly to the appropriate page on the Vertu web site to obtain the settings for your phone.

1. From the stand-by display, press **Menu » Settings » Configuration**.
2. Scroll to one of the options and then press **Select**:

Web config. settings only the configurations that support the browsing service are shown. Select a service provider, Default, or Personal configuration for browsing.

Default config. sett. displays the service providers saved in the phone. Scroll to a service provider, and select **Details** to view the applications that the configuration settings of this service provider support

- > To set the configuration settings of that service provider as default settings, press **Options » Set as default**.
To delete configuration settings, select **Delete**.

Activ. def. in all apps. activates the default configuration settings for supported applications

Preferred access pt. displays the saved access points. Scroll to an access point and press **Options**. With **Details** highlighted, press **Select** to view the name of the service provider, data bearer, and packet data access point or GSM dial-up number for that access point

Connect to support downloads the configuration settings from your service provider if this is supported by the service provider

Device manager sett. enables you to allow or disallow software and configuration updates

Personal config. sett. enables you to add new personal accounts for various services, and to activate or delete them

- > To add a new personal account if you have not added any, select **Add**, otherwise, press **Options** and with **Add new** highlighted, press **Select**. Scroll to the required service type and then press **Select**. Use the **NUMBER** keys to enter each of the required parameters. The parameters differ according to the selected service type
- > To delete or activate a personal account, scroll to it, press **Options**, scroll to either **Delete** or **Activate** and then press **Select**.



Due to the complexity of entering all of the settings manually, it is strongly recommended that you use the order settings link from your CD-ROM to take you directly to the appropriate page on the Vertu website to obtain the settings for your Vertu phone.

Security

Your Vertu phone includes security options for the phone, SIM card, memory and calls.



When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialling) calls are still possible to the official emergency number programmed into your device.

To configure your security settings:

1. From the stand-by display, press **Menu » Settings » Security**.
2. Scroll to one of the following options and then press **Select**:

PIN code request lets you select whether a code is required when switching on your phone. The SIM card may require that the code is always asked for

Call barring service restricts incoming calls and outgoing calls. A barring password is required.

Closed user group specifies a group of people you can call and who can call you

Security level sets the security code whenever a new SIM card is inserted into the phone

Access codes changes the security codes that protect the phone and memory. Change either the **Create security code**, **Change PIN code**, **Change PIN2 code** or the **Change barring pass**.

Code in use selects whether the PIN code is active

PIN2 code request selects whether the PIN2 code is required when using a specific phone feature which is protected by the PIN2 code. Some SIM cards do not allow the code request to be turned off

Authority certificates displays the list of authority certificates downloaded into your phone

User certificates displays the list of user certificates downloaded into your phone

Security module sett. See "Security module" on page 14.

Workshop reset

To restore your Vertu phone's original settings:

1. From the stand-by display, press **Menu » Settings » Workshop reset » Restore settings only**.
2. Use the **NUMBER** keys to enter the security code.



Data you have entered or downloaded, for example names and phone numbers saved in Contacts, are not deleted.

To restore all your Vertu phone's original settings and delete user data, e.g. phonebook entries:

1. From the stand-by display, press **Menu » Settings » Workshop reset » Restore all**.
Use the **NUMBER** keys to enter the security code

Sync and backup

To synchronise or back up your Vertu phone data with another device:

Select **Menu » Settings » Sync and backup** and from the following options.

Phone switch to synchronise or copy selected data between your phone and another phone using Bluetooth

Create backup to create a backup of selected data

Restore backup to select a backup file and restore it to the phone. Select **Options » Details** for information about the selected backup file

Server sync to synchronise or copy selected data between your phone and another device, PC or network server (network service).

Digital rights management

Digital rights management (DRM) is copyright protection, designed to prevent modification and to limit distribution of protected files. When you download protected files, such as sound, video, themes, or ringing tones to your phone, the files are free, but locked. You pay for the key to activate the file, and the activation key is automatically sent to your phone when you download the file.

To view the permissions for a protected file:

Scroll to the file, and select **Options » Activation keys**. For example, you can see how many times you can view a video or how many days you have left for listening to a song.

To extend the permissions for a file:

Scroll to the file, select **Options**, and the corresponding option for the file type, such as **Activate theme**.

You can send certain types of protected files to your friends, and they can buy their own activation keys.

If your device has OMA DRM protected content, the only way to back up both the activation keys and the content is to use PC suite. Other transfer methods may not transfer the activation keys which need to be restored with the content for you to be able to continue the use of OMA DRM protected content after the device memory is formatted. You may also need to restore the activation keys in case the files on your device get corrupted.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

This phone supports OMA DRM 1.0 and 2.0.

SIM services

Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

To set the phone to show you the confirmation messages sent between your Vertu phone and the network when you are using the SIM services:

1. From the stand-by display, press **Menu » Settings » Phone » Confirm SIM actions**.
2. With **Yes** highlighted, press **Select**.



This option is shown only if supported by your SIM card.

Accessing these services may involve sending messages or making a phone call for which you may be charged.

(E)GPRS, HSCSD and CSD

With your Vertu phone you can use the enhanced GPRS (EGPRS), general packet radio service (GPRS), high speed circuit switched data (HSCSD) and circuit switched data (CSD, GSM data) data services.

For availability and subscription to data services, contact your network operator or service provider.

The use of HSCSD services consumes the phone battery faster than normal voice or data calls. You may need to connect the phone to a charger for the duration of data transfer.

See "Packet data settings" on page 38.

7 ADDITIONS

Your Vertu phone has a multimedia player with which you can view, play, and download files, such as images, audio, video, and animated images. You can also view compatible streaming videos from a network server (network service).

Gallery

You can save images, video clips, graphics, ringing tones and recordings to folders in the gallery, and add new folders to the ones already there. You can download images and tones using MMS, mobile Internet sites, or Vertu PC Suite. The Gallery contains two types of memory: phone memory and Media memory. Files can be stored on either memory, but there is much more storage space available on the Media memory.

Your Vertu phone supports a digital rights management system to protect content that you have acquired. A piece of content, for example a ringing tone, can be protected and associated with certain usage rules, for example, the number of usage times or a certain usage period. The rules are defined in the content activation key that can be delivered with the content or separately, depending on the service provider. You may be able to update these activation keys. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Copyright protection may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.

Your Vertu phone has a limited memory for storing files in the Gallery. This memory is not shared with other functions, for example contacts. If the phone displays a message that the memory is full, delete some existing files before proceeding.

Folders

To browse the folders in your Vertu phone:

1. From the stand-by display, press **Menu » Additions » Gallery**. A list of folders is displayed:

Images

Video clips

Music files

Themes

Graphics

Tones

Recordings

Received files

These are preset in the phone. Other user-defined folders may also be shown.

2. Scroll to a folder, and press **Open** to view the folders and files it contains.
3. Or, press **Options** to see a list of the actions you can perform on the folder:

Downloads to view downloads stored on your Vertu phone. Choose from Graphic, Tone, Video, Theme or Music downloads.

Delete folder to delete a folder you have created. You cannot delete a preset folder

Move folder to move the selected folder into another folder

> After selecting **Move folder**, scroll to another folder, and then press **Options**. With **Move folder** highlighted, press **Select**. You cannot move a preset folder

Copy folder to copy your folder to another folder. You cannot copy a preset folder

Rename folder to rename a folder you have created. You cannot rename a preset folder

Details to show the name, size and date of creation of the selected folder

Type of view to determine how the content of the folder will be displayed, either **List with details**, **List** or **Grid**

Sort to sort the contents of the selected folder **By name**, **By date**, **By format**, or **By size**

Add folder to create a new sub folder for your files

Memory status to examine how the memory in your Vertu phone is being used and how much you have left

Search to enter a filename or part of a filename to search for in this folder

Mark to select a folder

Mark all to select all folders.

Files

To use the files in your folders:

1. From the stand-by display, press **Menu » Additions » Gallery**.
2. Scroll to the folder you require and then press **Open**.
3. Scroll through the sub folders to locate the file item you want to use, and press **Open**.
4. Or, press **Options** to see a list of actions that can be performed on the file (these will be dependent upon the type of file you have selected):

Downloads to view downloads stored on your Vertu phone. Choose from Graphic, Tone, Video, Theme or Music downloads.

Use or Apply to activate the file

Delete to remove the file from your Vertu phone

Send to send the selected file as a multimedia message. This option is unavailable if the selected file is copyrighted

Move to move the selected file into another folder

Copy to copy the selected file to another folder, while leaving a copy in its current folder also

Rename to rename the selected file

Print to print file. Send the file to a compatible printer via a data cable or Bluetooth connection

Details to show the name, size, and date of creation of the selected file

Type of view to change the way the files are displayed. Choose from **List with details**, **List** or **Grid**

Sort to change the order in which the files are displayed. Choose from **By name**, **By date**, **By format** or **By size**

Open in sequence to view a series of files in listed order.

Add folder to add a new folder

Memory status to view the current memory status. Choose from Phone memory or Media memory. The memory status details how much memory is being used by each application

Search to enter a filename or part of a filename to search for in this folder

Mark to select a file

Mark all to select all files in the folder

Games and applications

Your Vertu phone may include one or more games and applications.

To launch a game:

1. From the stand-by menu, press **Menu » Additions » Applications**.
2. Scroll to the desired game, and press **Open**.

To download an application:

Your phone supports J2ME Java applications. Make sure that the application is compatible with your phone before downloading it.



Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

You can download new Java applications and games using the Vertu Application Installer from Vertu PC Suite. You can also download and install applications over-the-air.



For the availability of different services, pricing, and tariffs, contact your service provider.

Your device may have some bookmarks loaded for sites not affiliated with Vertu. Vertu does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Calculator

The calculator in your Vertu phone adds, subtracts, multiplies, divides, calculates the square and the square root.

To perform a calculation:

1. From the stand-by display, press **Menu » Additions » Calculator**.
2. When 0 is displayed, enter the first number in the calculation.



Press # to enter a decimal point.

*Press * to display more functions.*

3. Use the **NAVIGATION** key to select the function you want to perform.
4. Enter the second number.
5. Press the **=** sign to display the result.

To start a new calculation select **Clear**.

Music player

Your Vertu phone includes a music player for listening to music tracks, recordings or other MP3, MP4, AAC, eAAC+ or Windows Media.

With the music player you can download, view, and play compatible audio and video files in a variety of formats.

Your Vertu phone can play music tracks, recordings or other MP3 or AAC sound files that you have transferred to the phone with the Audio Manager application (part of Vertu PC Suite), BT or USB cable or web.

Music files stored in a folder in the phone memory or in a folder of the Media memory, will automatically be detected and added to the default track list.

Playing the music tracks

To play the music tracks:

1. From the stand-by menu, press **Menu » Additions » Music player**.



Warning! Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

2. Scroll to one of the following options to find the track you want to listen to:

All songs lists all songs stored on your phone

Playlists shows all playlists you have created and stored on your phone

Artists lists the songs by artist name

Albums lists the songs by album title

Genres lists the songs by genre type

Videos lists all video files stored on your phone.

3. Press **Open** to open the file. Press **Play** to start the track.

4. Use the following commands to control the Music player:

Press the **CENTRE SELECT** key to play or pause

Move the **NAVIGATION** key up to open the Music player menu and scroll up

Move the **NAVIGATION** key down to open the Music player menu and scroll down

Move the **NAVIGATION** key left to go to previous track

Move the **NAVIGATION** key right to go to next track

5. Press **Options** to access the Music player options (see "Music player settings" below).

6. Press the **END** key to close the music player.

To stop the music player, press the **STOP** key.

If music is still playing after you exit the music player, you can stop the music player by pressing and holding the **END** key.

When you open the Music player menu, the details of the first track on the default track list are shown.

Music player settings

To change the music player settings:

1. From the stand-by menu, press **Menu » Additions » Music player**.
2. Press **Options** from the Music player menu and scroll to one of the following:

Downloads to access tracks from the following options:

Bookmarks to open the web bookmarks

Go to address to enter the address of a mobile Internet service and then press **OK**

Streaming settings to set the connection settings for the media service. Contact your service provider for information about connection settings. You may receive the streaming settings as a connection settings message from the Vertu web site for your service provider.

Update library to update your music library with your latest downloads

Music libr. details to view data on the number of songs stored on your phone, memory used and last updated date.

3. Press **Options** while a track is playing and select one of the following:

Go to Music menu to return to the main music player menu

Now playing to show details of the current track

Settings to access the following features:

Shuffle to play a random choice of your stored tracks

Repeat to repeat a track

Music player theme to select the format of your music player.

Downloads to access tracks via the web

Mute audio to mute the current track

Web page to access a Web page associated with the currently played track. Dimmed if no Web page is available

Play via Bluetooth connects to a Bluetooth audio accessory

Voice recorder

You can record speech or an active call, and save the recordings in the gallery. This is useful, for example, when recording a name and phone number to write down later.

The recorder cannot be used when a data call or GPRS connection is active.

Record sound

To make a voice recording:

1. From the stand-by display, press **Menu » Additions » Voice recorder**.
2. To start the recording, with the **RECORD** button highlighted, press **Select** and then record your message.
3. To stop the recording, with the **STOP** button highlighted, press **Select**. The recording is saved in the **Recordings** folder of the Media memory by default.

Record a phone call

To record a phone call:

1. During a call, press **Options**.
2. Scroll to **Record** and then press **Select**. While the call is being recorded, all parties to the call can hear a beeping sound every five seconds.
3. To stop recording, with the **STOP** button highlighted, press **Select**. The recording is saved in the Recordings folder of the gallery.

When recording a call, hold the phone in the normal position near to your ear.

Voice recorder options

Immediately before or after a recording, press **Options** to view the following:

Play last recorded to listen to the latest recording

Send last recorded to attach the recording to a Multimedia or Audio message or to send via Bluetooth

Recordings list to see the list of recordings in Gallery

Select memory to choose recording file destination. Choose from **Media memory** or **Other folder**.

Notes

You can write yourself notes as reminders, but these are not associated with the calendar and do not alert you with an alarm.

Creating notes

To create a note:

1. From the stand-by display, press **Menu » Additions » Notes**.
2. Press **Add**.
3. Use the **NUMBER** keys to write the note and press **Save**.

A message confirms that the note is saved.

Viewing notes

To view a note:

1. From the stand-by display, press **Menu » Additions » Notes**.
2. Scroll to the note you want to view and press **View**.

Editing notes

To edit a note:

1. From the stand-by display, press **Menu » Additions » Notes**.
2. Scroll to the note you want to edit and press **View » Edit**.
3. Use the **NUMBER** keys to make the required changes to the note and press **Save**.

Sending notes

You can send a note to another phone using Bluetooth or the messaging service or convert it to a message.

To send a note as a text message:

1. From the stand-by display, press **Menu » Additions » Notes**.
2. Scroll to the required note and press **Options**.
3. Press **Send note » Send as message**.
4. Press **OK** to send the note.

A message confirms that the note is being sent.

To send a note using Bluetooth:

1. From the stand-by display, press **Menu » Additions » Notes**.
2. Scroll to the required note and press **Options**.
3. Press **Send note » Via Bluetooth**.
4. Highlight the device you want to send the note to, and then press **Select**.

A message confirms that the note is being sent.

Deleting notes

You can delete notes one at a time or all at once.

To delete one note:

1. From the stand-by display, press **Menu » Additions » Notes**.
2. Scroll to the required note and press **Options » Delete**.
3. Press **Yes** to confirm deletion.
4. A message confirms that the note has been deleted.

To delete all notes:

1. From the stand-by display, press **Menu » Additions » Notes » Options » Delete all notes**.
2. Press **Yes** to confirm deletion.

A message confirms that all of the notes have been deleted.

8 CALENDAR

Your Vertu phone Calendar has the following functions:

- > *Calendar*
- > *Notes*
- > *To-do list*

Calendar

Your Vertu phone has a calendar where you can add notes about meetings, calls, birthdays, memos and reminders.

Opening the calendar

To open the calendar:

1. From the stand-by display, press **Menu » Calendar**.
2. The current month is displayed, with today highlighted. Press the **NAVIGATION** key to move to different dates.

When there is a note associated with a date, the date will be highlighted.

Calendar settings

On the **Settings** menu you can change the following characteristics of the calendar:

- > **Date & time settings**
- > *Select the Default view*
- > *Select the day that Week starts on*
- > *Select a Calendar tone*
- > *Select how often to Auto-delete notes*

Date and time settings

To adjust the date and time settings:

1. From the stand-by display, press **Menu » Calendar**
2. Press **Options** and scroll down to **Settings**.
3. Press **Select** and **Date & time settings**.
4. Scroll to one of the following options and then press **Select** to customise the time settings:
 - Date:** enables you to use the **NUMBER** keys to set the date on the phone
 - Time:** enables you to use the **NUMBER** keys to set the time on the clock
 - Time zone:** enables you to set the valid offset from GMT
 - Daylight saving:** enables you to select between Wintertime or Summertime (+1 or +2 hours) daylight saving periods.
5. Scroll down and select **Save** to confirm your settings.

Selecting the default view

You can configure the calendar on your Vertu phone to default to month view or week view.

To set the default view:

1. From the stand-by display, press **Menu » Calendar » Options » Settings » Default view**.
2. Highlight the required view and then press **Select**.

A message confirms which default view has been selected.

Selecting when the week starts

The calendar can display the week starting on Saturday, Sunday or Monday.

To select a day that the week starts on:

1. From the stand-by display, press **Menu » Calendar » Options » Settings » Week starts on**.
2. Highlight the required day and then press **Select**.

A message confirms which day the week starts on.

Selecting a calendar tone

To select a tone for the calendar:

1. From the stand-by display, press **Menu » Calendar » Options » Settings » Calendar tone**.
2. Select **Standard** for standard tone or **Open Gallery** to choose from a tone stored in the Gallery folders.
3. Press **Select** to confirm the new settings.

Calendar Notes

Notes enables you to make a note associated to a date and time.

To make a note:

1. From the stand-by display, press **Menu » Calendar**.
2. Scroll to the date you want to make a note for.
3. Press **Options » Make a note**.
4. Select from the following options:

Reminder - enables you to use the **NUMBER** keys to enter a title for the reminder and set an alarm.

Meeting - enables you to use the **NUMBER** keys to enter details about a meeting: subject, location, start and finish date and times and set an alarm

Call - enables you to use the **NUMBER** keys to enter details about a phone call: phone number, name and time details and set an alarm

Birthday - enables you to use the **NUMBER** keys to enter details about a birthday: name, year of birth, and set an alarm

Anniversary - enables you to use the **NUMBER** keys to enter details about an anniversary: name, occasion, date, year and set an alarm

Memo - enables you to use the **NUMBER** keys to enter details about a memo: subject, start date, end date and set an alarm

VERTU

Viewing notes

If there are notes for a day, the date will be highlighted. You can view notes for a particular day or for the whole week.

To view the notes for a day:

1. From the stand-by display, press **Menu » Calendar**.
2. With the required day highlighted, press **View**.
3. The notes for that day will be displayed.

Viewing notes for a week

To view notes for a week:

1. From the stand-by display, press **Menu » Calendar**.
2. Scroll to a day in the week of interest.
3. Press **Options » Week view**.
4. The week is displayed showing any notes.

Editing notes

To edit a note:

1. From the stand-by display, press **Menu » Calendar**.
2. With the required day highlighted, press **View**. The notes for that day will be displayed.
3. Press **Options » Edit** to open the note for editing.
4. Edit the details as required and press **Save**.

Moving notes

You can move a note to a different date and time.

To move a note:

1. From the stand-by display, press **Menu » Calendar**.
2. With the required day highlighted, press **View**.
3. Press **Options » Move**.
4. Enter a new date and time and then press **OK**.
5. Set an alarm if required and then press **OK**.

A message confirms that the note has been moved.

Sending a note

To send a note using the calendar:

1. From the stand-by display, press **Menu » Calendar**.
2. With the required day highlighted, press **View**.
3. Press **Options » Send note » Via calendar**.
4. Key in the phone number or press **Search** to use the **Contacts** list.
5. Press **OK** to send the note.

Copying notes

You can copy a note to another date and time.

To copy a note:

1. From the stand-by display, press **Menu » Calendar**.
2. With the required day highlighted, press **View**.
3. Press **Options » Copy**.
4. Key in the new date and then press **OK**.
5. Key in the new time and then press **OK**.

A message confirms that the note has been copied.

Auto-deleting notes

Your Vertu phone can delete notes automatically. Notes can be deleted after one day, one week or one month.

To auto-delete notes:

1. From the stand-by display, press **Menu » Calendar » Options » Settings » Auto-delete notes**.
2. Highlight the required frequency, or **Never** and then press **Select**. A message confirms whether auto-delete is activated or not.

To-do list

The To-do list enables you to create notes for tasks you have to do.

You can send a to-do note to another phone as a text message, or as a multimedia message or by Bluetooth. You can also save a to-do note to the calendar.

Opening the to-do list

To open the to-do list:

From the stand-by display, press **Menu » Calendar » Options » Go to to-do list**.

Any to-do notes will be displayed.

Creating a to-do list

To create a to-do list:

1. From the stand-by display, press **Menu » Calendar » Options » Go to to-do list**.
2. Press **Add**.
3. Use the **NUMBER** keys to enter **Subject:** details.
4. Select **High**, **Medium** or **Low** priority using the left and right **NAVIGATION** keys. The priority determines where the to-do note will be displayed in your list of to-do notes. High priority notes are displayed at the top of the list, whilst low priority notes are displayed at the bottom of the list.
5. Use the **NUMBER** keys to enter the due date and time and set an alarm if required.
6. Then select **Save**.

A message confirms that the To-do note is saved.

To change the priority, view the to-do note and select the deadline option. You can also mark notes as done, edit and delete them.

Deleting a to-do list

To delete a to-do list

1. From the stand-by display, press **Menu » Calendar » Options » Go to to-do list**.
2. Scroll to the desired to-do note and press **Options**.
3. Scroll to **Delete** or **Delete all notes** and then press **Select**.
4. Press **Yes** to confirm.

A message confirms the deletion.



*If you mark your to-do notes as completed when you have finished your tasks, you can select **Delete done notes** to delete all the completed to-do notes at once.*

VERTU

9 ALARM CLOCK

You can set your Vertu phone to sound an alarm at a desired time. The alarm will sound even if your Vertu phone is switched off.

See "Date and time" on page 35 to set the clock time and date.

Setting the alarm

To set the alarm:

1. From the stand-by display, press **Menu » Alarm clock**.
2. Use the **NUMBER** keys to enter the time you want the alarm to sound.
3. Press **Options** and use the up and down **NAVIGATION** keys to set the alarm details.

Alarm: use the left and right **NAVIGATION** keys to toggle the alarm on and off.

Alarm time: displays the time the alarm is set for and can only be changed as above

Repeat: use the left and right **NAVIGATION** keys to toggle the repeat feature on and off. Setting the repeat feature to **On** means that the alarm will sound every day at the specified time

Repeat days: press **Options** and **Change** to select the days on which you want the alarm to repeat. This option is only available if **Repeat:** is switched **On**

Alarm tone: use the left and right **NAVIGATION** keys to select an alarm tone

Standard is the default alarm tone

Open Gallery enables you to select a tone from the gallery files on your Vertu phone

Tone downloads enables you to select and download a tone from the website

Snooze time-out: use the **NUMBER** keys to enter the snooze time-out in minutes

4. Select **Save** when complete.

A message confirms that the alarm is on and a small bell icon is visible on the stand-by display.

If the clock is displayed in **Analogue** mode, a red alarm hand is displayed on the face of the clock in stand-by mode. The alarm hand shows at the time that the alarm is set for.

Cancelling the alarm

To cancel the alarm:

1. From the stand-by display, press **Menu » Alarm clock » Options » Alarm:**.
2. Use the left or right **NAVIGATION** keys to select **Off** and then press **Save**.

A message confirms that the alarm setting has been saved.

Turning off the alarm

To turn off a ringing alarm:

1. When the alarm sounds press **Stop**.
2. If your Vertu phone is switched off when the alarm sounds, a message asks if you want to switch the phone on. Press **Yes** to switch the phone on or press **No** to leave the phone switched off.



Do not press Yes when wireless phone use is prohibited or when it may cause interference or danger.

Activating the snooze function

To activate the snooze function:

1. When the alarm sounds press **Snooze**.
2. The alarm will sound again after the Snooze time-out duration defined when setting the alarm.
3. If you leave the alarm ringing, it will ring for approximately one minute and then go into snooze mode.

10 WEB

- > **Recommend us** enables you to enter a friend's mobile phone number and they will receive a text message providing a link to Vertu Mobile.

Go to address

To enter a web page address:

1. From the stand-by display, press **Menu » Web » Go to address**.
2. Use the **NUMBER** keys to enter the service URL.

Browse pages

While you are browsing the Internet, the function of the phone keys may vary. Follow the text labels on the phone display and see below for more information.

 is shown on the top left of the display during browsing. If you receive a call or a text message while browsing,  indicates that the Internet connection is suspended while you receive the call or text message. When the call or text message ends, your Vertu phone reconnects the browsing session.

You can access various Web services on your Vertu phone.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Check the availability of these services, pricing, tariffs, and instructions with your service provider.

Automatically setting up Web browsing

Depending on which service provider you use, your Vertu phone might already have Web settings installed so you might be able to browse the Web straight away. If you cannot connect to the Web, please contact Vertu Concierge or visit www.vertu.com on your computer and download your settings.

Manually setting up Web browsing

First, ensure that the correct configuration settings of the service that you want to use are activated.

To select the settings for connecting to the service:

1. From the stand-by display, press **Menu » Web » Web settings » Configuration sett.**
Only the configurations that support the browsing service are shown. Select a service provider, Default, or Personal configuration for browsing.
2. Scroll to **Account** and highlight a browsing service account contained in the active configuration settings and then press **Select**.
3. Scroll to **Displ. term. window**, highlight **Yes** and then press **Select** to perform manual user authentication for Internet connections.

Vertu mobile

Vertu Mobile is Vertu's presence on the Mobile Internet, tailored for handsets and carefully designed for being accessed on the go.

To open Vertu mobile:

From the stand-by display, press **Menu » Web » Vertu mobile**.

The following options can then be accessed:

- > **Discover** contains the latest Vertu news
- > **Where to buy** enables you to find an authorised Vertu retailer wherever you are in the world
- > **About Vertu** contains information about Vertu

Browse with phone keys

To browse through the page, scroll in any direction.

To select a highlighted item, press the **CALL** key, or press **Select**.

To enter letters and numbers, press the **NUMBER** keys. To enter special characters, press *****.

Options while browsing

Press **Options** to open a new list of options for browsing:

Press **Home** to return to your start page

Press **Bookmarks** to access the list of bookmarks

Press **Go to address** to enter a specific web page address

Press **Add bookmark** to save the page as a bookmark

Press **Navigation** to view browsing history, downloads or to reload the current page

Press **This page** to show the list of options for the active page

Press **Tools** to show a list of other options

Press **Settings** to view or change browsing settings. See "Settings" on page 52.

Press **Quit** to disconnect from a service.

The service provider may also offer other options.

Receive a bookmark

When you have received an address that is sent as a bookmark, the message **1 bookmark received** is displayed. The received bookmark is saved automatically to **Received files**. To view it, press **Show** and select **Bookmarks**.

Settings

Appearance settings

1. From the stand-by display, press **Menu » Web » Web settings**.
2. Scroll to **Display** and then press **Select**.
3. Scroll to one of the following options and then press **Select**:

Press **Font size** to set the font size

Press **Show images** and **No** to hide pictures on the page. This can speed up the browsing of pages that contain a lot of pictures

Press **Text wrapping** and **On** to set the text to continue on the next line on the display. If you select **Off**, the text is abbreviated

Press **Screen size** and **Full** or **Small** to set the screen layout

4. Scroll to **General** and press **Select**.

Press **Auto-fill** and **Enable** to enable your Vertu phone to complete fields for you

Press **Unicode (UTF-8) addr.** and **On** to set the phone to send a URL as a UTF-8 encoding. You may need this setting when you access a Web page created in foreign language

Press **Content encoding** to select the encoding for the browser page content

Press **JavaScript** and **Enable** to enable the Java scripts.

Security settings

Cookies

Cookies are parcels of information used by Web servers to differentiate a user and their preferences when navigating a website or services such as online shopping. Cookies are saved in the cache memory of your Vertu phone. Cookies are saved until you clear the cache memory.

To allow or prevent the phone from receiving cookies, while browsing:

1. From the stand-by display, press **Menu » Web » Web settings » Security » Cookies**.
2. Select **Allow** or **Reject**.

Unsecure content

To set an alert when a secure page contains an unsecure item.

1. From the stand-by display, press **Menu » Web » Web settings » Security » Alert for unsecure**.
2. Press **Yes** to set the phone to alert when a secure page contains an unsecure item.

These alerts do not guarantee a secure connection.

Scripts over secure connection

You can select whether to allow the running of scripts from a secure page. The phone supports WML scripts.

From the stand-by display, press **Menu » Web » Web settings » Security » WMLscript » Allow** or **Reject**.

Clear the cache

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.

To empty the cache:

From the stand-by display, press **Menu » Web » Clear the cache**.

Browser security

Security features may be required for some services, for example online banking or shopping. For such connections you need security certificates and possibly a security module, which may be available on your SIM card. For more information, contact your service provider.

Security module

The security module improves security services for applications requiring a browser connection, and allows you to use a digital signature. The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider.

To view or change the security module settings:

From the stand-by display, press **Menu » Settings » Security » Security module settings**.

Certificates



Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security.

The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

There are two kinds of certificates:

- > *server certificates*
- > *user certificates.*

You may receive these certificates from your service provider. User certificates may also be saved in the security module by the service provider.

To view the list of the user certificates downloaded into your Vertu phone:

From the stand-by display, press **Menu » Settings » Security » User certificates.**



This icon is displayed during a secure browsing session



This icon is displayed during an unsecured browsing session

Digital signature

You can make digital signatures with your Vertu phone if your SIM card has a security module. Using the digital signature can be the same as signing your name to a paper bill, contract, or other document.

To make a digital signature:

1. Select a link on a page, for example, the title of the book you want to buy and its price. The text to sign, which may include the amount and date, is shown.
2. Check that the header text is **Read** and that the digital signature icon is shown.
3. If the digital signature icon does not appear, there is a security breach and you should not enter any personal data, for example your signing PIN.
4. To sign the text, read all of the text first, and press **Sign**.
5. The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.
6. Select the user certificate you want to use. Use the **NUMBER** keys to enter the signing PIN (see "PIN code" on page 13), and select **OK**. The digital signature icon disappears, and the service may display a confirmation of your purchase.

11 VERTU SERVICES

Vertu services contains software and services available only to Vertu owners.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

To use Vertu services:

1. Go to www.verturegistration.com.
2. Register your Vertu phone or login (if you have previously registered).
3. Use the menu on the website to select your choice of services.

You must also have valid Internet settings on your Vertu phone and there must be GPRS network coverage in your current location.

Depending on which service provider you use, your Vertu phone might already have Internet settings installed. If you cannot connect to the Internet, please contact Vertu Concierge or visit www.vertu.com and download your settings.

Your service provider will charge you for the amount of data transferred by GPRS so please check their tariff first.

Vertu select

An exclusive service available only to Vertu owners, you can access:

- > *Online information and exclusive downloads such as additional games, applications, Vertu themes and Vertu ringtones.*
- > *Links to the best web pages available on the mobile internet.*

Vertu Fortress

Vertu Fortress enables you to wirelessly transmit important information from your Vertu phone to a high security data storage facility. You can back up all contact information, calendar details and tasks in this way.

When you have synchronised your data with the secure server, you can update it from our website and, if necessary, transfer it to another phone you have registered.

Travel

The travel application WorldMate® provides access to the following information:

- > *Clocks for multiple cities worldwide, including time zone management and international daylight saving time.*
- > *Global weather conditions, forecasts and updates for over 250 cities worldwide.*
- > *World map with day and night display and interactive city locators.*
- > *Currency conversion with online access to exchange rates for more than 160 currencies worldwide.*
- > *Real-time flight information including delays, gate and terminal information for over 75 of the world's leading airlines.*

In order to download the latest flight, currency and weather information, you must be subscribed to the Travel application service.

Navigating the screens

Use the **NAVIGATION** key and the **CENTRE SELECT** key to move between screens and also move between fields on a screen.

Updating flight, weather and currency information

Press the **Options SELECTION** key to display a menu.

Select the **Update ...** option to open a GPRS connection and download latest information to your Vertu phone.

Changing settings

Press the **Options SELECTION** key to update settings, change city, and change settings.

Settings include time format, date format, temperature scale and the space character (decimal point).

Clocks

This screen displays the time at five different locations. You can set one clock to display the time in your home city, and the other four clocks to display the time in other cities. Press the **Options SELECTION** key to select a new city.

Weather

This screen displays five-day weather forecasts. If the weather information is no longer current and you want to update it, press the **Options SELECTION** key and select **Update weather**.

World map

This screen displays a map of the world, showing which regions are in day and night. You can select a city from the list and view its location and current time. Press the **Options SELECTION** key to select a new city.

VERTU

Currency

This screen displays three different currencies and enables you to convert sums of money between them. Press the **Options** SELECTION key to select a new currency.

Currency rates fluctuate daily. To obtain current currency rates, press the **Options** SELECTION key and select **Update rates**.

Flight status

This screen enables you to search for the latest flight information for over 75 leading airlines. You can see current information on schedules, gates, terminals, delays and aircraft type.

Select an **Airline**, **Flight number** and **Date**, and then press **Get flight status**.

Queries you have previously made are stored for reuse in the **Recent Queries** list.

WorldMate® is provided by MobiMate®.

Set up manual roaming

If you travel to a region covered by a different network operator, and you are unable to download the latest Vertu Select and Travel information, you need to select a network operator that has a GPRS roaming agreement with your home network.

To do this select **Menu » Settings » Phone » Operator selection » Manual**.

Your Vertu phone will display all the locally available networks. For information on configuring the Vertu Select, Vertu Fortress and Travel applications, GPRS coverage and roaming agreements, please contact Vertu Concierge.



Not all network operators have GPRS roaming agreements with other network operators.

Vertu Concierge


Vertu Concierge is an exclusive service for people who believe that quality matters. Our aim is to bring you only the very best, whether it be music, art, travel or food.

Vertu Concierge provides you with a highly personalised range of services including:

- > *Lifestyle services such as restaurant recommendations and reservations, travel assistance, and tickets for theatre shows, concerts or sporting events.*
- > *Solving everyday practical problems such as finding a reputable plumber or tracking down a gift.*
- > *Assistance with using your Vertu phone.*

When you connect to Vertu Concierge, you can speak directly to a team of Lifestyle Managers who are available 24 hours a day, 7 days a week to offer personalised assistance.


Calling Vertu Concierge

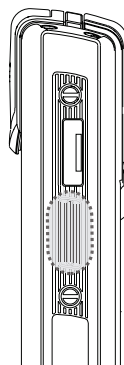

The **CONCIERGE** key is located on the right side of your Vertu phone as shown in this illustration.



Press the **CONCIERGE** key to display the Concierge screen.

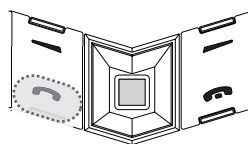

Press **Call** or the **SEND** key to call Vertu Concierge.

Alternatively you can press **Menu » Vertu Services » Vertu Concierge**.

If you are unable to reach Vertu Concierge using the **CONCIERGE** key, call +448707375535.



You must have network coverage to call Vertu Concierge.

VERTU

12 ACCESSORIES

The following accessories are provided with your Vertu phone:

- > Wall charger (comprises wall plug and data cable)
- > Battery
- > Data cable
- > Vehicle charger

For more information about accessories approved for use with your Vertu phone, please contact Vertu Concierge or refer to www.vertu.com.



Keep all parts out of reach of small children.

Use only batteries, chargers and accessories approved by Vertu for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

Wall charger

The wall charger supplied with your Vertu phone should be appropriate for your region. However, you should always check that the electrical rating of the AC outlet is appropriate for the charger before you attempt to plug it in.




Never attempt to use a damaged charger. Contact Vertu Concierge to obtain a replacement.

Charging the battery


The battery for your Vertu phone is rechargeable and requires charging at regular intervals.



Only use the approved charger and battery designed specifically for your Vertu phone.

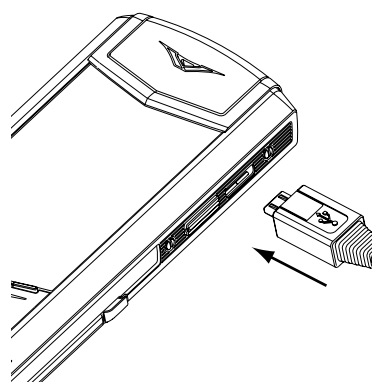

Insert the micro USB charger connector into your Vertu phone as shown. Please ensure that the connector is inserted correctly, with the connector symbol uppermost.

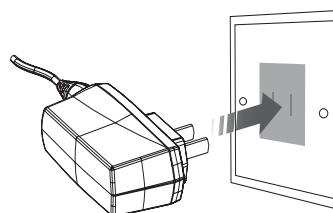

Connect the charger body to a powered AC outlet.

After a few seconds, the battery indicator animates and a confirmation message is displayed if your Vertu phone is switched on.



If the battery has not been used for some time, you may need to recondition it by charging it. Although the charging indicator appears on the display after a few seconds, it may take from several minutes to an hour before you can make a call.

The charging time will vary with different power sources and we recommend the Vertu wall charger should always be used.

Always charge the battery until it is fully charged. When the battery is fully charged, the battery charge indicator stops animating and, if your Vertu phone is switched on, a **Phone is fully charged, please unplug the charger** confirmation message is briefly displayed.

If your Vertu phone is not charging, try the following:

- > Disconnect the charger from the AC outlet.
- > Check that the electrical rating of the AC outlet is compatible with your charger.
- > Verify that the AC outlet has power and that it is switched on. For example, in many hotel rooms, AC outlets are used for lighting and may be switched on and off from remote locations in the room.
- > Wait for at least 10 seconds and then reconnect the charger to the AC outlet.
- > Use another nearby AC outlet that you know is providing power.
- > If charging still fails, contact Vertu Concierge for further advice.

Battery



Never dispose of batteries in a fire.

Always dispose of batteries according to local regulations. Please recycle when possible. Do not dispose of batteries as household waste.

Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-5CV. This device is intended for use when supplied with power from the following chargers: AC-7XV. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Vertu approved batteries, and recharge your battery only with Vertu approved chargers designated for this device. Use of an unapproved battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Do not dismantle, cut, open, crush, bend, deform, puncture, or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of such a leak, flush your skin or eyes immediately with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.

Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.



Important: Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition, temperatures to which battery is exposed, use in digital mode, and many other factors. The amount of time a device is used for calls will affect its standby time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time.

The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. If you notice that the talk and stand-by times are much shorter than normal, you may need a new battery. Contact Vertu Concierge to obtain a Vertu approved battery.

Maximising battery performance

Certain functions in your Vertu phone can be switched off if not in use, to help maximise your battery performance, for example Bluetooth.

Charging and discharging

Unplug the charger from the AC outlet and your Vertu phone when not in use. Do not leave your Vertu phone connected to a charger. The battery does not have to be completely discharged before you can recharge it. Continuously charging the battery may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Temperature extremes can affect the ability of your battery to charge.

Use chargers indoors.

Battery care and safety

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.


Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery (the metal strips on the battery). This might happen, for example, when you carry a spare battery in your pocket, purse or bag. Short-circuiting the terminals may damage the battery and the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). If your battery is very hot or extremely cold, your Vertu phone may not work temporarily, even if the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

VERTU


Data cable

The micro-USB data cable transfers data between your Vertu phone and a compatible computer, for example when you are using Vertu PC Suite, and between your Vertu phone and a compatible printer supporting PictBridge. Attaching the data cable to the phone connector.

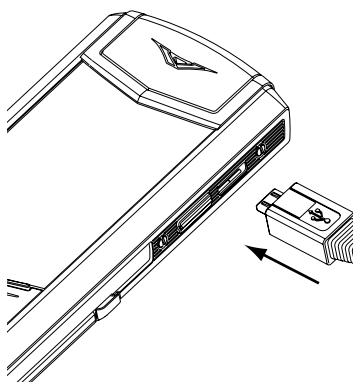

Carefully insert the micro-USB end of the data cable into the phone connector. Please ensure that the connector is inserted correctly, with the connector symbol uppermost.

Attaching the data cable to the computer

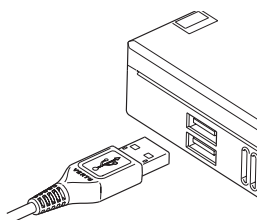

Insert the USB end of the data cable into the computer's USB connector.

Vehicle charger

This section shows how to use the vehicle charger with your Vertu phone.

For more information about the availability of accessories approved for use with your Vertu phone, contact Vertu Concierge.



Keep all parts out of reach of small children.

Use only batteries, chargers and accessories approved by Vertu for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

When you disconnect an accessory cable from your Vertu phone, hold and pull the connector at the end of the cable, not the cable itself.

To optimise the performance and lifetime of your accessories, and protect your warranty coverage, observe the following handling and usage precautions:

- > *Keep dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits*
- > *Do not use or store in dirty or dusty areas*
- > *Do not attempt to open*
- > *Do not drop, knock or shake. Rough handling can break fine mechanics*
- > *Do not store in hot areas. High temperatures can shorten the life of electronic devices and damage batteries*
- > *Do not store in cold areas*
- > *Do not use harsh chemicals, cleaning solvents or strong detergents to clean*
- > *Do not paint*

These suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorised service facility for service.

The vehicle charger recharges your Vertu phone battery quickly and safely from a standard 12 or 24 volt (DC) vehicle cigarette lighter outlet.




Only use the vehicle charger specifically designed for use with your Vertu phone.

Never attempt to use a vehicle charger if it has been damaged.


Only use the vehicle charger in a stationary vehicle.

VERTU

The time taken to charge your battery depends on its existing charge. You can use your phone normally during the charging process, although this will increase the time to charge.

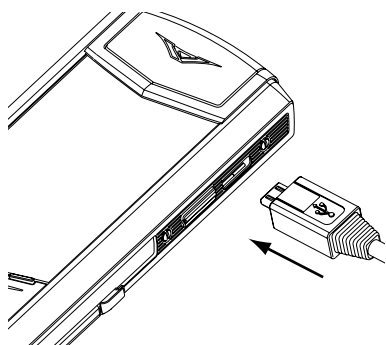

- > Insert the micro USB charger connector into your Vertu phone as shown. Please ensure that the connector is inserted correctly, with the connector symbol uppermost.

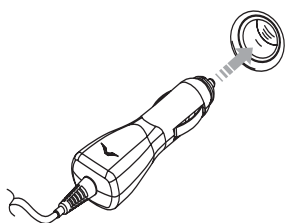

- > Connect the charger to the powered cigarette lighter outlet.
- > The green indicator light will illuminate to show the charger is connected to the power outlet. A confirmation message is displayed if your Vertu phone is switched on.

Some cigarette lighter sockets are only powered when the vehicle ignition is switched on.

The vibrating alert is disabled while the charger is connected to your Vertu phone.

When the battery is fully charged, the battery charge indicator stops animating. Disconnect the car charger from the cigarette lighter outlet before you unplug it from your Vertu phone.

13 APPENDIX

Safety

Read the following simple guidelines. Not following them may be dangerous or illegal.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.



SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless phones may be susceptible to interference which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELLING

Do not use the phone at a refuelling point. Do not use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in progress.



USE SENSIBLY

Use only in normal position. Do not touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may repair this phone.



ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



WATER RESISTANCE

Your Vertu phone is not water resistant. Keep it dry.



BACK-UP COPIES

Remember to make back-up copies or keep a written record of any important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible devices.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the END key as many times as needed to clear the display and return to the stand-by display. Enter the emergency number, then press the SEND key. Give your location. Do not end the call until given permission to do so.

Traffic safety

Do not use a hand-held telephone while driving a vehicle. If using a hand-held phone, park the vehicle before using the phone in any way. Do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position.

This phone meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2cm (7/8 inch) away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the phone the above-stated distance away from your body.

Use only the supplied or approved parts. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3 centimetres (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.

Persons who have such devices should:

- > *Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device when the wireless device is turned on;*
- > *Not carry the wireless device in a breast pocket;*
- > *Hold the wireless device to the ear opposite the medical device to minimise the potential for interference;*
- > *Turn the wireless device off immediately if there is any reason to suspect that interference is taking place;*
- > *Read and follow the directions from the manufacturer of their implanted medical device.*

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

VERTU

Hearing aids

Some wireless phones may interfere with some hearing aids. In the event of such interference, consult your service provider.

Other medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices.

Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area.

Aircraft

Using your device while flying in aircraft is prohibited. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal. In the United States, FCC regulations currently prohibit using your Vertu phone while in the air.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

You are advised to switch off the phone when at a refuelling point or service station. Observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Water resistance

Your Vertu phone is not water resistant. Keep it dry.

If your Vertu phone is accidentally splashed with water, ensure you dry it completely before removing the back cover. Remove the battery and leave all parts to dry naturally. Do not apply heat.

Never charge your Vertu phone when the connector is damp or wet.

Chargers must only be used in dry conditions. They should never be used when damp or wet.

Make sure the interior of your Vertu phone and the back cover seals are dry, clean, and free of any foreign objects before you replace the back cover.

Don't touch the antenna area

Avoid touching the antenna area (see CD for more information) of your Vertu phone unnecessarily when the phone is switched on. Contact with the antenna area affects call quality and may cause the phone to operate at a higher power level than otherwise needed and reduce the talk time of your Vertu phone.

Obey laws

When using your Vertu phone, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Care and maintenance

Your Vertu phone has been crafted from some of the finest materials. Please see the CD for full care and maintenance instructions. Damage caused to your Vertu phone by failing to observe these care instructions is not covered by the warranty.

Charm attachment

The charm attachment point is designed for Vertu charms which should be fitted by your authorised Vertu dealer. The charm attachment point is not a lanyard loop fixing.

VERTU

SAR Notice – RM-466V

YOUR VERTU PHONE (MODEL: VERTU SIGNATURE, TYPE: RM-466V, FCC ID: P7QRM-266V) MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your Vertu phone is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.68 W/kg.

This phone meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2cm (7/8 inch) away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the phone the above-stated distance away from your body. In order to transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.vertu.com.

USA and Canada: Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 0.76 W/kg and when properly worn on the body is 0.54 W/kg.

Declaration of conformity

We, Vertu declare under our sole responsibility that the product, Model VERTU SIGNATURE, type RM-466V is in conformity with the provision of the following Council Directive: 1999/5/EC.

A copy of the Declaration of Conformity can be found at <http://www.vertu.com>

Export controls

Your Vertu phone may contain commodities, technology, or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

FCC/Industry Canada notice

Your Vertu phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your phone if such interference cannot be eliminated. If you require assistance, contact Vertu Concierge. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by Vertu could void the user's authority to operate this equipment.



VERTU SIGNATURE
RM-466V

EU recycling notice

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available. Do not dispose of these products as unsorted municipal waste.

By returning the products to collection you help prevent uncontrolled waste disposal and promote the reuse of material resources. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organizations, or your local Vertu representative. For the product Eco-Declaration or instructions for returning your obsolete product, go to country-specific information at www.vertu.com.



The symbol indicates that the product was put onto the market after the WEEE legislation was implemented and that the consumer should not dispose of the item in normal household waste, but that it should be appropriately recycled.

Should you wish Vertu to recycle your product at the end of its life, please either return it to the point from which you purchased your product (if known) or return it to Vertu's headquarters.

Alternatively, should you purchase a replacement product from another supplier, the new supplier is obligated to take back the product that is being replaced and recycle it appropriately.

Background information on the European WEEE directive is available from www.europa.eu.int/

CE0168

Copyright © Vertu 2009. All rights reserved.

VERTU

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Vertu is prohibited. Vertu operates a policy of continuous development. Vertu reserves the right to make changes and improvements to any of the products described in this document without prior notice.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

Vertu and the V logo are registered trademarks or trademarks. Other product and company names mentioned herein may be trademarks or registered trademarks of their respective owners.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Vertu. Vertu does not own the copyrights or intellectual property rights to the third-party applications. As such, Vertu does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Vertu does not provide any warranty for the third-party applications.

BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS.

Warranties

Vertu two-year limited international warranty for cellular phone

THIS LIMITED WARRANTY SHALL NEITHER EXCLUDE NOR LIMIT (I) ANY MANDATORY STATUTORY RIGHTS OF THE CLIENT OR (II) ANY OF THE CLIENT'S RIGHTS AGAINST THE SELLER/DEALER OF THE PRODUCT.

VERTU warrants that this cellular phone ("Product") is free from defects in material and workmanship according to the following terms and conditions:

1. The Limited Warranty for the Product extends for TWO (2) years beginning on the date of original purchase or delivery of the Product, whichever is the later. In case of a change of owner/user, such warranty period shall continue for the remaining part of the twenty-four (24) month period and otherwise remain unaffected.
2. During the period of the Limited Warranty, Vertu will repair, modify or replace, at Vertu's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Client for the repair or replacement of any such parts. Vertu will also pay for the labour charges incurred by Vertu in repairing or replacing the defective parts. The repaired Product will be warranted for the balance of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. This Limited Warranty does not cover damage to or defects in (other than manufacturing defects) appearance, cosmetic, decorative or structural items and any non-operative parts. Vertu's limit of liability under the Limited Warranty shall be the price paid by the Client for the Product less a reasonable amount for usage. These remedies are the Client's exclusive remedies for breach of this Limited Warranty.
3. Upon request from Vertu, the Client must prove the date of the original purchase or delivery of the Product by producing a legible and non-modified original certificate of authenticity which clearly indicates the name and address of an authorised retailer, the date and place of purchase/delivery, the product type and the IMEI or serial number of the Product, a bill of sale or a dated receipt which contains the same information.
4. Vertu shall bear the cost of shipping the Product to the location from which the Client handed over the Product to Vertu (or its representatives) after the completion of service under this Limited Warranty.
5. The Client shall have no coverage or benefits under this Limited Warranty if any of the following conditions are applicable:
 - n) The Product has been subject to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, spillage of food or liquid, exposure to chemical agents, unauthorised modifications, unauthorised connections, unauthorised repair, rough handling, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Vertu, including without limitation damage caused by shipping, dropping the Product, deterioration of consumable parts, such as batteries which by their nature have a limited lifecycle, and breakage or damage to antennas.
 - o) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to thermal, environmental or weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancel bots or damage caused by the connection to other products not recommended for interconnection by Vertu.
 - p) The Customer Service Department at Vertu was not advised by the Client in writing of the alleged defect or malfunction of the Product within thirty (30) days after the expiration of the applicable warranty period.
 - q) The Product was not returned to Vertu or its authorised retailer within thirty (30) days after the appearance of the defect within the warranty period.
 - r) The Product serial number plate or the accessory data code has been removed, defaced, altered or is illegible.
 - s) The defect or damage was caused by the defective function of the cellular network system or by inadequate signal reception by the external antenna.
 - t) The defect was caused by the Product being used with or connected to an accessory not manufactured and supplied by Vertu or used other than for its intended use.
 - u) The battery was short-circuited or the seals of the battery enclosure or cells are broken or show evidence of tampering or the battery was used in equipment other than that for which it has been specified.
 - v) The Product software needs to be updated due to changes in cellular network parameters.
 - w) The defect or damage was as a result of general wear and tear incurred in normal usage of the Product.
6. If a problem develops during the period of the Limited Warranty, the following procedure will apply:
 - x) The Client shall return the Product to the place of purchase for repair or replacement processing or if this is not convenient because of distance (more than 50 miles/80 km) or for other good cause, the Client may contact Vertu Concierge.
 - y) The Client shall bear the costs of transporting the Product to the relevant Vertu service location, with transport and insurance charges prepaid.

VERTU

- z) Subject to Clause 6(e), the Client will be billed for any parts or labour charges not covered by this Limited Warranty.
 - aa) Vertu will repair or authorise the repair of the Product under the Limited Warranty within 30 days after receipt of the Product by Vertu or a Vertu authorised service centre, or within an extended period as may be notified by Vertu to Client due to the nature of the repair ("Timeframe"). If Vertu cannot repair within the Timeframe, or after a reasonable number of attempts to repair the same defect, Vertu at its sole option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage.
 - ab) If the Product is returned to the Customer Service Department at Vertu during the period of the Limited Warranty, but the problem with the Product is not covered under the terms and conditions of this Limited Warranty, the Client will be notified and given an estimate of the charges the Client must pay to have the Product repaired, with all shipping charges billed to the Client. If the estimate is refused, the Product will be returned freight collect. If the Product is returned to the Customer Service Department at Vertu after the expiration of the warranty period, Vertu's normal service policies shall apply and the Client will be responsible for all shipping charges.
7. TO THE FULLEST EXTENT PERMITTED BY LAW, THE WARRANTIES AND CONDITIONS STATED IN THIS LIMITED WARRANTY ARE IN LIEU OF ALL OTHER CONDITIONS, WARRANTIES OR OTHER TERMS CONCERNING THE SUPPLY OR PURPORTED SUPPLY OF, OR FAILURE TO SUPPLY OR DELAY IN SUPPLYING THE PRODUCT WHICH MIGHT, BUT FOR THE AFFECT OF THIS CLAUSE 7, HAVE EFFECT BETWEEN VERTU AND THE CLIENT OR WOULD OTHERWISE BE IMPLIED OR INCORPORATED INTO THIS LIMITED WARRANTY OR ANY COLLATERAL CONTRACT, WHETHER BY STATUTE, COMMON LAW OR OTHERWISE, ALL OF WHICH ARE HEREBY EXCLUDED (INCLUDING WITHOUT LIMITATION, THE IMPLIED CONDITIONS, WARRANTIES OR OTHER TERMS AS TO SATISFACTORY QUALITY OR FITNESS FOR PURPOSE).
8. VERTU SHALL NOT BE LIABLE FOR LOSS OR DAMAGE, WHETHER SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL, INCLUDING BUT NOT LIMITED TO ANY OF THE FOLLOWING LOSSES OR DAMAGE (WHETHER SUCH LOSSES OR DAMAGE WERE FORESEEN, FORESEEABLE, KNOWN OR OTHERWISE):
- ac) LOSS OF ANTICIPATED BENEFITS OR PROFITS.
 - ad) LOSS OF ACTUAL OR ANTICIPATED SAVINGS.
 - ae) PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES.
 - af) THIRD PARTY CLAIMS.
 - ag) LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT OR FACILITIES.
 - ah) DOWNTIME OR LOSS OF BUSINESS.
 - ai) LOSS OF OPPORTUNITY.
 - aj) LOSS OF GOODWILL.
 - ak) LOSS OF REPUTATION.
 - al) LOSS OF OR DAMAGE TO OR CORRUPTION OF DATA.
9. Vertu does not warrant uninterrupted or error free internet or data connections.
10. Vertu shall not be liable for any delay in rendering service under the Limited Warranty, or loss of use during the period that the Product is being repaired.
11. Vertu's total liability in contract, tort (including negligence or breach of statutory duty), misrepresentation or otherwise, arising in connection with the sale of the Product shall be the price paid by the Client for the Product less a reasonable amount for usage.
12. The invalidity or unenforceability of any term or any part of any term of, or any right arising pursuant to, this Limited Warranty shall not affect the validity or enforceability of any other terms or rights or the remainder of any such term or right, which shall continue in full force and effect except for any such invalid or unenforceable provision or part thereof.
13. Vertu neither assumes nor authorises any authorised service centre or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this Limited Warranty, including the provider or seller of any extended warranty or service agreement. Any change or amendment to this Limited Warranty requires Vertu's prior written consent.
14. This Limited Warranty represents the whole agreement between the parties relating to the subject matter hereof.
15. This Limited Warranty allocates the risk of failure of the Product between the Client and Vertu. The allocation is recognised by the Client and is reflected in the purchase price of the Product.
16. Any action or lawsuit for breach of warranty must be commenced within thirty (30) months following delivery of the Product.
17. All warranty information, product features and specifications are subject to change without notice.

Vertu operates a policy of continuous development. Vertu reserves the right to make changes and improvements to any of the products described in this document without prior notice. Questions concerning this Limited Warranty may be directed to the Customer Service Department at the following addresses.

If contacting us from Europe, Middle East and Africa:

Vertu
Beacon Hill Road
Church Crookham
Hampshire
GU52 8DY
United Kingdom

If calling us from the Americas:

+1 914 368 0432

If contacting us from Asia Pacific:

Vertu
391B Orchard Road
#24-02/05, Ngee Ann City, Tower B
Singapore 23887

VERTU

Vertu one-year limited international warranty for accessories

THIS LIMITED WARRANTY SHALL NEITHER EXCLUDE NOR LIMIT (I) ANY MANDATORY STATUTORY RIGHTS OF THE OWNER OR (II) ANY OF THE OWNER'S RIGHTS AGAINST THE SELLER/DEALER OF THE PRODUCT.

Vertu ("Vertu") warrants that this accessory product ("Product") is free from defects in material and workmanship, according to the following terms and conditions:

1. The Limited Warranty for the Product extends for ONE (1) year beginning on the date of original purchase or delivery of the Product whichever is the later. In case of a change of owner/user ("Owner"), such warranty period shall continue for the remaining part of the one (1) year period.
2. During the period of the Limited Warranty, Vertu will repair, modify or replace, at Vertu's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Owner for the repair or replacement of any such parts. Vertu will also pay for the labour charges incurred by Vertu in repairing or replacing the defective parts. The repaired Product will be warranted for the balance of the original warranty period. This Limited Warranty does not cover damage to or defects in (other than manufacturing defects) appearance, cosmetic, decorative or structural items and any non-operative parts. Vertu's limit of liability under the Limited Warranty shall be the price paid by the Owner for the Product when the Owner purchased the Product as a stand alone product or, in the event that the Owner received the Product when purchasing a Vertu cellular phone, the then current sale price for the Product, in both cases less a reasonable amount for usage. These remedies are the Owner's exclusive remedies for breach of this Limited Warranty.
3. Upon request from Vertu, the Owner must prove the date of the original purchase or delivery of the Product by producing a legible and non-modified original warranty card which clearly indicates the name and address of an authorised retailer, the date and place of purchase/delivery, the product type and the IMEI or serial number of the Product, a bill of sale or a dated receipt which contains the same information.
4. Vertu shall bear the cost of shipping the Product to the location from which the Owner handed over the Product to Vertu (or its representatives) after the completion of service under this Limited Warranty.
5. The Owner shall have no coverage or benefits under this Limited Warranty if any of the following conditions are applicable:
 - a) The Product has been subject to abnormal use, abnormal conditions, improper storage, spillage of liquid, misuse, neglect, exposure to cleaning agents not recommended, or other acts which are not the fault of Vertu, unauthorised repair, accident, alteration or other acts which are not the fault of Vertu.
 - b) Vertu was not advised by the Owner in writing of the alleged defect or malfunction of the Product within thirty (30) days after the expiration of the applicable warranty period; or
 - c) The Product was not returned to Vertu or its authorised retailer within thirty (30) days after the appearance of the defect within the warranty period.
 - d) The defect or damage was as a result of general wear and tear incurred in normal usage of the Product.
 - e) The Product is used with a product different to the one with which the Product was supplied with by Vertu, or the Product is used with any product whose use with the Product has not been expressly authorised by Vertu.
6. If a problem develops during the period of the Limited Warranty, the following procedure will apply:
 - a) The Owner shall return the Product to the place of purchase for repair or replacement processing or if this is not convenient because of distance (more than 50 miles/80 km) or for other good cause, the Owner may contact Vertu Concierge.
 - b) The Owner shall bear the costs of transporting the Product to the relevant Vertu service location, with transport and insurance charges prepaid.
 - c) Subject to clause 6(e), the Owner will be billed for any parts or labour charges not covered by this Limited Warranty.
 - d) Vertu will repair or authorise the repair of the Product under the Limited Warranty within 30 days of receipt of the Product by Vertu or a Vertu authorised service centre, or within an extended period as may be notified by Vertu to Owner due to the nature of the repair ("Timeframe"). If Vertu cannot repair within the Timeframe, or after a reasonable number of attempts to repair the same defect, Vertu at its sole option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage.
 - e) If the Product is returned to the Vertu during the period of the Limited Warranty, but the problem with the Product is not covered under the terms and conditions of this Limited Warranty, the Owner will be notified and given an estimate of the charges the Owner must pay to have the Product repaired, with all shipping charges billed to the Owner. If the estimate is refused, the Product will be returned freight collect. If the Product is returned to Vertu after the expiration of the warranty period, Vertu's normal service policies shall apply and the Owner will be responsible for all shipping charges.
7. TO THE FULLEST EXTENT PERMITTED BY LAW, THE WARRANTIES AND CONDITIONS STATED IN THIS LIMITED WARRANTY ARE IN LIEU OF ALL OTHER CONDITIONS, WARRANTIES OR OTHER TERMS CONCERNING THE SUPPLY OR PURPORTED SUPPLY OF, OR FAILURE TO SUPPLY OR DELAY IN SUPPLYING THE PRODUCT WHICH MIGHT, BUT FOR THE AFFECT OF THIS CLAUSE 7, HAVE EFFECT BETWEEN VERTU AND THE

OWNER OR WOULD OTHERWISE BE IMPLIED OR INCORPORATED INTO THIS LIMITED WARRANTY OR ANY COLLATERAL CONTRACT, WHETHER BY STATUTE, COMMON LAW OR OTHERWISE, ALL OF WHICH ARE HEREBY EXCLUDED (INCLUDING WITHOUT LIMITATION, THE IMPLIED CONDITIONS, WARRANTIES OR OTHER TERMS AS TO SATISFACTORY QUALITY OR FITNESS FOR PURPOSE).

8. VERTU SHALL NOT BE LIABLE FOR LOSS OR DAMAGE, WHETHER SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL, INCLUDING BUT NOT LIMITED TO ANY OF THE FOLLOWING LOSSES OR DAMAGE (WHETHER SUCH LOSSES OR DAMAGE WERE FORESEEN, FORESEEABLE, KNOWN OR OTHERWISE):
 - a) LOSS OF ACTUAL OR ANTICIPATED BENEFITS OR PROFITS
 - b) LOSS OF ACTUAL OR ANTICIPATED SAVINGS
 - c) PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES.
 - d) THIRD PARTY CLAIMS
 - e) LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT OR FACILITIES
 - f) DOWNTIME OR LOSS OF BUSINESS
 - g) LOSS OF OPPORTUNITY
 - h) LOSS OF GOODWILL
 - i) LOSS OF REPUTATION
 - j) LOSS OF OR DAMAGE TO OR CORRUPTION OF DATA.
9. Vertu shall not be liable for any delay in rendering service under the Limited Warranty, or loss of use during the period that the Product is being repaired.
10. Vertu's total liability in contract, tort (including negligence or breach of statutory duty), misrepresentation or otherwise, arising in connection with the sale of the Product shall be the price paid by the Owner for the Product less a reasonable amount for usage.
11. The invalidity or unenforceability of any term or any part of any term of, or any right arising pursuant to, this Limited Warranty shall not affect the validity or enforceability of any other terms or rights or the remainder of any such term or right, which shall continue in full force and effect except for any such invalid or unenforceable provision or part thereof.
12. Vertu neither assumes nor authorises any authorised service centre or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this Limited Warranty including the provider or seller of any extended warranty or service agreement. Any change or amendment to this Limited Warranty requires Vertu's prior written consent.
13. This Limited Warranty represents the whole agreement between the parties relating to the subject matter hereof.
14. This Limited Warranty allocates the risk of failure of the Product between the Owner and Vertu. The allocation is recognised by the Owner and is reflected in the purchase price of the Product.
15. Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following delivery of the Product.
16. All warranty information, product features and specifications are subject to change without notice.

Vertu operates a policy of continuous development. Vertu reserves the right to make changes and improvements to any of the products described in this document without prior notice. Questions concerning this Limited Warranty may be directed to the Customer Service Department at the following addresses. If contacting us from Europe, Middle East and Africa:

Vertu
 Beacon Hill Road
 Church Crookham
 Hampshire
 GU52 8DY
 United Kingdom
 If calling us from the Americas:
 +1 914 368 0432
 If contacting us from Asia Pacific:
 Vertu
 391B Orchard Road
 #24-02/05, Ngee Ann City, Tower B
 Singapore 23887

VERTU

Vertu Concierge Terms and Conditions

These terms and conditions apply to Nokia Corporation, a company validly organised and existing under the laws of Finland, with business identity code 0112038-9, having registered address at Keilalahdentie 4, 02150 Espoo, Finland, only when trading as Vertu ("Vertu").

1. Vertu Concierge

As a registered member of Vertu Concierge ("VC") provided by Vertu and its associated companies ("Vertu"), you ("you") agree to abide by these Terms and Conditions (the "Terms and Conditions"), and when ordering anything through VC from a supplier of products and services (a "Supplier") you agree that the Terms and Conditions shall apply to your order.

2. Membership Information

You are obliged to provide correct details when you register for membership of VC and your failure to do so may invalidate your membership and any subsequent transaction. Your responsibility to provide accurate information is a continuing obligation and you must notify Vertu in the event that any information provided by you in the course of registration changes.

3. Subscription

Initial and ongoing subscription fees, if applicable, are due at the time of initial subscription and annually thereafter (the "Renewal Date") unless you notify Vertu of your intention not to renew. Payment must be made annually in advance and may be made using any major credit/debit and charge cards. Any subscription fee is non refundable, however, Vertu may at its sole discretion elect to refund any subscription fee in whole or in part depending on the circumstances relating to the cancellation of any subscription. You authorise Vertu to deduct renewal subscription fees from your credit card up to 28 days prior to your Renewal Date. If Vertu does not hold your payment details you will be contacted directly to renew your subscription. Subscription fee rates will be notified to you from time to time and the subscription fee payable will be the subscription fee in force at the time of the Renewal Date.

You agree that you will only use your VC membership for the purposes for which it is issued.

4. VC Services

As a member of VC, you are entitled to all of the products and services as advised by us from time to time as approved by the relevant product/service Supplier.

5. Services Subject to Change

As a member, note that:

- > *Services are subject to availability and may change from time to time;*
- > *Suppliers may change from time to time;*
- > *Suppliers may impose their own terms and conditions and you are required to comply with these at all times.*

6. Payment for Services

Please note that some Suppliers may charge you a deposit, entry fee or other sum for the services they provide. You will be solely liable for payment of any such sums. At your request Vertu will authorise Suppliers to debit your nominated credit/debit or charge card in order for you to take advantage of their services.

7. Availability of Services

Vertu aims to ensure that the services remain available at all times and will use reasonable endeavours to ensure that you receive the most from your membership. If any of the services become unavailable, we will do all we can to ensure that prior commitments are honoured to the fullest extent possible, but shall not be responsible for any actions of Suppliers outside Vertu's reasonable control. From time to time the procurement or provision of certain services may incur a VC handling charge of which you will be notified - in these cases you hereby authorise Vertu to debit your nominated credit/debit or charge card with any such handling charges. Unless otherwise agreed by the Supplier, you shall not be entitled to cancel any services requested where, on your instructions, performance has already begun.

8. Right of Withdrawal

Vertu reserves the right to withdraw any service that may be offered and/or to refuse to supply any service requested.

9. Requests

If Vertu is unable to deal with any request, it will inform you as soon as reasonably practicable.

10. Dealing with VC Suppliers

Suppliers are responsible for providing you with the goods and services you select. Vertu will assist you in any way it can in all of your dealings with Suppliers.

11. Personal Membership

VC membership is personal to the registered Vertu phone user. You are responsible for ensuring that no one (other than your personal assistant, where applicable) uses your membership to access membership services and benefits.

12. Cancellation of Membership

Vertu reserves the absolute right to cancel or suspend your membership (at its sole discretion) for any reason whatsoever. If Vertu cancels your membership it shall refund

the balance of the annual subscription fee, if any, on a time apportionment basis in respect of the unexpired period to which the annual subscription fee applies.

13. Changes to Terms and Conditions

Vertu may vary these Terms and Conditions from time to time. Vertu will notify you of any changes in a timely manner. Notification will be by some or all of the following media:

- > *newsletter;*
- > *mail;*
- > *e-mail or other personal delivery service.*

14. Payment Details

If we do not have your credit/debit or charge card details we may not be able to provide or procure those benefits, goods or services that require payment.

You may only make transactions using VC during your period of membership. When ordering a product or service you will be required to provide your credit/debit or charge card details. You undertake that all details you provide to us for the purpose of booking, ordering or purchasing goods or services are correct, that the credit/debit or charge card you are using is your own and that there are sufficient funds to cover the cost of the product or the service.

15. Supply of Details

Vertu may pass on your credit/debit or charge card and any other essential booking details to its agents, employees, subcontractors and Suppliers, and you consent to us passing on such details to deal with your orders. You must inform Vertu as soon as possible of any changes to the details supplied by you.

16. Payments Due

The purchase price of all products and services obtained through VC is due for payment on acceptance of your order by Vertu and/or a Supplier, as applicable.

17. Delivery

By placing your order for a product or service through VC you agree that the time taken for delivery or performance shall be as stipulated when the purchase is made. We want you to get your order as soon as possible. If delivery or performance will take longer than the time set out (or the product or services are unavailable), the Supplier (or Vertu acting for the Supplier) will notify you of this at the earliest opportunity and you will have the unequivocal right to withdraw your order and receive a full refund.

18. Limited Warranty

Vertu warrants to you that Vertu shall use its reasonable endeavours to provide the VC services with reasonable care and skill and, as far as reasonably possible, in accordance with your request and instructions from time to time. Where Vertu supplies you with any goods or services supplied by a third party, then Vertu is acting as your agent in sourcing the goods or services. Vertu will use reasonable care in selecting the Supplier and ensuring the order is placed in accordance with your wishes. For the avoidance of doubt, Vertu does not and will not provide any representations or recommendations in relation to any of the information and suggestions comprised within the VC services. You are deemed to be responsible for, and shall use your own skill and judgement as to, the quality, value and suitability of such information and suggestions in relation to deciding whether to enter into any contract with any third party for the supply of services or sale of goods.

19. Vertu as Agent

Your contract for the purchase of products or services is made with the relevant Supplier only. Vertu acts as an agent for the Supplier and, unless expressly provided otherwise, all your rights and remedies are against the Supplier.

20. Disclaimers

Vertu will not be responsible for products and services offered by Vertu as agents for the Suppliers or for any aspect of the relationship between you and any particular Supplier. Vertu will however do everything it reasonably can to assist you in any dealings you have with the Supplier.

You agree that any contract entered into by you with any of the Suppliers is an independent contract. Vertu hereby disclaims any and all liability for any act or omission of any Supplier or any loss incurred by you as a result of any act or omission of a Supplier whether or not arranged through VC.

21. Limitation of Liability

Vertu accepts no liability for any losses or claims arising from any inability to contact VC or any failure to complete a transaction.

Save in respect of death and personal injury caused by the negligence of Vertu or as expressly provided for in these Terms and Conditions, Vertu shall not be liable for any loss, cost, expense or damage of any nature whatever (whether direct or indirect) resulting from the provision of the Services or your reliance upon the information and suggestions provided by Vertu hereunder and the resulting supply of goods and services to you by any third party.

Vertu shall have no liability to you for any loss, damage, costs, expenses or other claims for compensation arising from requests or instructions supplied by you which are incomplete, incorrect or inaccurate or arising from their late arrival or non-arrival, or any other fault of you.

Vertu shall not be liable to you or be deemed to be in breach of these Terms and Conditions by reason of any delay in performing, or any failure to perform, any of Vertu's obligations in relation to the VC services, if the delay or failure was due to any cause beyond Vertu's reasonable control.

Except in respect of death and personal injury caused by the negligence of Vertu and subject to the provisions of these Terms and Conditions, Vertu's maximum liability to you for breach of any of its obligations hereunder shall be limited to the value of the annual subscription fee, if any, and the relevant charge for the VC services to be provided.

VERTU

The limitations of liabilities set out herein apply only to the maximum extent permitted by law.

22. Governing Law and Arbitration of Disputes

Any and all claims, except claims for monies due to Vertu, arising out of or relating to the use of VC must be commenced within one (1) year after the date either you or Vertu knew or should have known of the facts giving rise to such claim, after which such actions shall be barred. If acceptance of your membership request or a particular service request takes place within Europe, Middle East or Africa, the governing law shall be Finnish law. All disputes arising out of or in connection with these Terms and Conditions shall be finally settled under the Rules of Arbitration of the International Chamber of Commerce by one arbitrator appointed in accordance with the said Rules. The arbitration proceedings shall be conducted in London, England in the English language. The arbitration decision shall be final and binding. Provided that the parties shall have the right to take proceedings in any other jurisdiction for the purposes of enforcing a judgment or order obtained from the courts of England and Wales.

If acceptance of your membership request or a particular service request takes place within Asia Pacific, the governing law of these Terms and Conditions shall be Singapore law. All disputes arising from or connected to these Terms and Conditions shall be settled finally and exclusively in Singapore under the Rules of the Singapore International Arbitration Centre (SIAC Rules). The arbitration shall be conducted in English in Singapore. The award shall be final and binding on both parties. Provided that the parties shall have the right to take proceedings in any other jurisdiction for the purposes of enforcing the arbitral award.

If acceptance of your membership request or a particular service request takes place within the Americas region, all disputes and matters relating to arbitration shall be governed by the Federal Arbitration Act (9 U.S.C. §§1 et. seq.). Except to the extent governed by applicable U.S. federal law, any transactions with VC and its Suppliers shall be governed by the laws of the State of Texas, excluding its conflict of law rules. Any and all claims, except claims for monies due to Vertu, arising out of or relating to your membership and use of VC shall be barred unless an action or legal proceeding is commenced within eighteen (18) months after the date you or Vertu knew or should have known of the facts giving rise to such claim. Any dispute relating in any way to your membership and use of VC and any orders placed through VC, shall be submitted (together with any counterclaims and disputes under or in connection with other transactions and/or agreements between you and Vertu) to final and binding, confidential arbitration to the Dallas, Texas office of the American Arbitration Association (the "AAA"), with such arbitration to be held in Dallas County, Texas, except that, to the extent you have in any manner violated or threatened to violate any Vertu or Vertu affiliates' or licensors' intellectual property rights, Vertu may seek injunctive or other appropriate relief in any state or federal court in the state of Texas or, at Vertu's option, any other appropriate state or country, and you consent to exclusive jurisdiction and venue of such court. Arbitration under these Terms and Conditions shall be conducted under the then prevailing Wireless Industry Arbitration Rules of the AAA (except as such rules may be modified by the terms of these Terms and Conditions), unless otherwise agreed in writing by the parties and shall be heard by a single arbitrator. Subject to any terms contained in these Terms and Conditions limiting or excluding damages, the arbitrator may award any relief that the arbitrator deems proper, including without limitation equitable relief, provided that no award of exemplary, special, consequential or punitive damages shall be permitted. The prevailing party, as determined by the arbitrator, shall pay the AAA arbitration fees and the arbitrator's fees and expenses, as applicable. The arbitrator's award shall be binding and may be entered as a judgment and enforceable in any court of competent jurisdiction. To the fullest extent permitted by applicable law, the arbitration shall be conducted on an individual, not a class-wide basis, and no arbitration under these Terms and Conditions shall be consolidated with or joined to an arbitration involving any other person or entity, whether through class arbitration proceedings or otherwise, without the prior written consent of you and Vertu.

Copyright © Vertu 2009. All rights reserved.